

ASSEMBLY INSTRUCTION


AX1

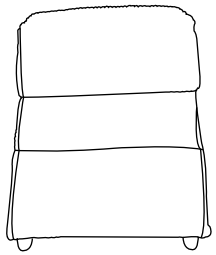


BX1

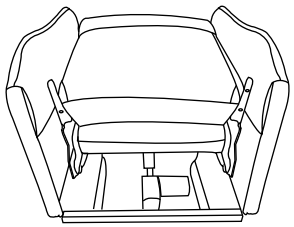


CX1

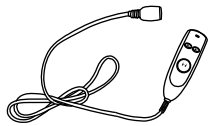


DX1



EX1

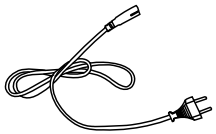

1

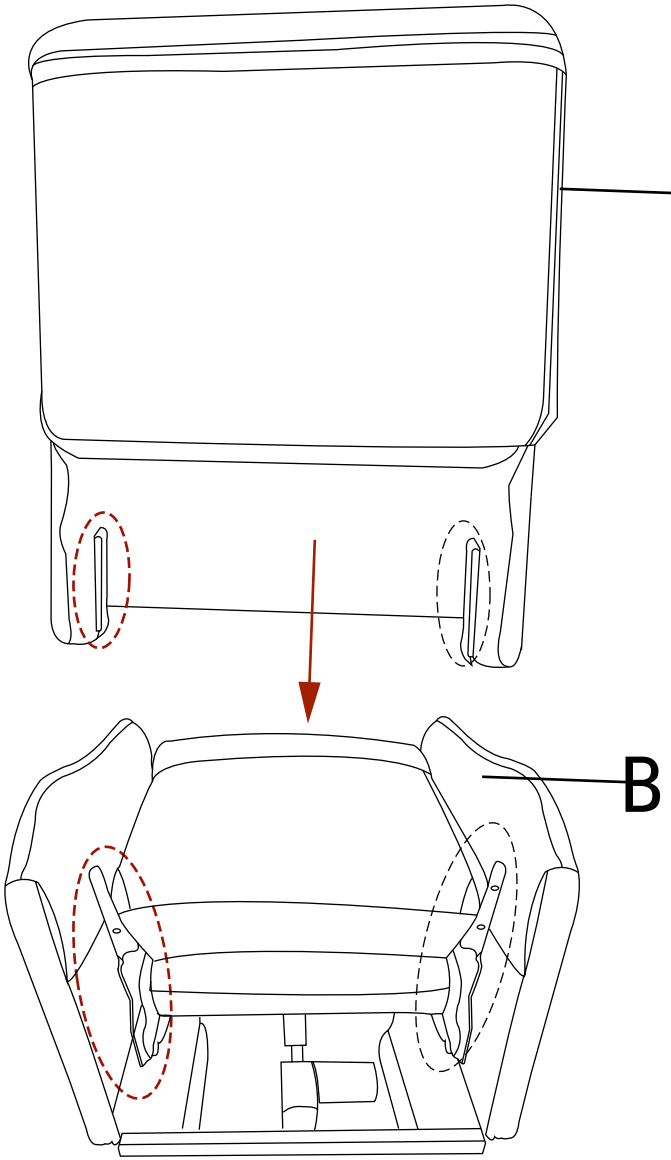

2

