PARTS LIST

	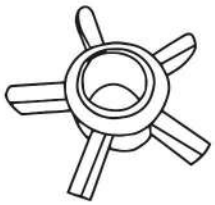
A. Caster ×5	B. Base-1 ×1
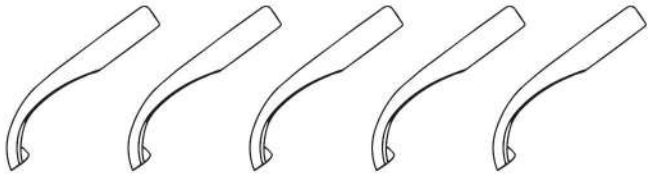	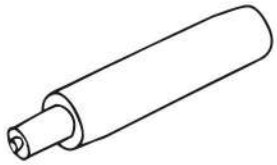
C. Base-2 ×5	D. Gas Lift
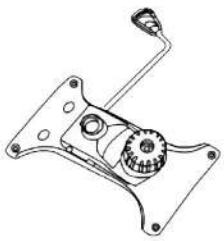	
E. Seat Plate	
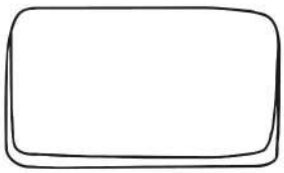	
G. Footrest	F. Main Body

HARDWARE AND TOOLS

		
H. M6×12 mm ×10	I. M6×30 mm ×6	J. Wrench

ASSEMBLY INSTRUCTIONS

1

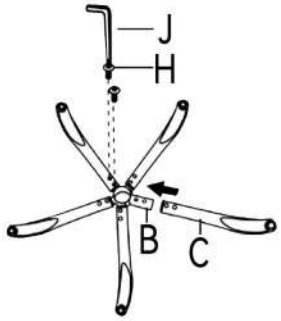

Turn Base-1 (B) and Base-2 (C) upside down. Attach Base-2 (C) to Base-1 (B) using ten M6× 12 mm bolts (H). Tighten with the wrench (J).

2

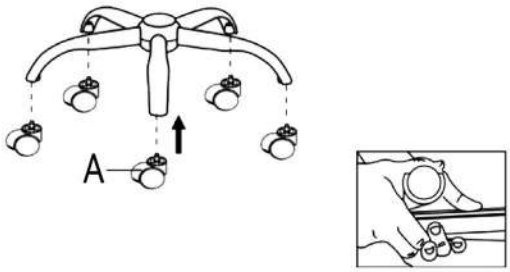

Insert the five Casters (A) vertically into the holes of Base-2 (C).

3

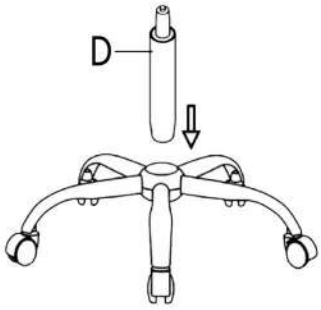

Insert the Gas Lift (D) into the center hole of Base-1 (B).

4

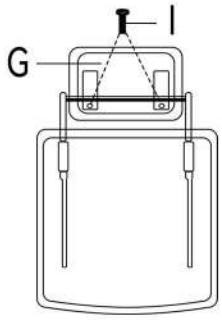

Align the holes on the underside of the Footrest (G) with the footrest frame, then secure using two M6×30 mm bolts (I).

5

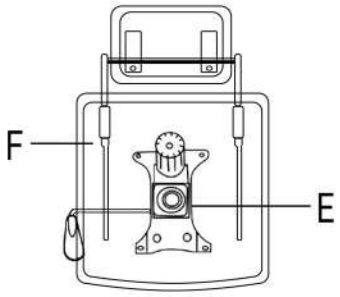

Align the holes on the underside of the Main Body (F) with the Seat Plate (E), then secure using four M6×30 mm bolts (I).
Note: Tighten each bolt a few turns at a time first, then fully tighten after all parts are aligned.

6

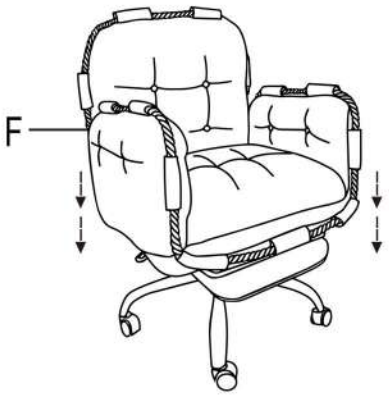

Place the Main Body (F) onto the Gas Lift (D) and press down firmly until it is fully seated. Unfold the backrest and enjoy your chair.

SAFETY AND MAINTENANCE

- Do not stand on the chair. Do not use the chair as a stepladder.
- Use this product for seating one person at a time.
- Do not use the chair unless all bolts and screws are firmly secured.
- Avoid contact with sharp objects to prevent puncturing the fabric.
- Every 6 months, check all bolts and screws to ensure they are tight.
- To clean, spot clean only using a damp towel and mild cleaner. First test on a small, inconspicuous area of the fabric.

SAFETY INFORMATION



Sit in the center of the chair with your back against the backrest.



Do not sit on the front edge of the chair.



Do not stand on the chair.



Do not use the chair with more than one person.



Do not push or move the chair while someone is seated.



Do not press down on the backrest while someone is reclining.



Do not place all your weight on the backrest only.

OPERATION INSTRUCTIONS

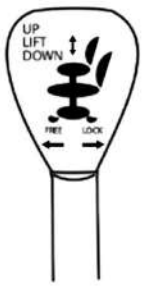

Rocking Function

Turn the knob under the seat to enable/disable the rocking function and adjust the tension.

Seat Height Adjustment

To raise the chair: Pull the lever while standing.To lower the chair: Pull the lever while seated.

Backrest & Armrest Angle Adjustment (3 Back Angles / 5 Arm Angles)



Pull the backrest or armrest to adjust it to the desired angle. Note: Push it fully to return it to the original position.