

Computer Desk

User Manual

Option A

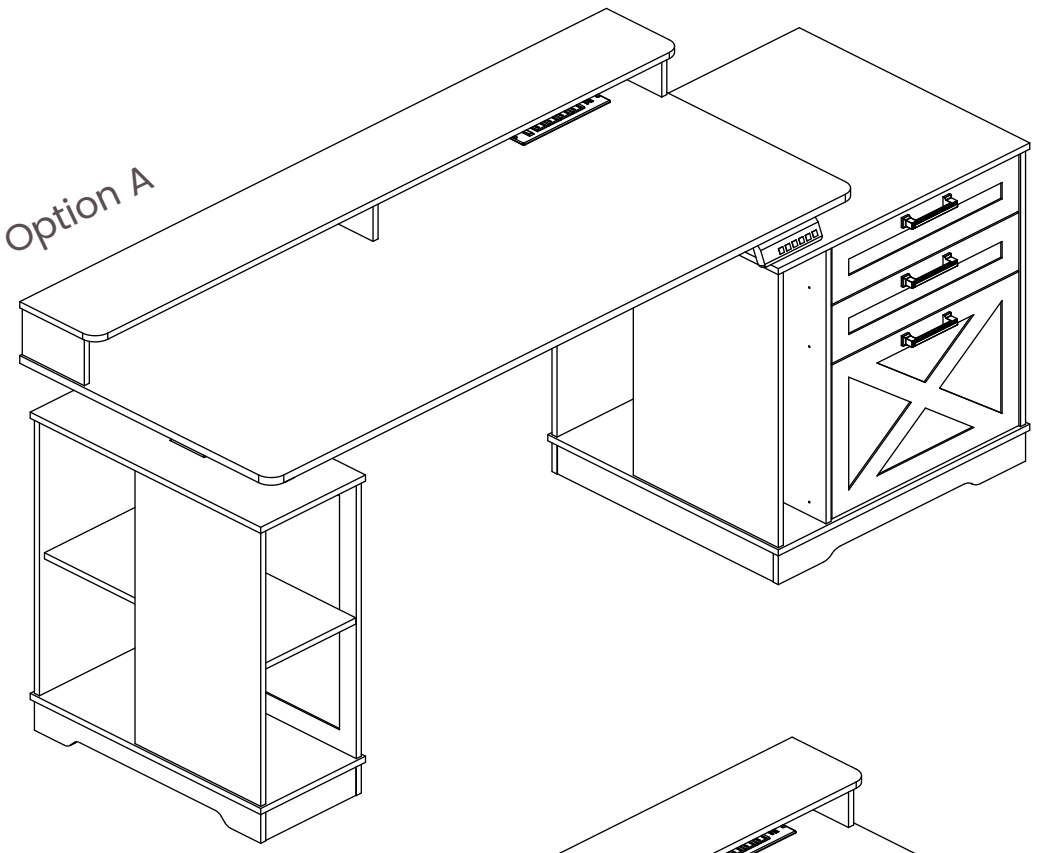

Option B

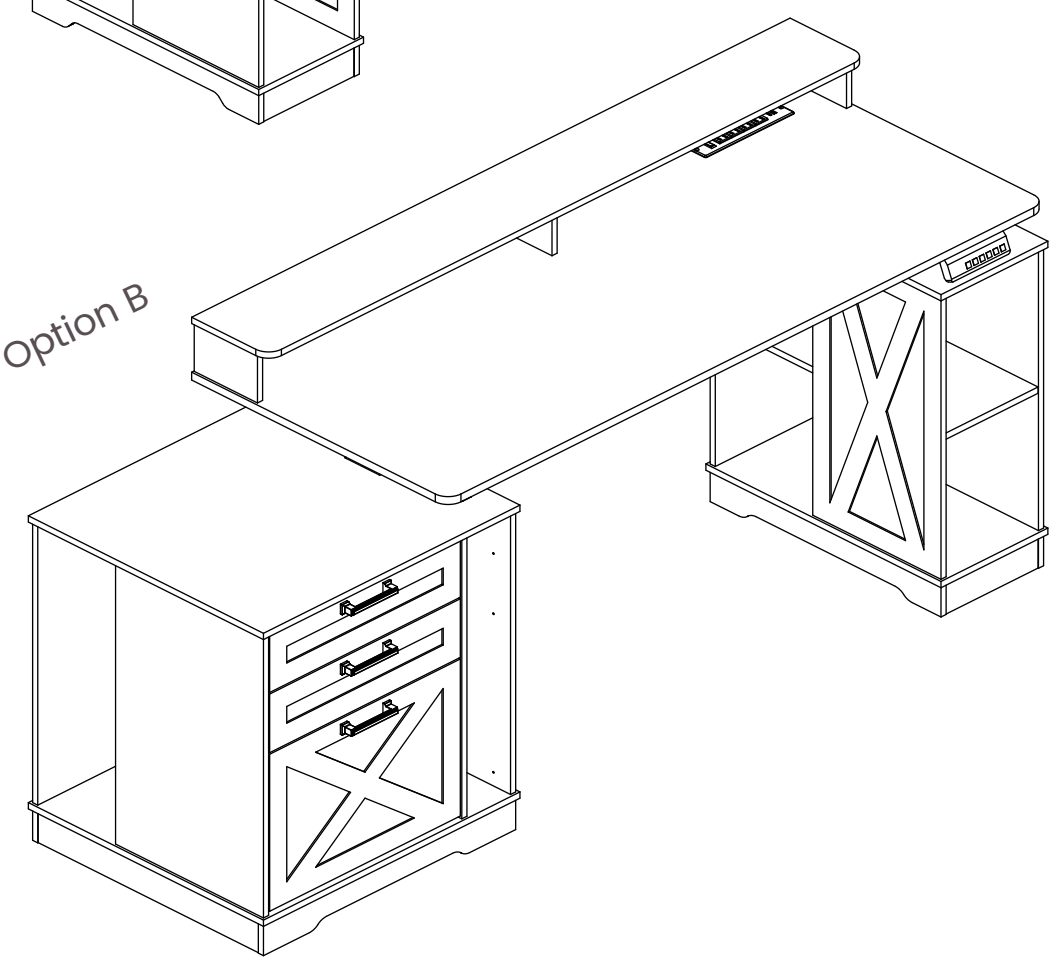

AJ-DJ505198

⚠ Please read this instruction manual carefully before using the product


Work Uniquely Play Unbound

Installation takes  x 2~4hour

Package Contents

Plates and iron components	Assembly tool kit	Instruction manual


⚠ Precautions

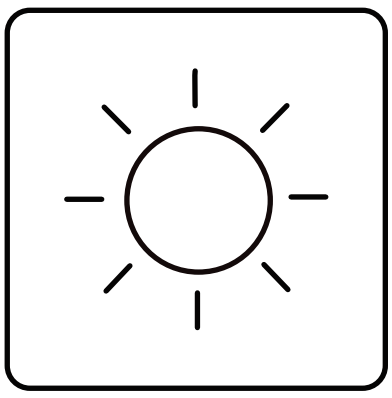


1.Avoid extended periods of direct sunlight exposure.



2.Stay away from fire.

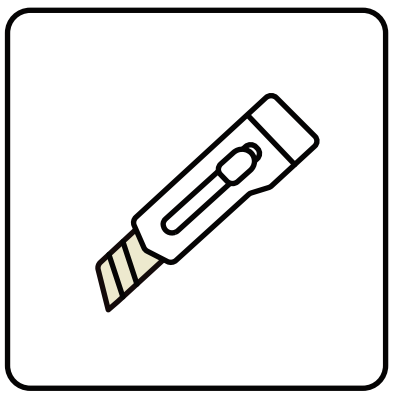


3.Keep away from sharp objects.

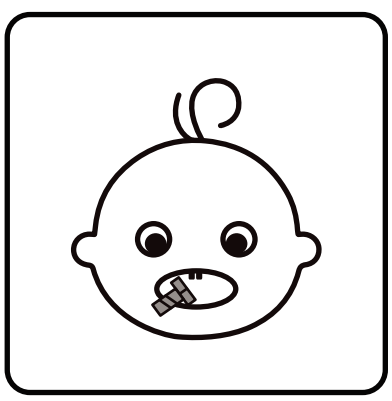


4.Keep infants and children away from assembly parts to avoid choking and suffocation.




5.Keep away from corrosive substances.

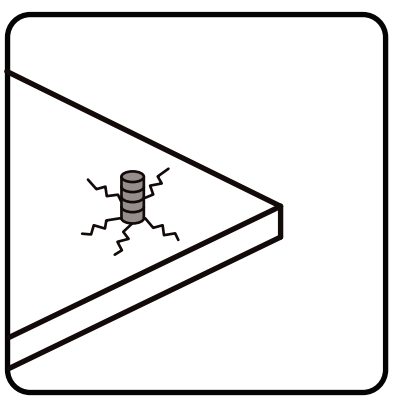

6. Pay attention to avoid over-tightening fasteners, as they may cause cracking within the board.

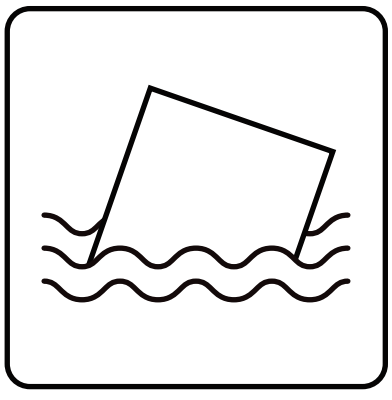

7.Prevent objects from being damaged by immersion in water.

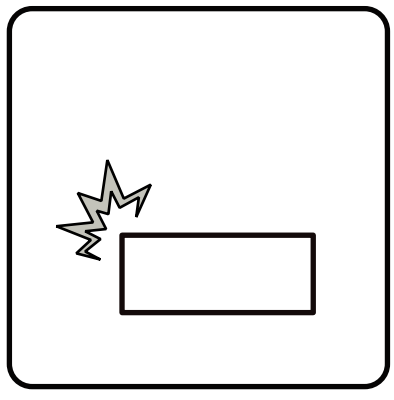


8.Prevent object collision and damage.




9.Be careful to avoid collisions.


⚠ Installation of Cams and Pins

Be sure to use the proper screws to avoid damaging the parts

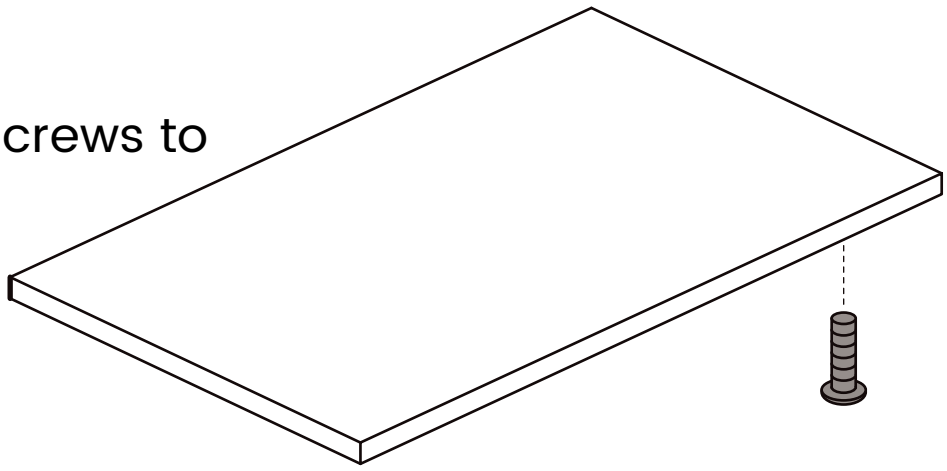

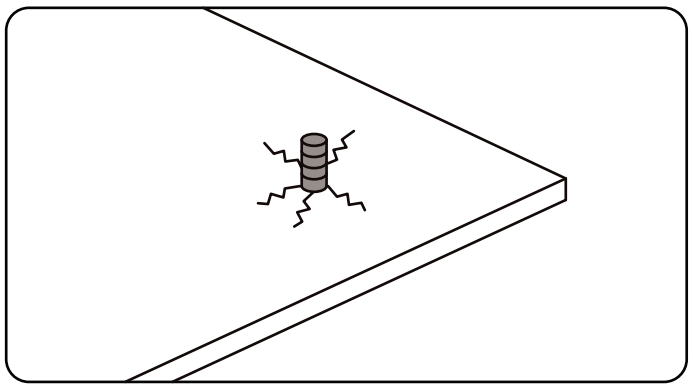

Wrong screws can cause the plank to crack

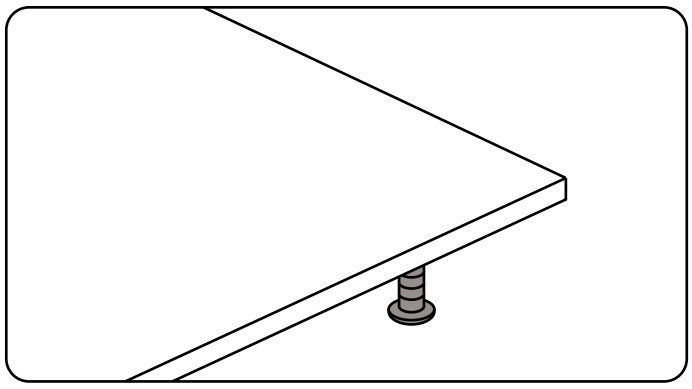



The right screw is the right size

⚠ Matters needing attention

1. When installing the screws in the installation step, the screws do not need to be tightened.

2. After this installation step is confirmed and the holes are aligned, then tighten all the screws.

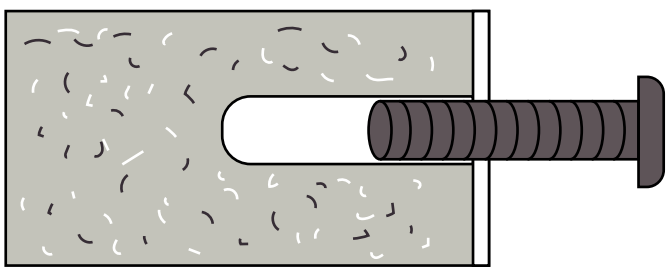

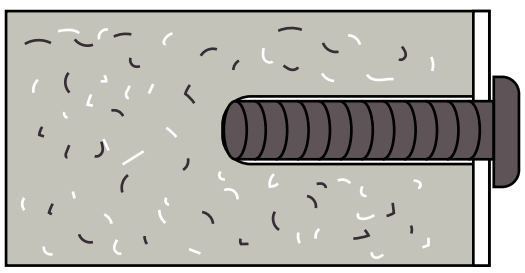

3. If the screws are tightened during the installation process, it will cause problems such as misalignment of the screw holes and misalignment of the board in subsequent installations

Disassembly Diagram

BOX A

4 x1 5 x1 6 x2 8 x1 11 x2

ACCESSORY BOX

9 x1 13 x1 14 x1 17 x1 43 x2 47 x3 A x4 B x3

C x12 D x14 E x27 F x3 G x5 H x12 I x3 J x29

K x14 L x7 M x36 N x14 O x88 P x88 Q x1 R x1

S x3 T x9 U x9 V x16 W x3 X x2 Y x4 Z x1

AA x1

BOX B

1 x1 2 x1 3 x1 7 x1 10 x1 12 x1 15 x1 16 x1


18 x1 19 x1 20 x1 21 x1 22 x1 23 x1 24 x1 25 x1

26 x1 27 x1 28 x2 29 x1 30 x1 31 x1 32 x1 33 x1

34 x1 35 x1 36 x1 37 x2 38 x2 39 x1 40 x1 41 x2


42 x3 44 x2 45 x2 46 x4

Disassembly Diagram

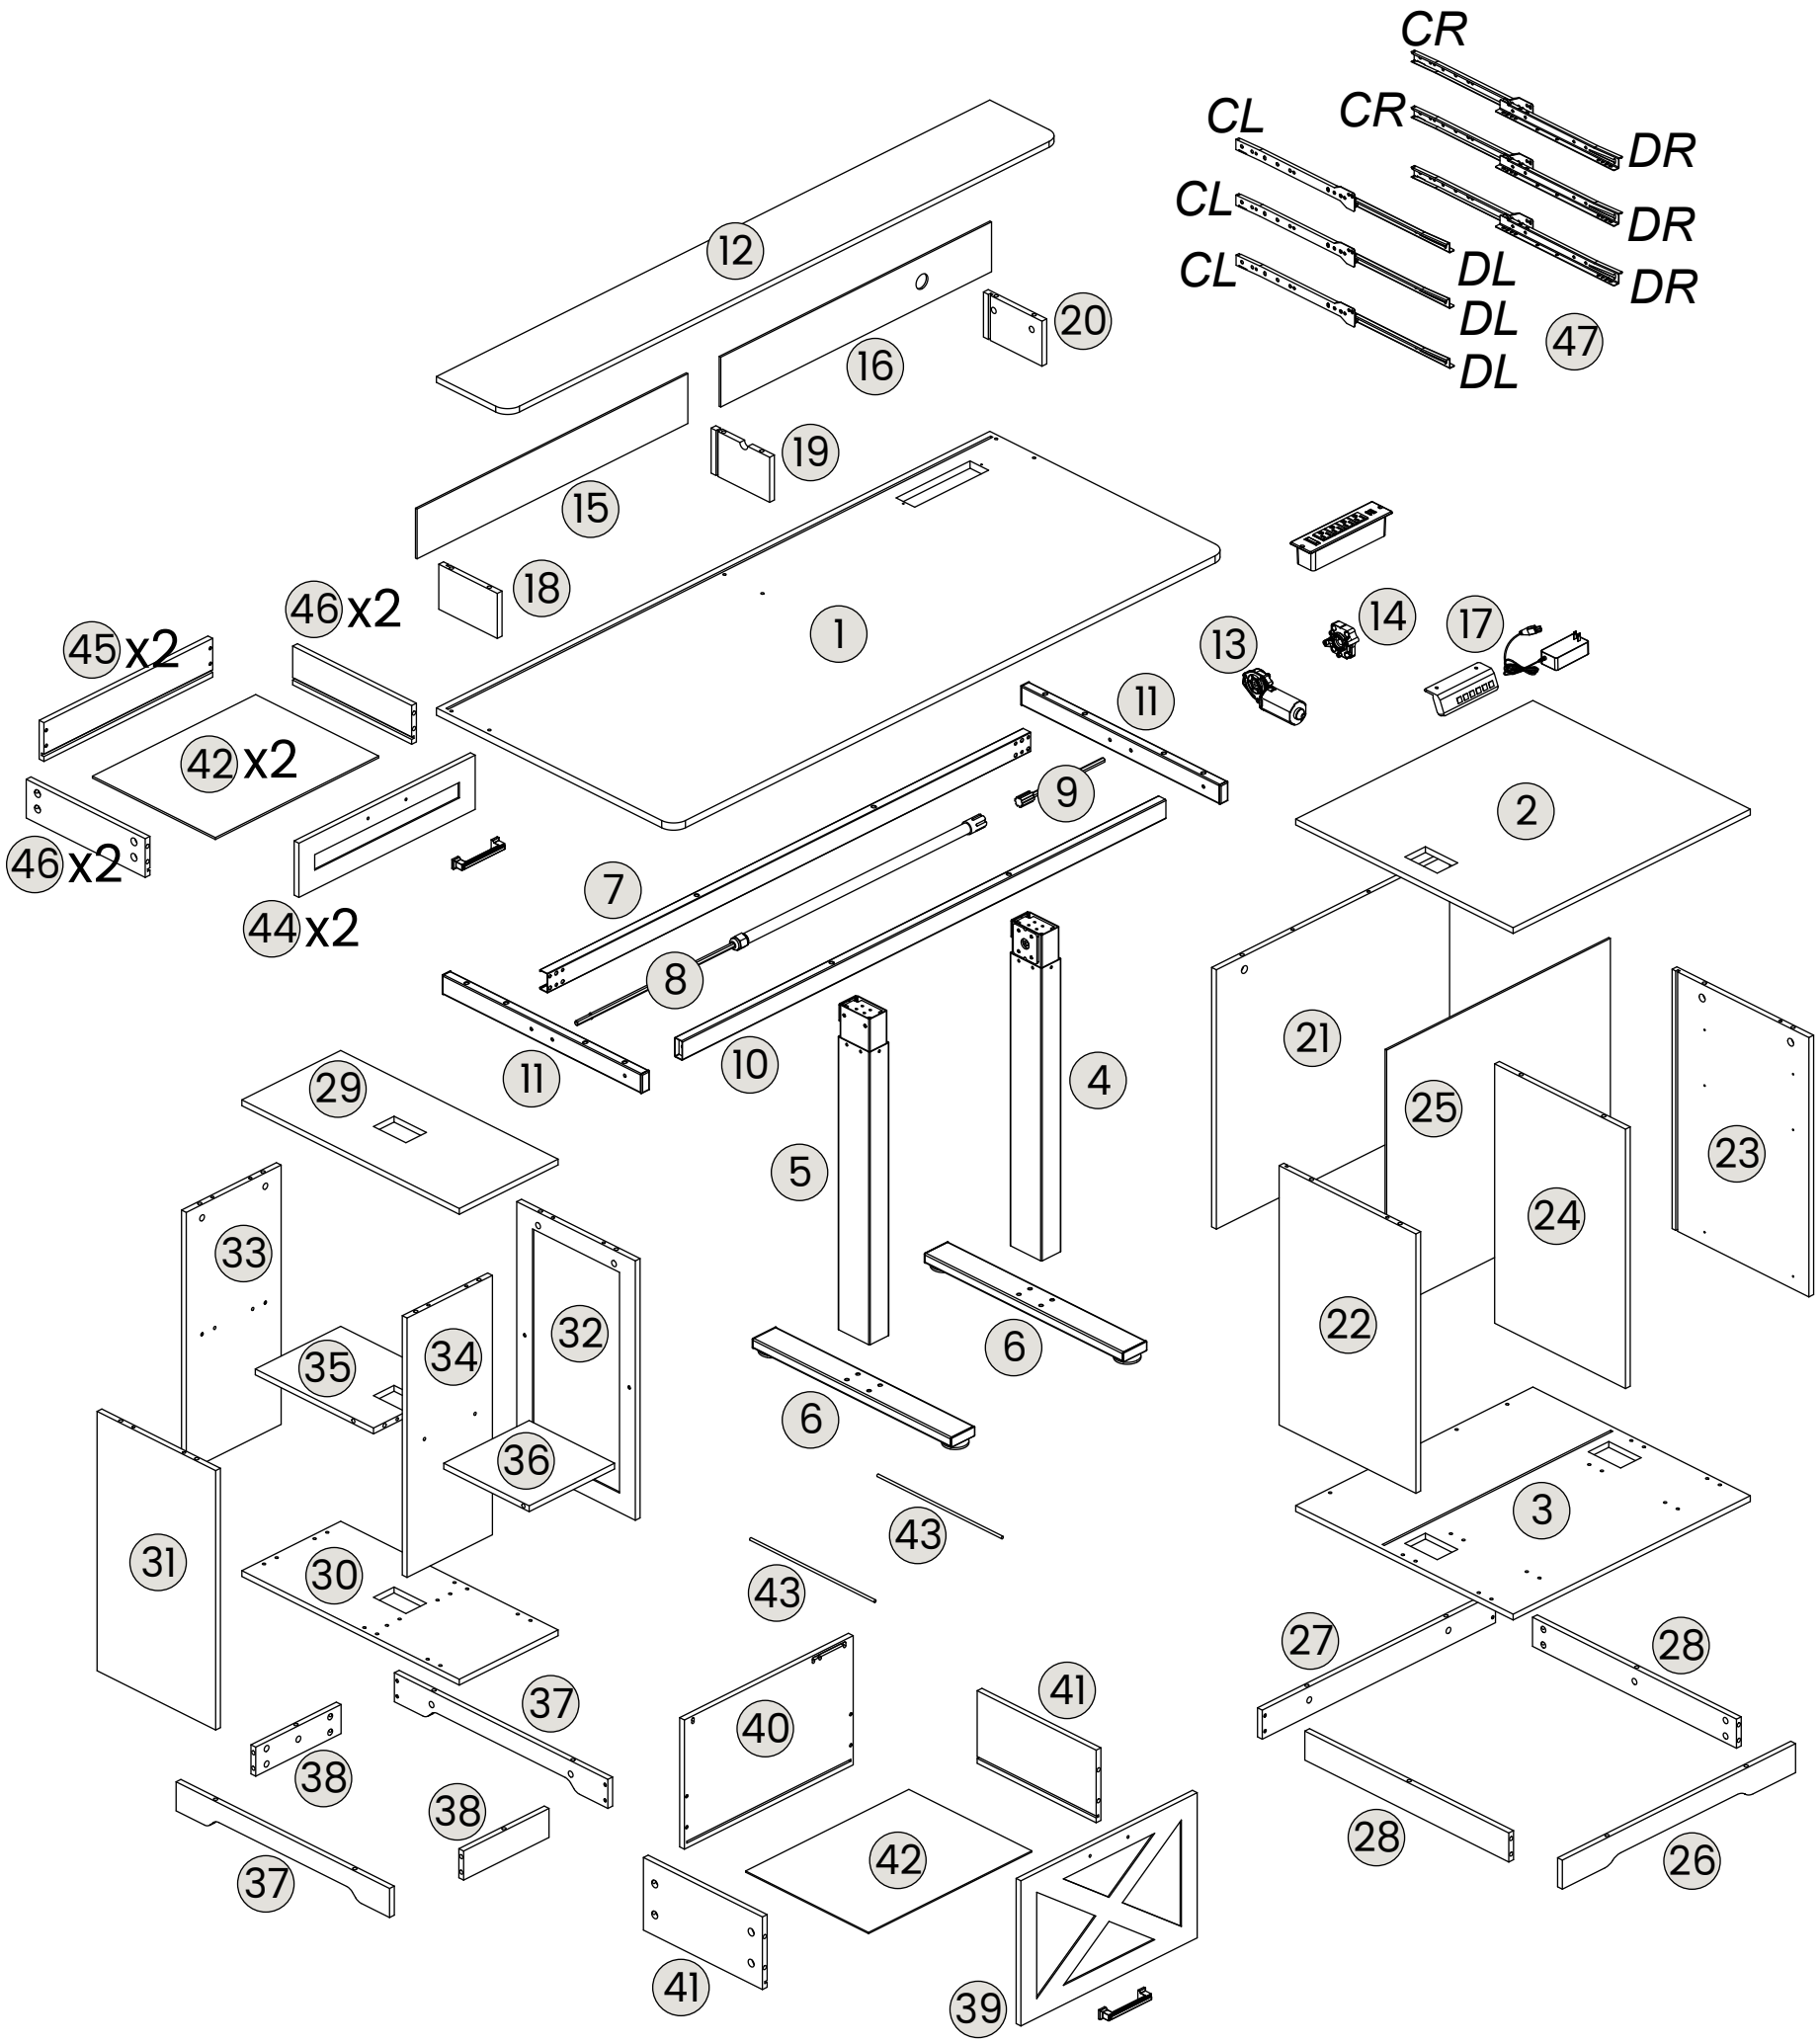


Package Contents


01

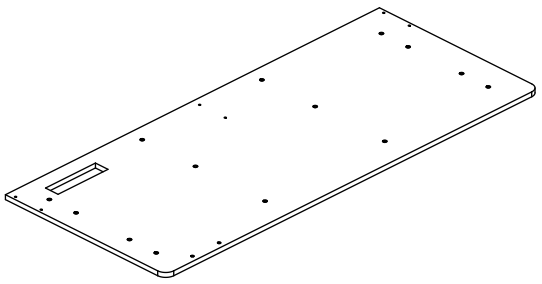


02

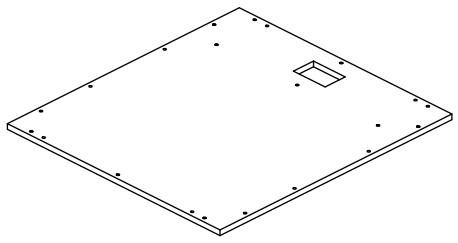


03

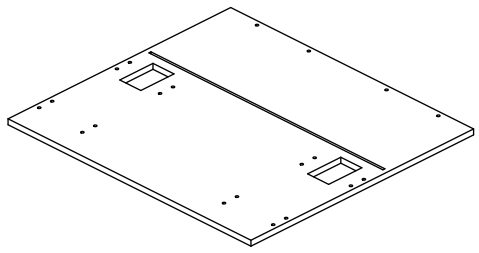


04

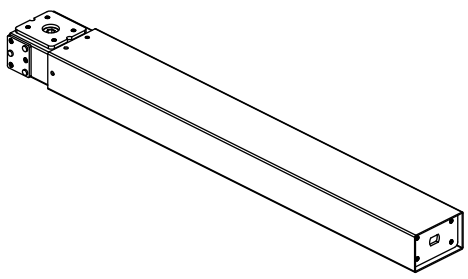


05

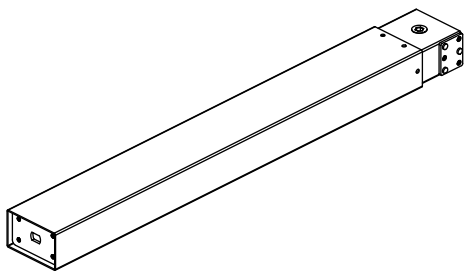


06 x2

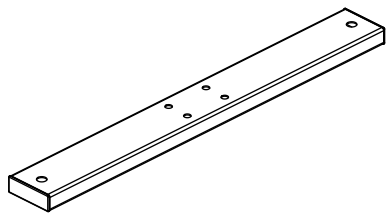


07

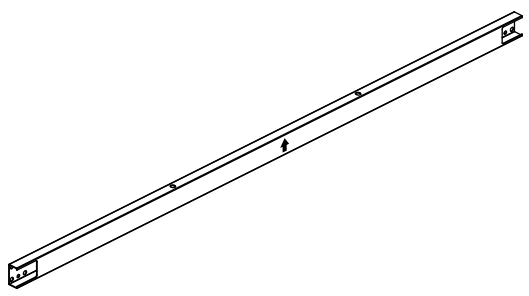


08

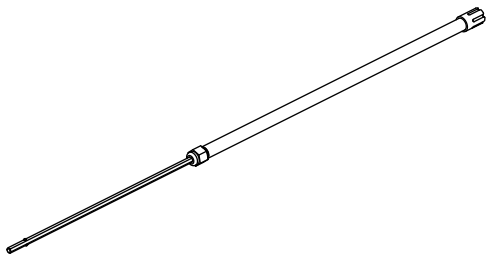


09

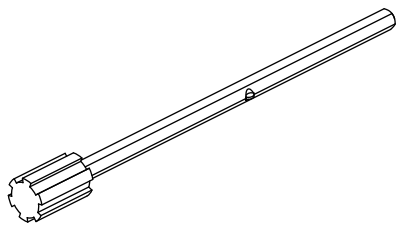


10

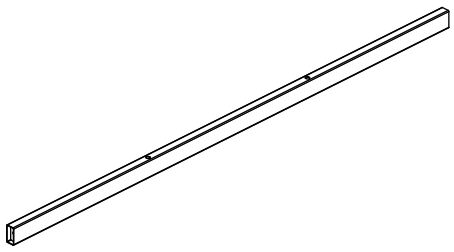


11 x2

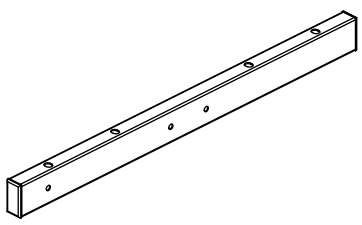


12

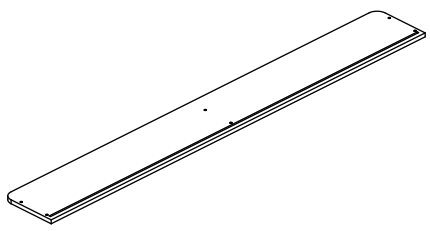


13

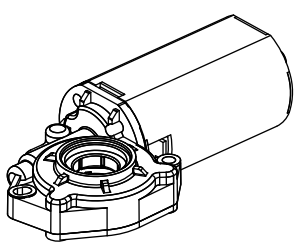

14

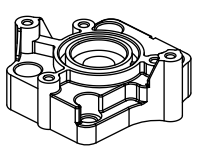


15

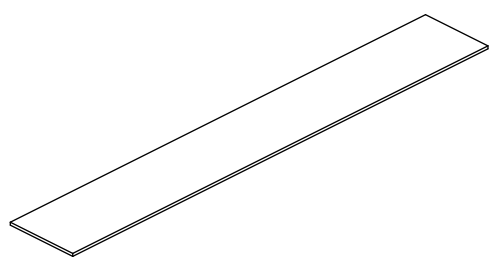


Package Contents


16

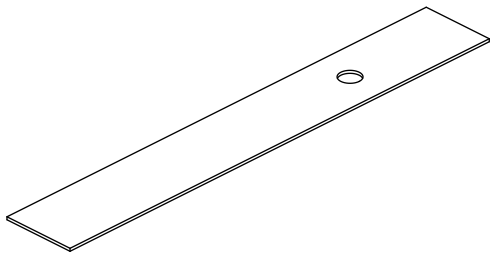


17

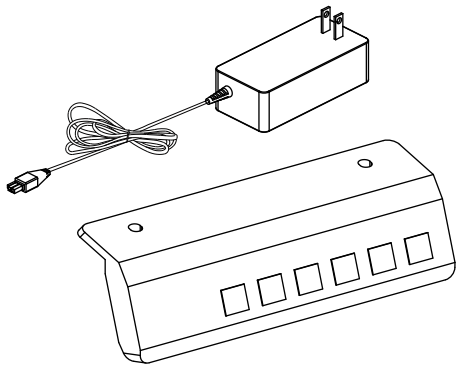


18

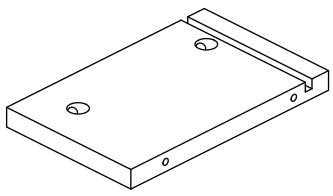


19

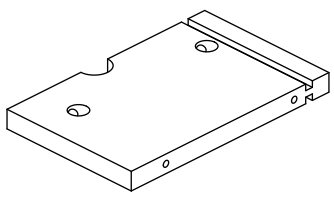


20

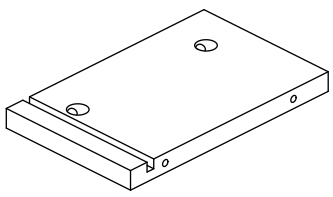


21

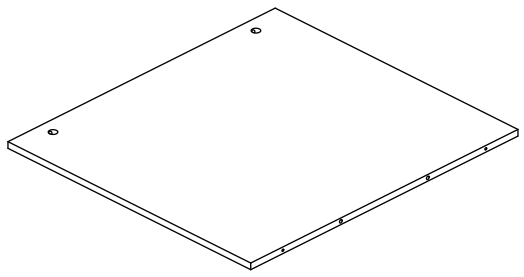


22

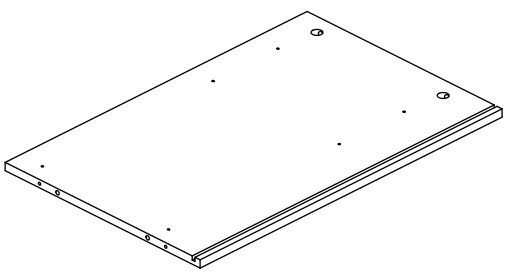


23

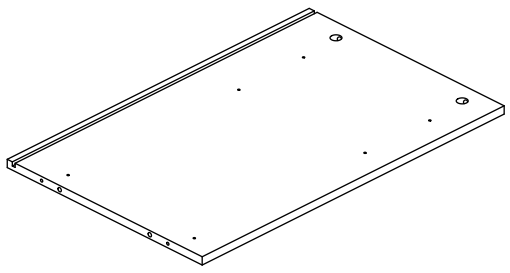


24

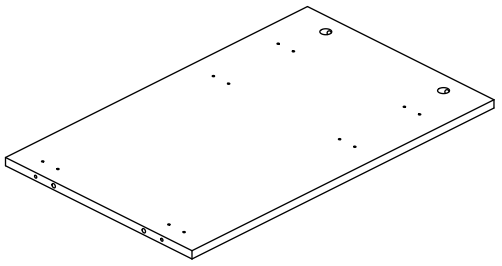


25

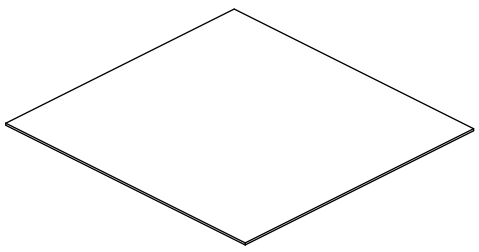


26

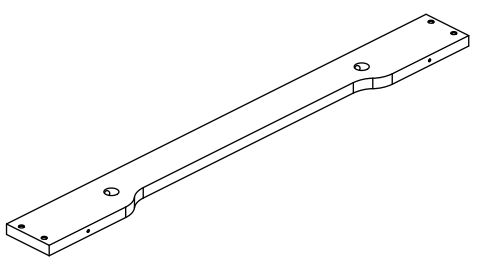


27

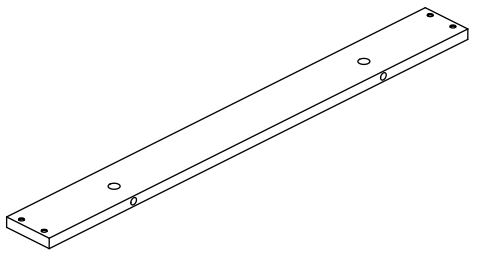


28 x2

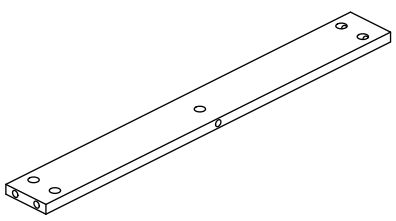

29

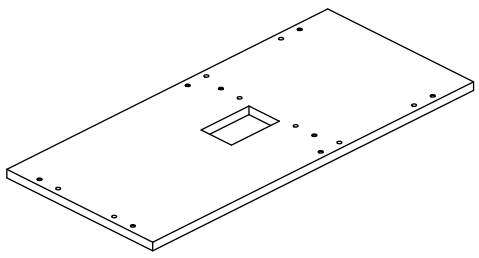


30

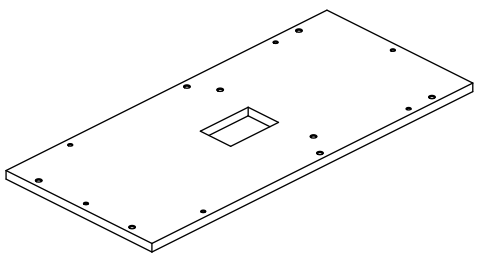


Package Contents


31

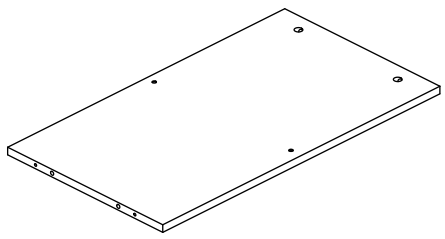


32

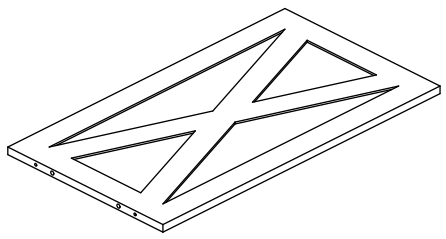


33

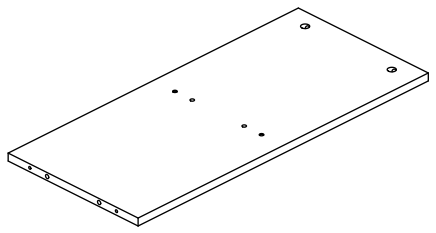


34

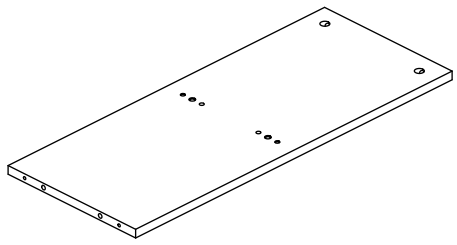


35

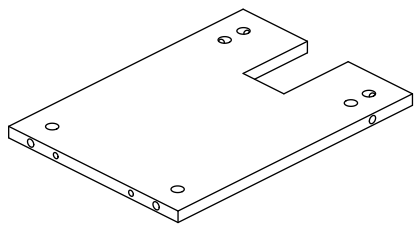


36

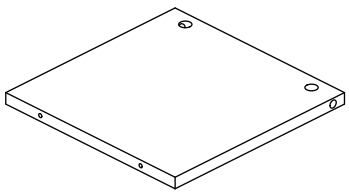


37 x2

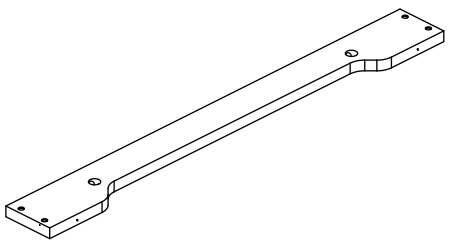


38 x2

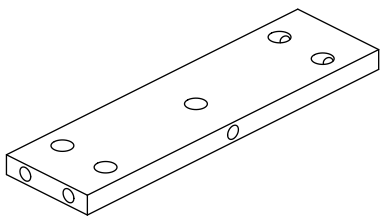


39

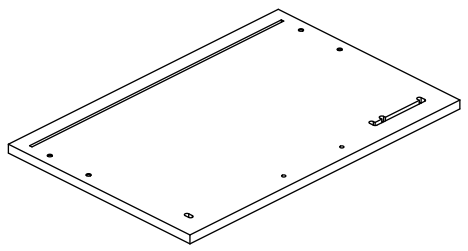


40

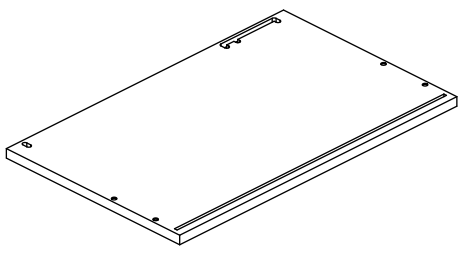


41 x2

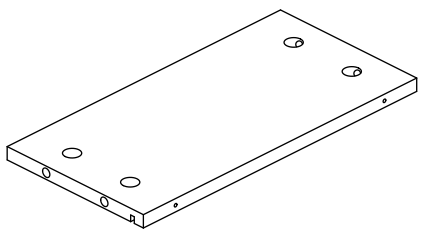


42 x3

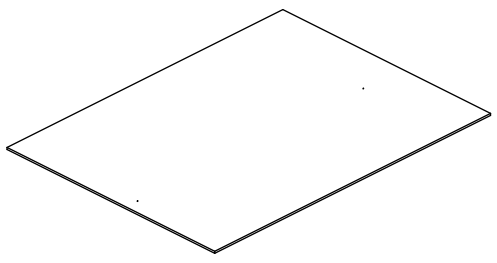


43 x2

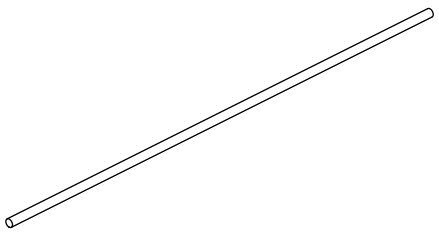



44 x2

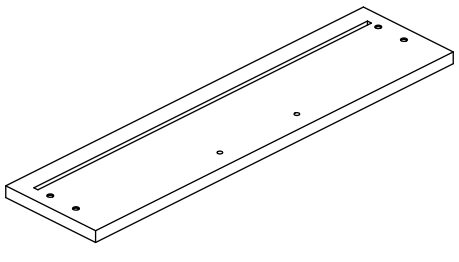























45 x2

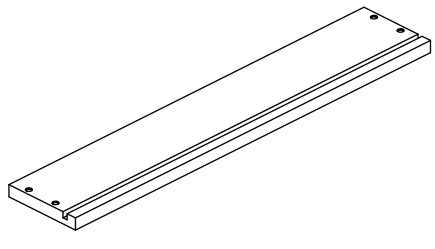



Package Contents

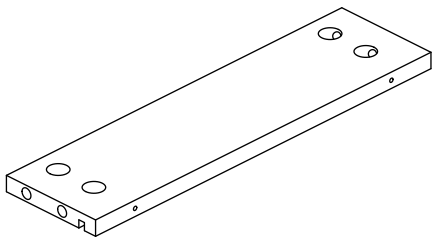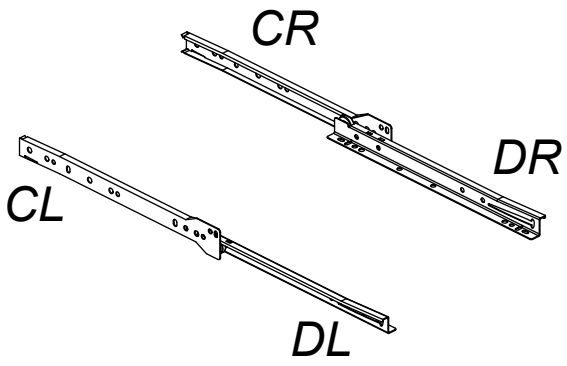46 x4 	47 x3 	


Tool sheet

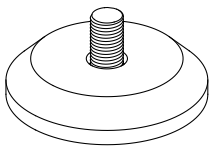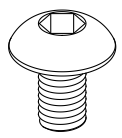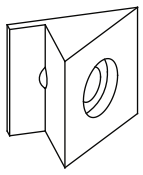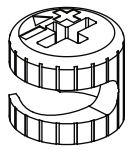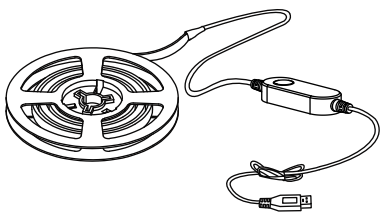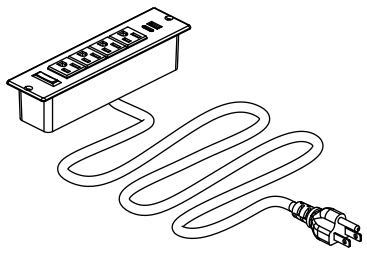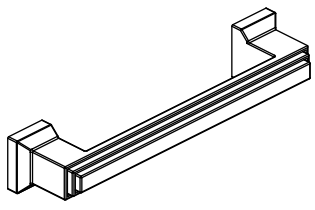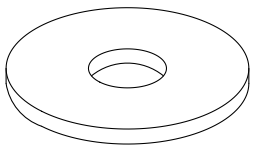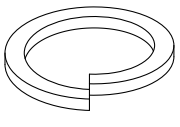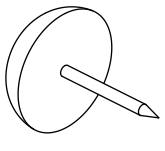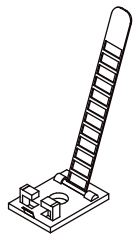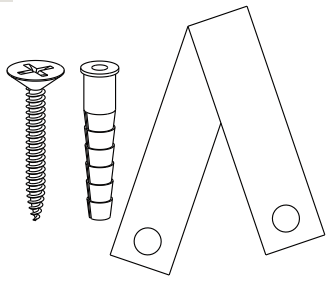
A x4 	**B** x2+1  M6x10MM	**C** x10+2  M6x10MM	**D** x12+2  M6x48MM
E x24+3  ST5x40MM	**F** x2+1  M4x12MM	**G** x4+1  M6x28MM	**H** x10+2  M6x40MM
I x2+1  ST4x25MM	**J** x26+3  ST4x12MM	**K** x12+2  ST4x14MM	**L** x6+1  M4x16MM
M x32+4  Ø6x30MM	**N** x12+2 	**O** x82+6 	**P** x82+6 
Q x1 	**R** x1 	**S** x3 	**T** x8+1  Ø20MM
U x8+1 	**V** x14+2 	**W** x3 	**X** x2 

Tool sheet

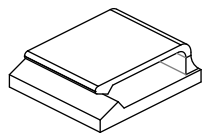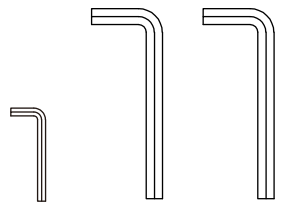Y x4 	**Z** x1  3# 5# 5#	**AA** x1 	

Tool sheet

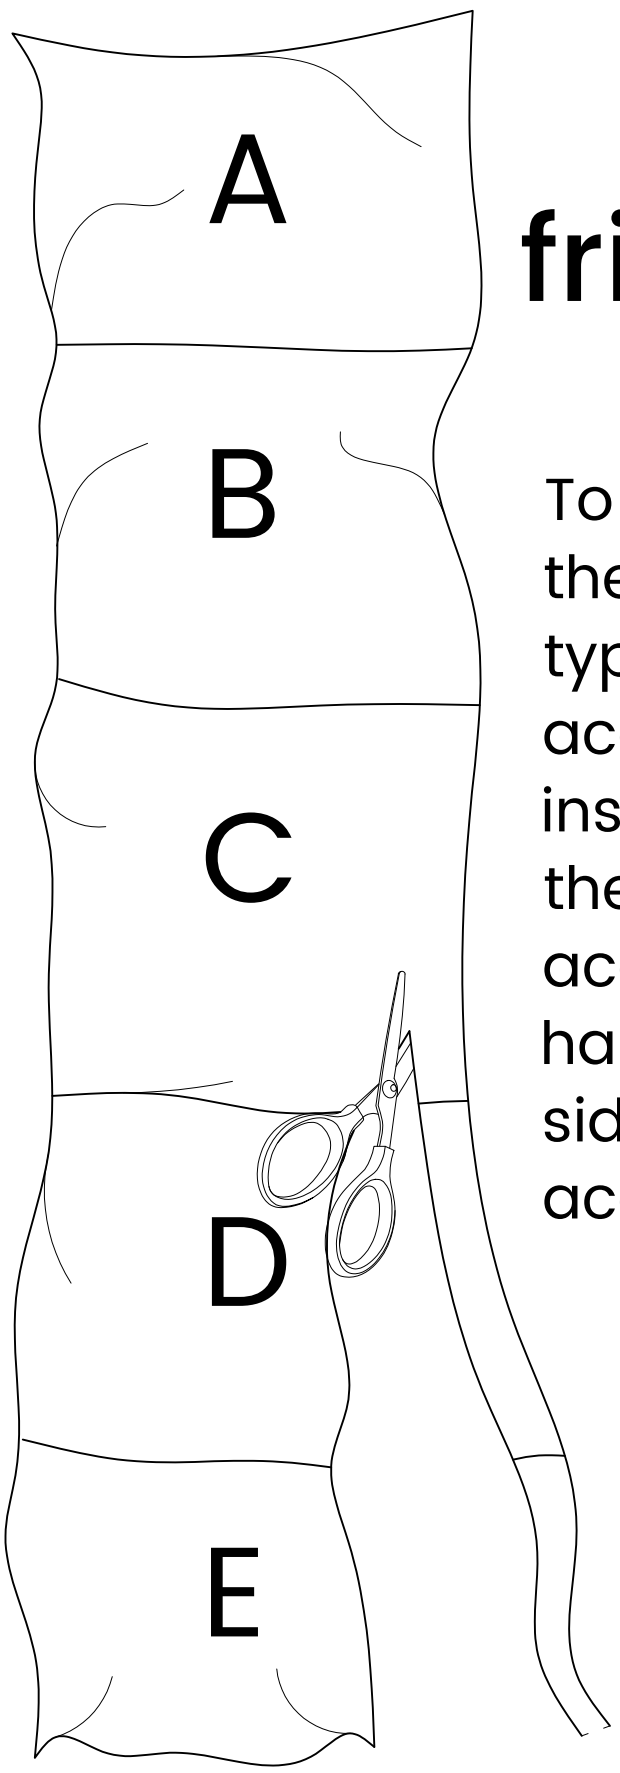

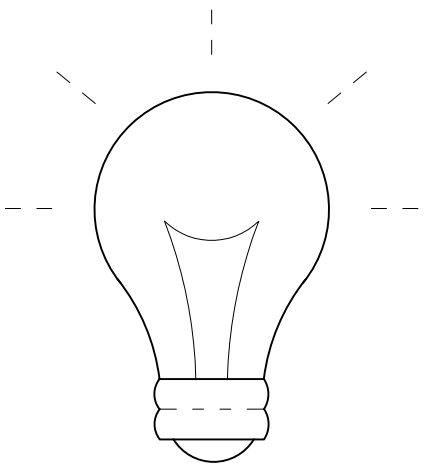


friendly reminder

To avoid errors and confusion during the installation of accessories, use the type and quantity of hardware accessories according to the installation procedure described in the instructions. First, unroll the accessories bag and lay out the hardware accessories, cut holes in the side, and take out the hardware accessories


Assembly Instruction

O x24





1

Option A:

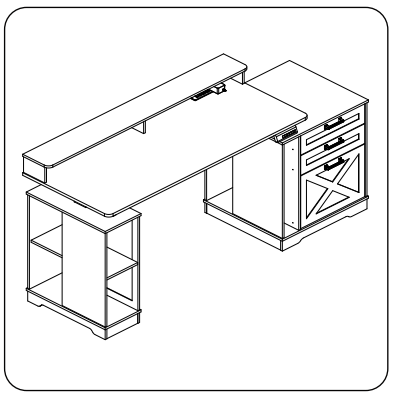


Option B:

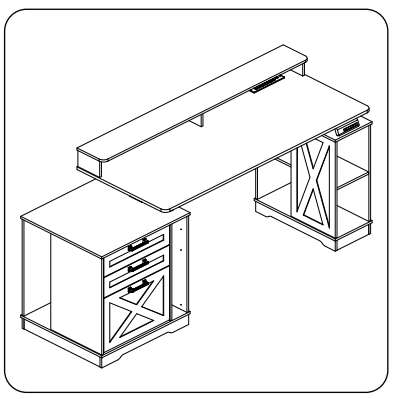


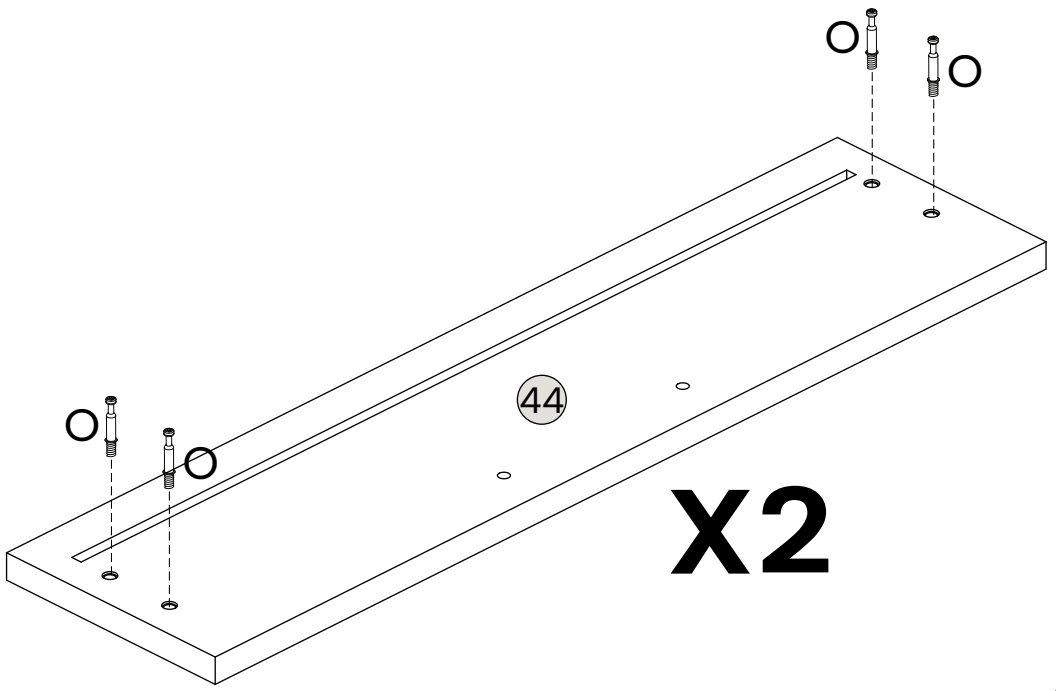


X2

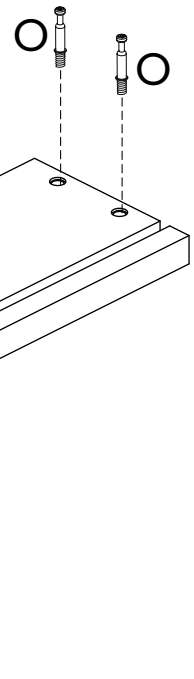


X2

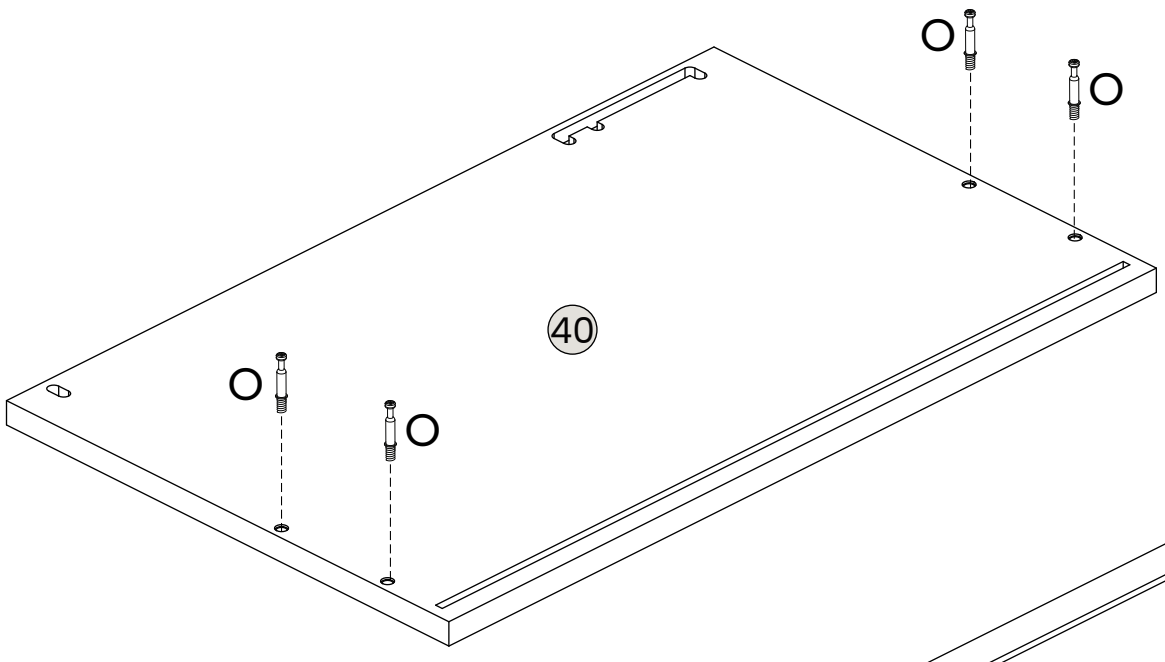

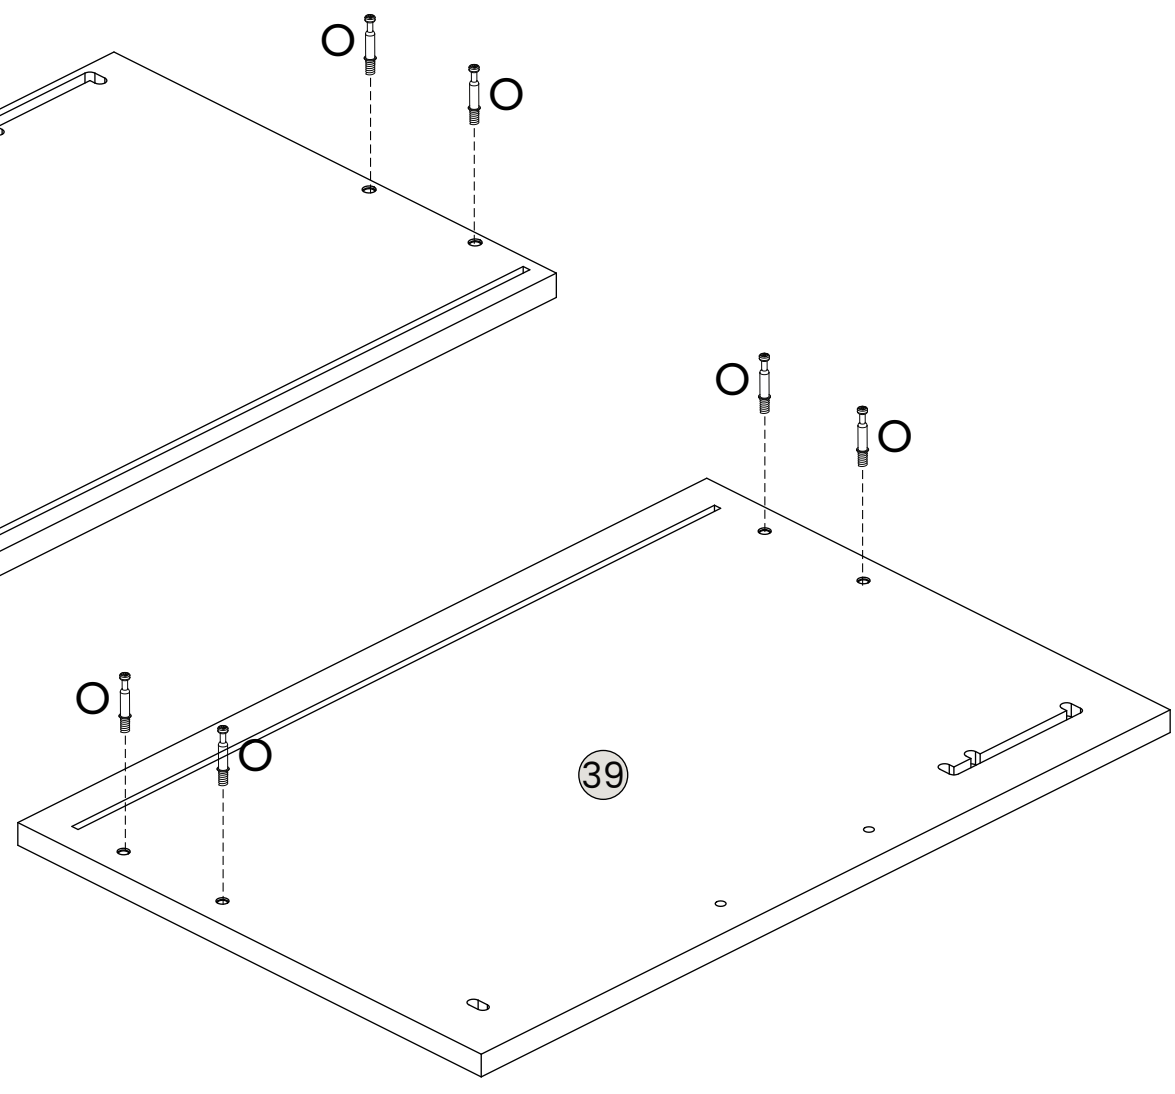


Assembly Instruction

P x12




2

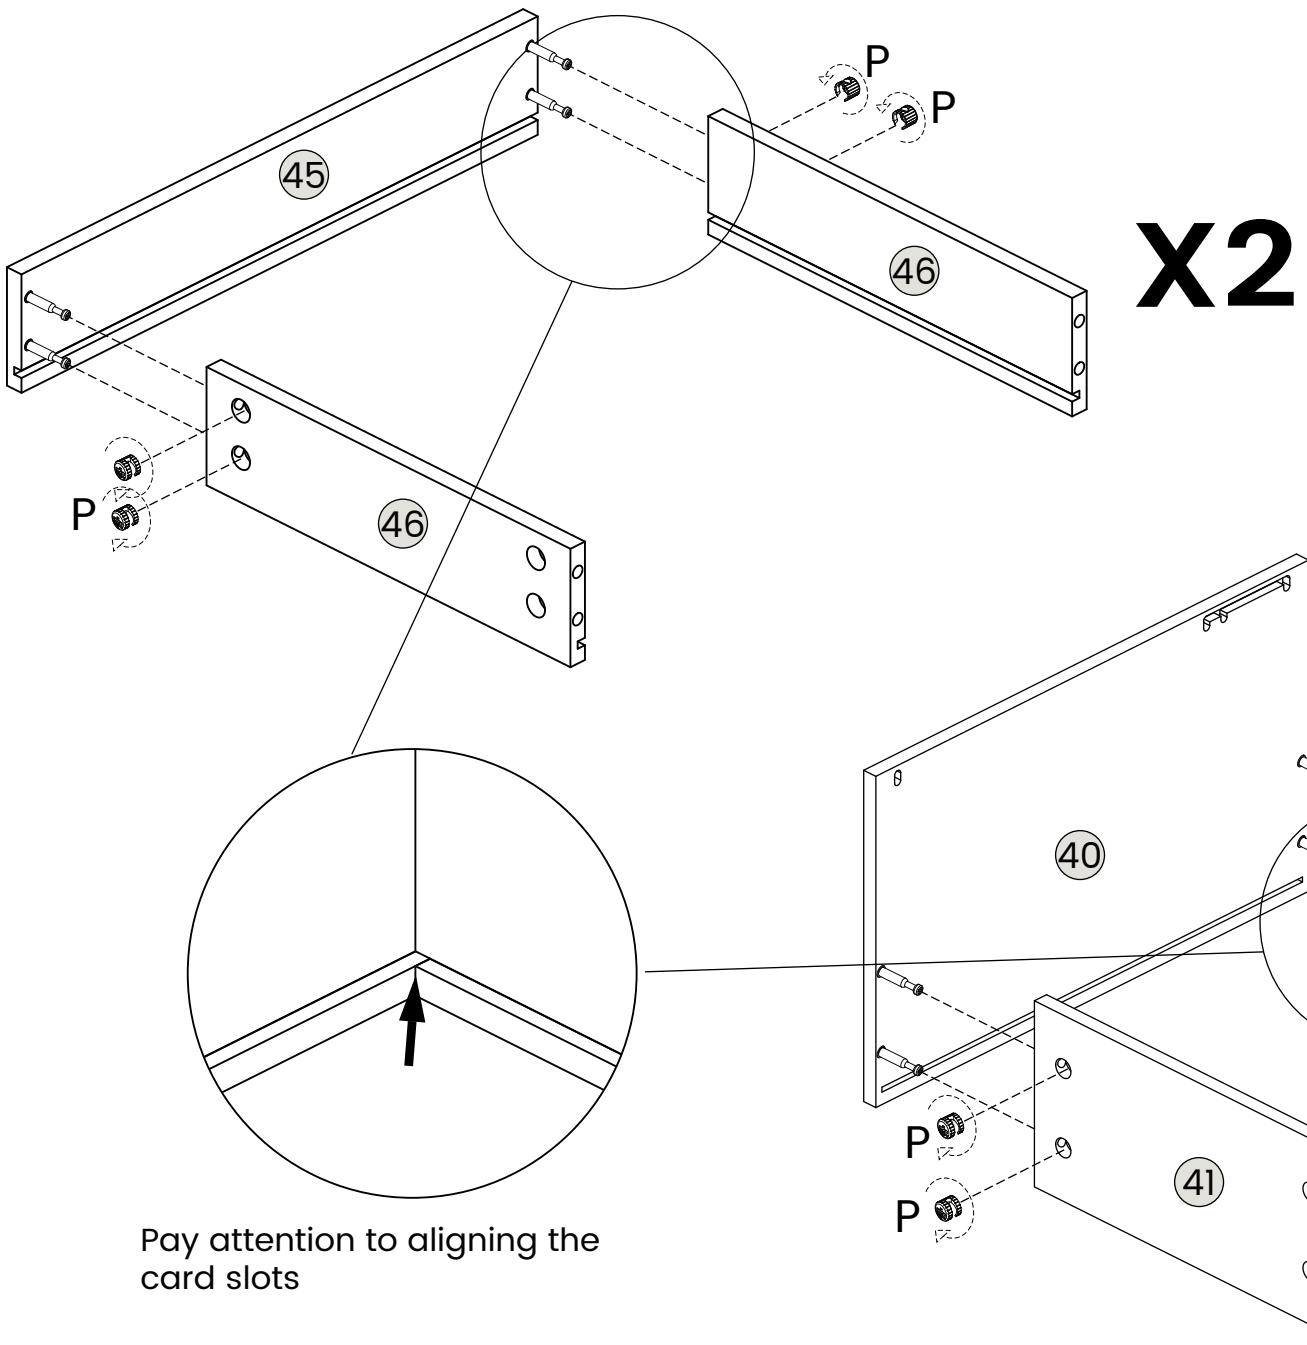


X2

Installation instructions for eccentric rod


O

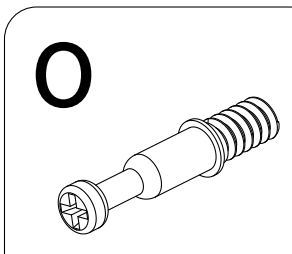


P

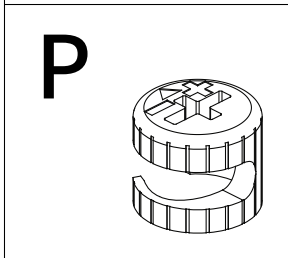


01

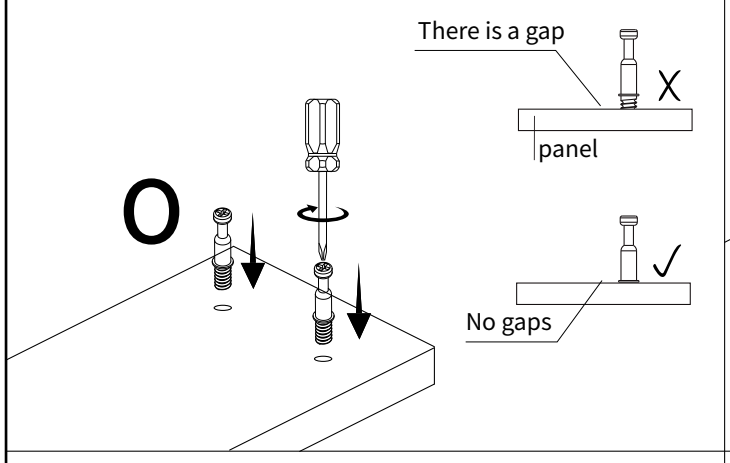


02

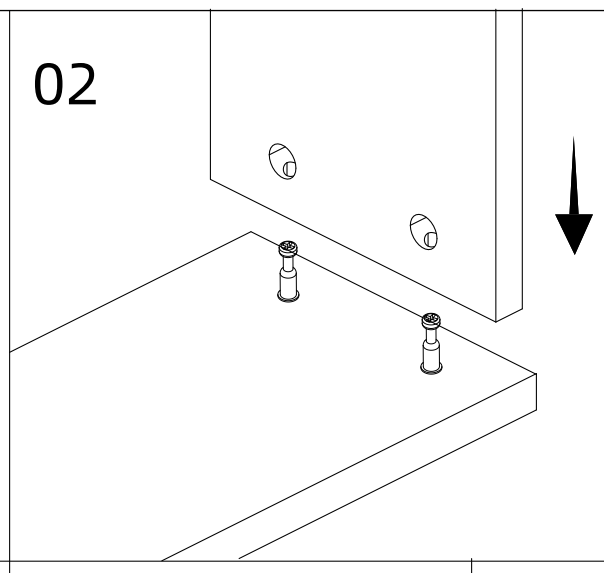

03

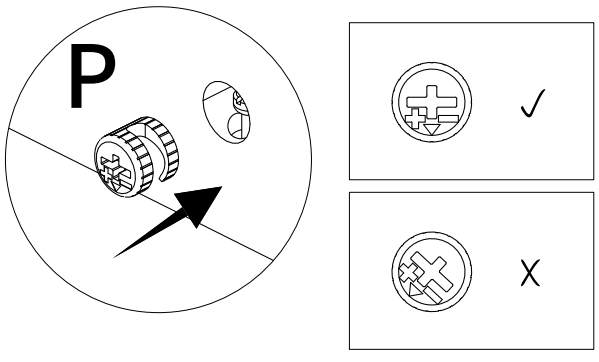


04

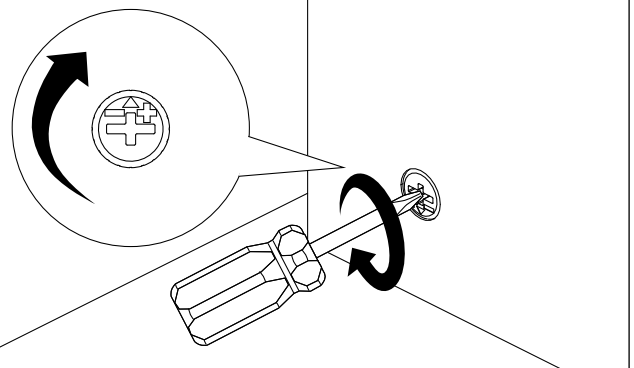


Assembly Instruction

3

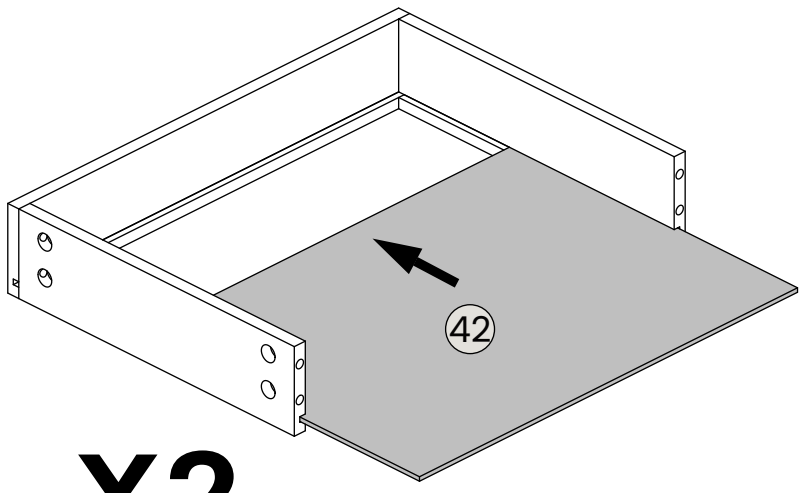


X2

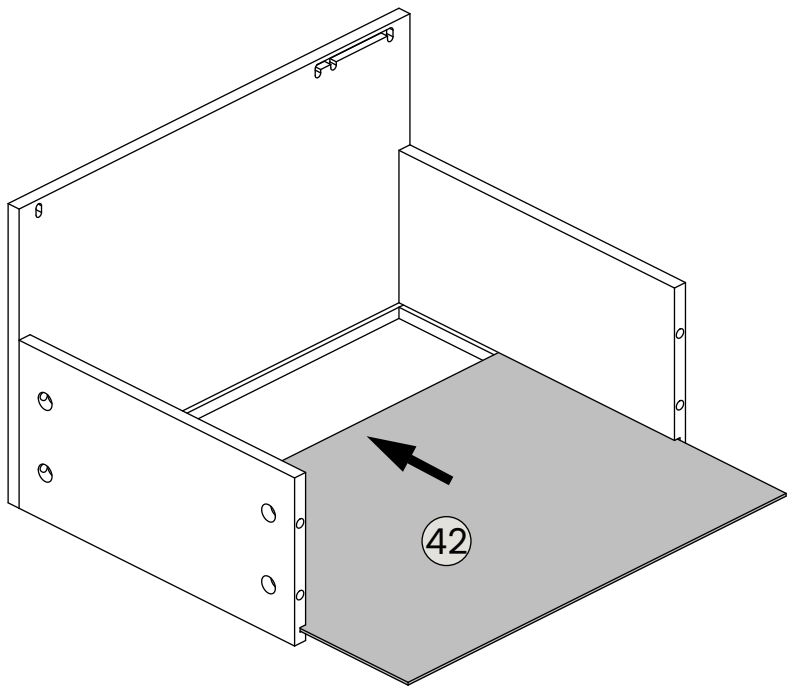

4

P x12




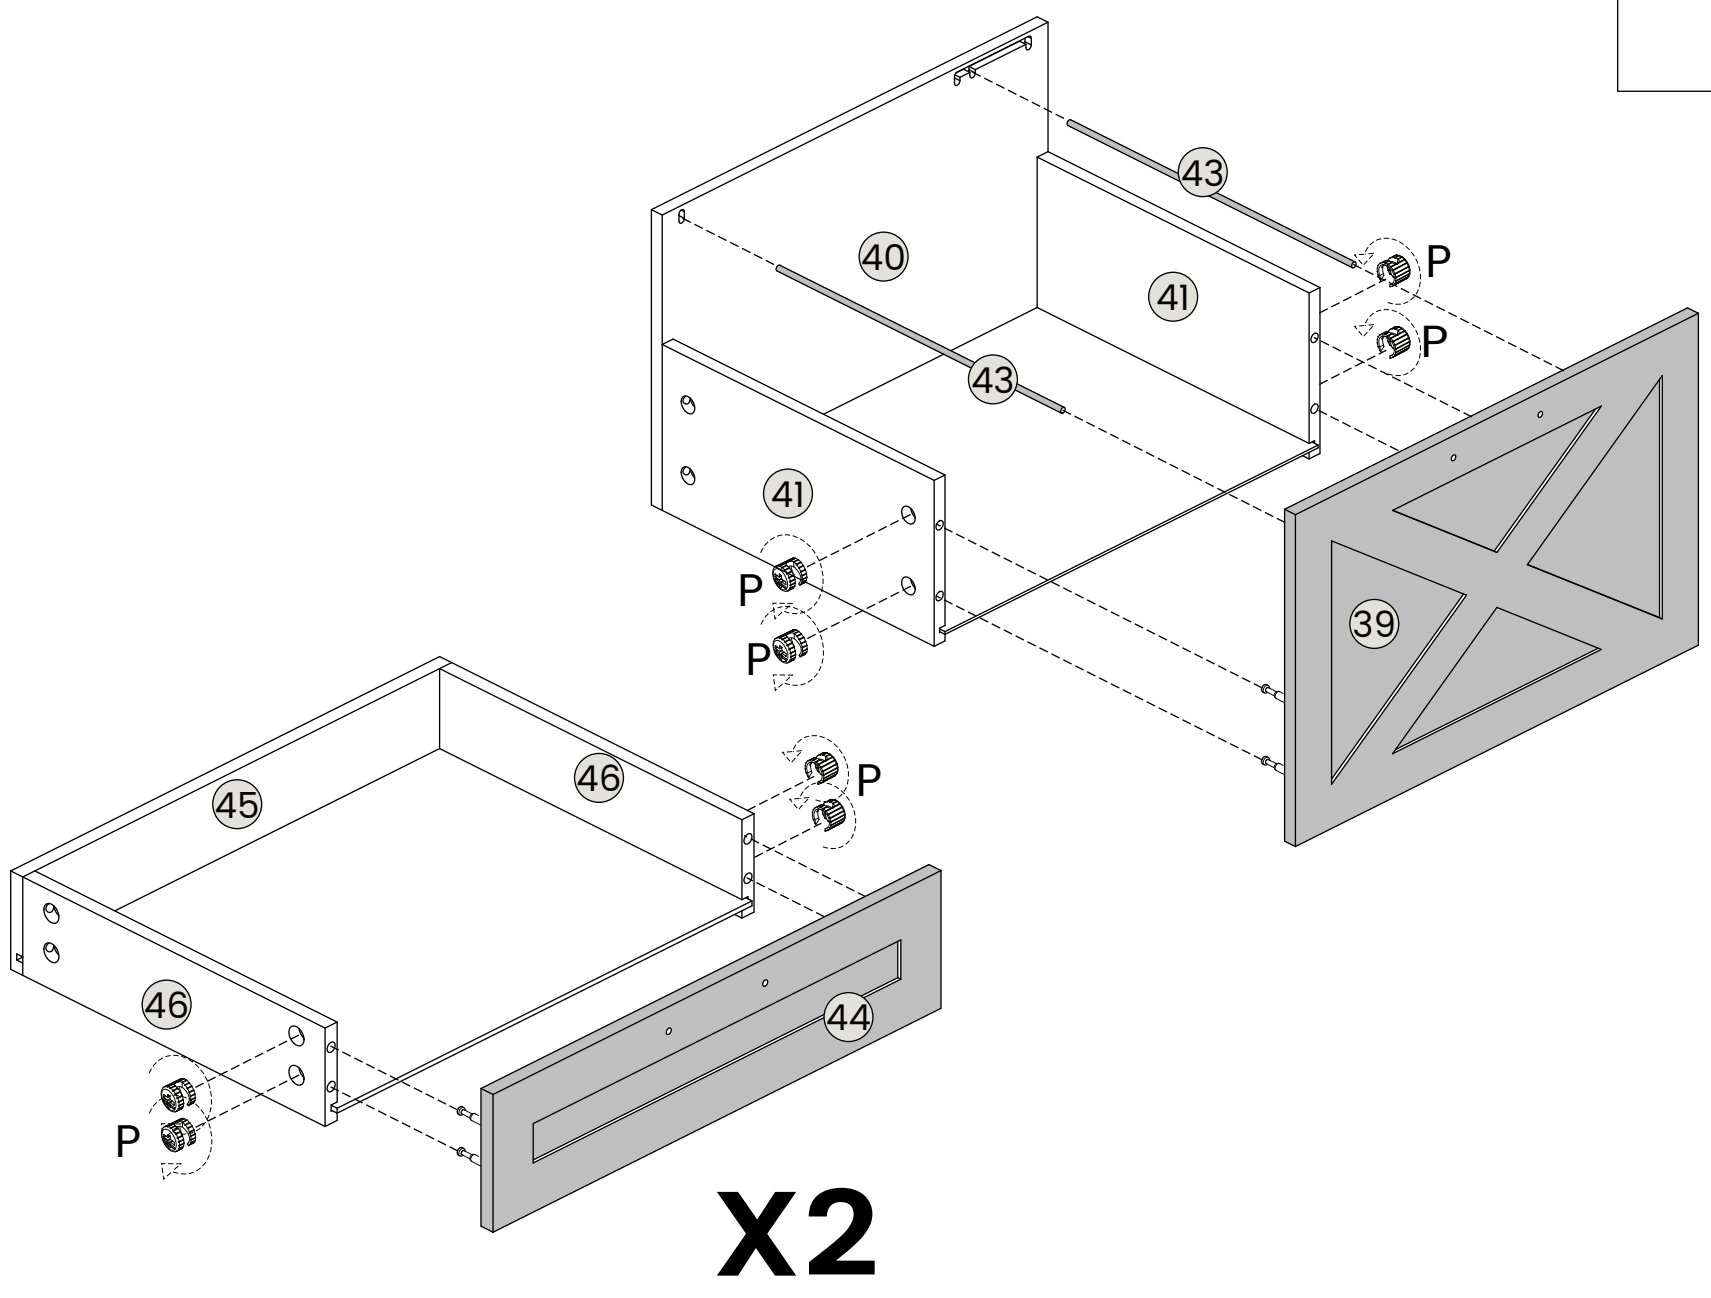


X2

Assembly Instruction


5

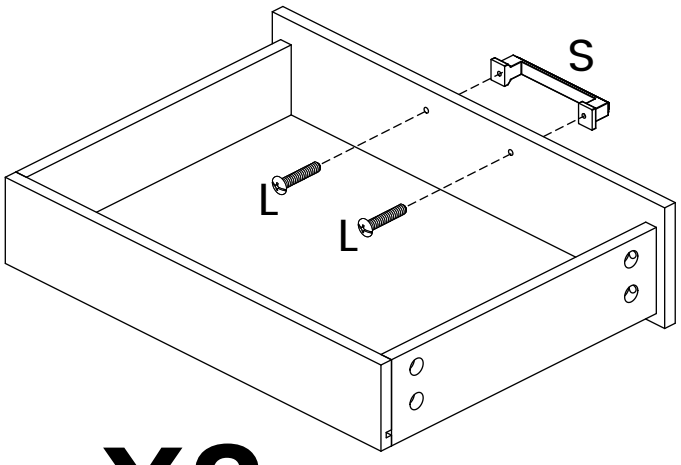

X2

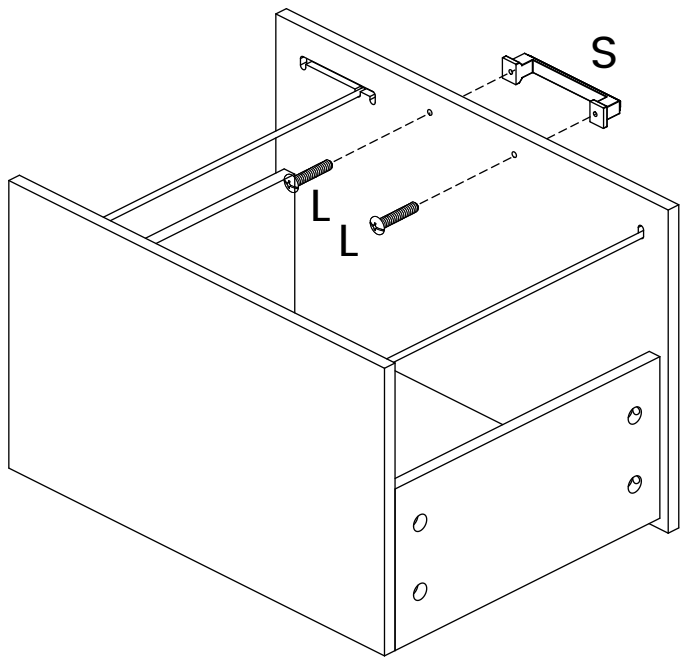


L x6




M4x16MM


S x3



6

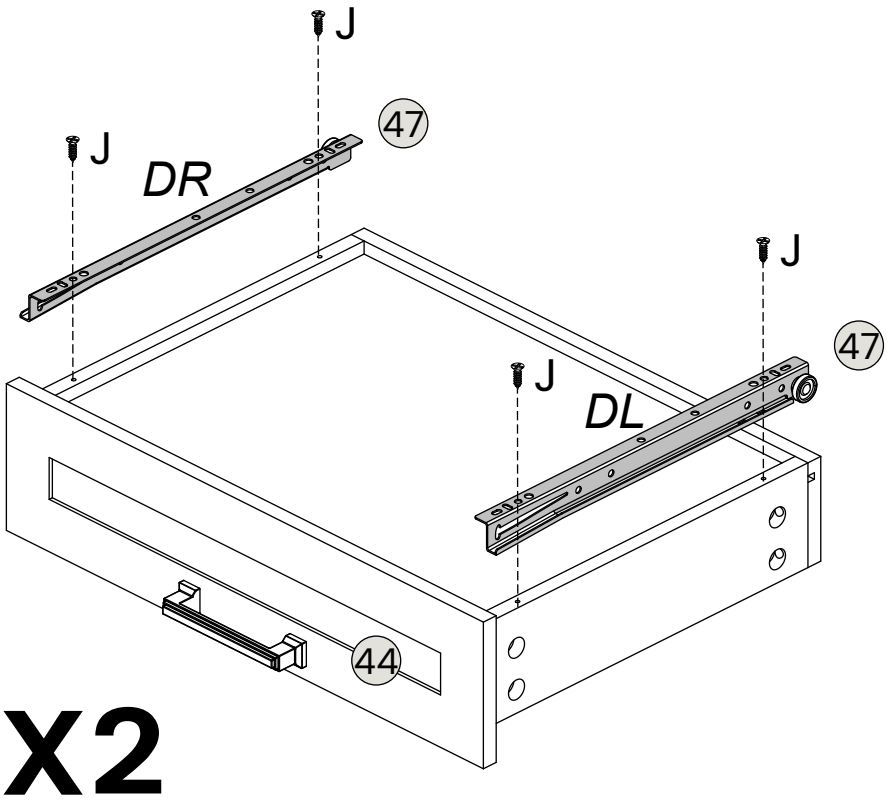


X2

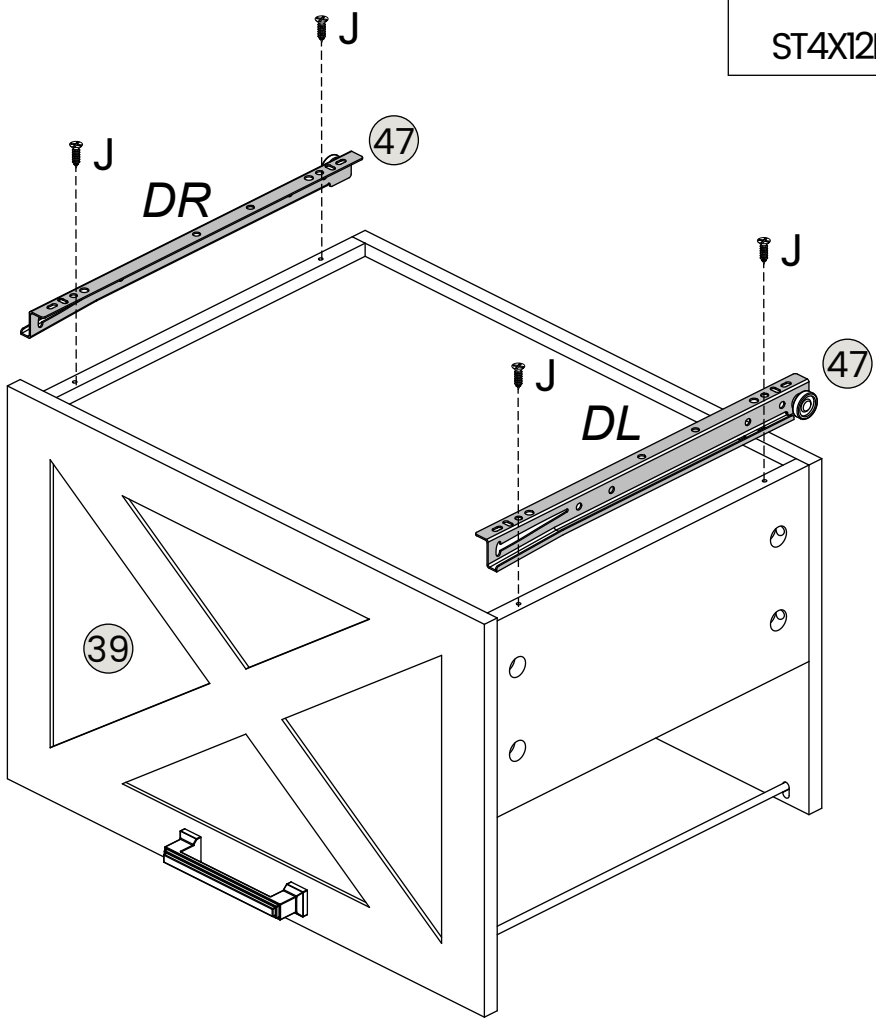

J x12




ST4X12MM

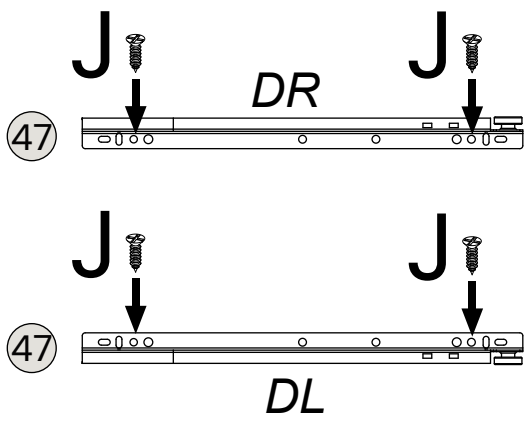


Assembly Instruction


7

Option A:07-63

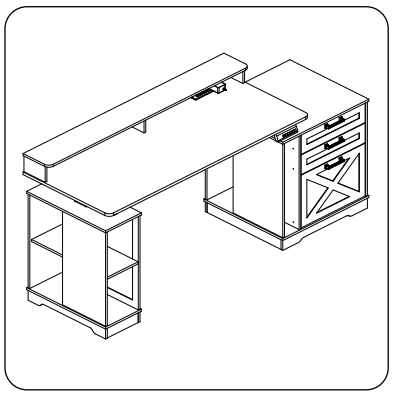


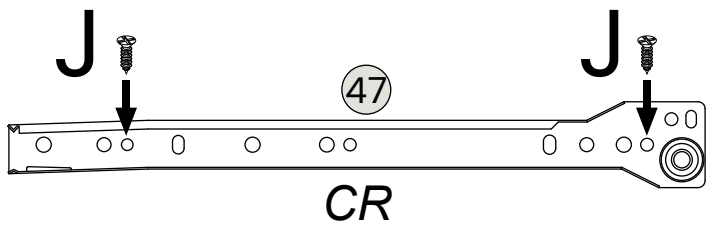


J x6




ST4X12MM

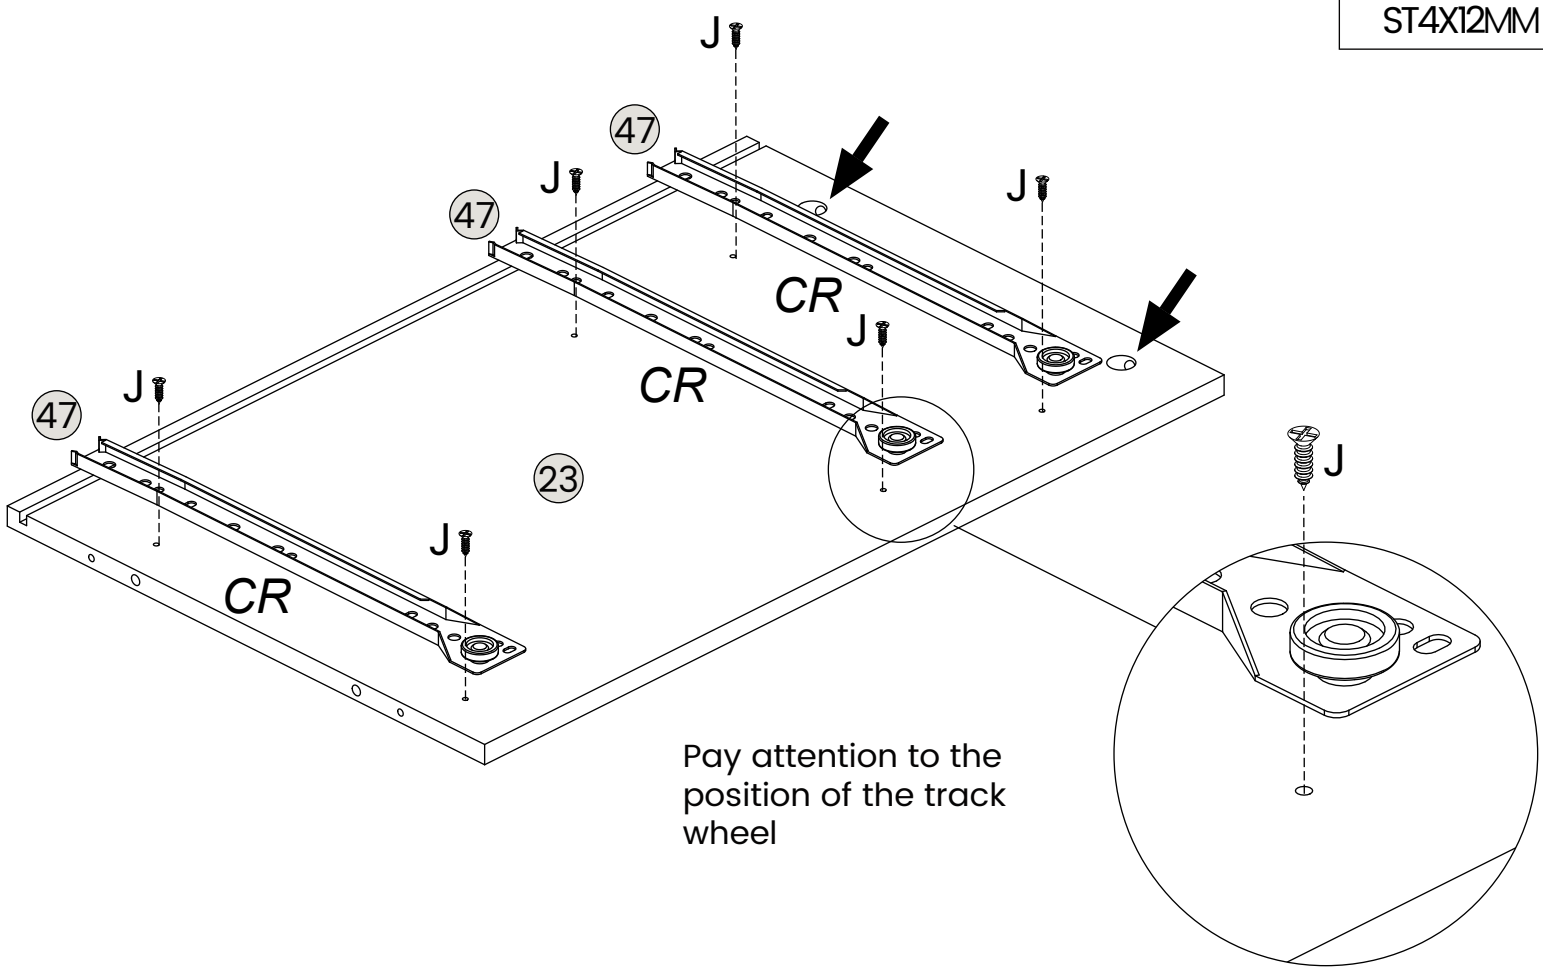


8

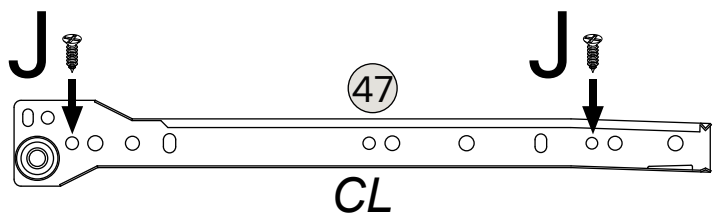

J x6




ST4X12MM

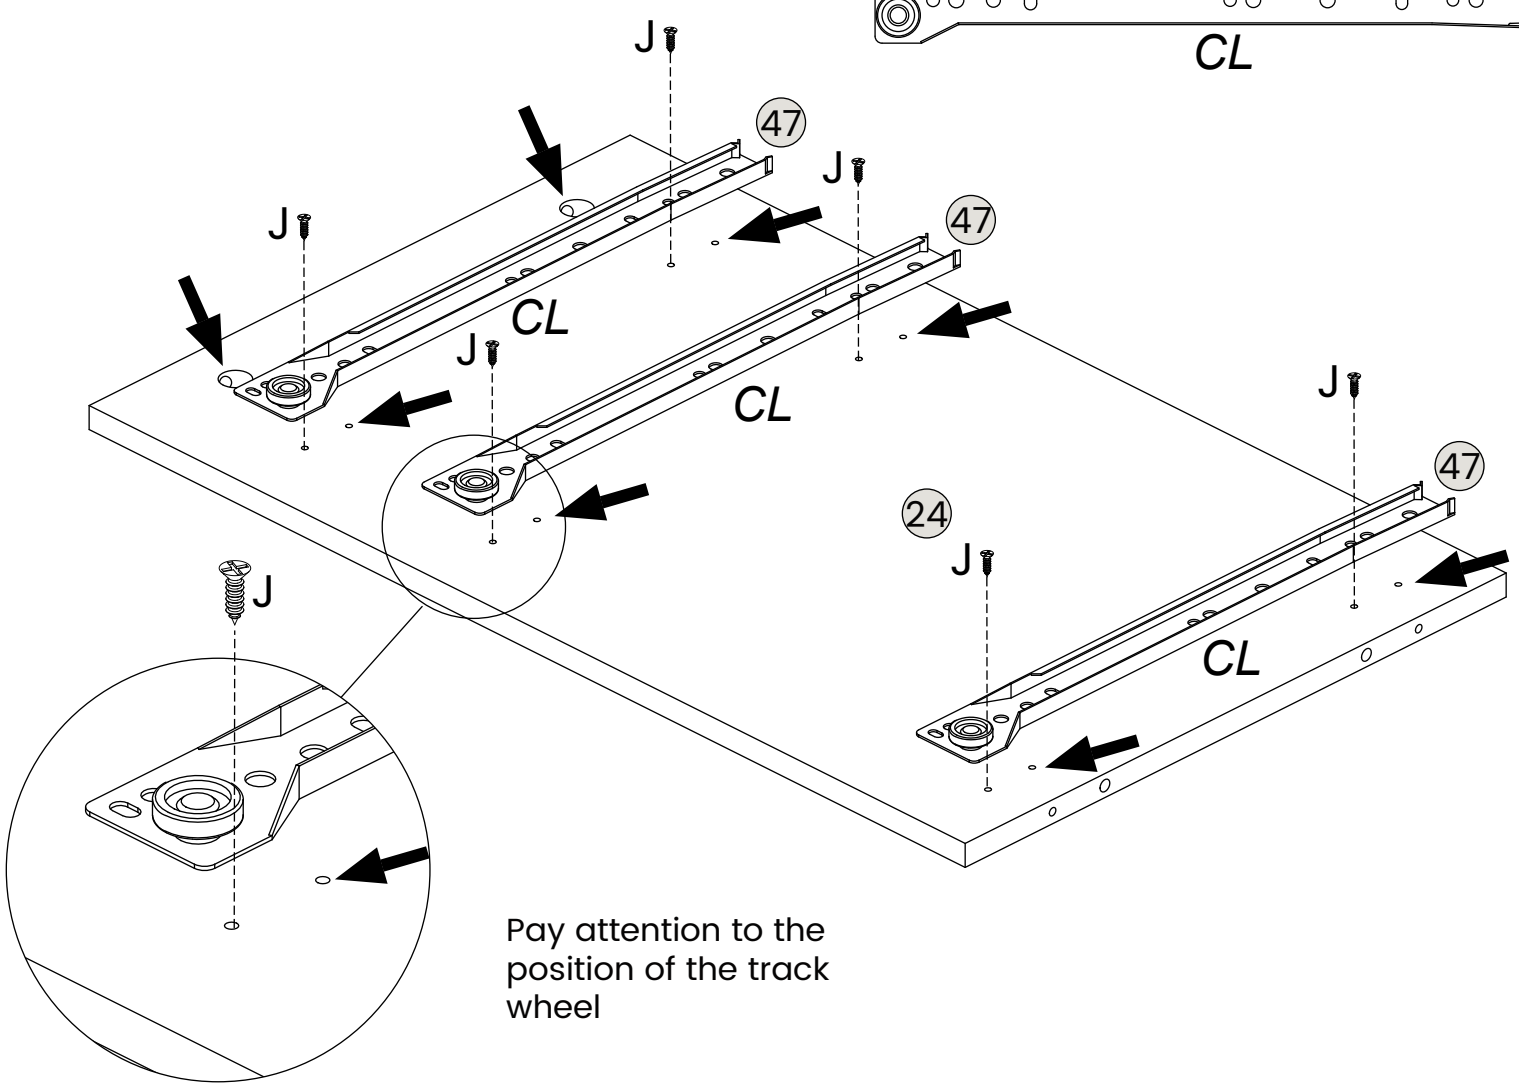


Assembly Instruction

9

O x8



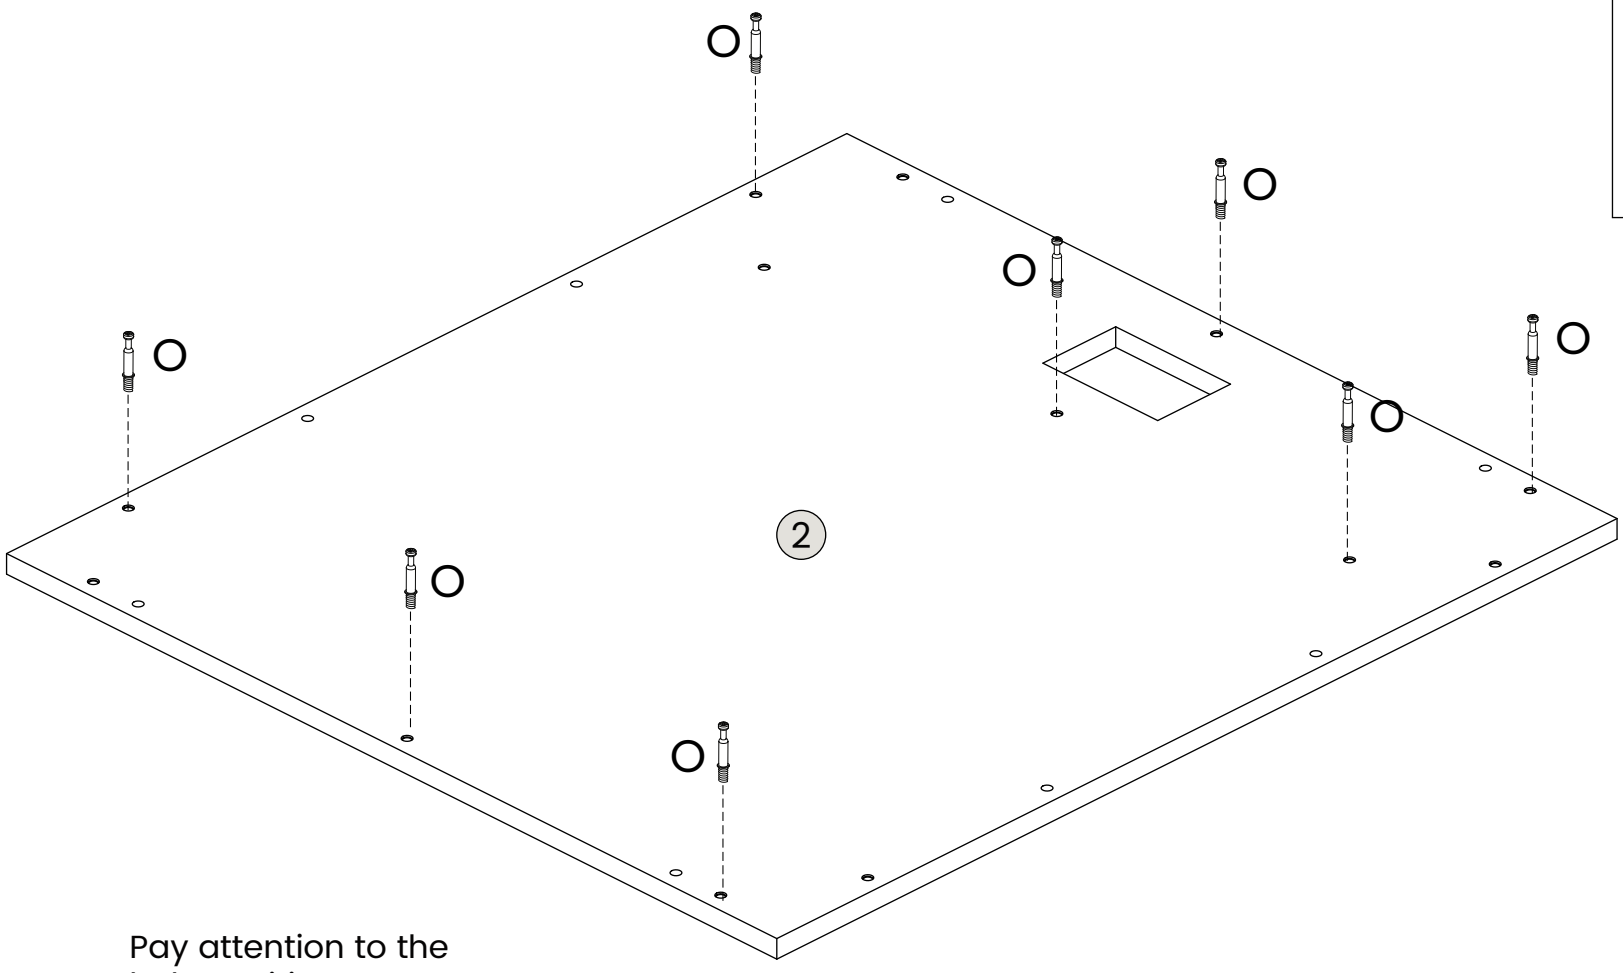

Pay attention to the
hole position


10

P x2




M x2

Ø6x30MM

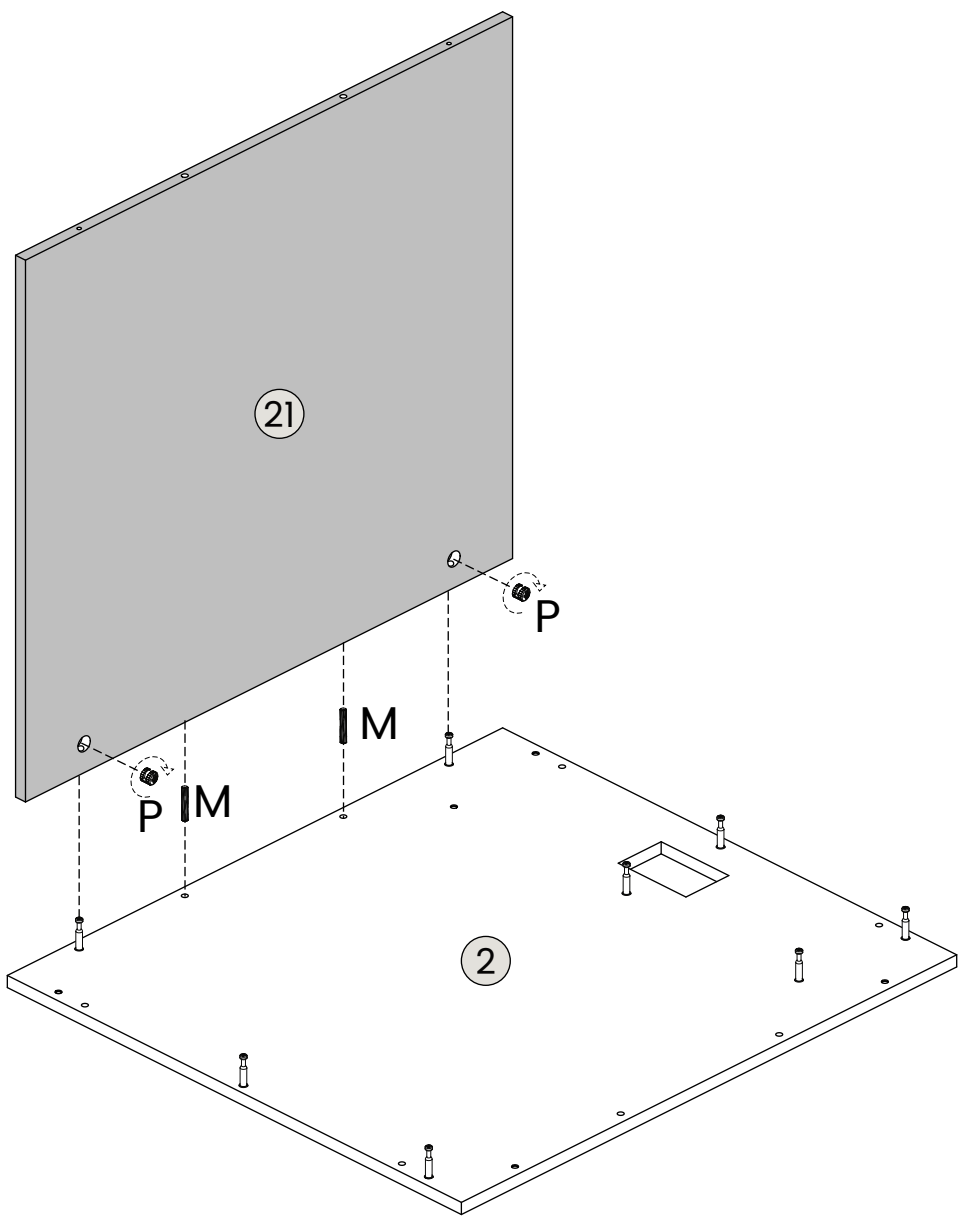

Assembly Instruction

11

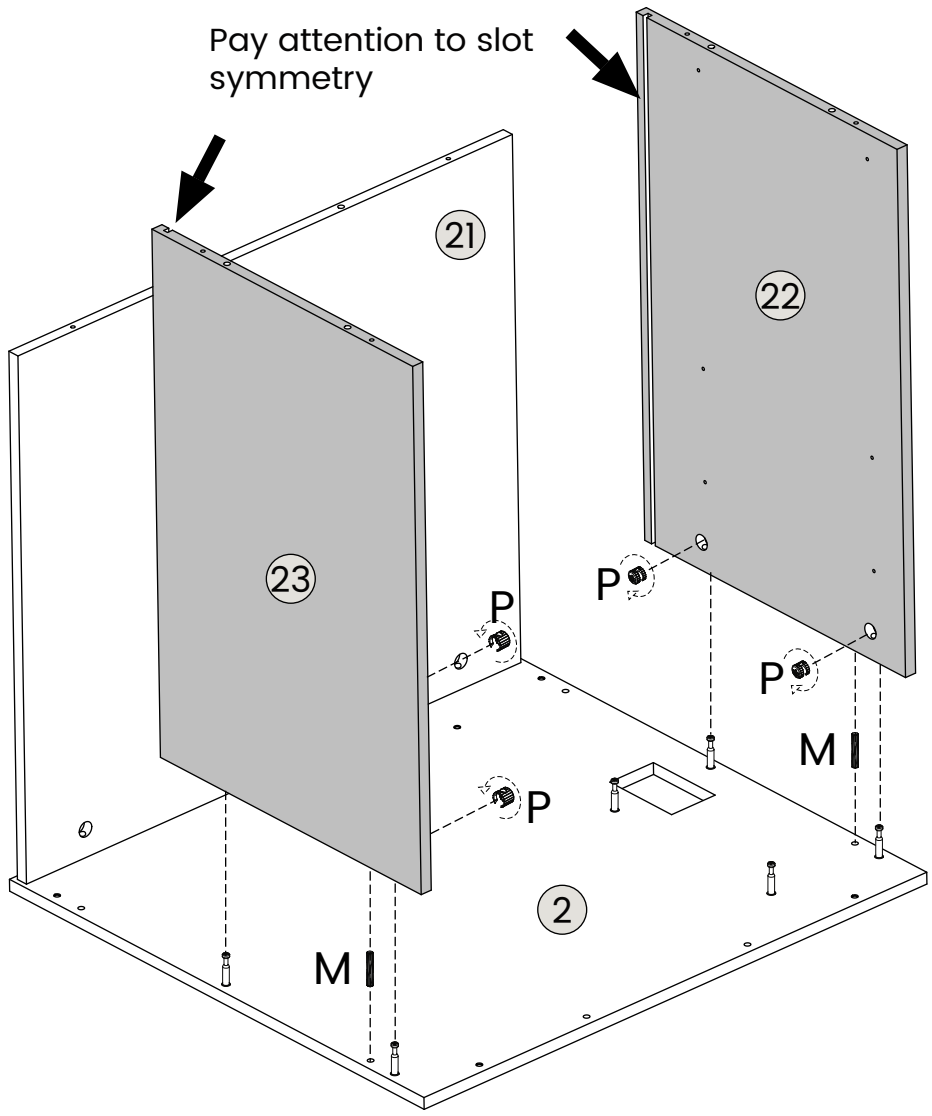

P x4




M x2



Ø6x30MM

12

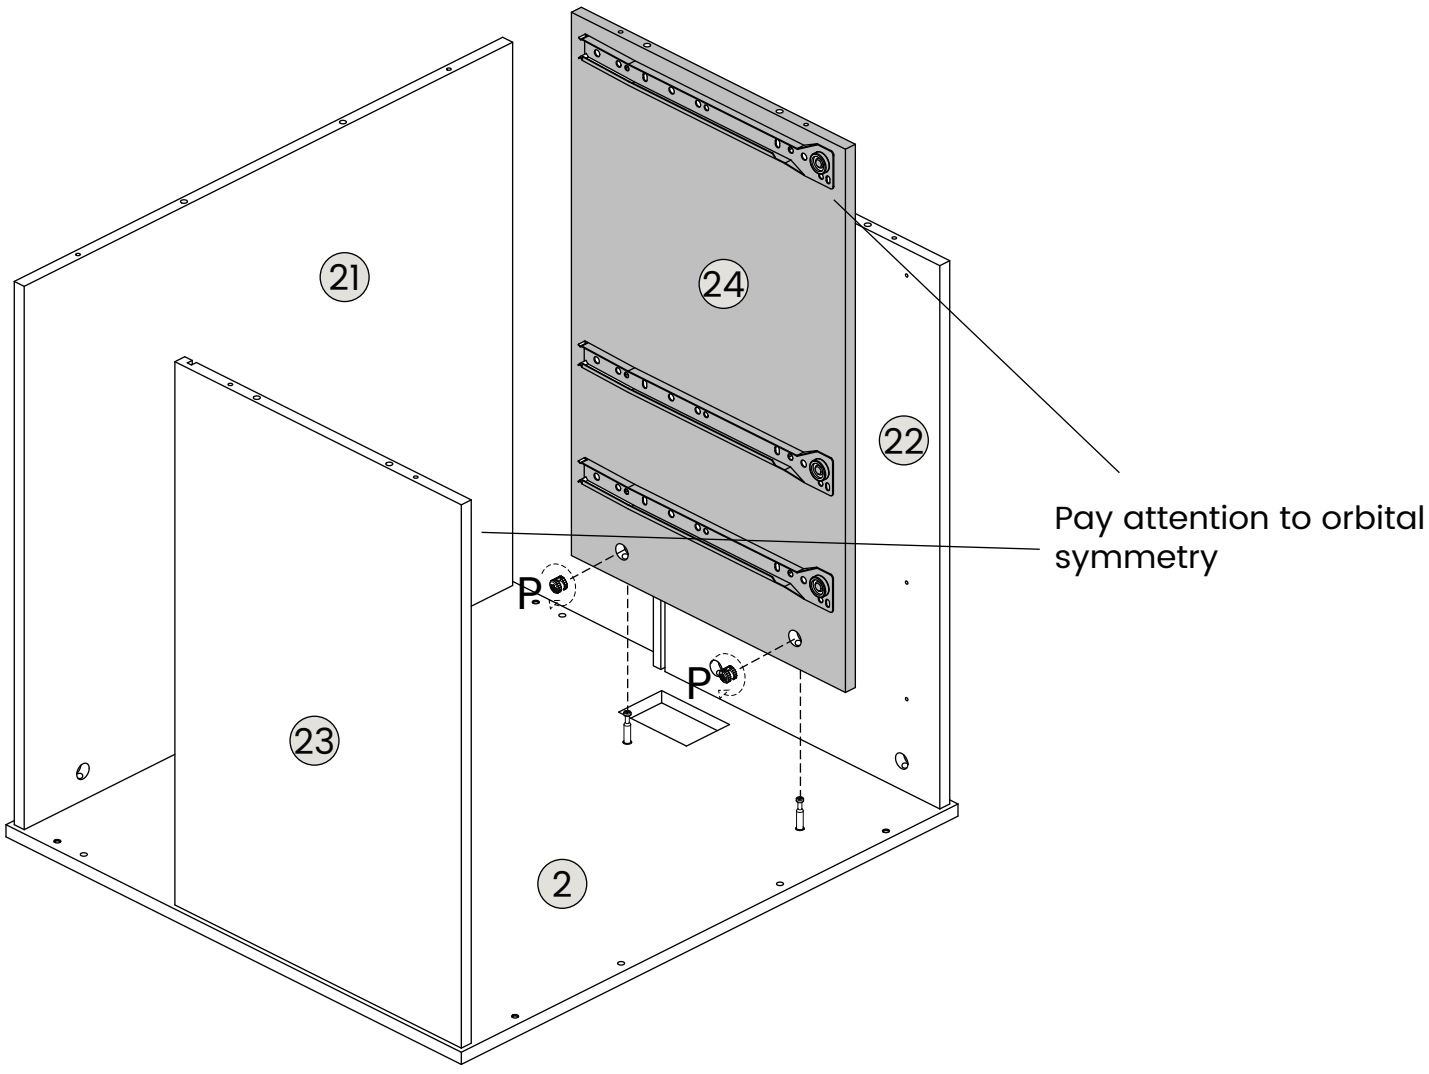


P x2



Assembly Instruction

13

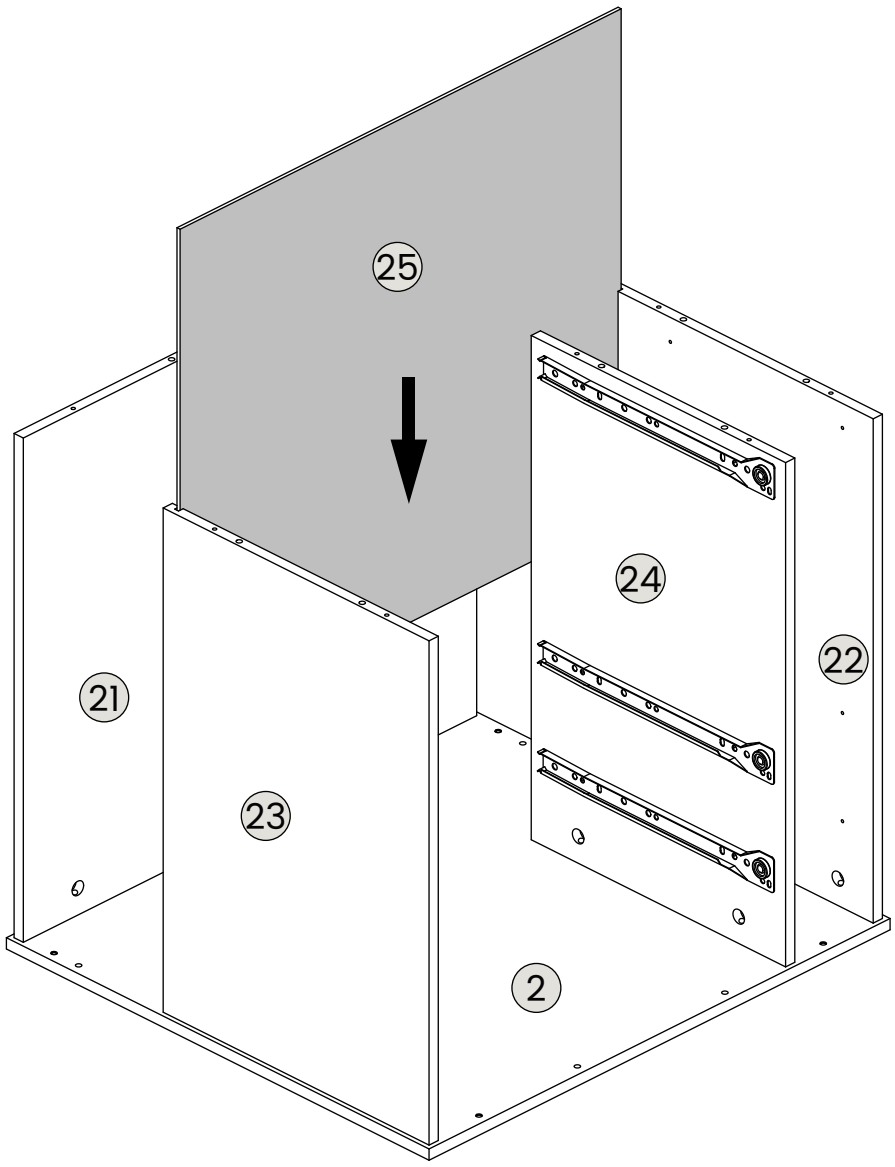


14

M x8




Ø6x30MM

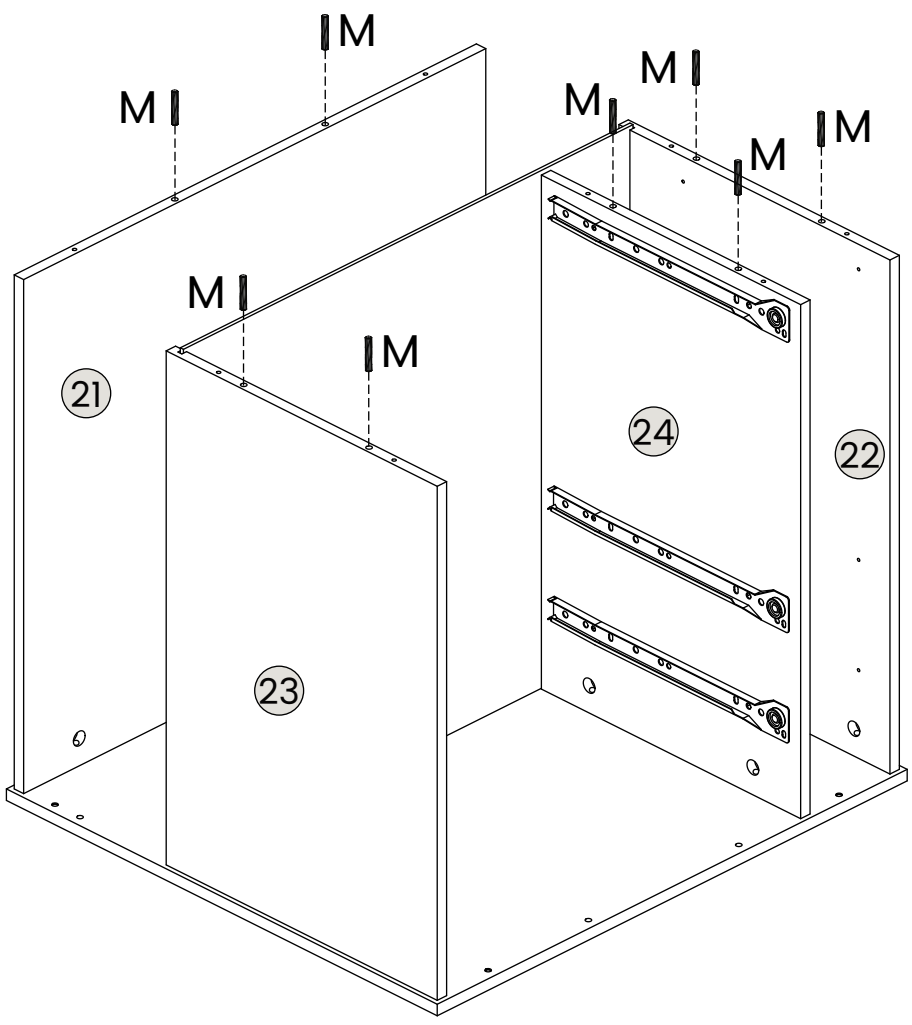

Assembly Instruction


15


E x8



ST5X40MM

Pay attention to the hole position

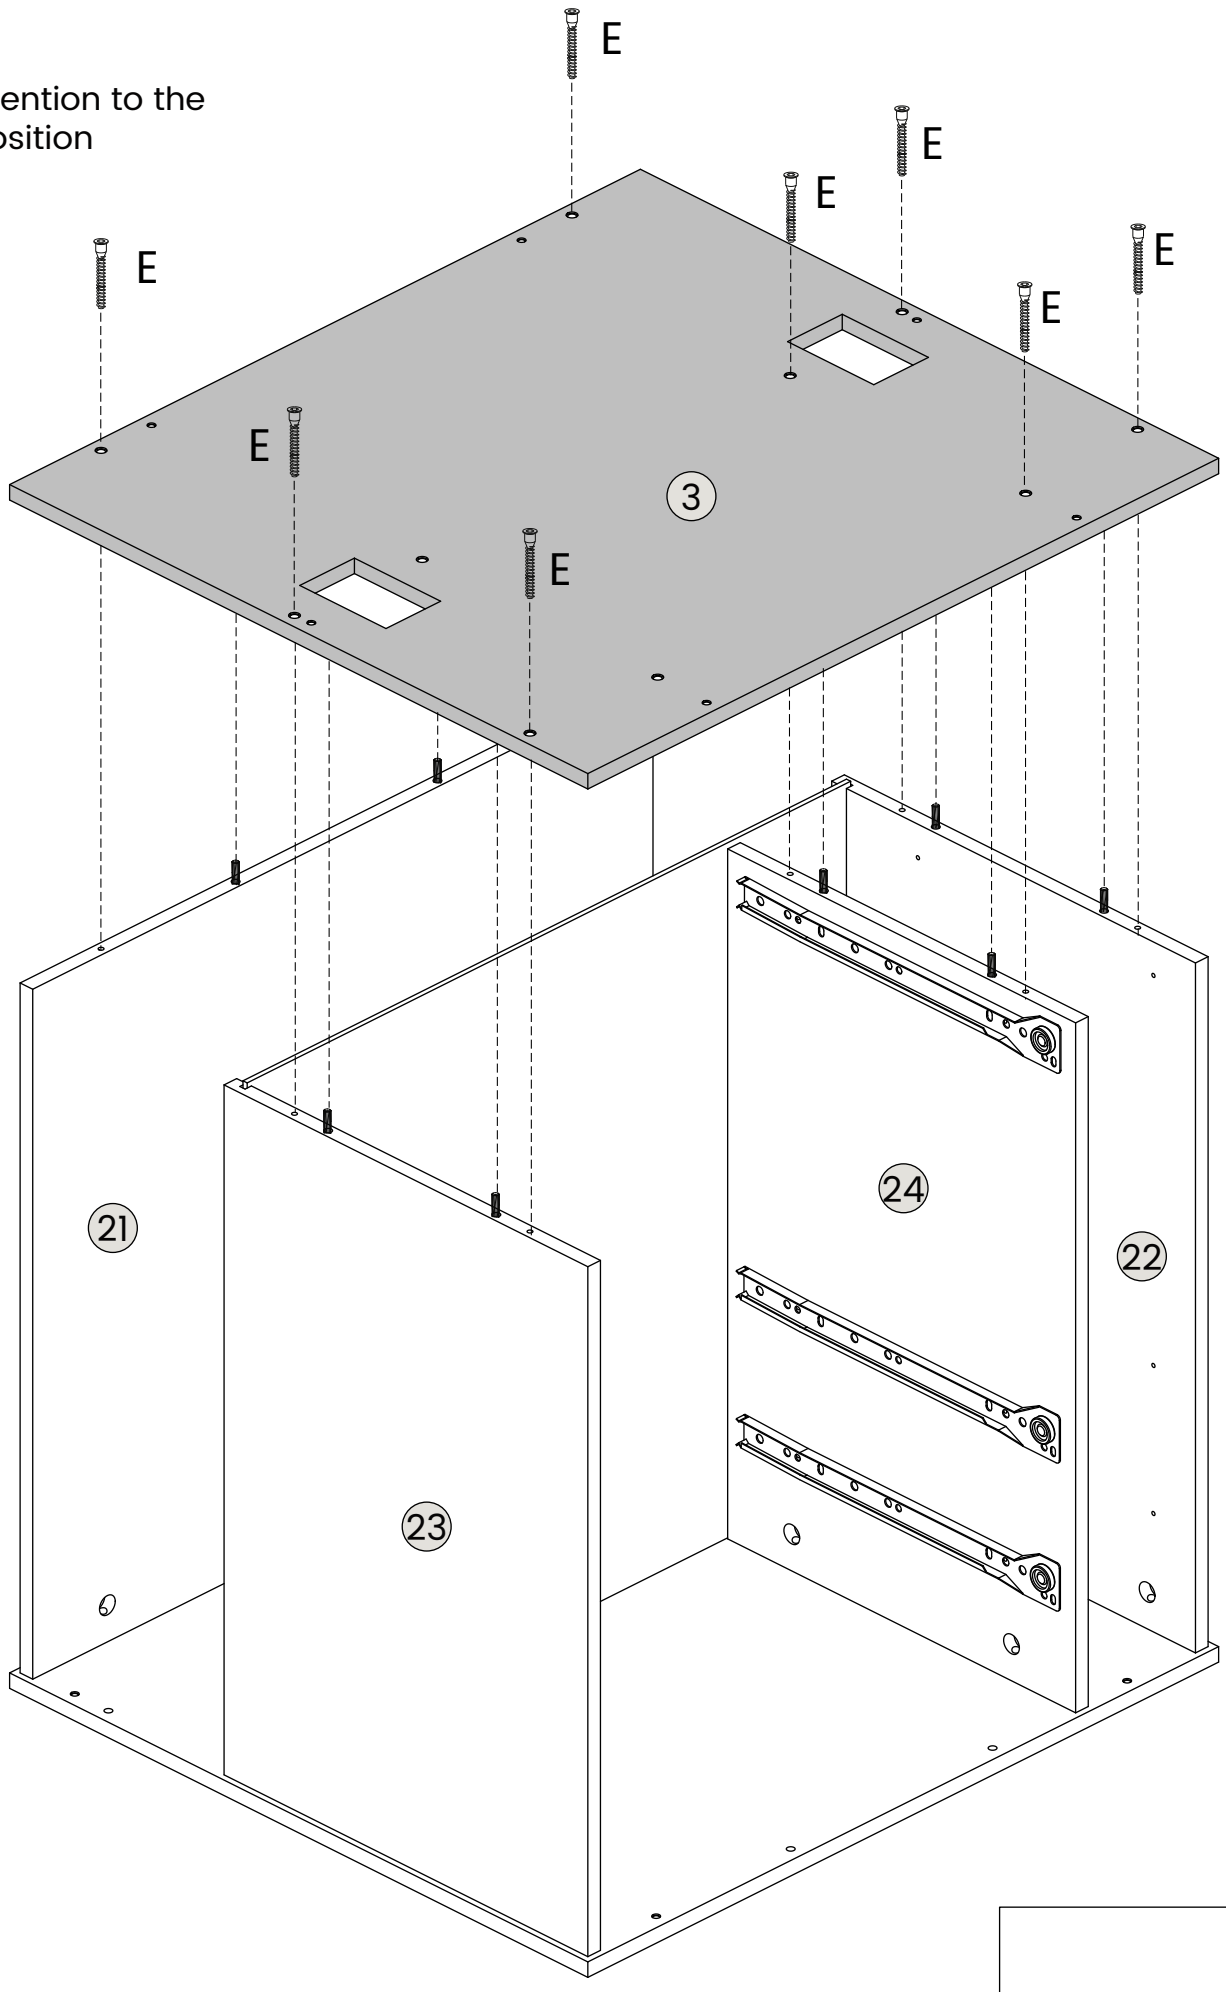


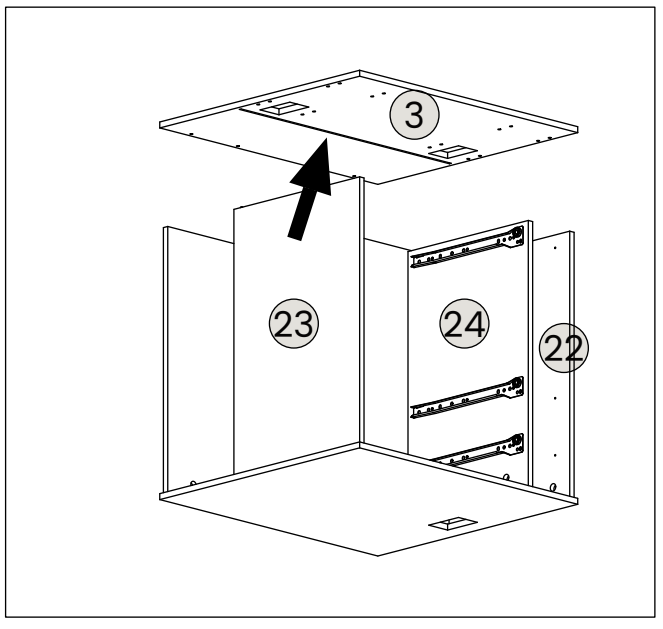


Assembly Instruction

16


Pay attention to the hole position

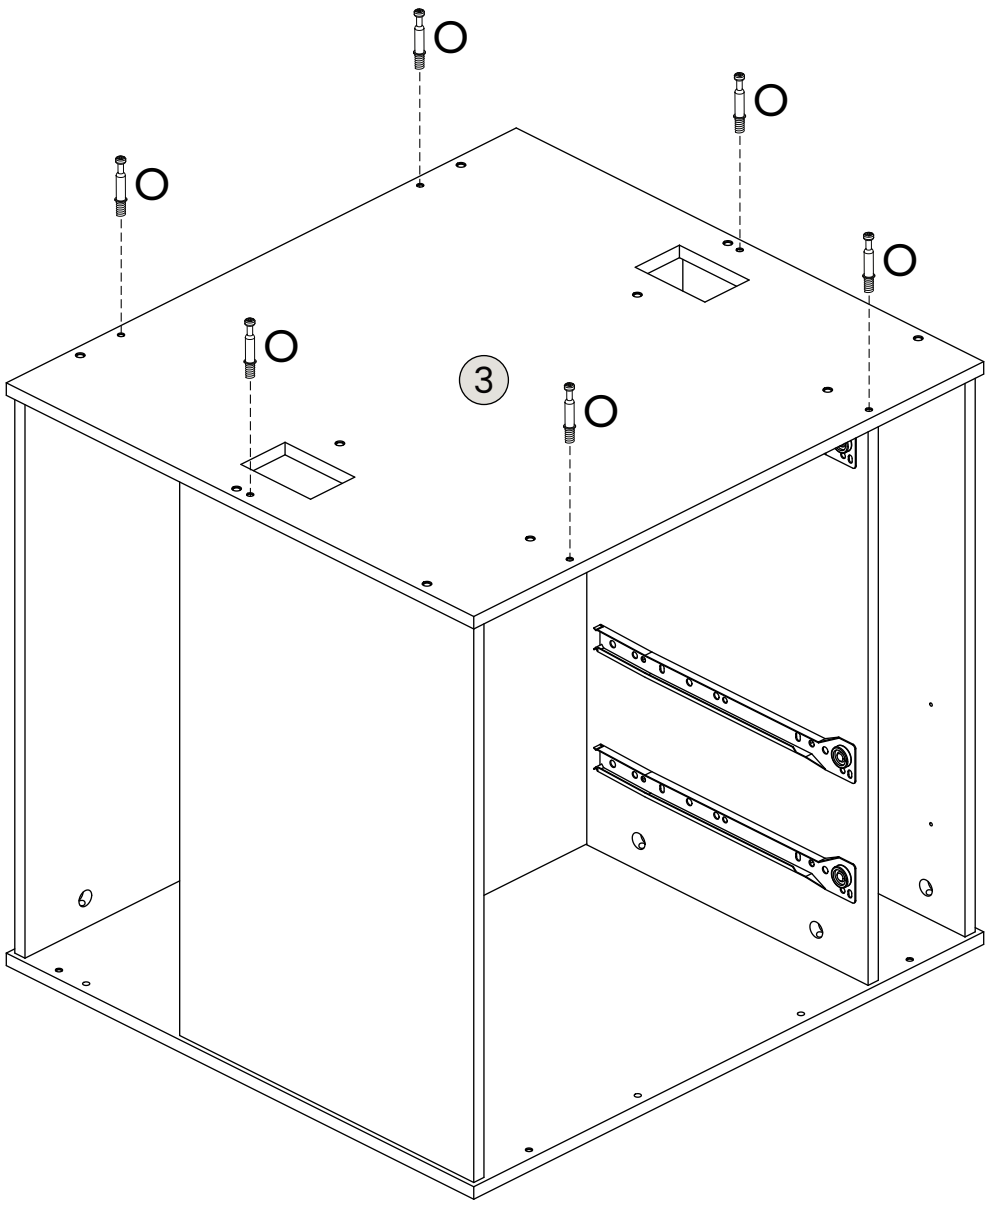


O x6



17

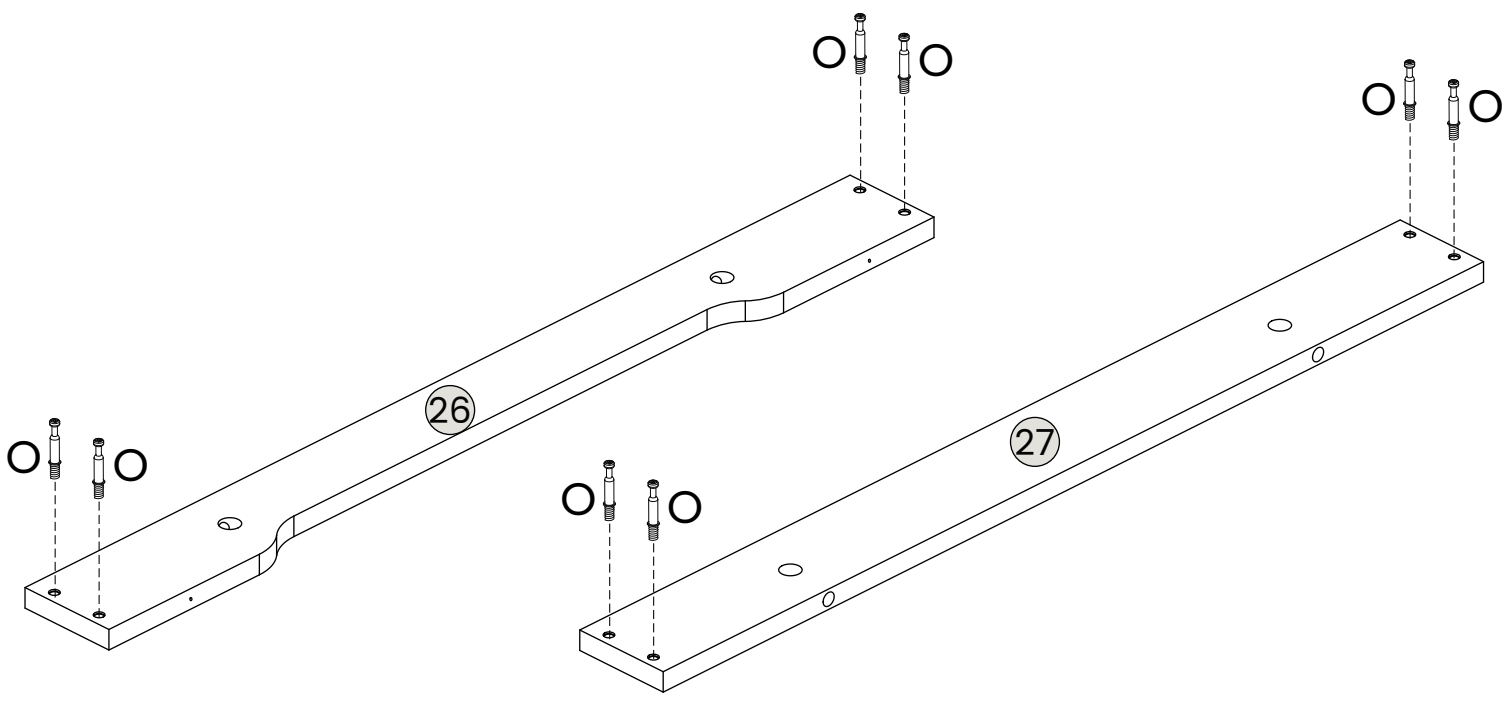

O x8




Assembly Instruction

18

P x8



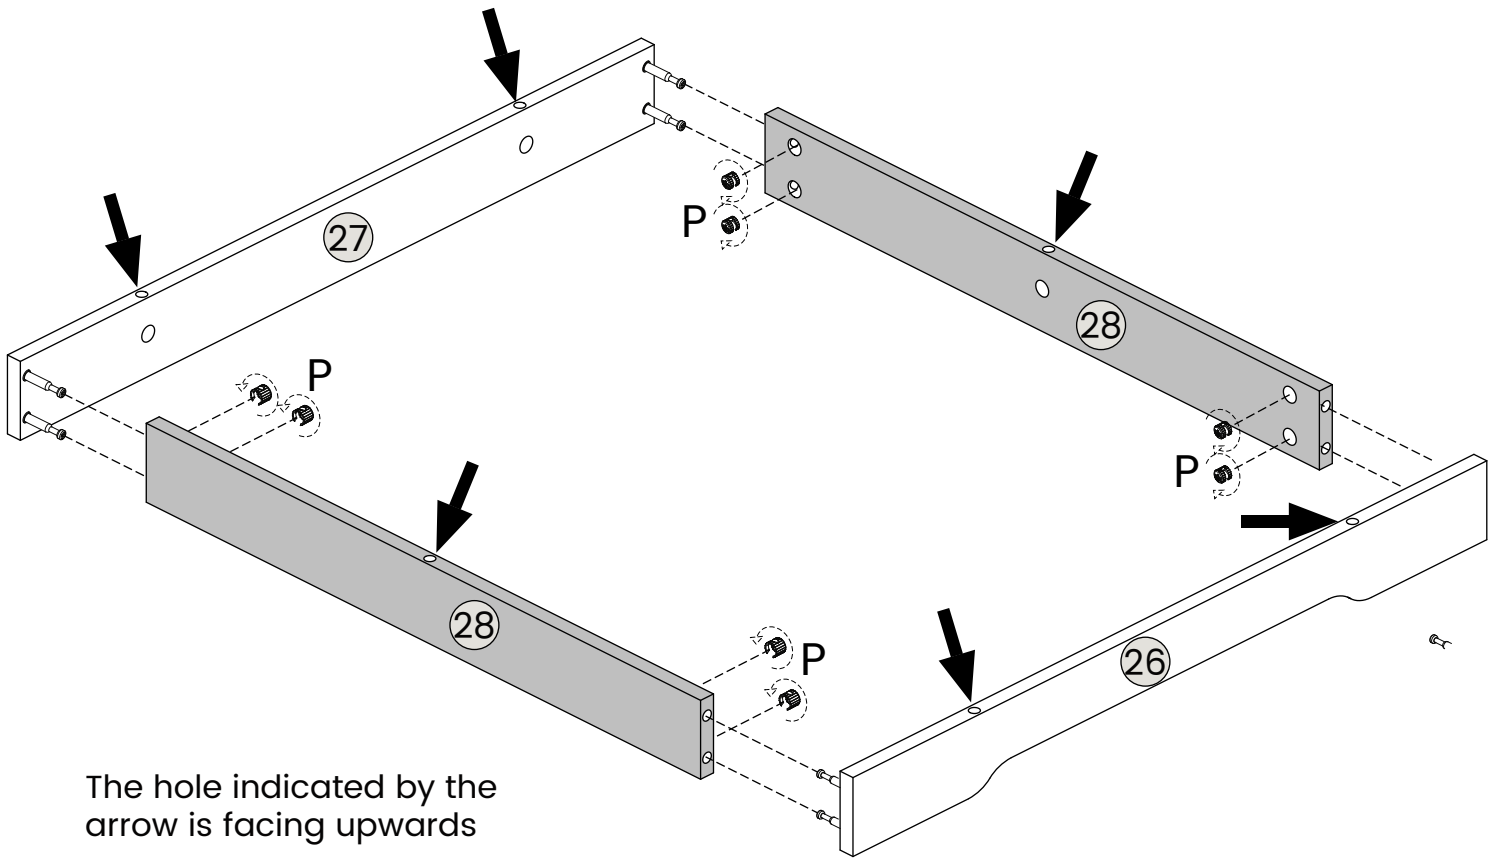


The hole indicated by the arrow is facing upwards

19

P x6




Pay attention to the position of the design board

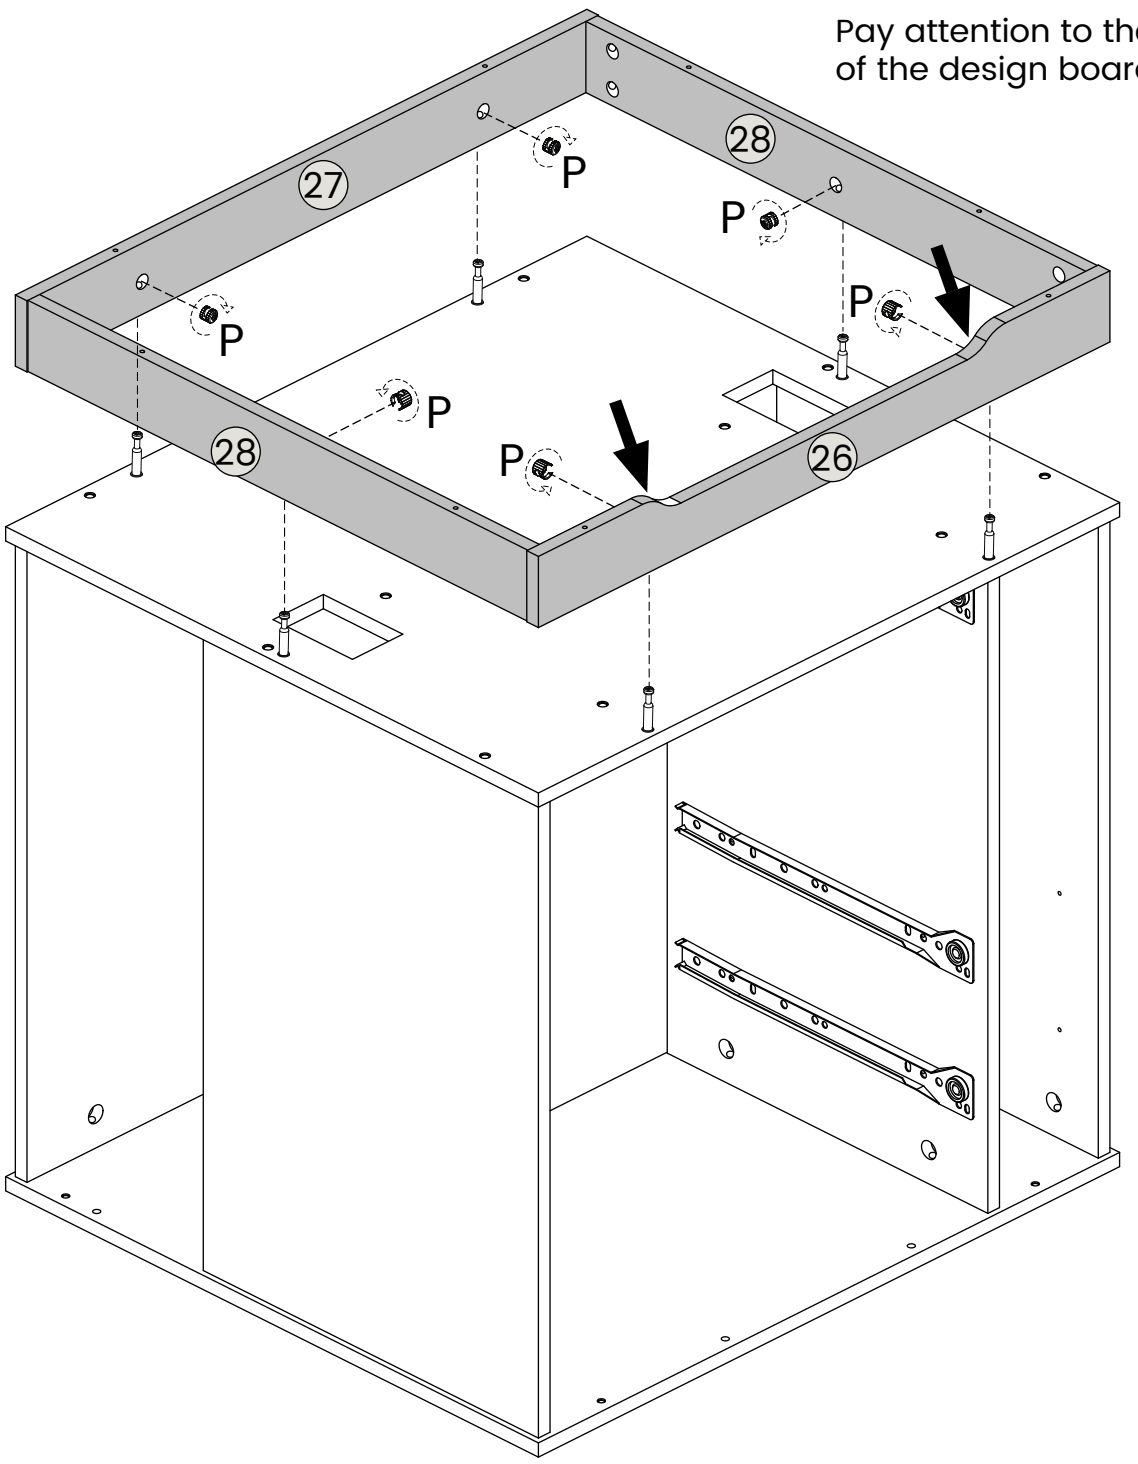



Assembly Instruction

20

Vx8

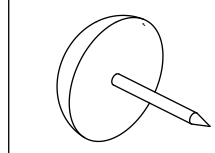

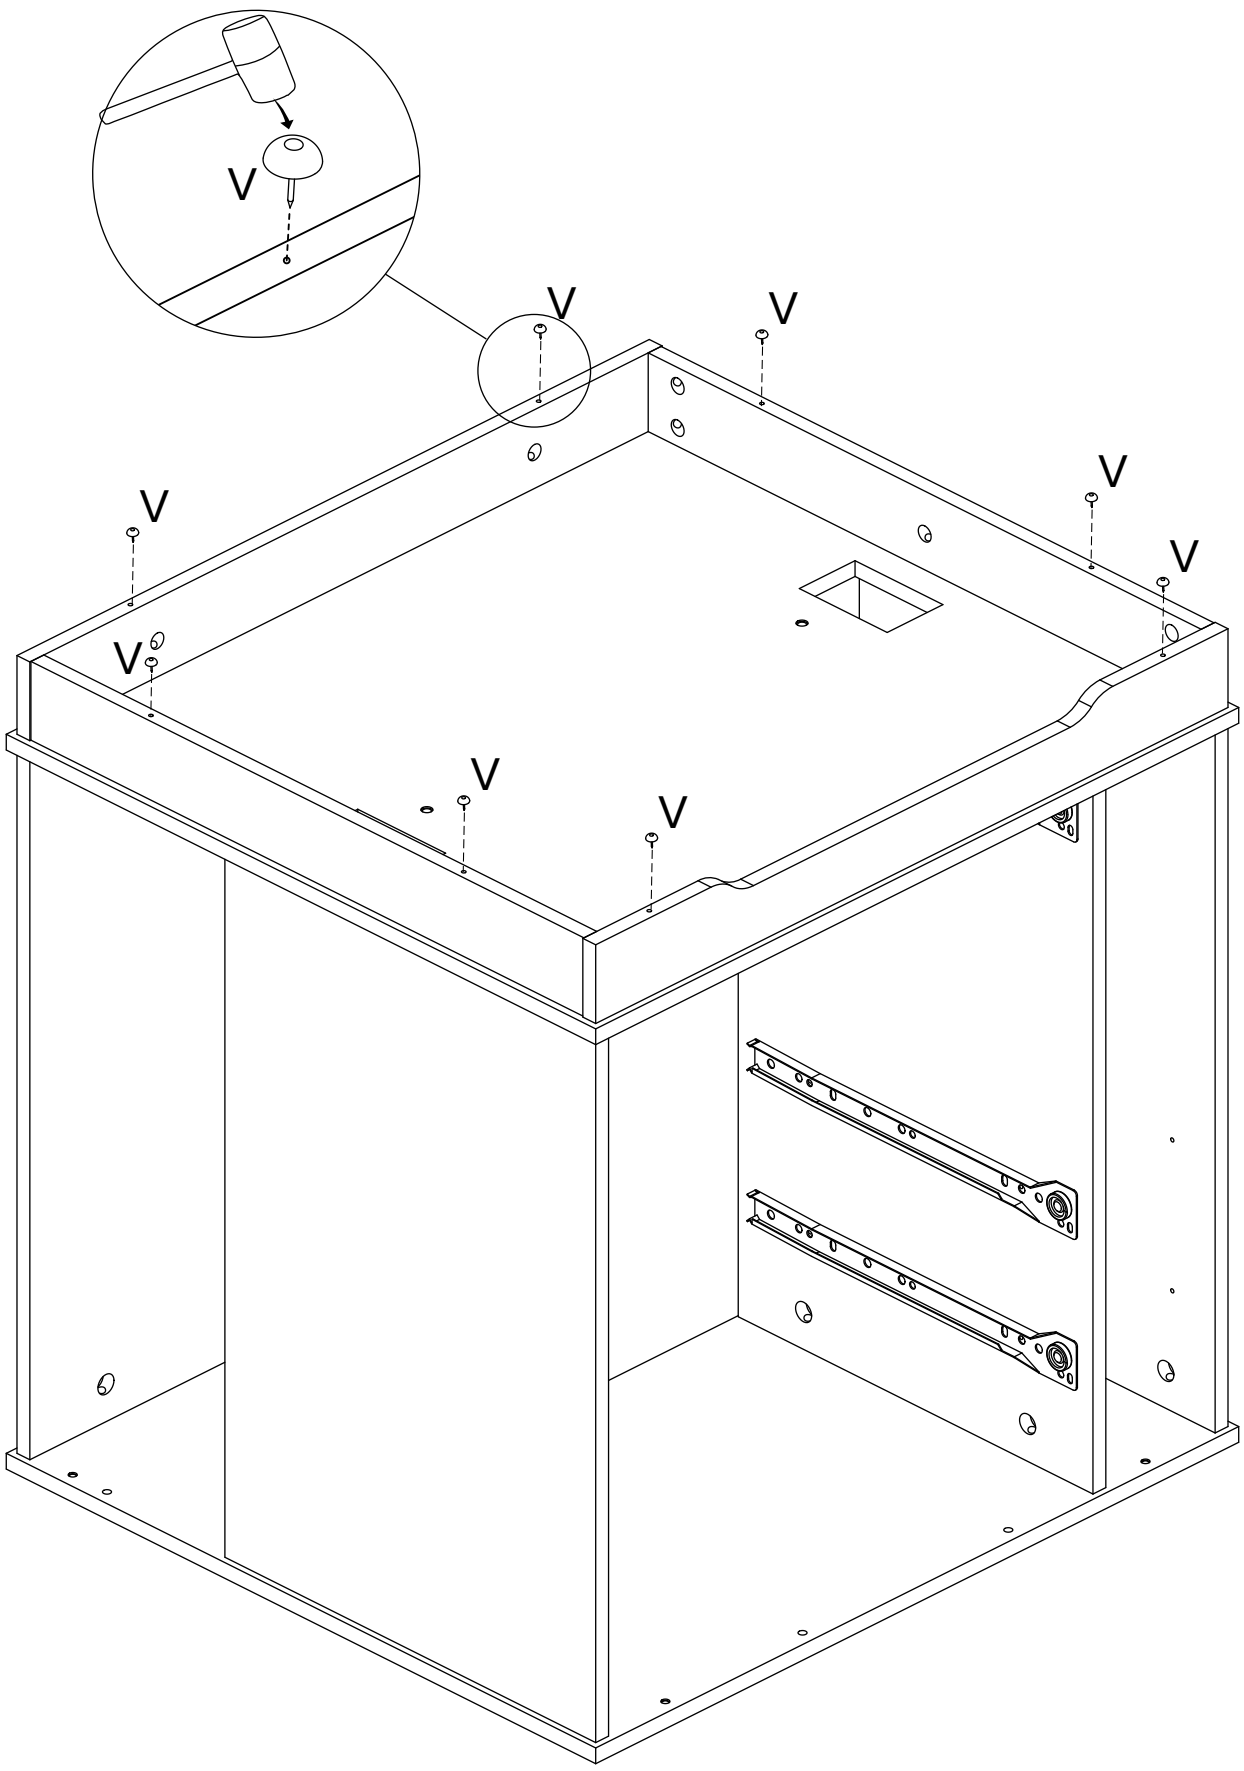


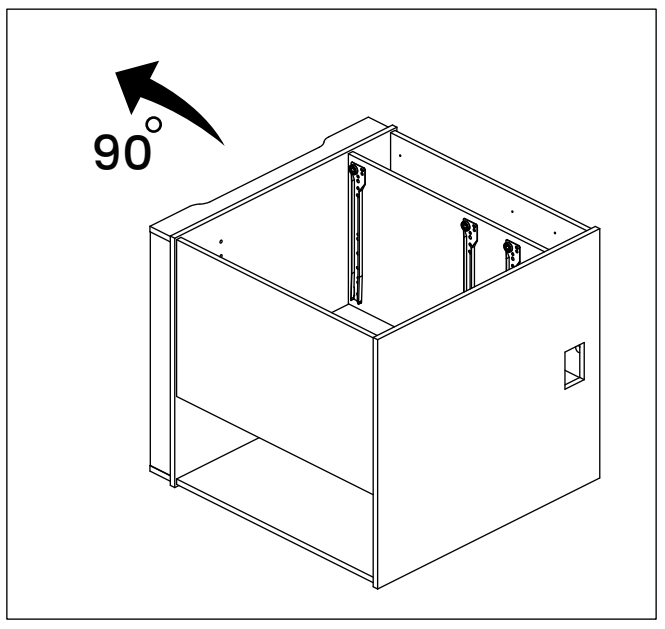

Assembly Instruction


21

E x2




ST5X40MM

Pay attention to the direction of the hole indicated by the arrow

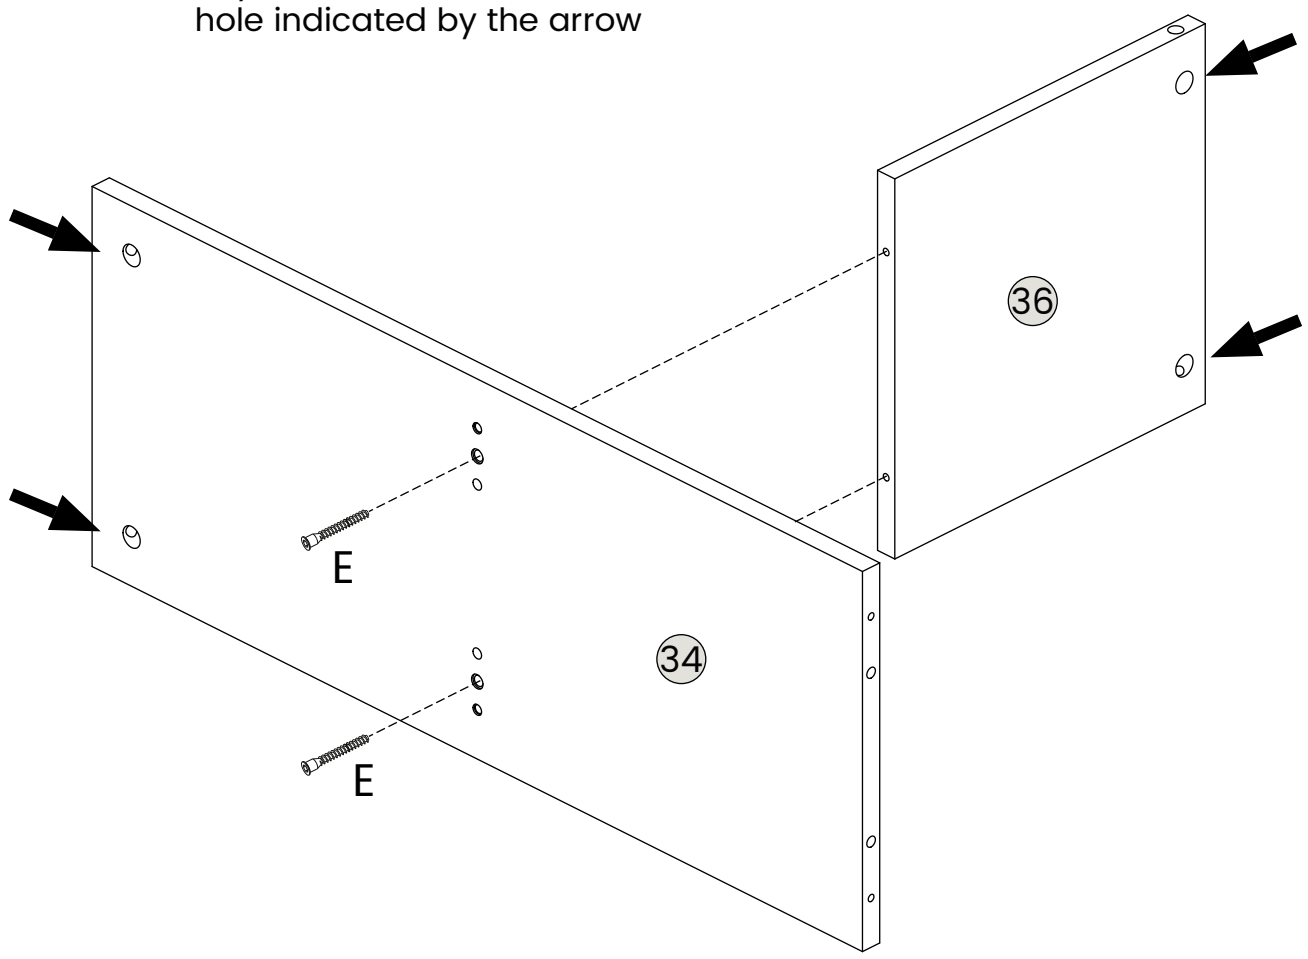

22


O x4




Assembly Instruction

23

Pay attention to the direction of the hole indicated by the arrow

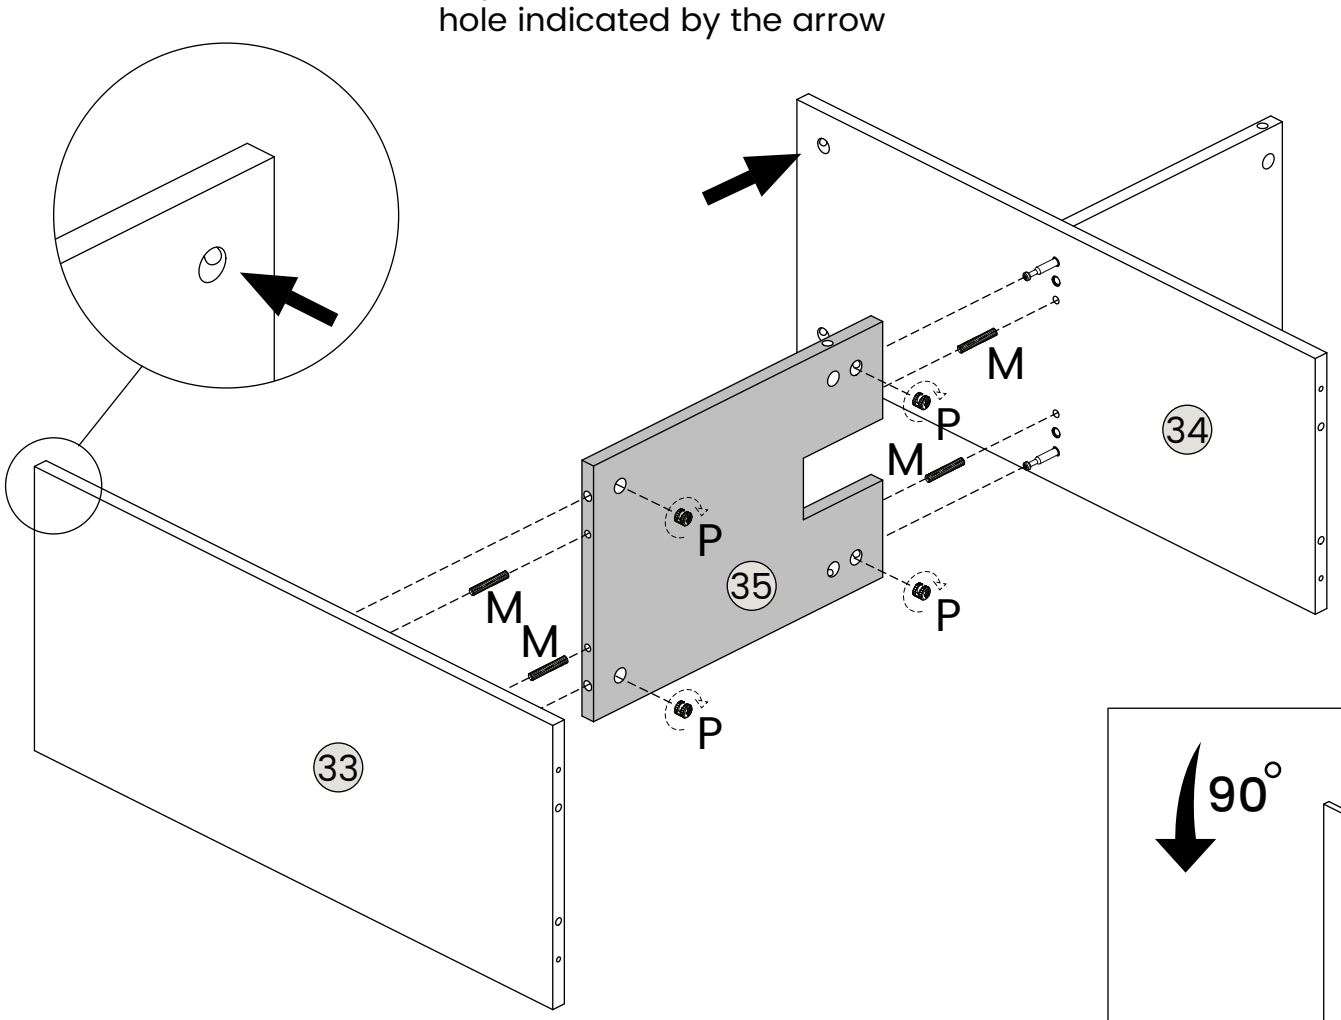


P x4




M x4




Ø6x30MM

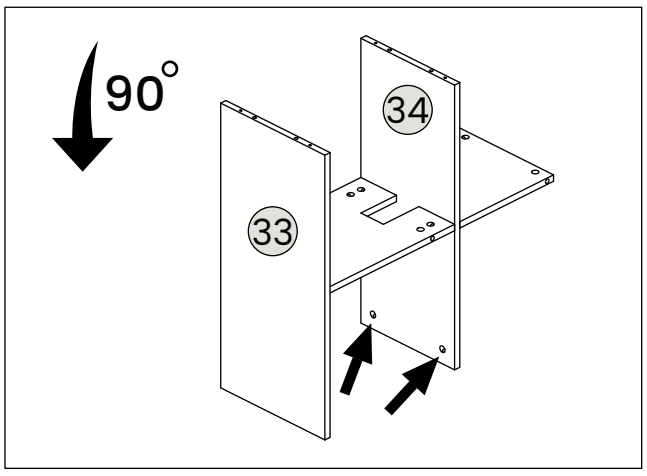

24

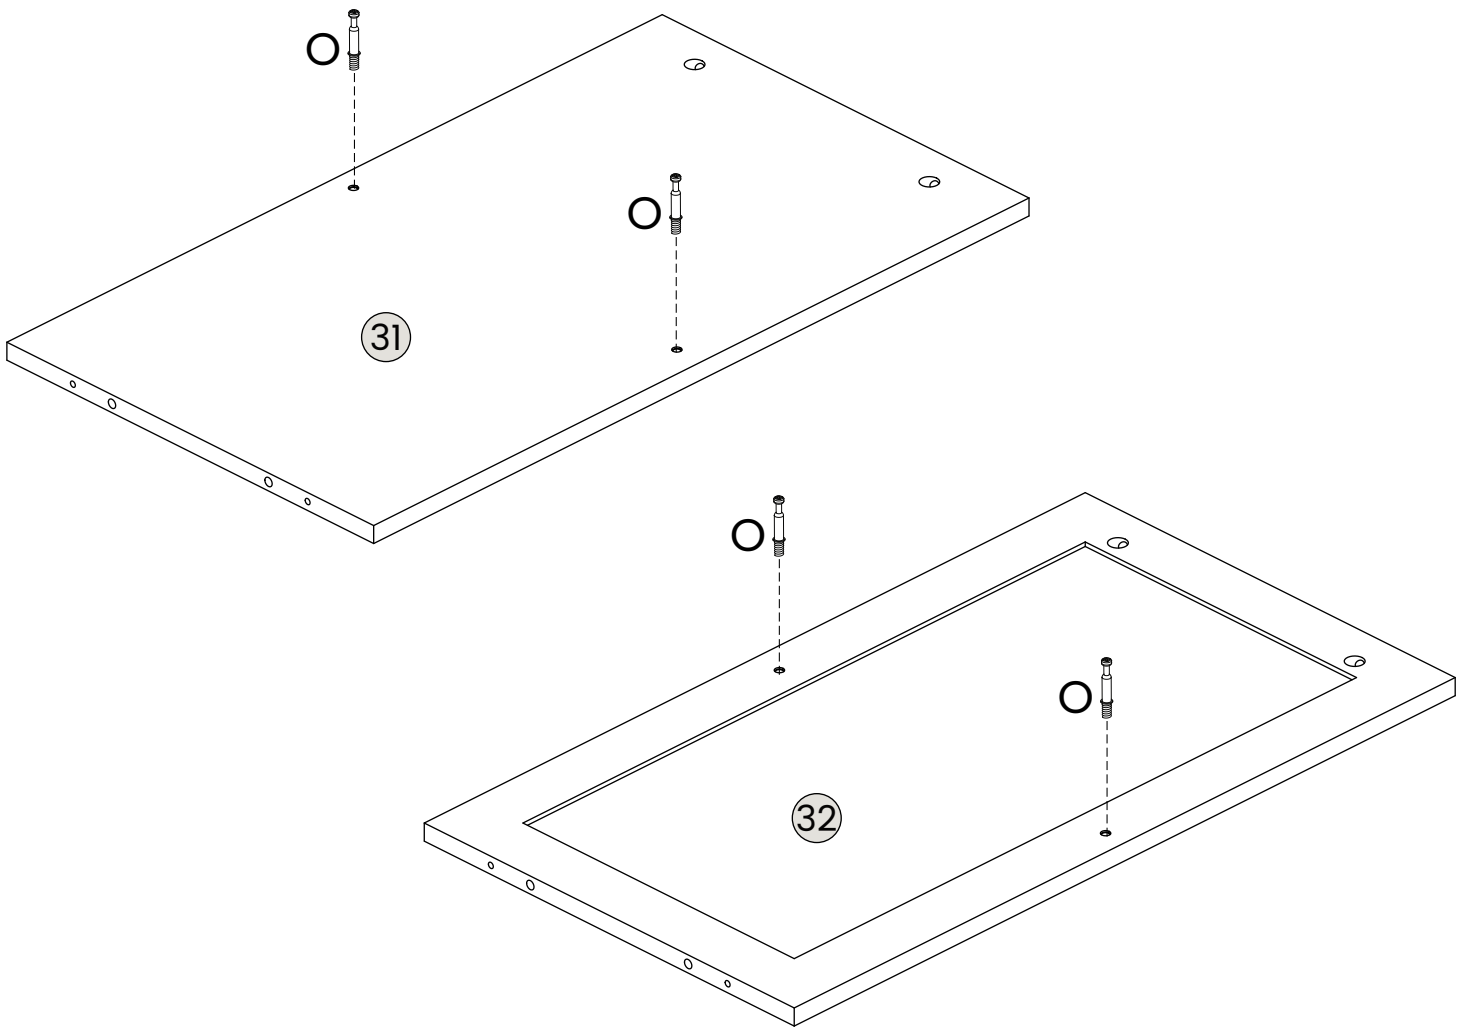


O x4



Assembly Instruction

25

P x4

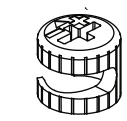


26

M x8




Ø6x30MM

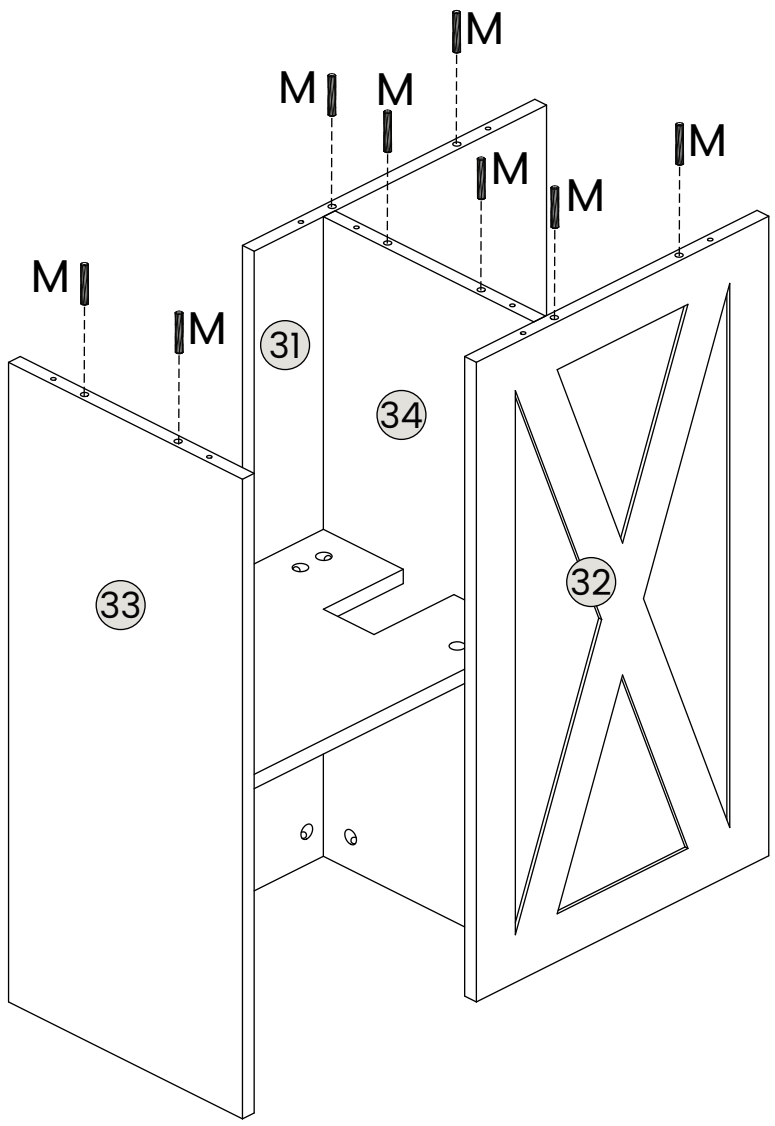


Assembly Instruction

27

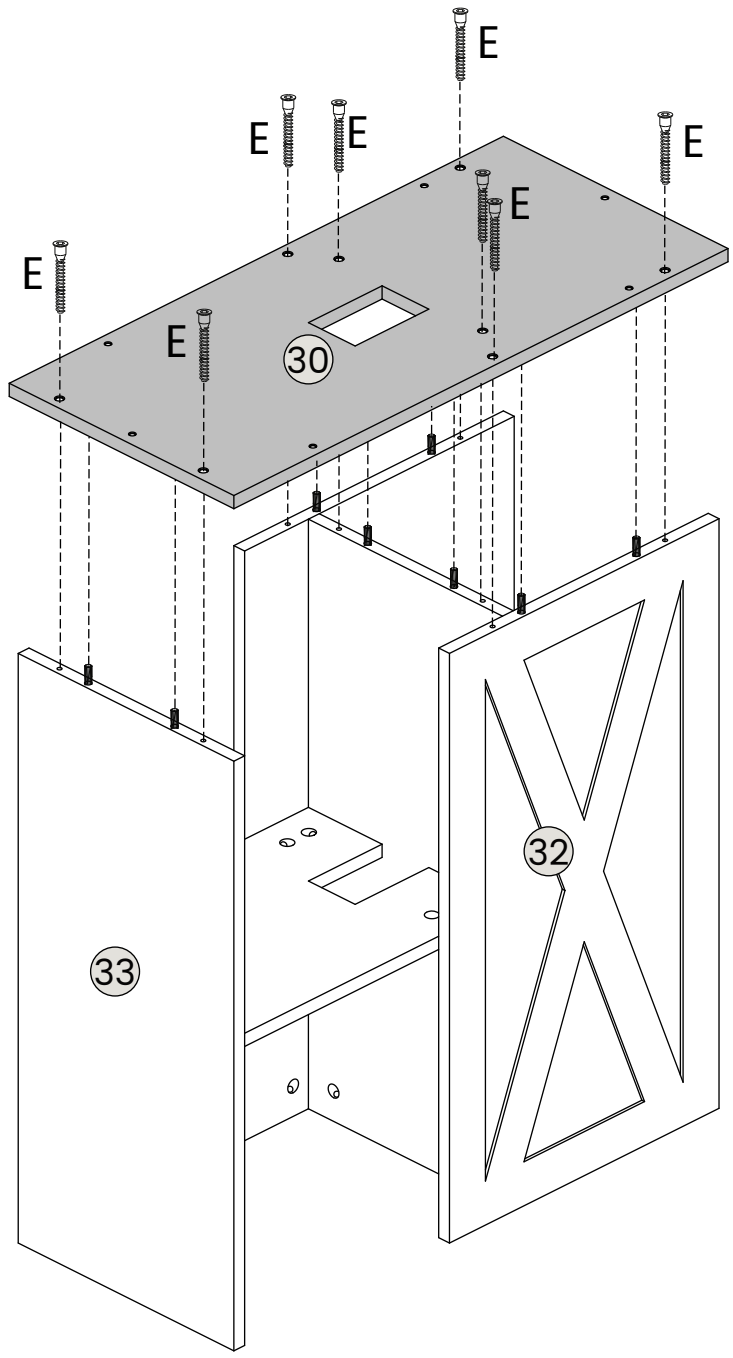


E x8




ST5X40MM

28

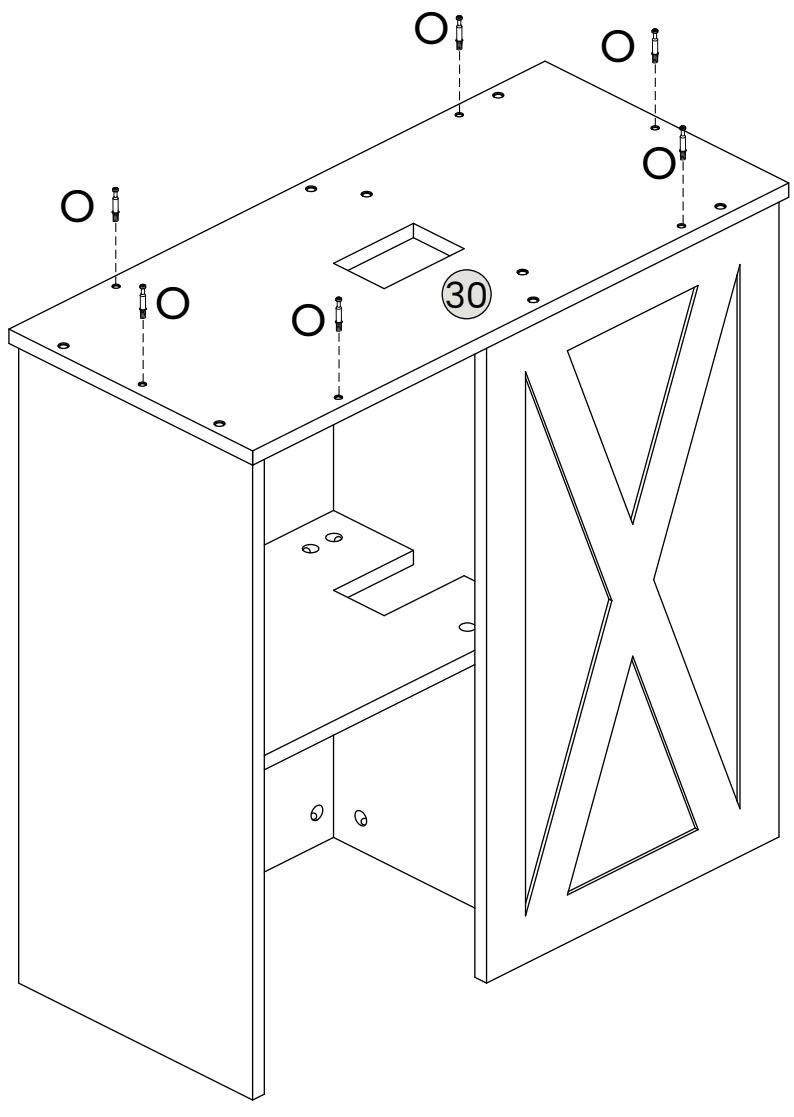


O x6




Assembly Instruction

29


O x8

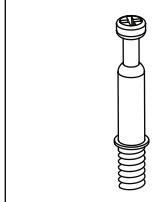


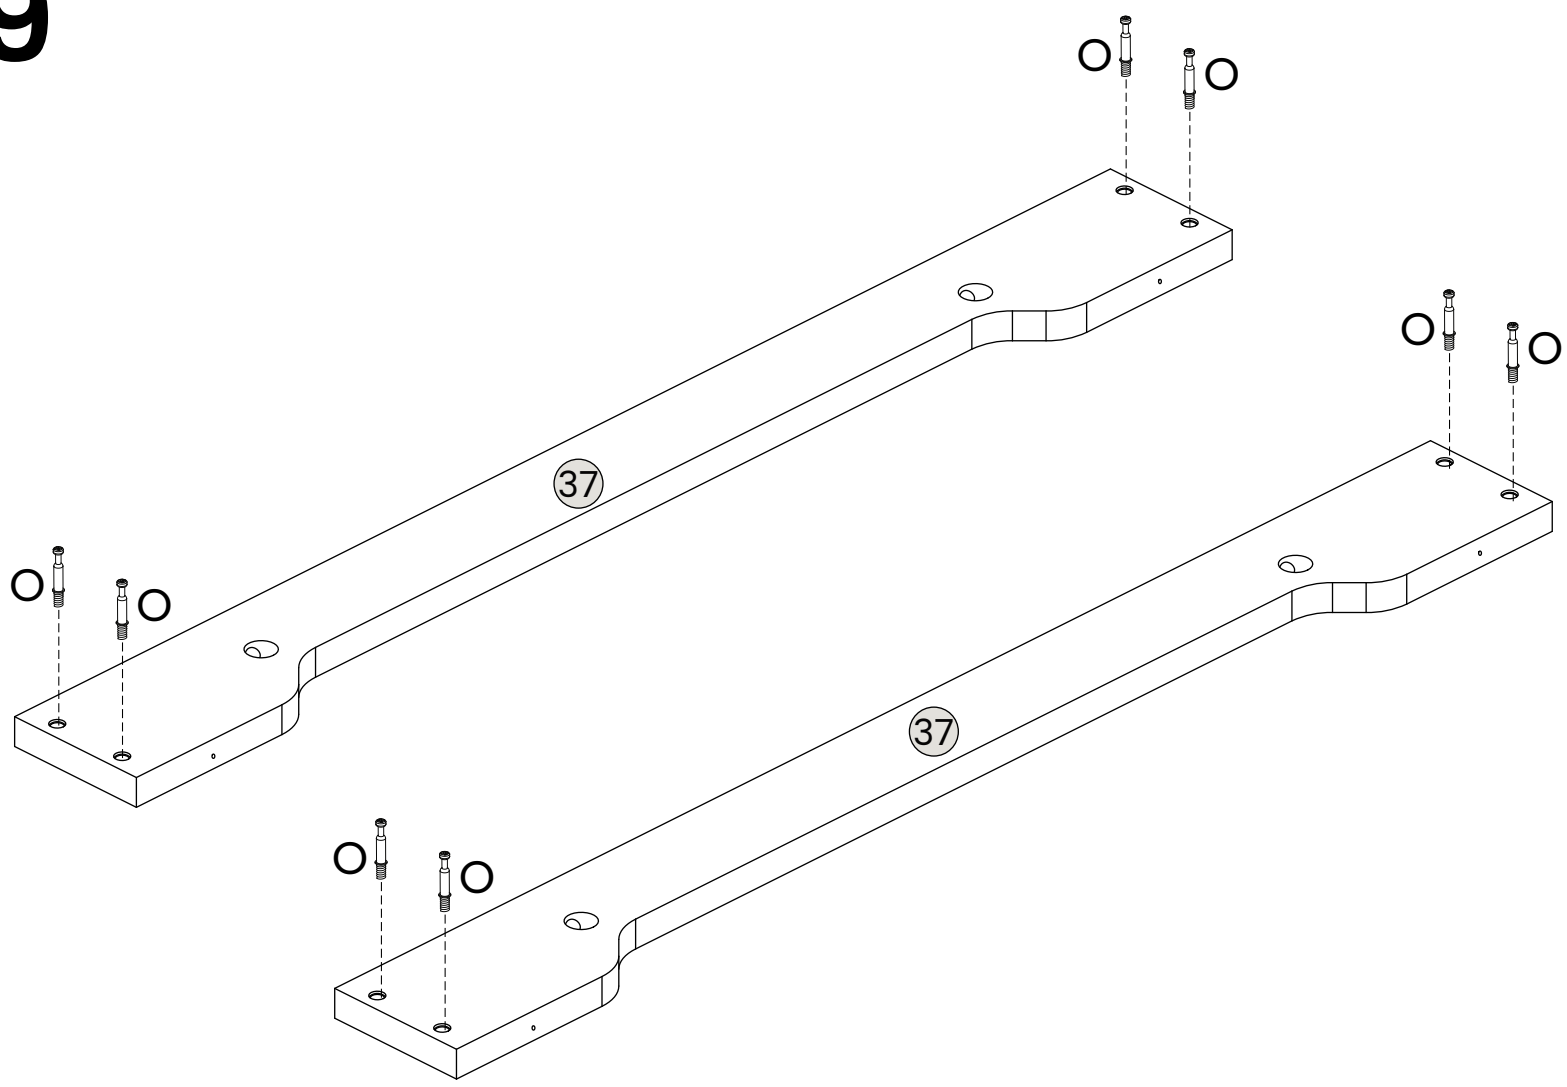

30

P x8




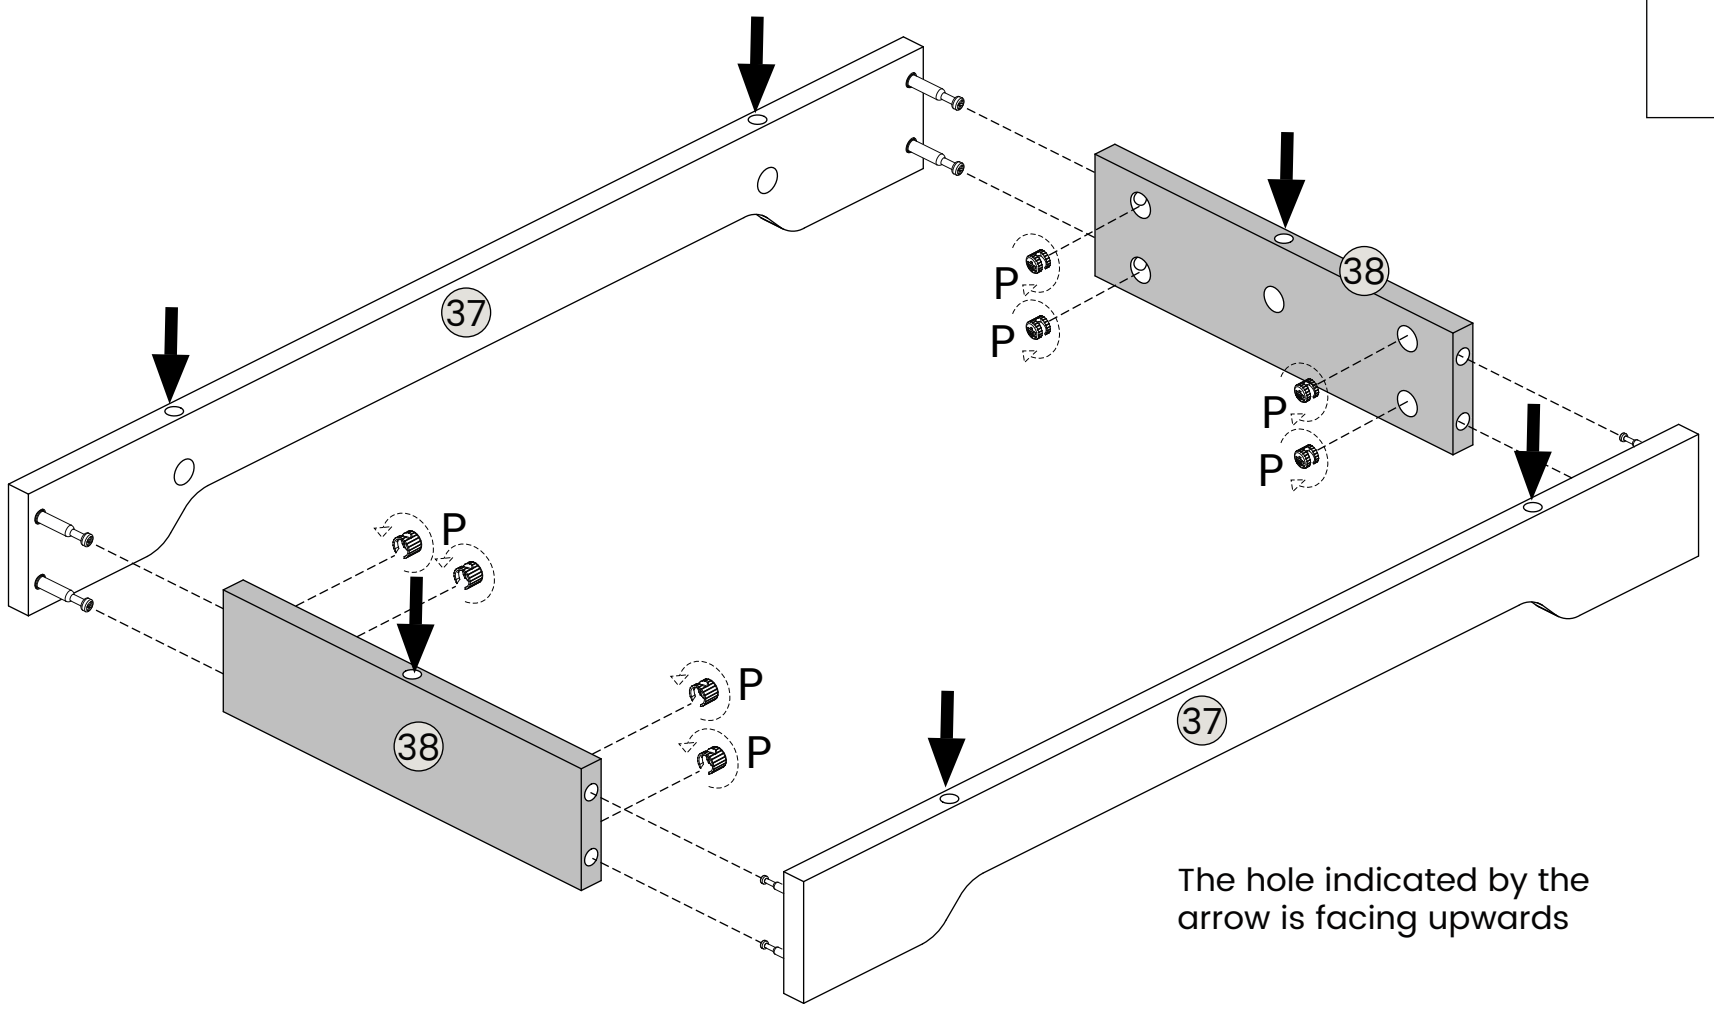

The hole indicated by the arrow is facing upwards

Assembly Instruction


31

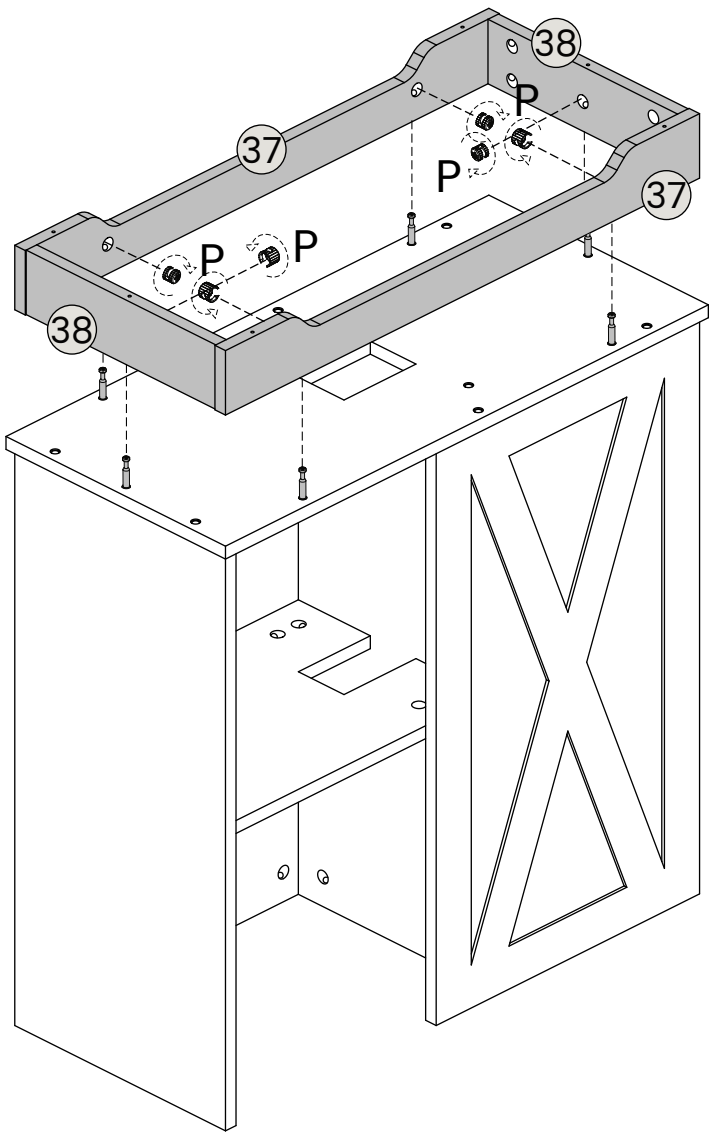


P x6




32

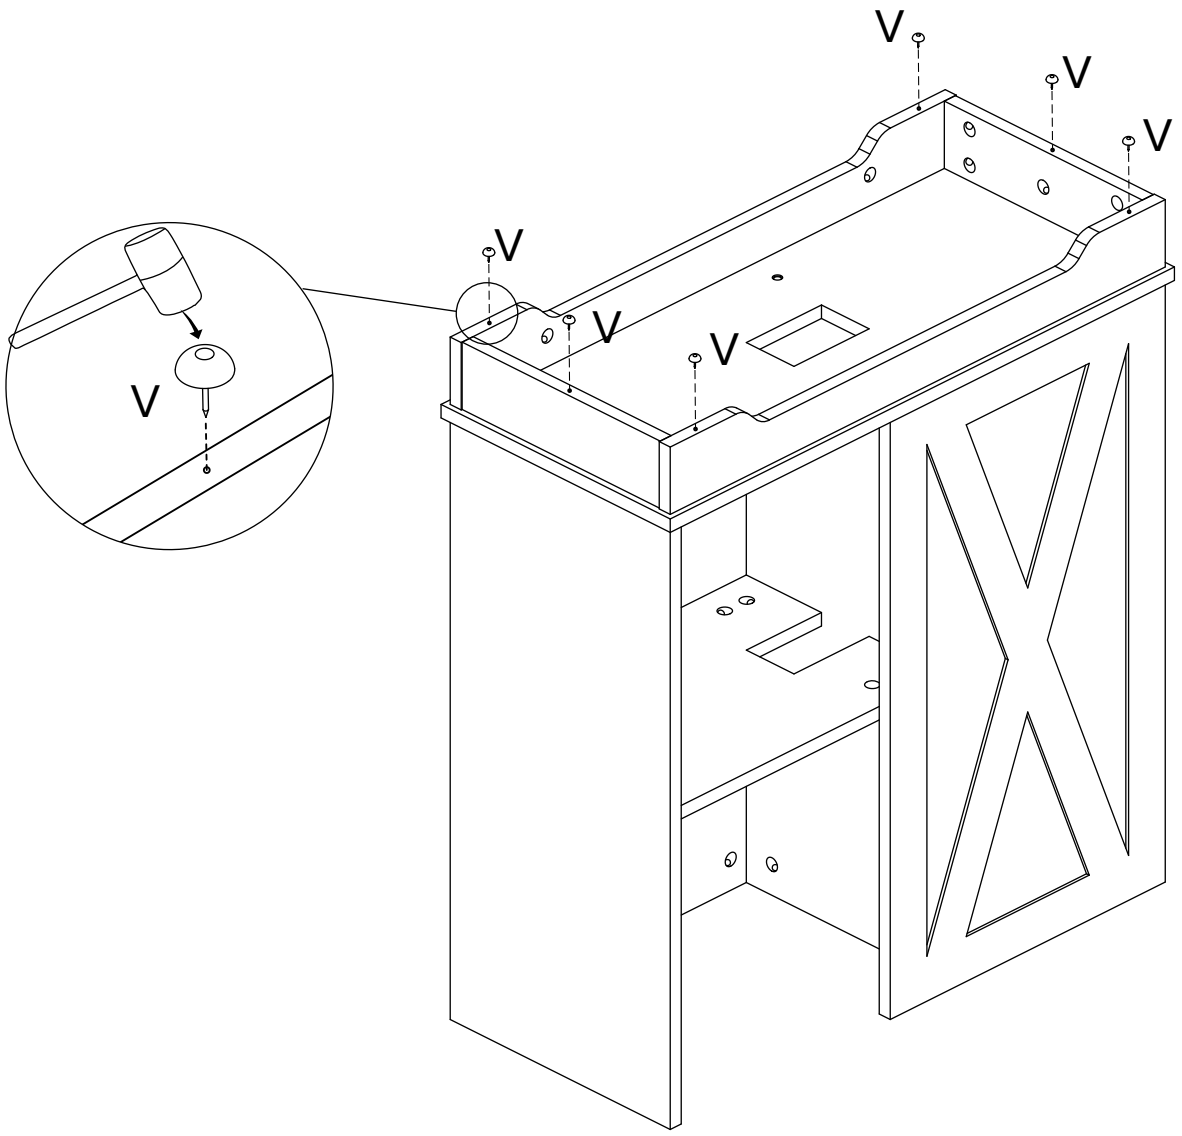


V x6

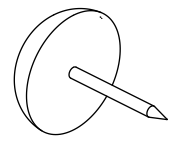

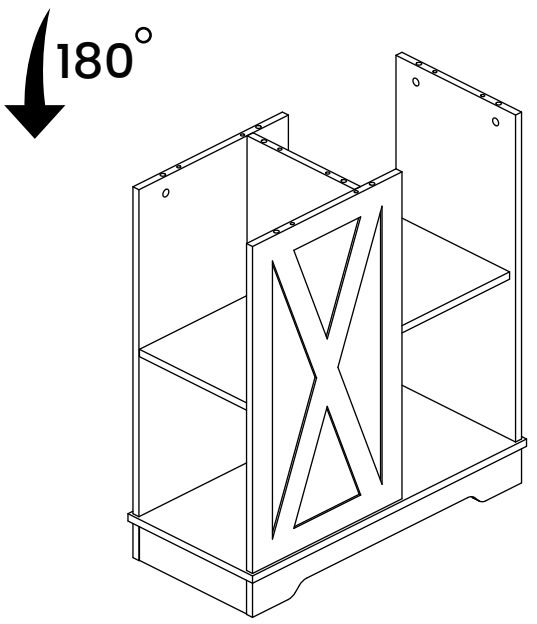

Assembly Instruction

33

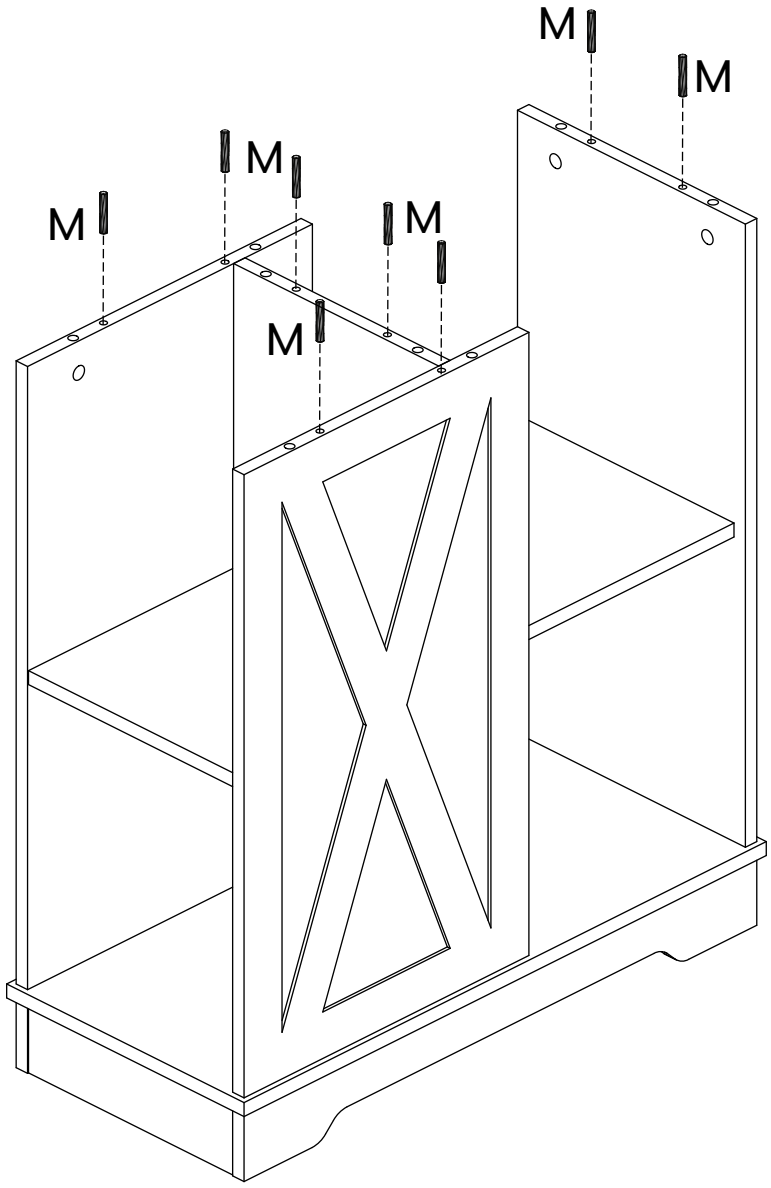


M x8



Ø6x30MM

34

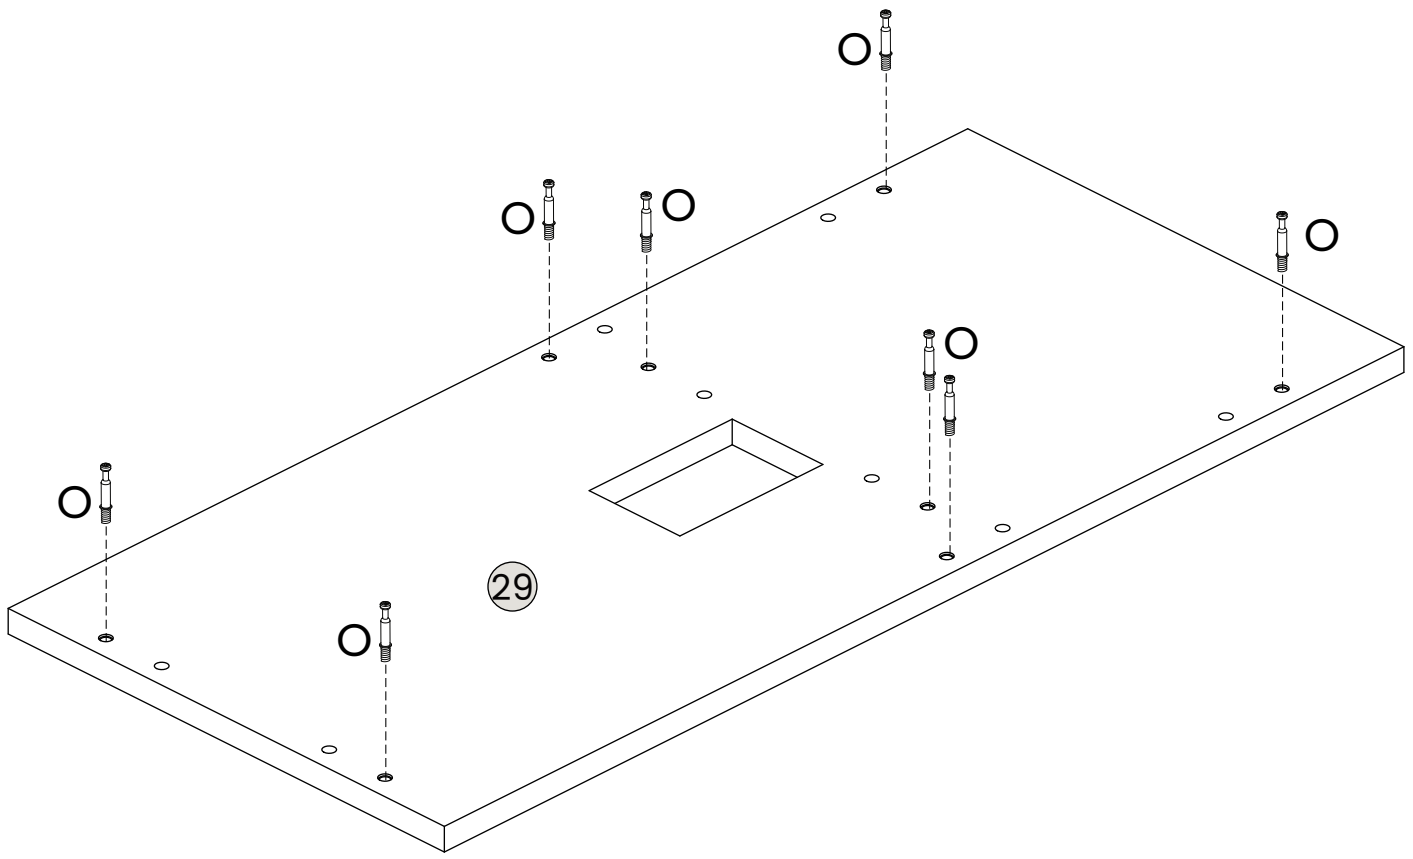

O x8




Assembly Instruction


P x8



35

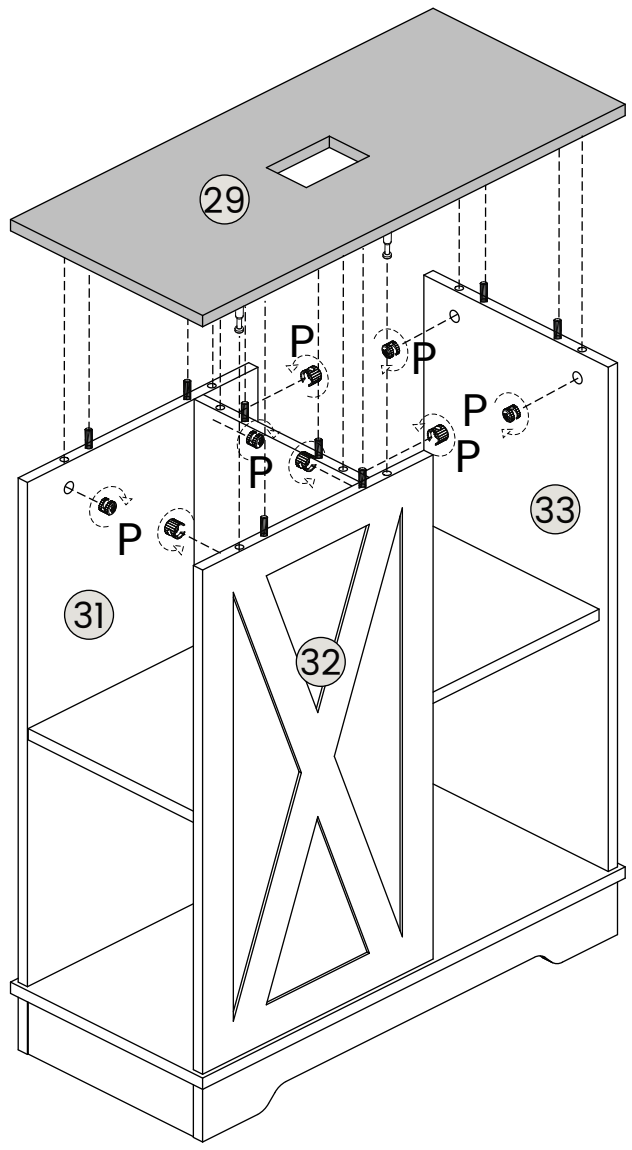

36

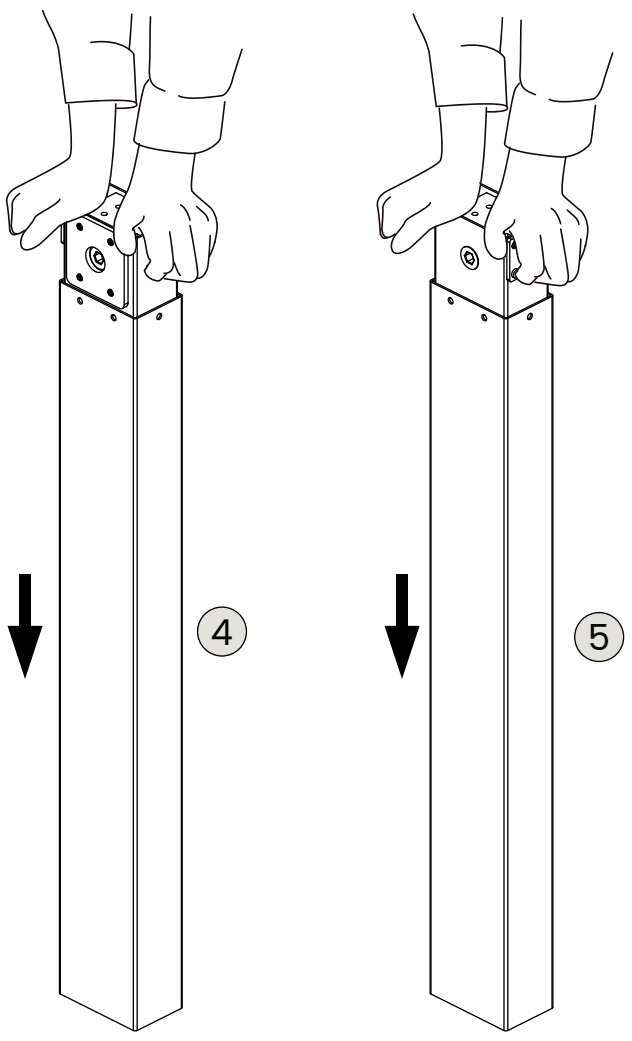


check whether the heights ofthe two table legs are the same.If there is a significant error,press down on them to ensurethat the heights of the two legsare consistent.


Assembly Instruction

37

Cx4

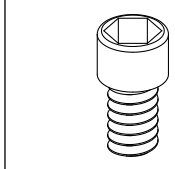


M6X10MM

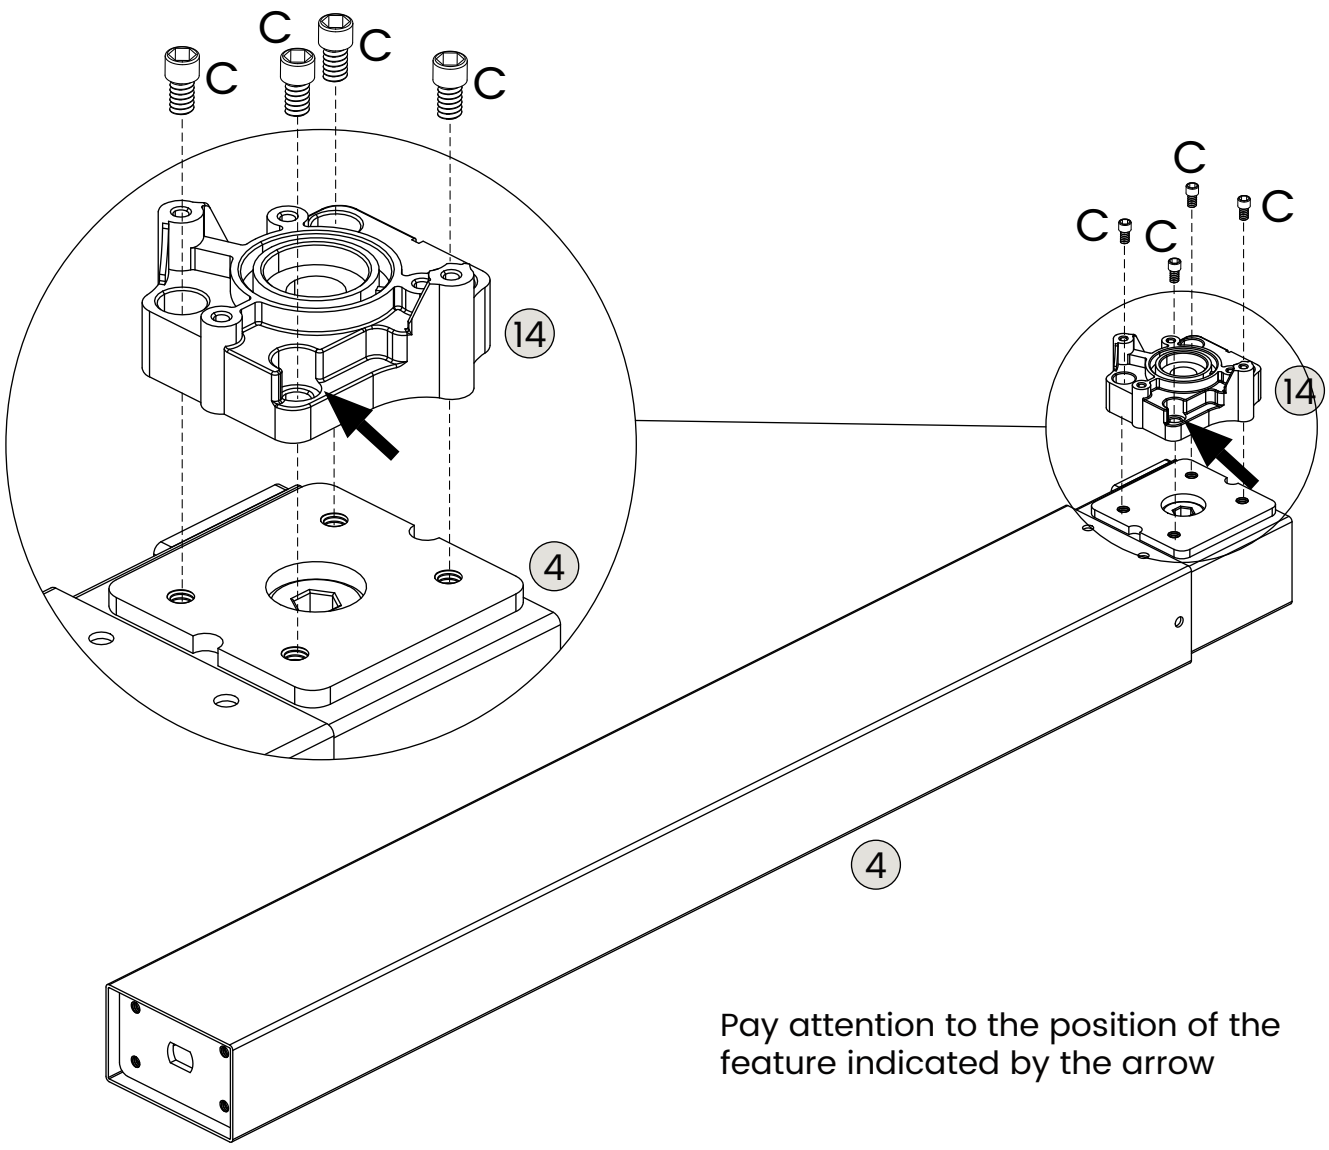



Pay attention to the position of the feature indicated by the arrow


38

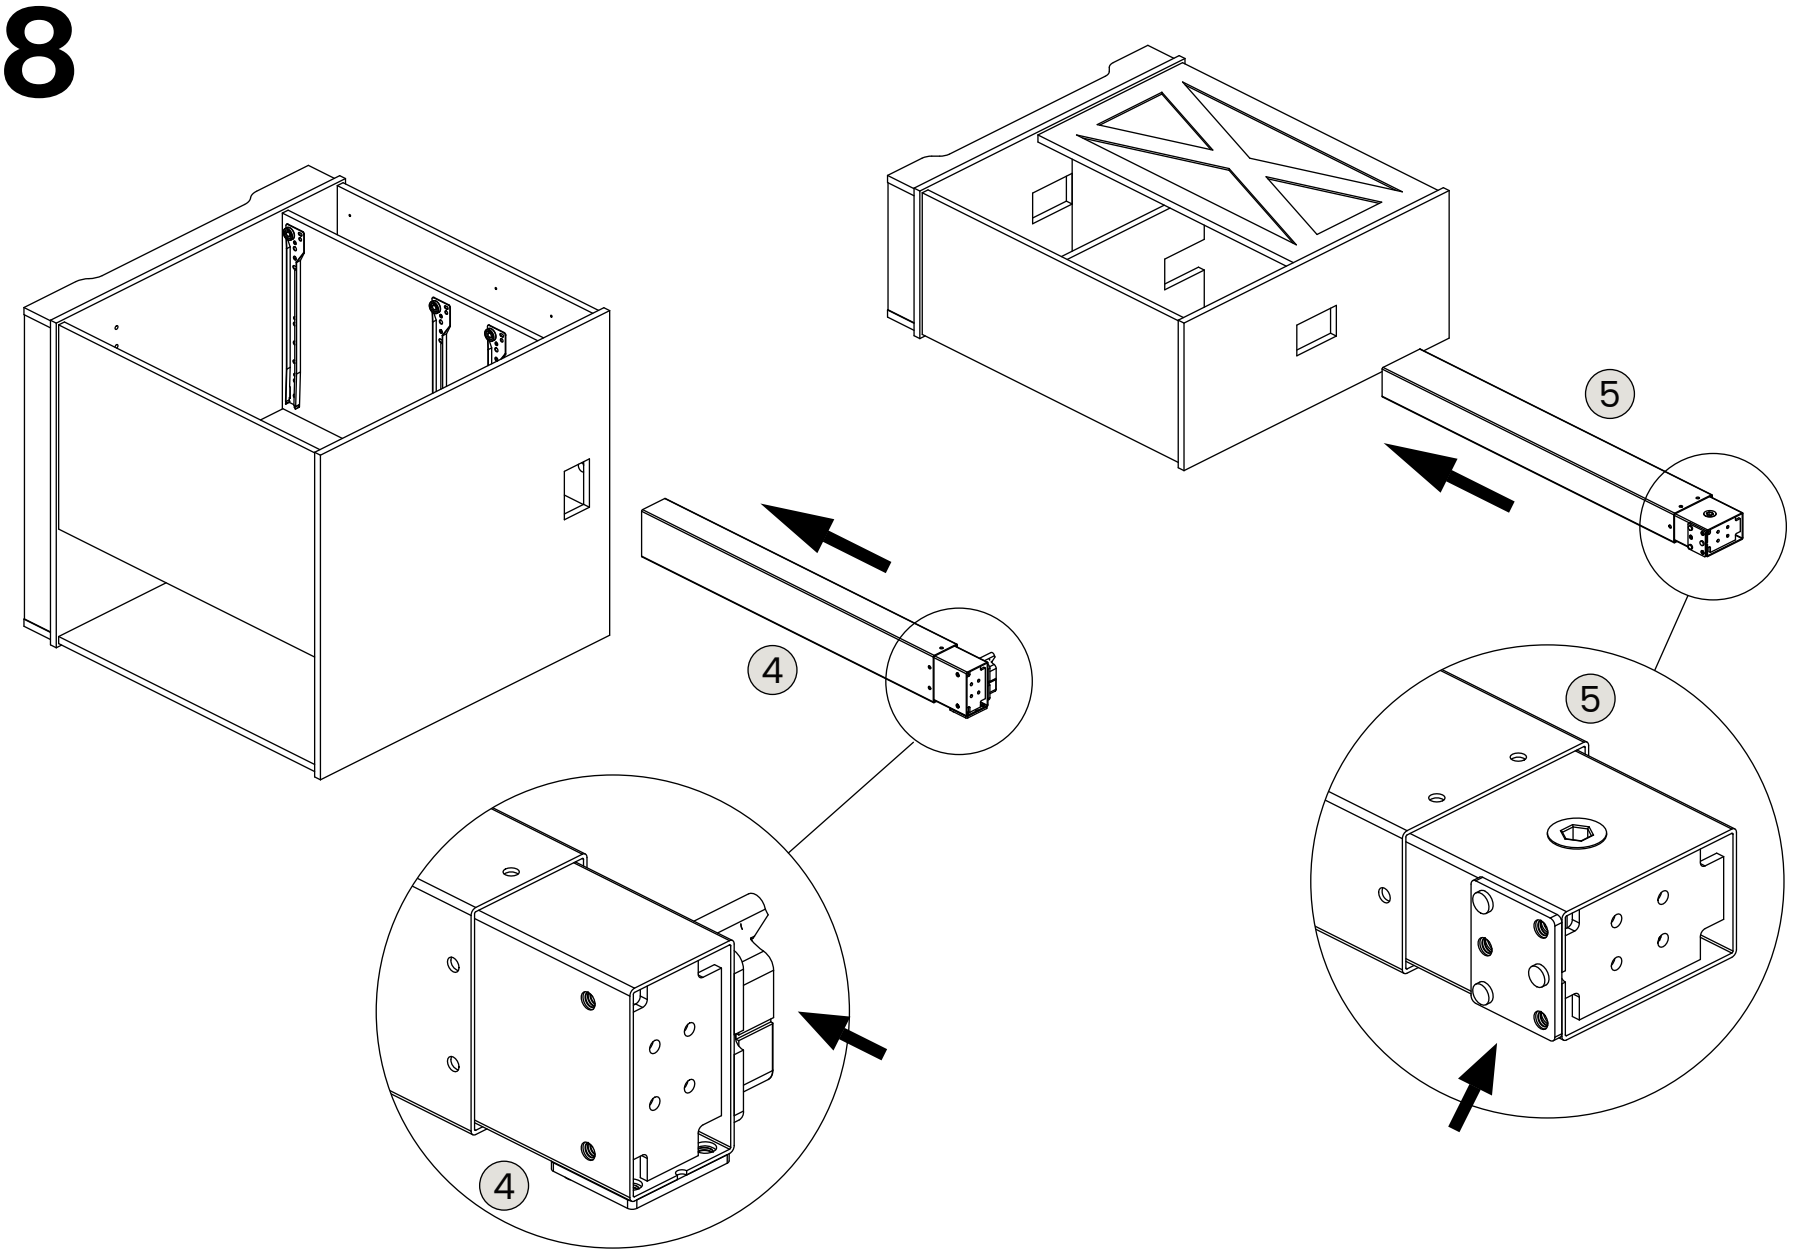


Assembly Instruction


39

U x8	H x8
	 M6X40MM

T x8
 φ20MM

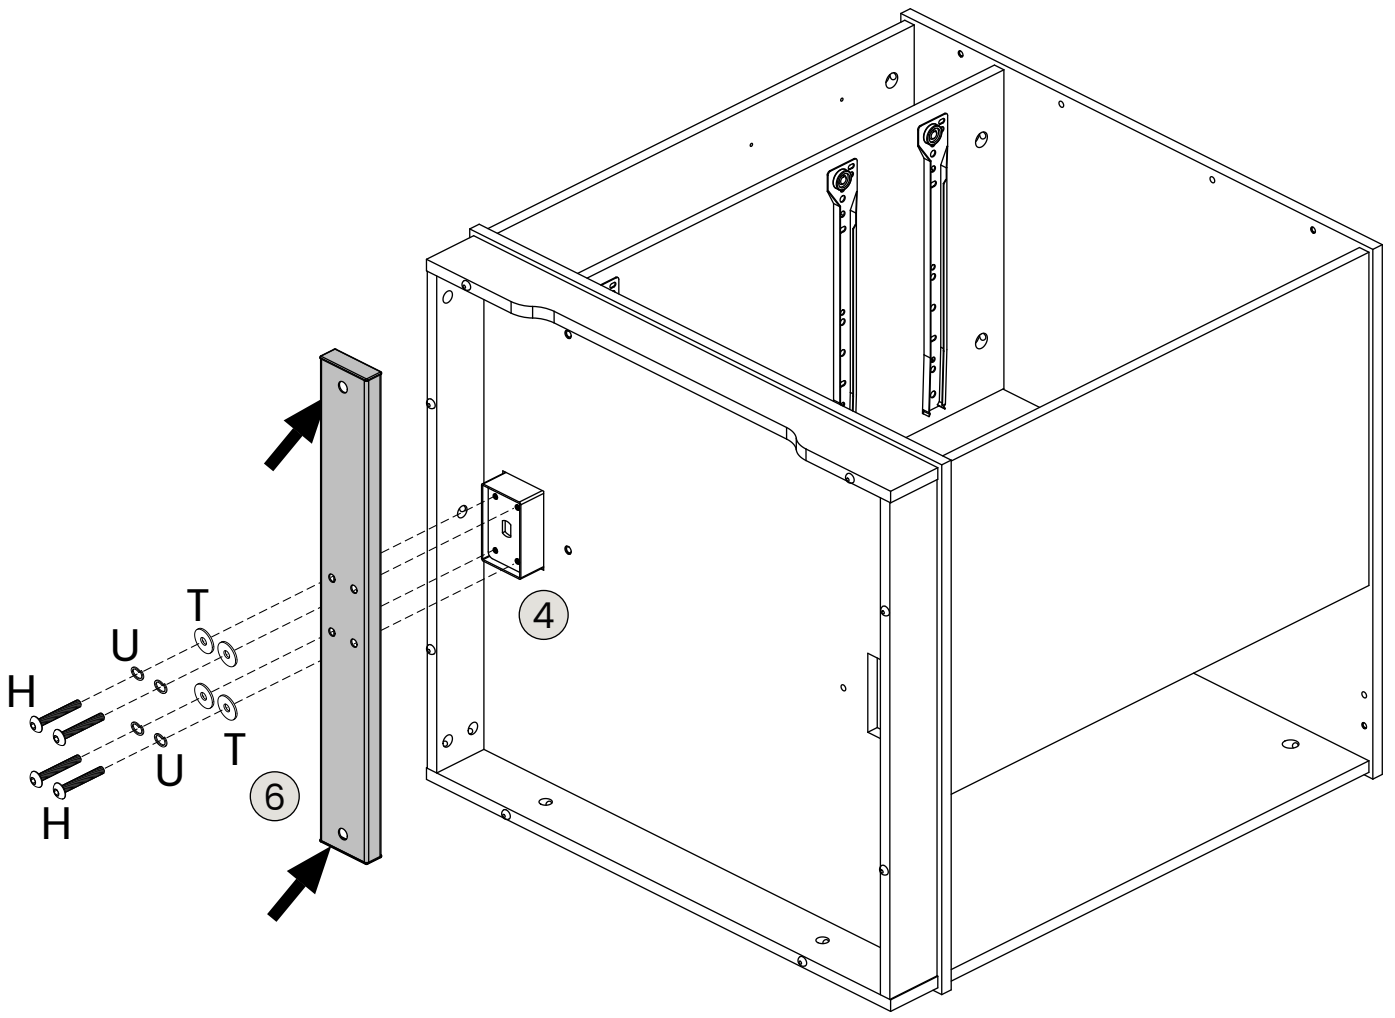


Pay attention to the orientation
of the hole indicated by the arrow

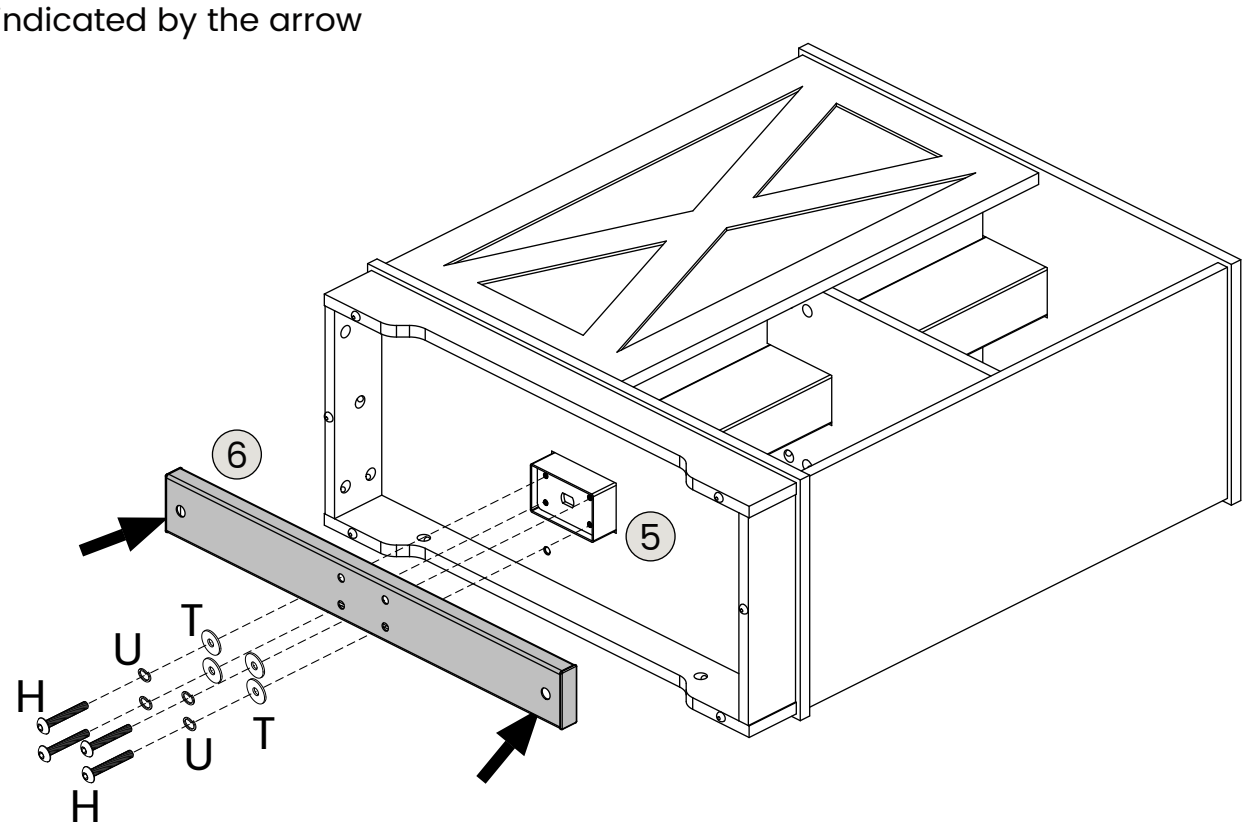



Assembly Instruction

40

A x4




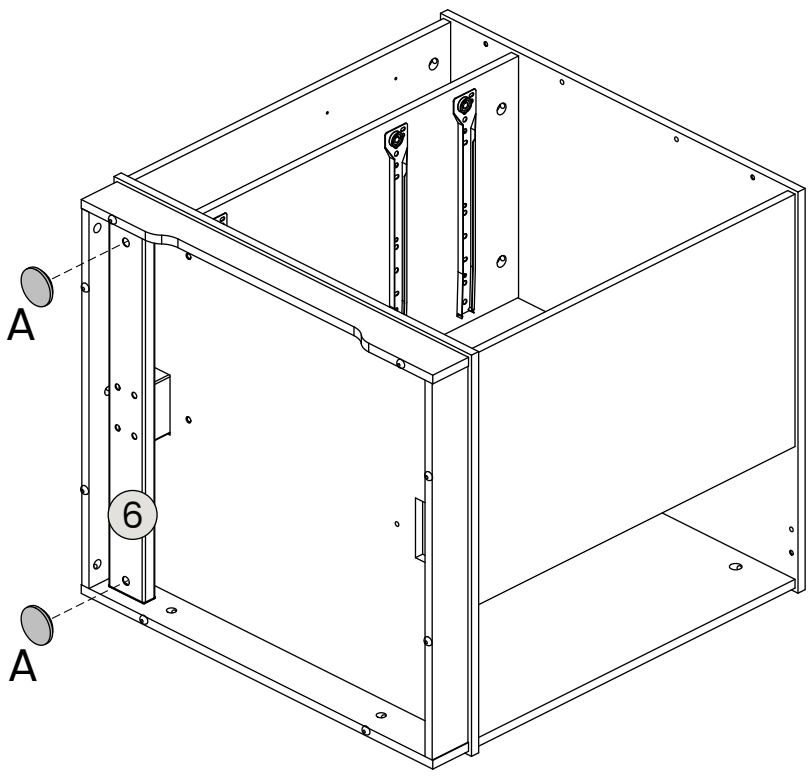

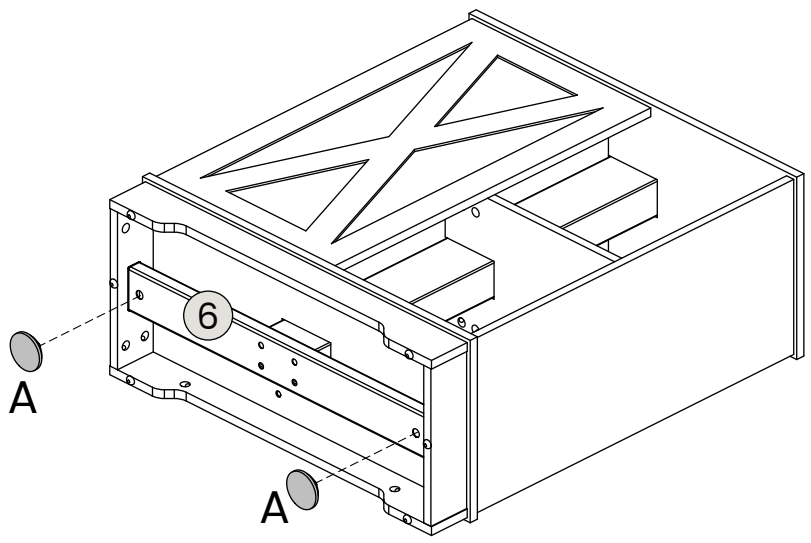


41


K x4




ST4x14MM

N x4

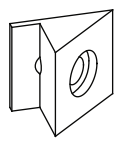


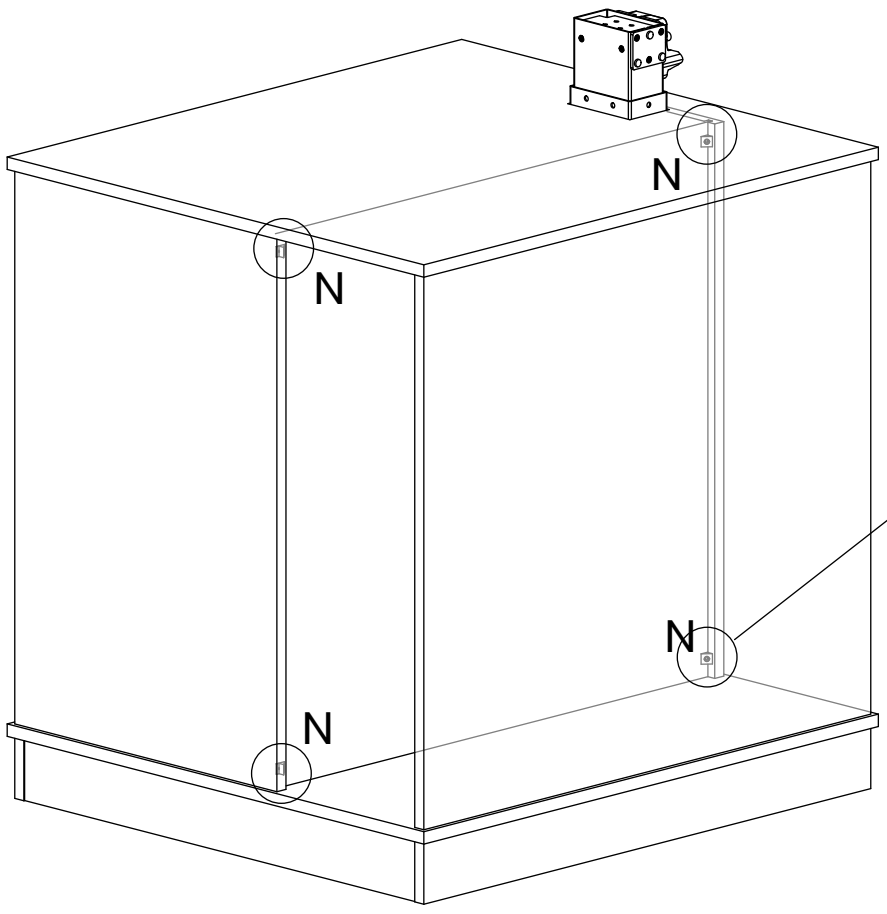

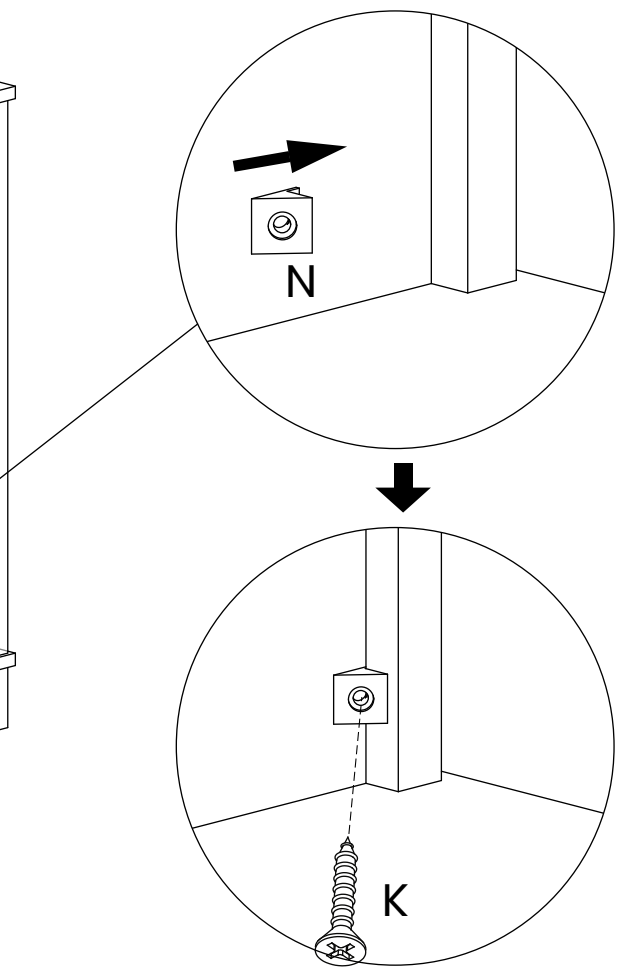

Assembly Instruction


42

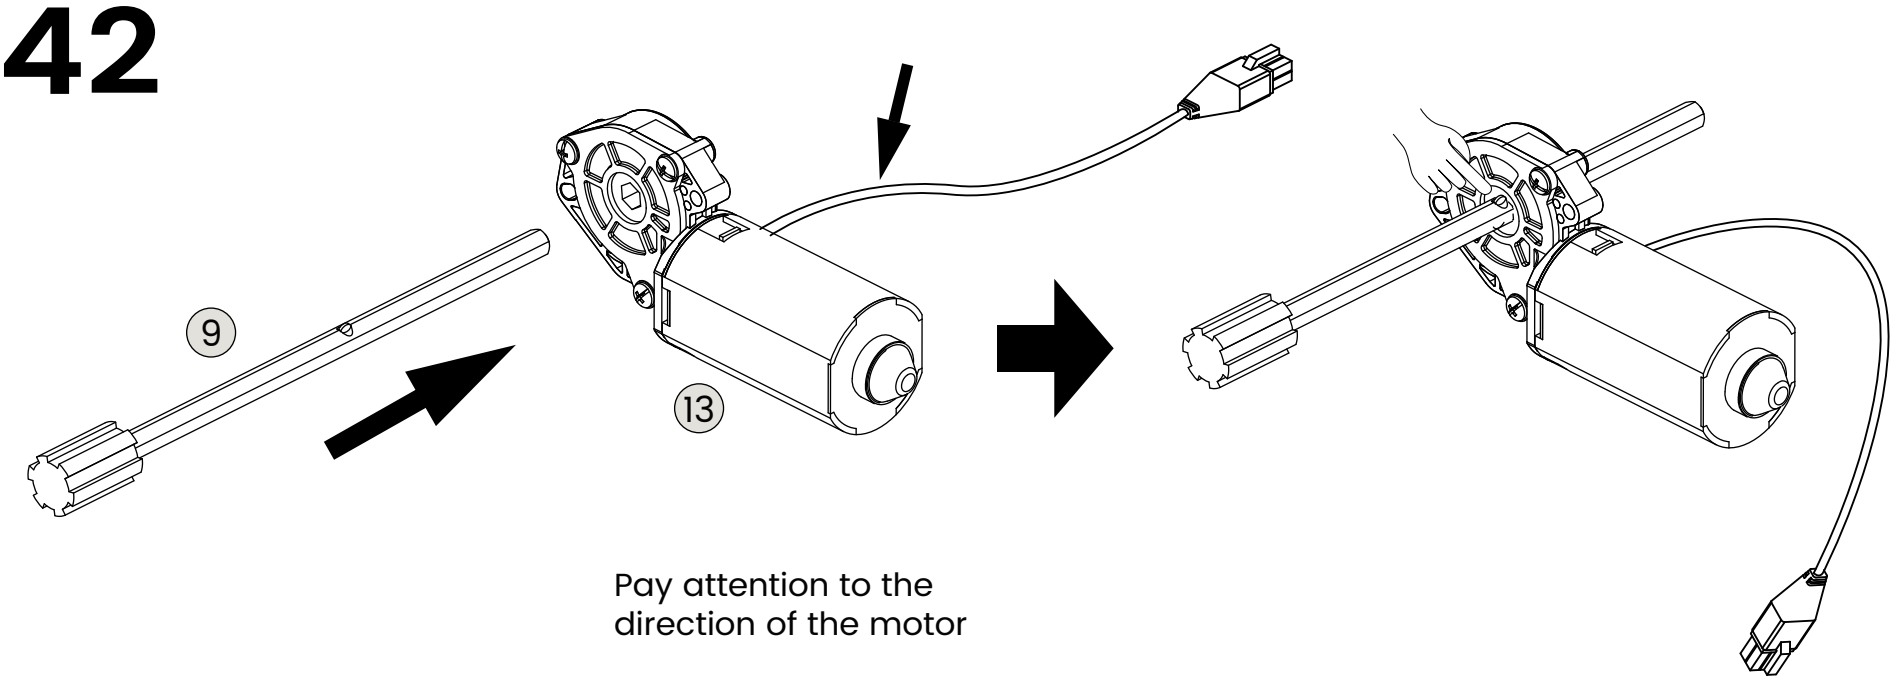


Pay attention to the direction of the motor

43


I x2




ST4X25MM

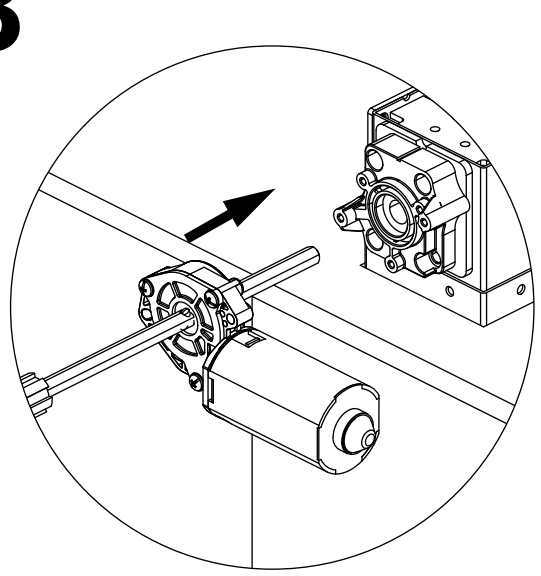


Firstly, determine the direction of the motor

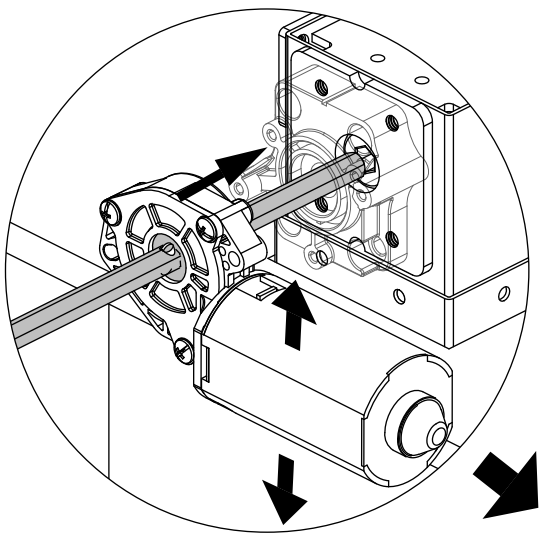


Secondly, rotate the motor slightly until the hexagonal rod can be inserted

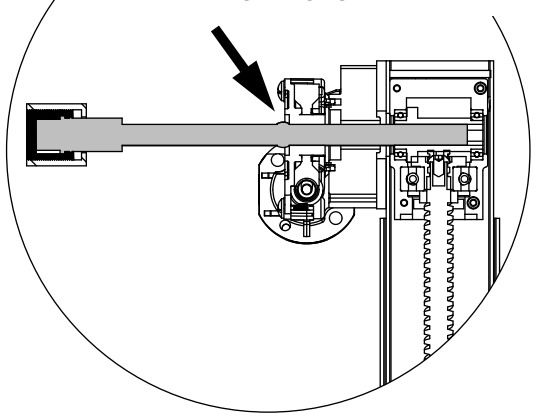

The point indicated by the arrow is aligned with the motor

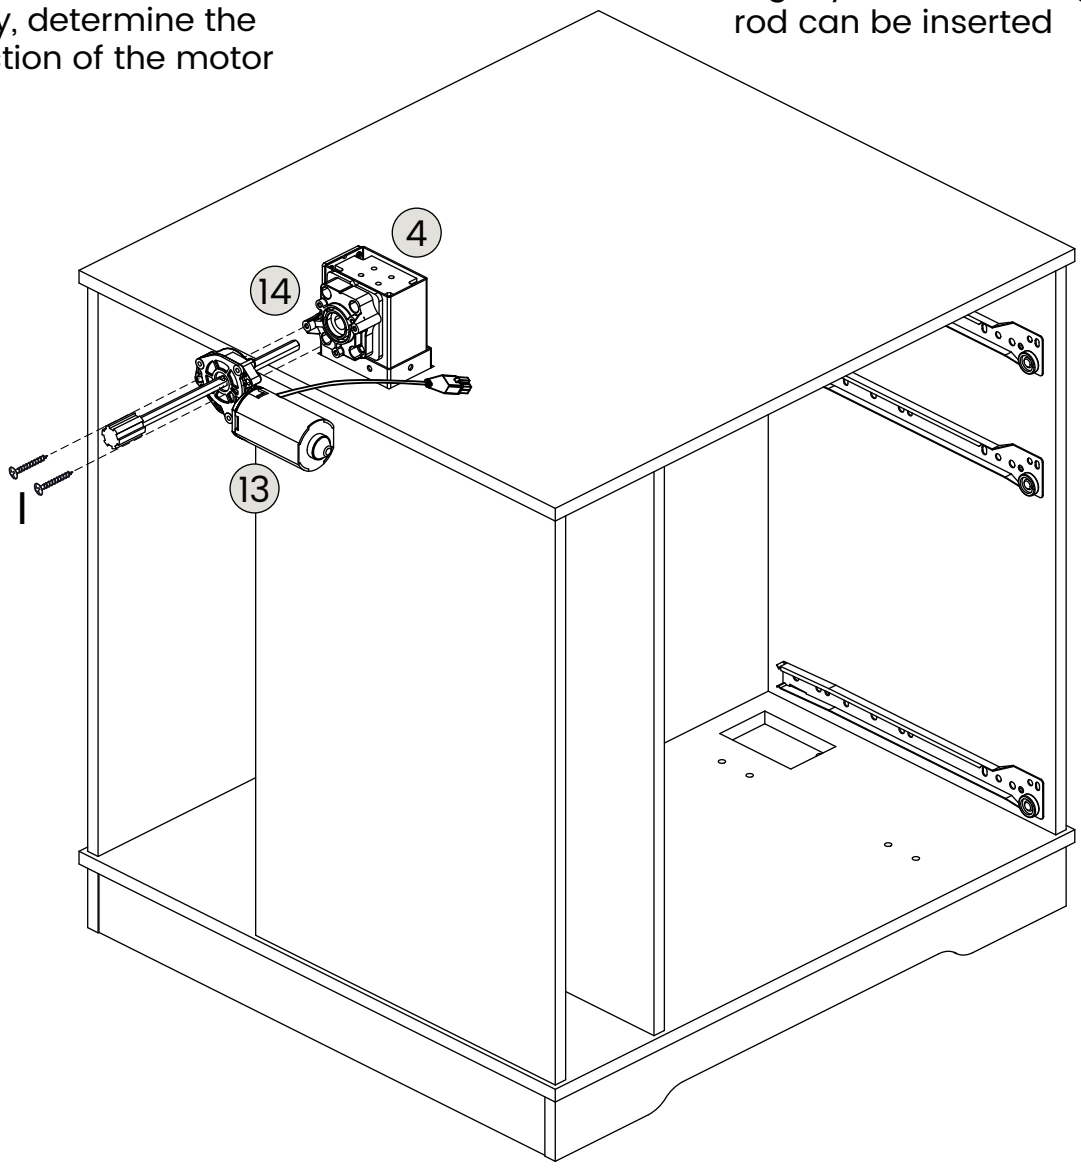

Thirdly, ensure that the hexagonal rod is fully inserted into the lifting device of accessory 4

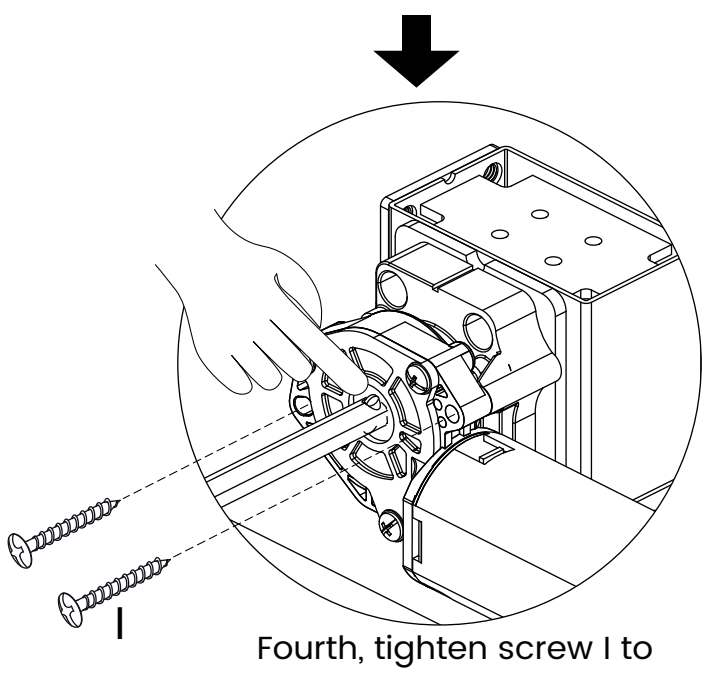


Fourth, tighten screw I to secure the motor


Assembly Instruction

44

Cx6




M6X10MM

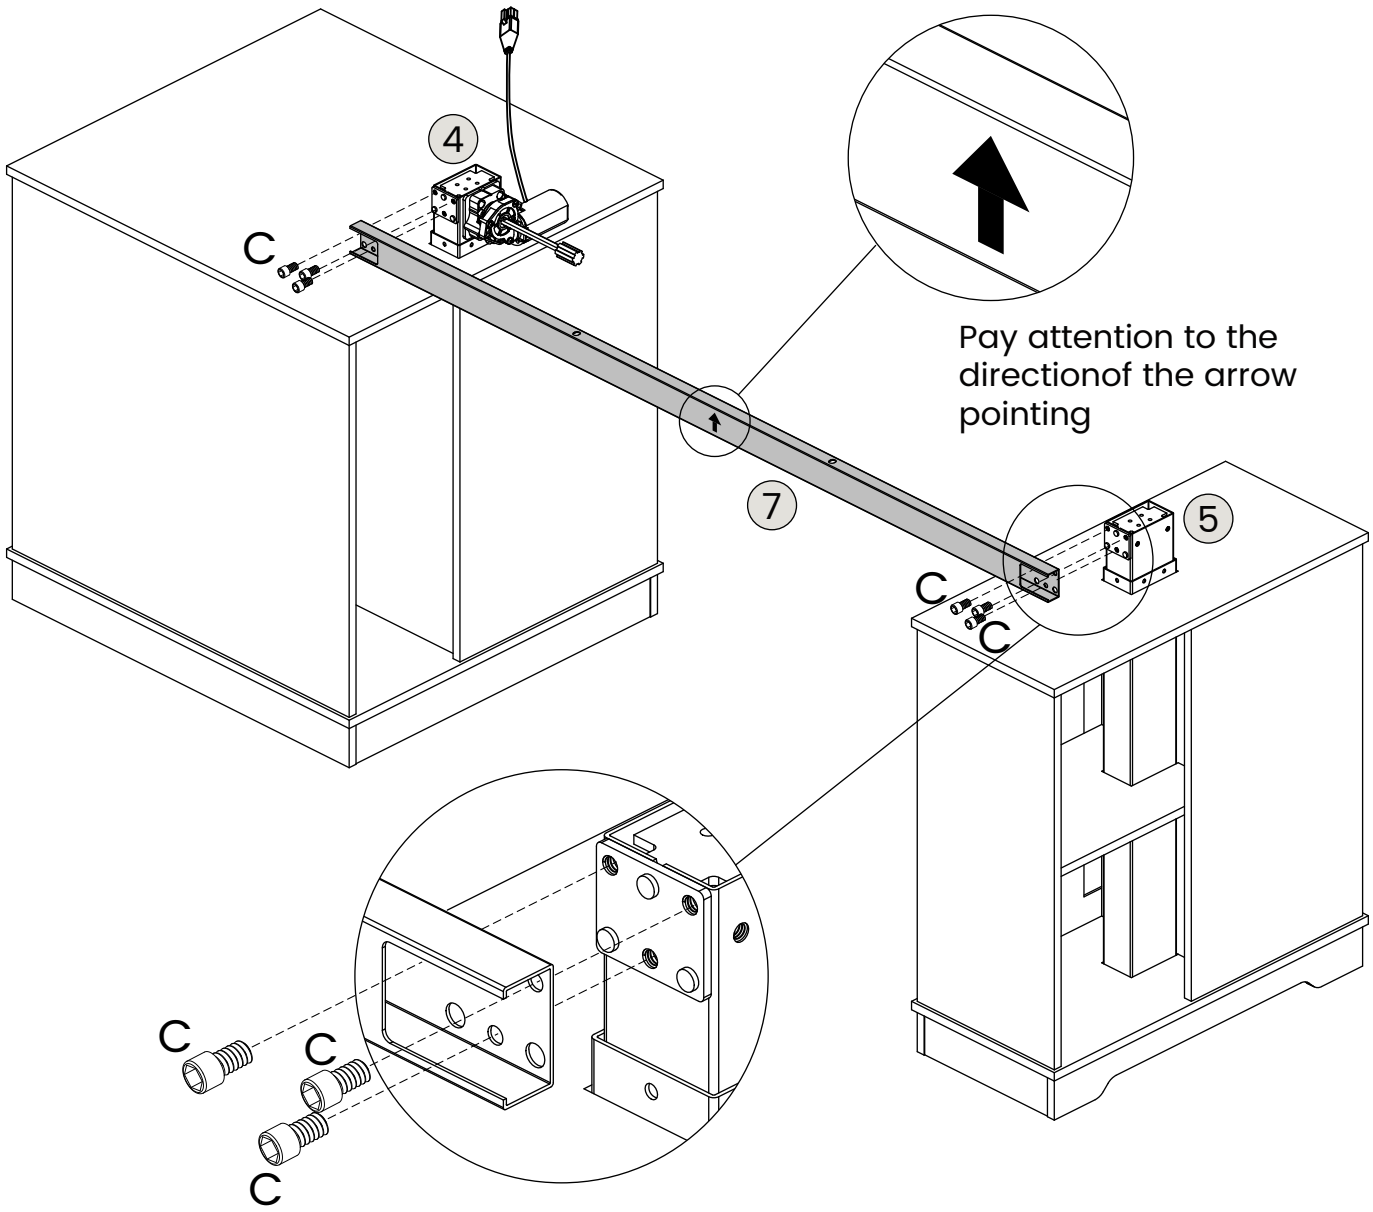


45

G x4



M6X28MM

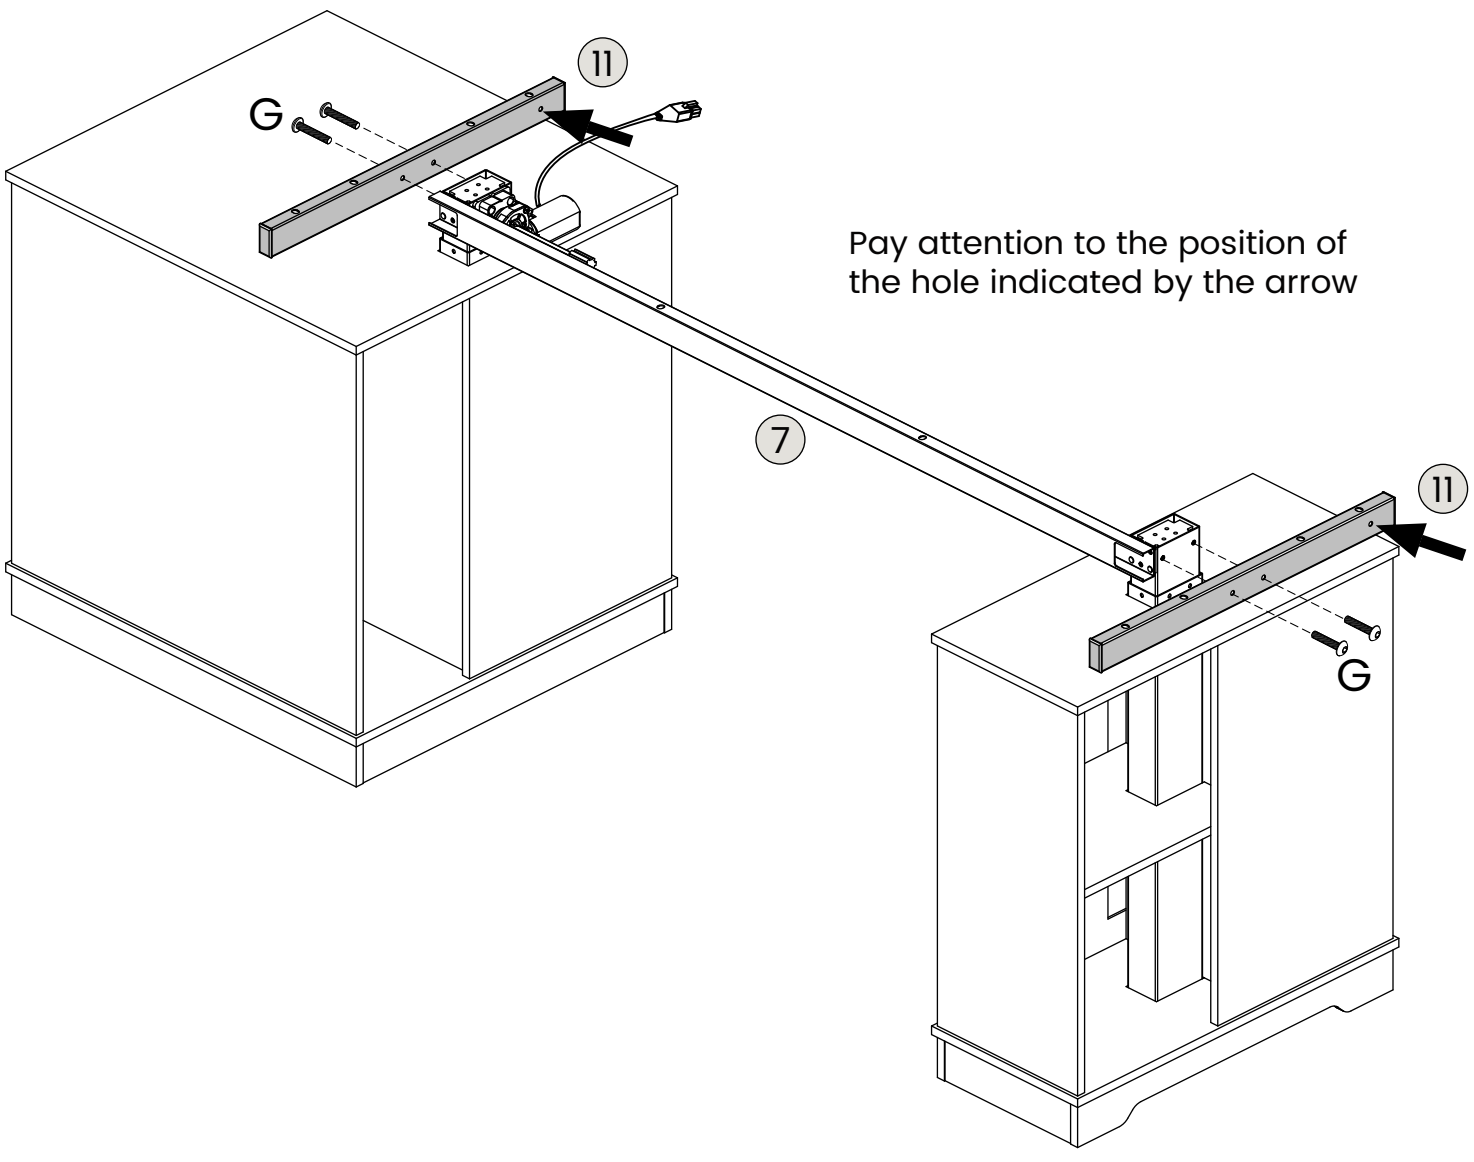


Pay attention to the position of the hole indicated by the arrow


Assembly Instruction

46


Hx2




M6X40MM

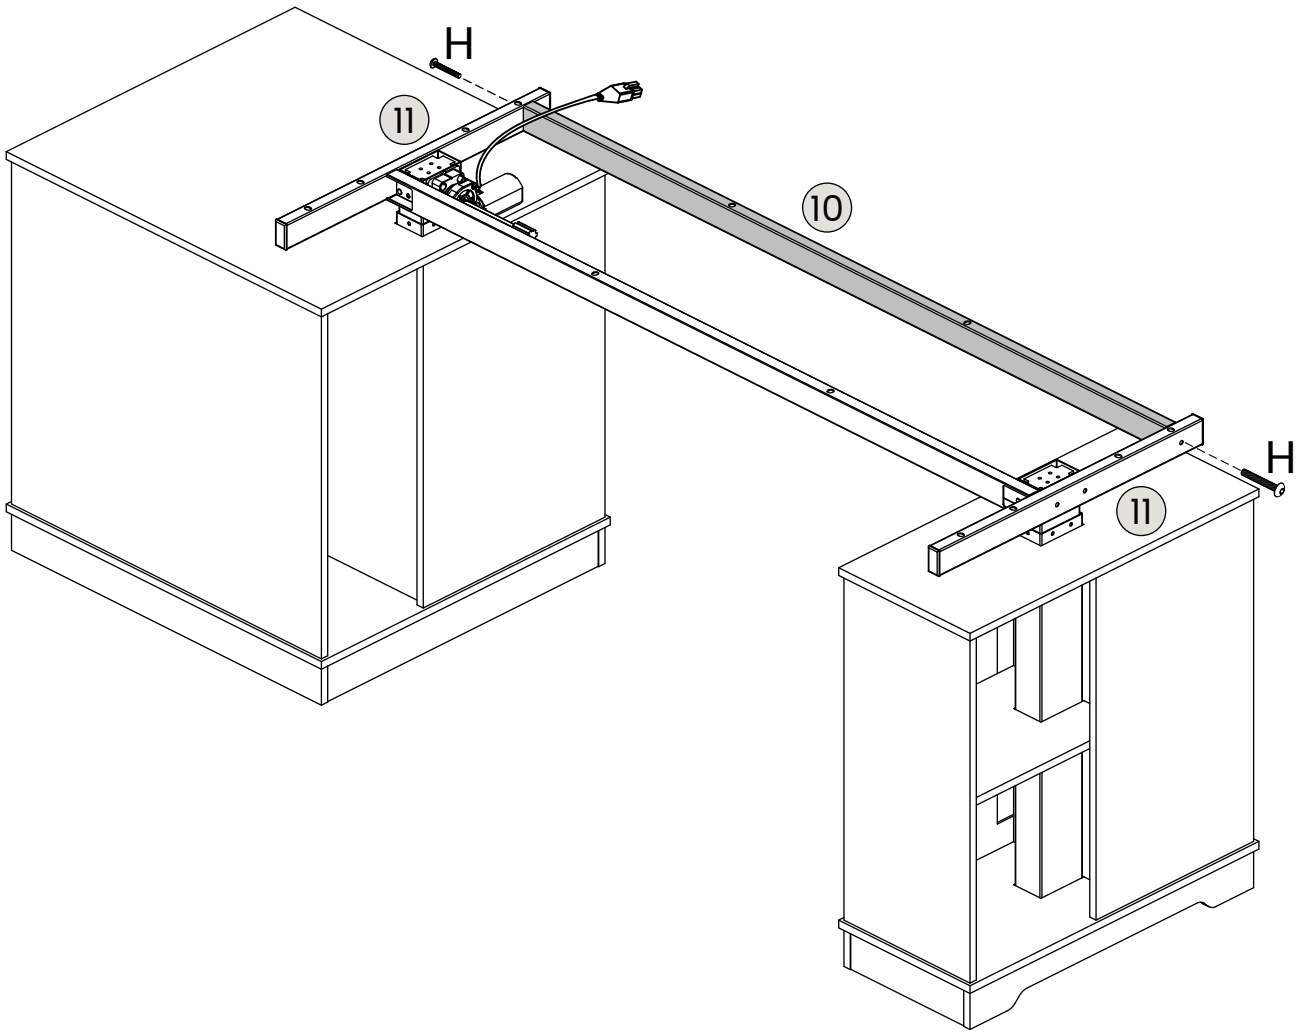

47

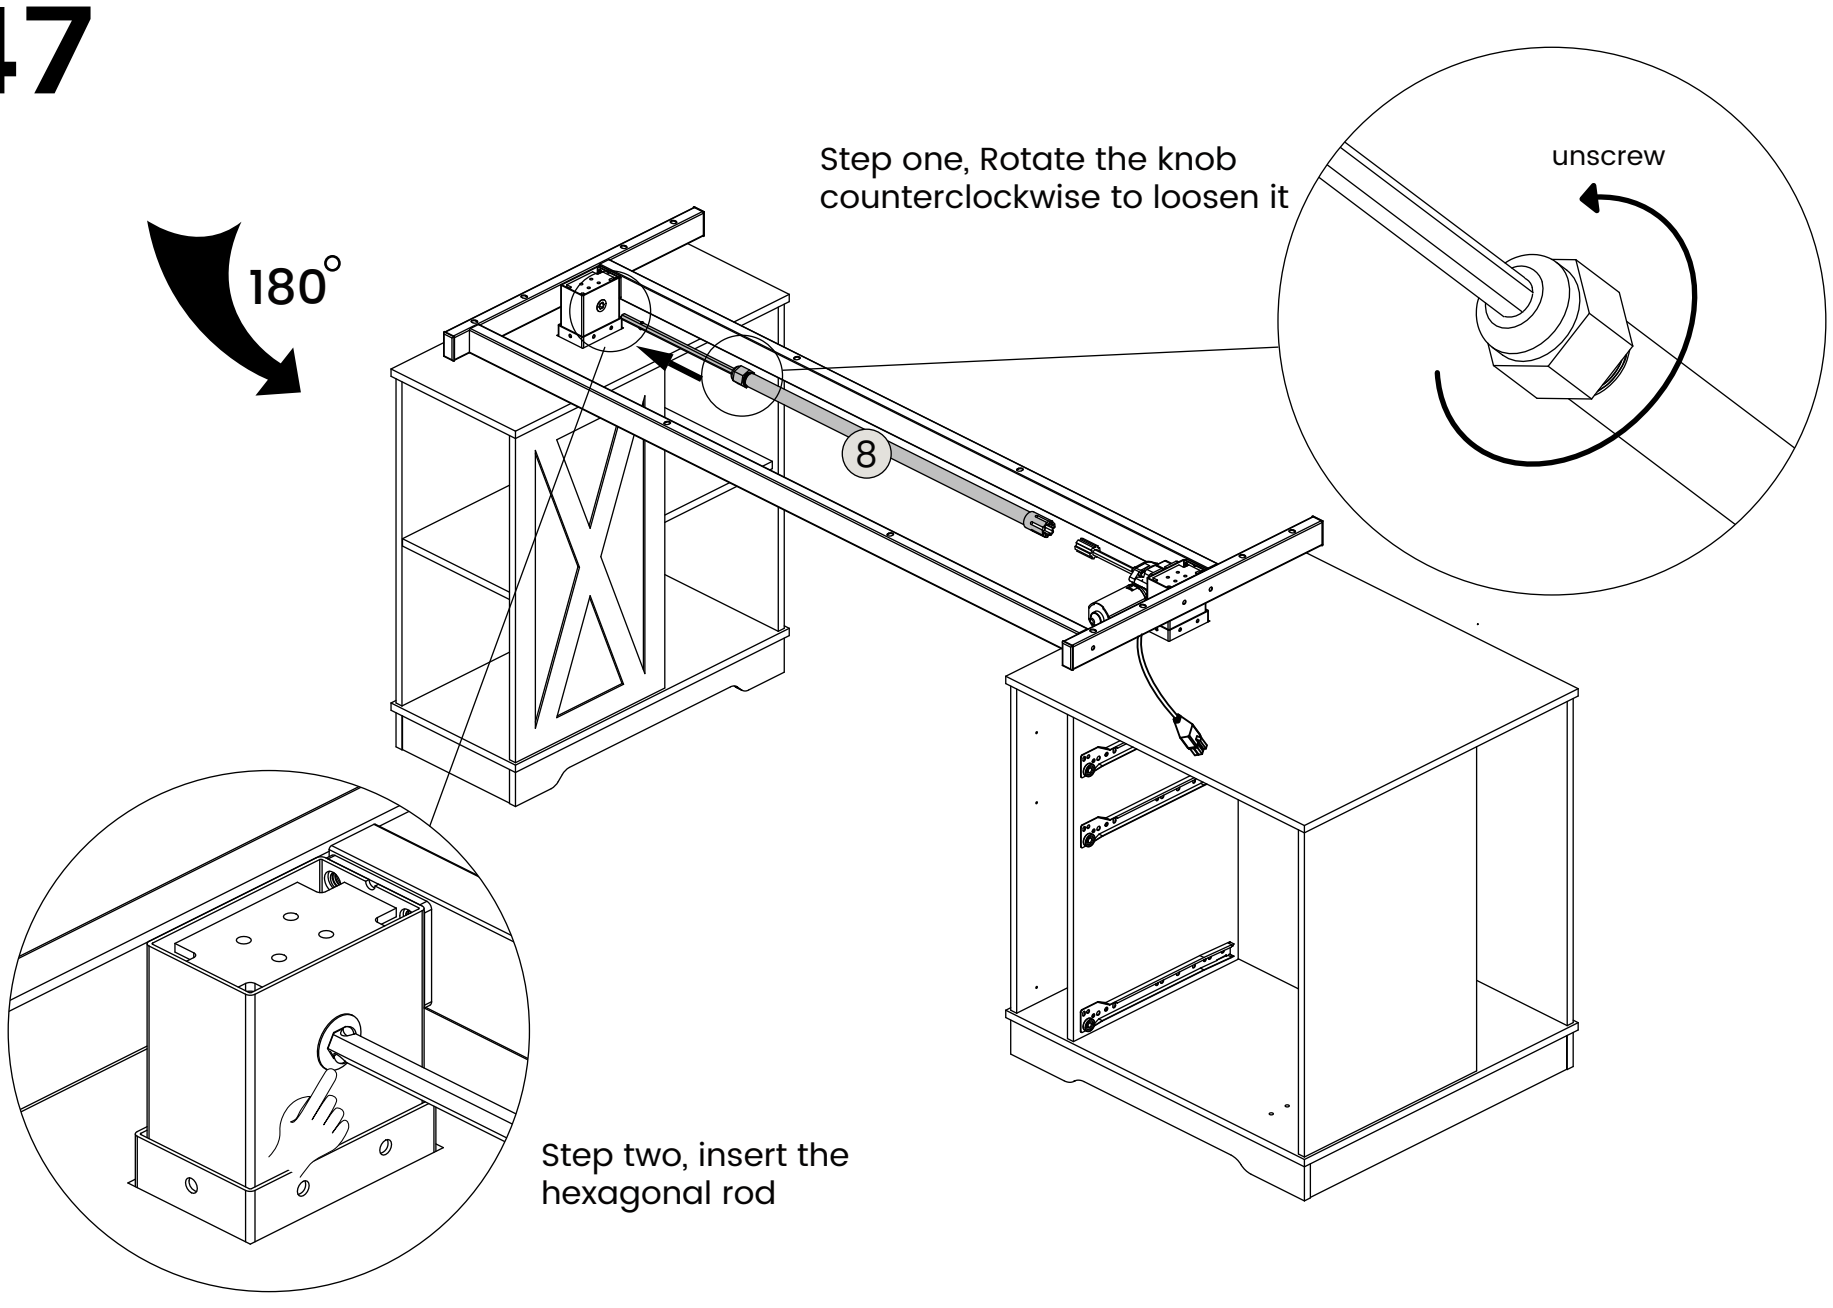


48

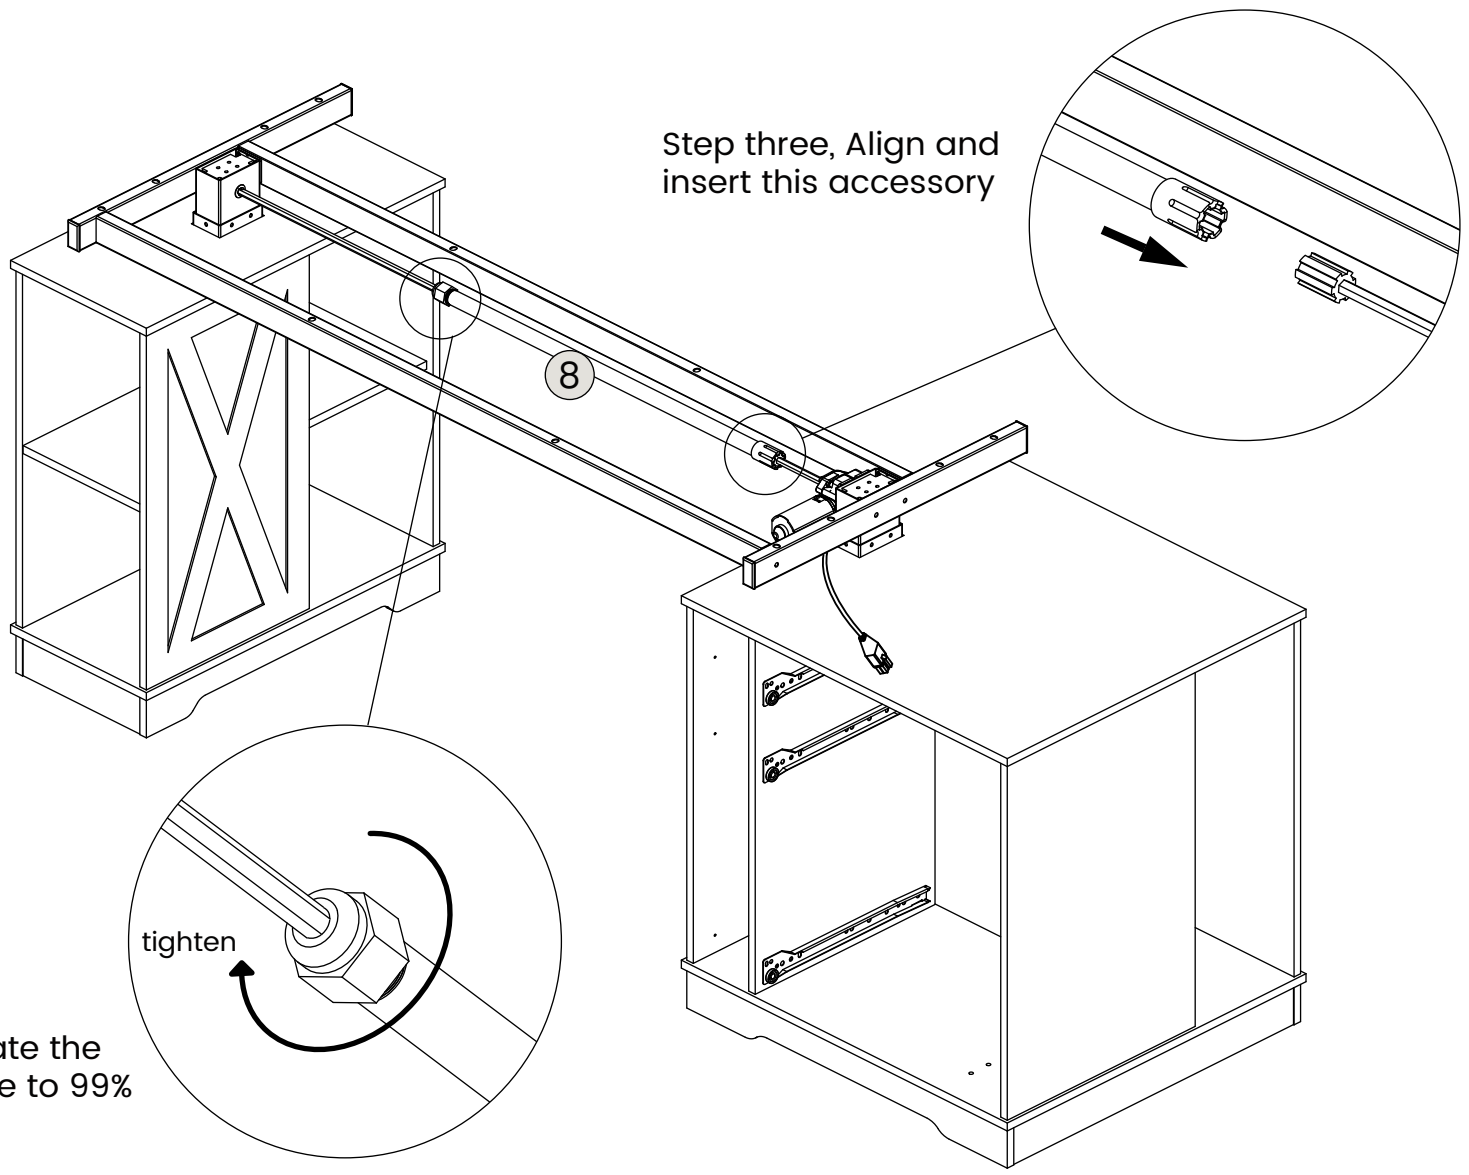


Step four, Rotate the knob clockwise to 99% fixed

49

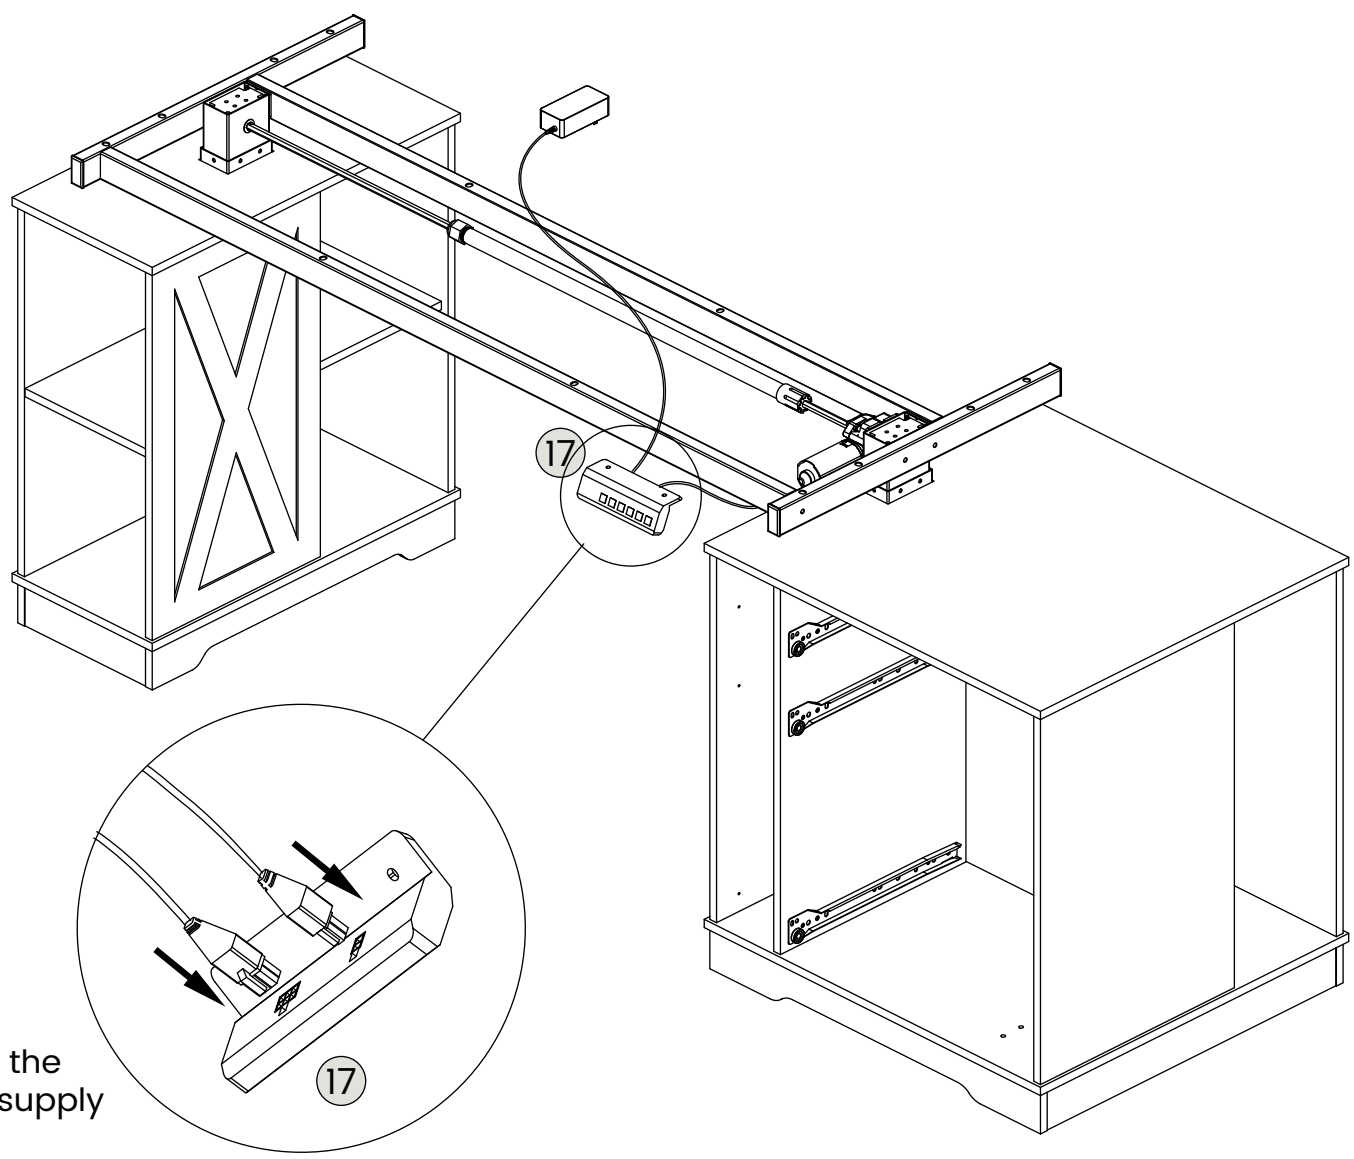

Connect the motor to the controller and power supply

50

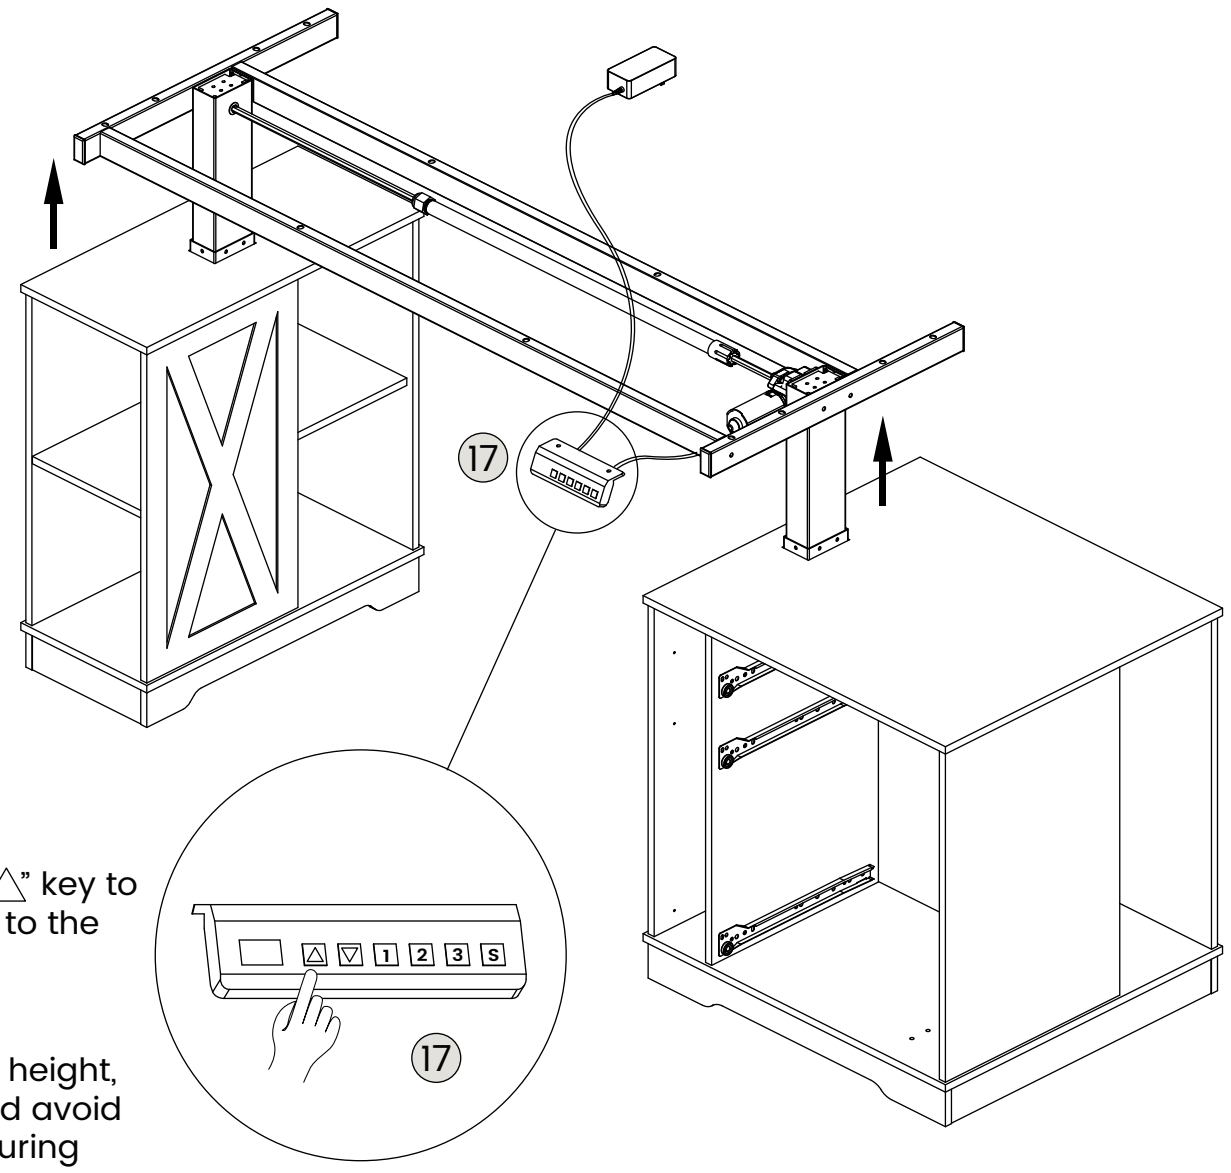


Press and hold the “△” key to raise the steel frame to the appropriate height

Raise to the appropriate height, unplug the controller, and avoid pulling or damaging it during installation


51

Dx12




M6X48MM

Note that the hole indicated by the arrow is close to the motor

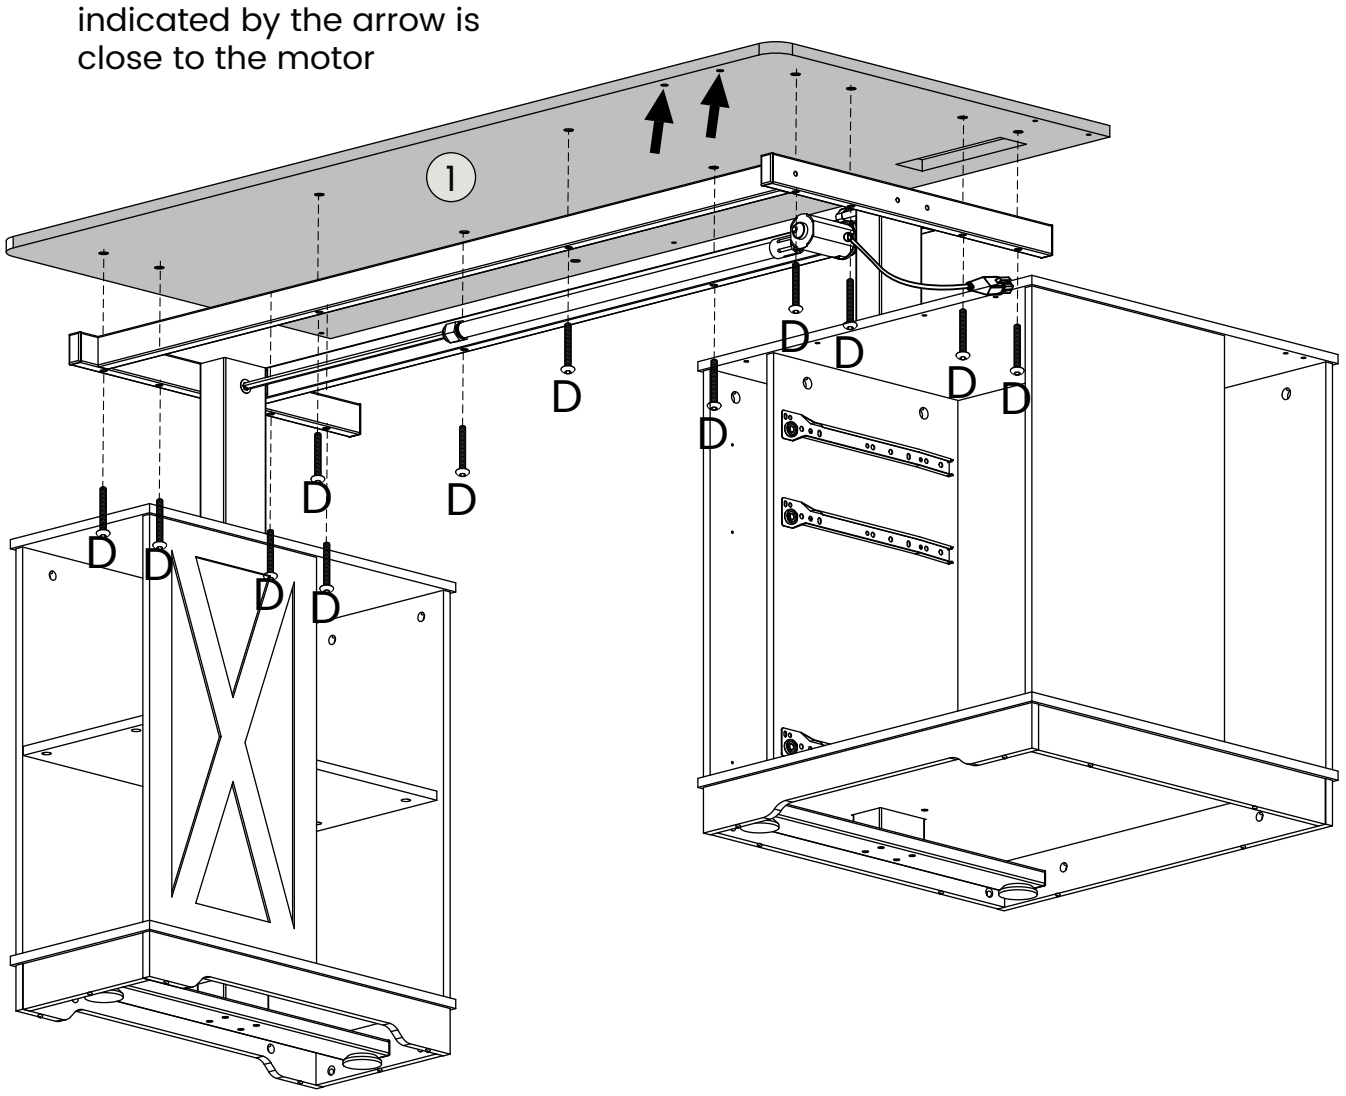


Assembly Instruction

52

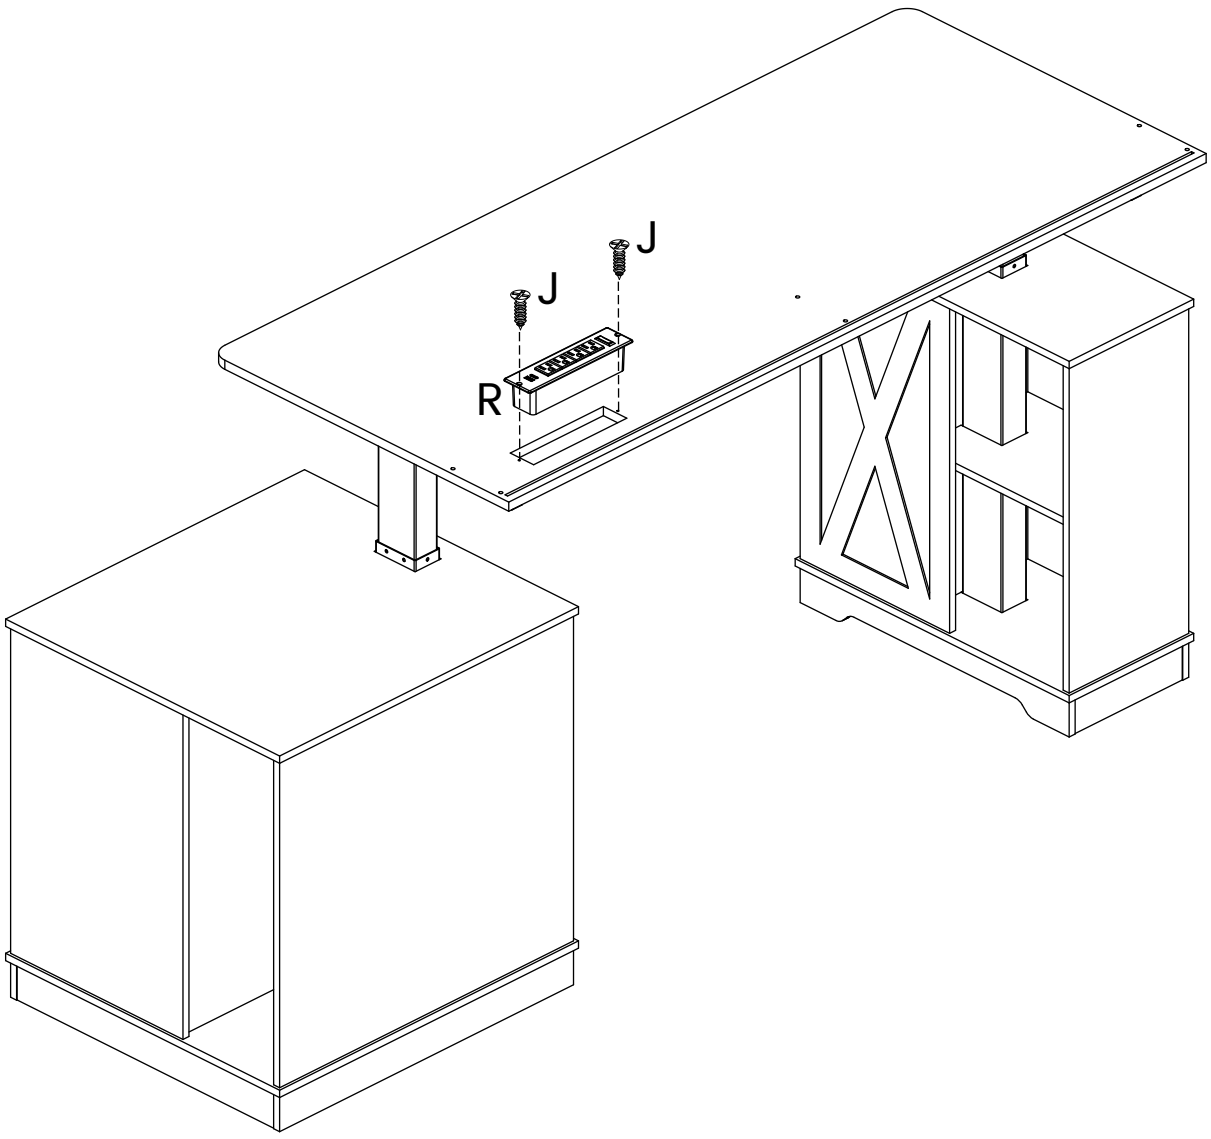


J x2




ST4X12MM


R x1

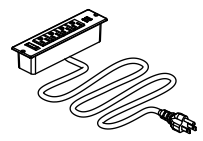

53

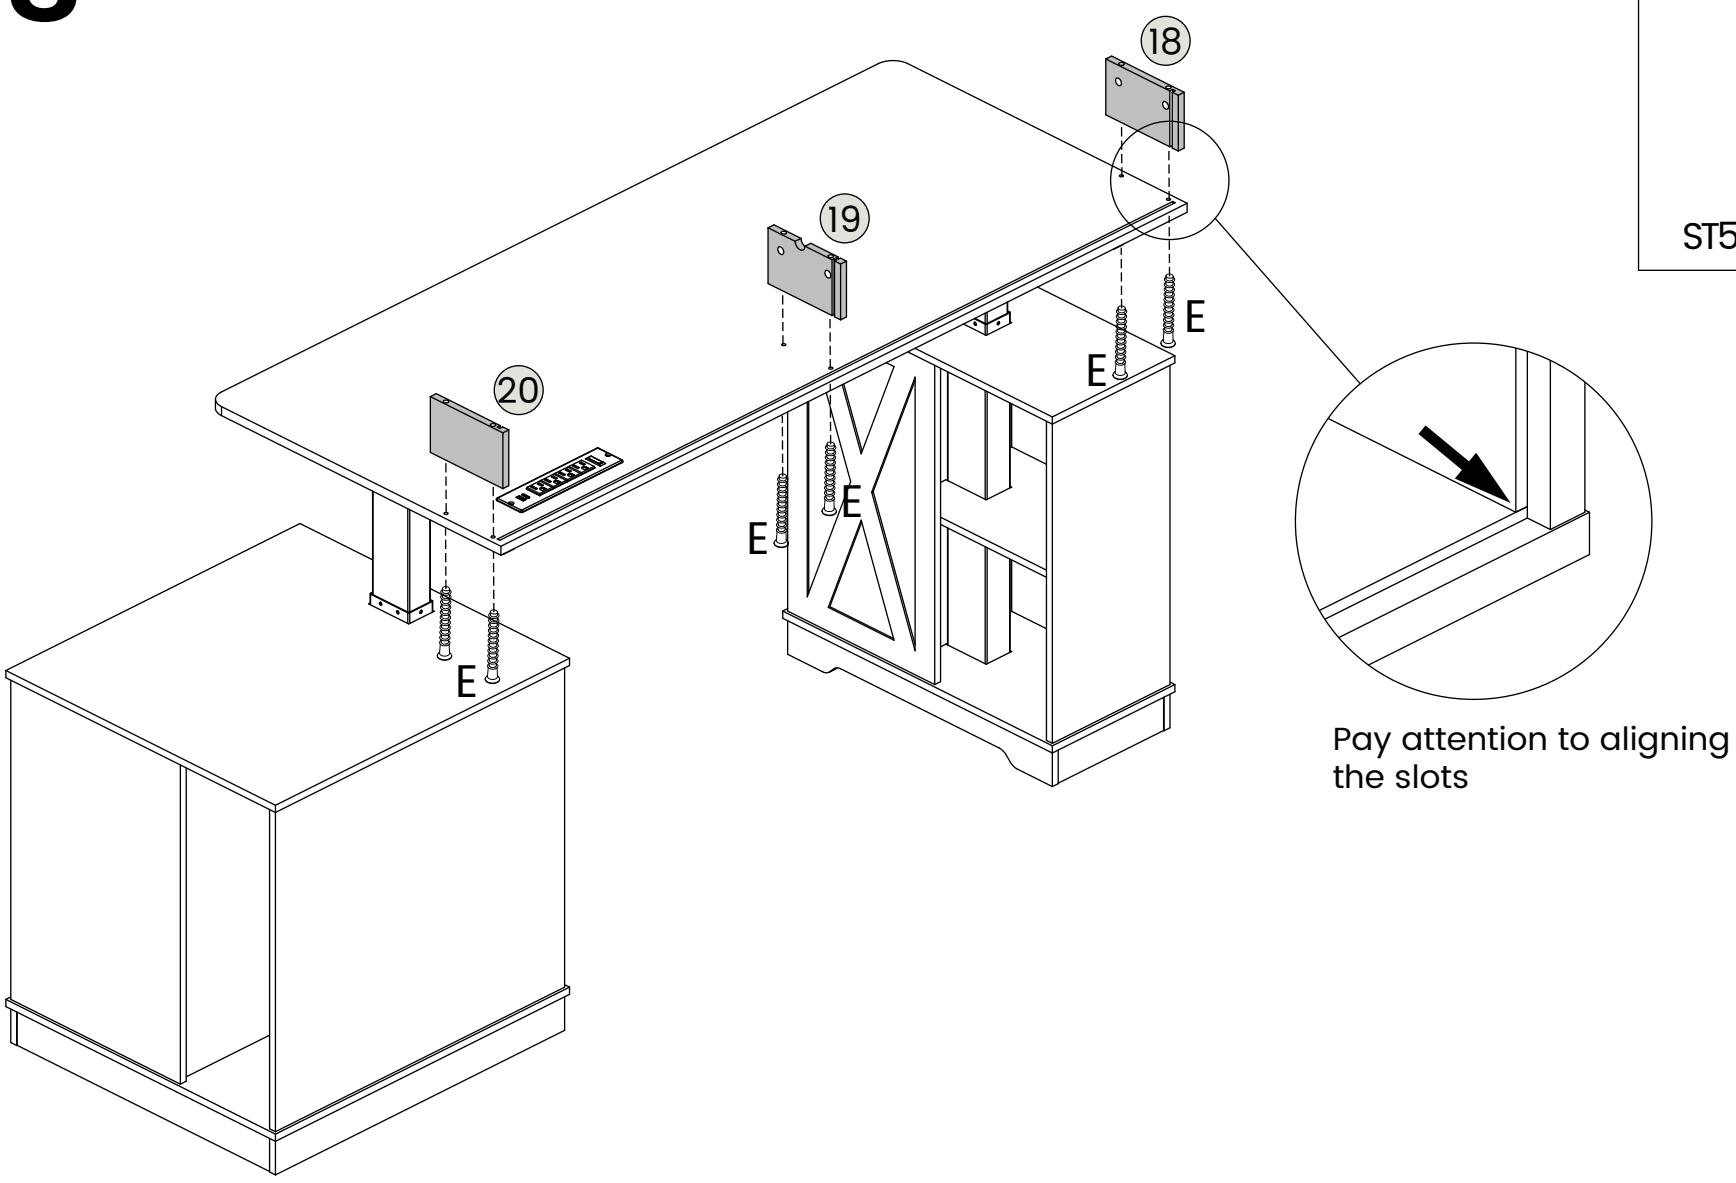


E x6



ST5X40MM

Pay attention to aligning the slots


54

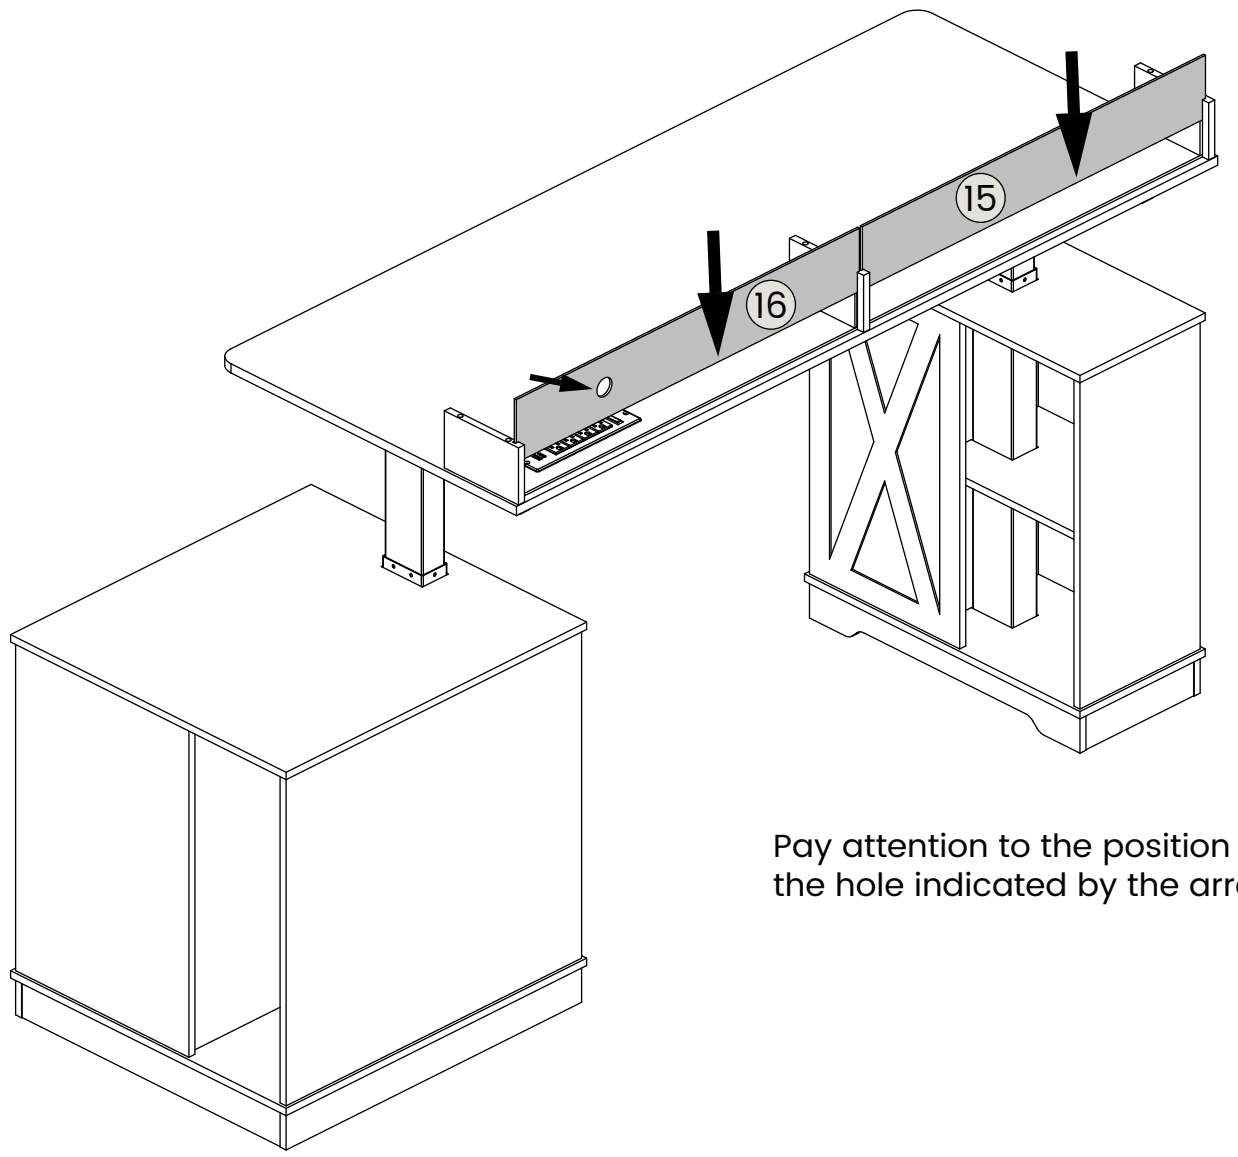


Pay attention to the position of
the hole indicated by the arrow

55


O x6

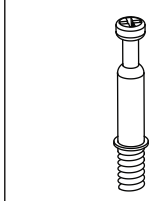

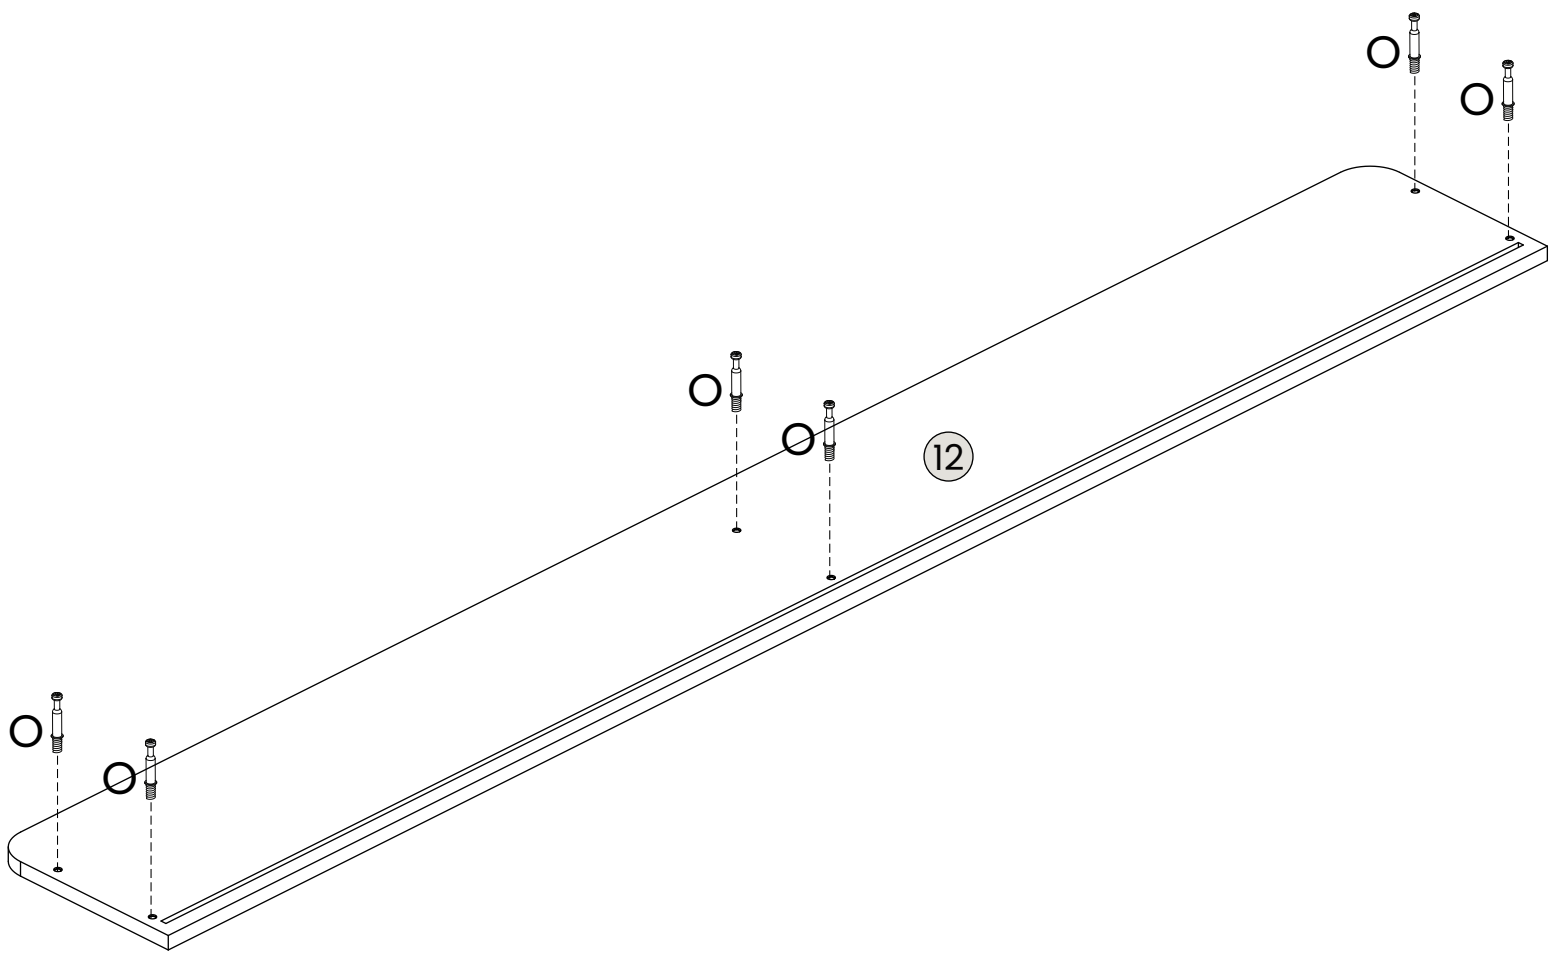

Assembly Instruction


56

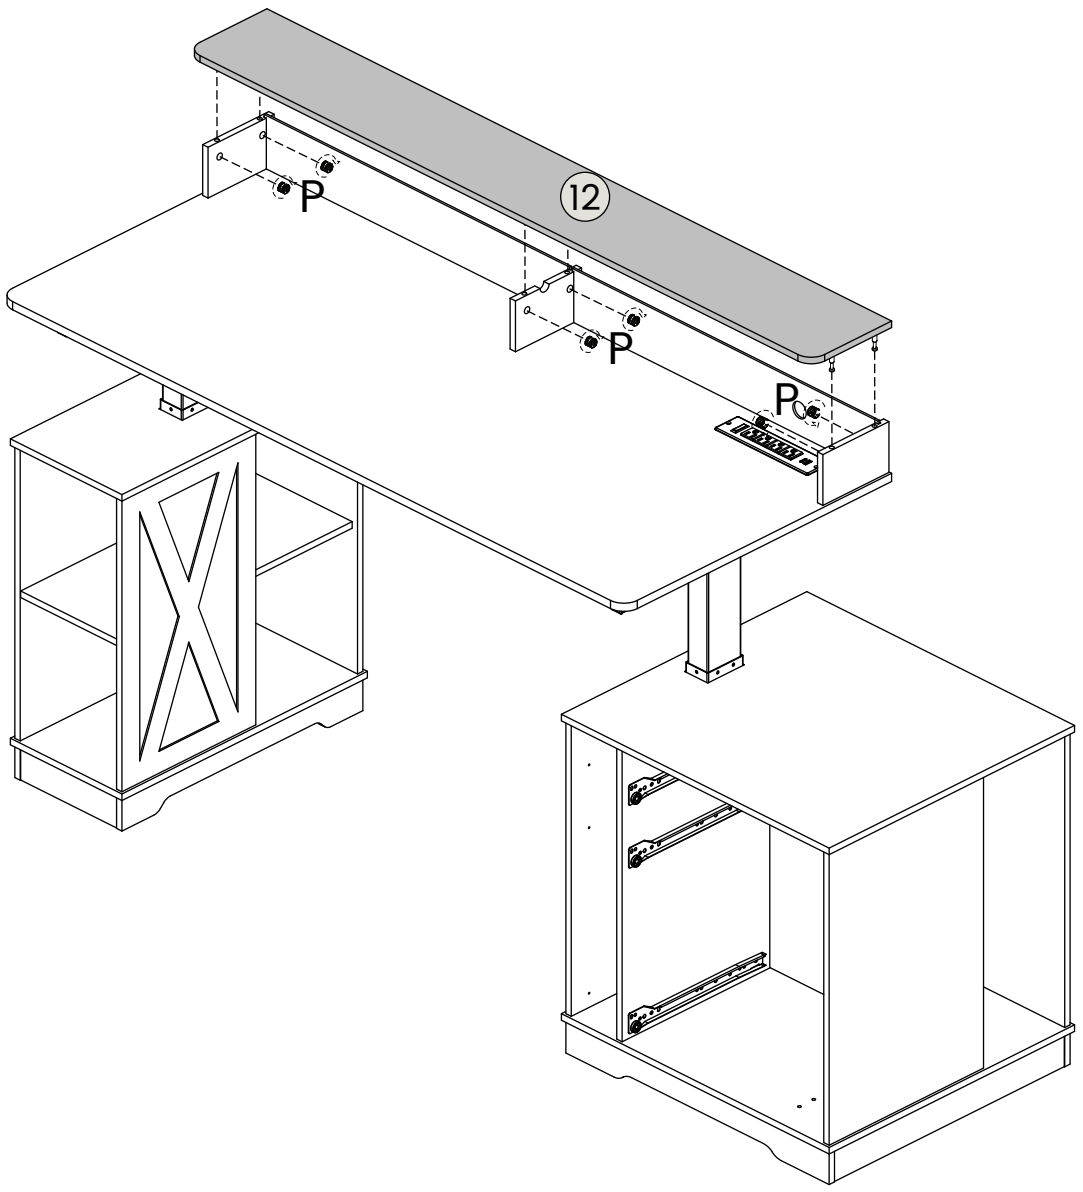

P x6



57

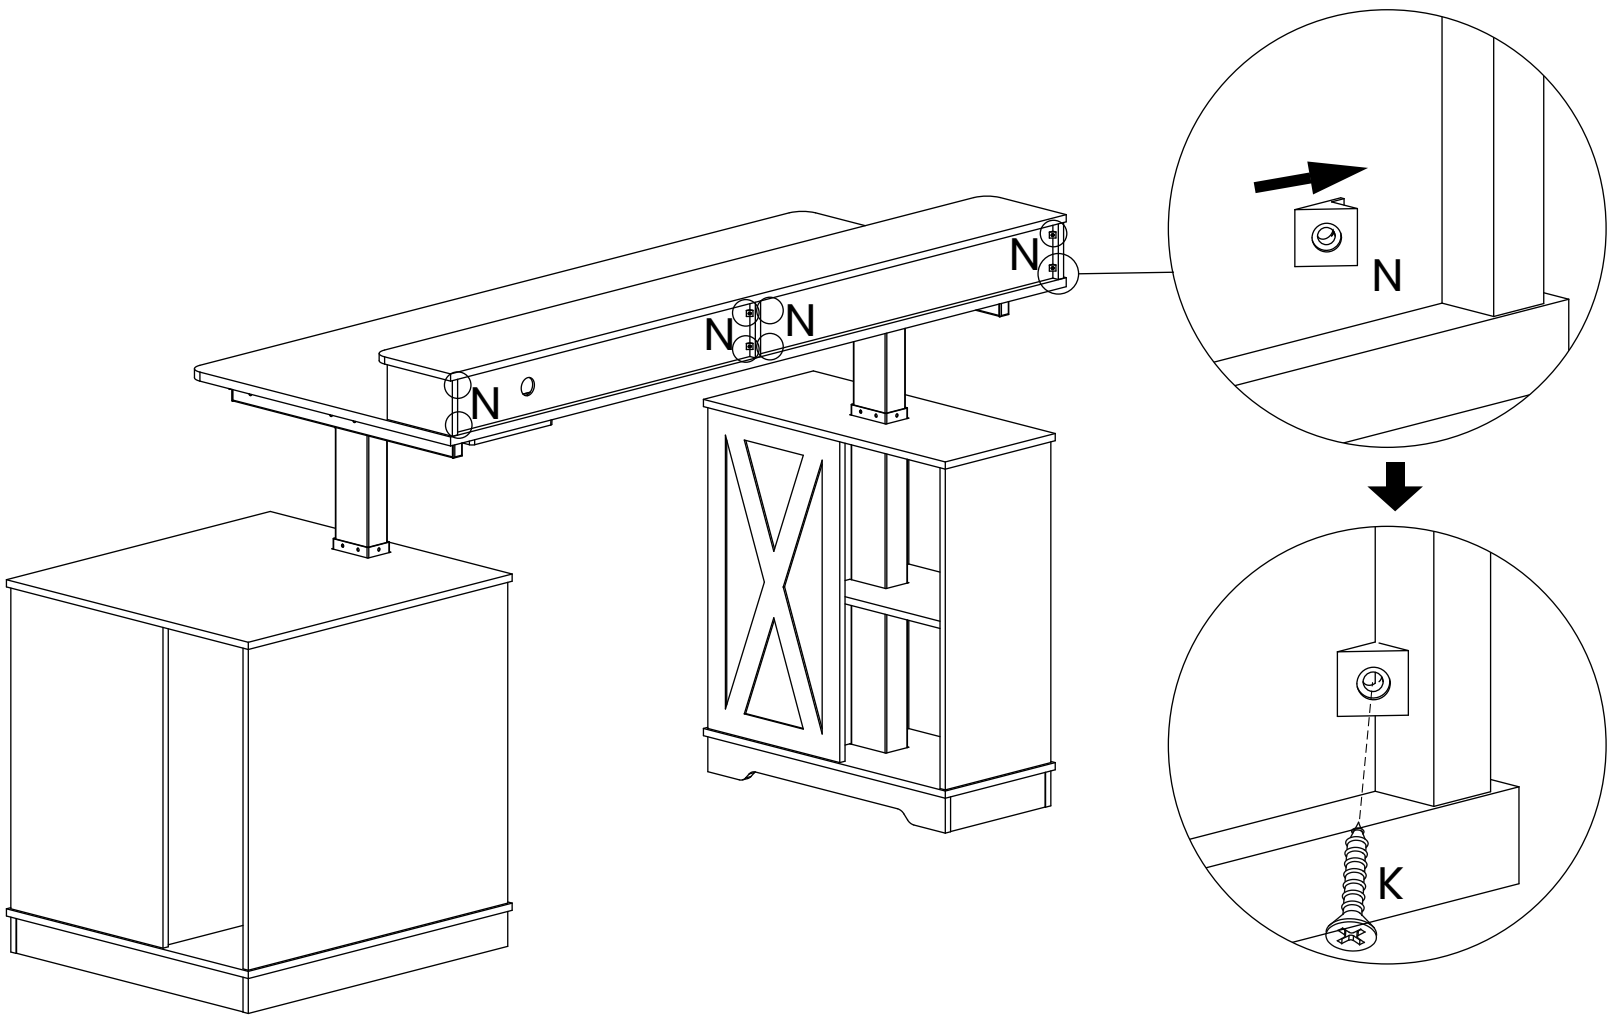


K x8




ST4x14MM


N x8






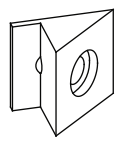


Assembly Instruction

58

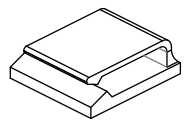Y x3	**Q** x1
	

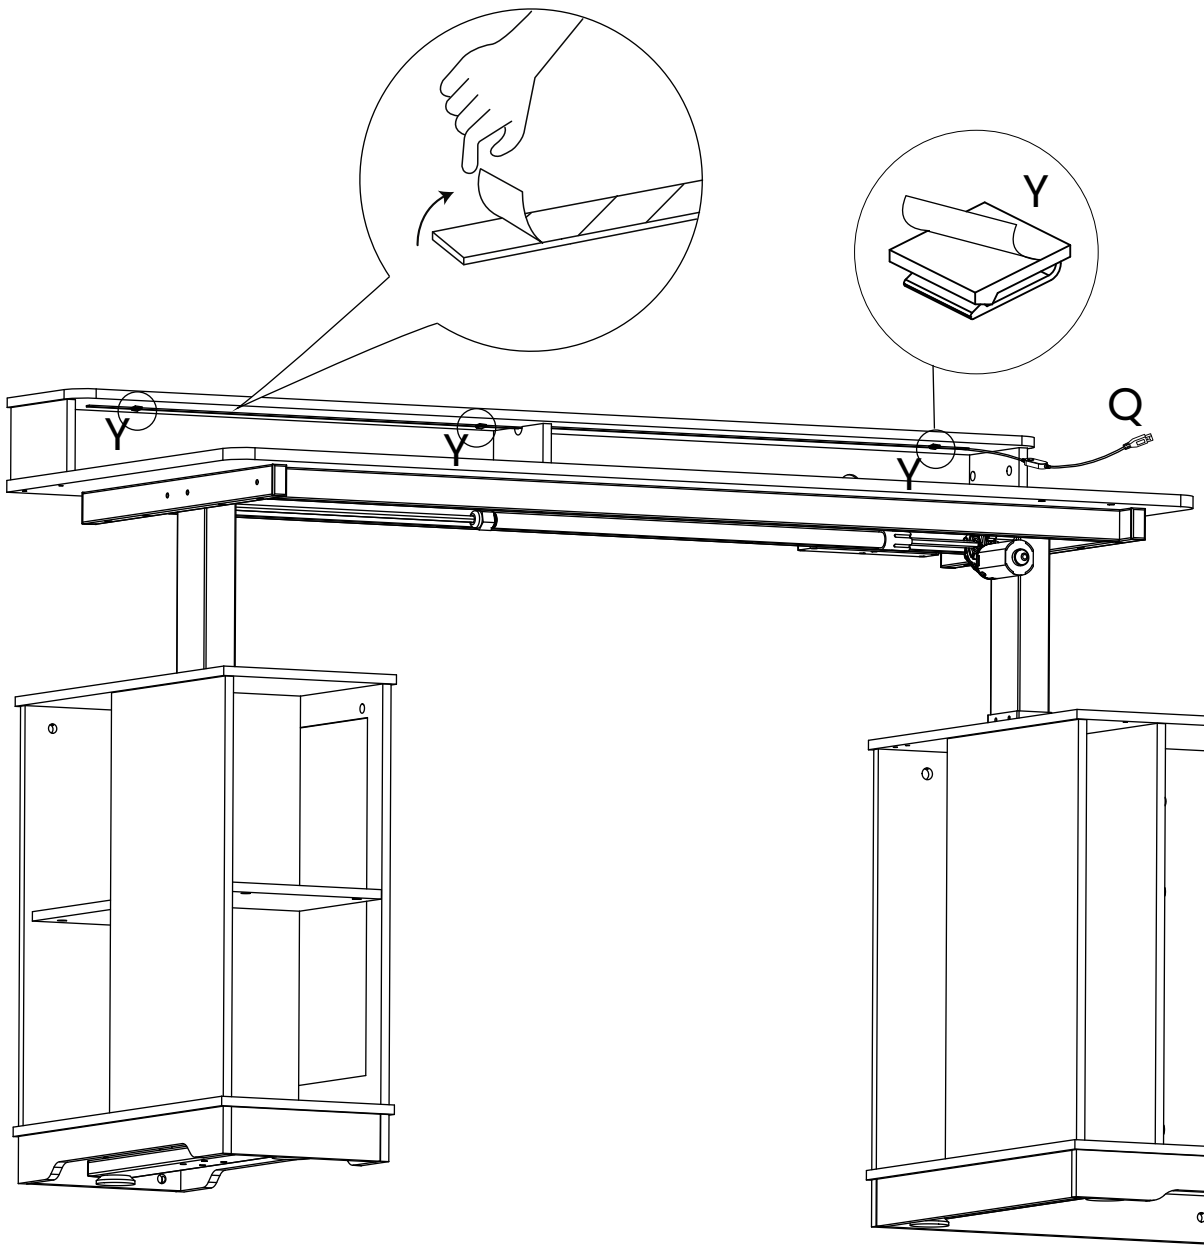


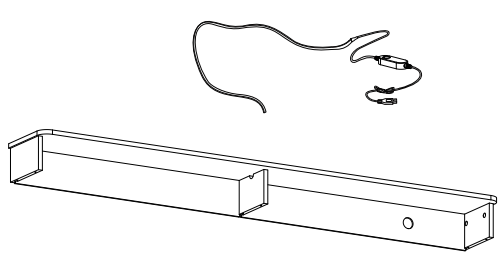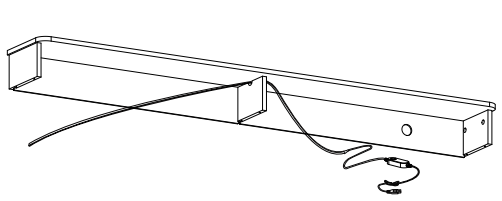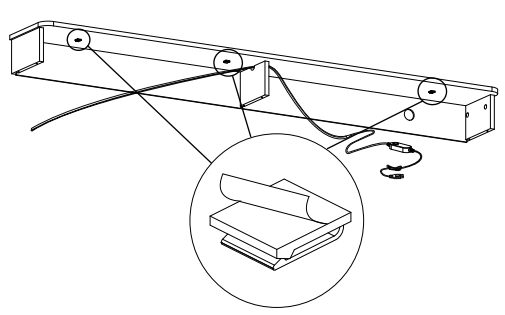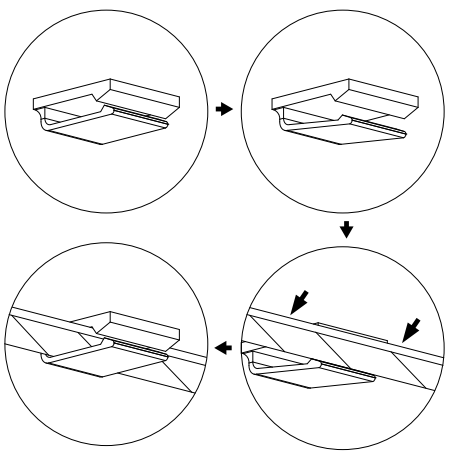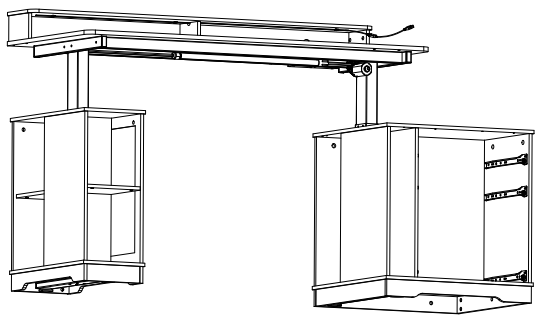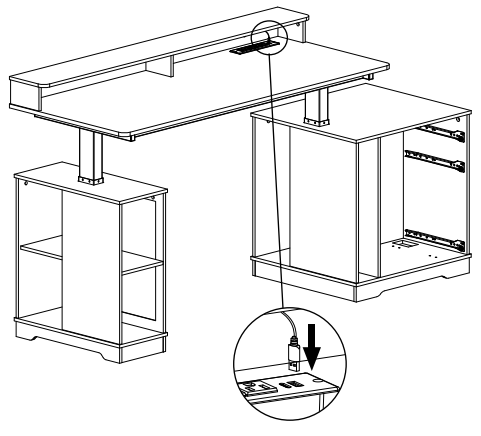1	2	3
		
4	5	6
		


Assembly Instruction

59

F x2




M4X12MM

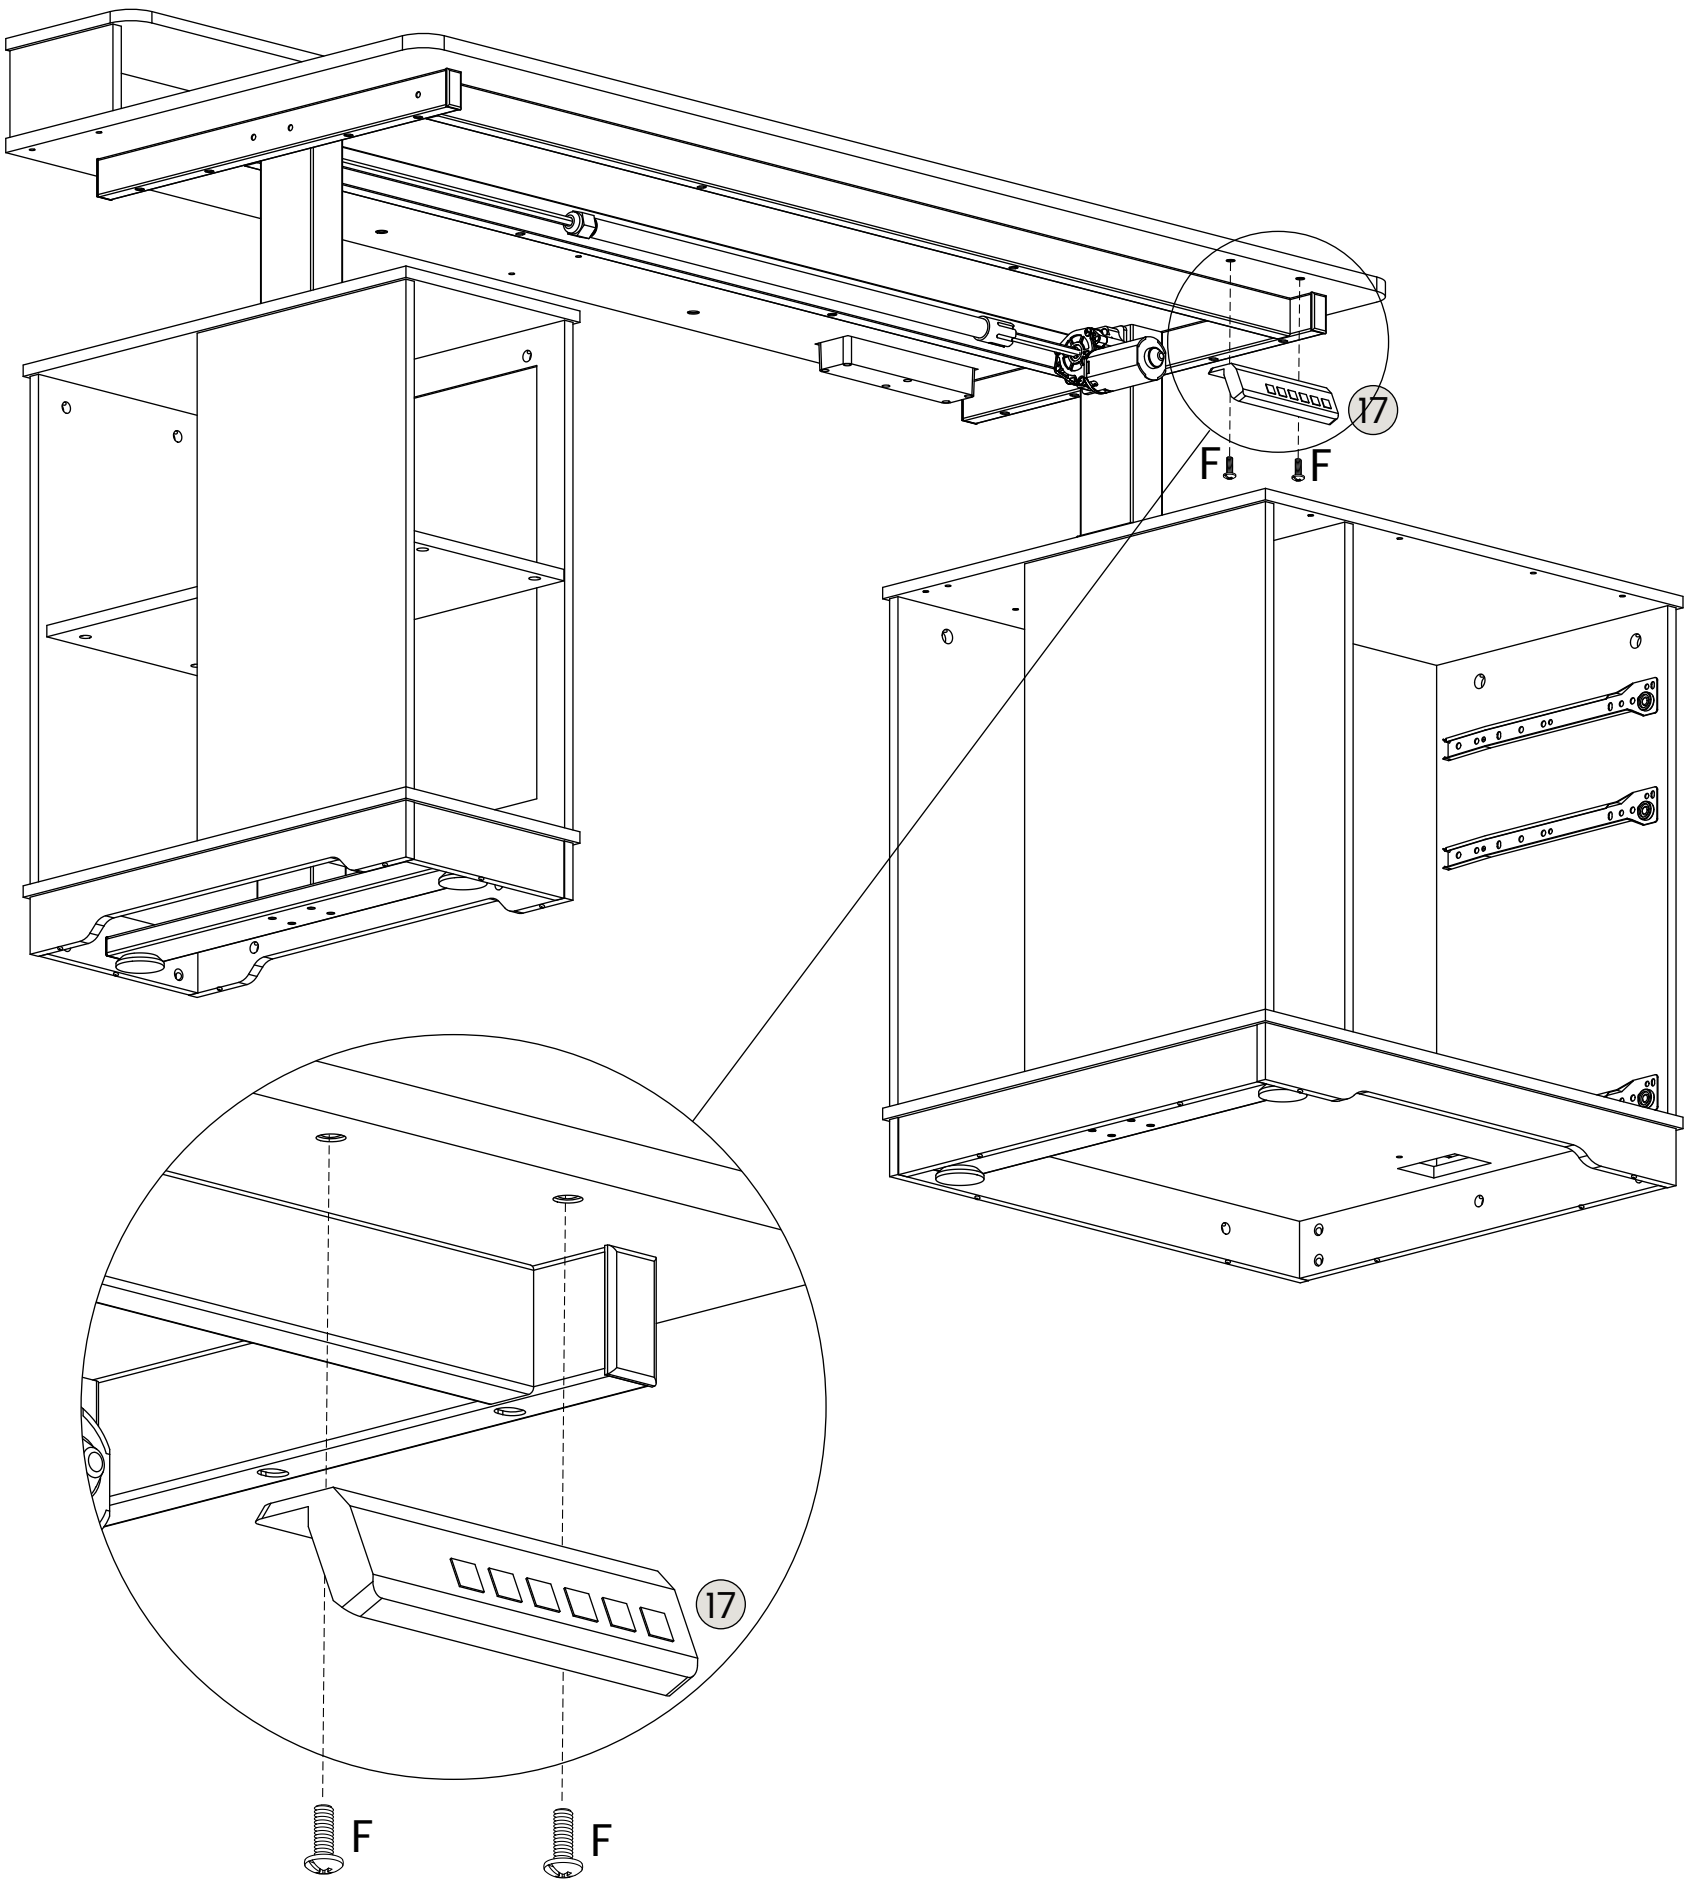



Assembly Instruction

60


W x2

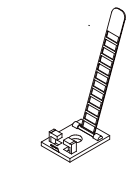

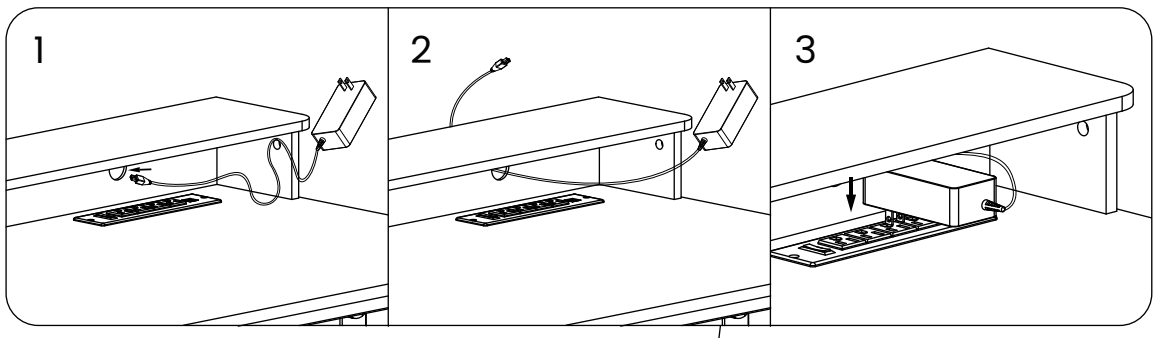


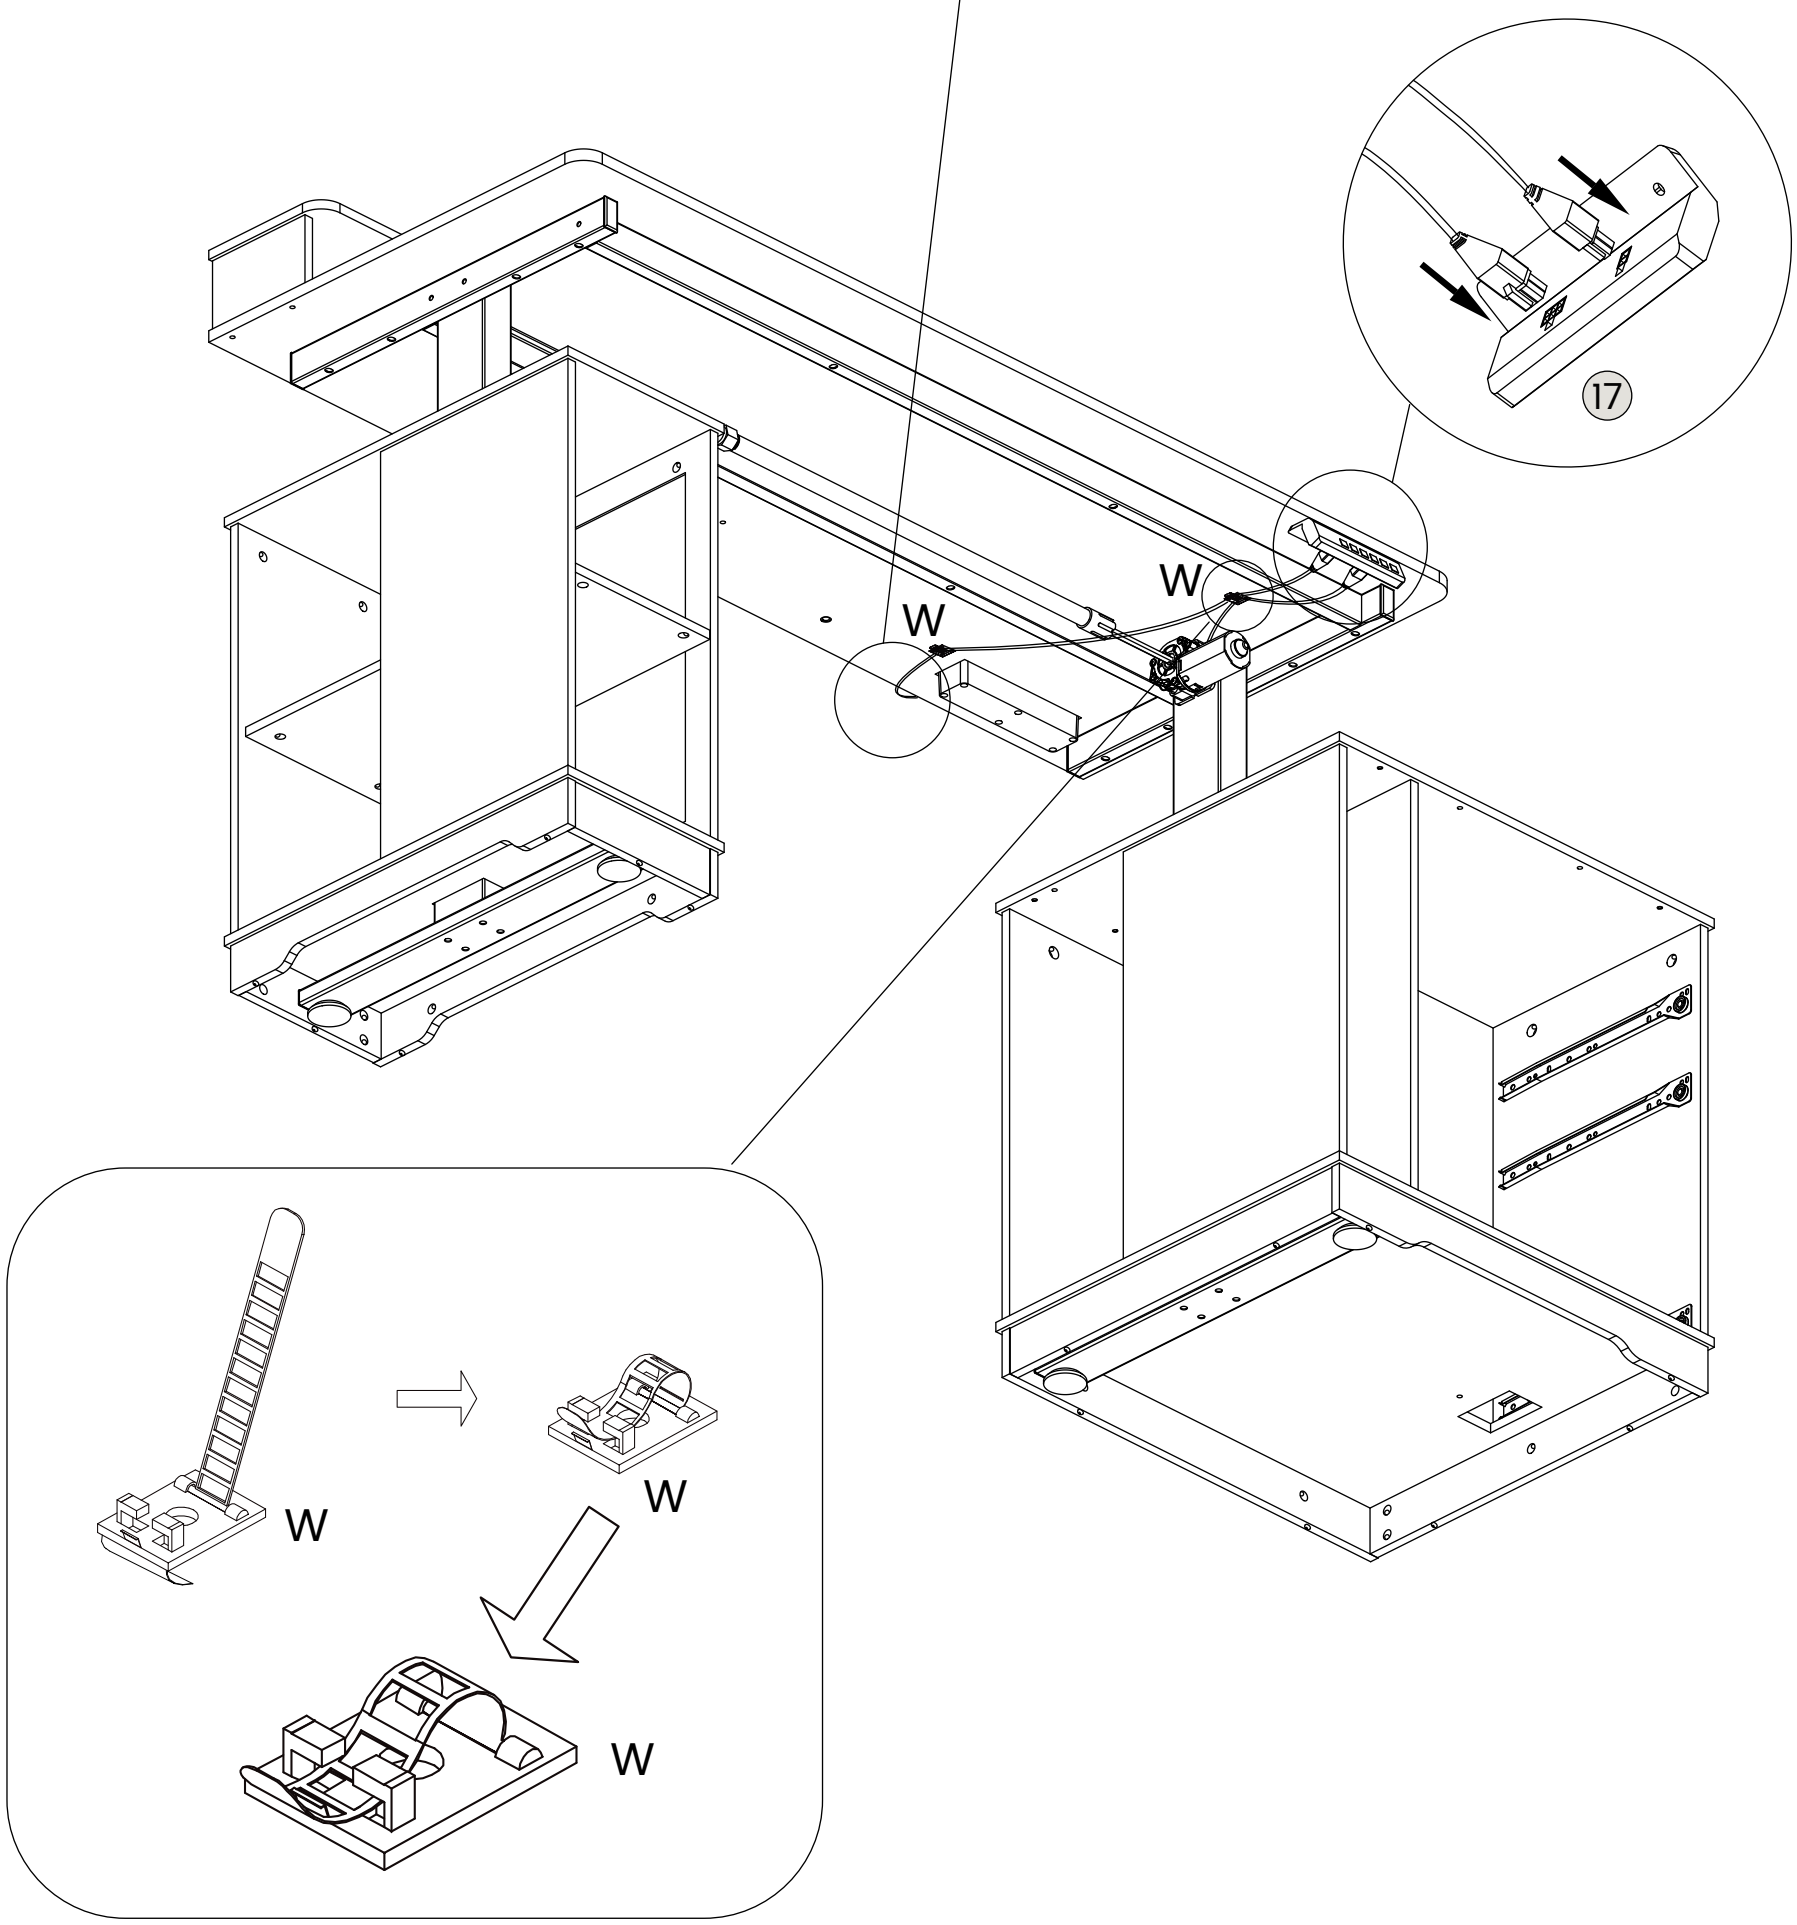


61

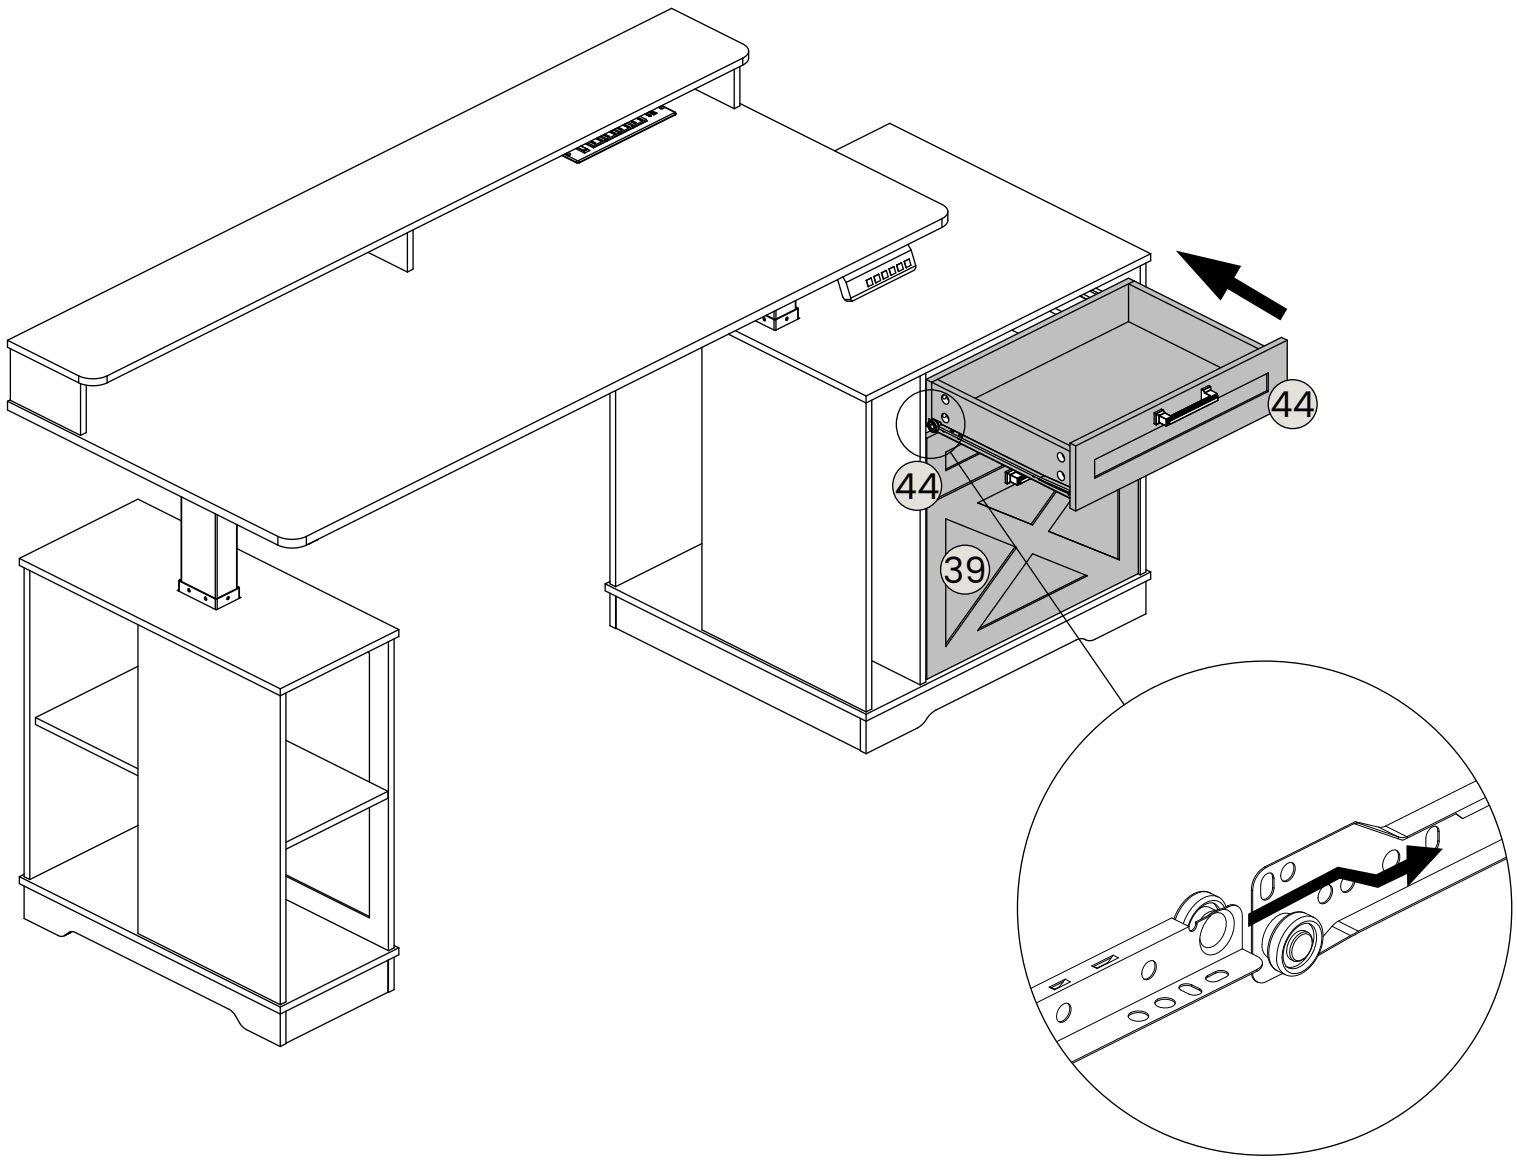

62

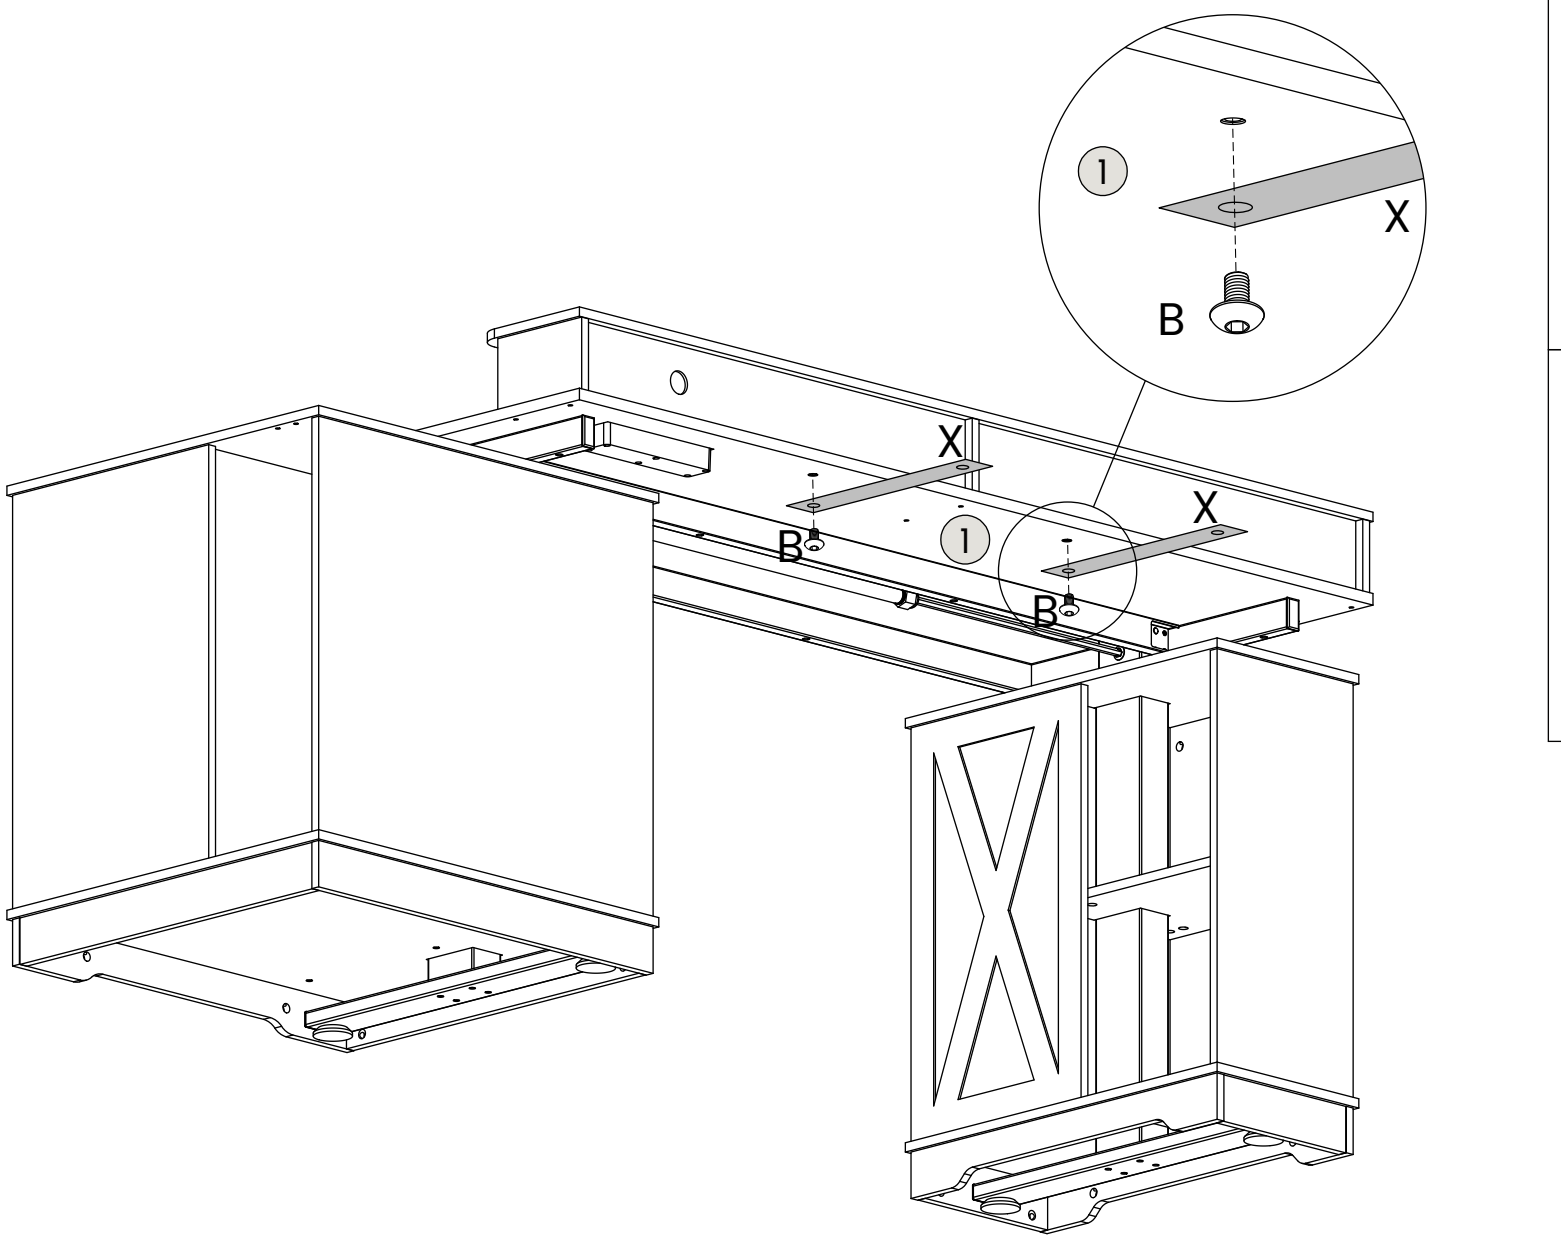


B x2



M6X10MM


X x2

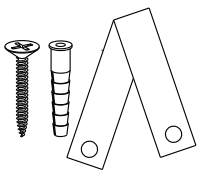



Assembly Instruction

63

X x2

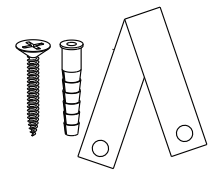


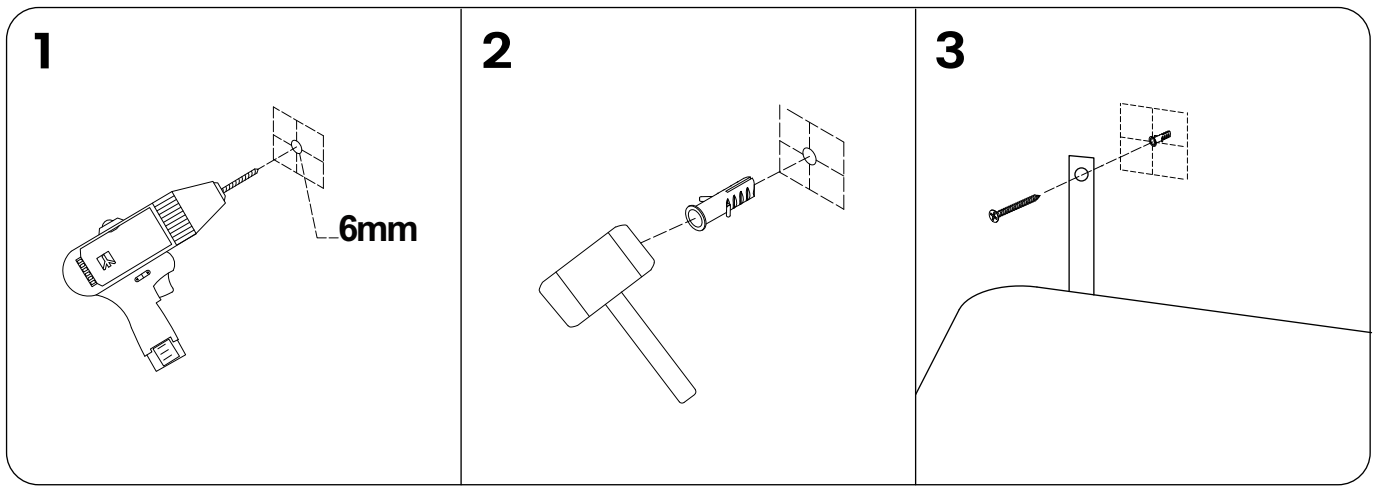

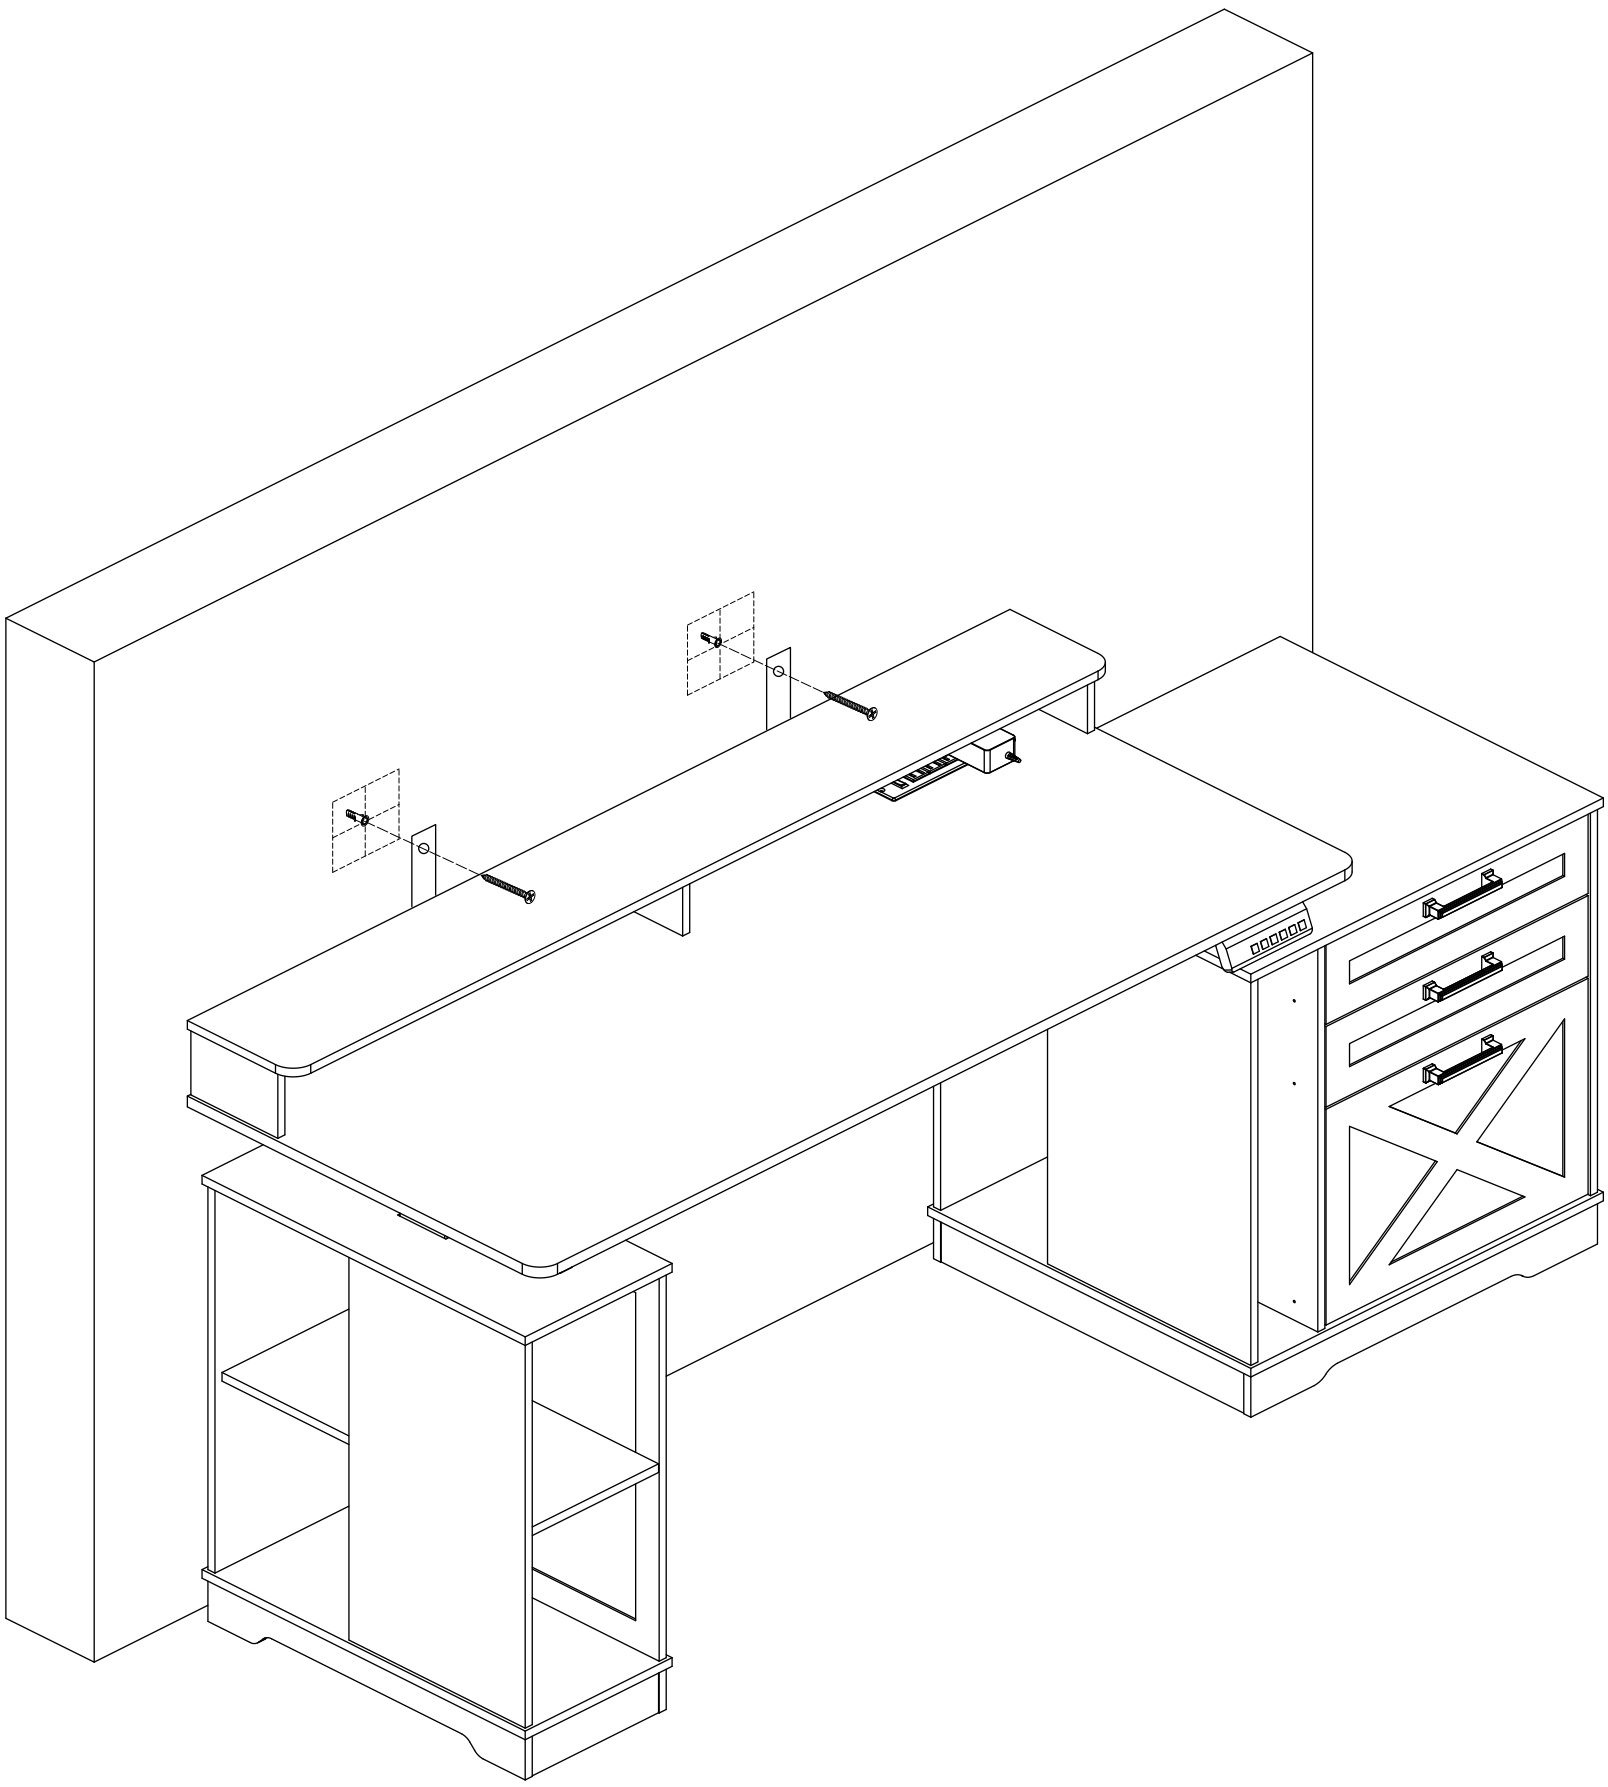


Assembly Instruction

64

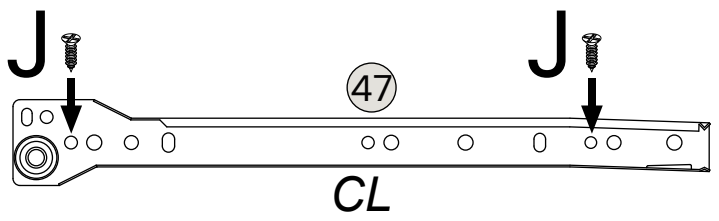



J x6



ST4X12MM


Option B:64-120

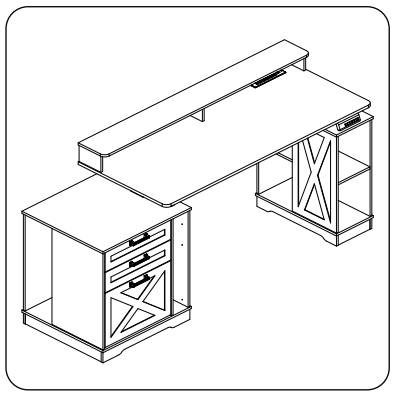

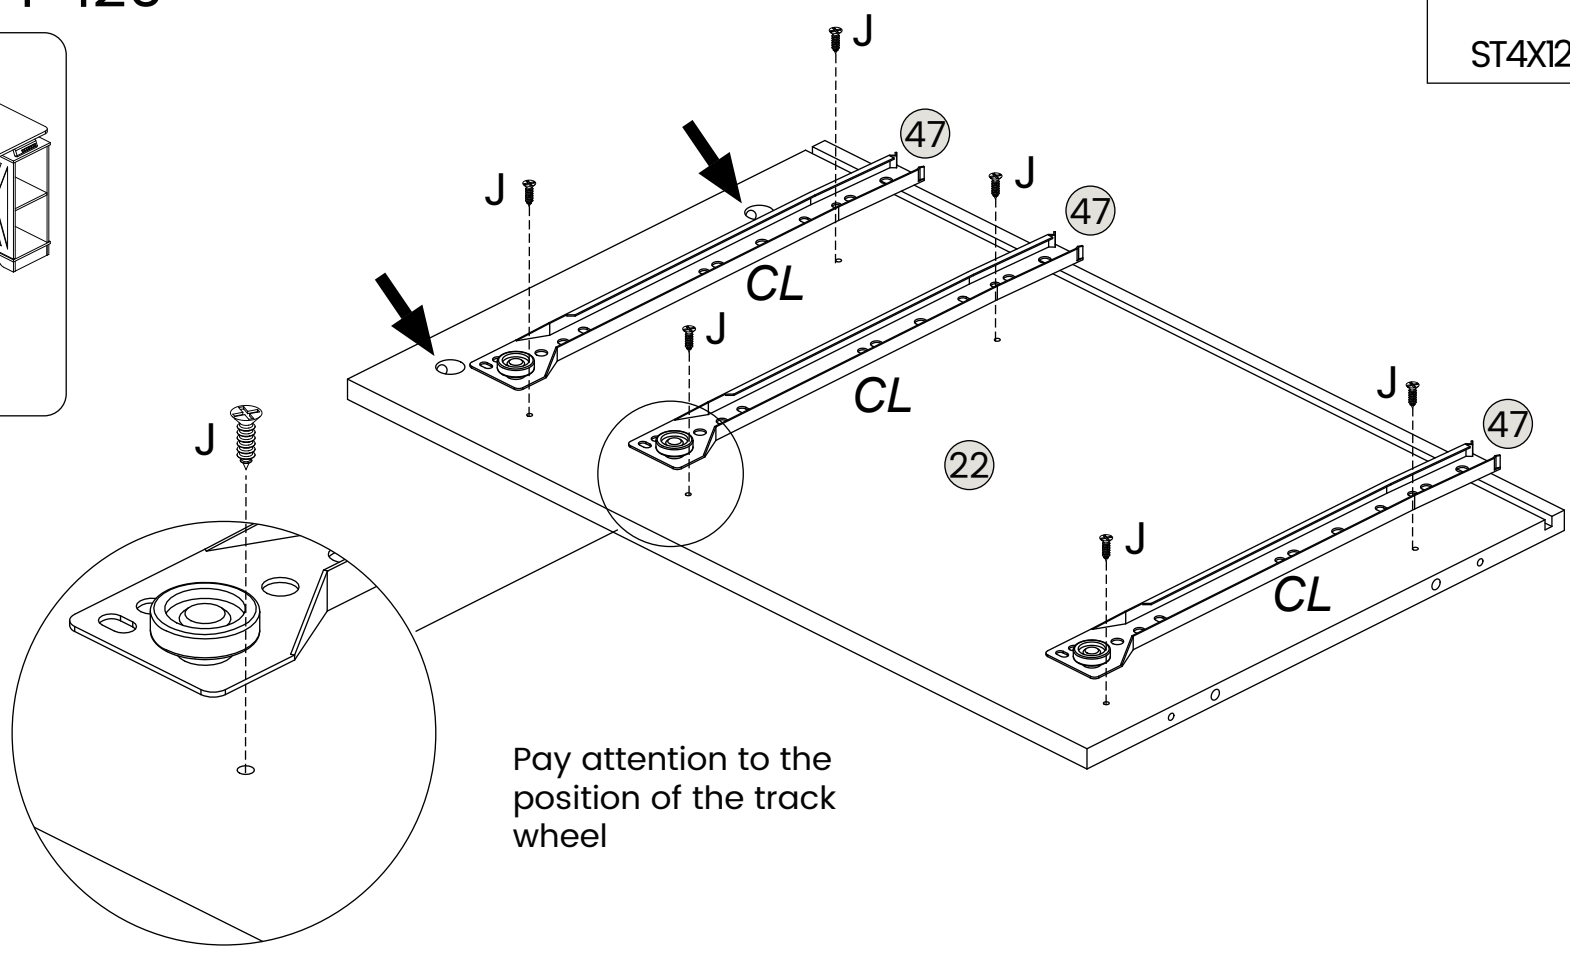

Pay attention to the position of the track wheel


65

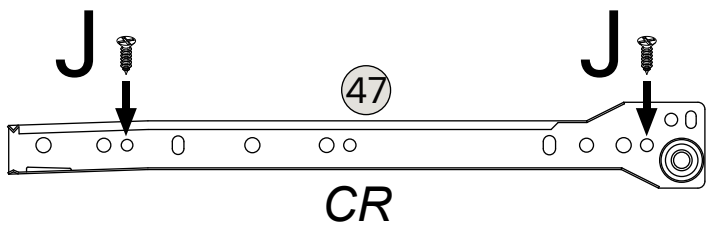

J x6



ST4X12MM

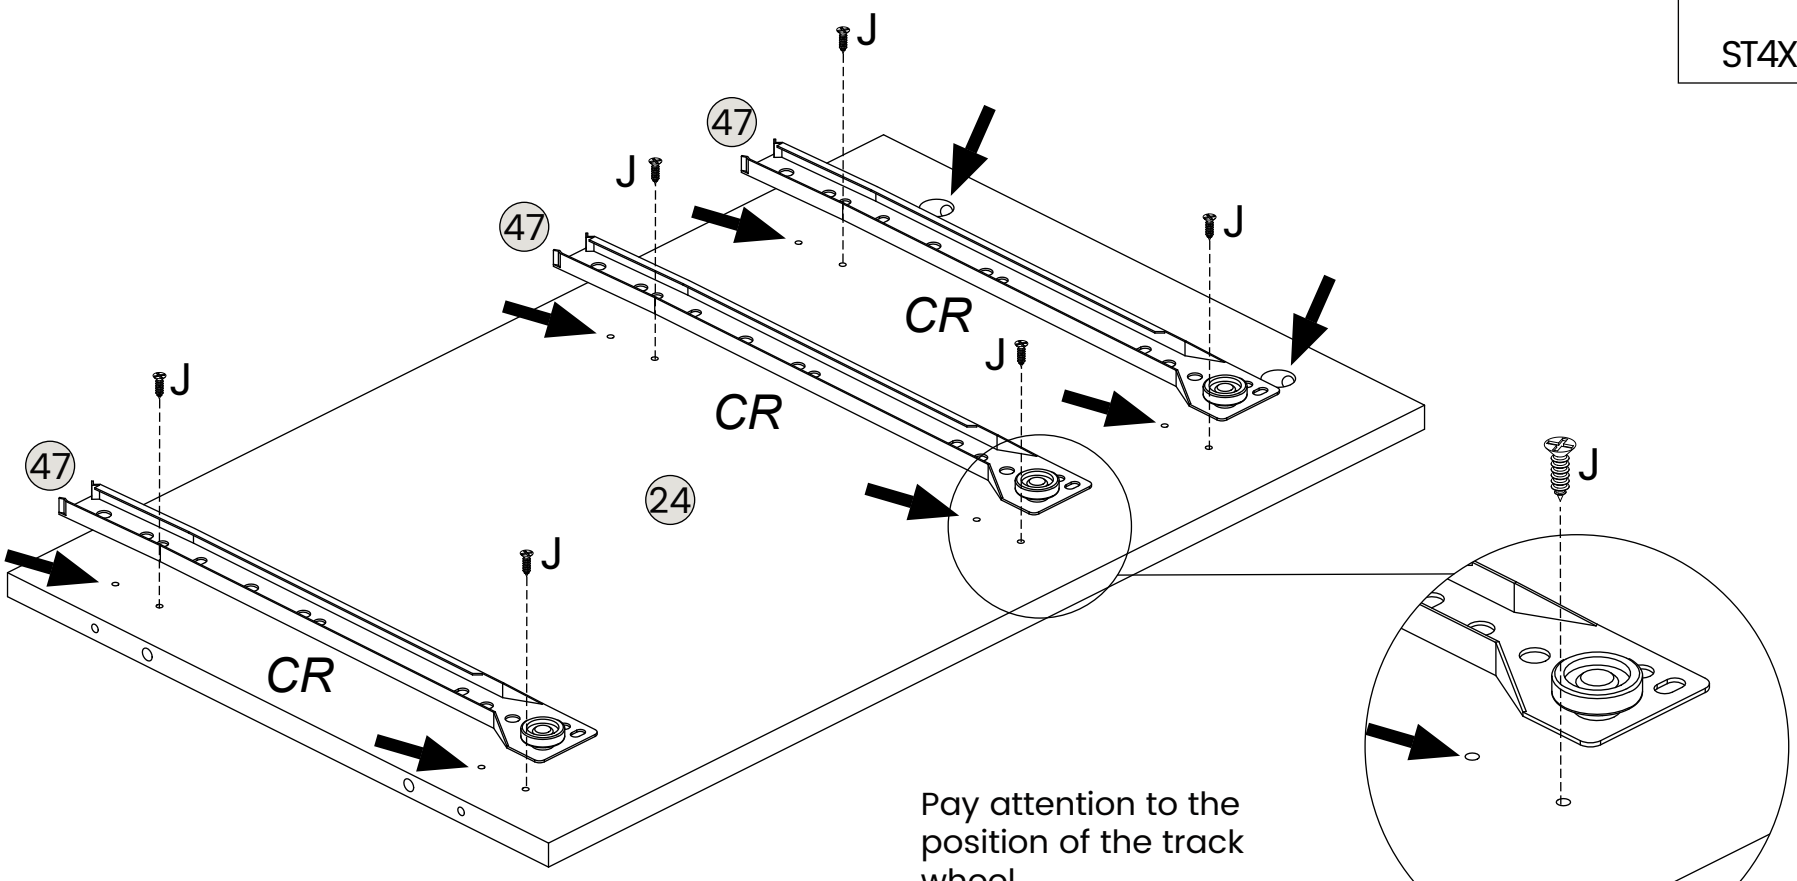



Pay attention to the position of the track wheel

Assembly Instruction

66

O x8




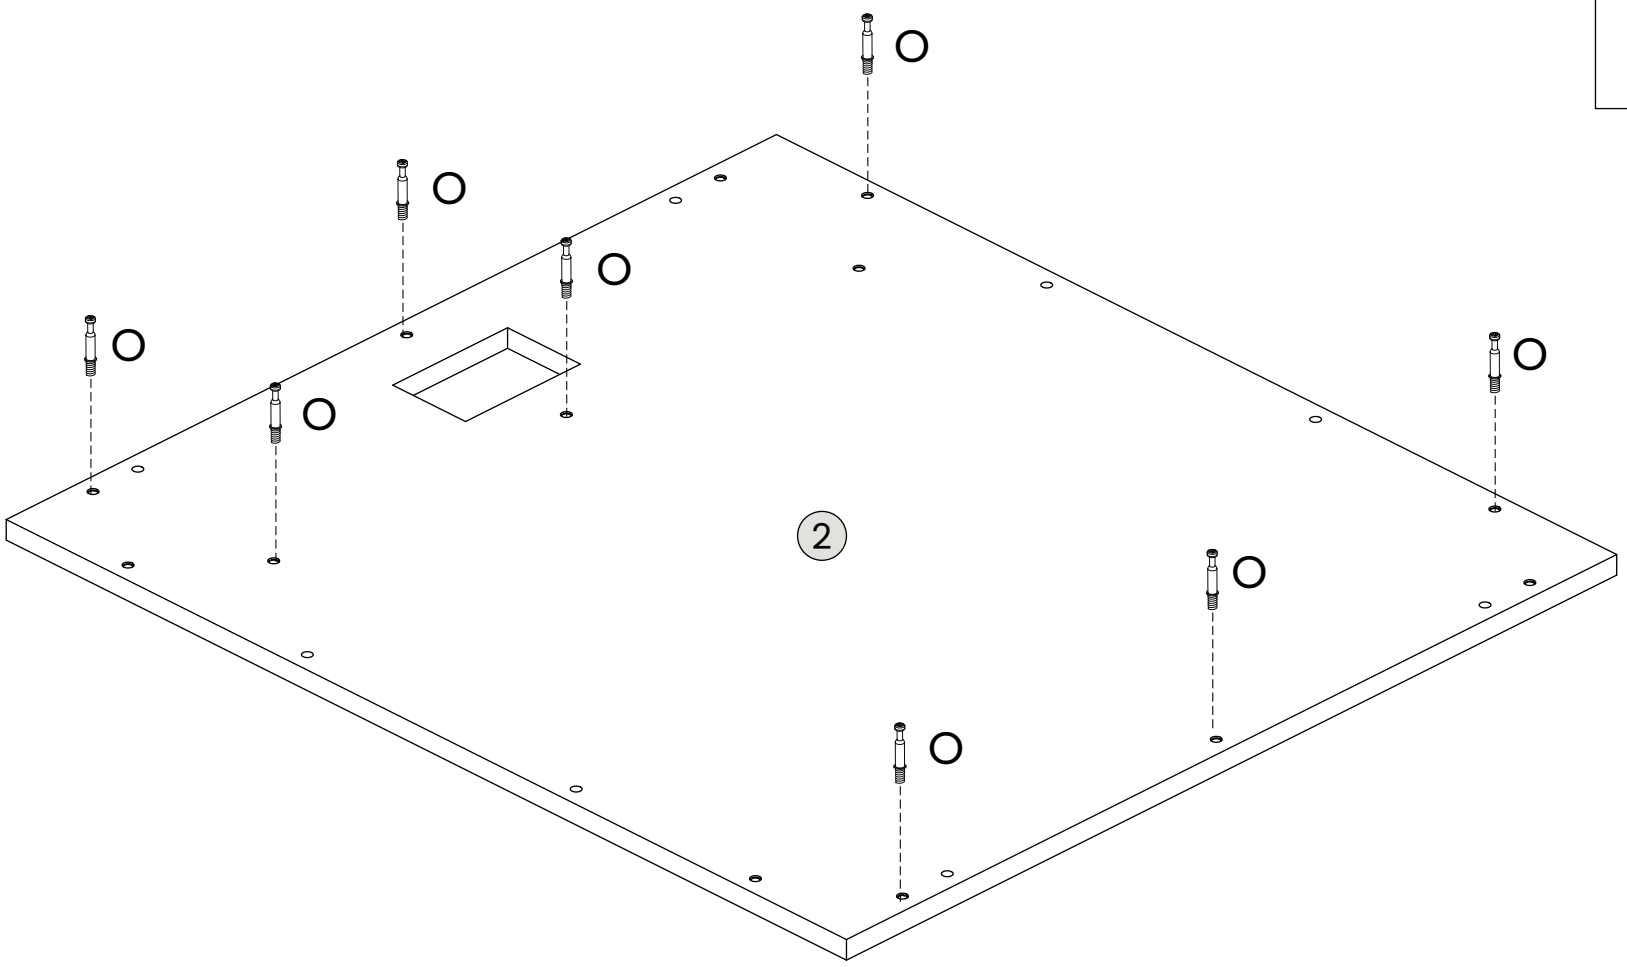


Pay attention to the hole position

Installation instructions for eccentric rod


O

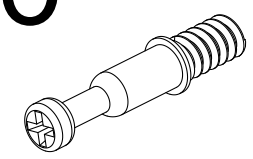


P

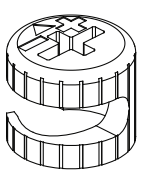


01

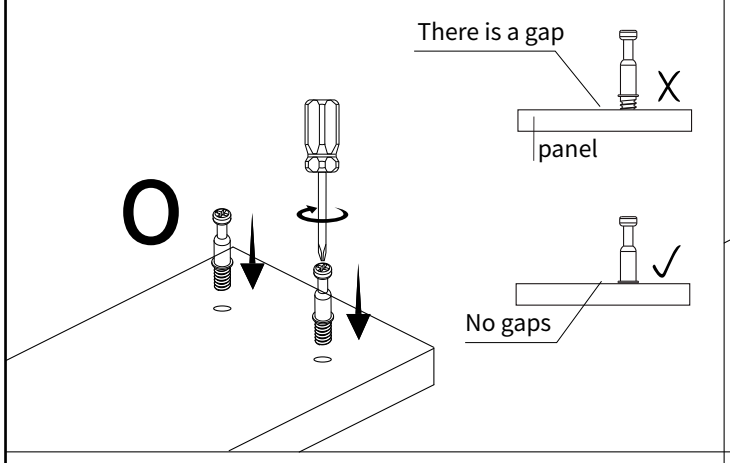


02

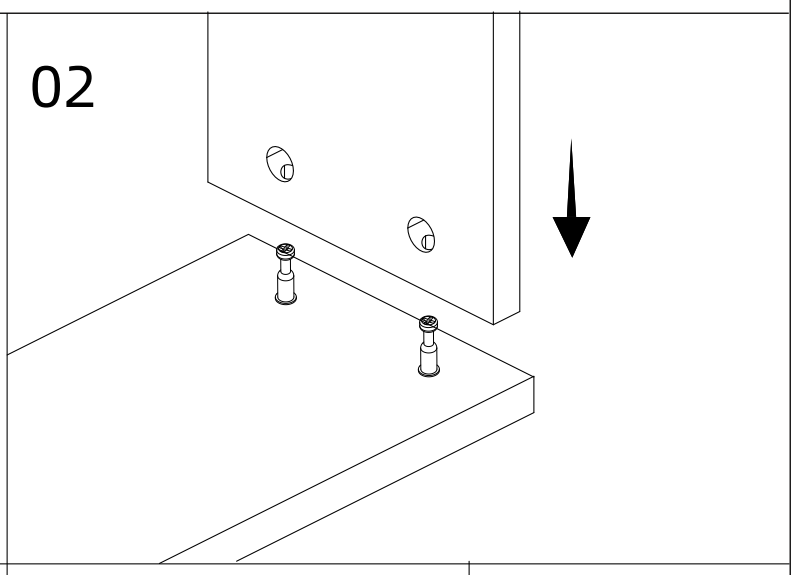

03

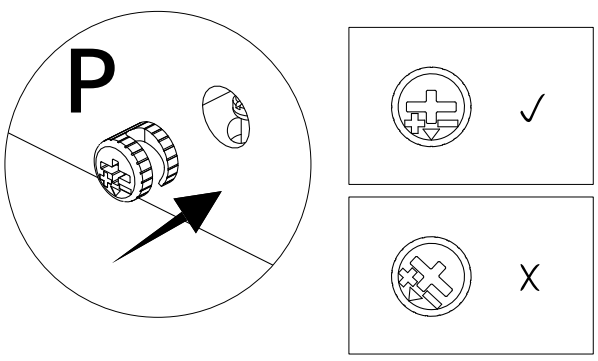


04

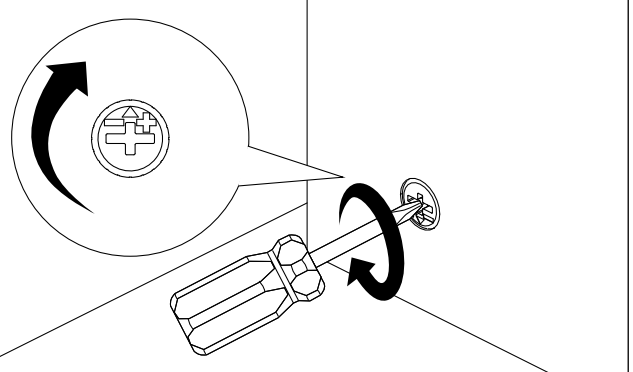

Assembly Instruction

67

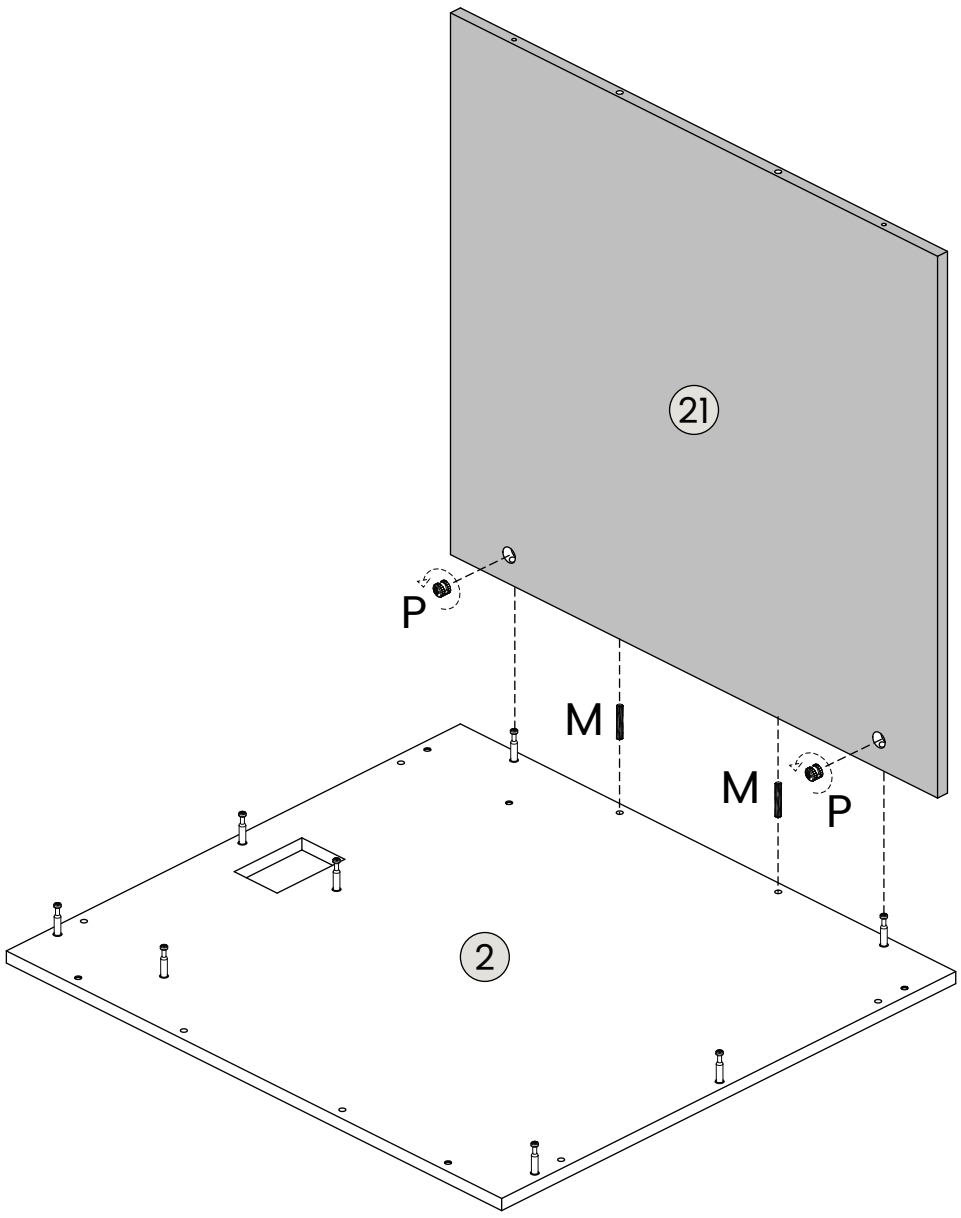

P x2




M x2




Ø6x30MM

68

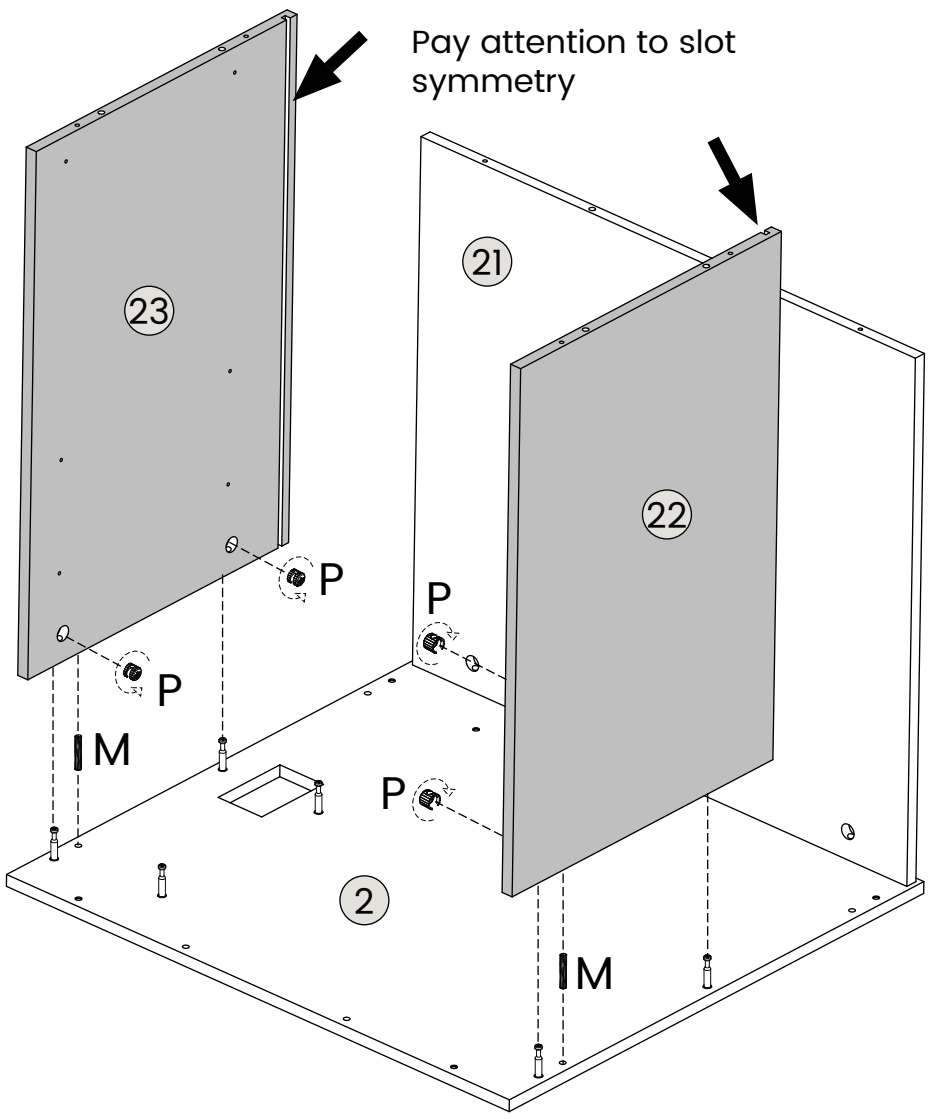

P x4



M x2




Ø6x30MM


P x2



69

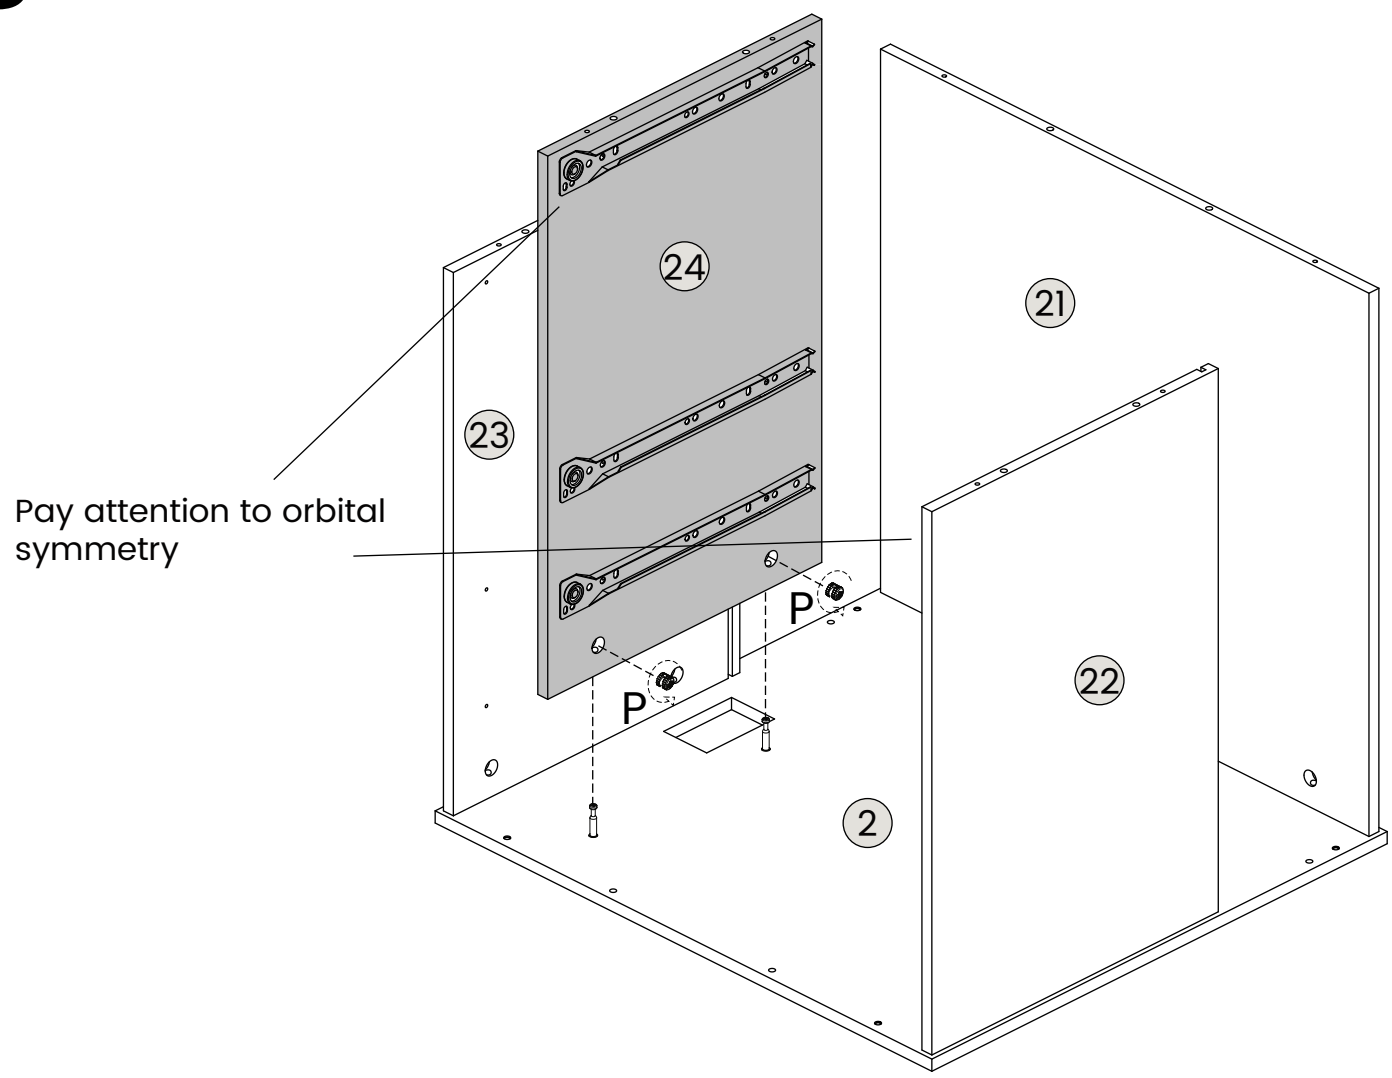

24
21
23
Pay attention to orbital symmetry
P
P
22
2

70

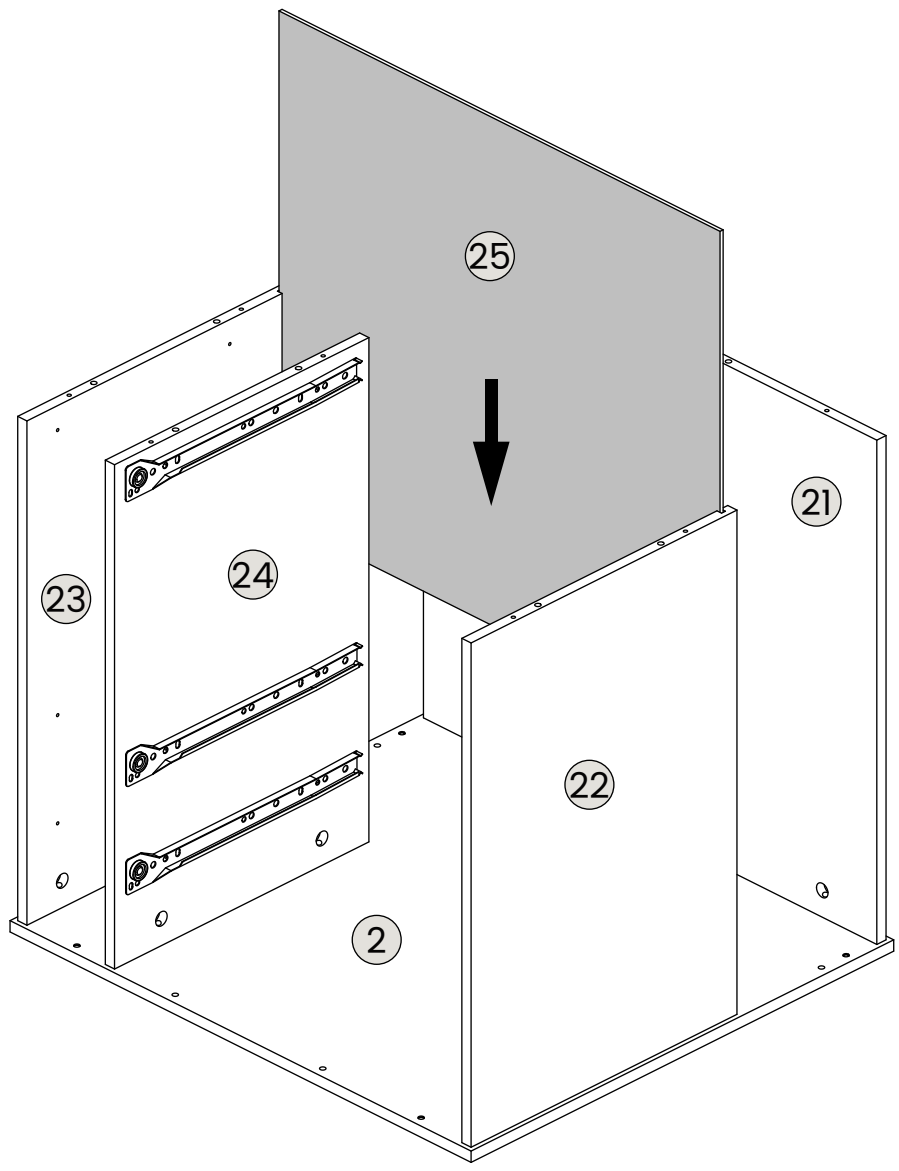

25
21
24
23
22
2

Assembly Instruction

71

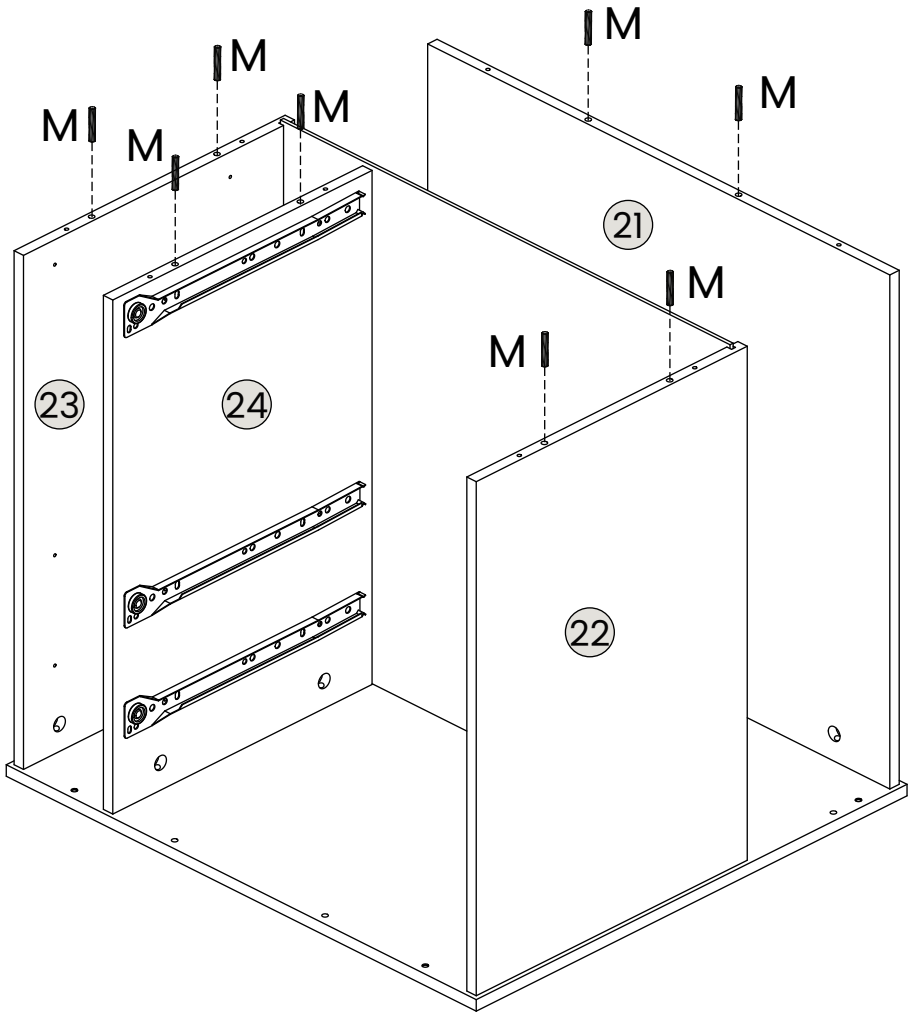


M x8




Ø6x30MM


72

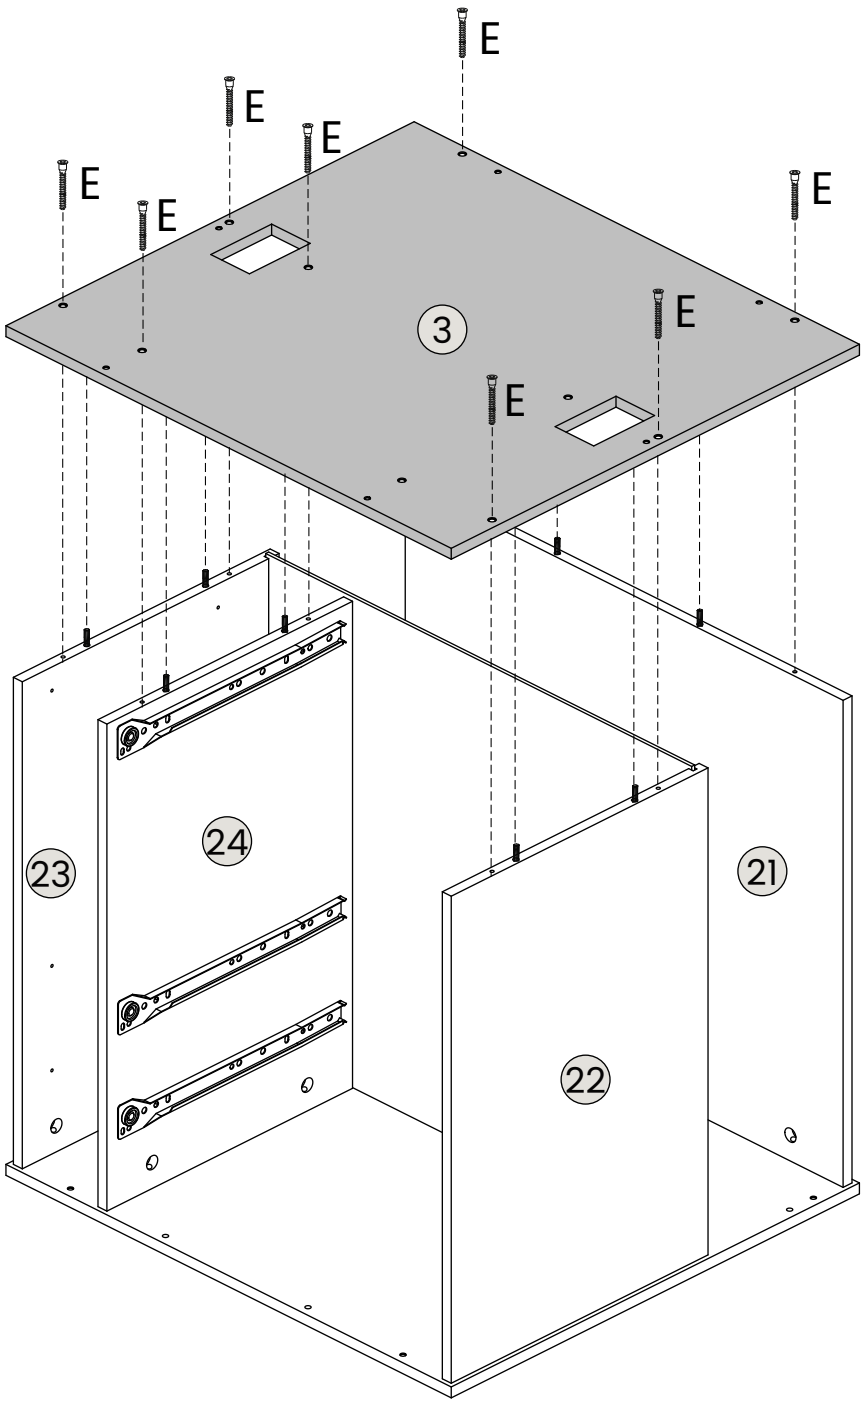

E x8

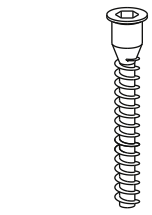


ST5X40MM

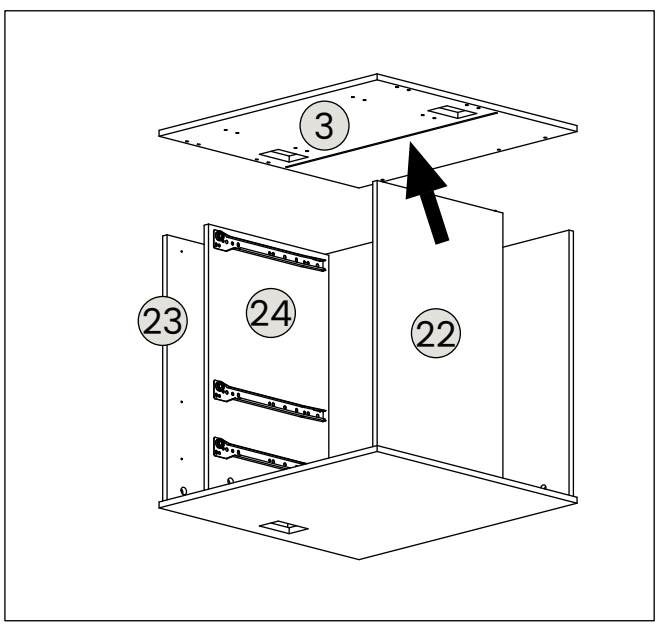

Assembly Instruction

73


Pay attention to the hole position

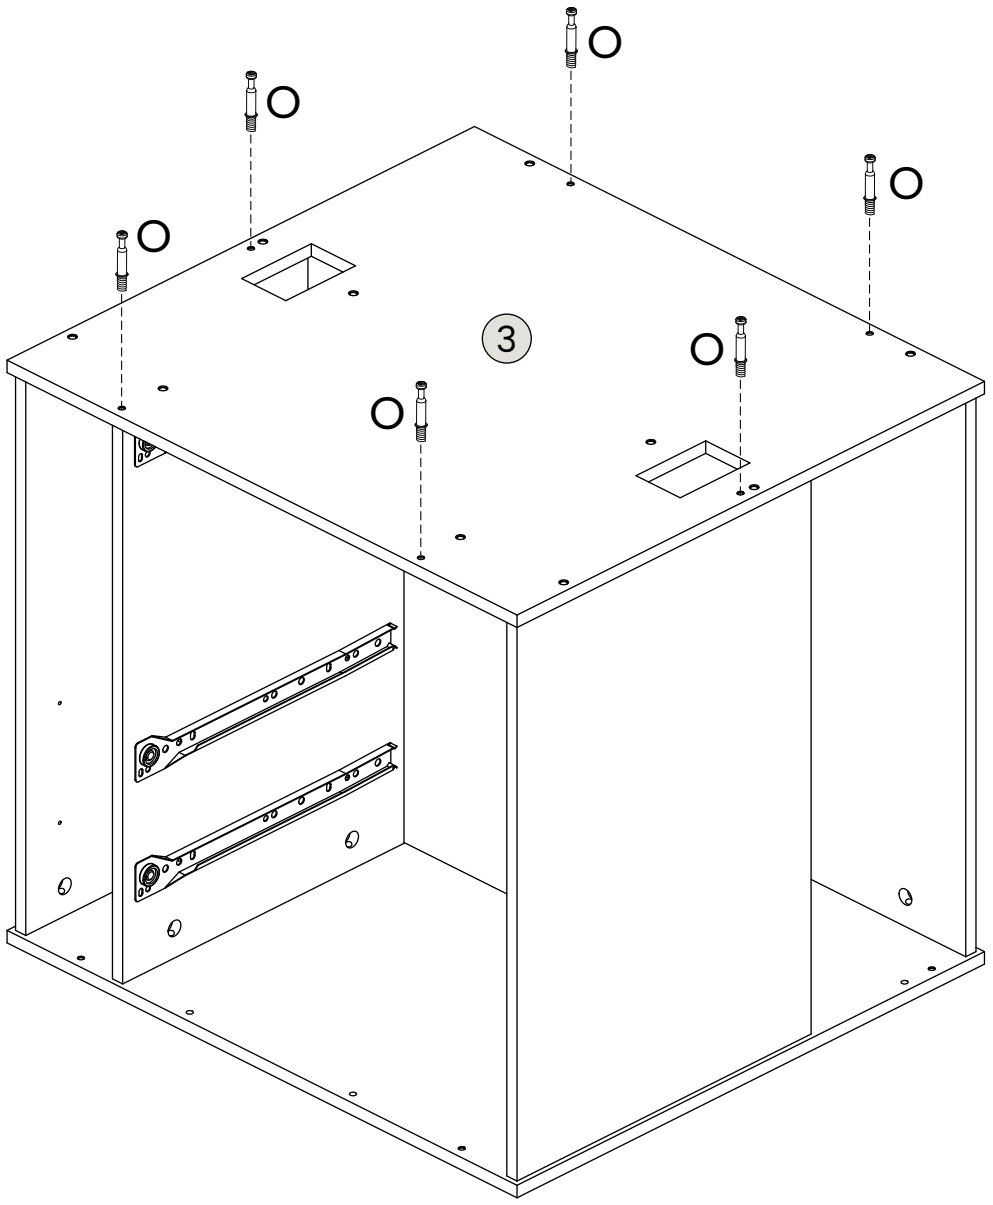


O x6



74

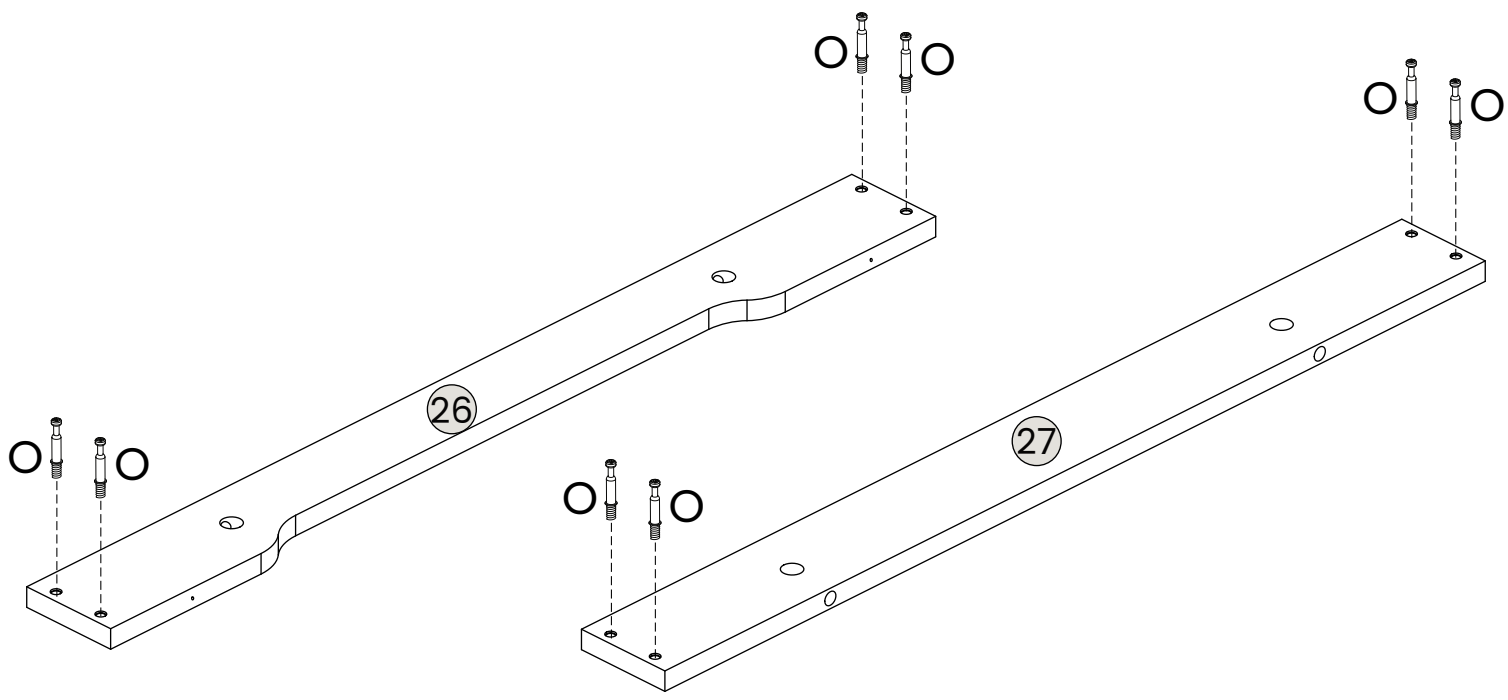


O x8



Assembly Instruction

75

P x8

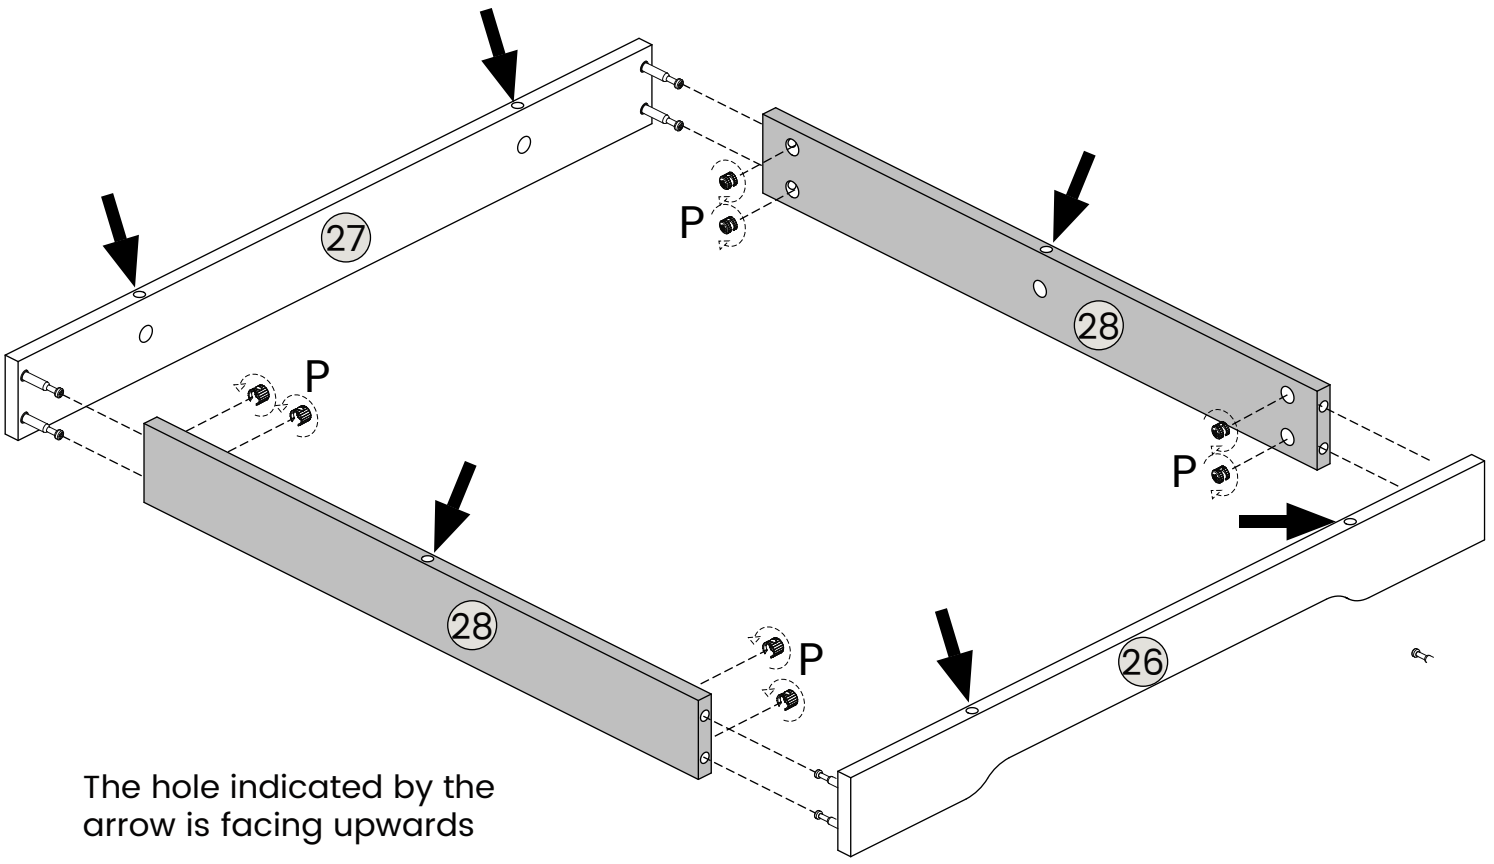


The hole indicated by the arrow is facing upwards

76

P x6


Pay attention to the position of the design board

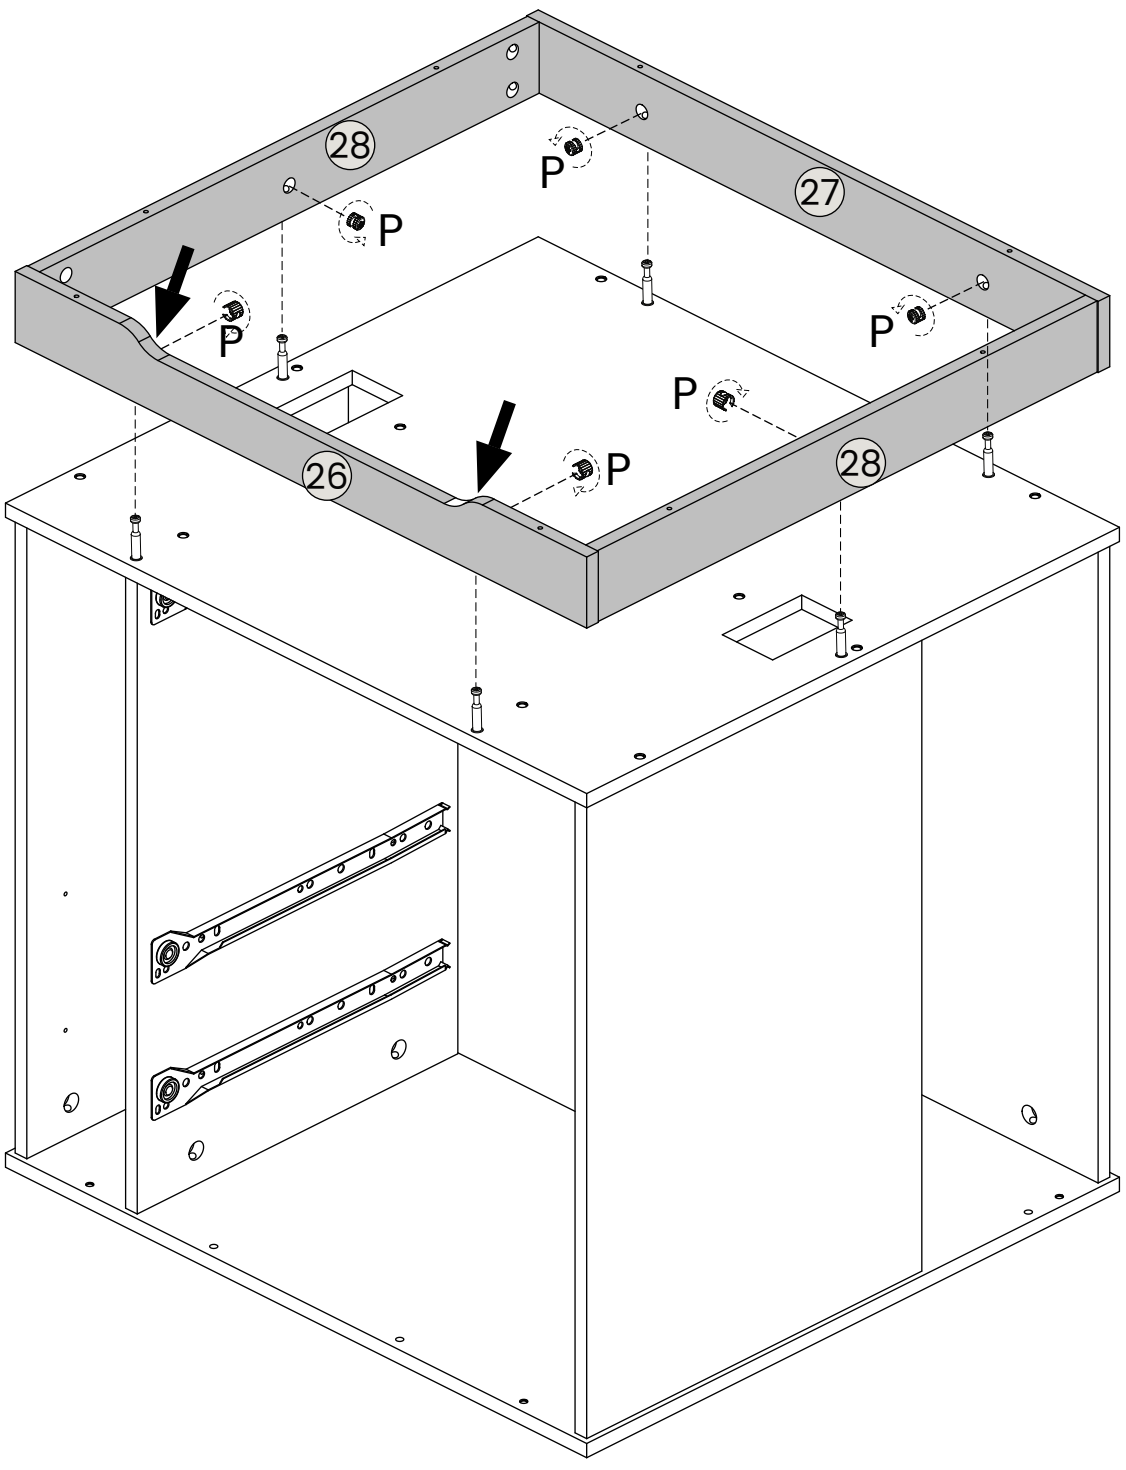



Assembly Instruction

77

Vx8

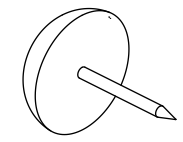

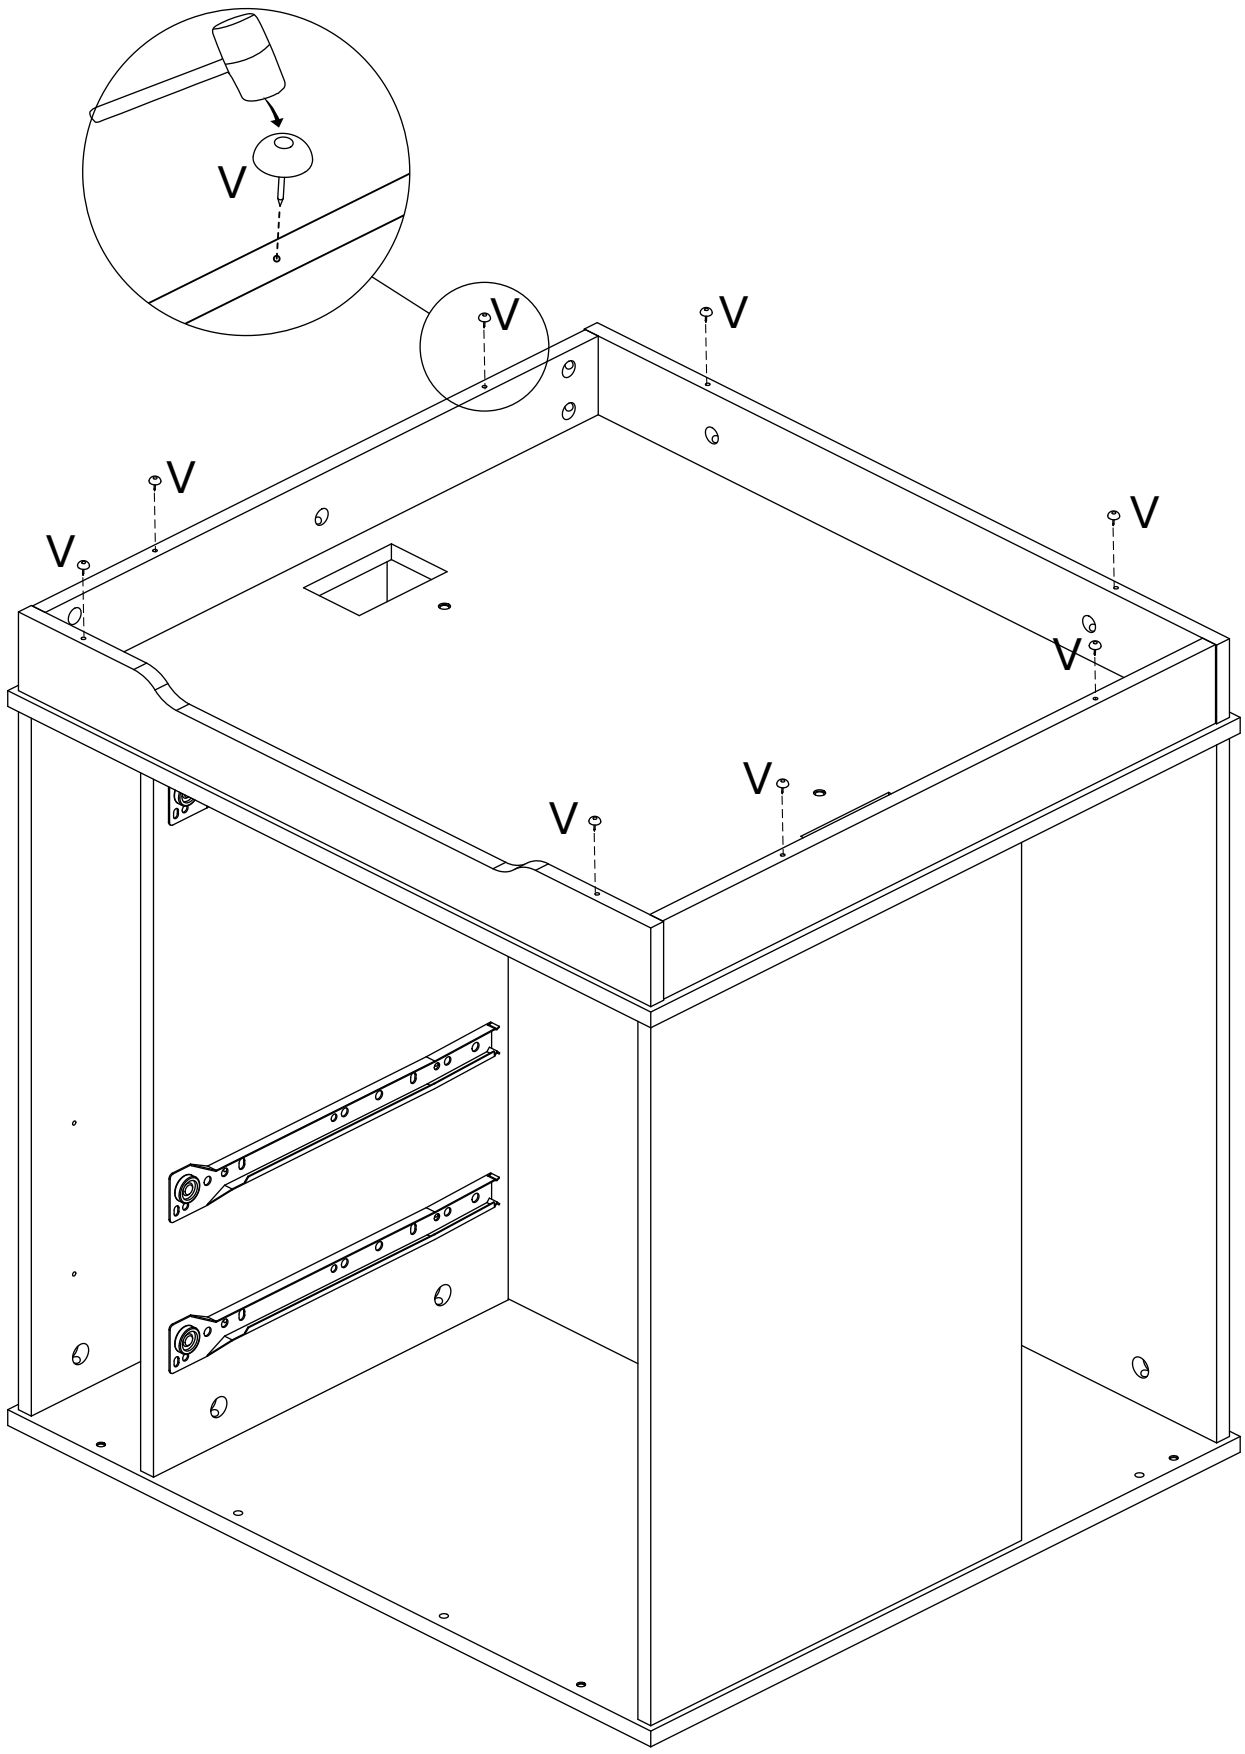


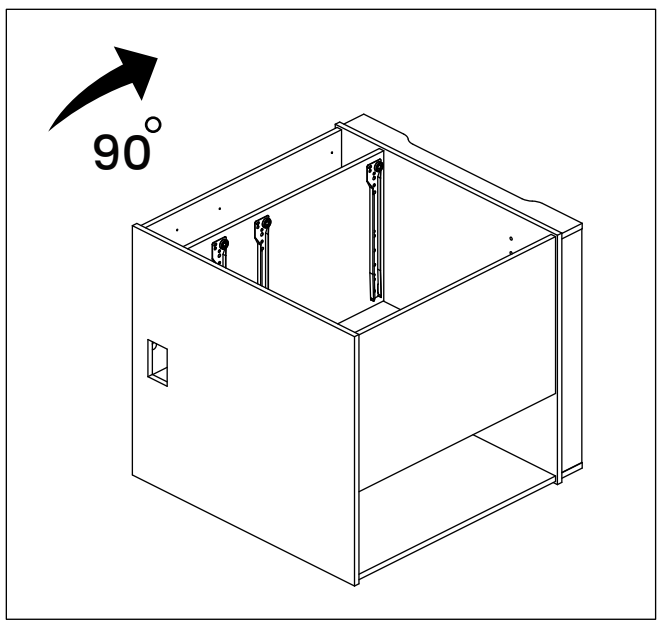

Assembly Instruction


78

E x2




ST5X40MM

Pay attention to the direction of the hole indicated by the arrow

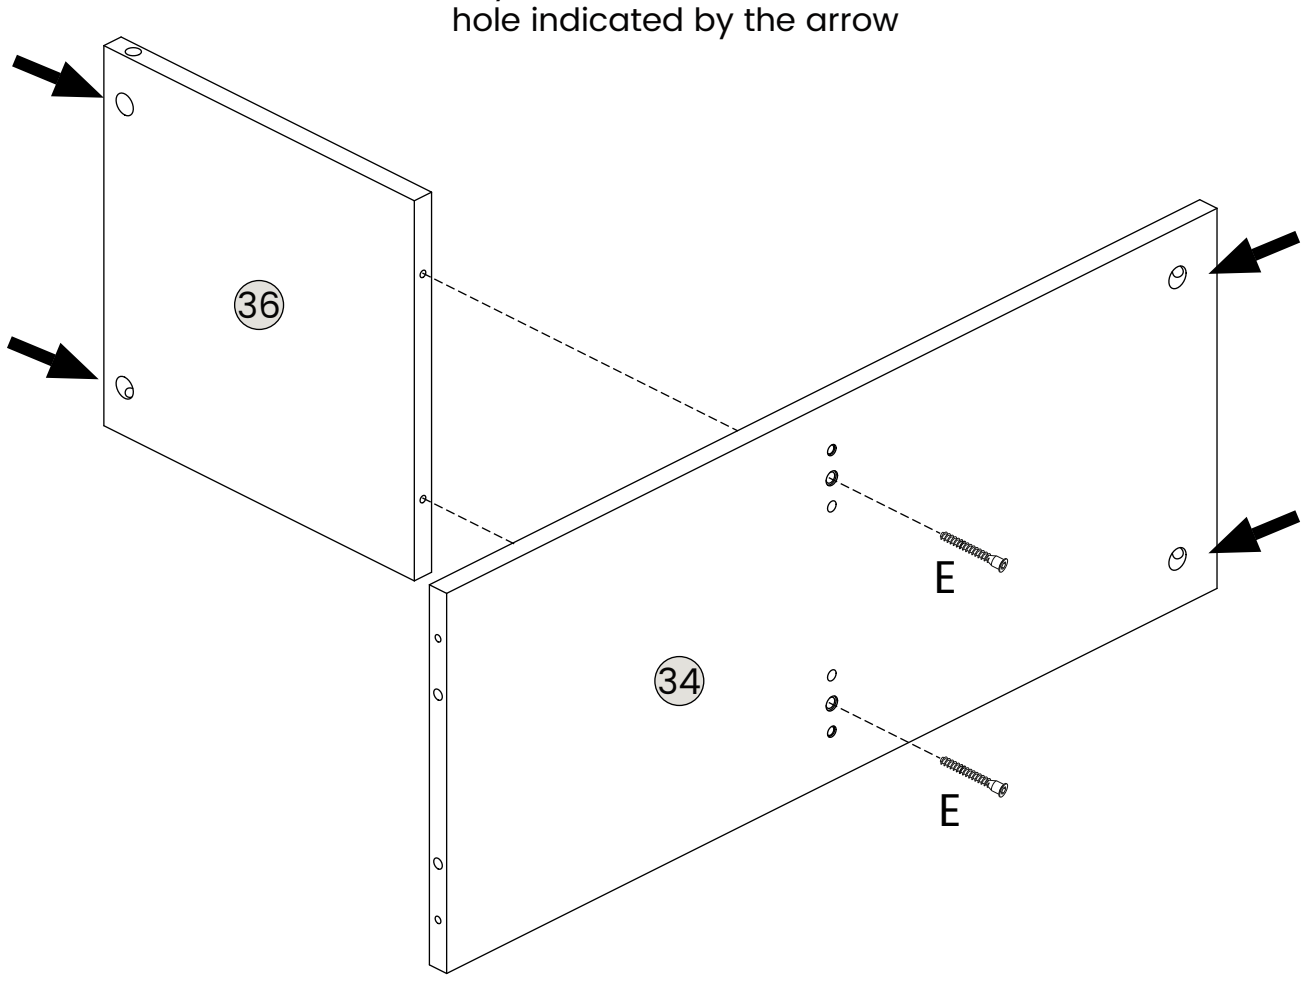

79


O x4

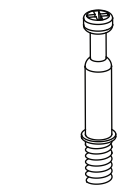


Assembly Instruction


80

Pay attention to the direction of the hole indicated by the arrow

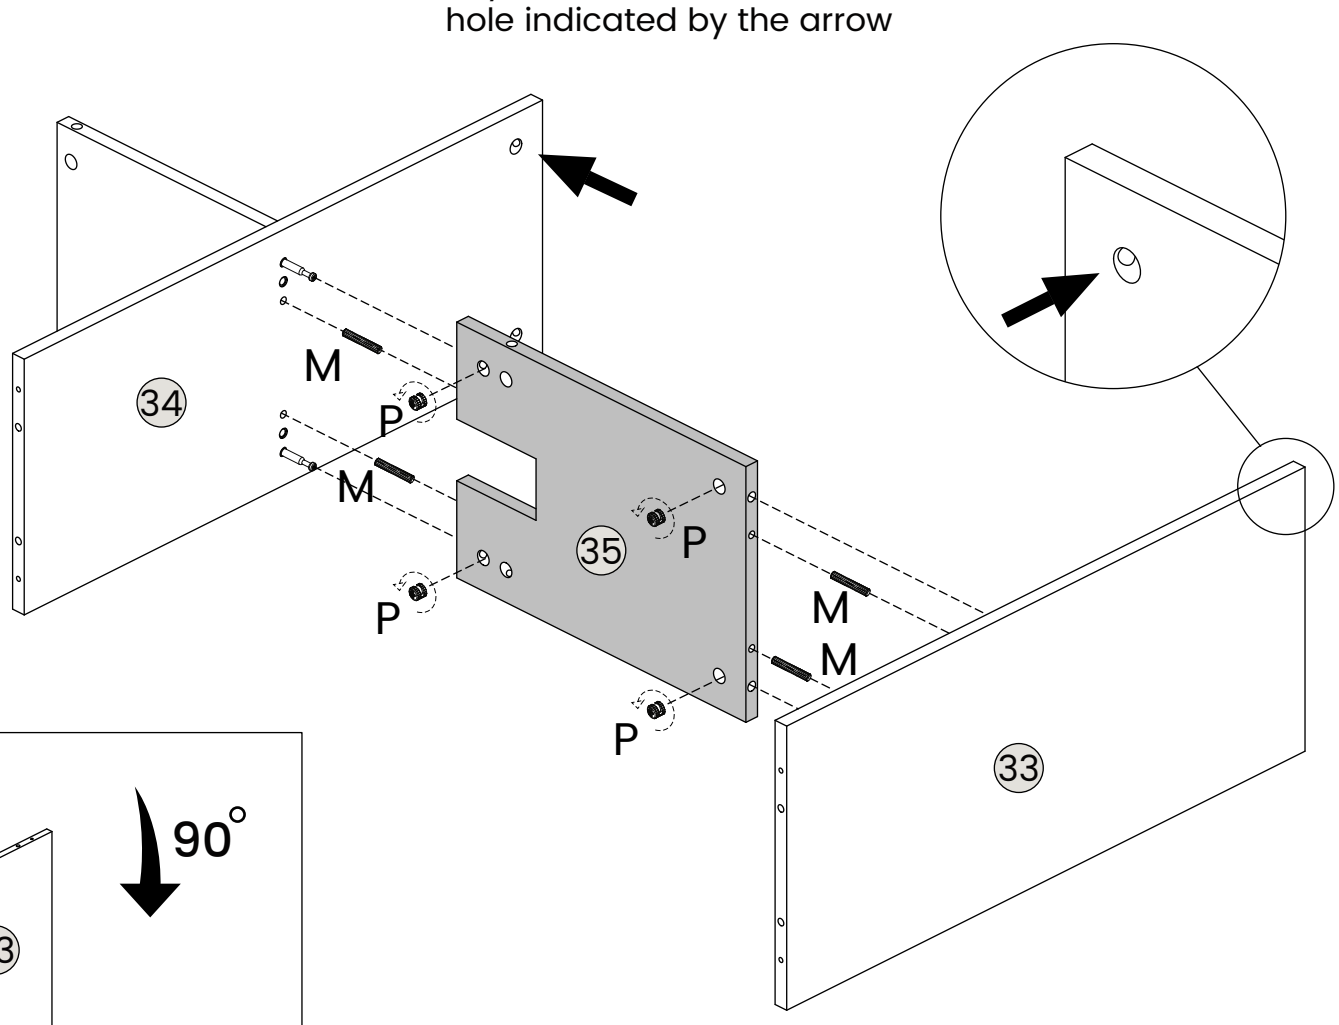

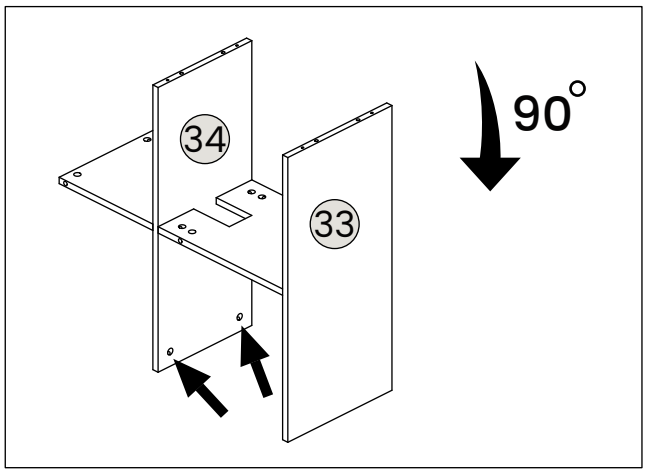

P x4




M x4




Ø6x30MM

81

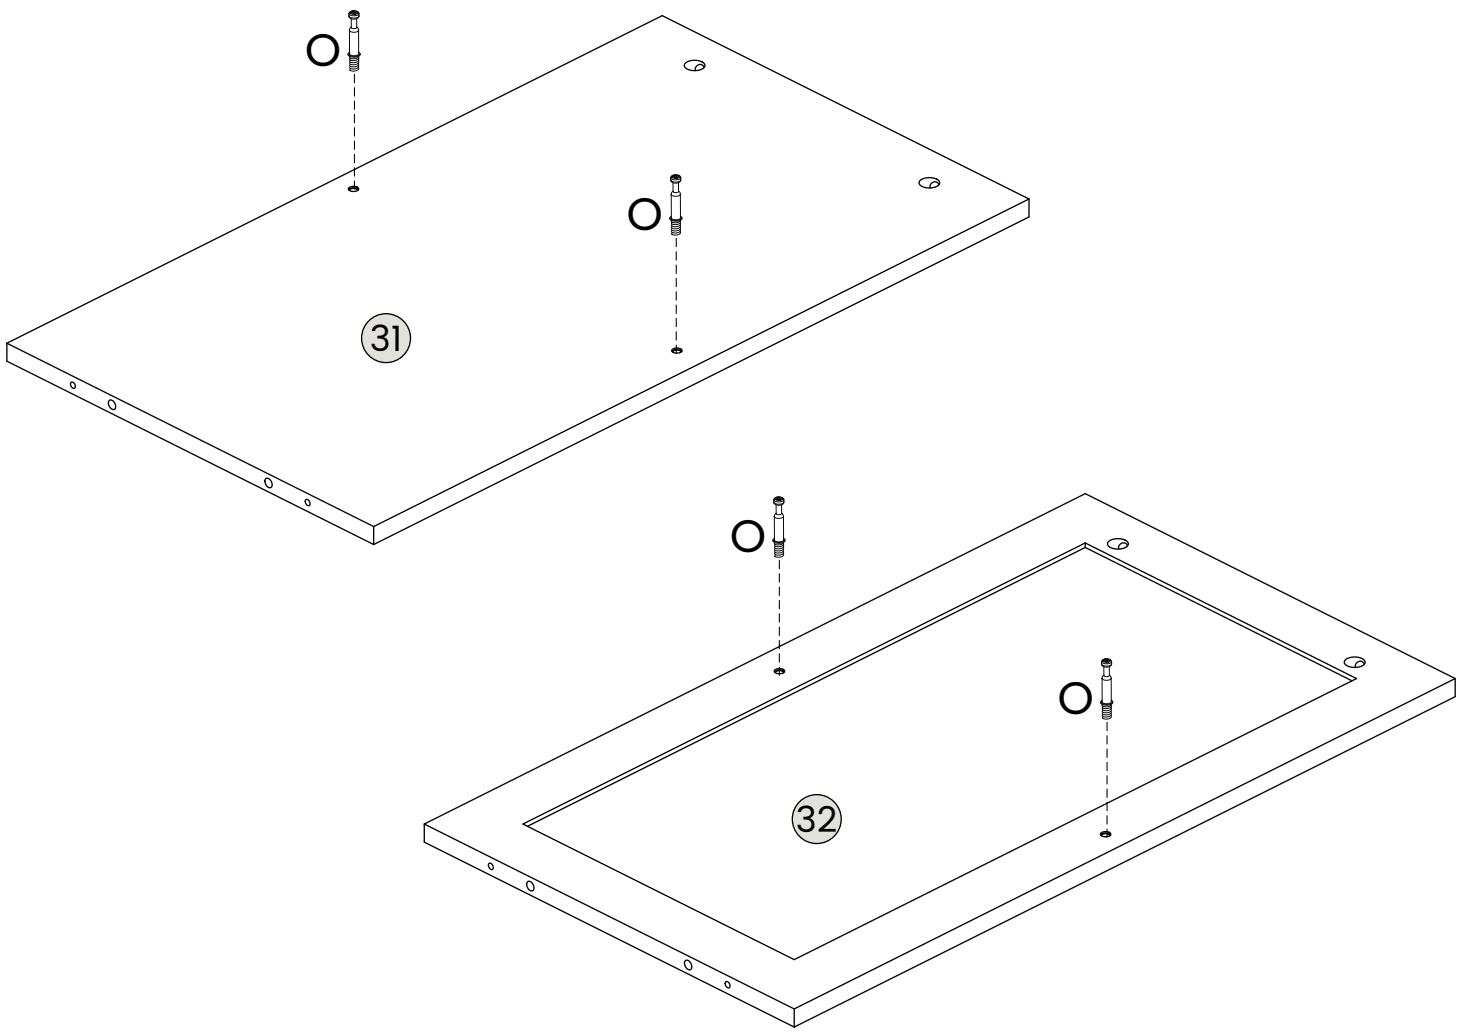


O x4




Assembly Instruction

82

P x4



Pay attention to the direction of the hole indicated by the arrow

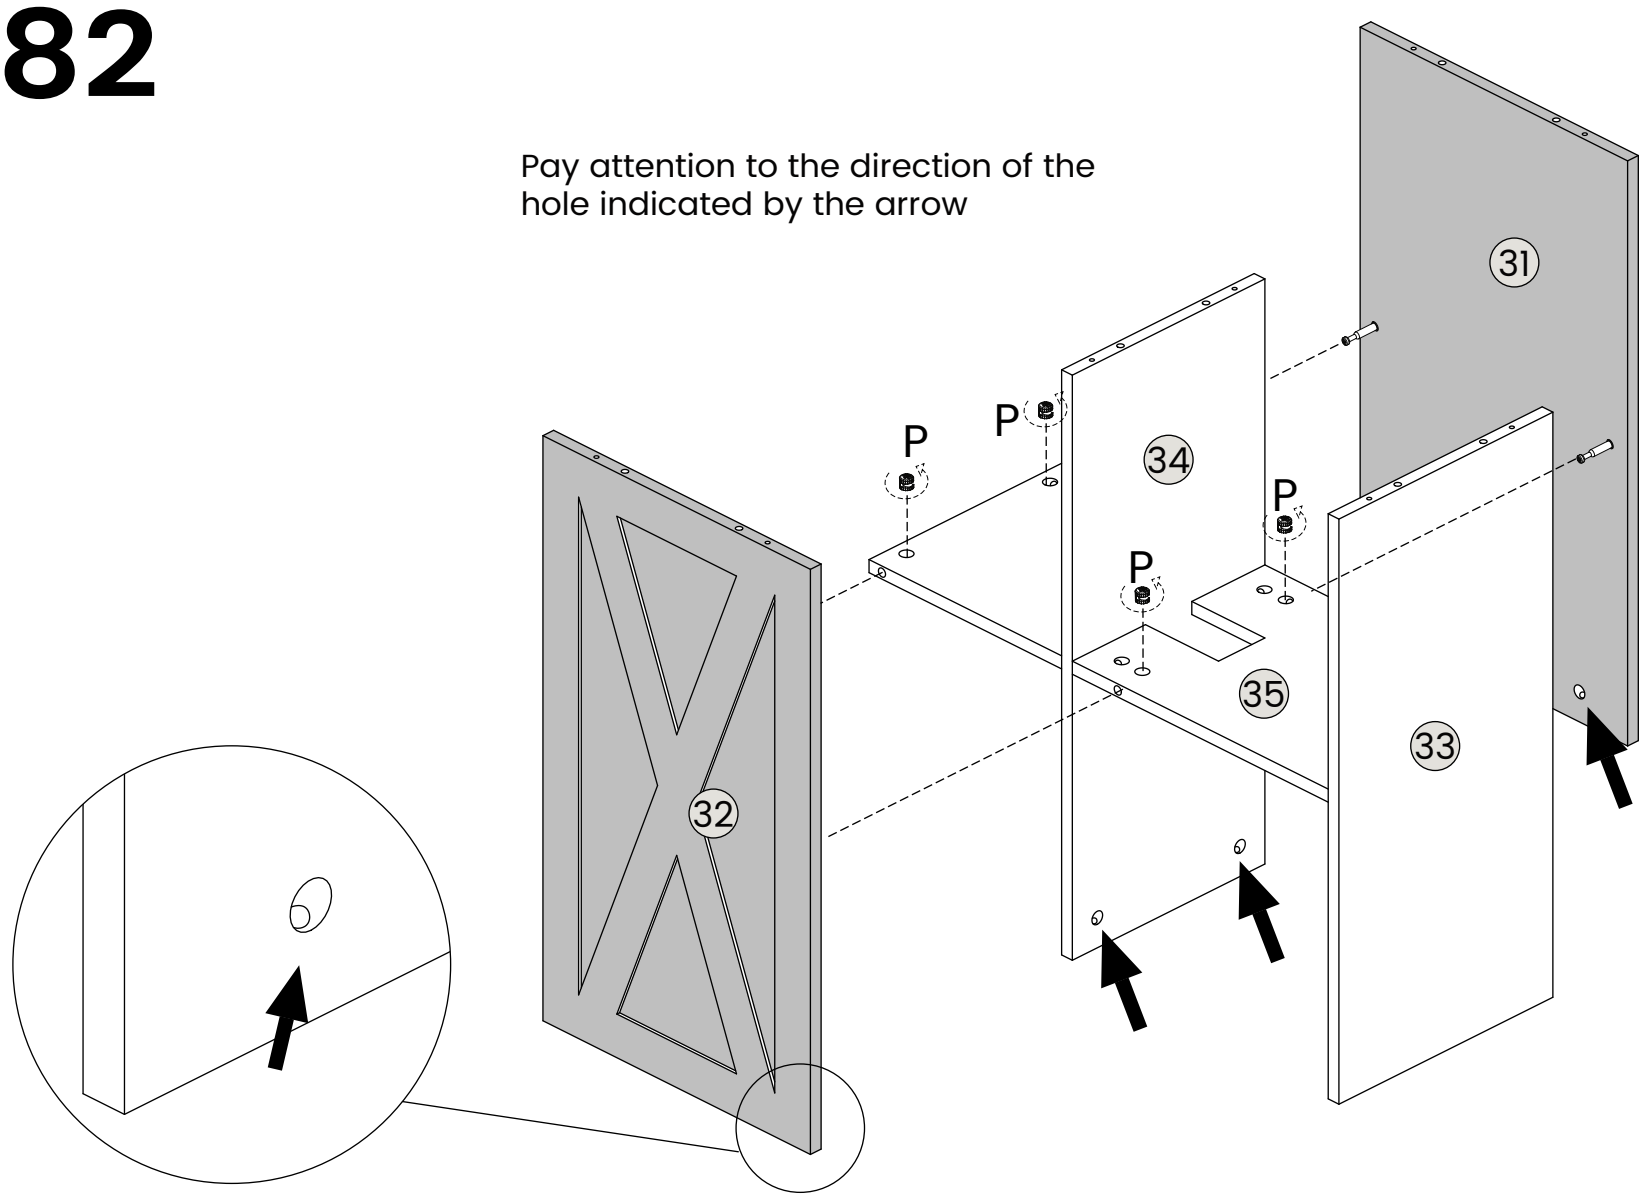


83

M x8




Ø6x30MM

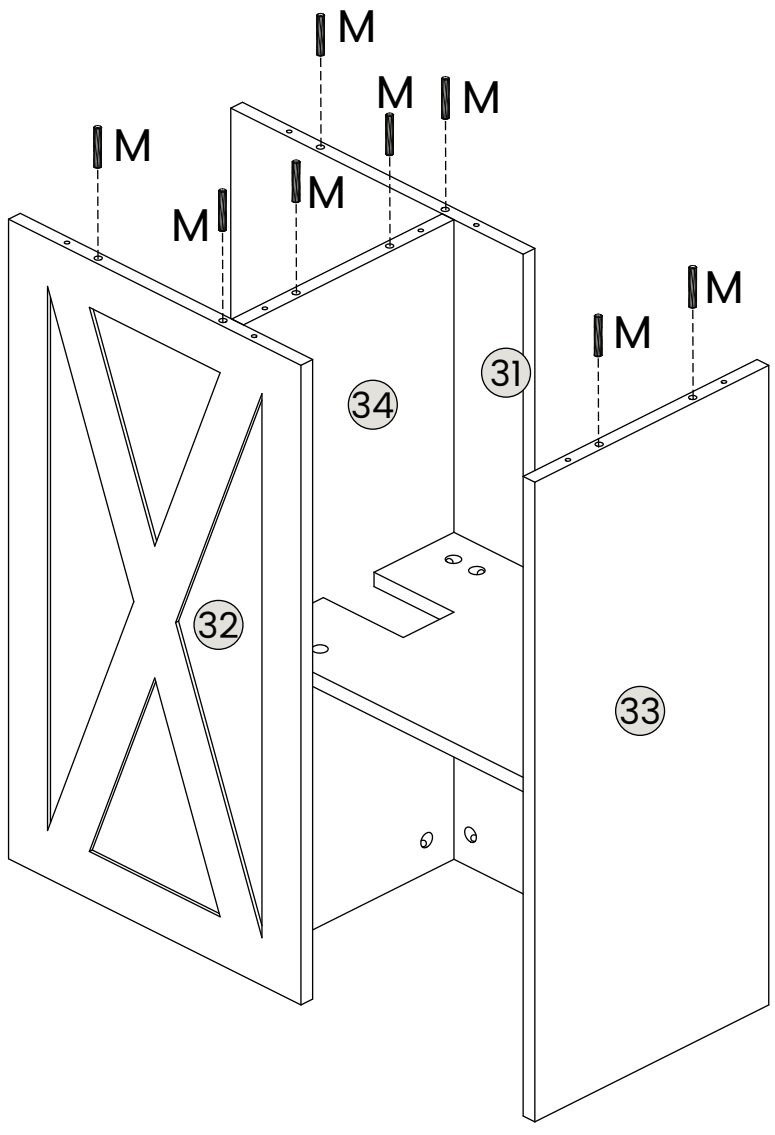


Assembly Instruction

84

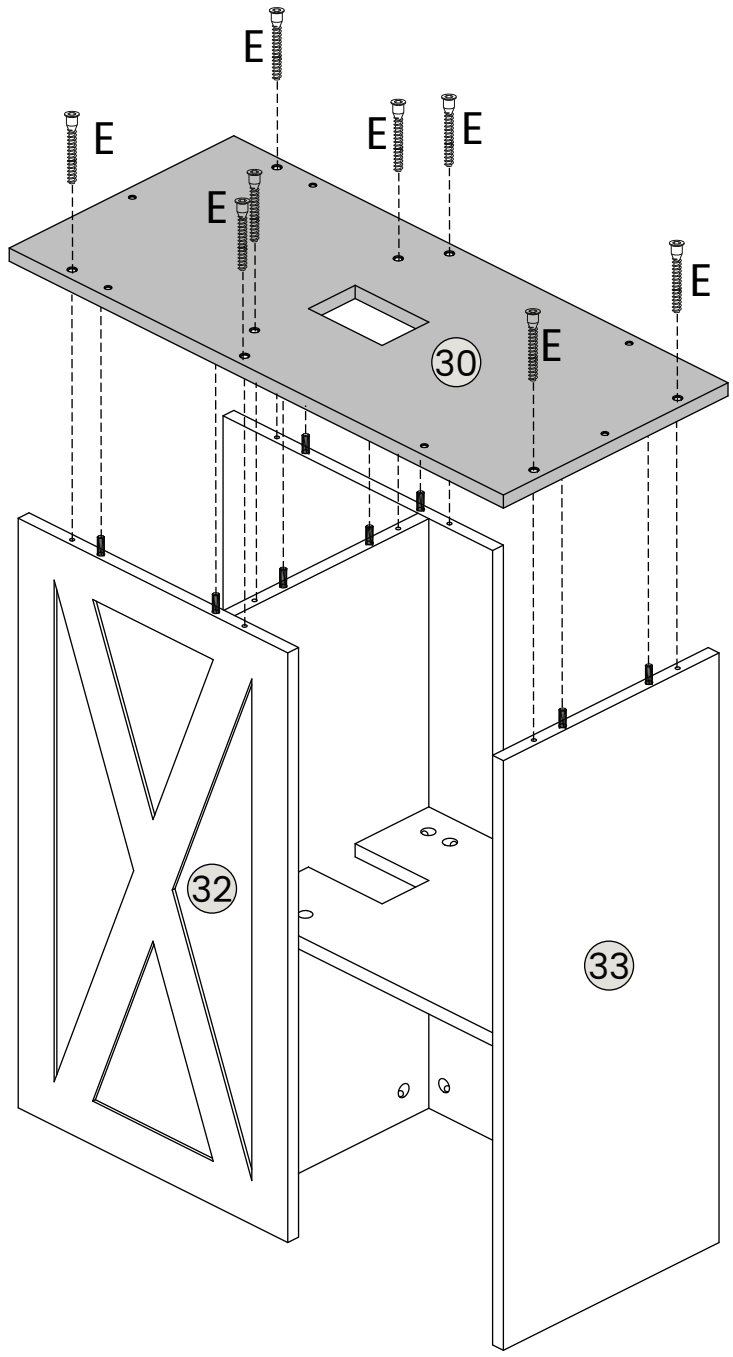


E x8




ST5X40MM

85

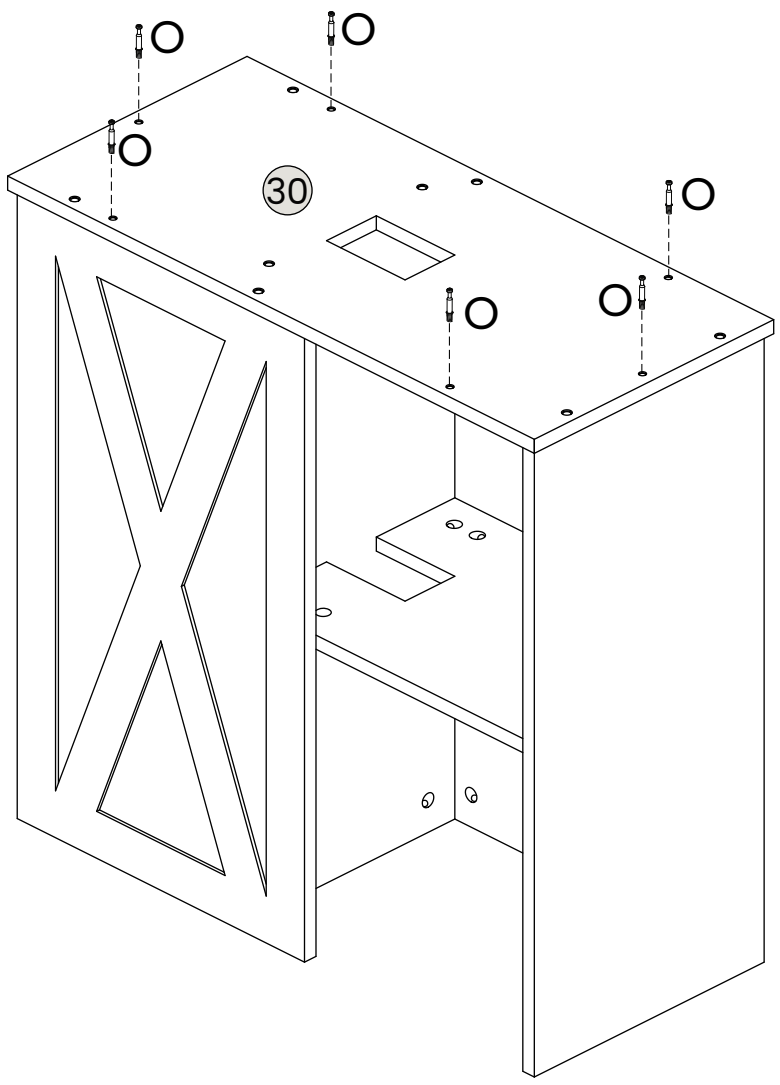


O x6




Assembly Instruction

86


O x8

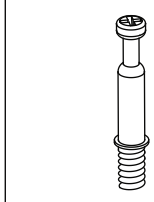


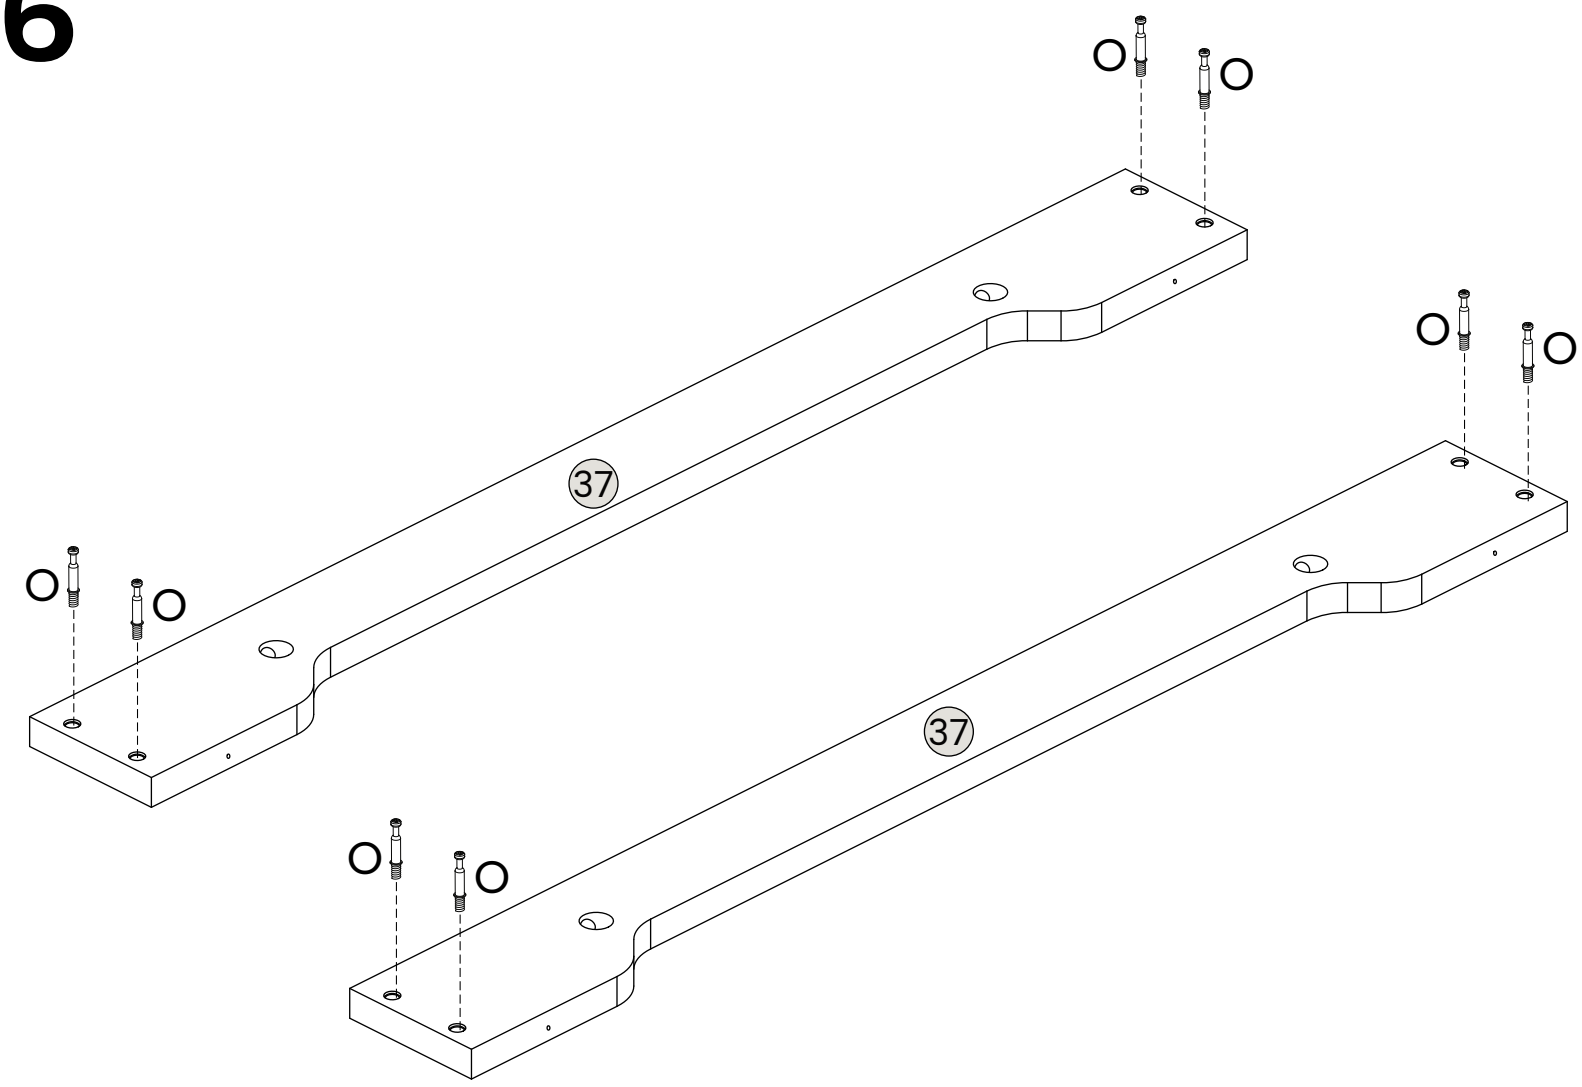

87

P x8




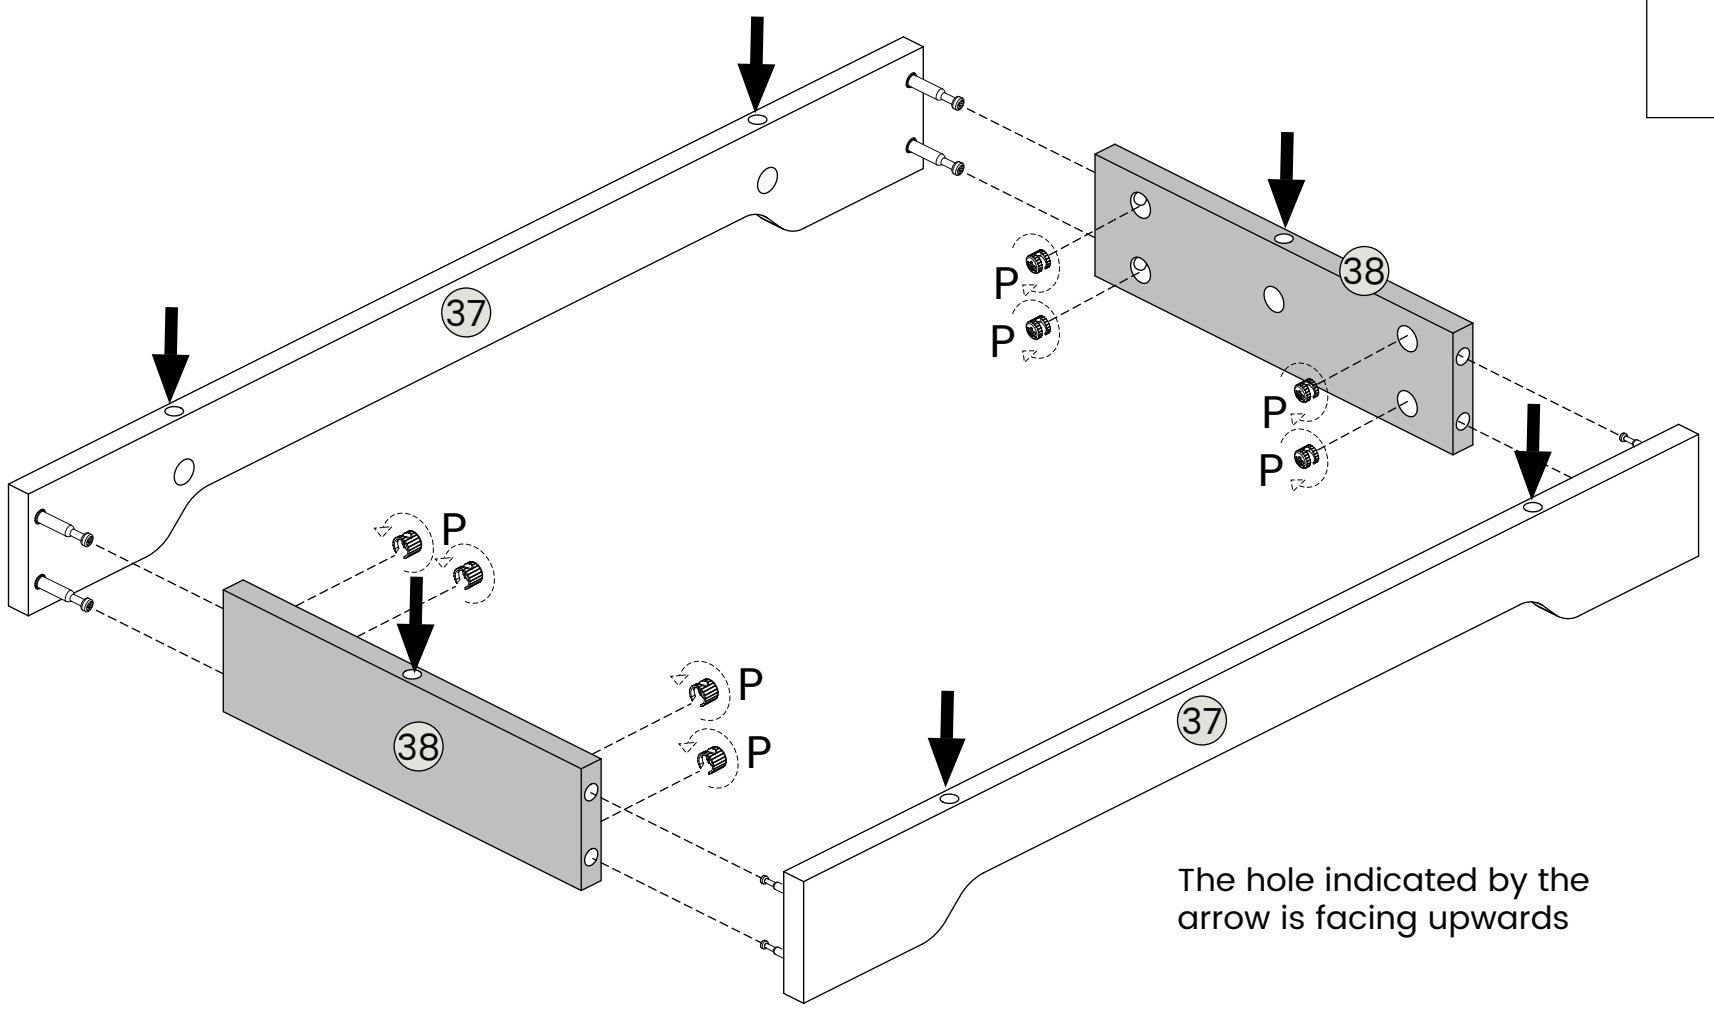

The hole indicated by the arrow is facing upwards


88


P x6

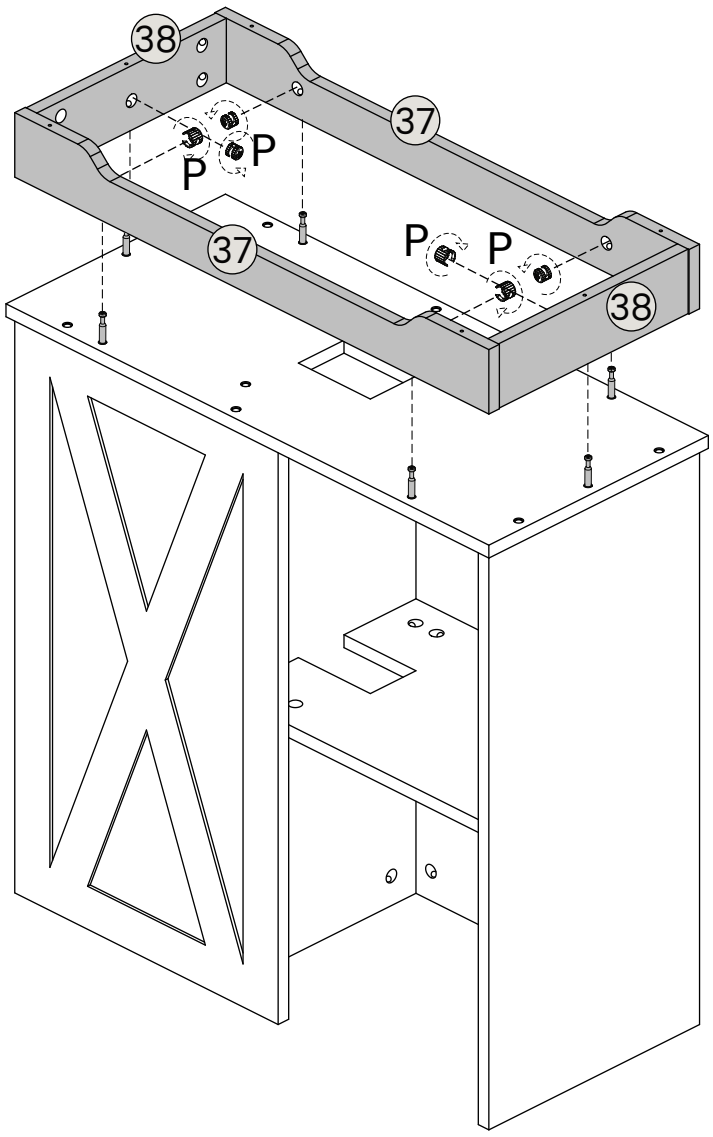

89


V x6

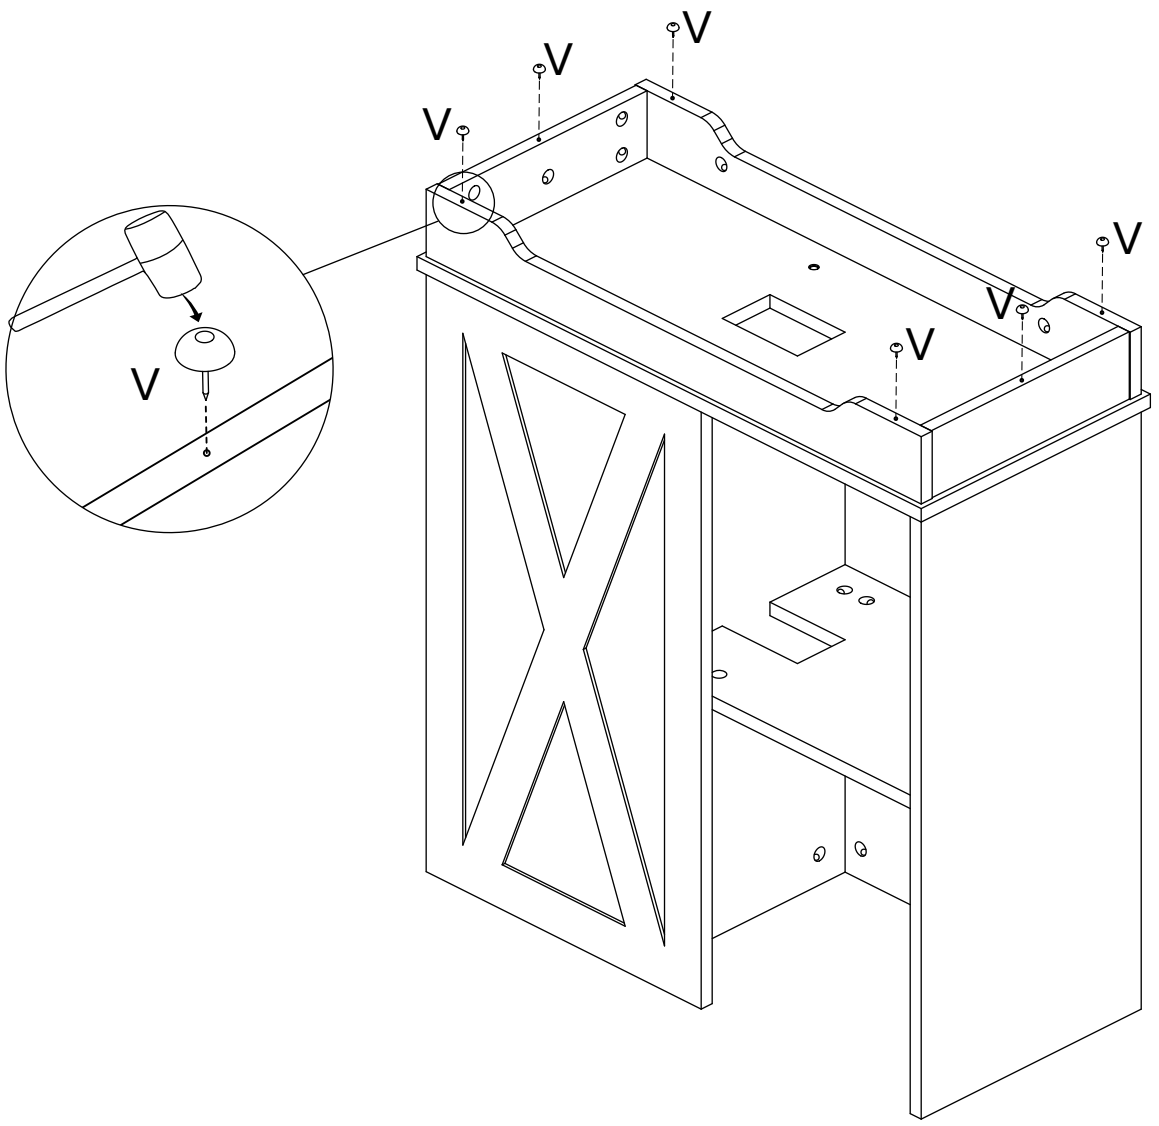

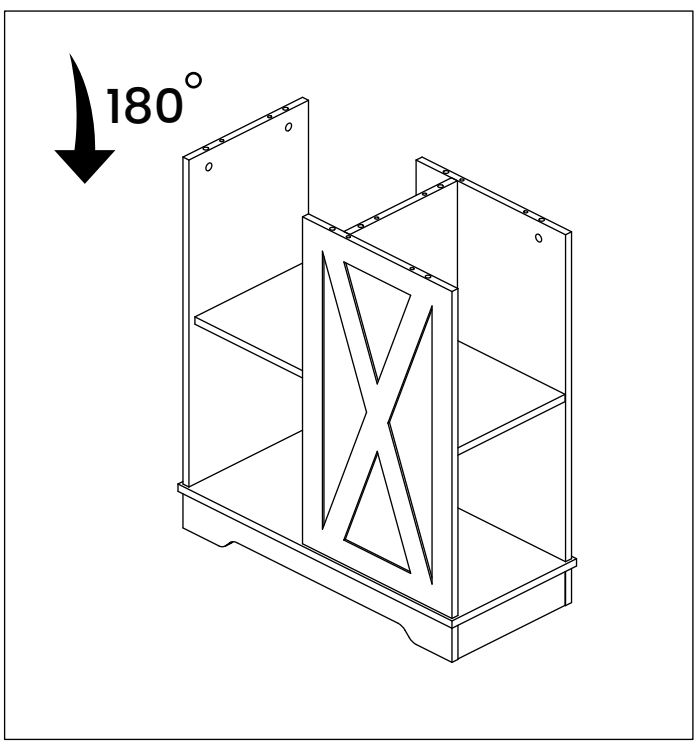

Assembly Instruction

90

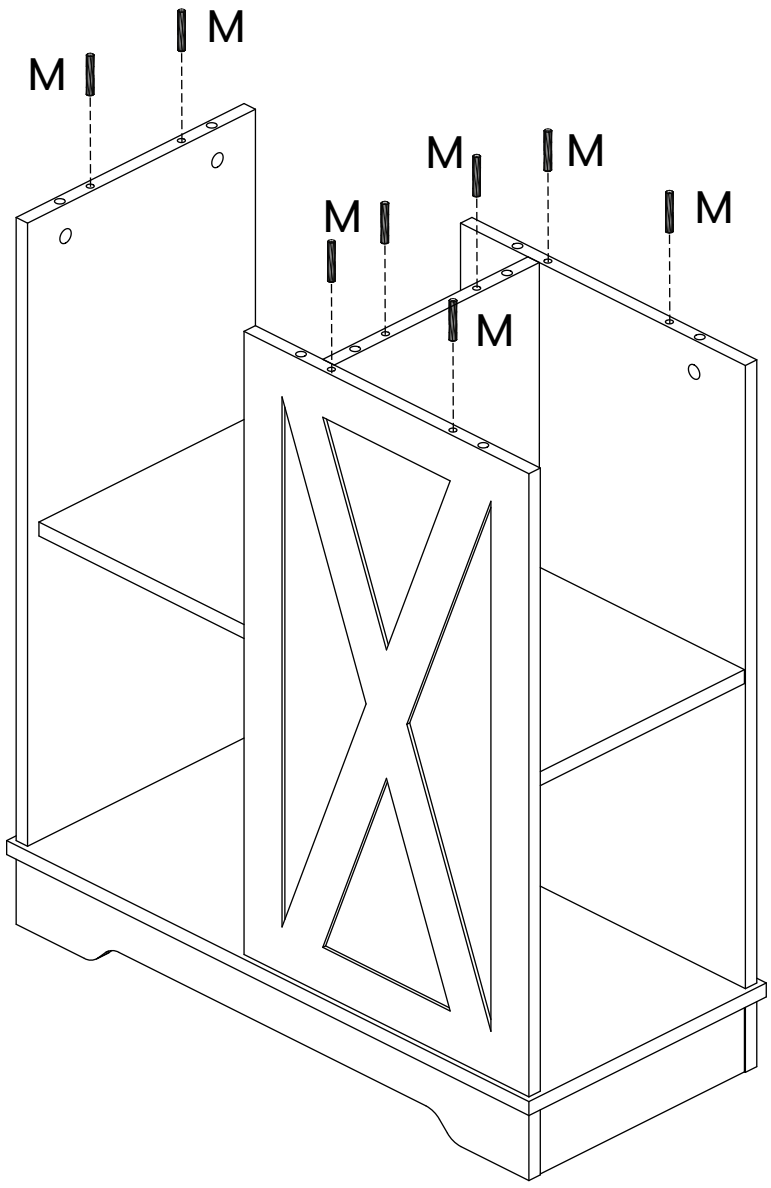


M x8



Ø6x30MM

91

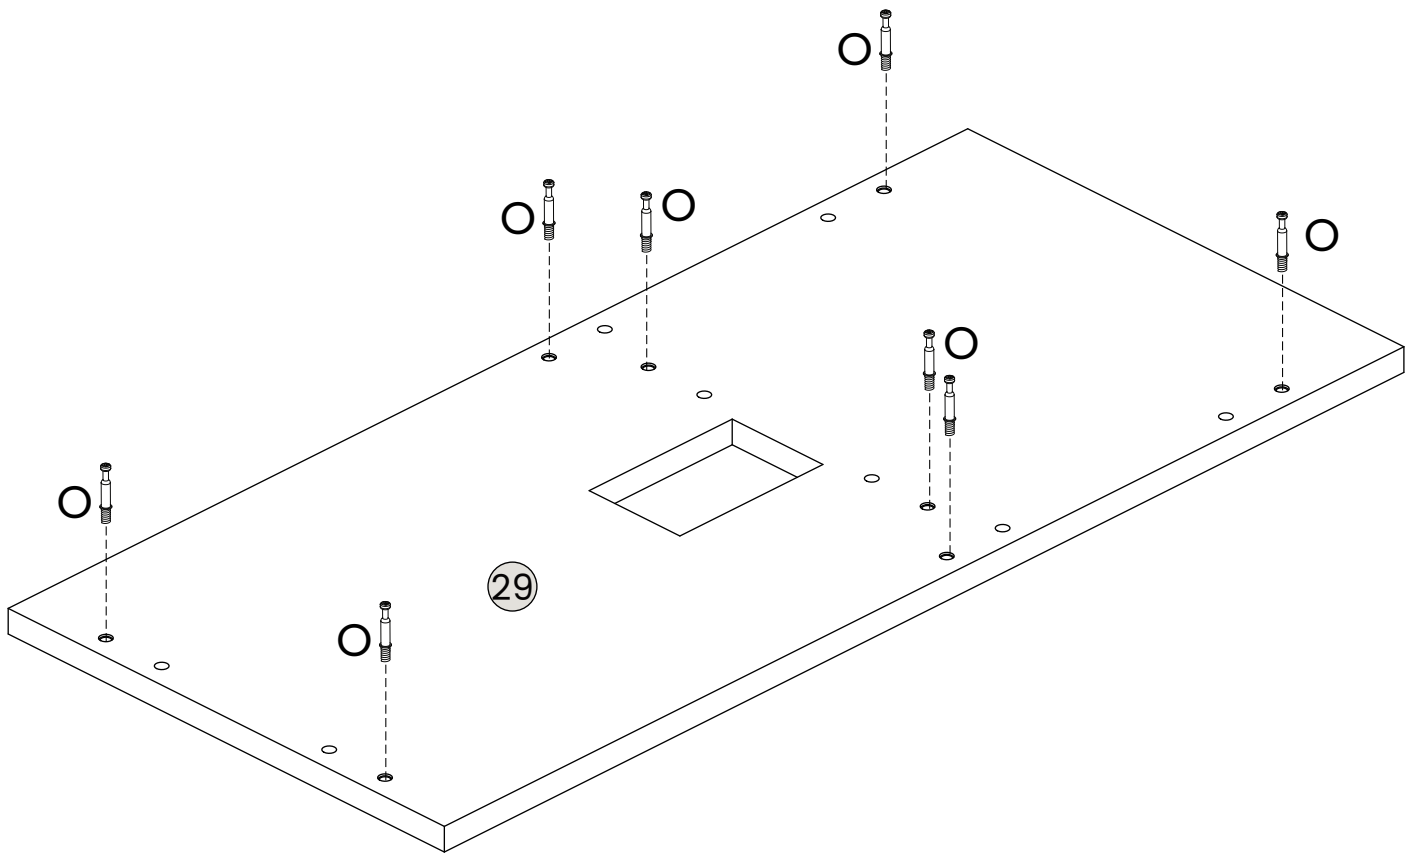

O x8




Assembly Instruction


P x8



92

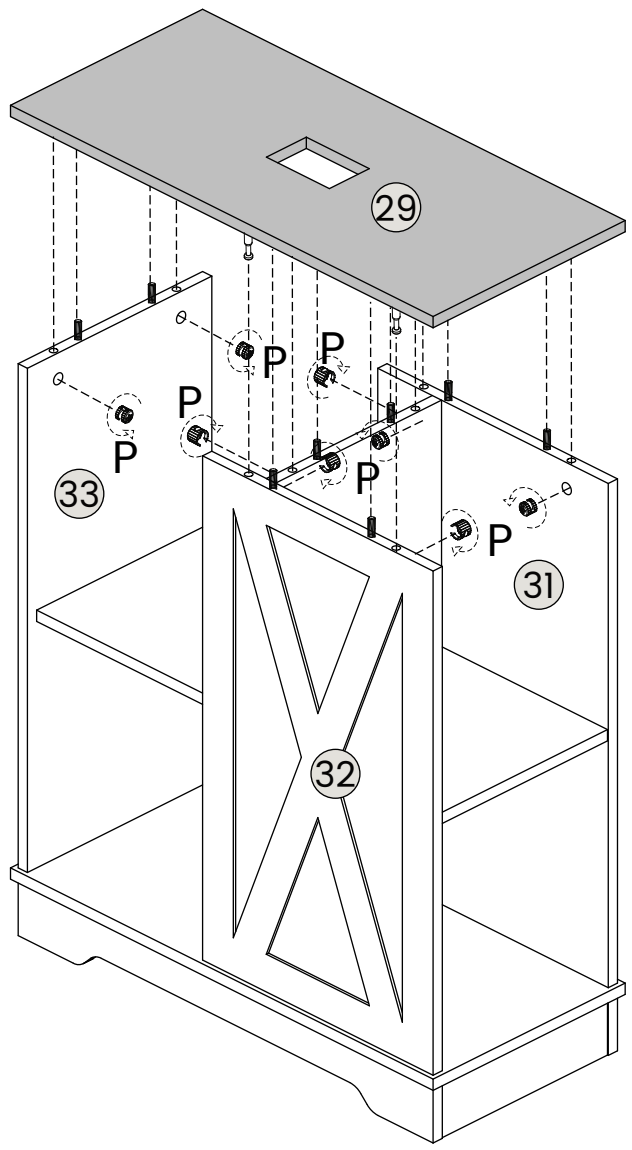

93

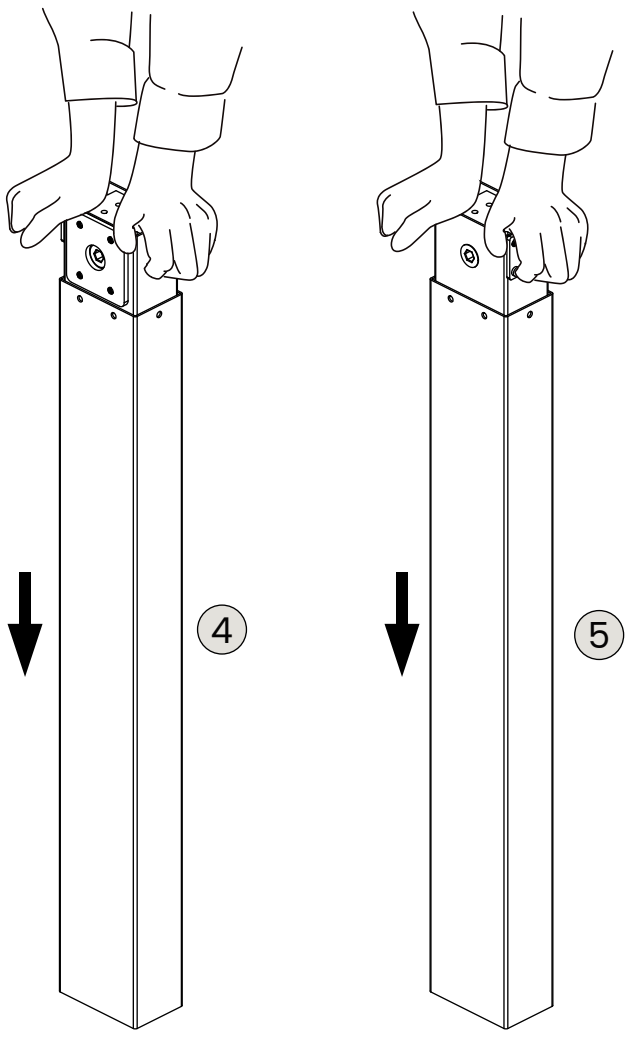


check whether the heights ofthe two table legs are the same.If there is a significant error,press down on them to ensurethat the heights of the two legsare consistent.


Assembly Instruction

94

Cx4

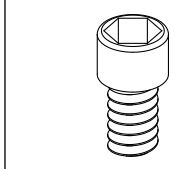


M6X10MM

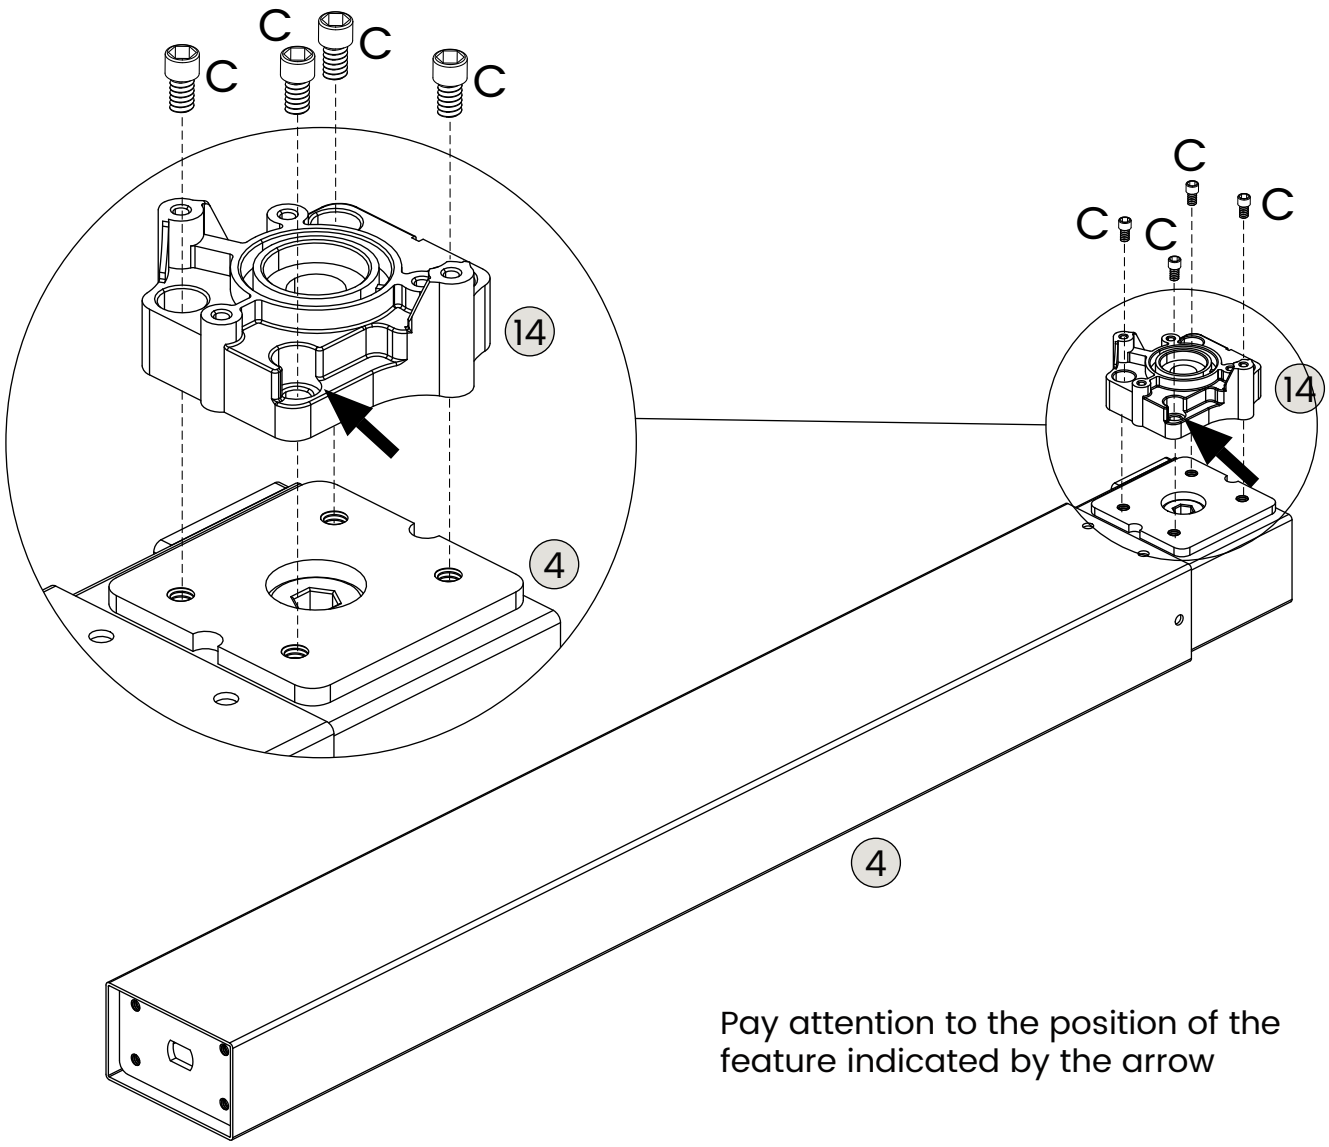

Pay attention to the position of the feature indicated by the arrow


95

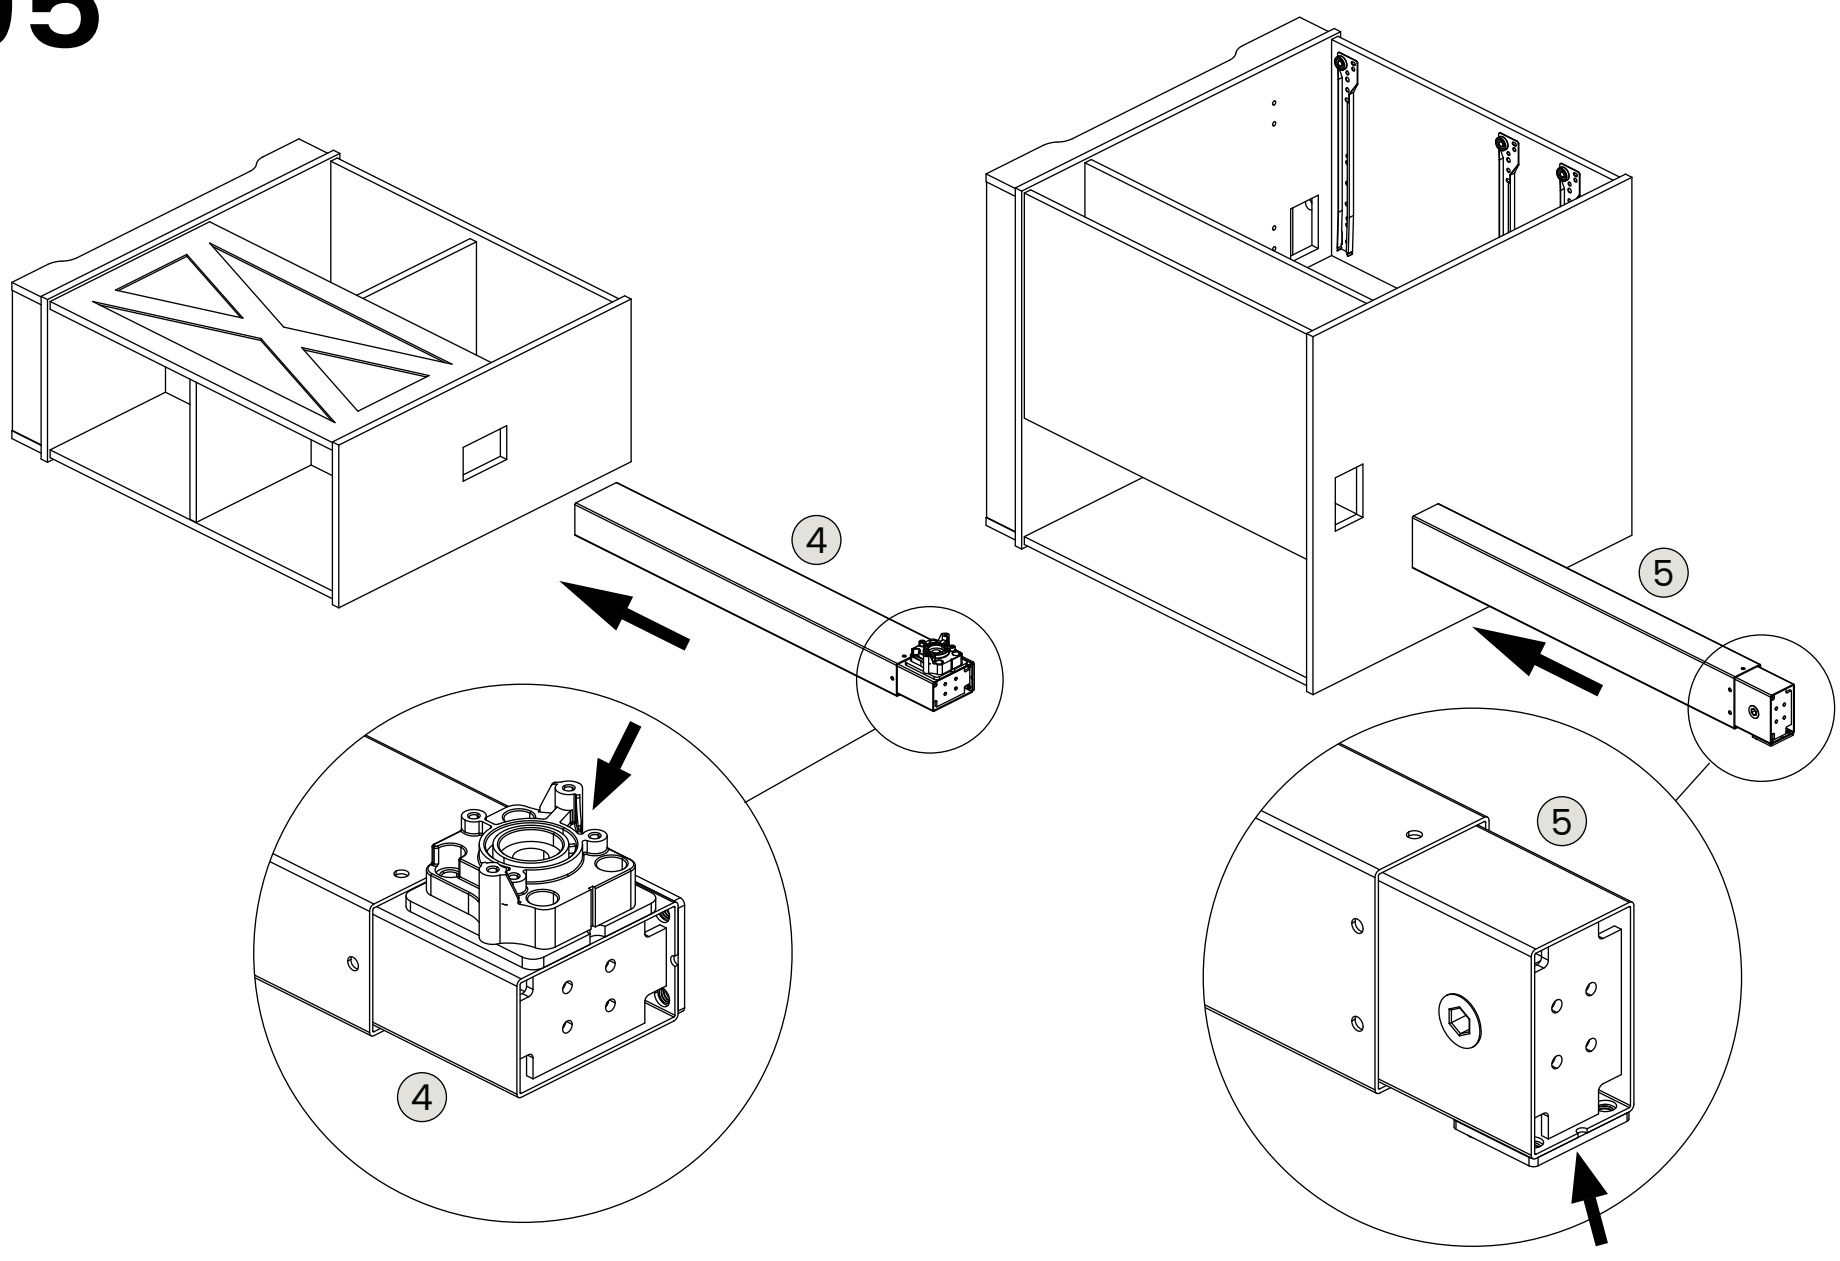


Assembly Instruction

96

U x8




H x8




M6X40MM


T x8



φ20MM

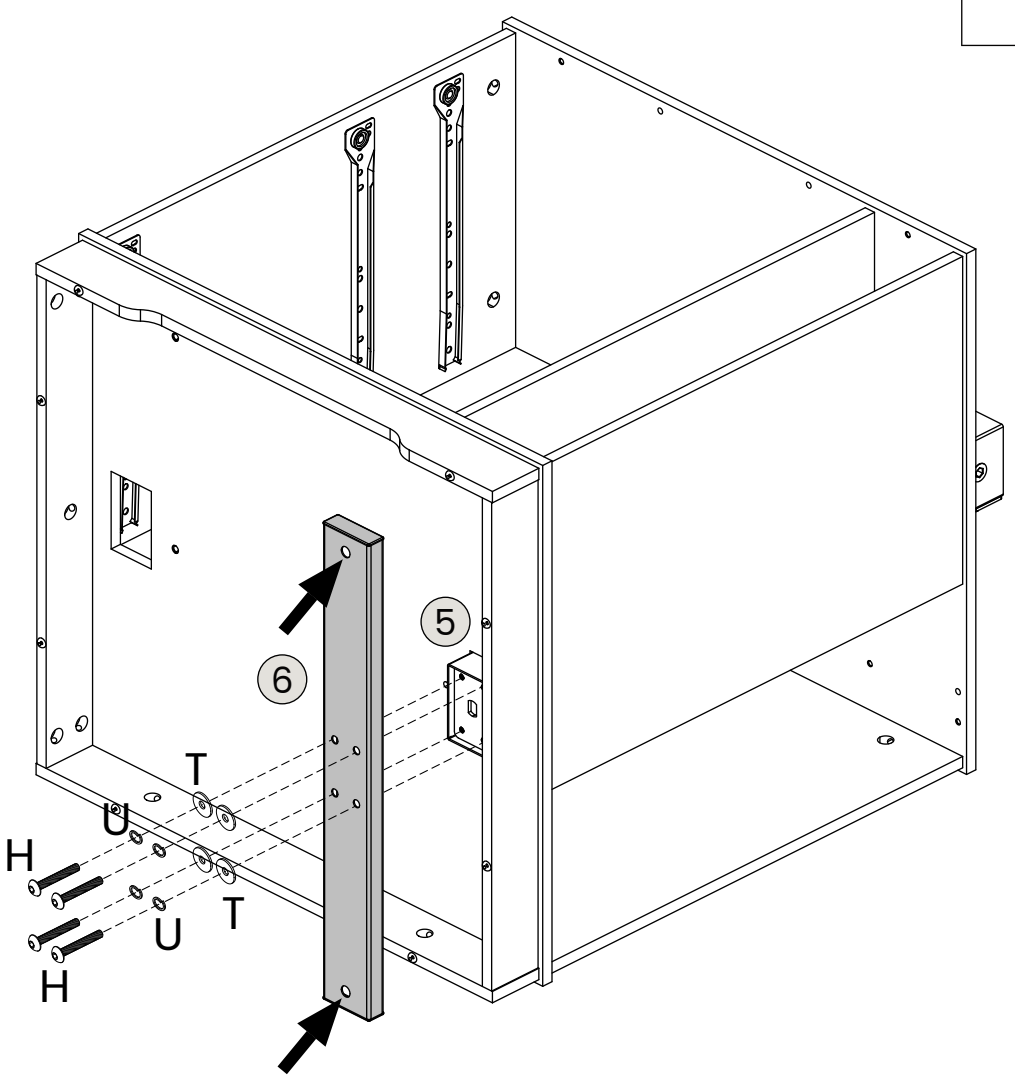



Pay attention to the orientation
of the hole indicated by the arrow

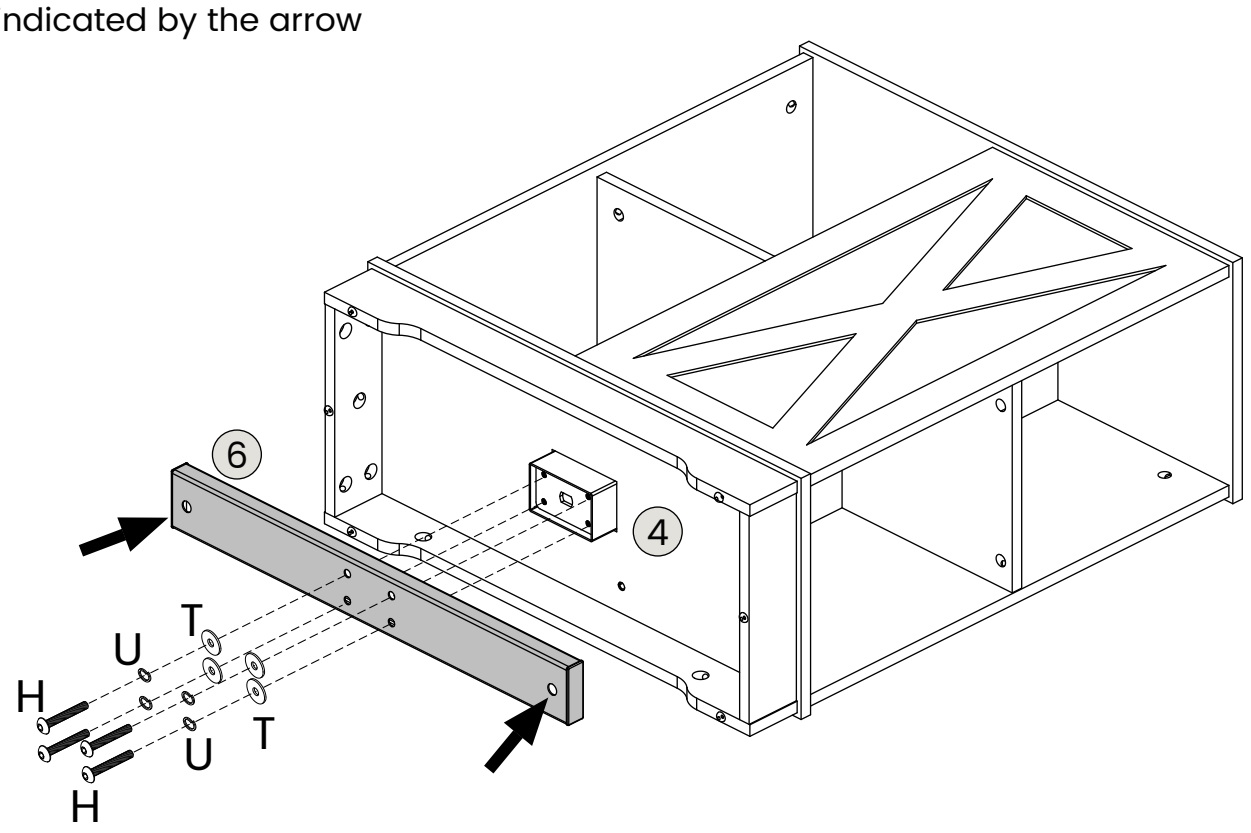


97

A x4




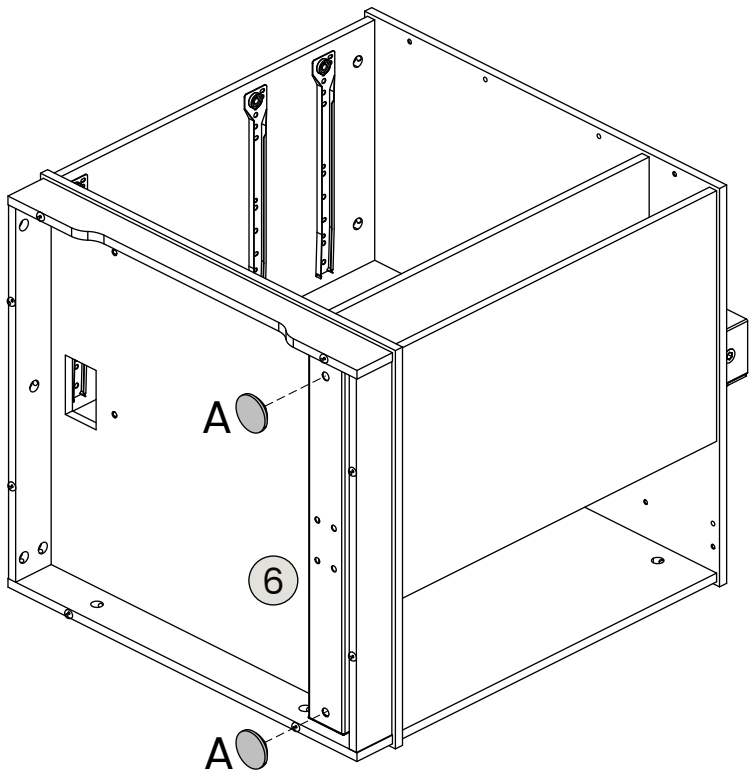

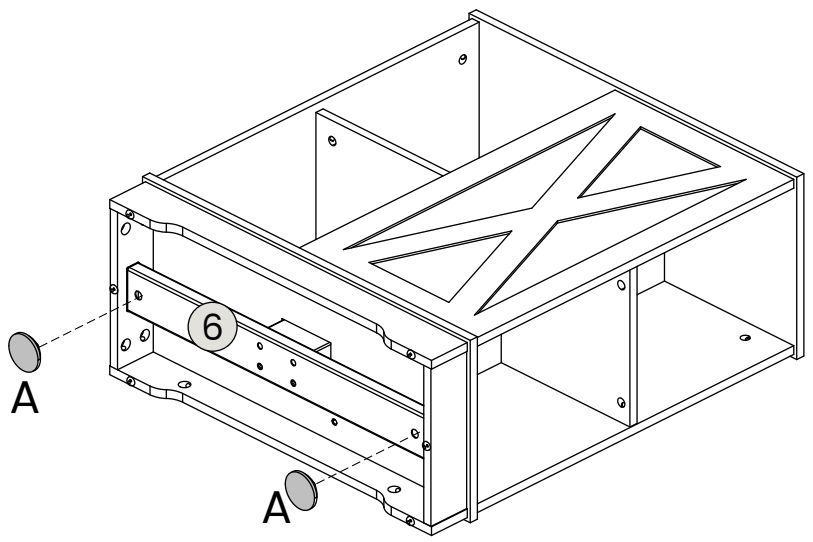


98


K x4




ST4x14MM

N x4




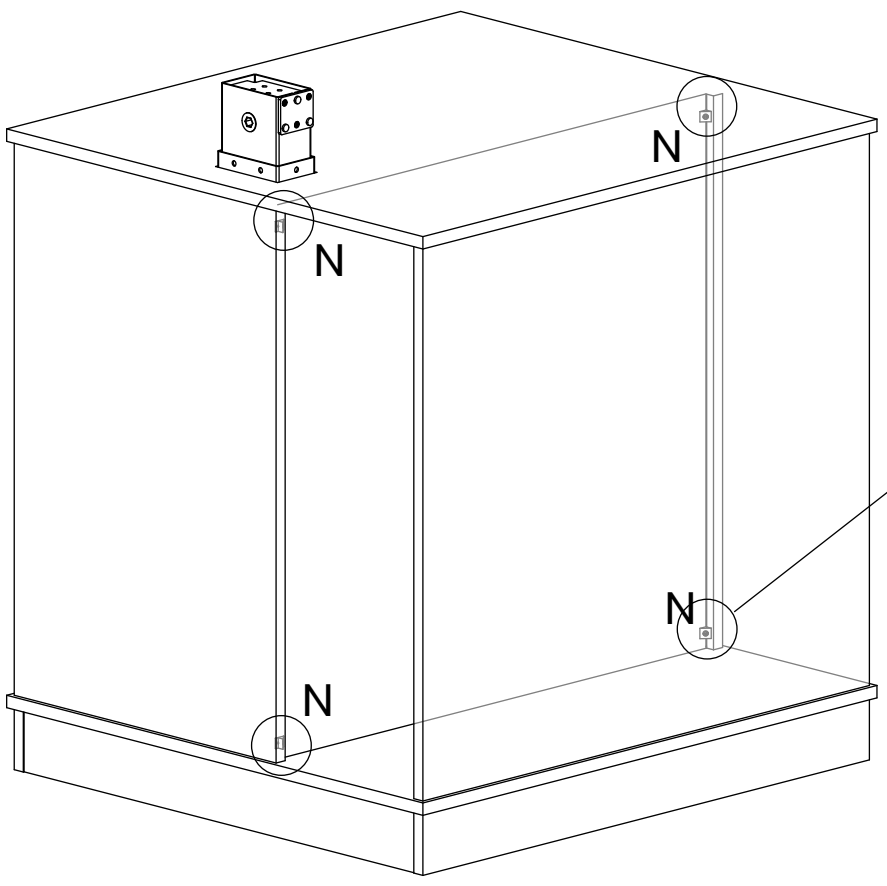

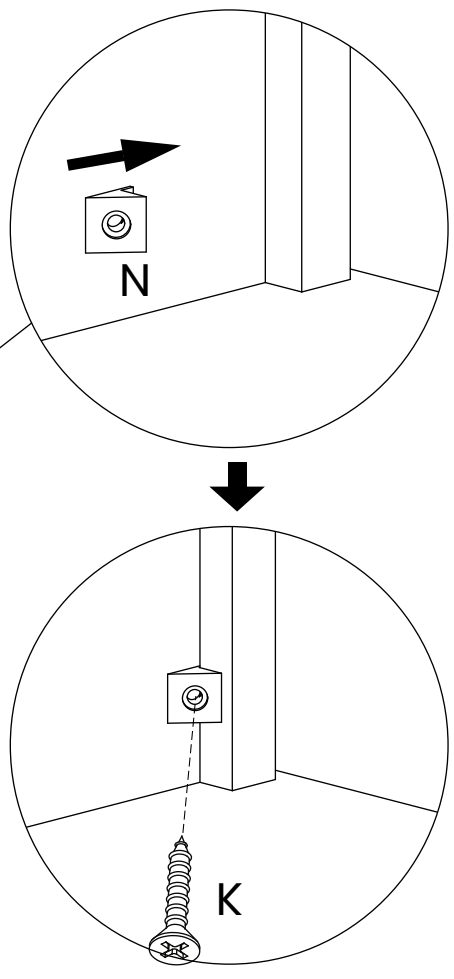

Assembly Instruction


99

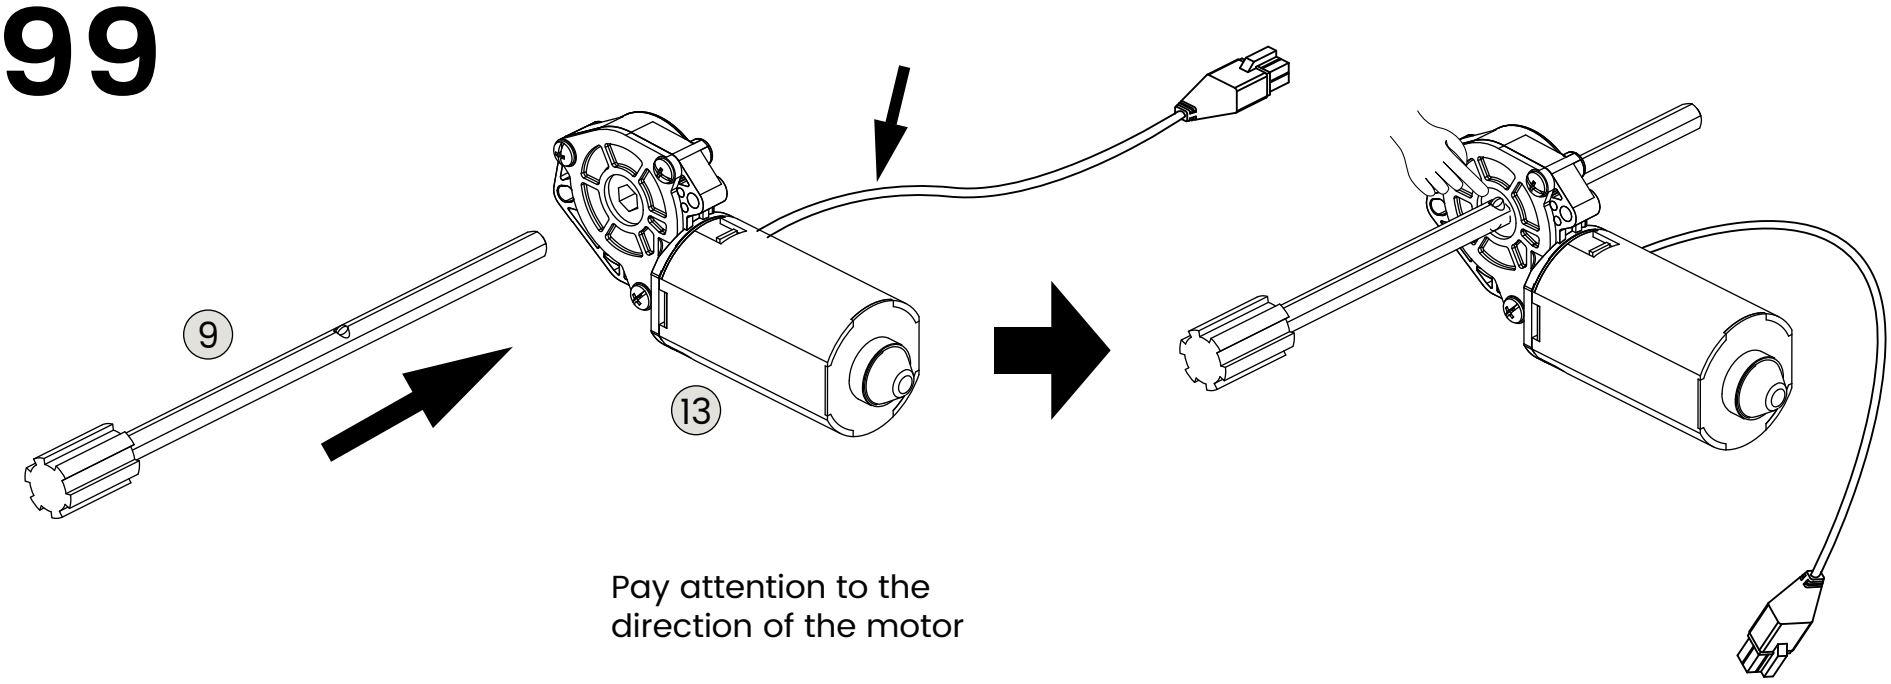


Pay attention to the direction of the motor

100

I x2




ST4X25MM

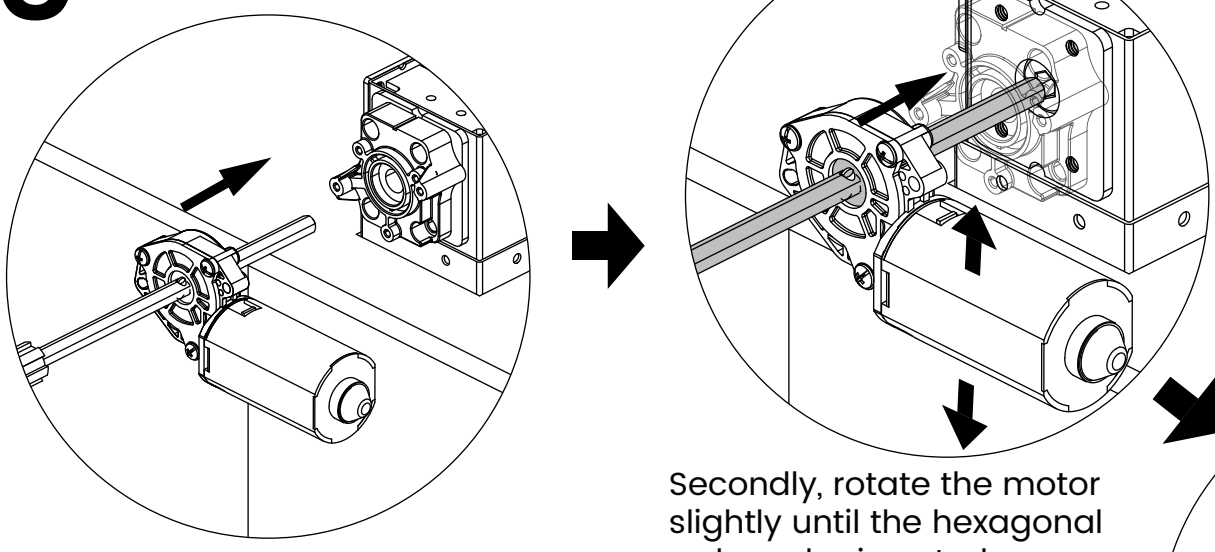


Firstly, determine the direction of the motor


Secondly, rotate the motor slightly until the hexagonal rod can be inserted

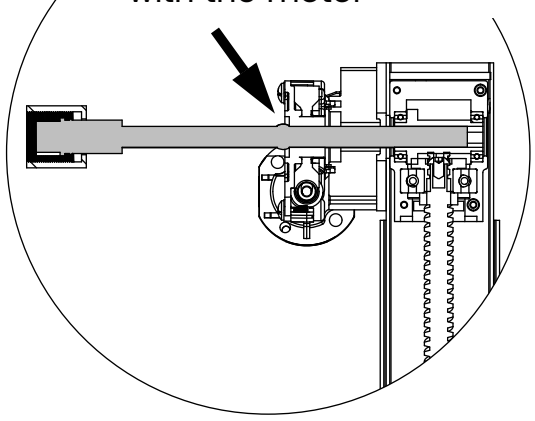

The point indicated by the arrow is aligned with the motor

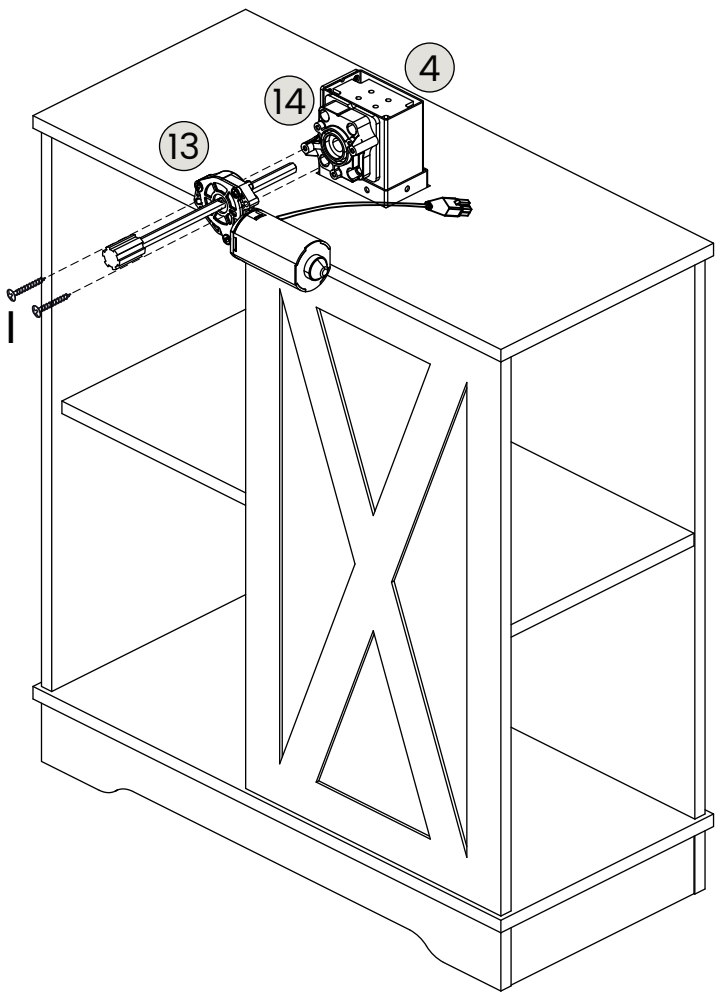


Thirdly, ensure that the hexagonal rod is fully inserted into the lifting device of accessory 4

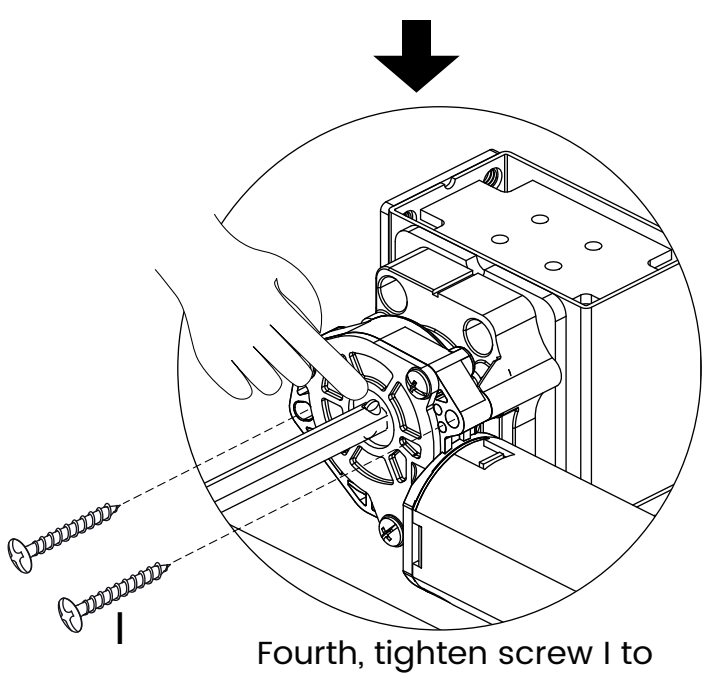


Fourth, tighten screw I to secure the motor

Assembly Instruction

101

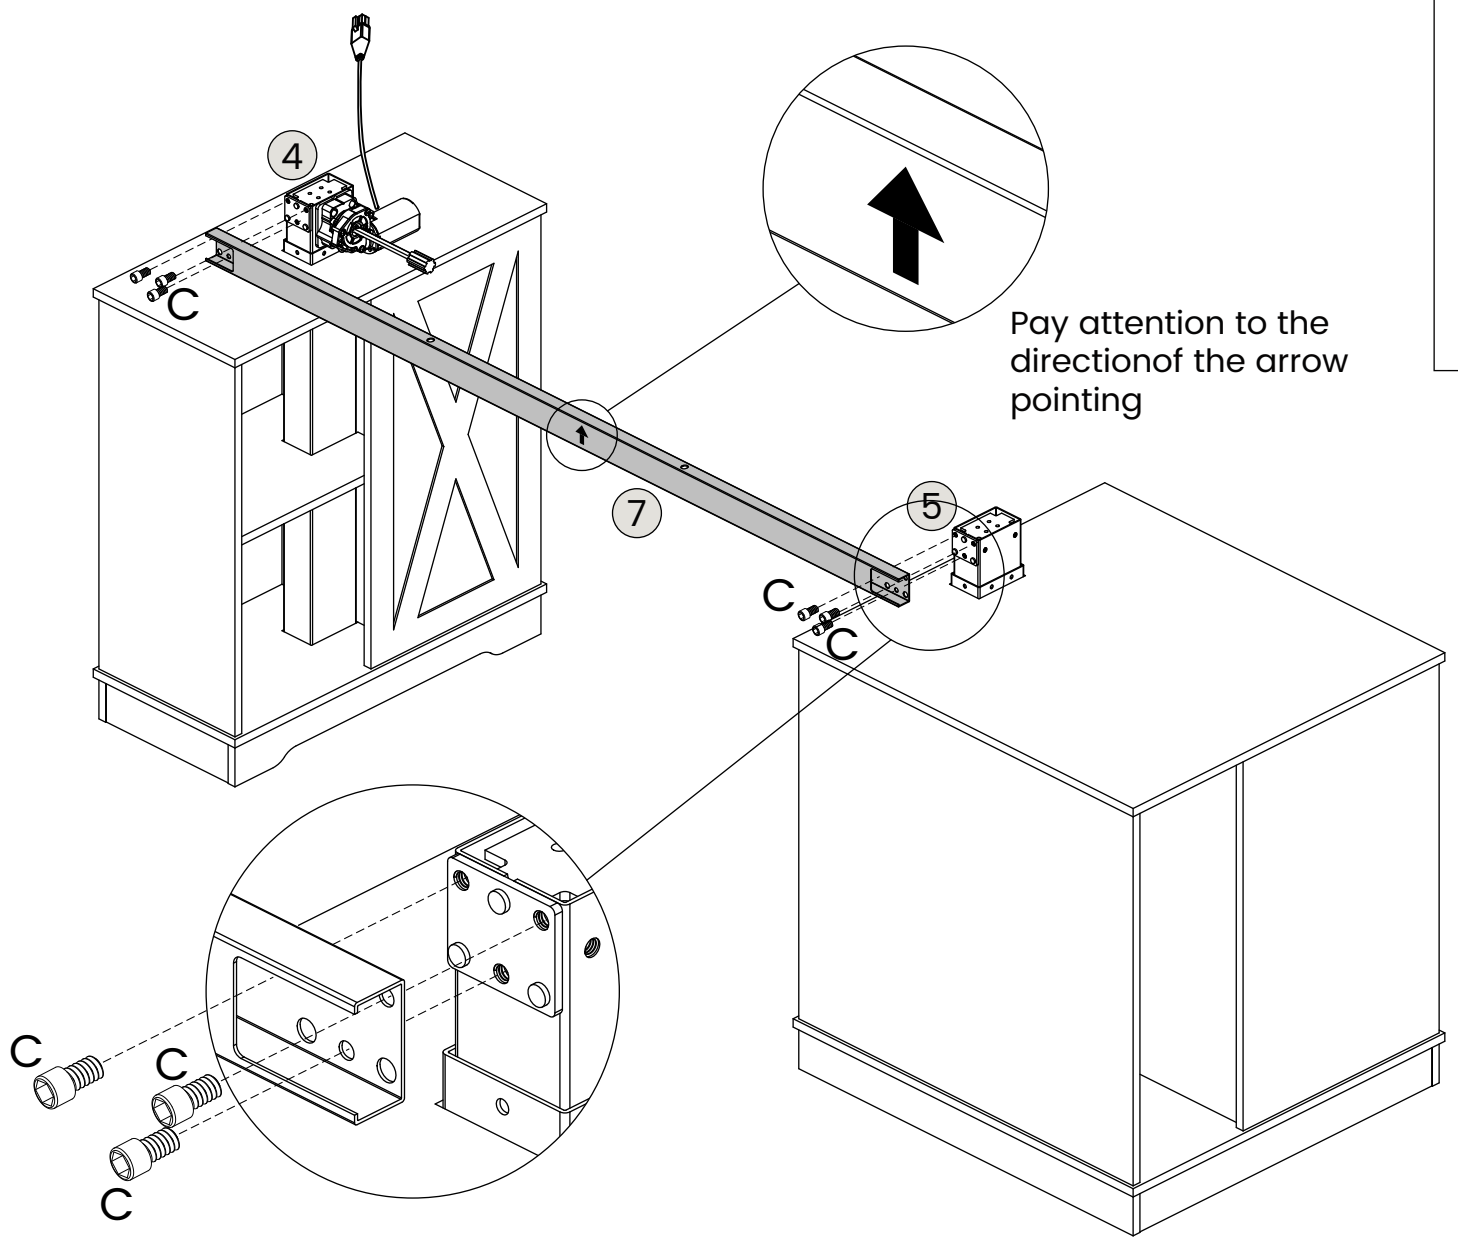


C x6




M6X10MM

102

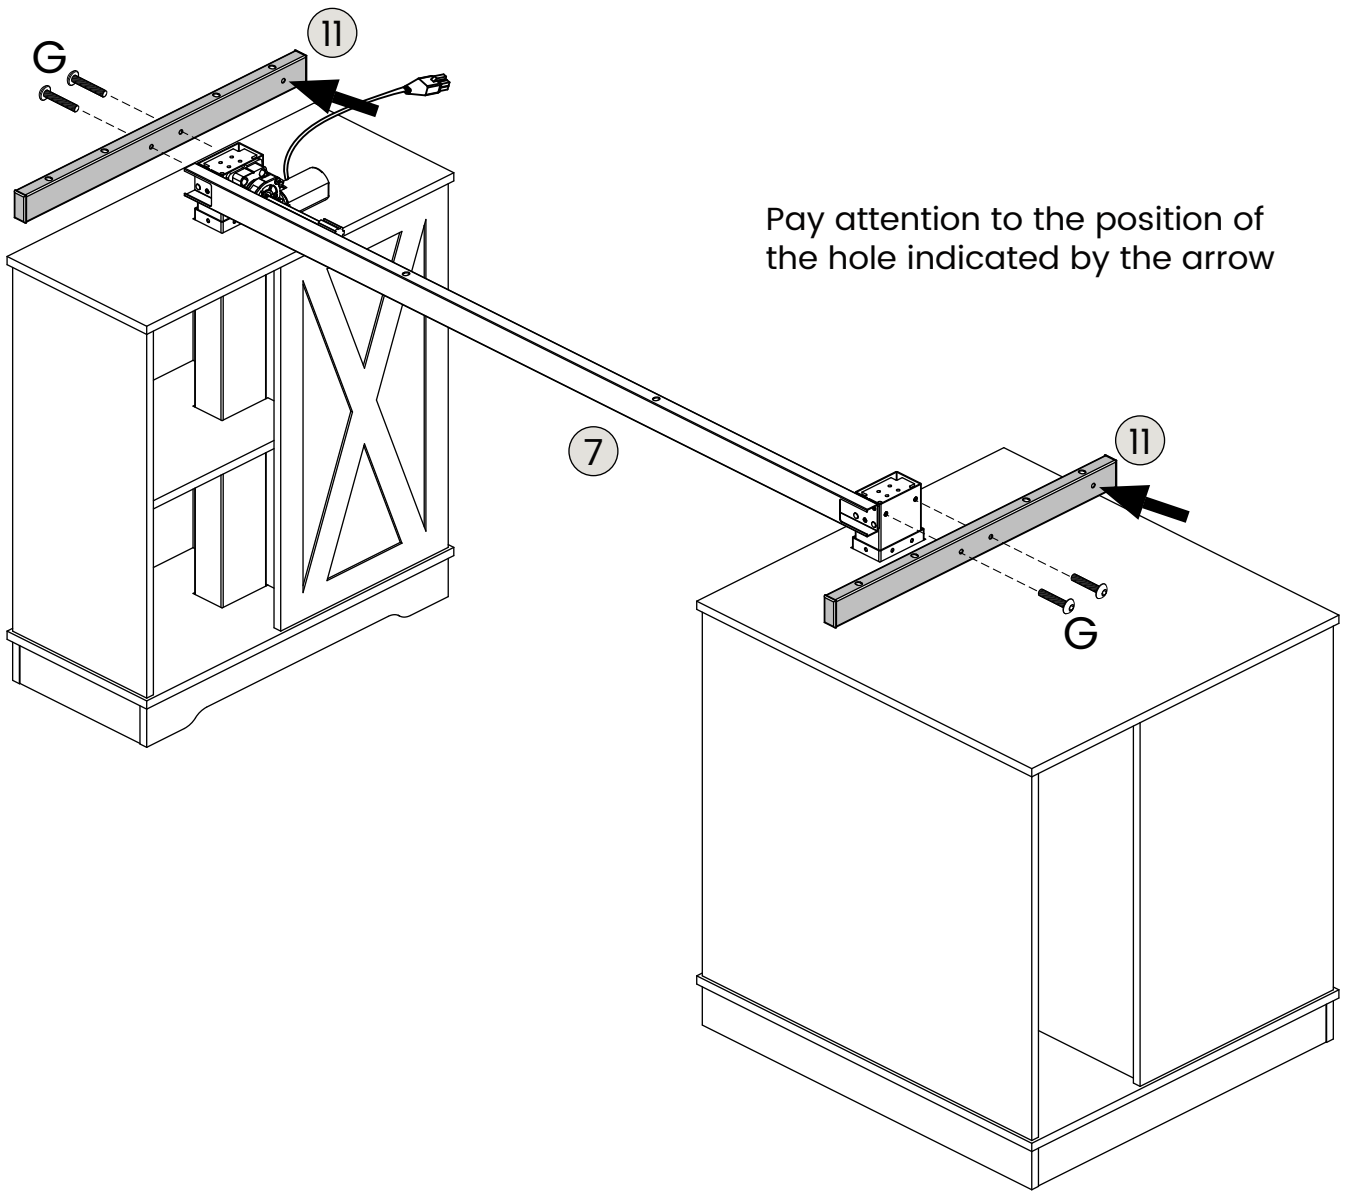

Pay attention to the position of the hole indicated by the arrow


G x4




M6X28MM

Assembly Instruction

103

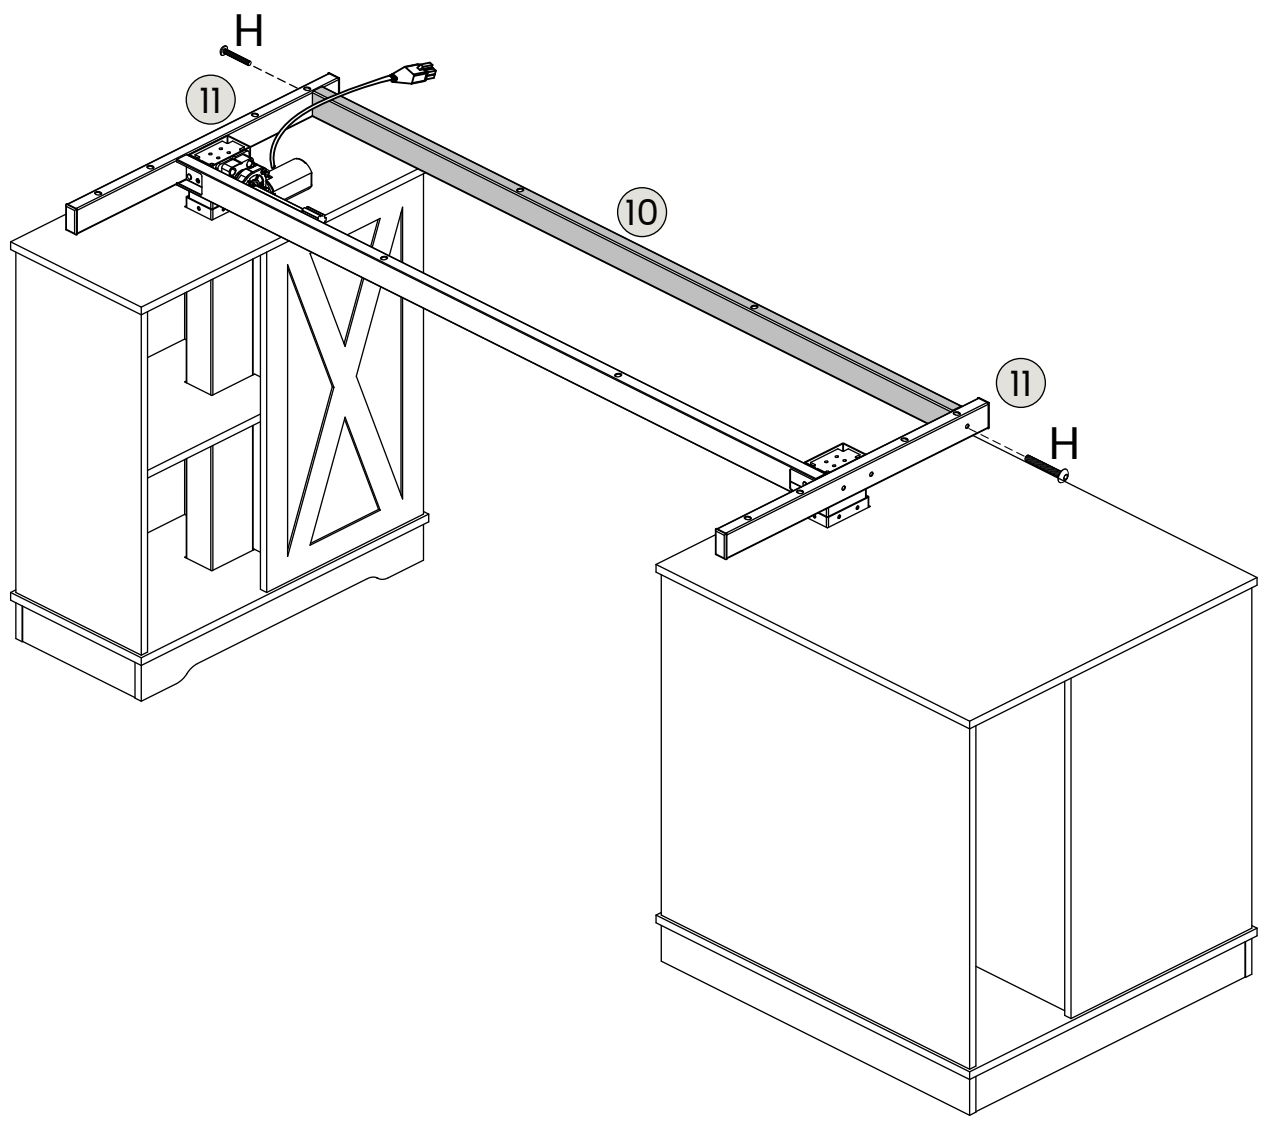


Hx2




M6X40MM

104

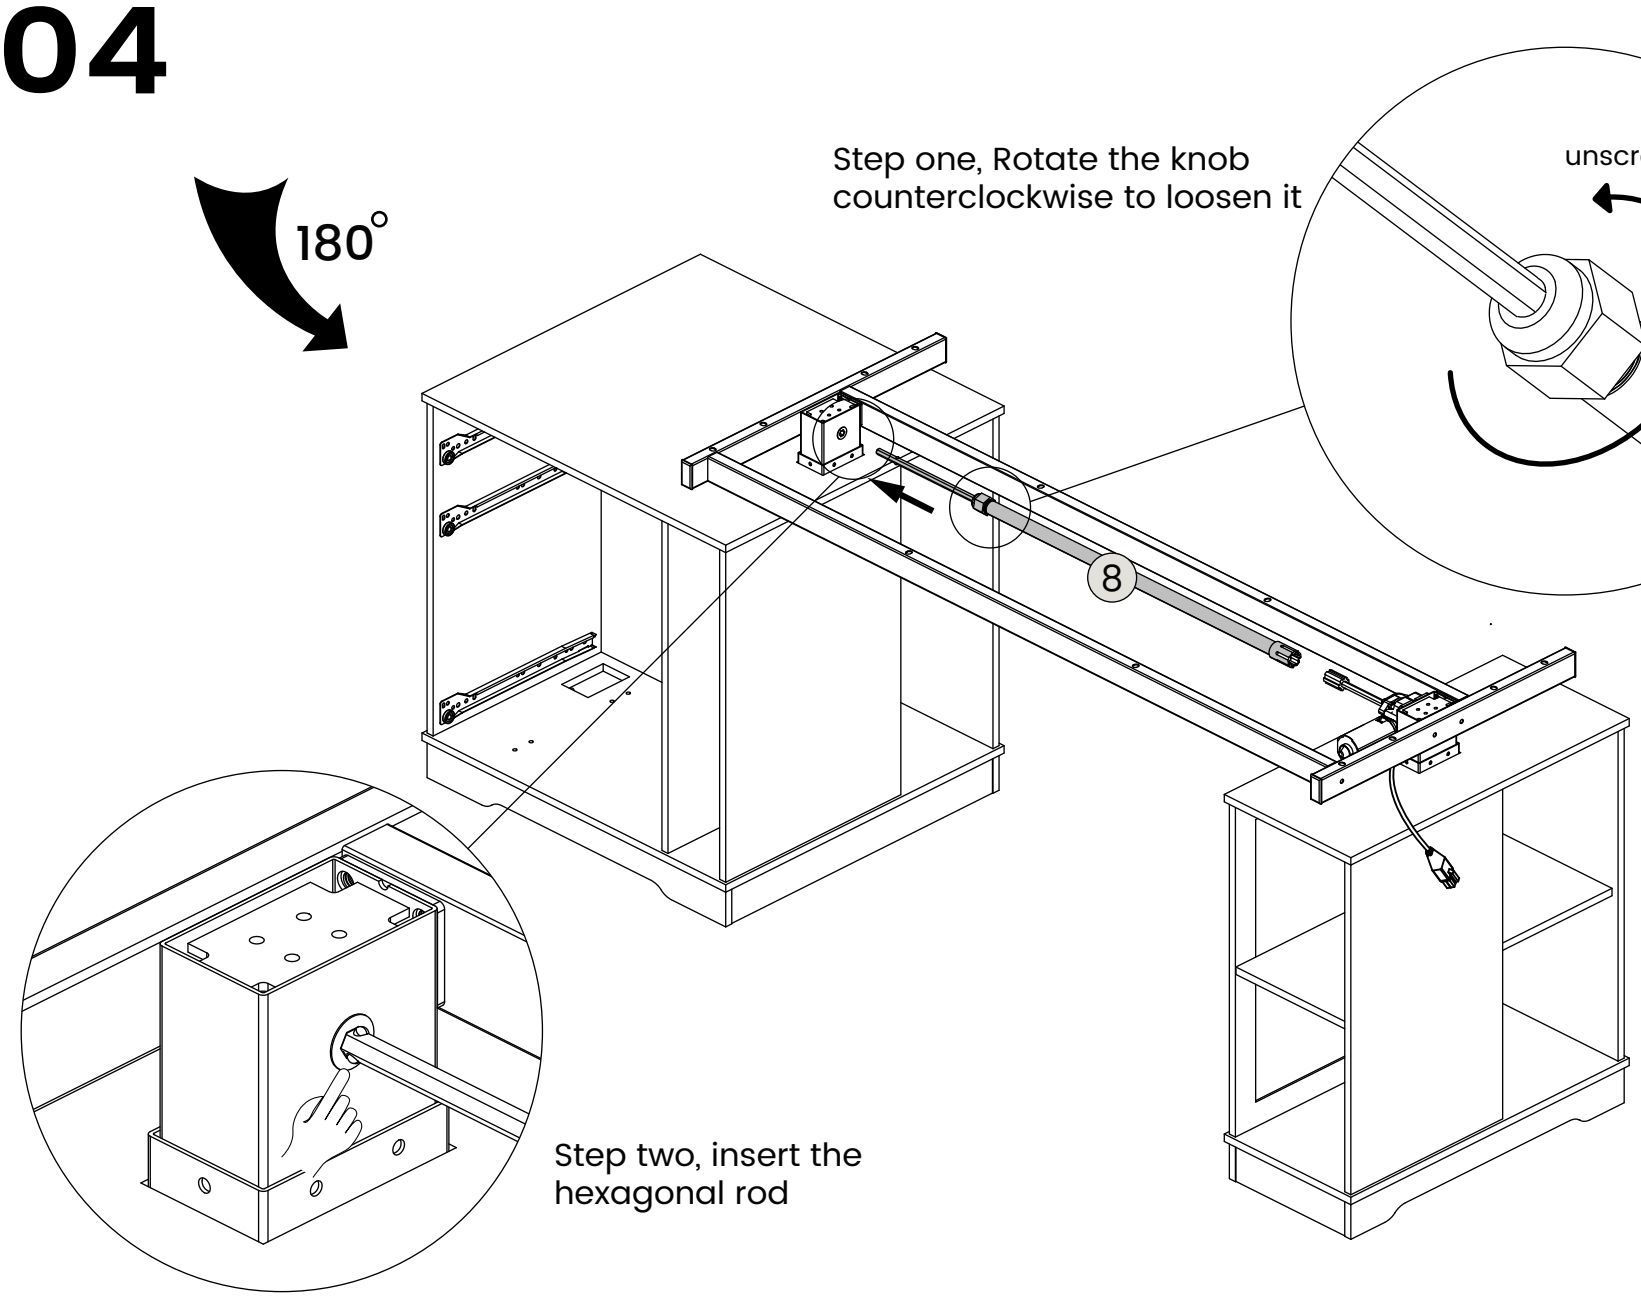


105

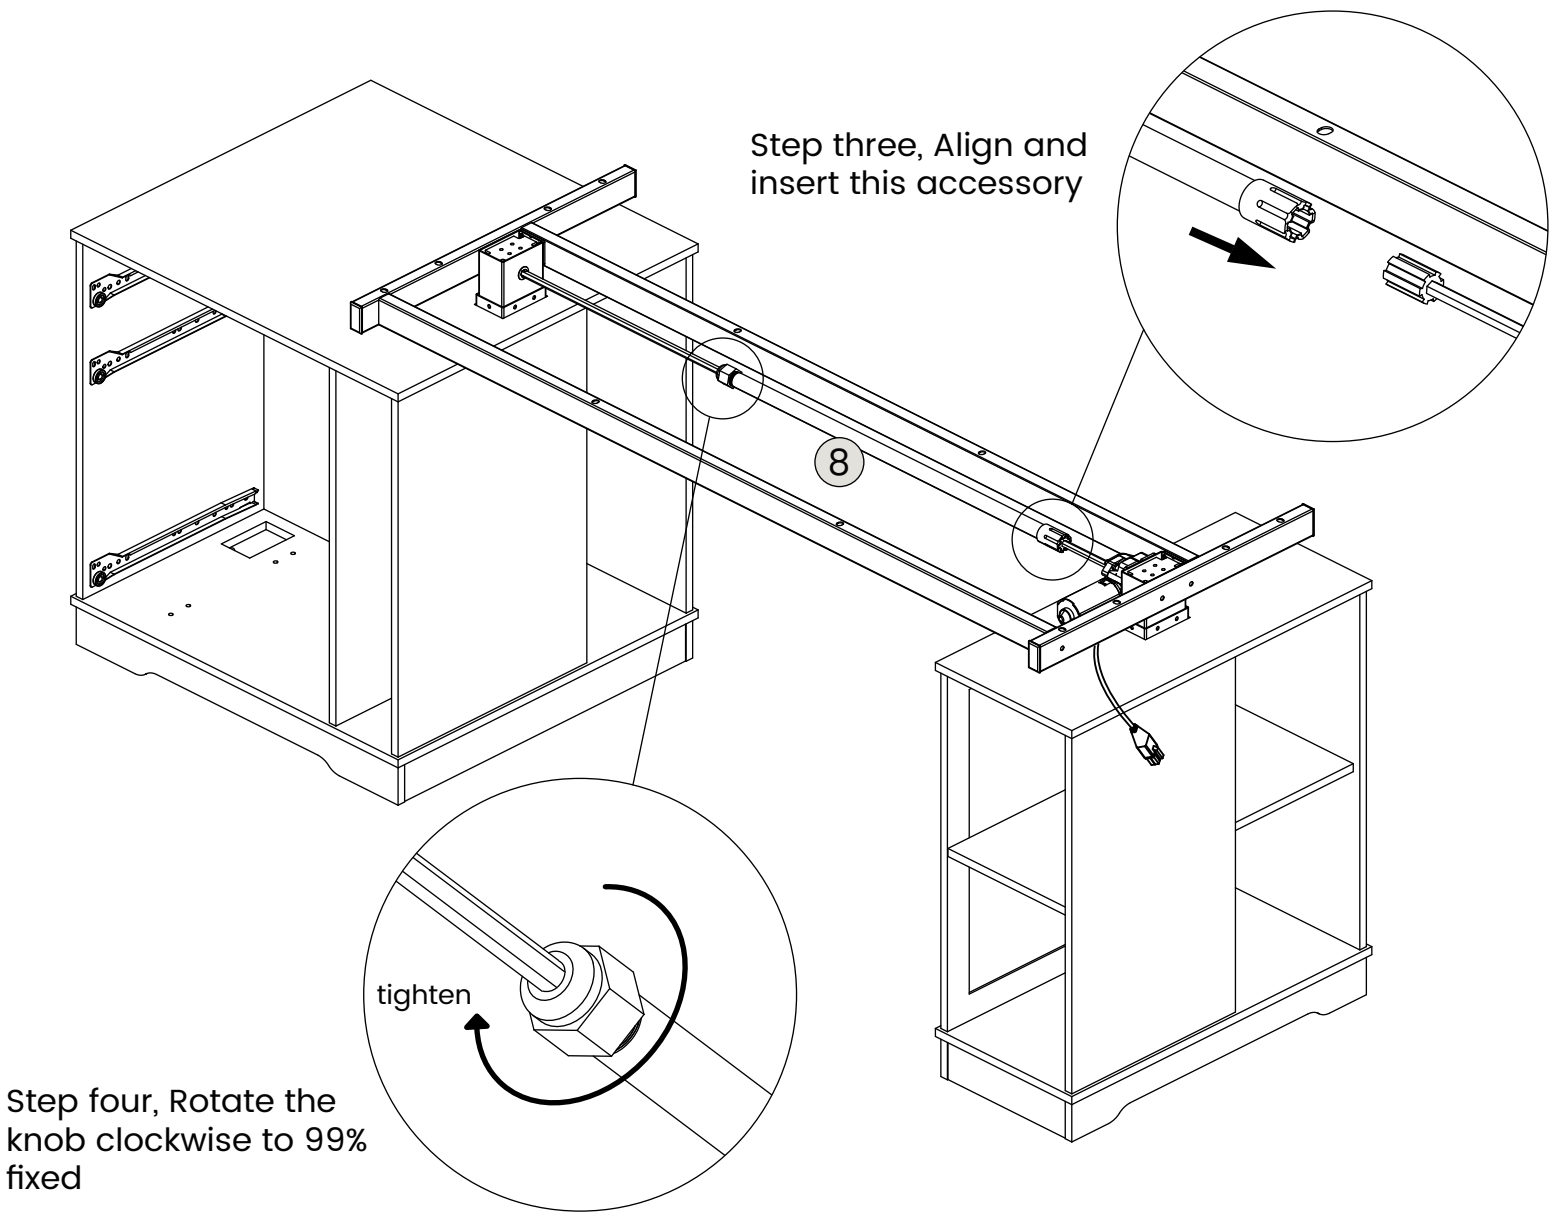


Step four, Rotate the knob clockwise to 99% fixed

106

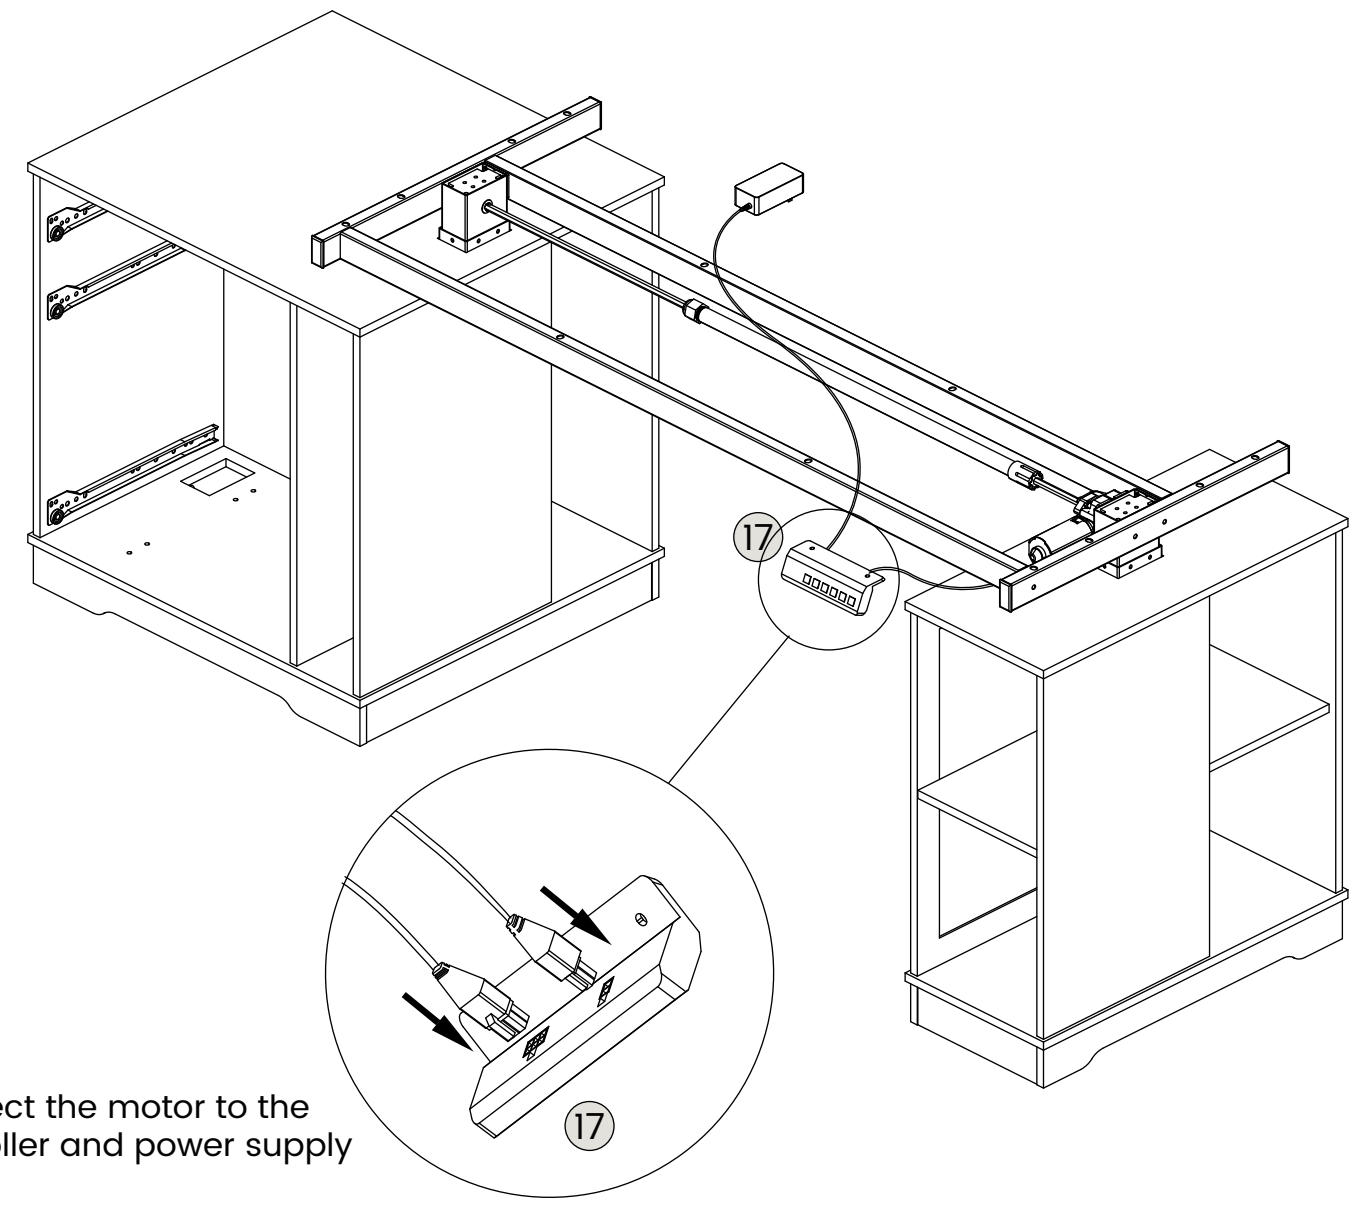


Connect the motor to the controller and power supply

107

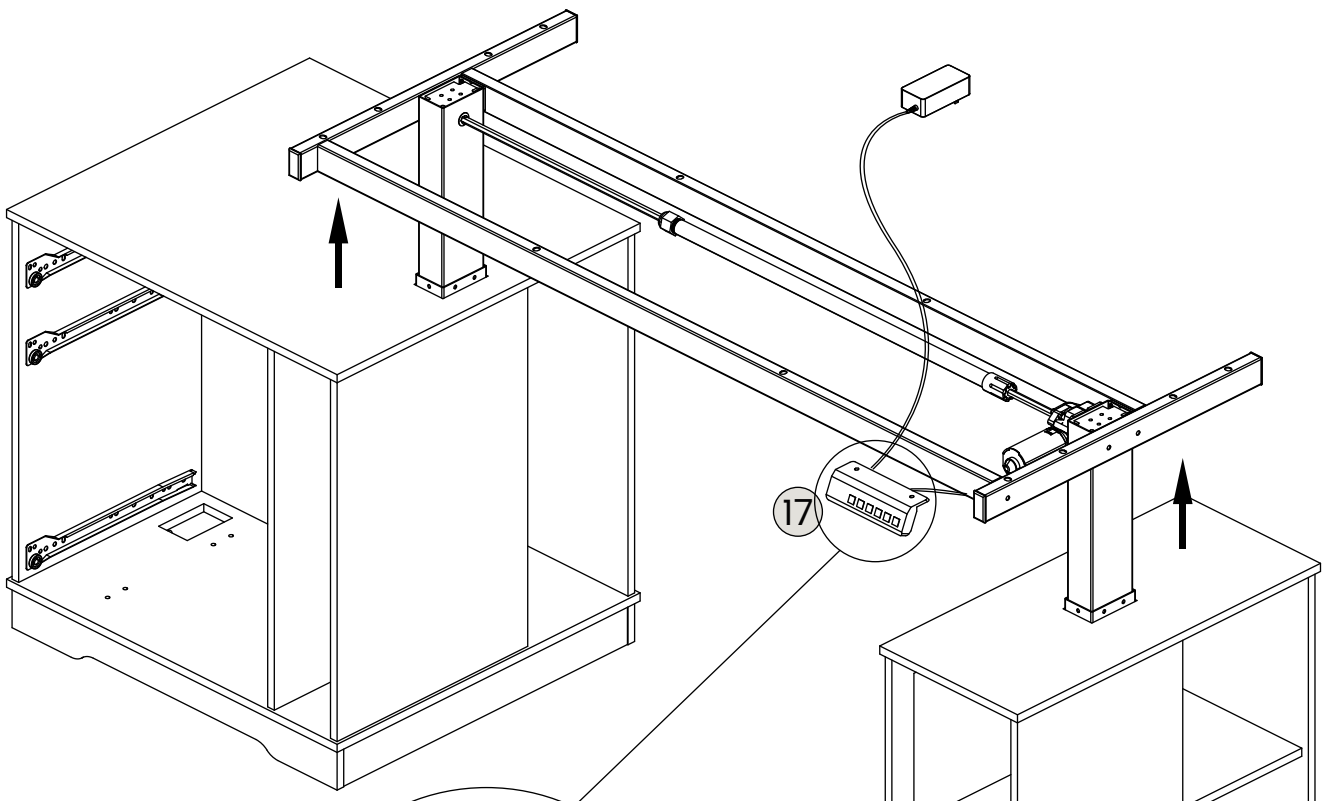


Press and hold the "△" key to raise the steel frame to the appropriate height

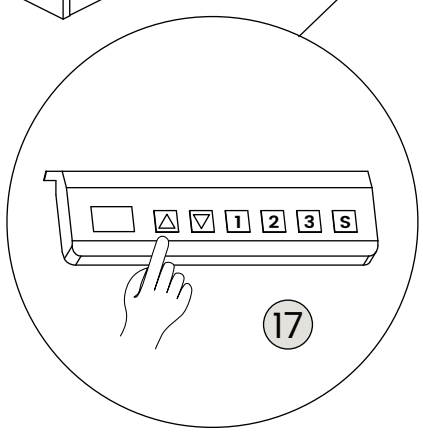


Raise to the appropriate height, unplug the controller, and avoid pulling or damaging it during installation

108

Note that the hole indicated by the arrow is close to the motor

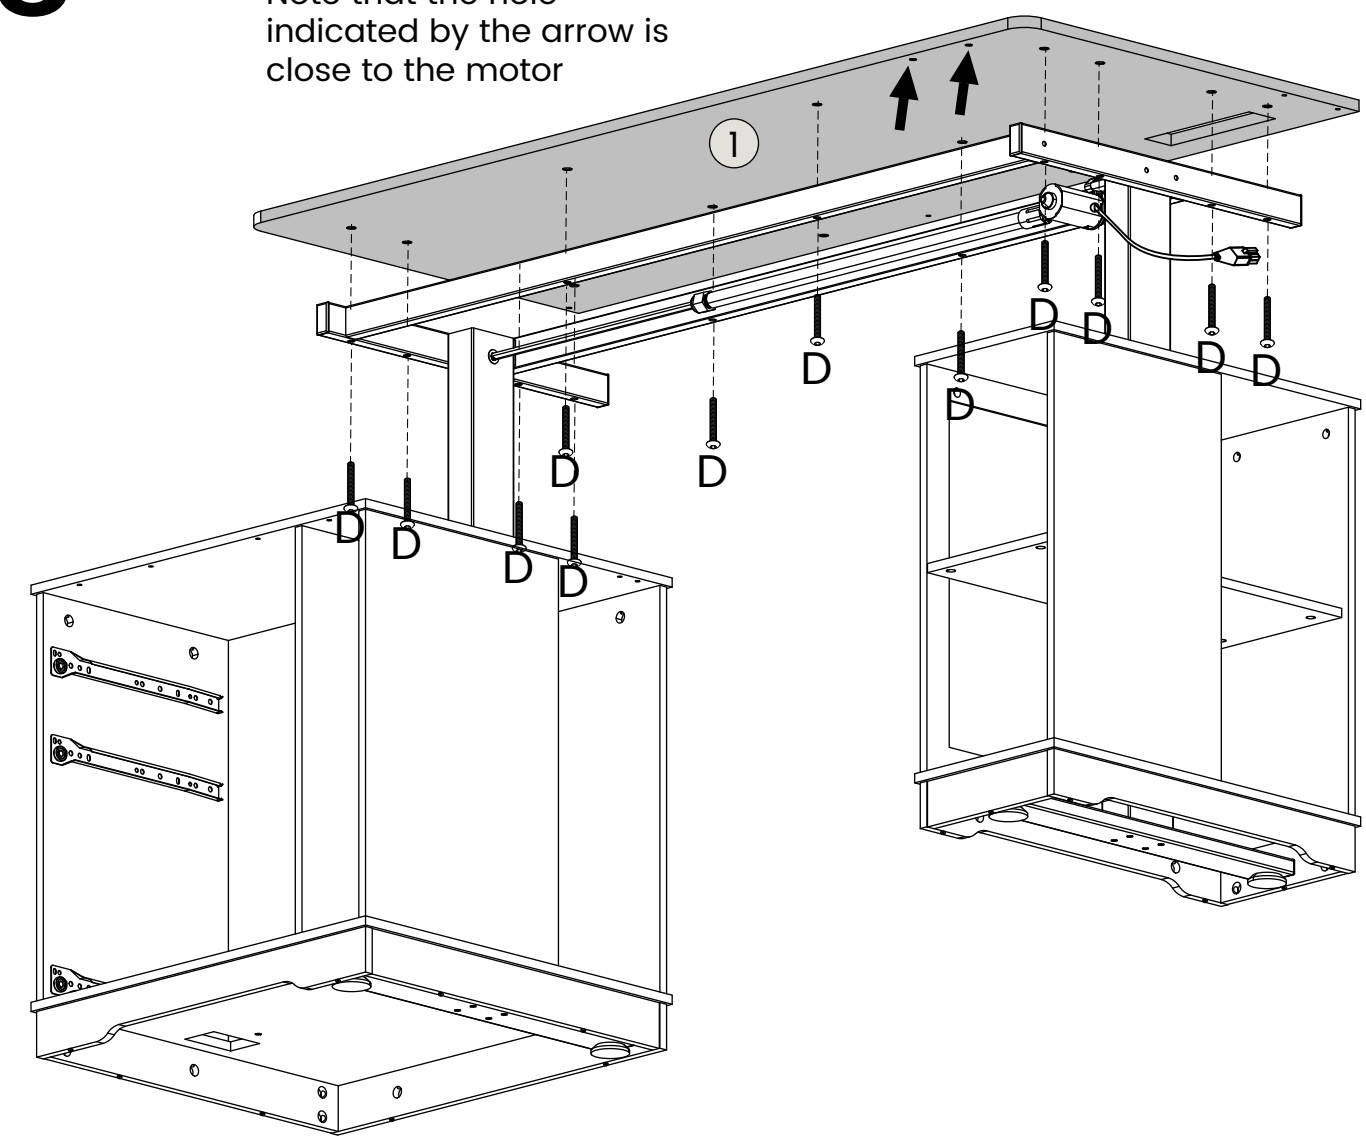


Dx12




M6X48MM

Assembly Instruction

109

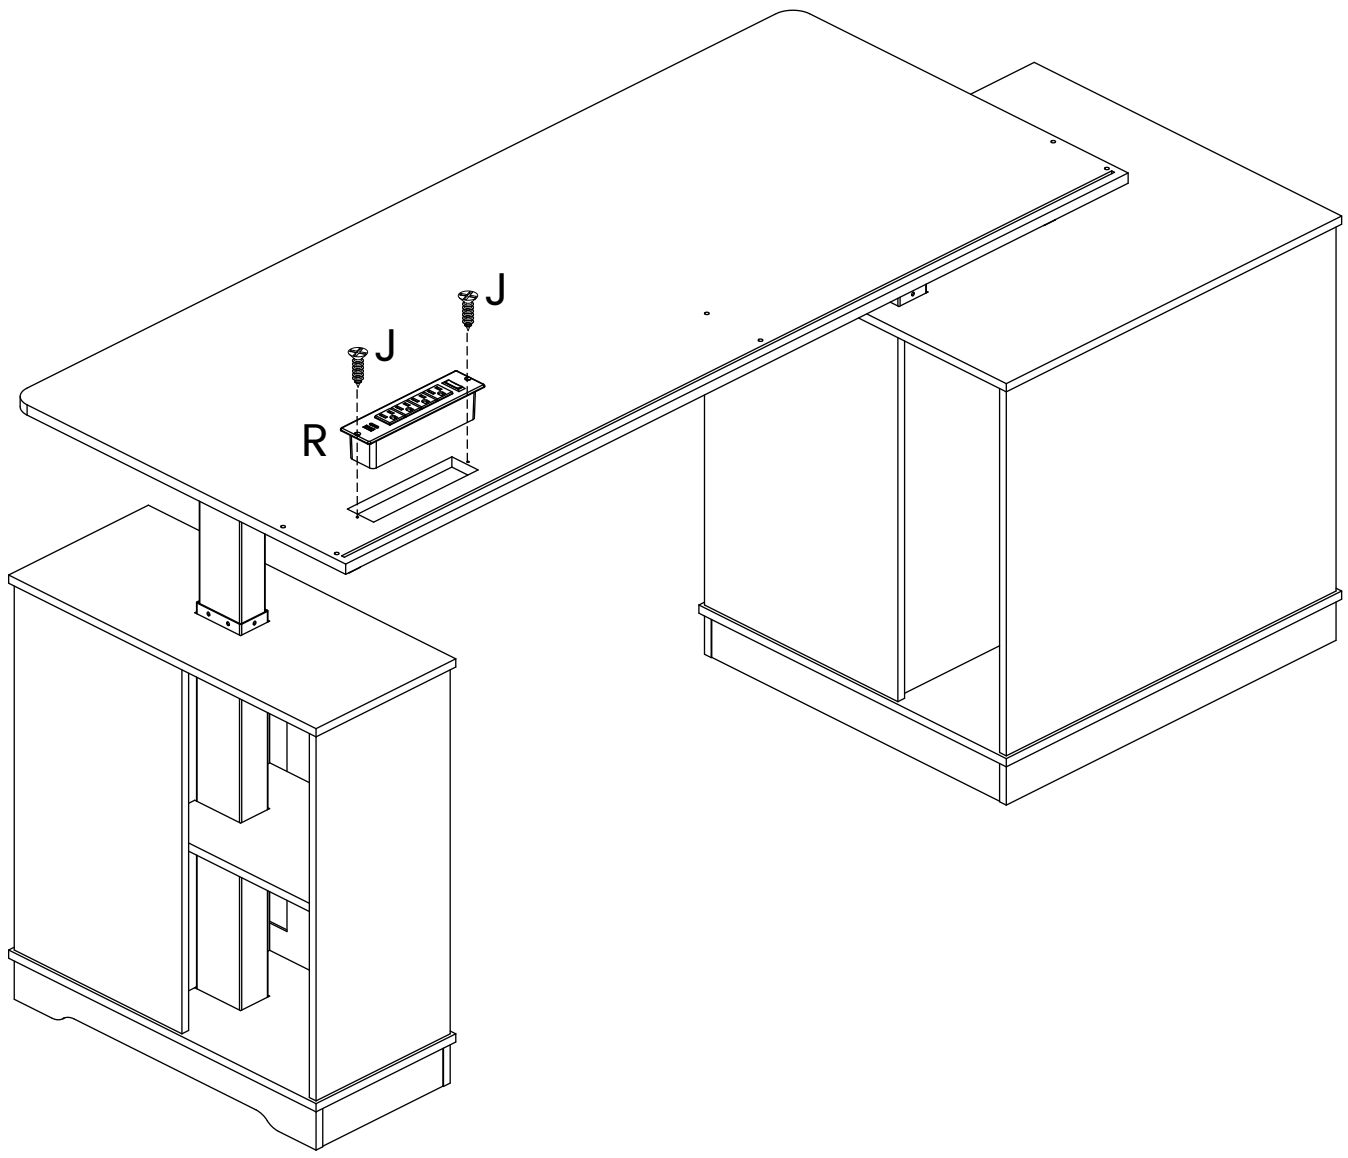


J x2




ST4X12MM


R x1

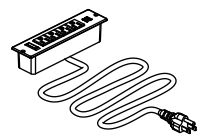


110

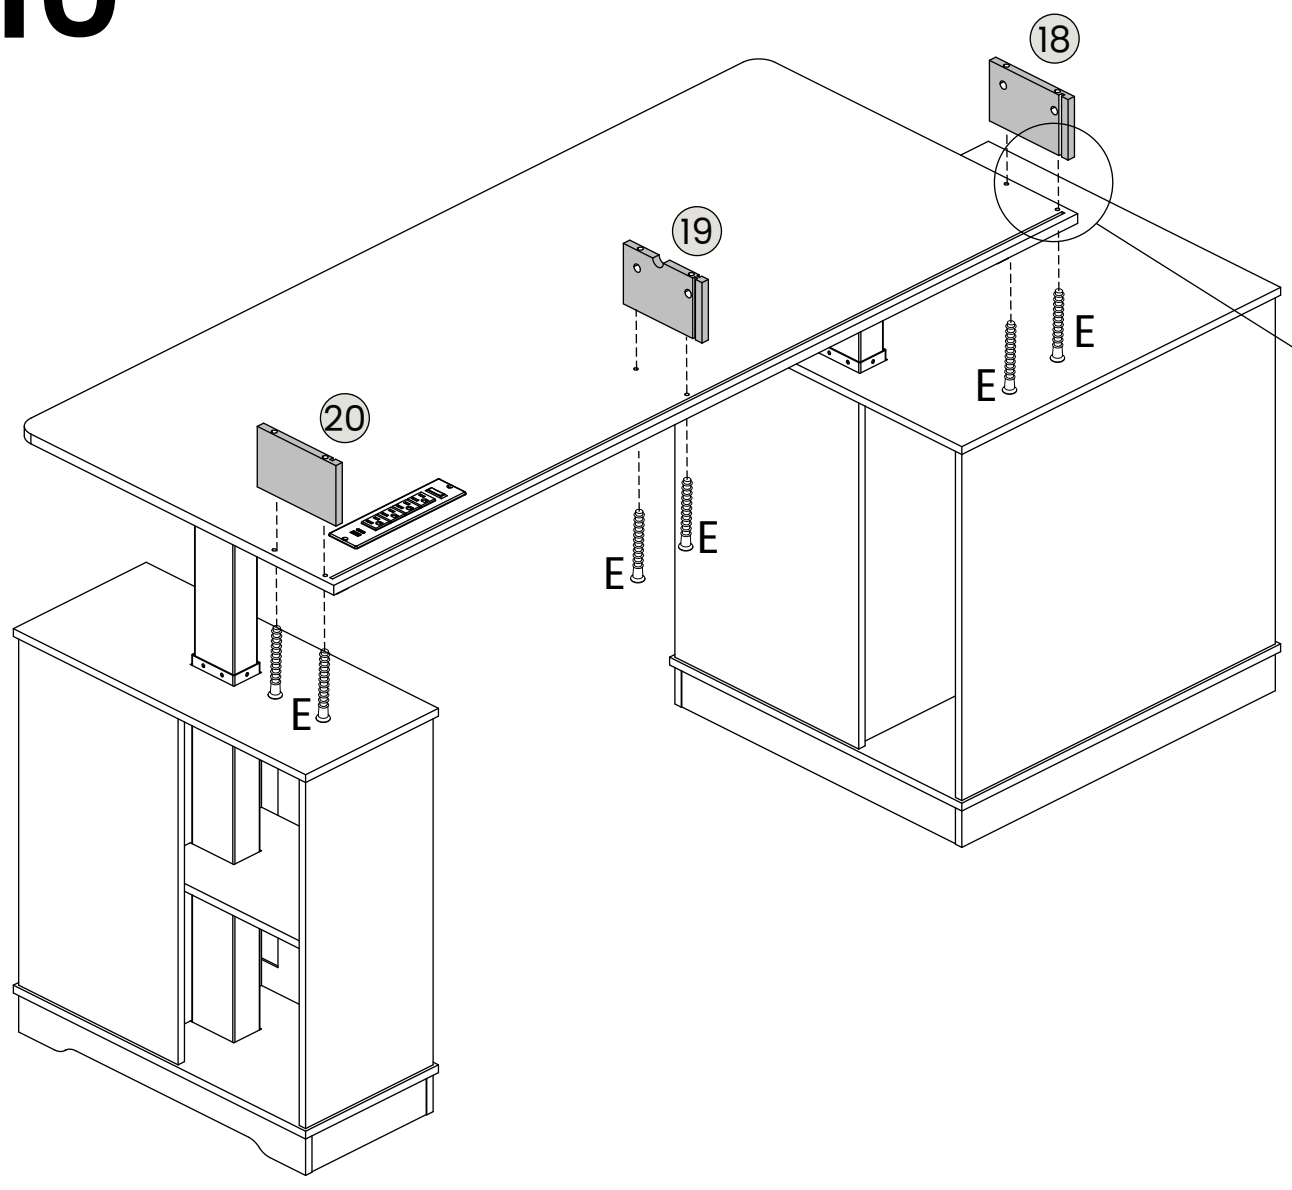

E x6




ST5X40MM

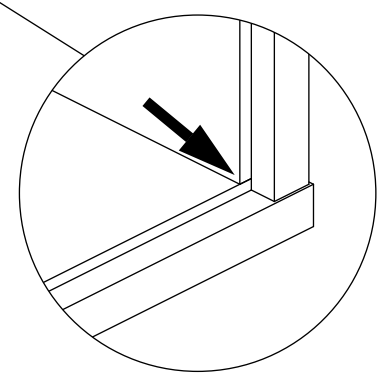

Pay attention to aligning the slots

Assembly Instruction


111

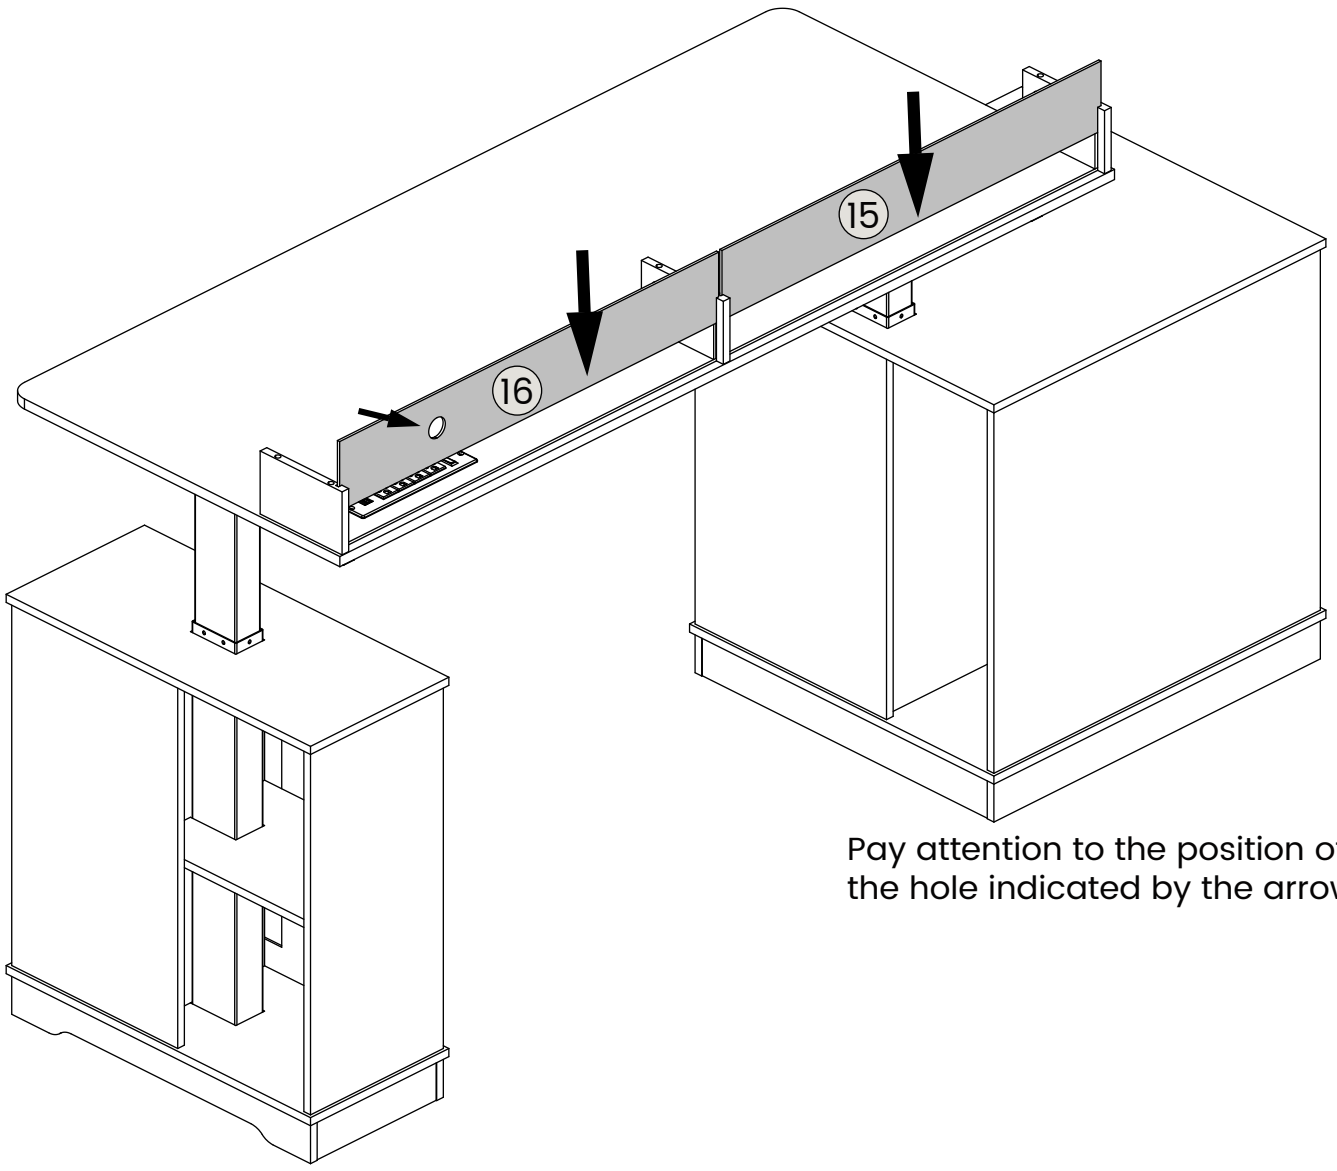

Pay attention to the position of
the hole indicated by the arrow


112

O x6

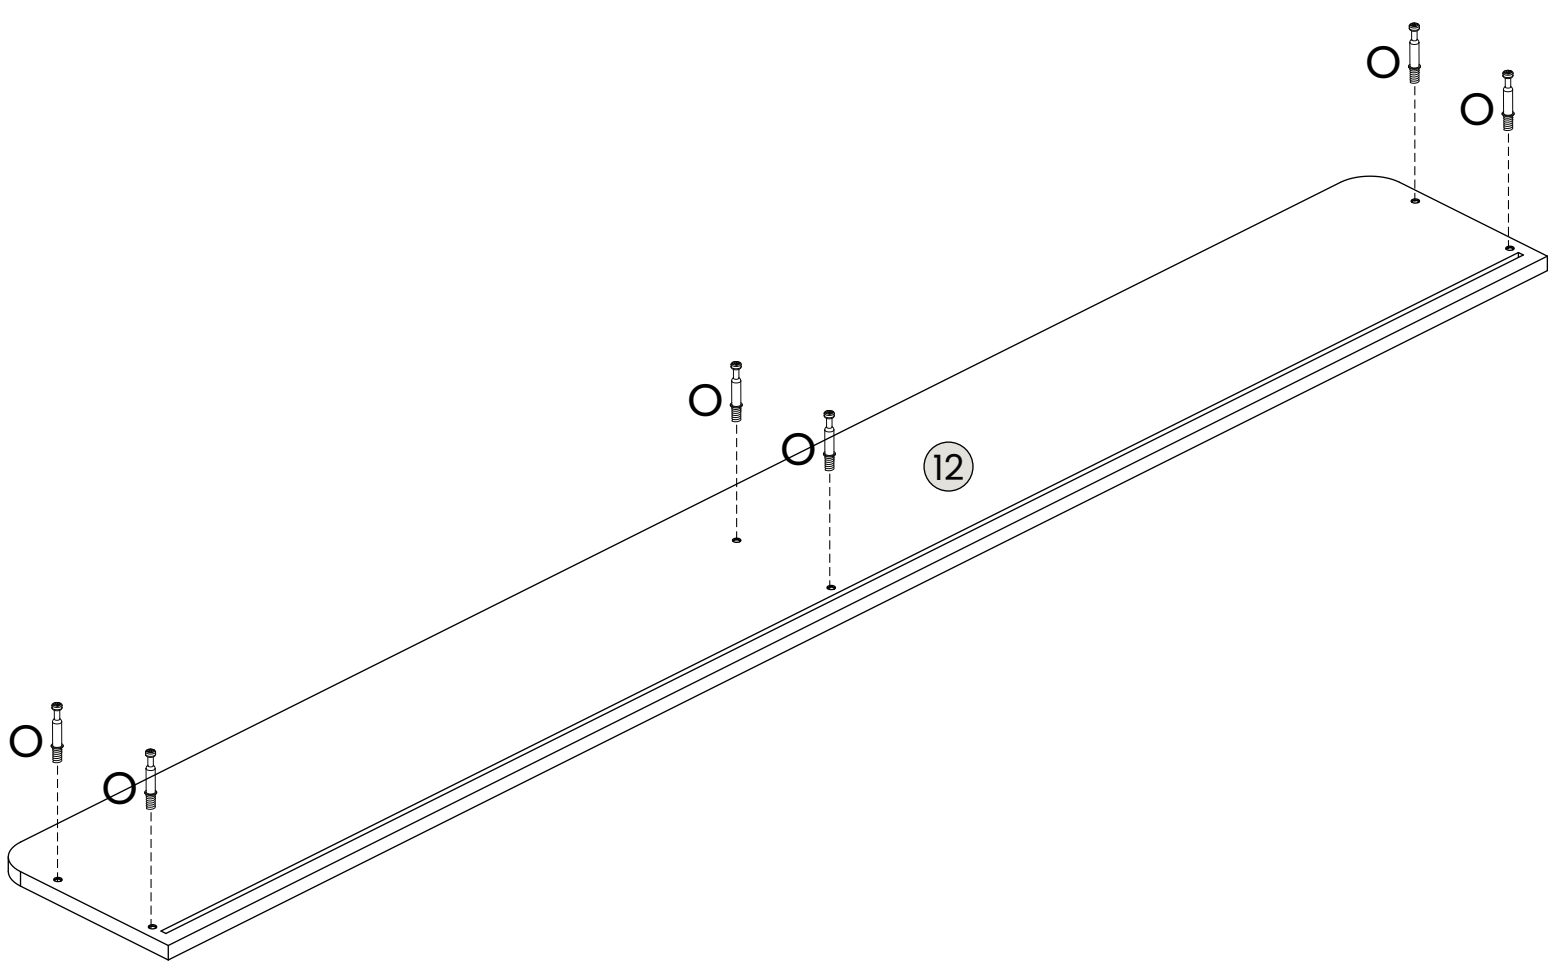


Assembly Instruction


113

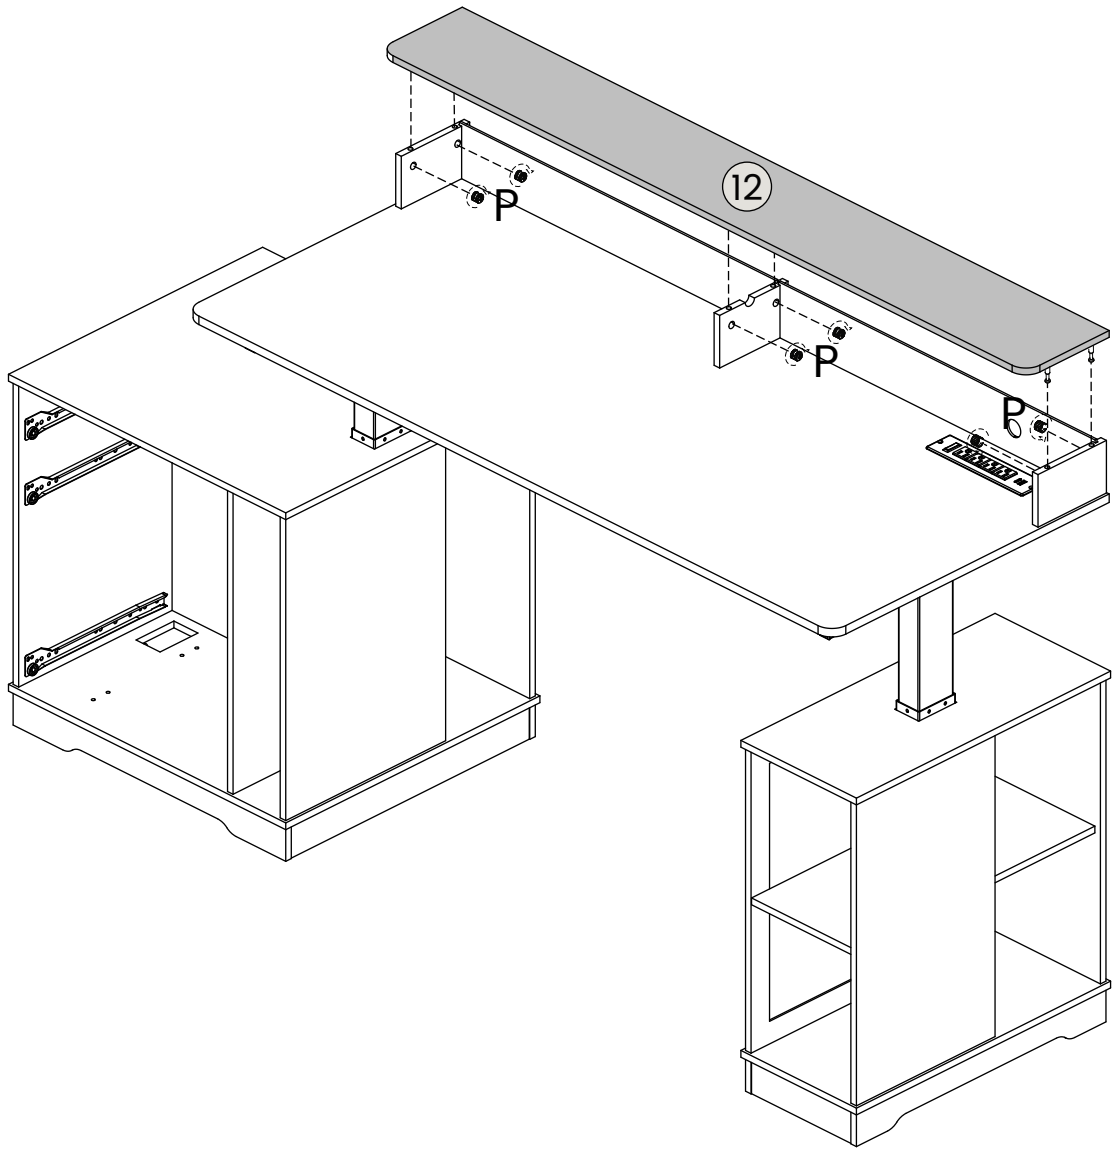


P x6



114

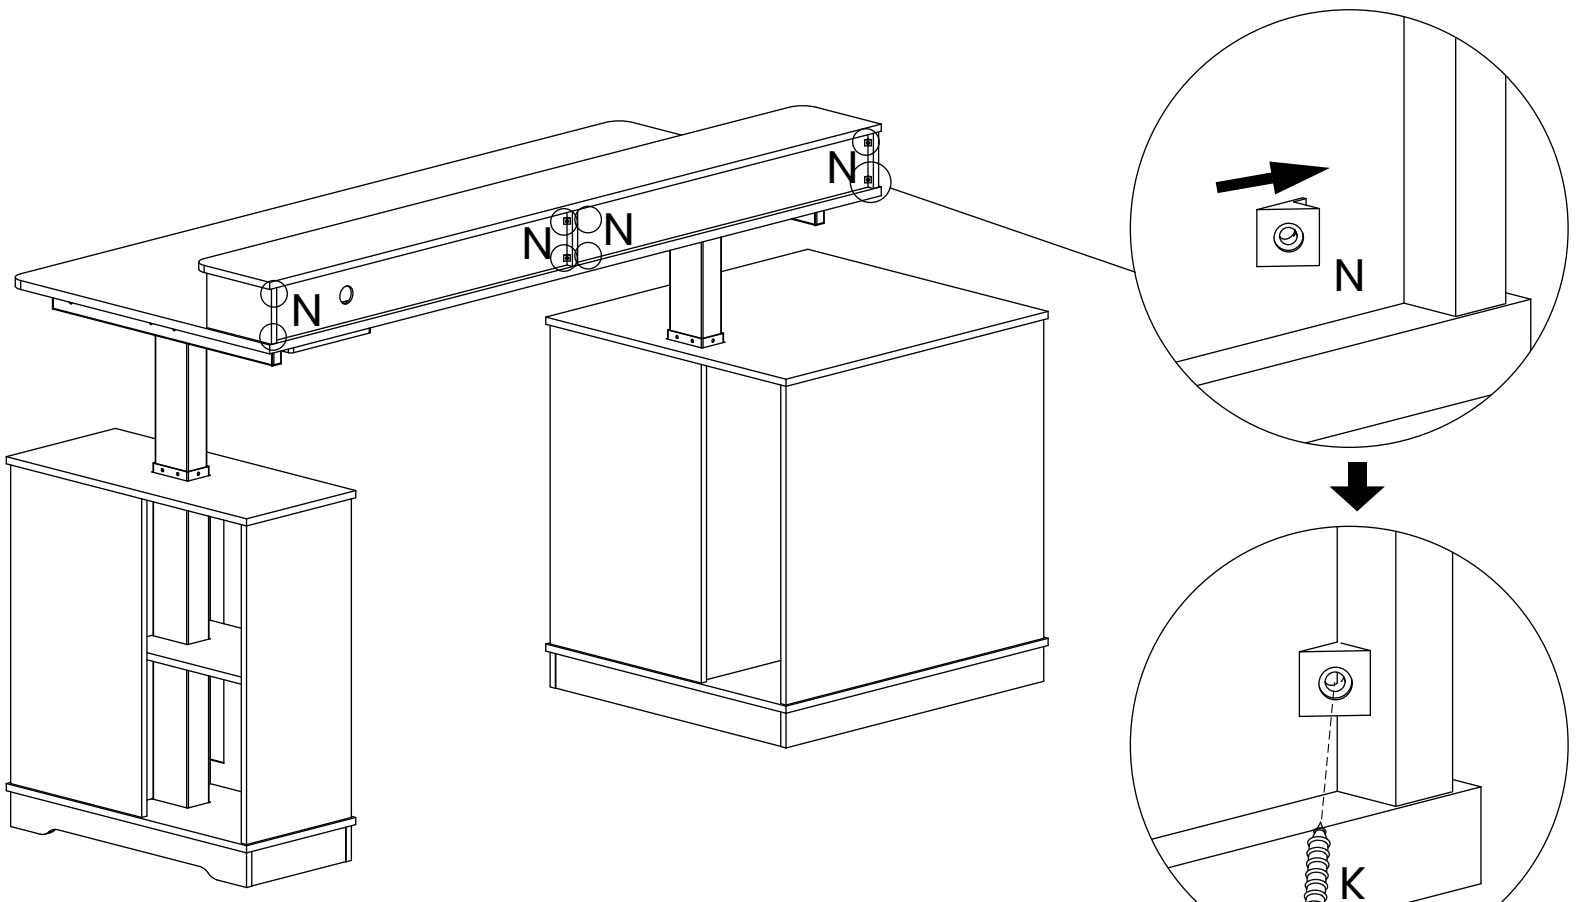


K x8



ST4x14MM


N x8



Assembly Instruction







115

Y x3

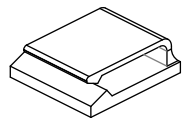

Q x1

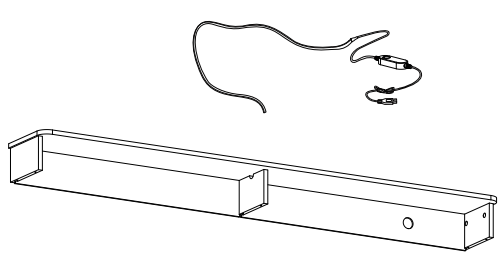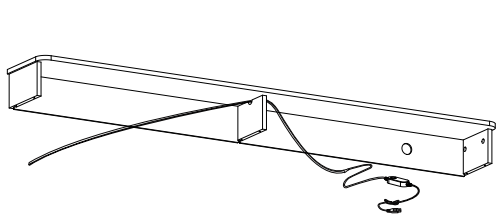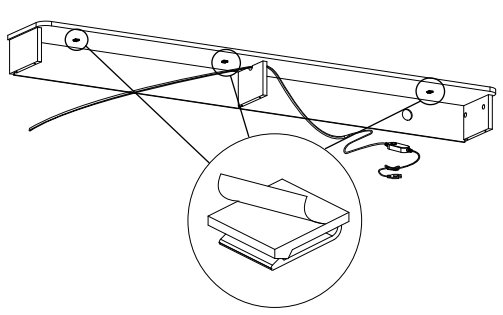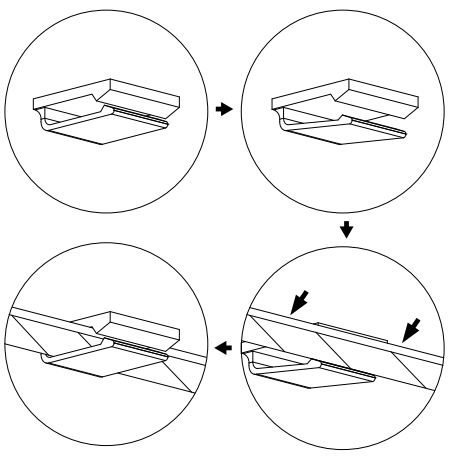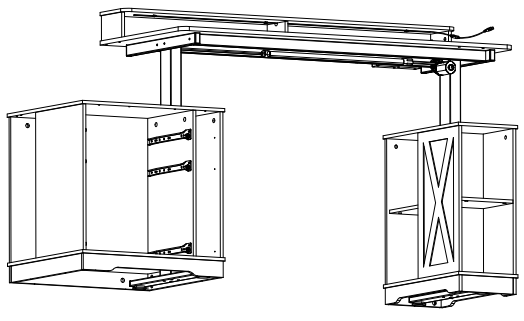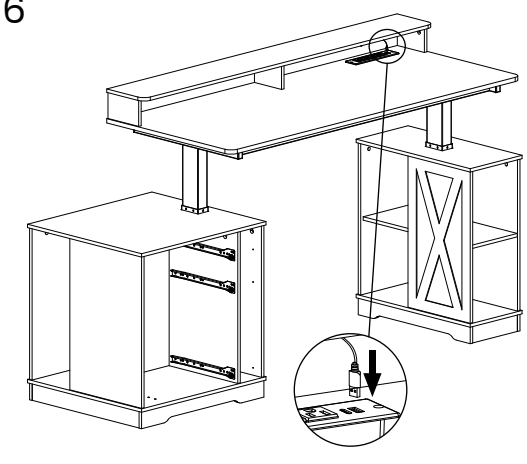


1	2	3
		
4	5	6
		


Assembly Instruction

116

F x2




M4X12MM

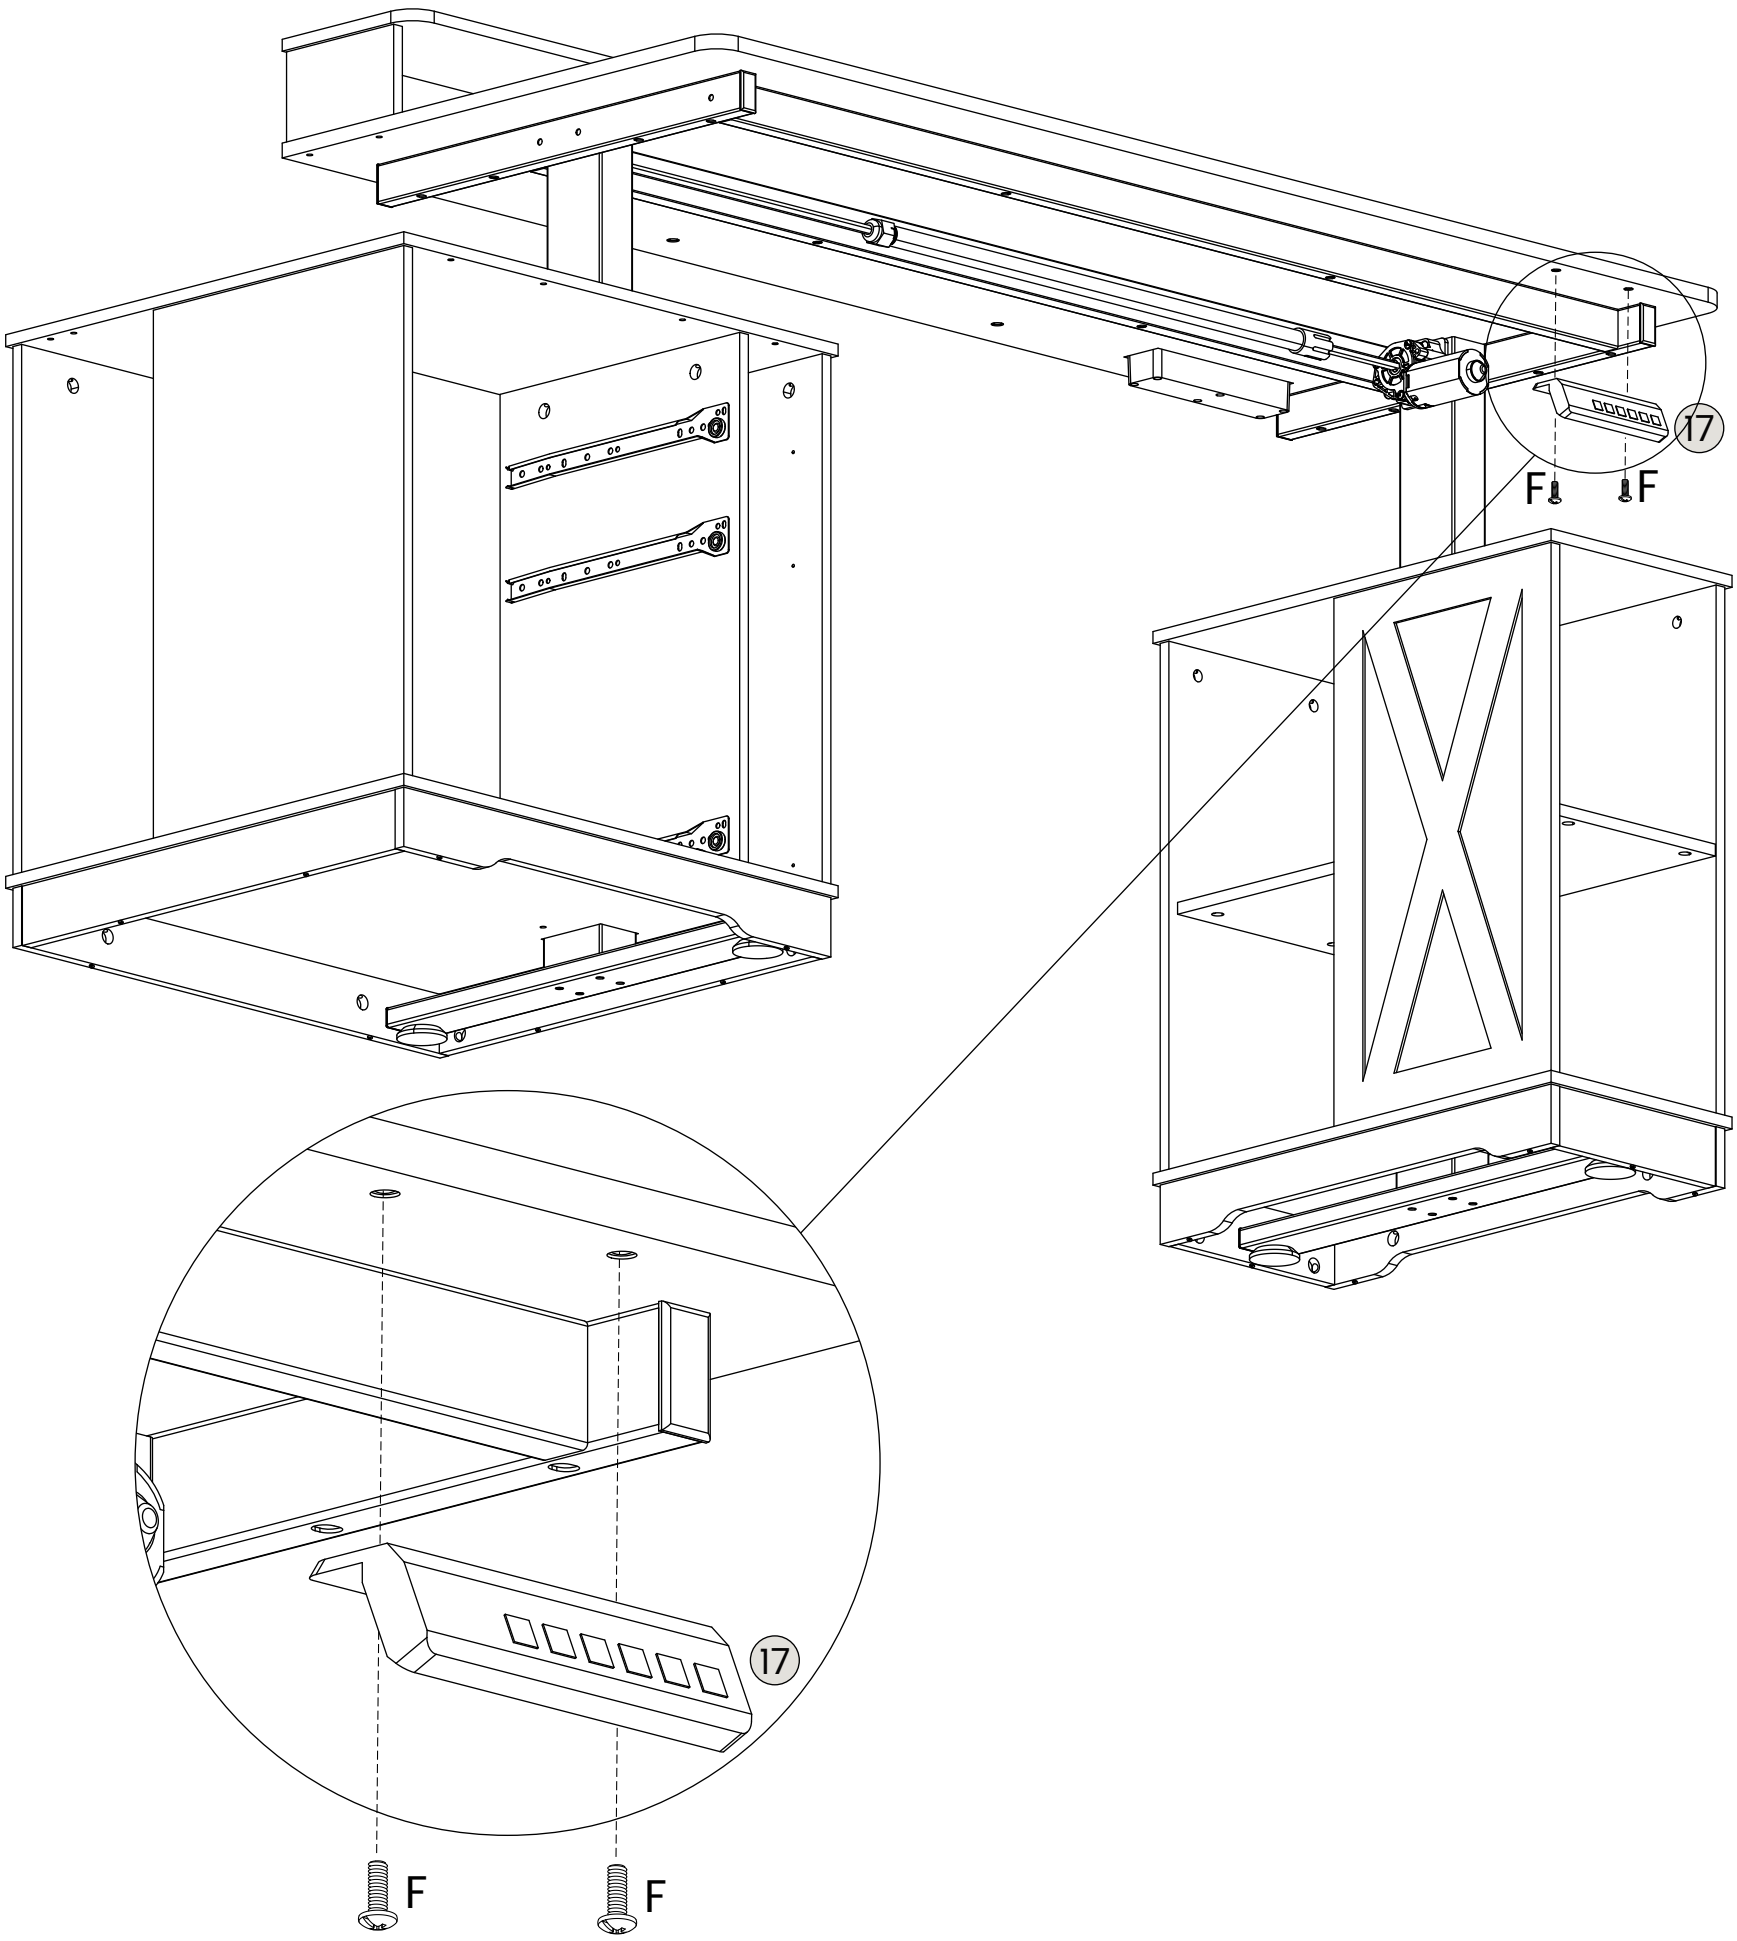



Assembly Instruction

117


W x2



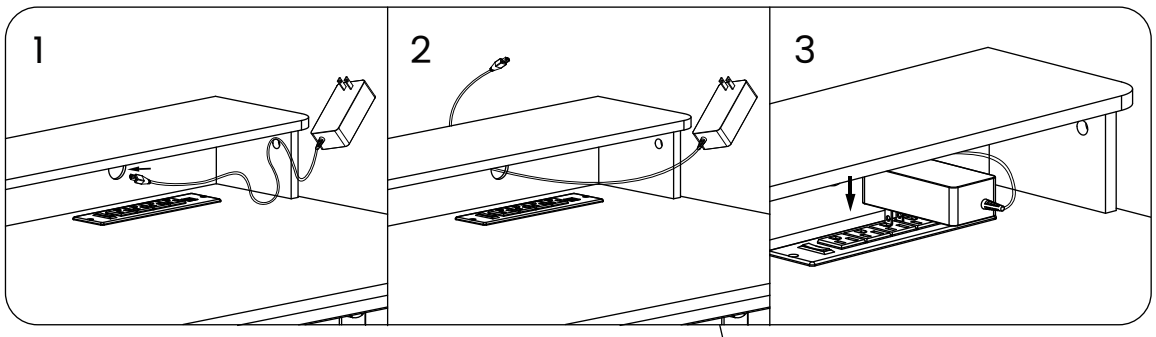


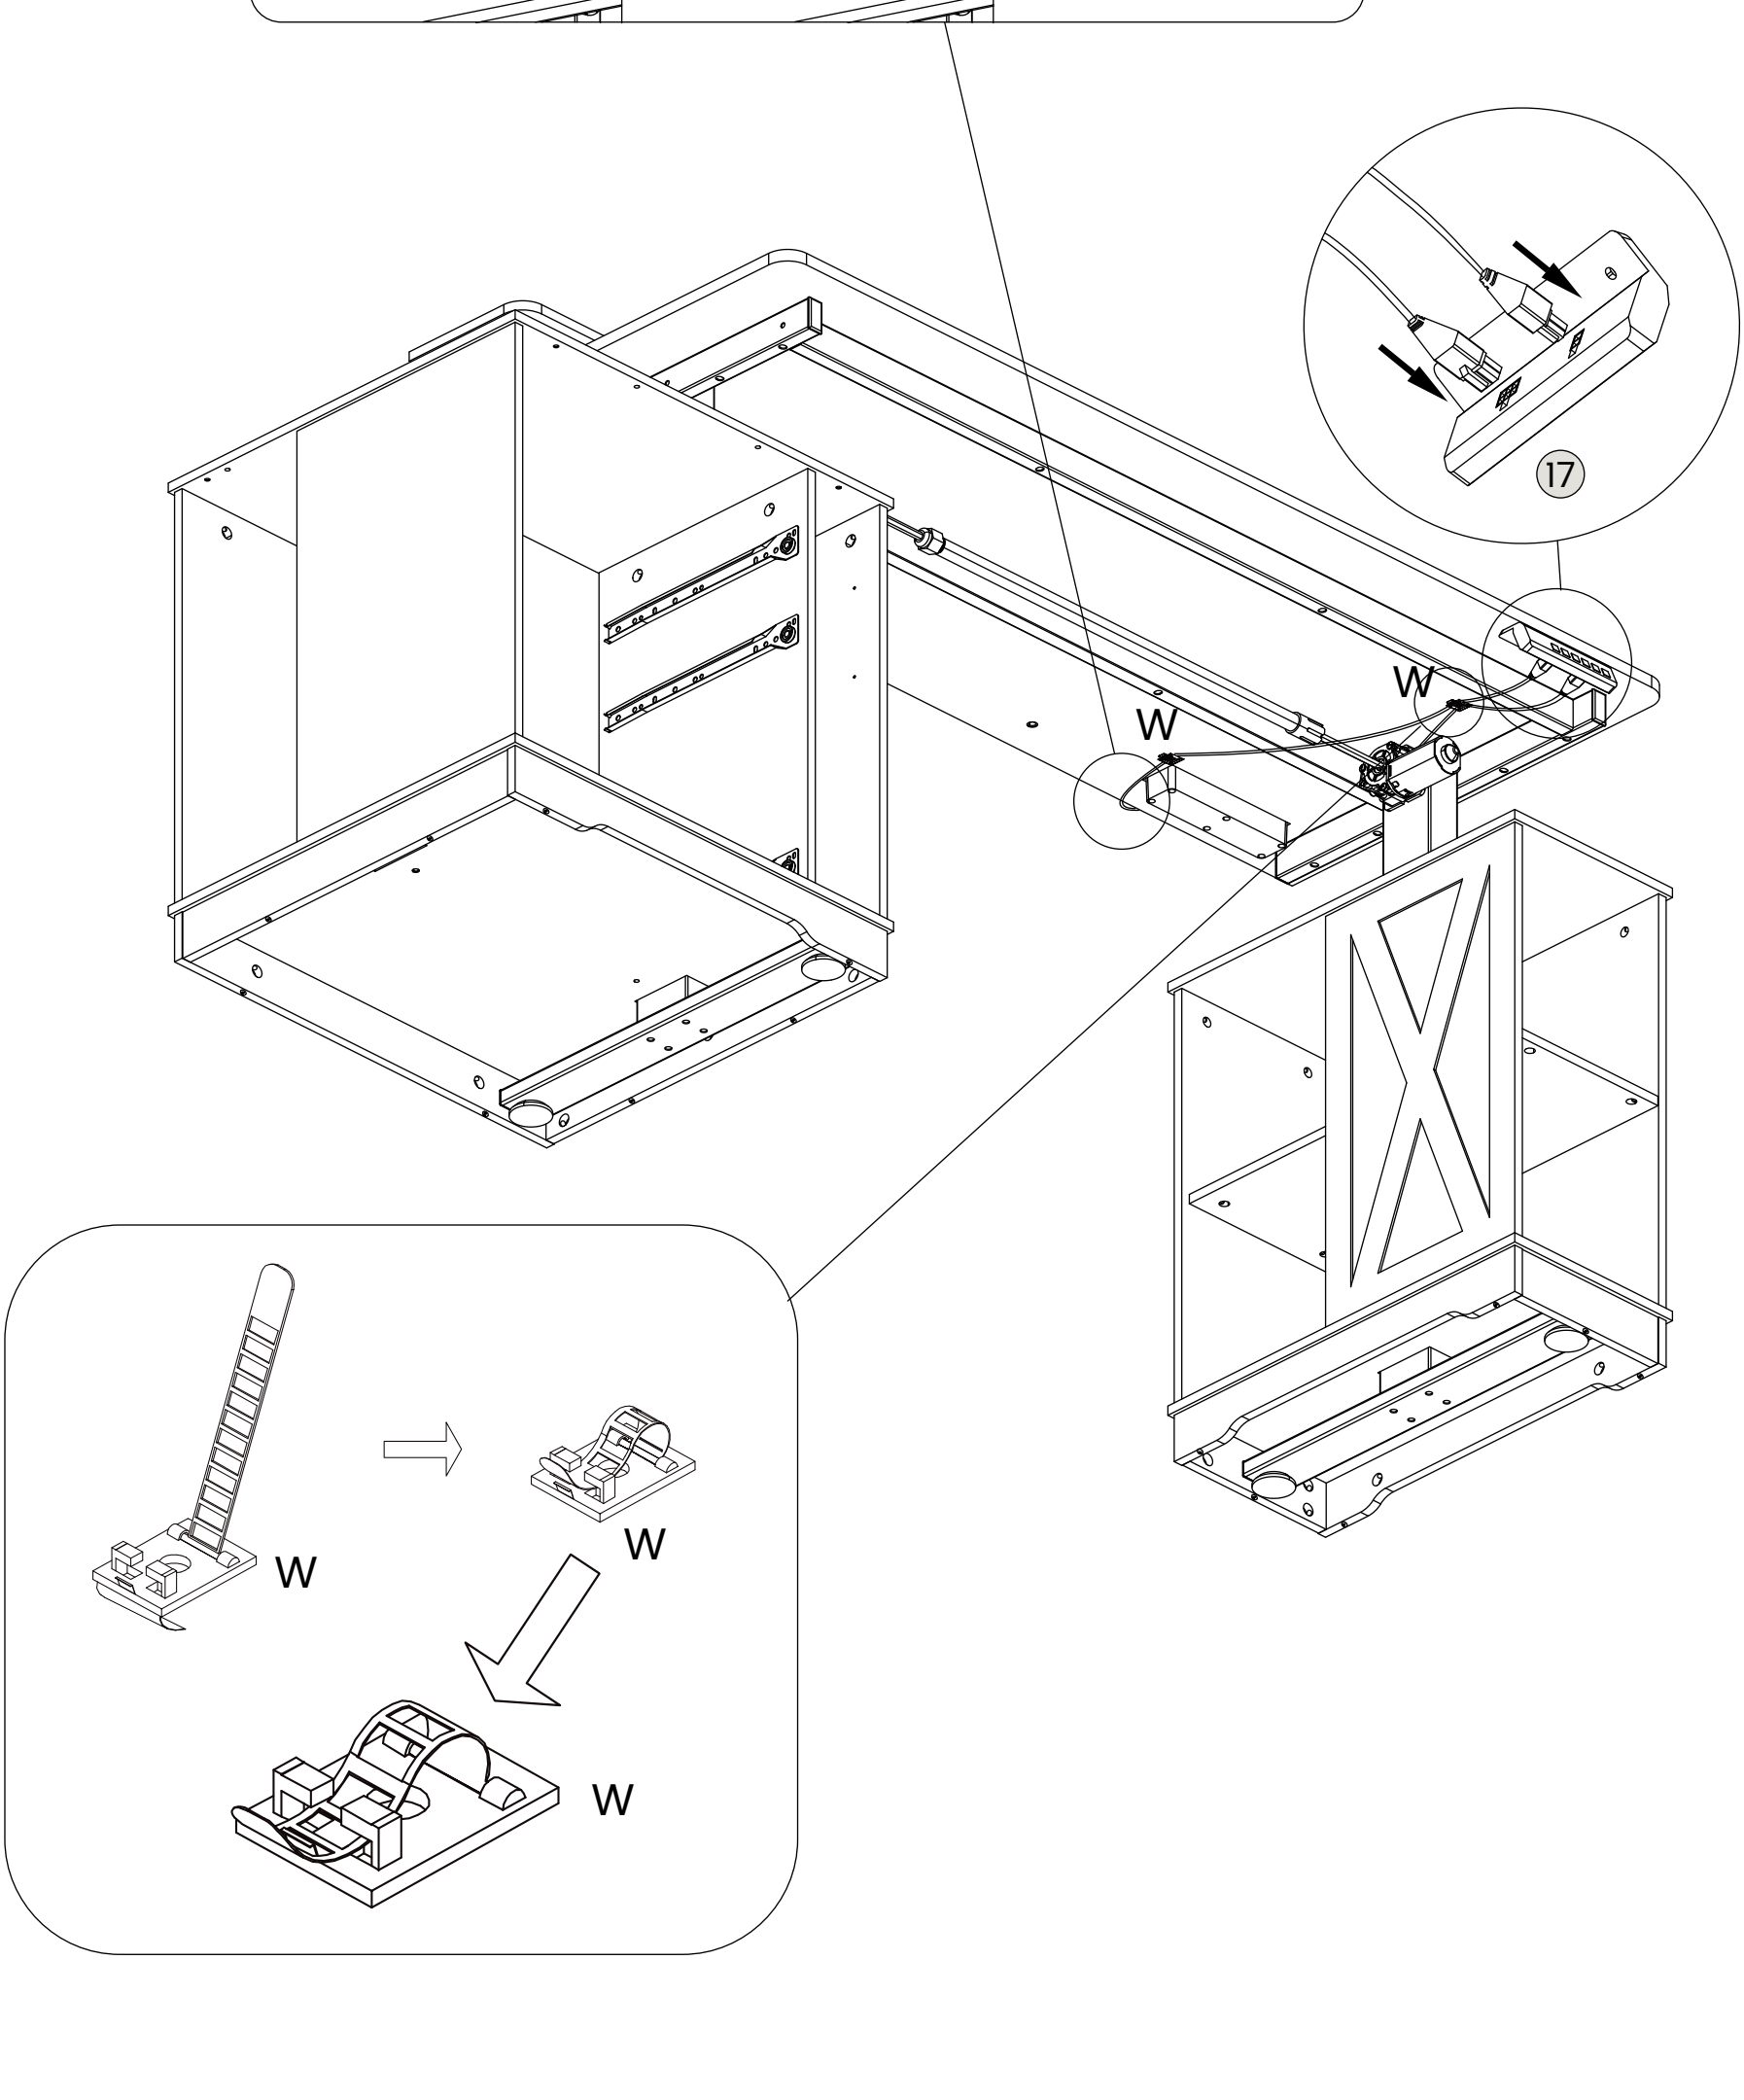


118

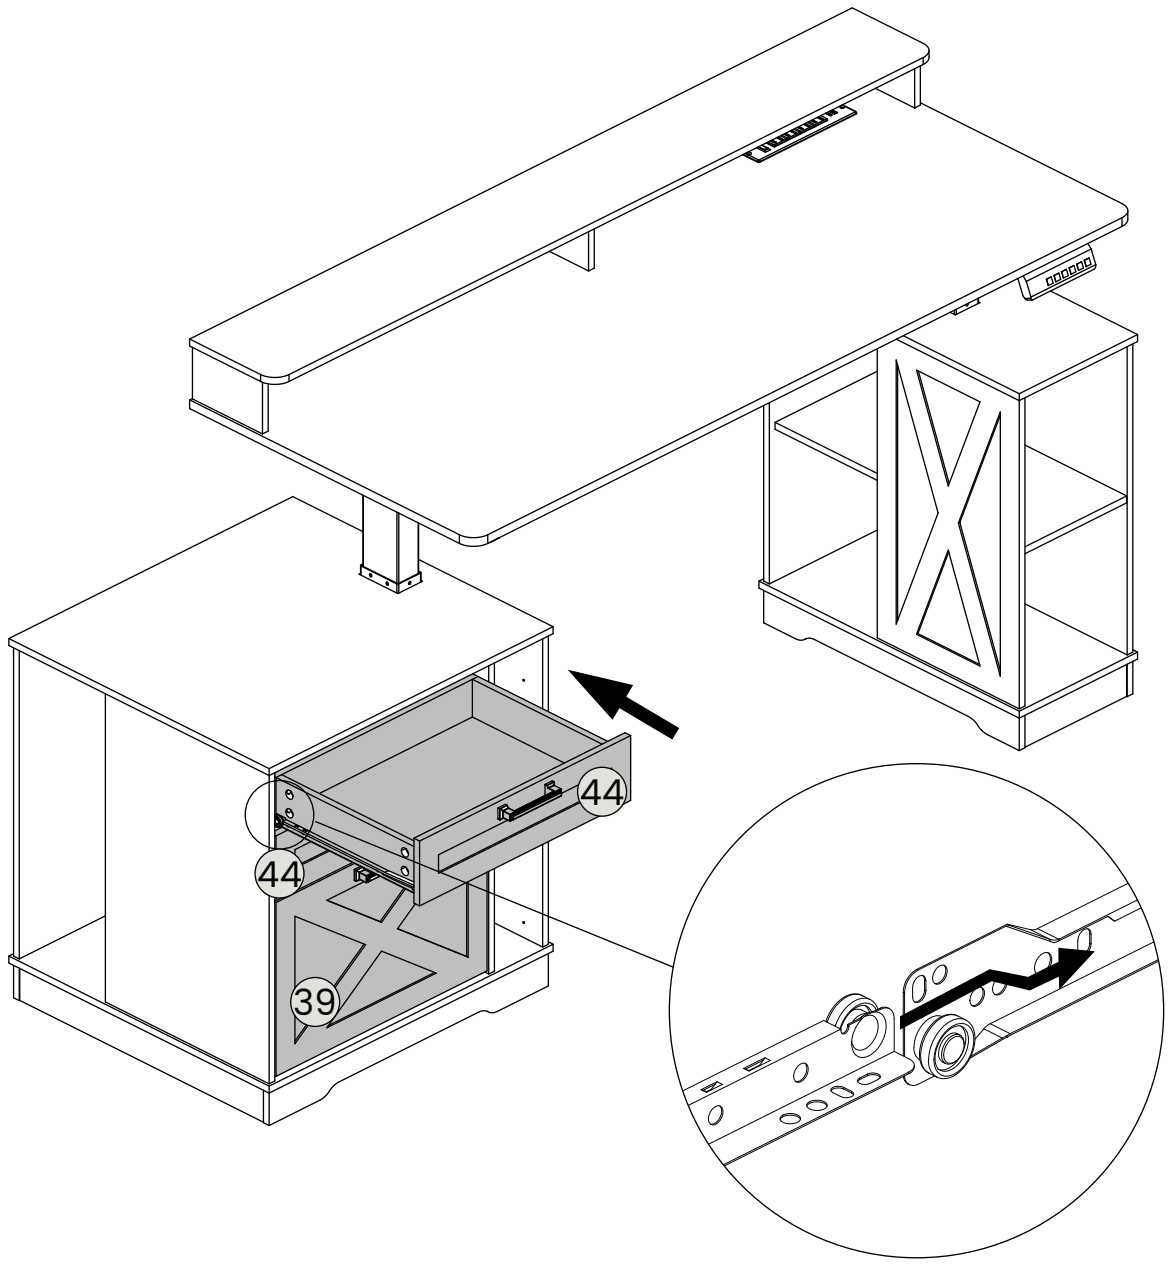

119

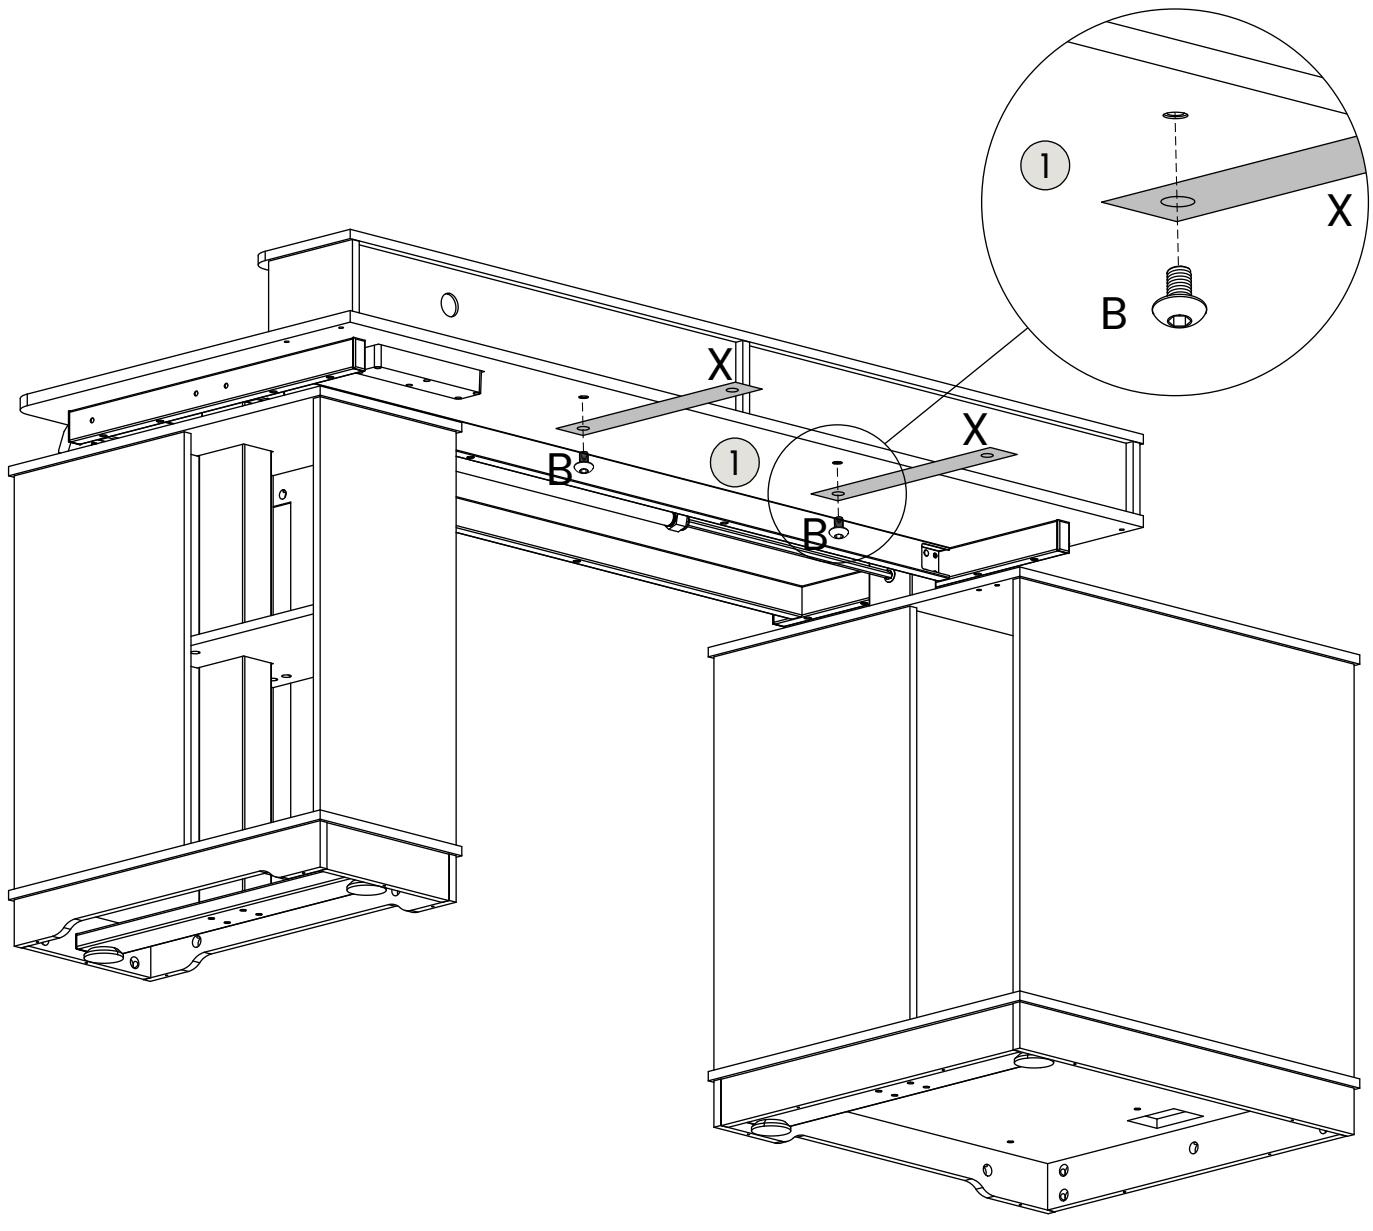

B x2




M6X10MM


X x2


Assembly Instruction

120

X x2

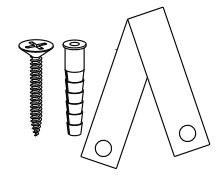


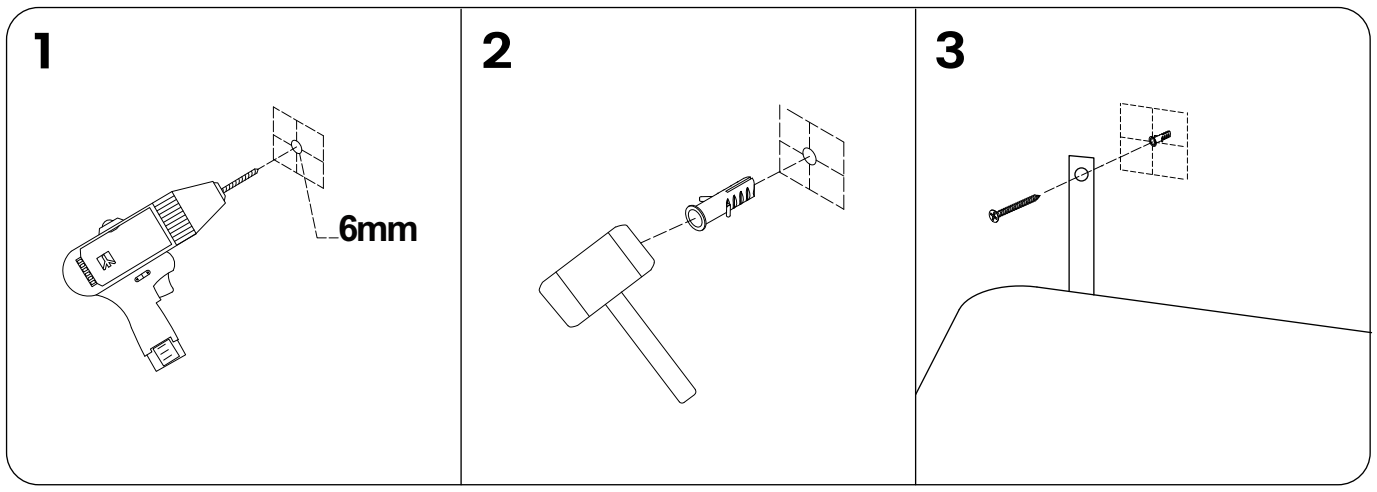

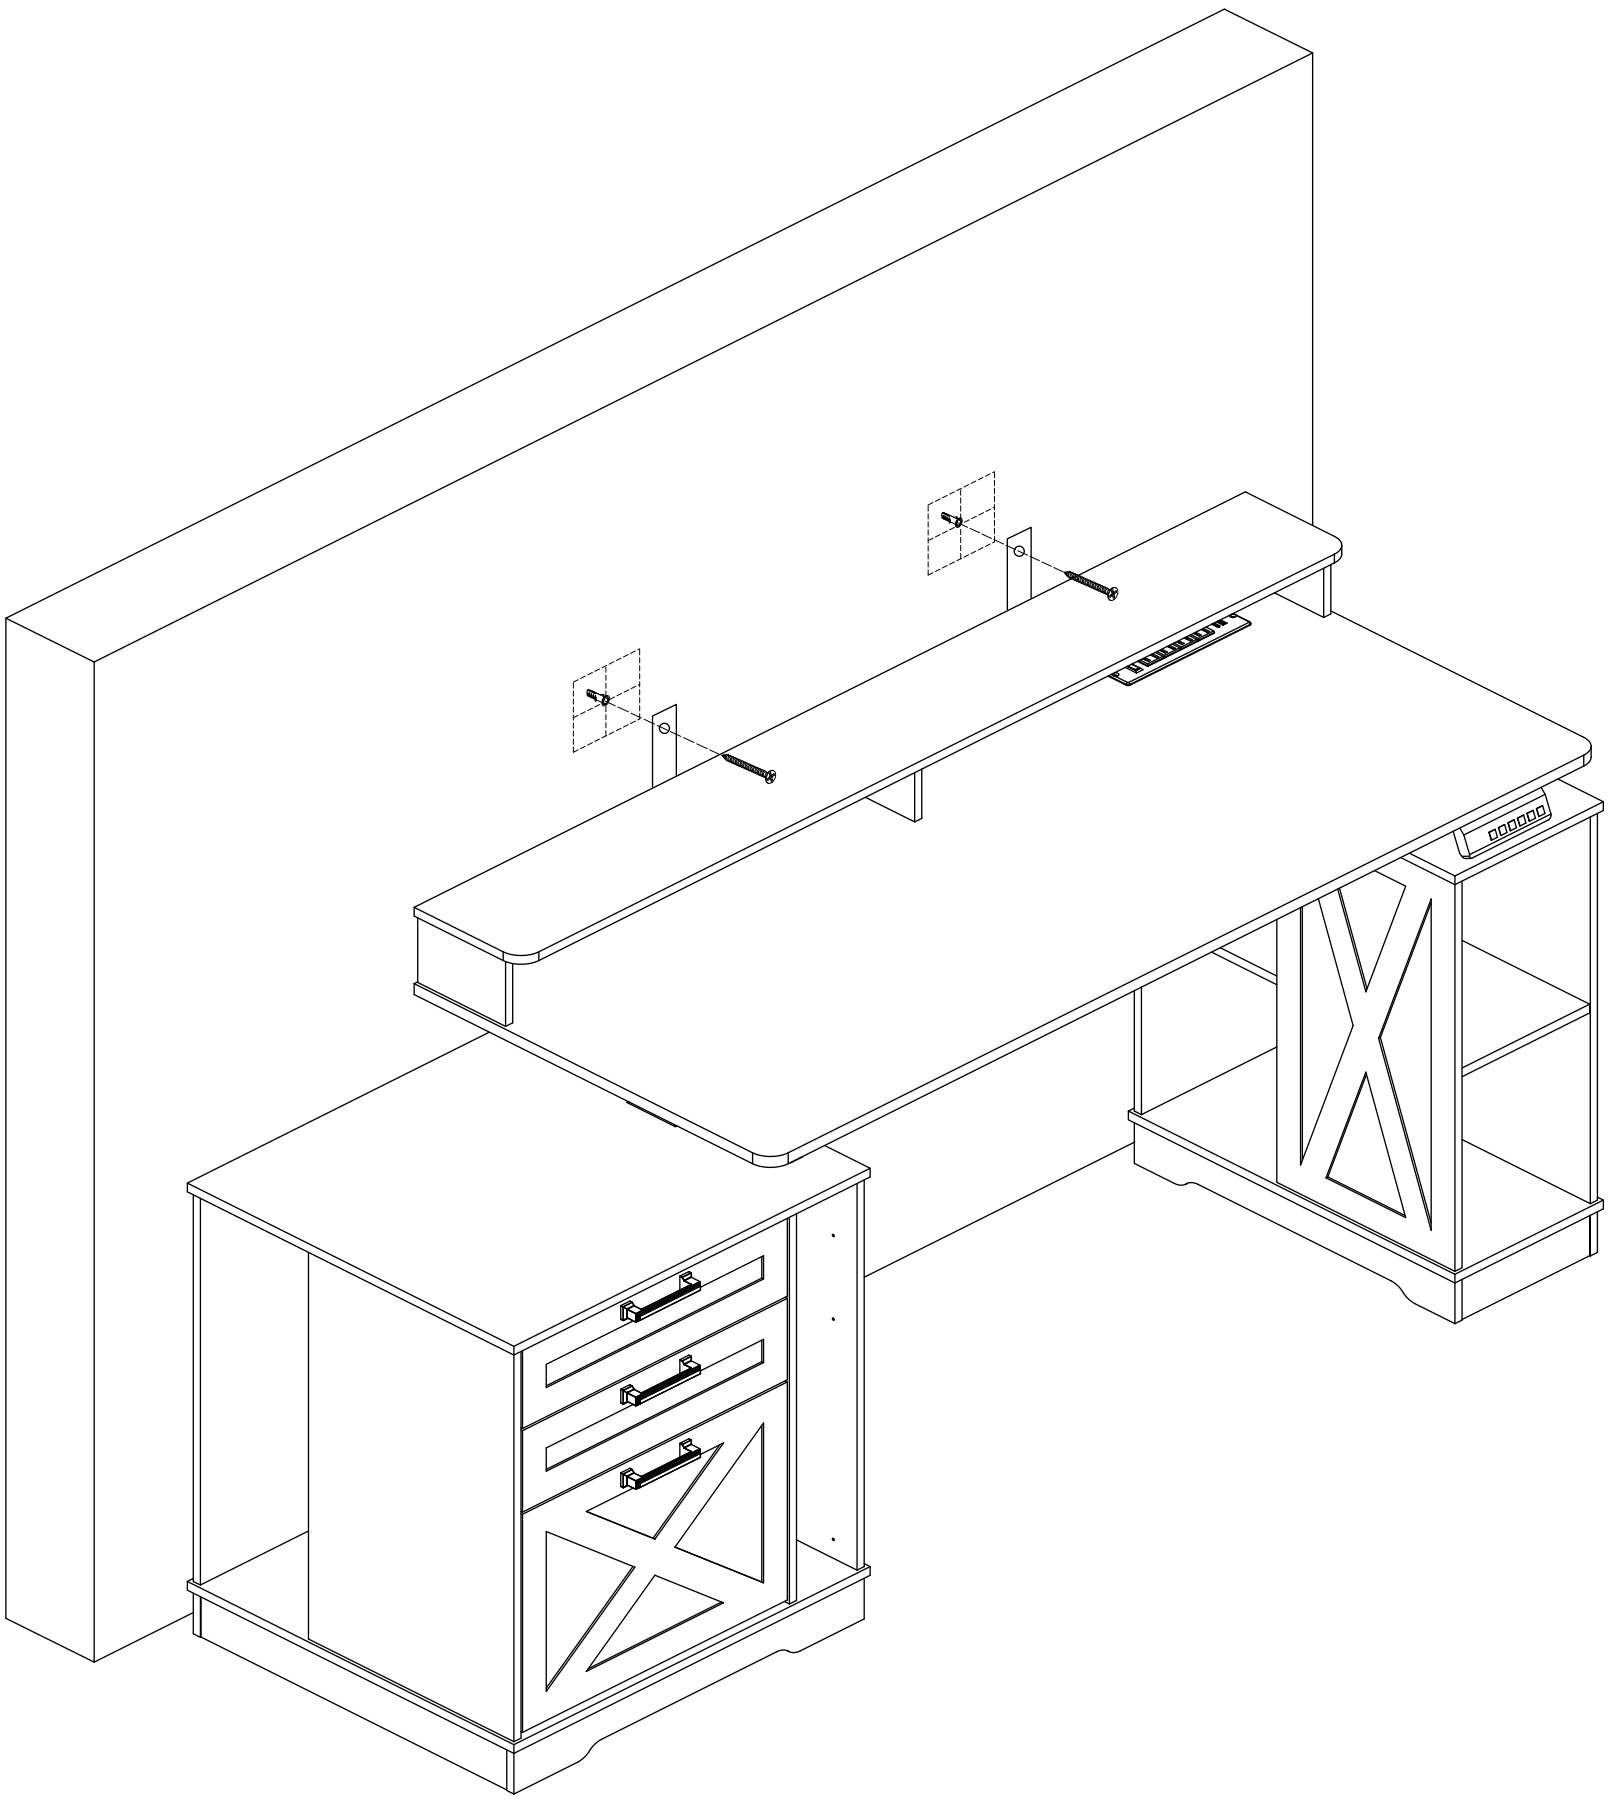

Assembly Instruction

Instructions for using the hand controller

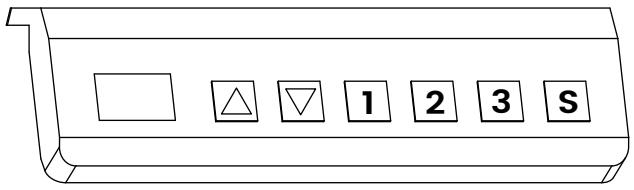

△	Up arrow key, adjust the standing desk to move upwards
▽	Press the down arrow to adjust the height of the standing desk to move upwards
1	Memory key 1, the first height saved by the user
2	Memory key 2, the second height saved by the user
3	Memory key 3, the third height saved by the user
S	Set key, used by users to set parameters

Table lifting and lowering

- Just hold down the "△" or "▽" key to control the height-adjustable table to rise or fall.
- Press and hold the "△" key to control the height-adjustable table to rise, and you can see the increase in height (the displayed number) on the three-digit digital tube;Press and hold the "▽" key to control the descent of the height-adjustable table. You can see the decrease in height (the displayed number) on the three-digit digital tube.

The invocation and setting of memory height

On the height display interface, press the number keys to call up the corresponding height, and the height-adjustable table will automatically run to the corresponding position.

On the height display interface, briefly press the S key, and the height value will start to flash. At this point, press the number keys (1, 2, 3) to record the current height to the corresponding position. If the flashing display shows no number keys pressed within 6 seconds, the memory mode will be exited.

Screen-off wake-up

If there is no key operation for a long time, the digital tube will automatically turn off. At this time, pressing any key will light up the digital tube.

Parameter setting

01 After holding down the S key for 3 seconds, the digital tube will display "S--" and start flashing.

02 Press the S key again to enter the Settings mode, and the function names will be displayed. The functions for which parameters can be set include:

- The display Unit for table height: Unit (Un);
- The Force of Collision protection: Collision Force (CF);

The functions of each key in the setting mode:

1	The back key can be used to go back to the previous level of the menu
△ ▽	Option switching
S	Confirmation key (Confirm entry to the next-level menu of the current interface or confirm selection of the current parameter item)

If no key is pressed within 20 seconds, exit the Settings mode

Assembly Instruction

Main menu interface	Submenu interface	Description
Un Unit	SI SI Metric	After entering, the height unit value set last time will be displayed. The "△" and "▽" keys can be used to flip In the options (SI, In). After selection, press the S key to save the current option value and keep the current option displayed for 2 seconds before exiting the setting mode.
	In Inch	
CF Collision Force	OFF off	After entering, the last set collision force level will be displayed. The "△" and "▽" keys can be used to flip among the options (Off, L, N, H). After selection, press the S key to save the current option value and keep the current option displayed for 2 seconds before exiting the setting mode.
	L Light	
	n Normal	
	H Heavy	

Protection and Alarm


Display	Display	Method
E02	Problem	When the desktop vibrates, is hit or tilts during movement, an alarm will sound and the movement will stop immediately. The reverse movement will be automatically released after setting the distance, or any key can be pressed during the reverse operation to stop and release it. It is necessary to check and ensure that the table does not vibrate significantly, hit obstacles or tilt during operation before running.
Hot	Overheat protection	Continuous long-term operation may activate this protection. Power on again or wait for at least 15 minutes before use.
E10	Motor abnormal protection	The power should be cut off. Recheck and ensure that the connection between the motor and the controller is reliable, and then reconnect the power.
E20	Overload protection	If this alarm occurs when running upward, some heavy objects on the table should be removed before running again. If this alarm occurs when running downward, power should be cut off, some heavy objects on the table removed, and then power should be restored.
E31	Under-voltage protection	The power should be cut off. Recheck and ensure that the connection between the power supply and the controller is reliable, and then reconnect the power.
E32	Overvoltage protection	The power should be cut off. Recheck and ensure that the connection between the power supply and the controller is reliable, and then reconnect the power.
Trip reset		When in the "E10, E20" alarm state or after reaching the lowest height position, hold down the key for 3 seconds. After the display (Reset) is shown, release it. The height-adjustable table will start to move downward to the bottom and rebound to a certain height. Once the reset is completed, the lowest height will be displayed.

Customer Service



3-years Warranty

We guarantee your product is free from defects in product materia and workmanship for three(3) years starting from the date of purchase during normal use of household conditions.If your appliance fails to operate properly within our warranty period,We will send the corresponding accessories,Replacement is free and all shipping costs are covered

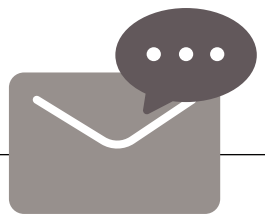

Quick Response within 24 Hours

If you are still unable to resolve the issue, please contact us through the Amazon order page for customer support. Whether the product has been installed or not, our customer support team will respond within 24 hours and assist you promptly.

Problems You May Encounter

Part	Problem	Solution
Cloth drawers	Why use cloth drawers	1. Reducing tree extraction is more environmentally friendly 2. More convenient to use and assemble 3. Reduced the thickness of the side panel, resulting in a larger actual storage space
Whole Produc	Parts are missing, defective or having wrong parts in package	You can contact us and we will get back to you within 24 hours
	Having issue(s) while reading the instruction or completing the assembly	Feel free to contact us and we will get back to you within 24 hours
	Encountering non-human caused damage during usage	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution
Table Surface	Board surface is broken, scratched or lacks some screw holes	Feel free to contact us and we will get back to you within 24 hours
	The screw holes on the board and the steel frame don't line up	1. Please tighten the screws on the board by 70%, do not tighten completely 2. Adjust board and steel frame until the screw holes are lined up, then tighten all the screws
	The desk board is uneven or not tight, has gaps after being assembled	1. Loosen the screws in the uneven or gap positions; adjust until the desktops are flat and tight, then tighten the screws 2. If your problem still can't be solved, please feel free to contact us
Steel Frame	The steel frame is bent, broken, painted, rusted or damaged	Feel free to contact us and we will get back to you within 24 hours
	The table is unstable after being assembled	1. Check if the screws are tightened 2. Read through the manual, check if there are any parts installed incorrectly or missing assembly 3. If your problem still can't be solved, please feel free to contact us
	Encountering non-human caused damage during usage	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution

Thank you
for choosing our product

Made In China