145mm

210mm

Parts List

part 1	part 2	part 3	part 4

Accessories

aa



bb



Main Components

Canopy Tent (SKU # ODF002)

1 x Steel Frame Stand



1 x Top Cover

1 x Wheeled Carrying Bag

4 x Rope

8 x Ground Nail

Both of them are inside of the carry bag

④ 4.HOW TO FOLD BACK

Each main stand has two clips,one is at top and the other is at the middle,push in them and the tent will be folded bach as regularly.

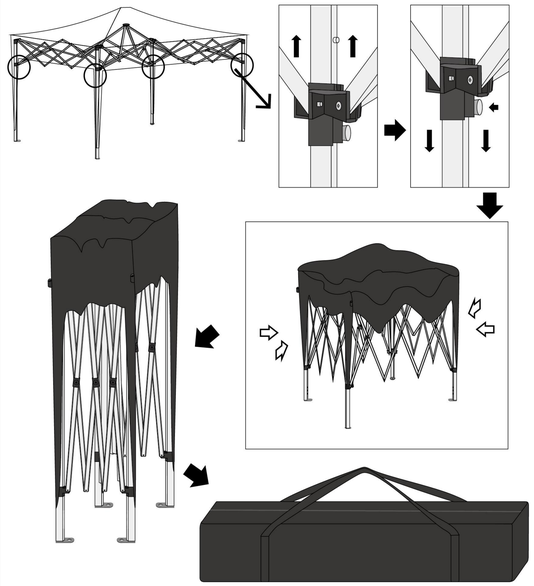

② -1

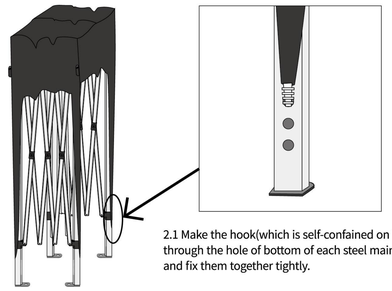

2.1 Make the hook(which is self-confained on Topcover) through the hole of bottom of each steel main stand, and fix them together tightly.

② -2

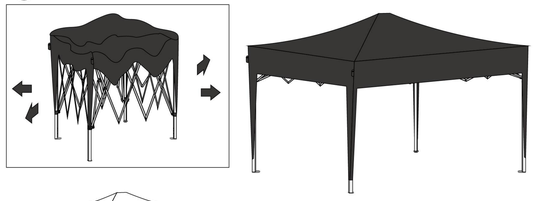

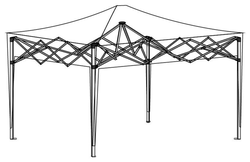

2-2 With 4 people at each corner of tent, pull out the corner gently.
Notice: Do not force the frame open or pull from diagonal corner to begin, these will damage it.

①

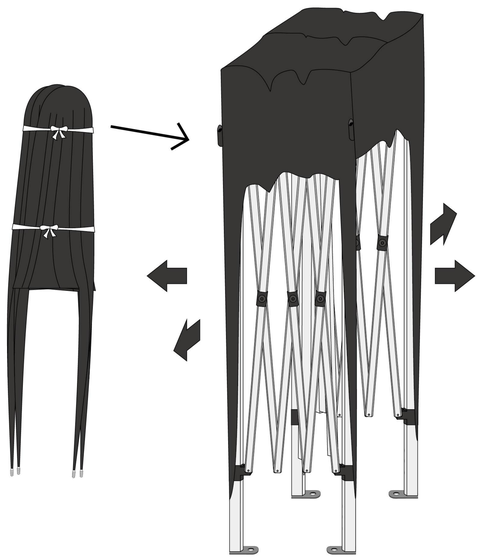

1.Remove the instant tent from the carrying black bag, and the keep the steel frame upright.

Steel Frame stand orverall

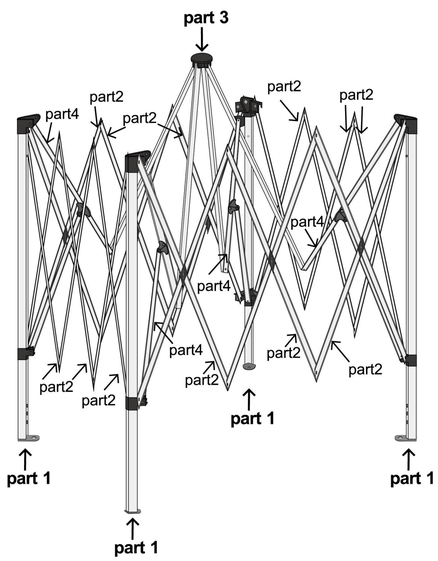

If any parts are broken or scratched, please kindly tell us which parts as below, we will send out the parts for your change. Thank you for choosing our tent.

② -3

2-3 .Hook the plastic hanger with steel frame.

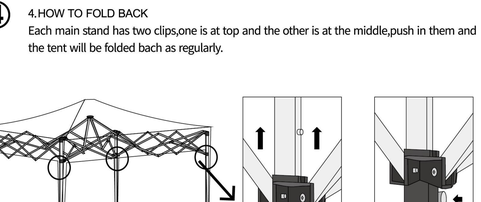

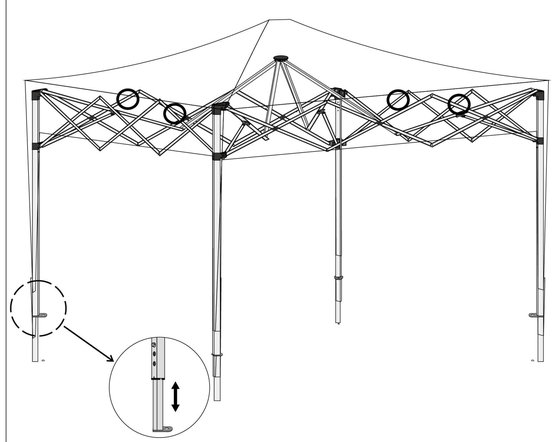

③

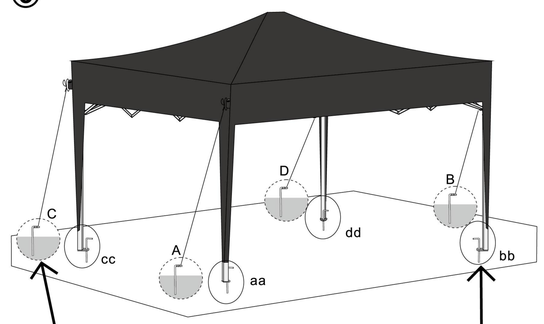

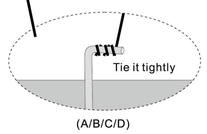

(A/B/C/D)

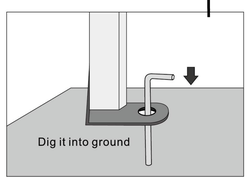

(aa/bb/cc/dd)

3.Install the following parts - aa, bb,cc,ddas showed in pictures: make the ground-nail through the hole of bottom of each steel main stand then push it into the ground.
For the following part - A, B, C, D :
Twine the same rope on the top steel frame and ground-nail, at the same time, please tie them tightly, and dig all ground-nails into the ground.
Please follow above instructions to make your tent stable enough to use.