USER'S MANUAL

OSLO SERIES

Scan QR code for
installation video

Guide of Manual

- Thanks for your choice. **We will do our best to provide customer service for everyone.**
- Please check to make sure all parts are included as stated when you unpack. If there are parts missing or wrong, please contact us, **we will expeditiously provide reissue accessories, compensation or other services.**
- Instruction should be read carefully. But the manual may not cover every detail of all possible situations and steps. **Please contact us if further information and help are needed. We will respond in a timely manner.**
- **Please be patient that the other items are on the way if you buy more than one product.**

Warning

- It's kindly advised to assemble this product on a carpeted floor to protect it from being scratched.
- Small parts are included. Please keep the product away from children while assembling. Do not let children play or jump on the product.Do not stand on the item or use as a step ladder.
- Please pay attention to the sharp corners during assembly. We recommend the use of gloves to prevent the undesired injury.
- Prior to use, please check to see if there's any loosening screw or part. Make sure that each screw and part is correctly installed and securely fastened.
- It's unnecessary to use electric drill. Please at a low gear if you need.

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- There’ s no need to use furniture polish. If you need, test it first in an inconspicuous area. Using solvents of any kind on your furniture may damage the finish. Never use water to clean your furniture as it may cause damage to the finish.
- Liquid spills should be removed immediately. Gently blot the spill with a soft clean cloth to avoid rubbing.

Further Advice about the Furniture Care

- It is best to keep your furniture in a climate-controlled environment.
- We recommend to keep furniture from sunlight exposure to avoid possible surface damage.
- Following these important and helpful tips will help retain your furniture's performance even when it ages.
- Periodically (every 90 days) make sure the screws are fully tightened.

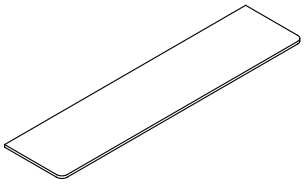

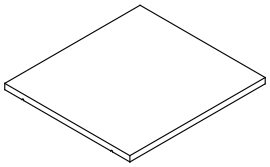

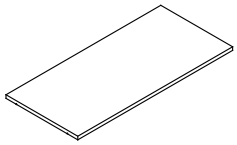

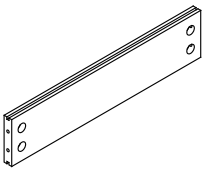
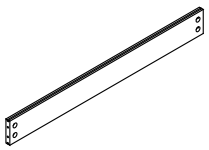

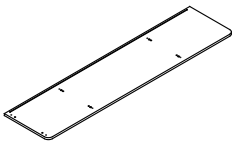
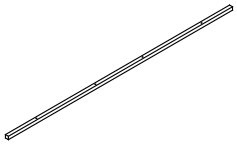
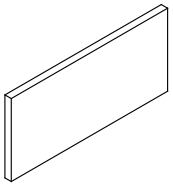
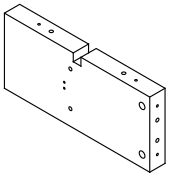
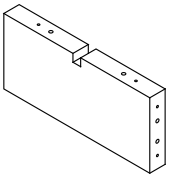
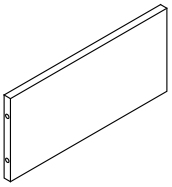

Max Weight Capacity

- 220lbs [Do not stand on the item]

Parts and Hardware List:

- Make sure all parts are in the package.
- "+" in below list indicates that additional pieces are replacement parts.
- Do not fully tighten anything until all screws, nuts, washers and bolts are in place.

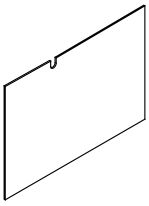
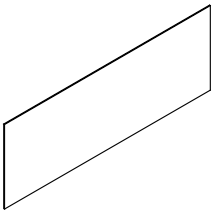
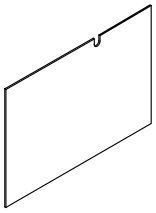
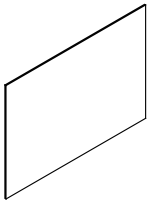



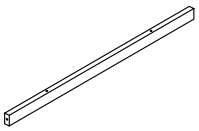
Parts List

① x1pc Top Panel 	② x1pc Left Panel 	③ x2pcs Side Shelf Panels 	④ x1pc Left Partition 
⑤ x1pc Middle Shelf Panel 	⑥ x1pc Right Panel 	⑦ x2pcs Short Top Panel Support Bars 	⑧ x1pc Long Top Panel Support Bar 
⑨ x4pc Shims 	⑩ x1pc Bottle Panel 	⑪ x1pc Iron Pipe 	⑫ x1pc Left Leg Support Plate 
⑬ x1pc Left Leg 	⑭ x1pc Right Leg 	⑮ x1pc Right Leg Support Plate 	⑯ x2pcs Front Trims 

Parts and Hardware List:

- Make sure all parts are in the package.
- "+" in below list indicates that additional pieces are replacement parts.
- Do not fully tighten anything until all screws, nuts, washers and bolts are in place.




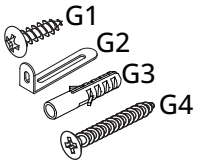





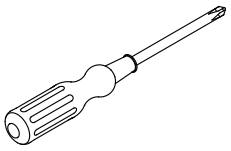
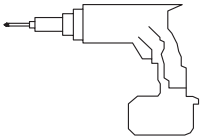

Parts List

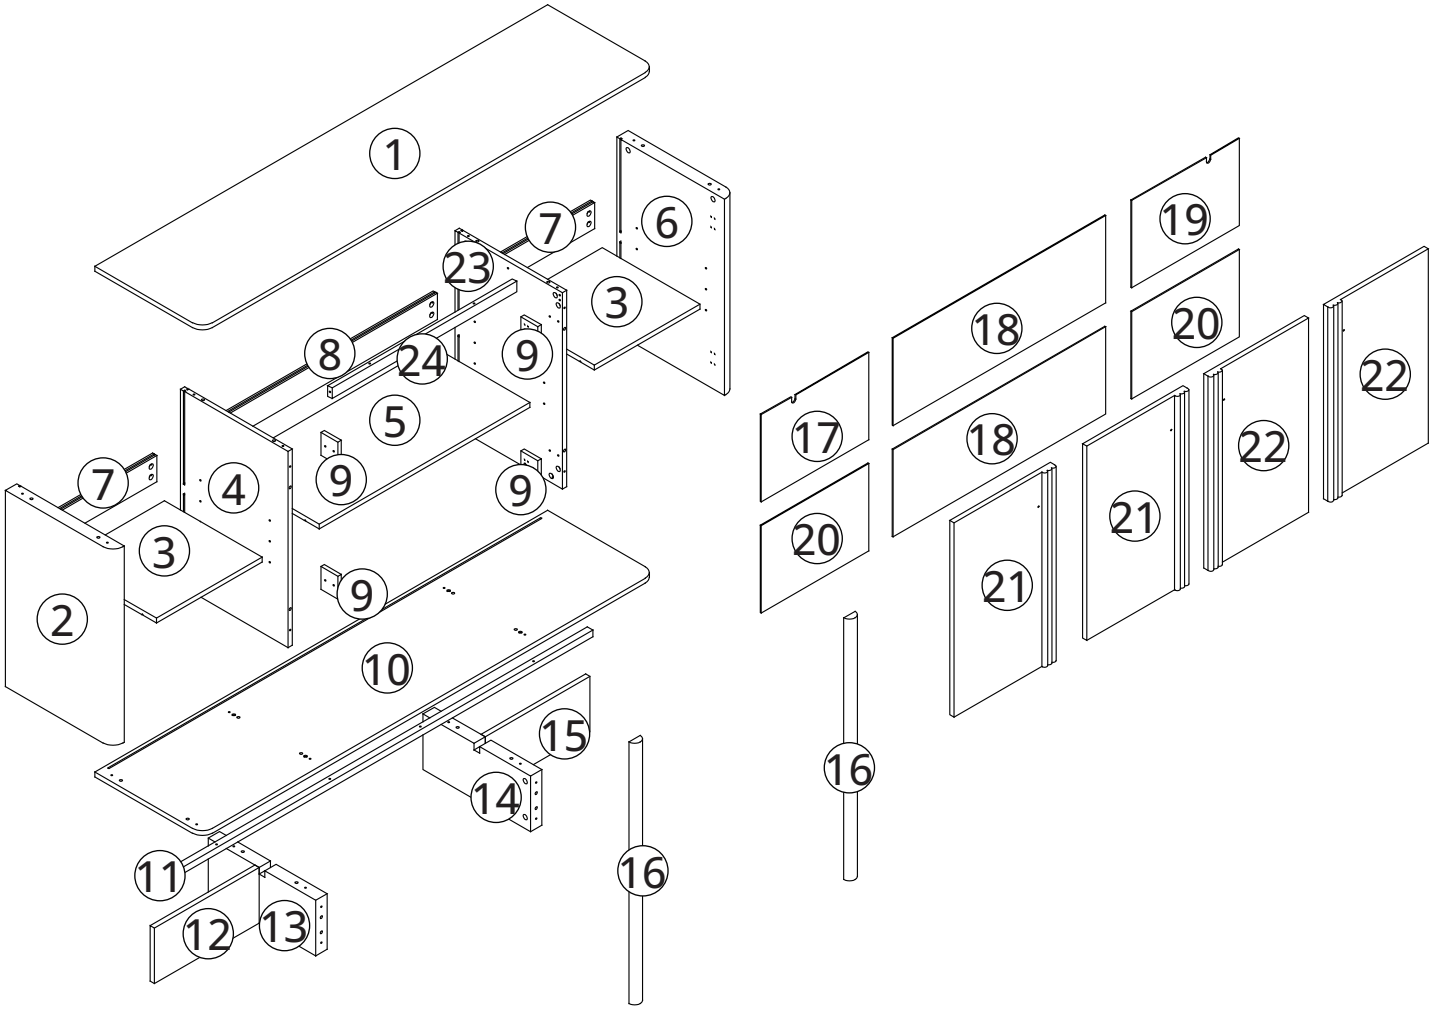
⑰ x1pc Upper Left Back Panel 	⑱ x2pcs Middle Back Panels 	⑲ x1pc Upper Right Back Panel 	⑳ x2pcs Lower Back Panels 
㉑ x2pcs Left Doors 	㉒ x2pcs Right Doors 	㉓ x1pc Right Partition 	㉔ x1pc Shelf Support Bar 

Parts and Hardware List:

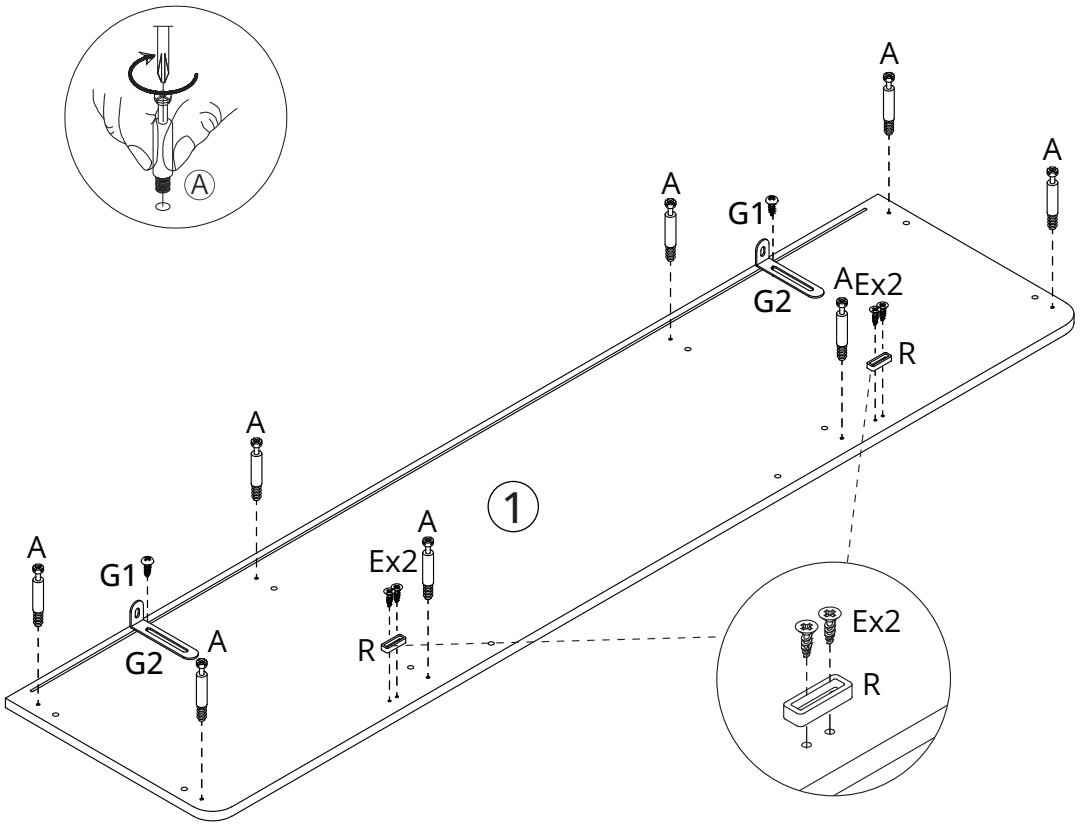
- Make sure all parts are in the package.
- "+" in below list indicates that additional pieces are replacement parts.
- Do not fully tighten anything until all screws, nuts, washers and bolts are in place.

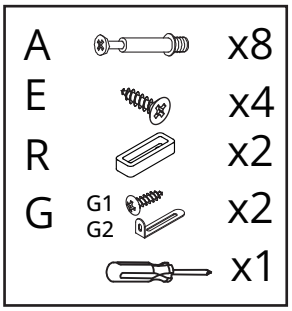
Hardware List

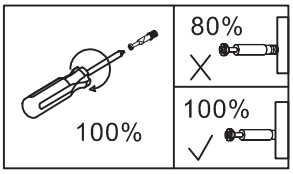
A x34+3pcs  M4*35mm	B x34+3pcs  M15*10mm	C x36+4pcs  M6*30mm	D x4pcs  M4*30mm	E x28+3pcs  M4*12mm
F x6pcs 	G x2sets 	H x34pcs 	I x8pcs 	J x12+1pcs 
K x4sets 	L x8pcs 	M x48+5pcs  M4*14mm	N x24+2sets 	O x8+1pcs  M6*40mm
P x8+1pcs  M4*18mm	Q x1pc  M4	R x2pcs 	Not provided 	Not provided 
Not provided 				

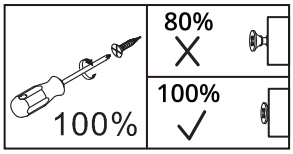

1
7
6
23
3
8
24
9
5
9
9
7
4
3
2
9
10
15
14
11
12
13
16
19
18
20
17
18
22
22
20
21
21
16

1 Please install the product on a flat, level surface.

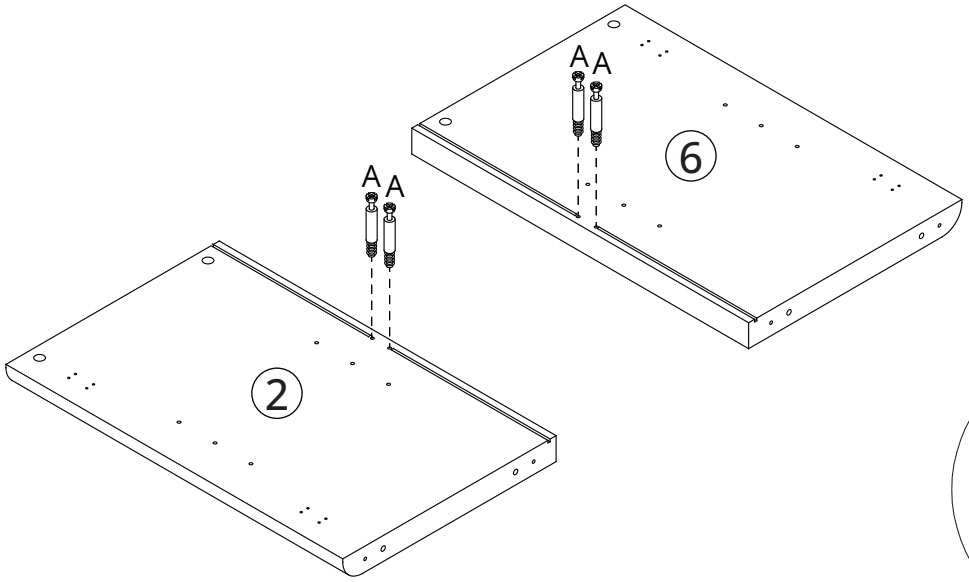


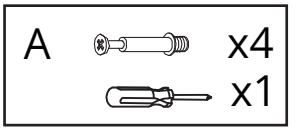


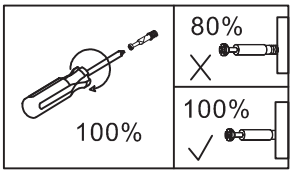


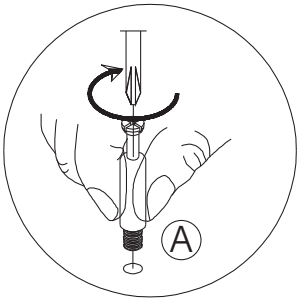


2

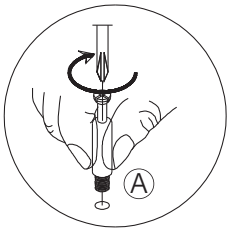


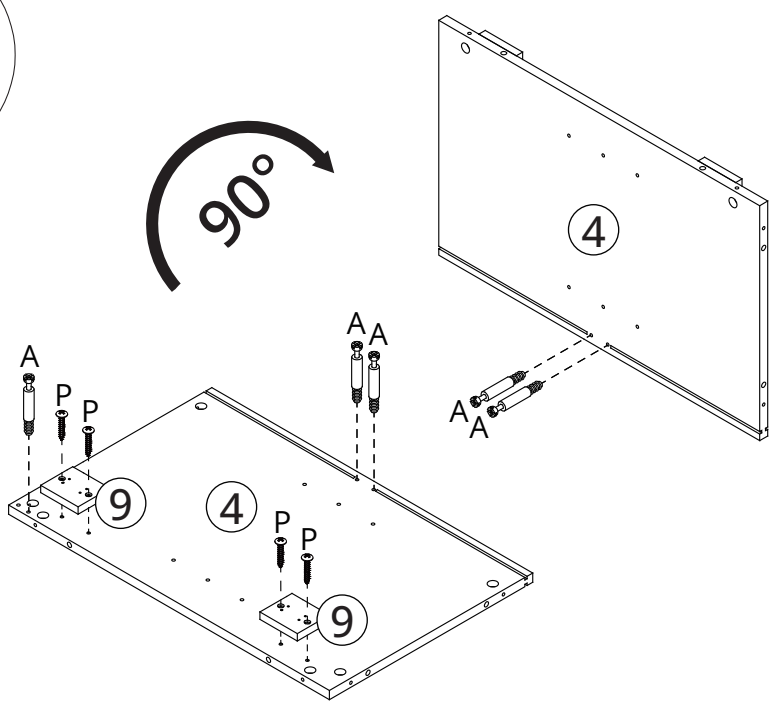


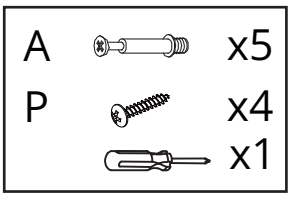


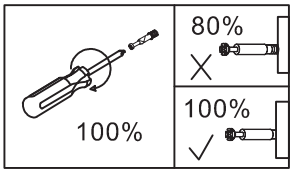


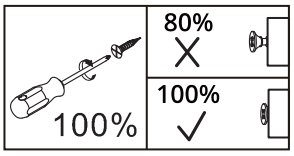
3


A

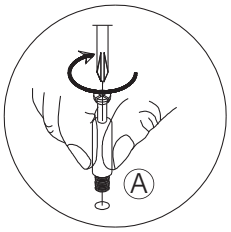

90°
4
A
A
A
P
P
9
4
P
P
9
A
A

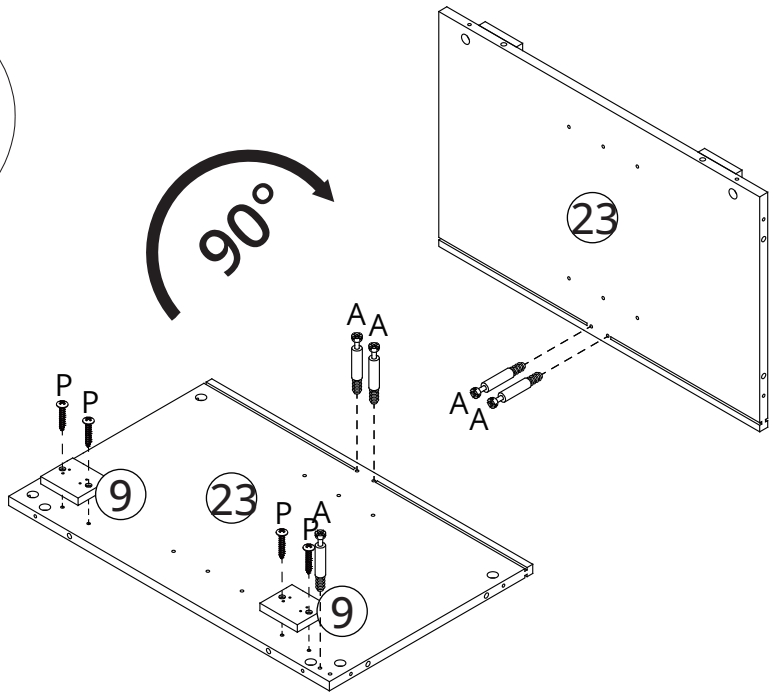

A
x5
P
x4
x1

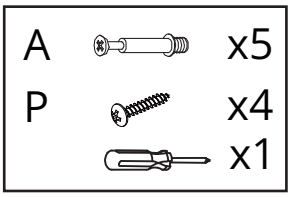

100%
80%
100%

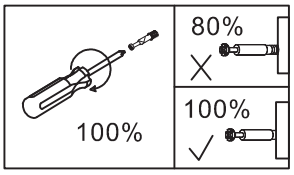

100%
80%
100%

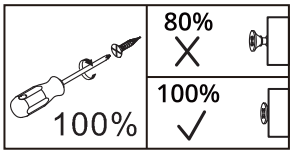
4


A

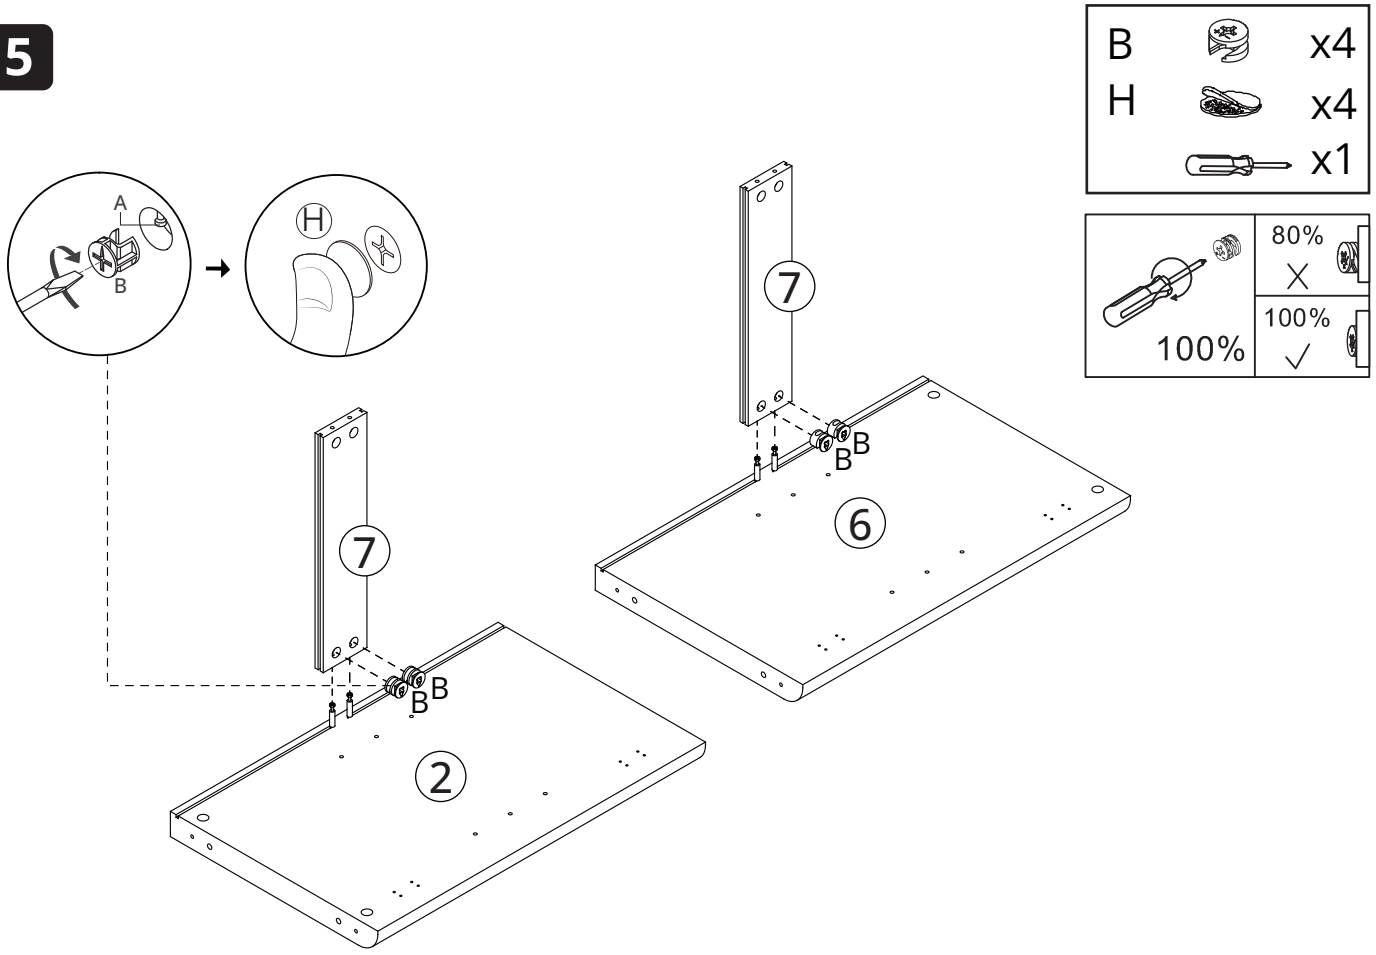

90°
23
A
A
A
P
P
9
23
P
A
P
9
A
A


A
x5
P
x4
x1

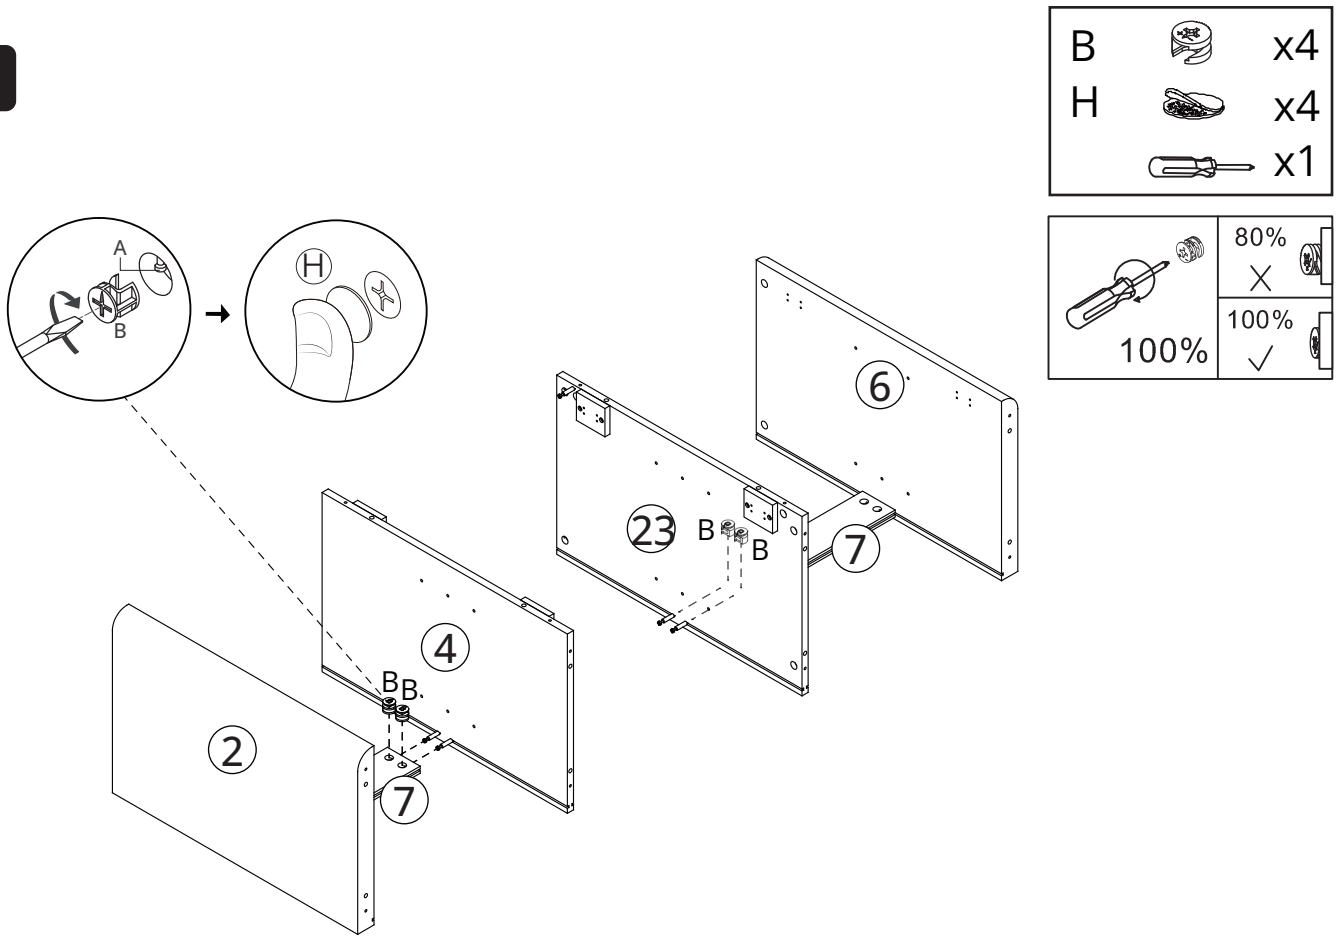

100%
80%
100%


100%
80%
100%

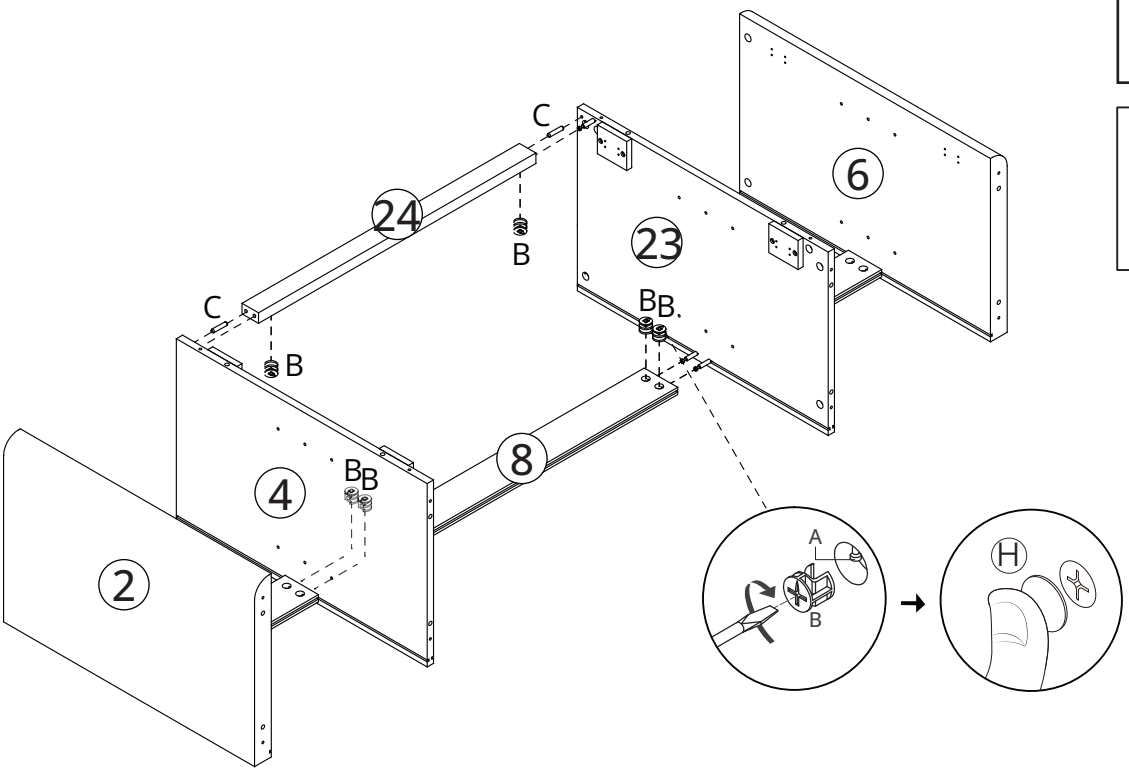
5

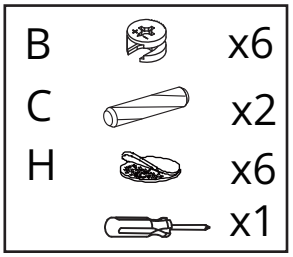

B x4
H x4
x1
100%
80%
100%
A
B
H
7
B
B
6
7
B
B
2

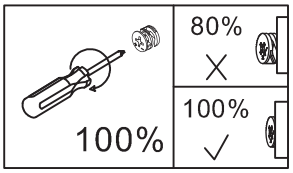
6


B x4
H x4
x1
100%
80%
100%
A
B
H
6
23
B
B
7
4
B
B
2
7

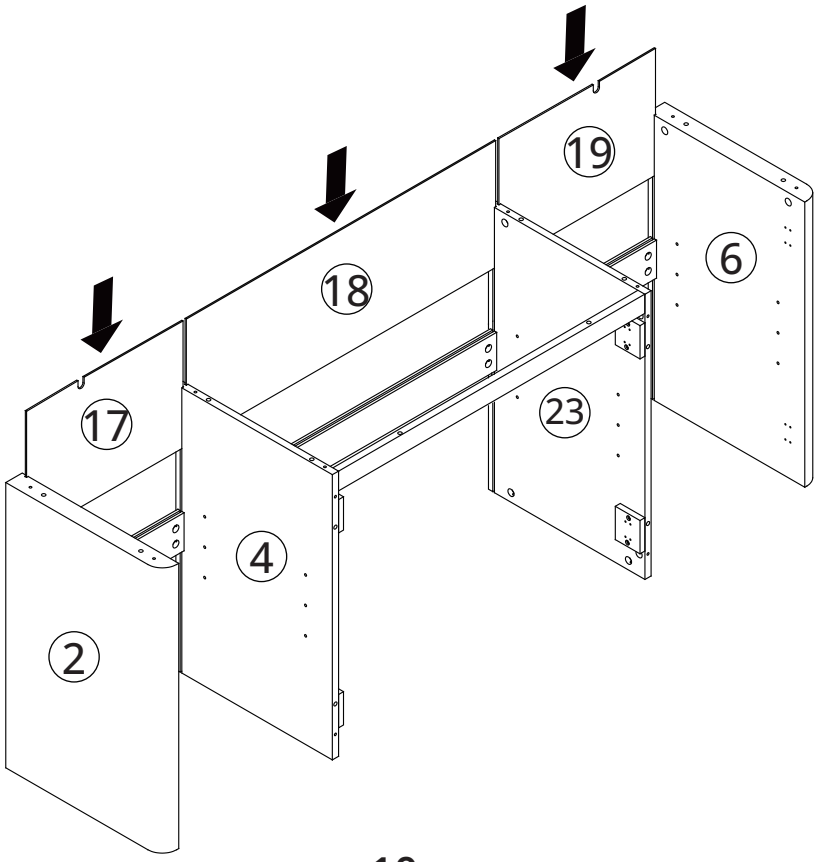
7





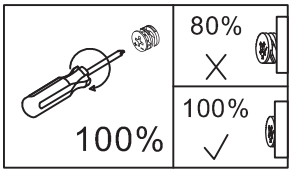


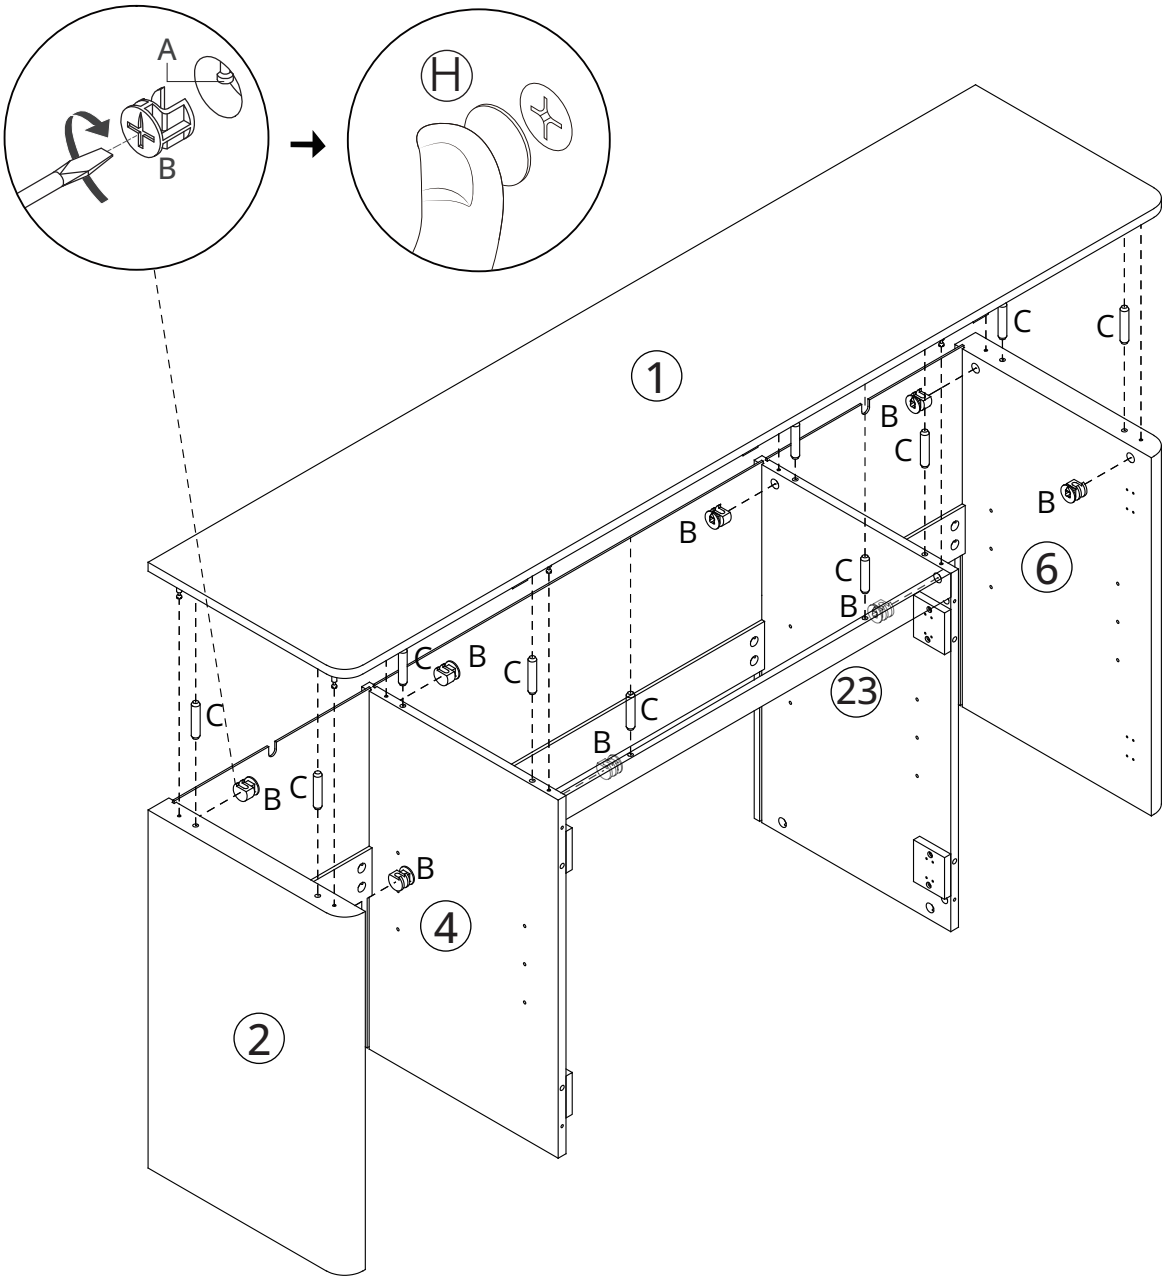
8 First, flip the cabinet upright onto the floor; then insert Back Panels ⑰, ⑱, and ⑲ into the slots in sequence.



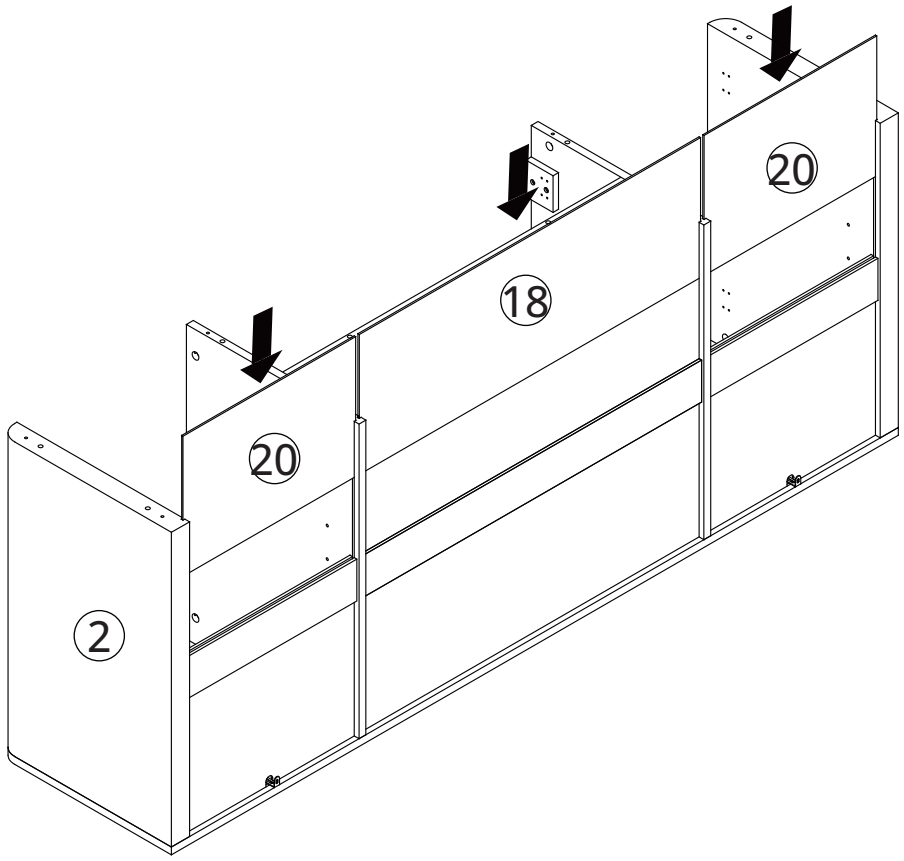
9

B		x8
C		x10
H		x8
		x1

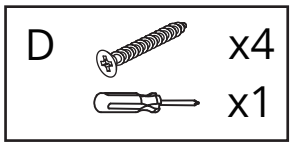


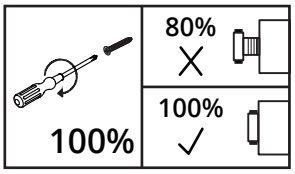


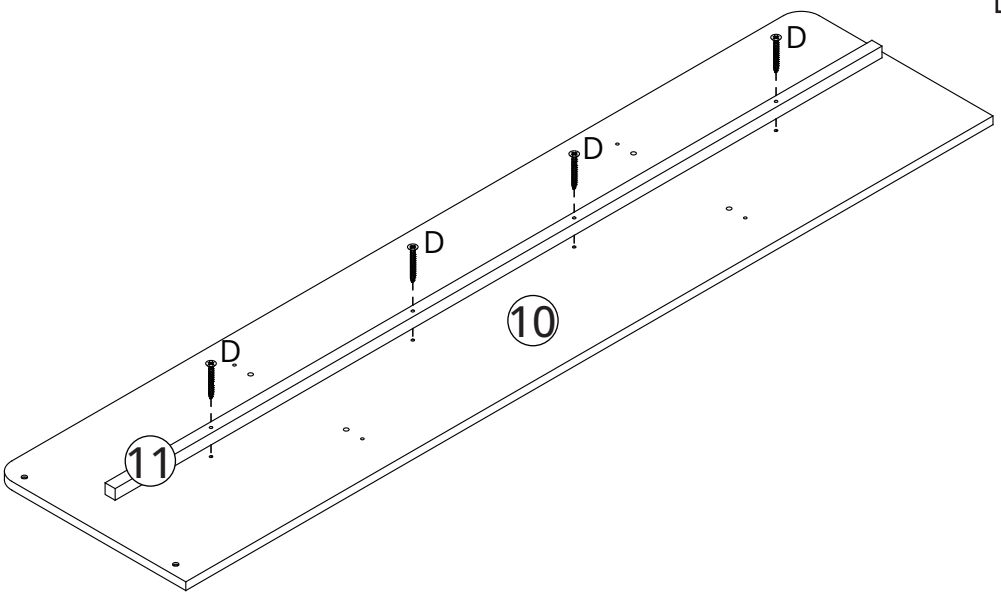
10 First, flip the cabinet upside down with the Top Panel facing the floor; then insert Back Panels ⑱, ⑳ into the slots in sequence.



11

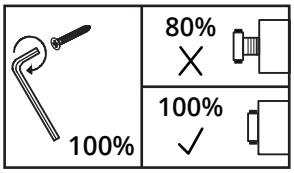


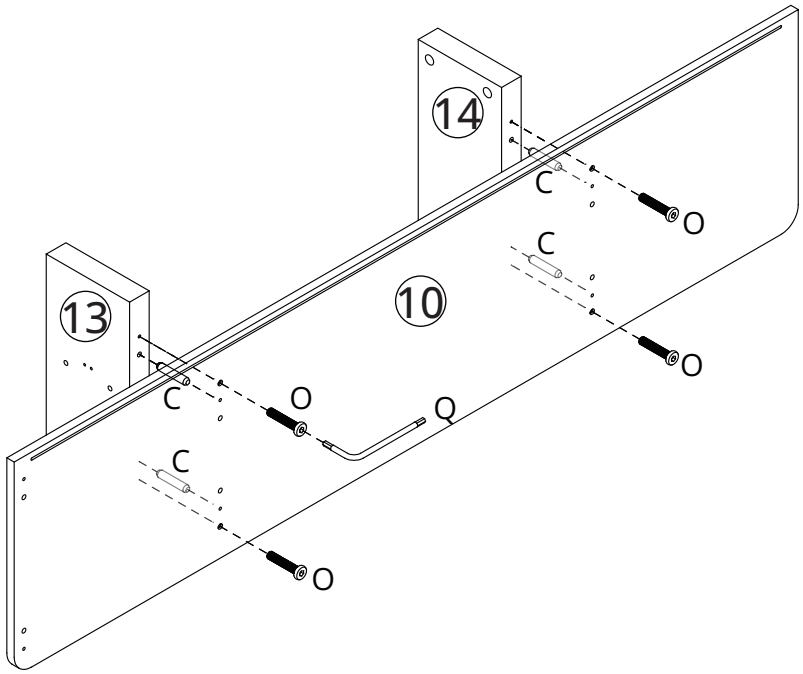




12

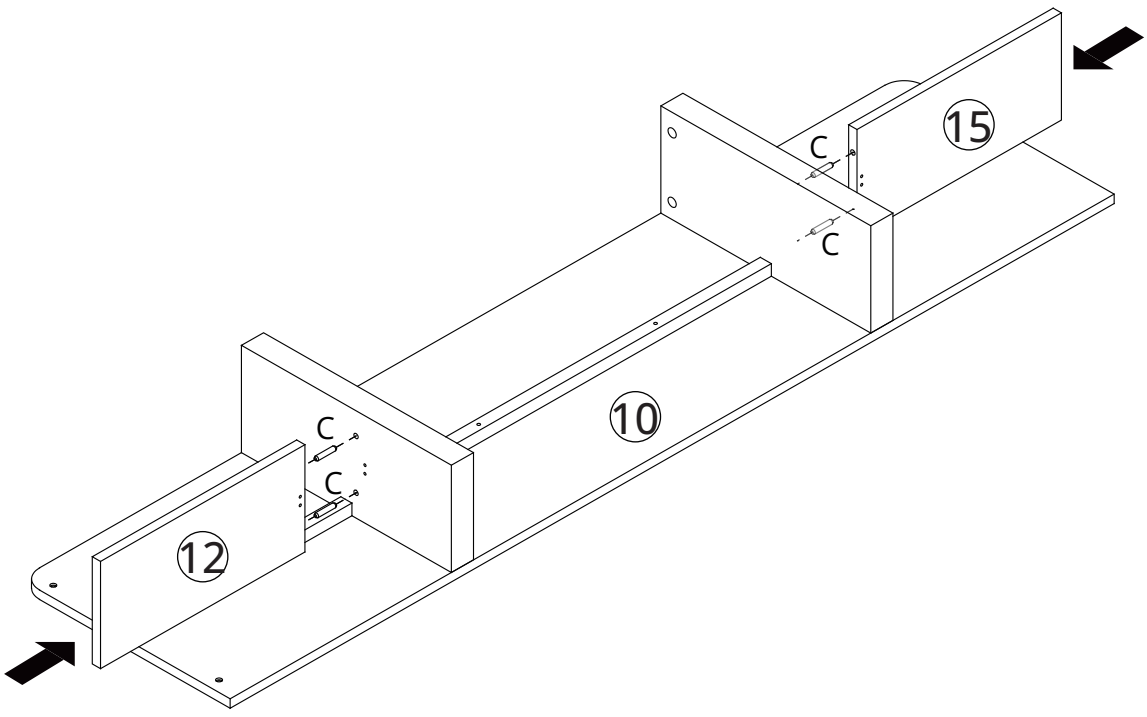
C x4
O x4
Q x1



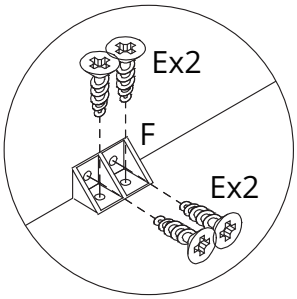


13

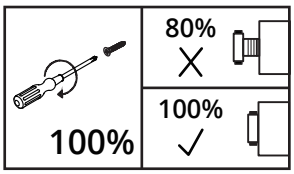
C x4



14

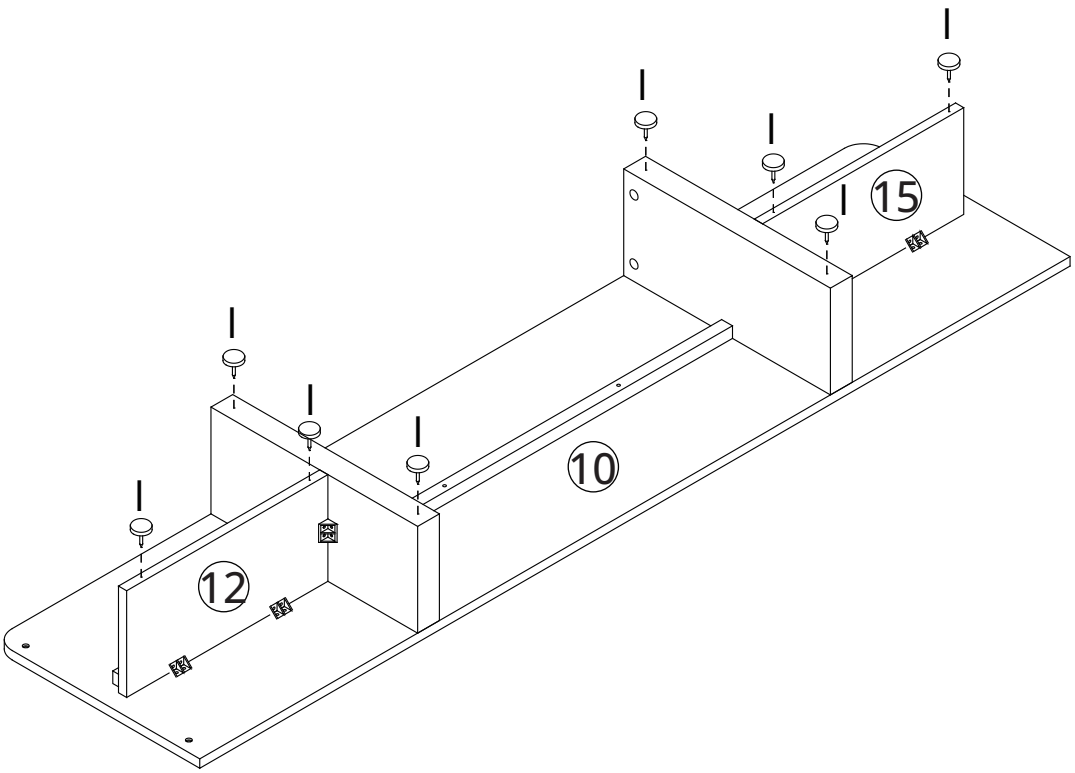


E		x24
F		x6

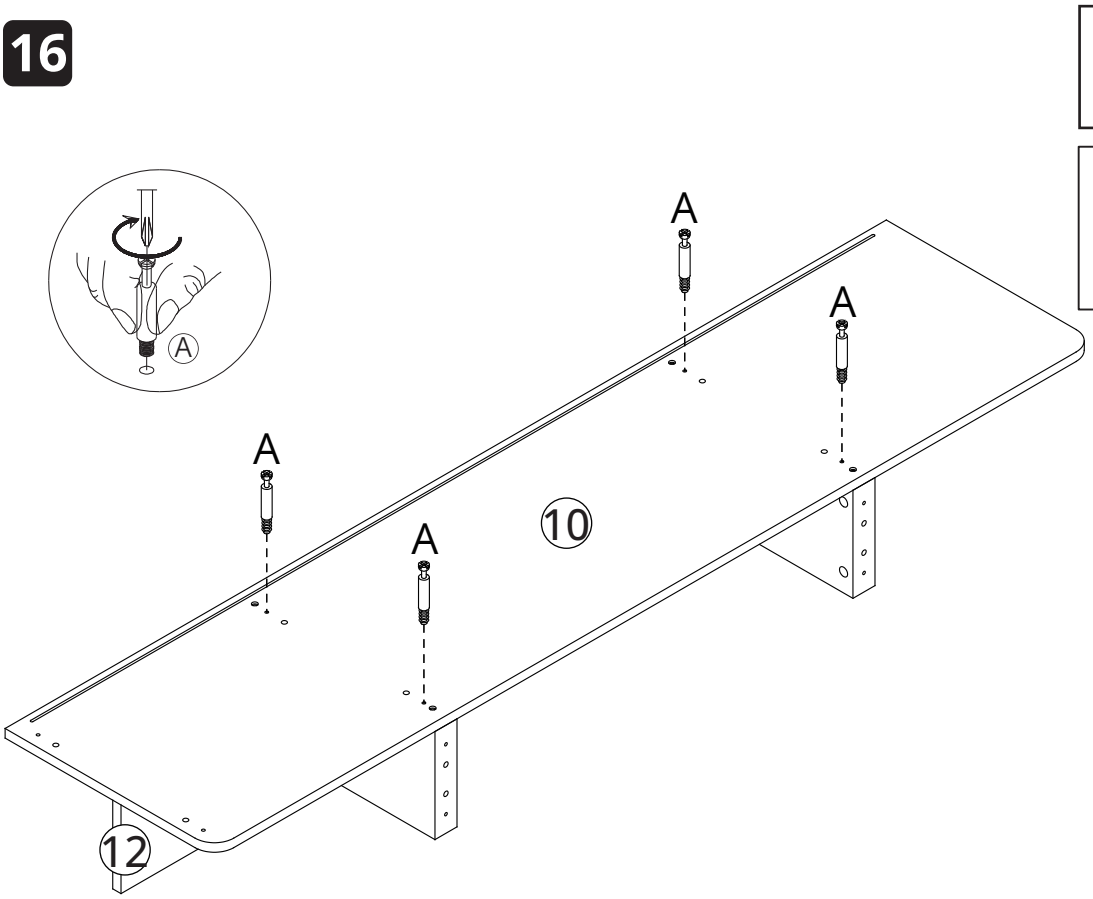


15

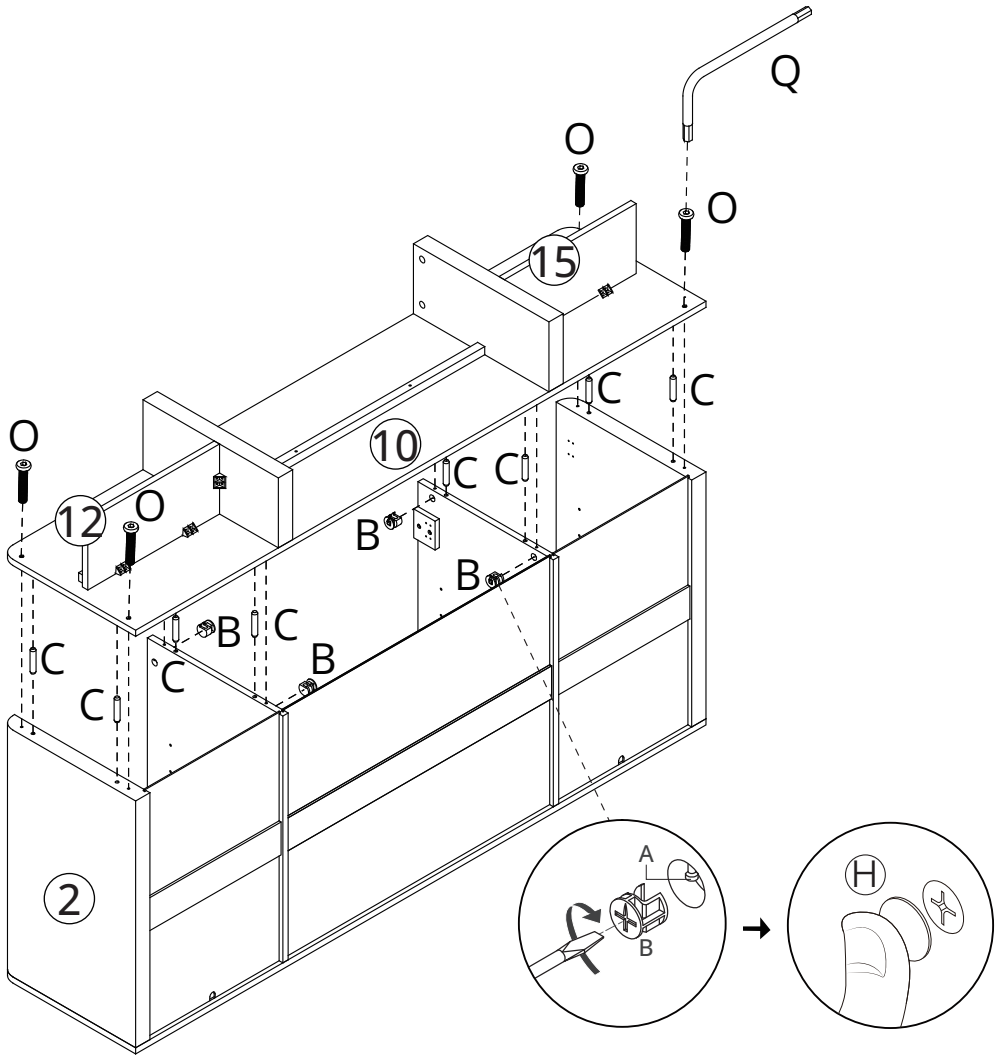
I		x8



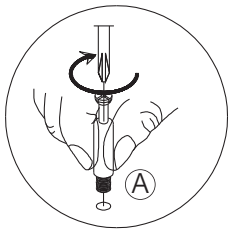
16

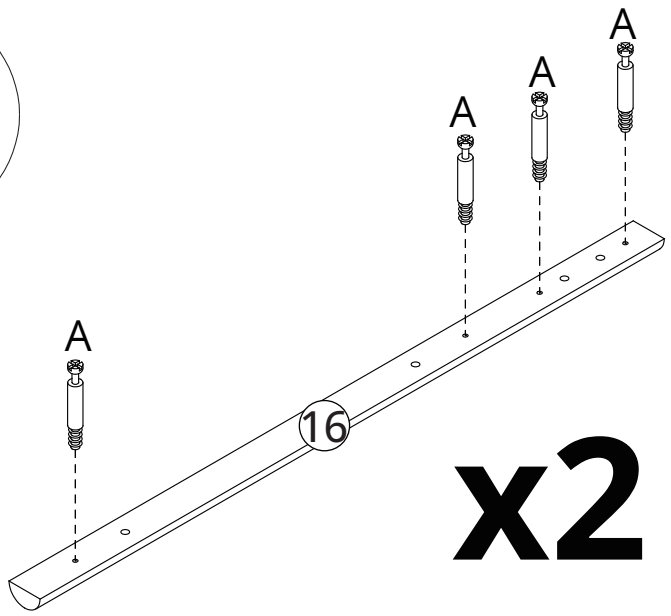

A
x4
x1
80%
100%
100%
A
A
A
A
10
12

17

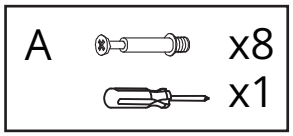

B x4
C x8
H x4
O x4
Q x1
x1
80%
100%
100%
80%
100%
100%
Q
O
O
O
15
10
12
2
C
B
A
H

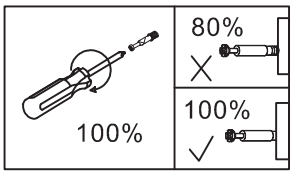
18





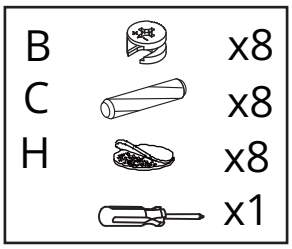
x2

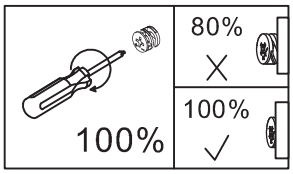


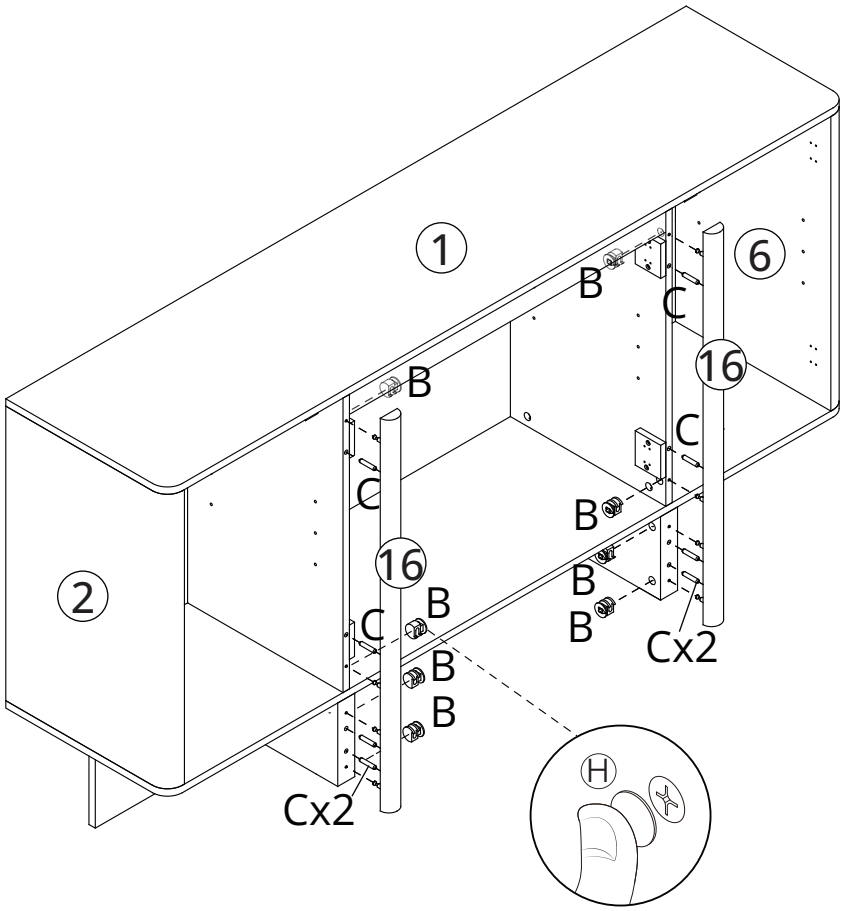


19

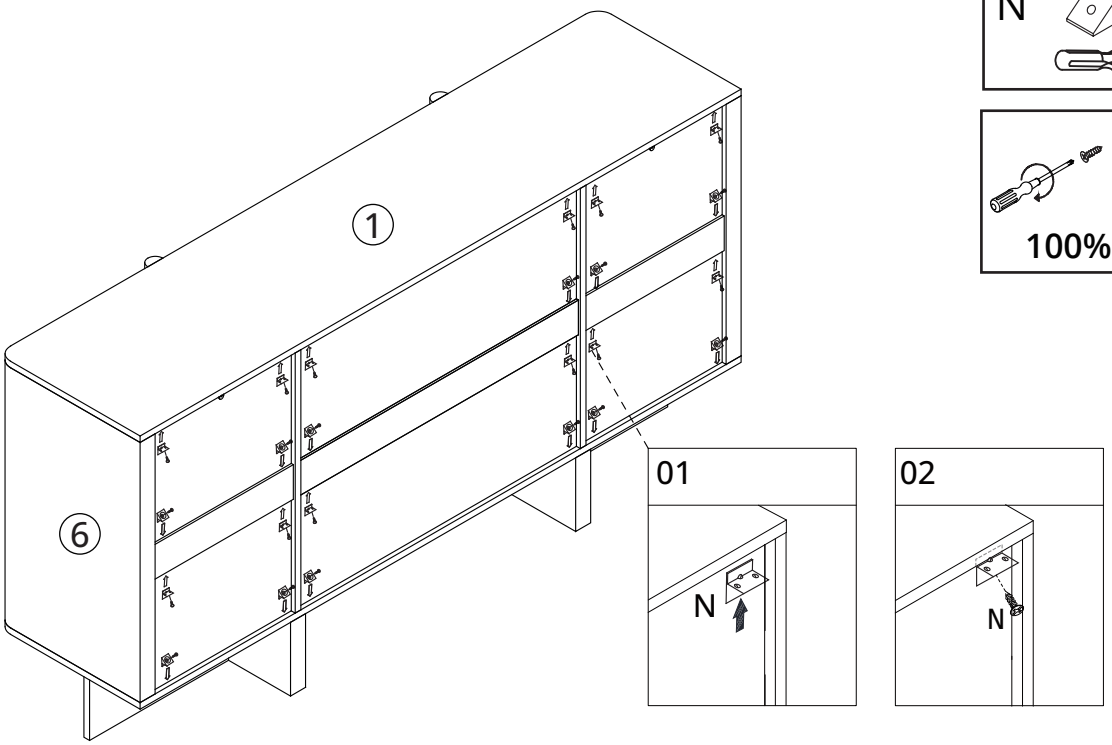
First, flip the cabinet upright so it stands on its legs, then attach Front Trim ⑯ to the cabinet body.





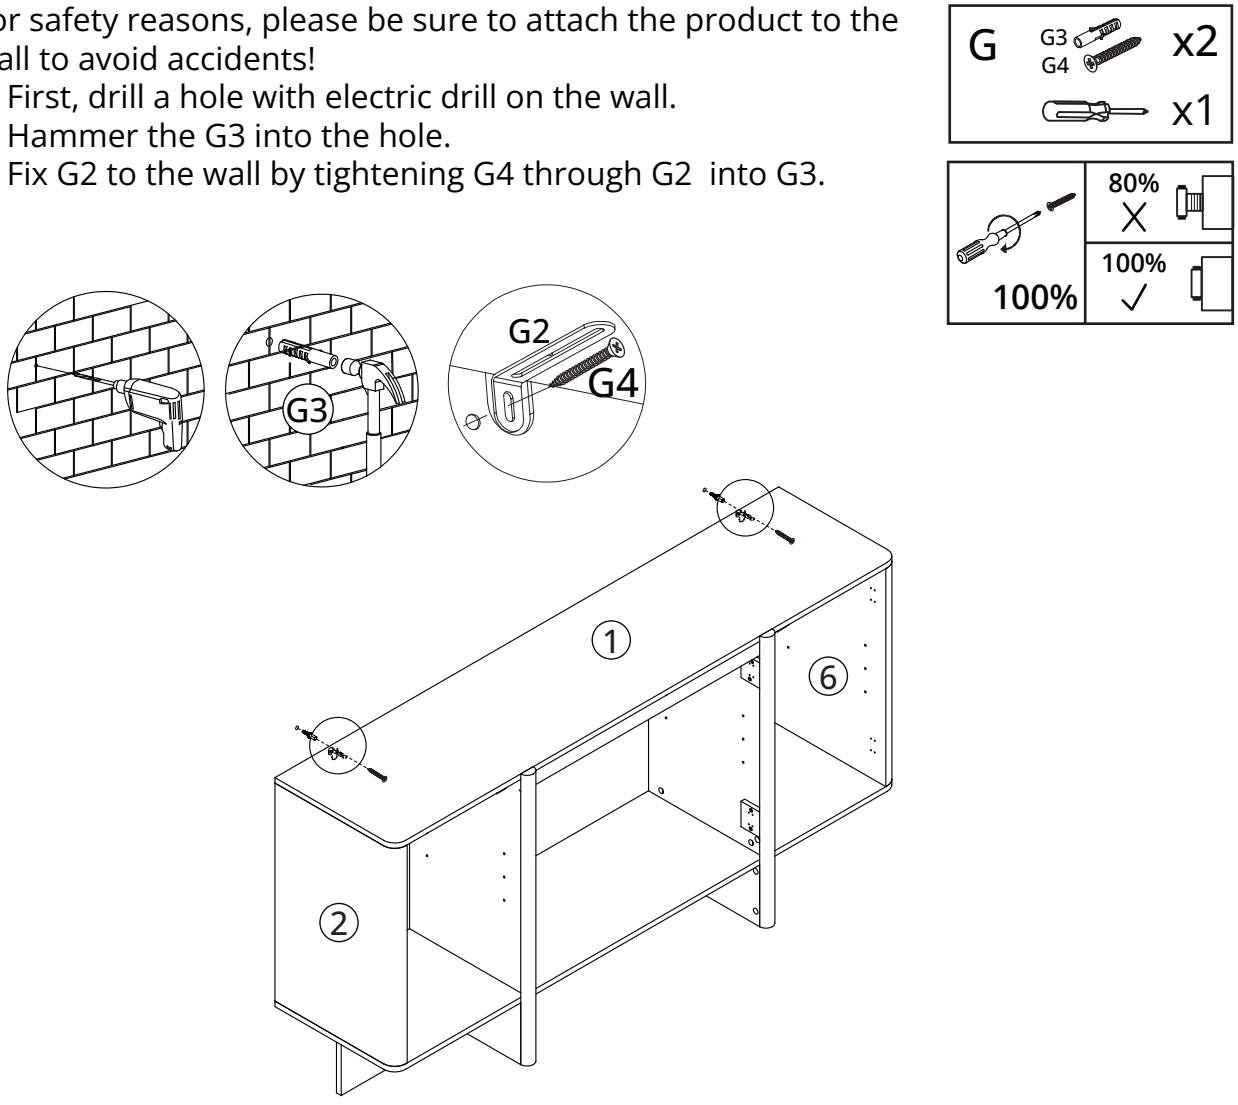


20



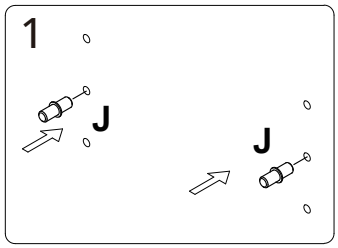
21 For safety reasons, please be sure to attach the product to the wall to avoid accidents!

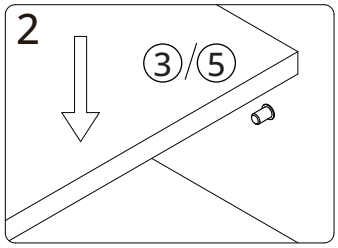
1. First, drill a hole with electric drill on the wall.
2. Hammer the G3 into the hole.
3. Fix G2 to the wall by tightening G4 through G2 into G3.

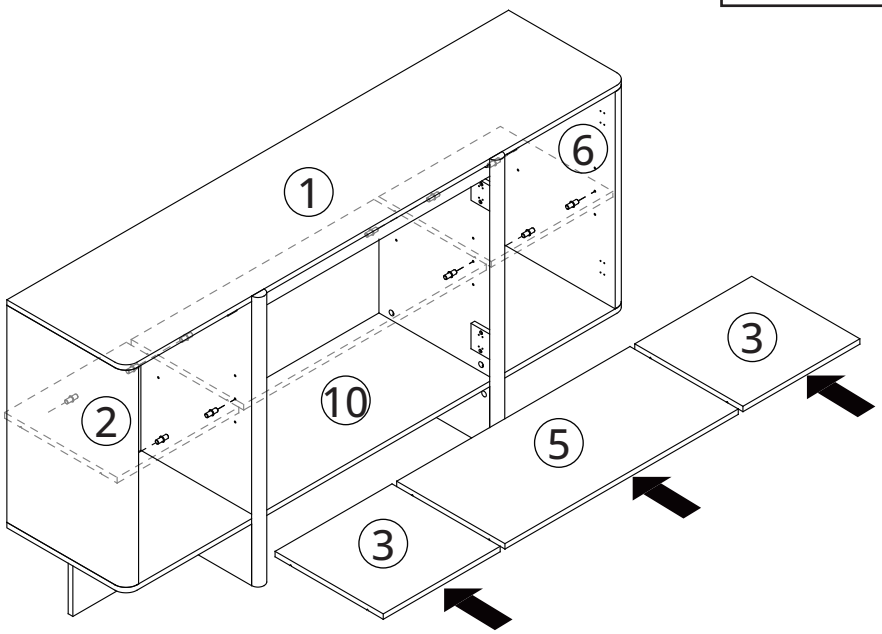


22 Insert Part J into the holes at your desired height, then place the Side Shelf Panels onto Part J.

J	x12

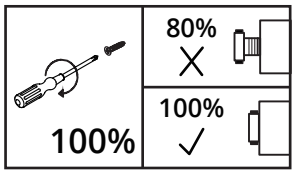


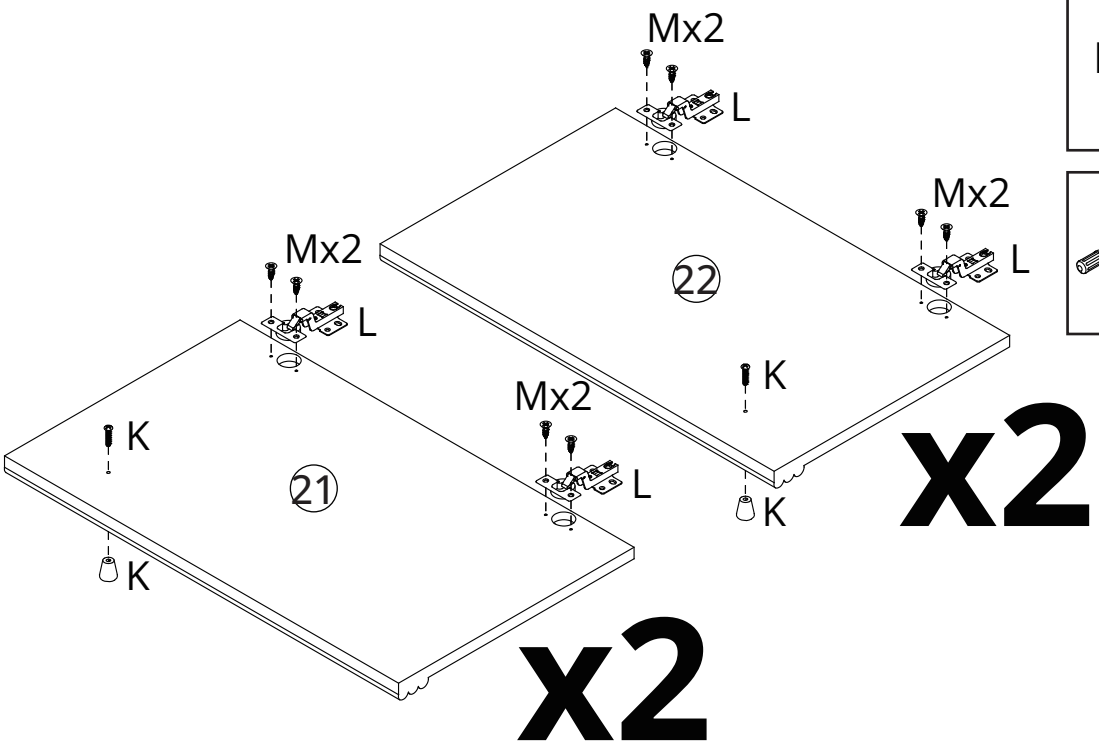




23

K	x4
L	x8
M	x16
	x1






24

Figure 2: Adjust the screws used for mounting the hinge to align the cabinet door vertically (up and down) with the edge of the cabinet frame.

Figure 4: Turn the rear screw on the hinge as shown to adjust the depth of the cabinet door relative to the cabinet frame.

Figure 5: Turn the front screw on the hinge as shown to adjust the left-and-right alignment of the cabinet door, aligning the door evenly with the edge of the cabinet frame.



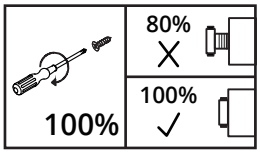


Figure 1

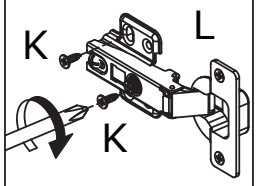


Figure 2

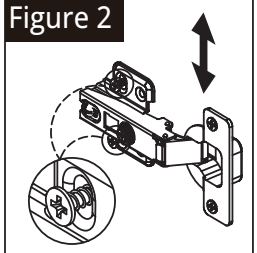


Figure 3

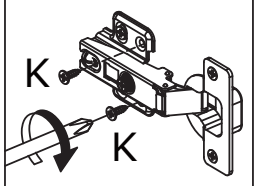


Figure 4

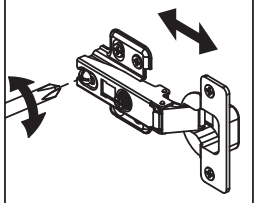
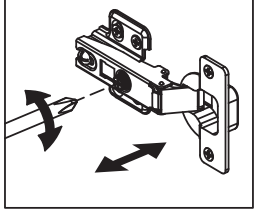
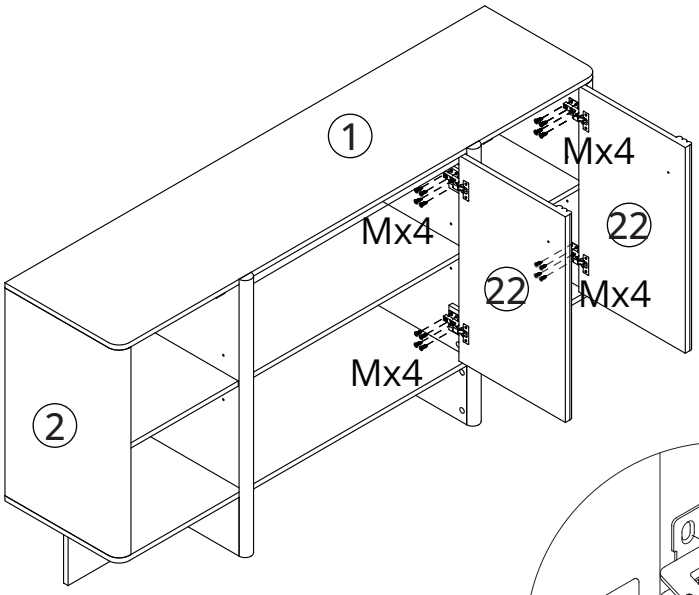
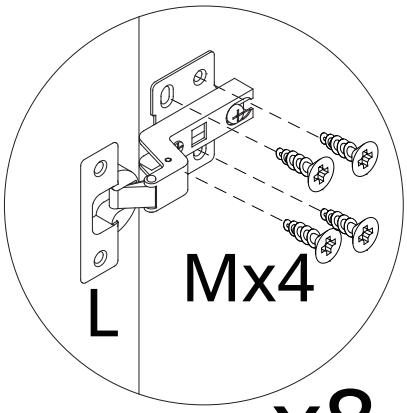


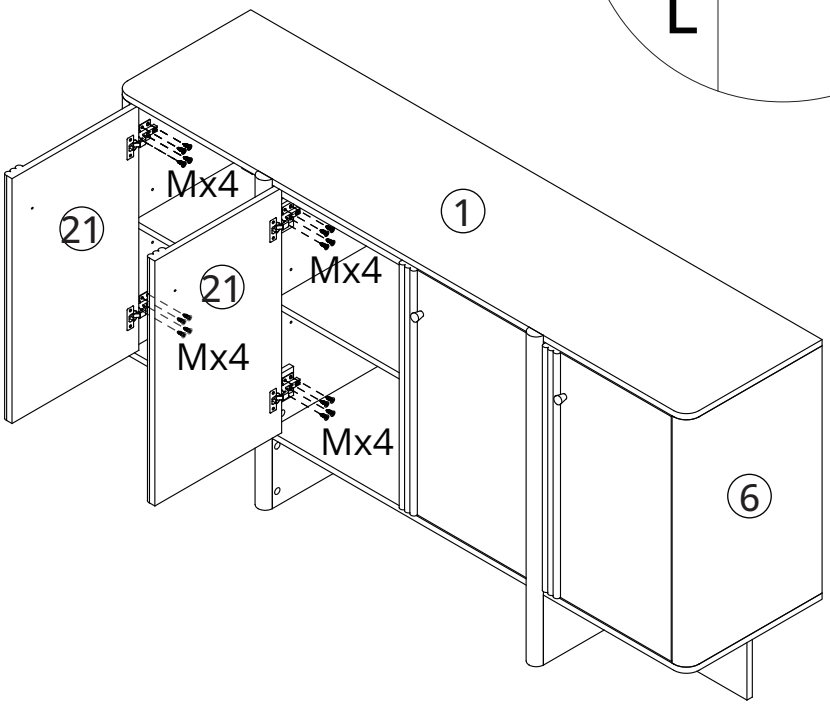
Figure 5



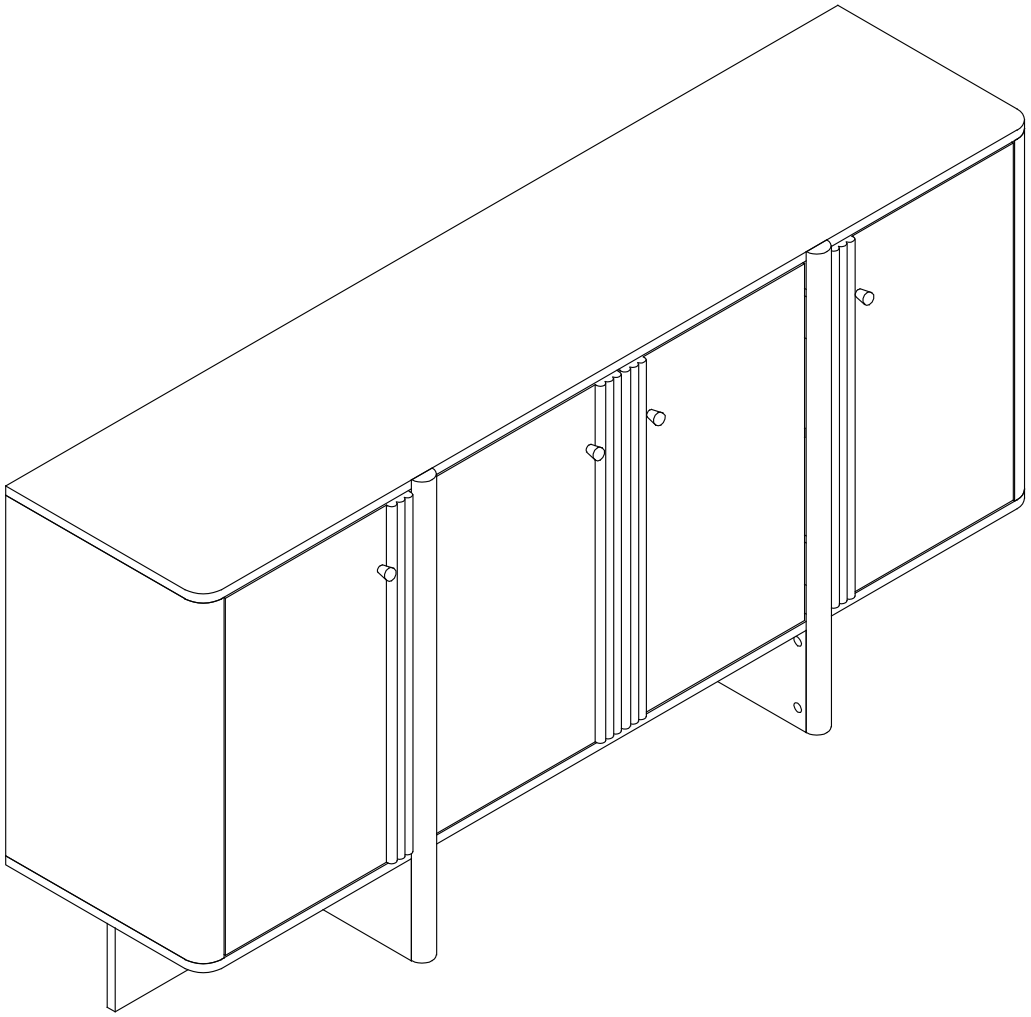




x8



FINISHED



25

