
Computer Desk

User Manual

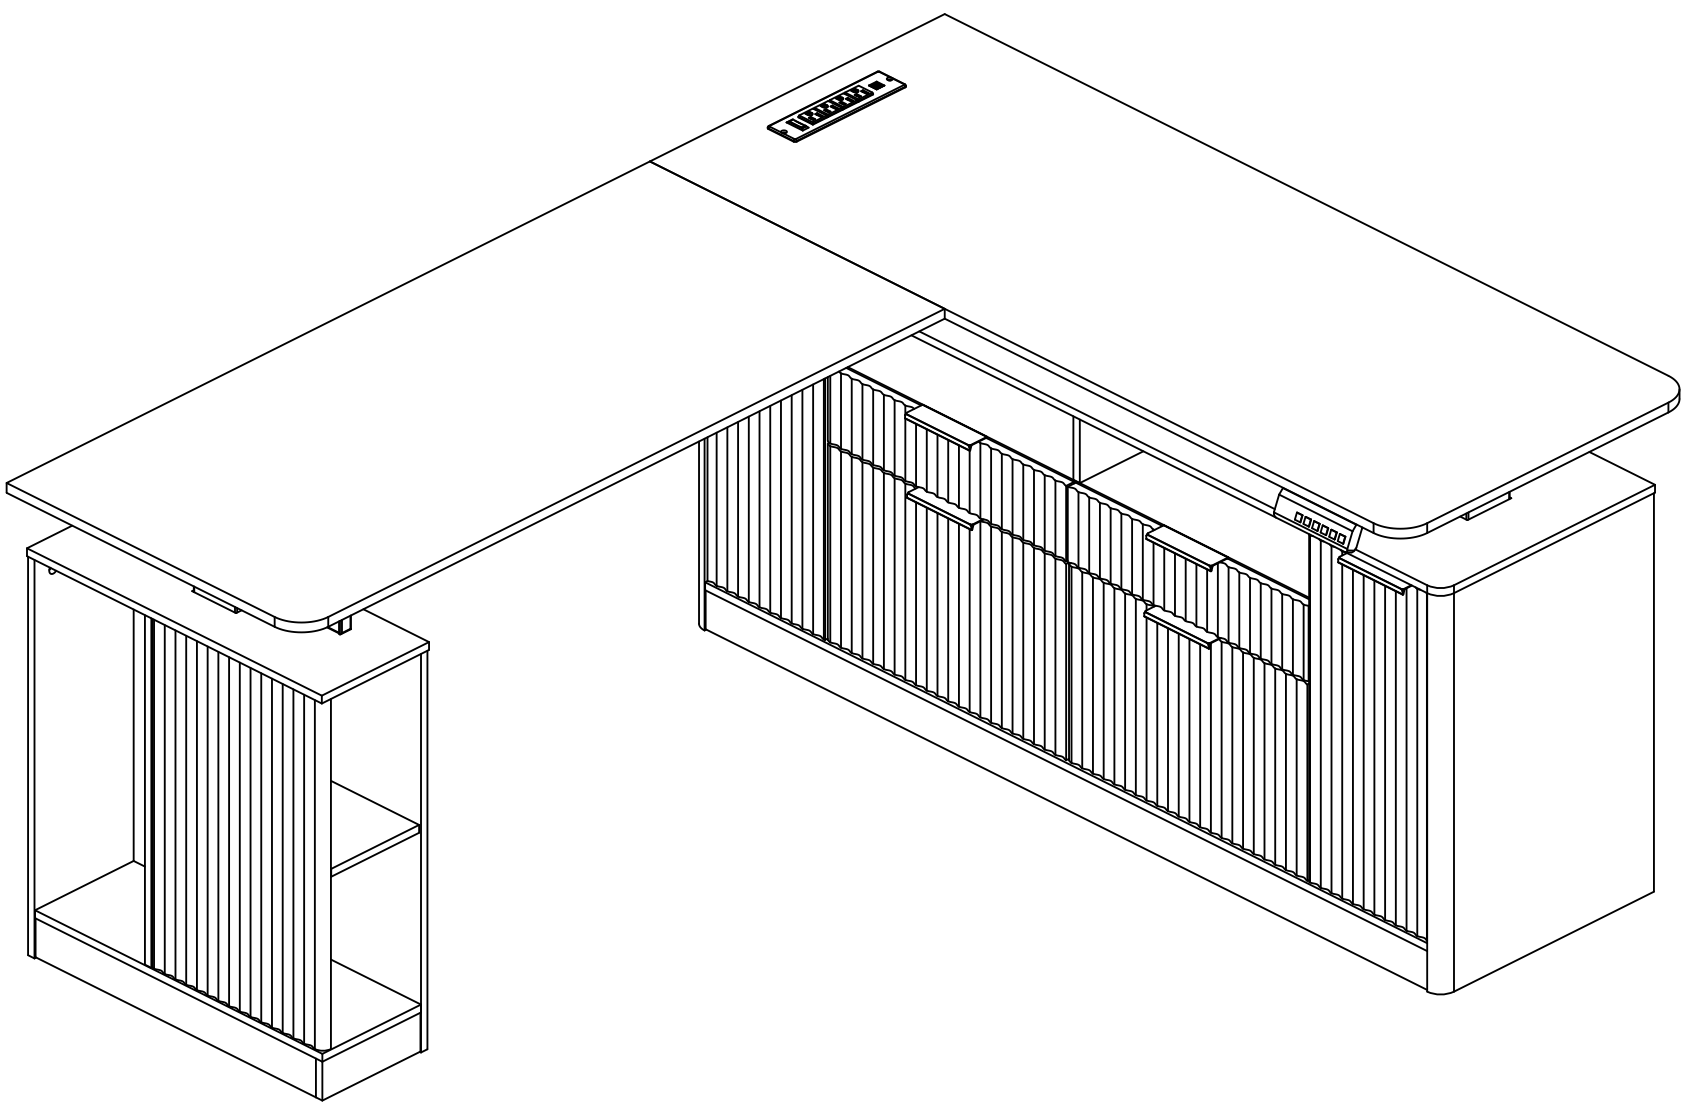

AJ-DJ505031

⚠ Please read this instruction manual carefully before using the product


Work Uniquely Play Unbound

Installation takes  x 2~4hour

Package Contents

Plates and iron components	Assembly tool kit	Instruction manual


⚠ Precautions

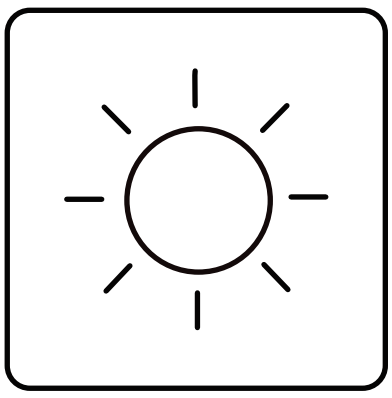


1.Avoid extended periods of direct sunlight exposure.



2.Stay away from fire.

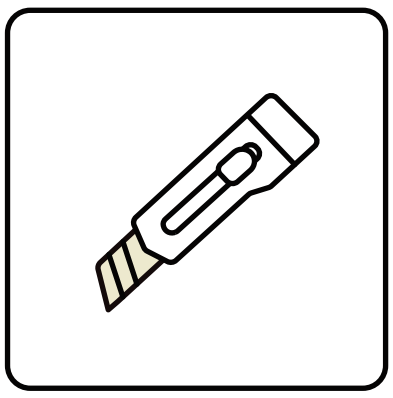


3.Keep away from sharp objects.

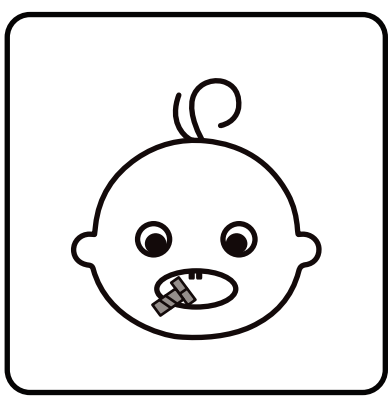


4.Keep infants and children away from assembly parts to avoid choking and suffocation.




5.Keep away from corrosive substances.

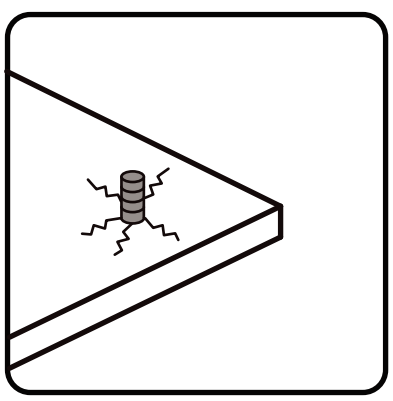

6. Pay attention to avoid over-tightening fasteners, as they may cause cracking within the board.

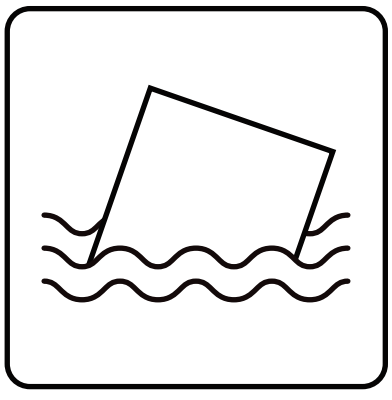

7.Prevent objects from being damaged by immersion in water.

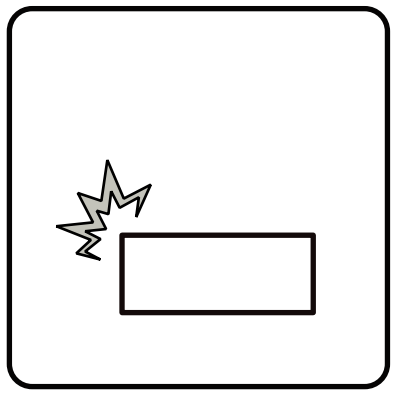


8.Prevent object collision and damage.




9.Be careful to avoid collisions.


⚠ Installation of Cams and Pins

Be sure to use the proper screws to avoid damaging the parts

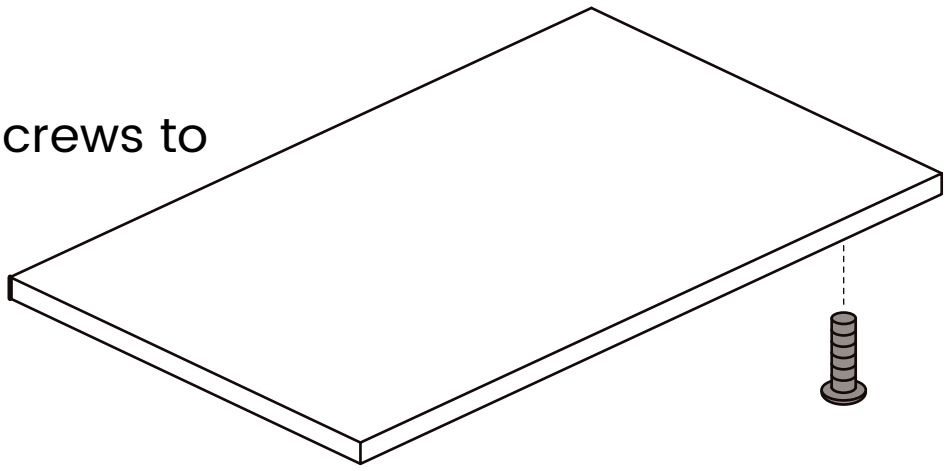

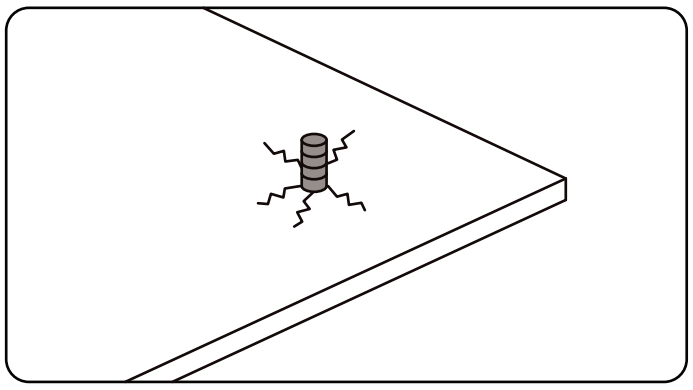

Wrong screws can cause the plank to crack

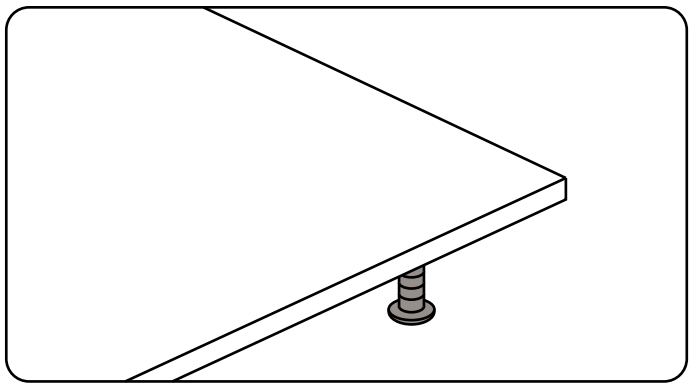



The right screw is the right size

⚠ Matters needing attention

1. When installing the screws in the installation step, the screws do not need to be tightened.

2. After this installation step is confirmed and the holes are aligned, then tighten all the screws.

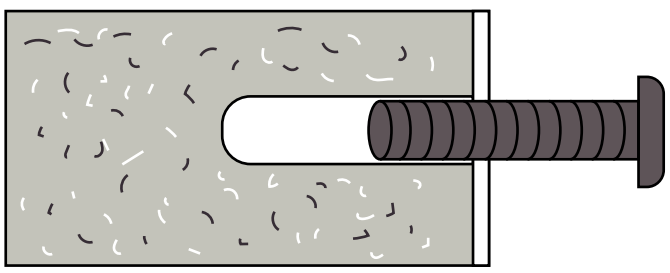

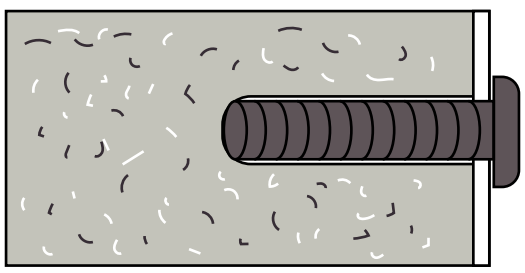

3. If the screws are tightened during the installation process, it will cause problems such as misalignment of the screw holes and misalignment of the board in subsequent installations

Disassembly Diagram

BOX A

1 x1 3 x1 4 x1 5 x1 6 x1 7 x1 8 x1 9 x2

10 x1 11 x1 12 x2 15 x1 16 x1 27 x2 35 x1 36 x1

ACCESSORY BOX

13 x1 14 x1 17 x1 50 x4 51 x4 55 x2 A x6 B x12

C x17 D x23 E x16 F x3 G x7 H x16 I x3 J x38

K x18 L x5 M x45 N x2 O x94 P x94 Q x5 R x1

S x6 T x15 U x15 V x18 W x4 X x2 Y x23 Z x20

AA x1 BB x1

BOX B


2 x1 18 x1 19 x1 20 x1 21 x1 22 x1 23 x1 24 x1

25 x1 26 x1 28 x1 29 x1 30 x1 31 x2 32 x1 33 x1

34 x1 37 x1 38 x1 39 x1 40 x1 41 x1 42 x1 43 x2


44 x2 45 x4 46 x4 47 x2 48 x2 49 x4

Disassembly Diagram

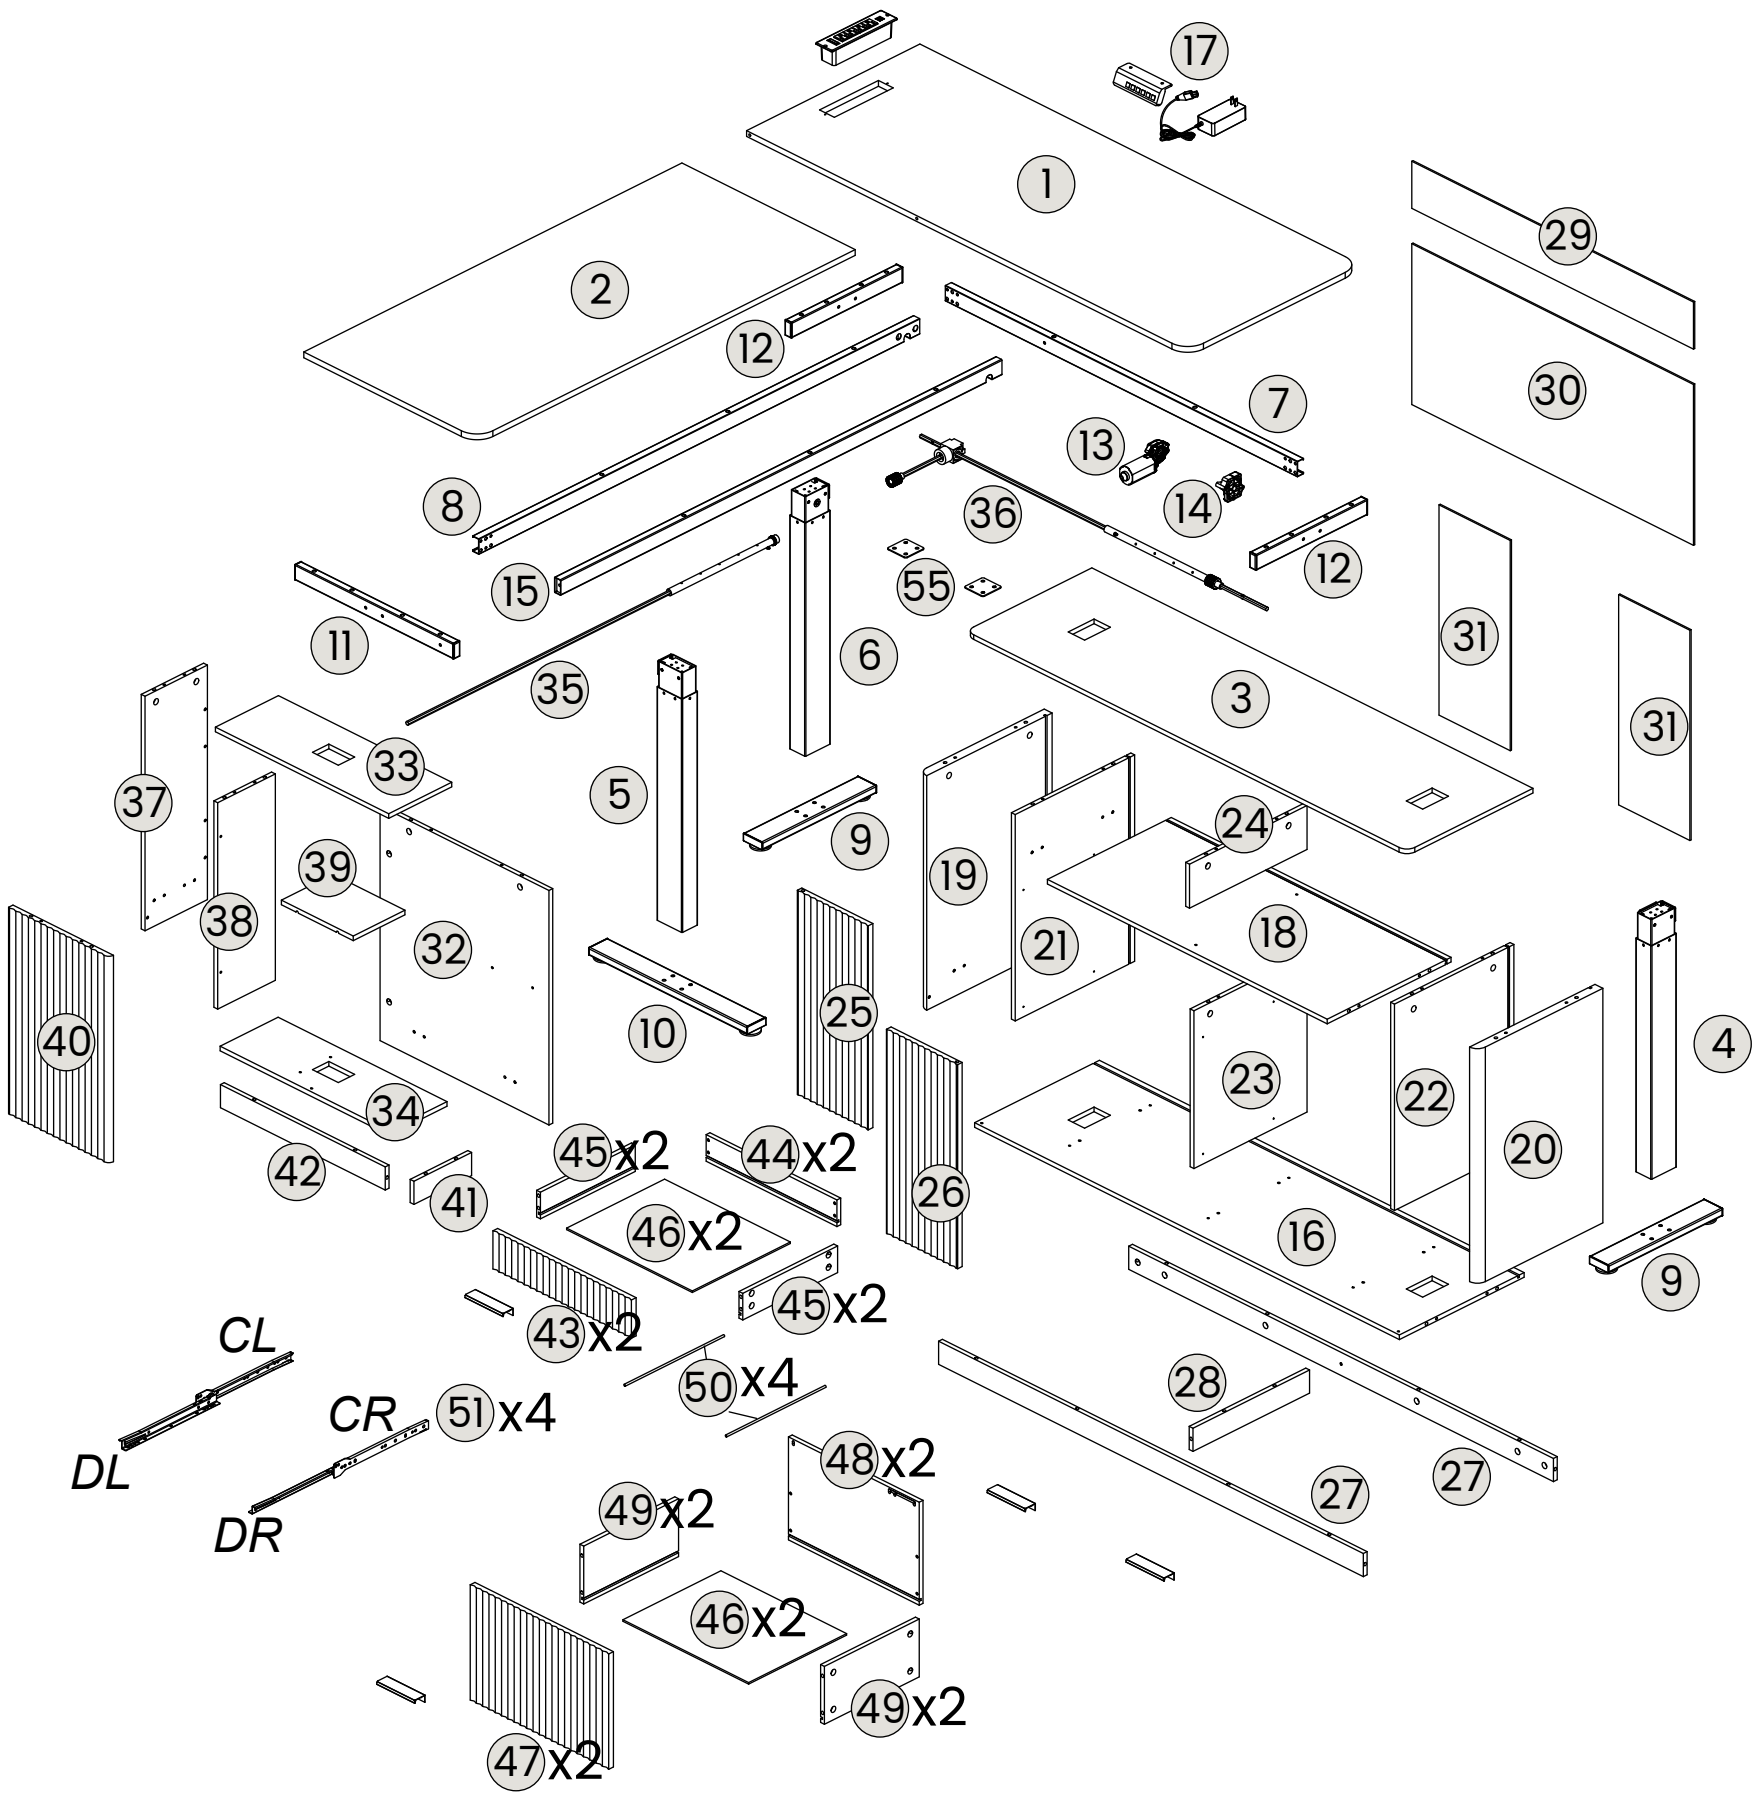


Package Contents


01

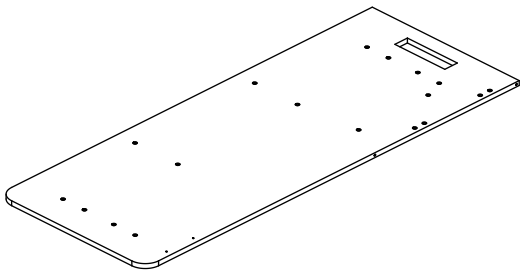


02

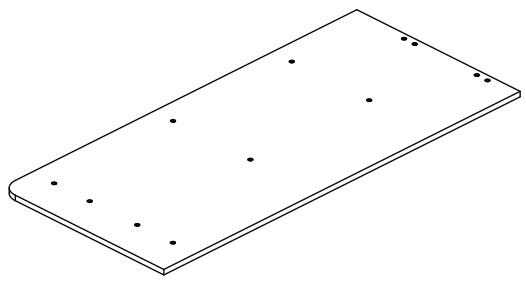


03

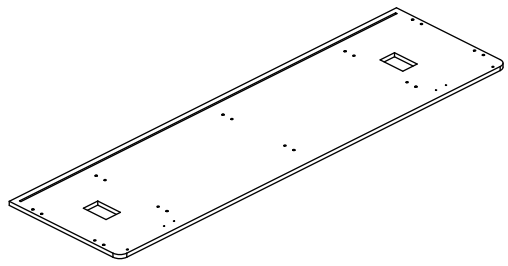


04

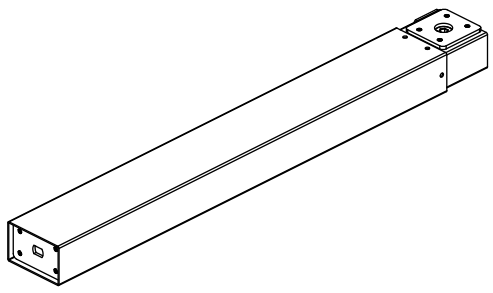


05

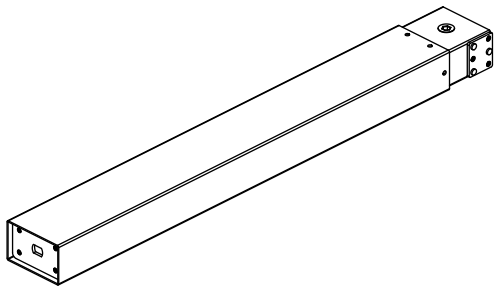


06

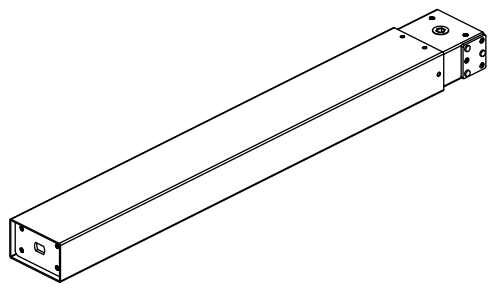


07

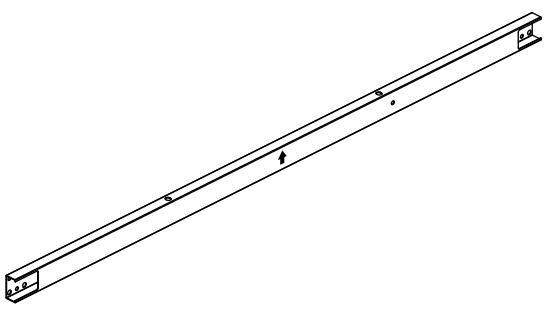


08

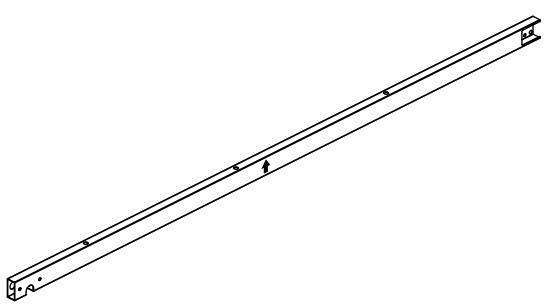


09 x2

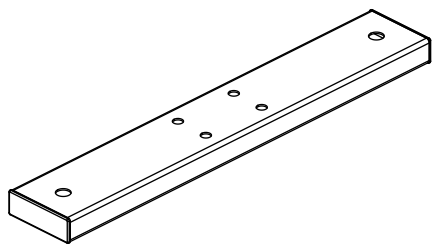


10

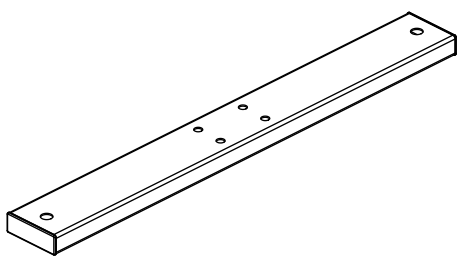


11

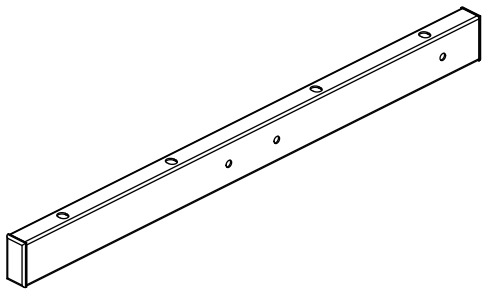


12 x2

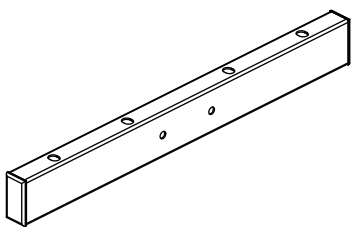


13

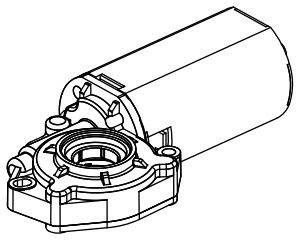

14

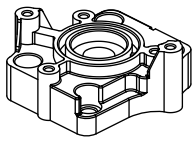


15

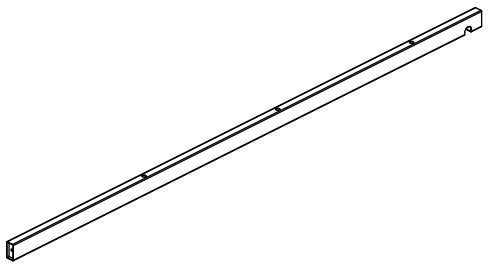


Package Contents


16

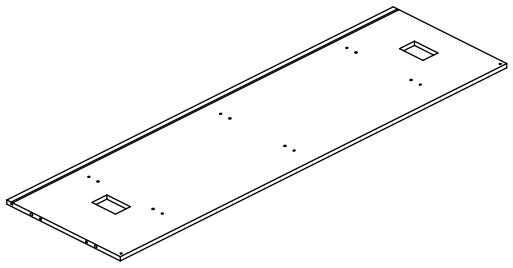


17

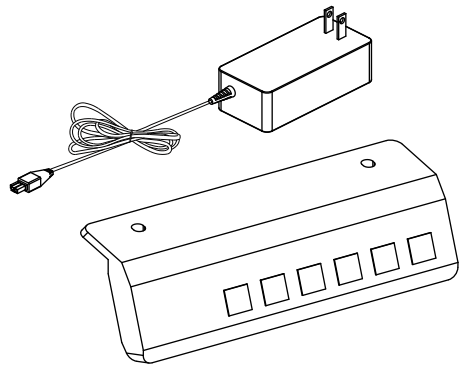


18

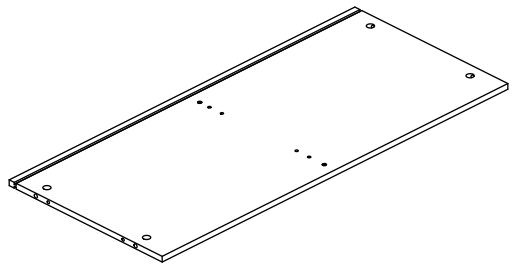


19

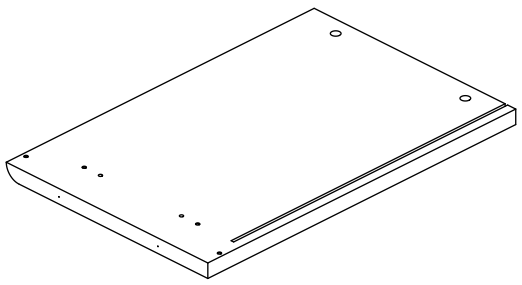


20

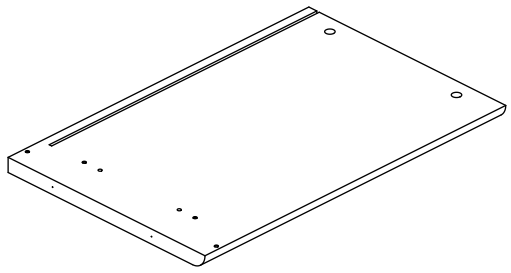


21

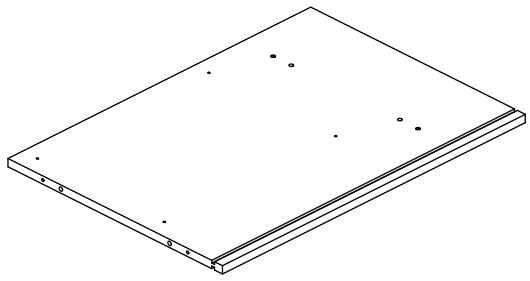


22

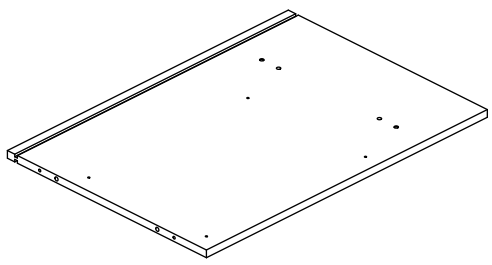


23

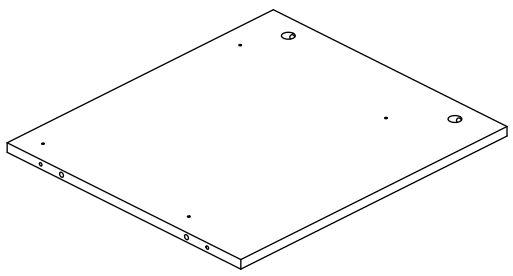


24

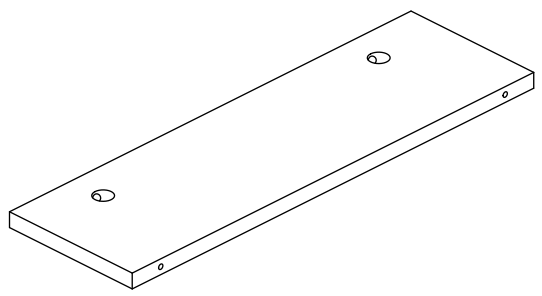


25

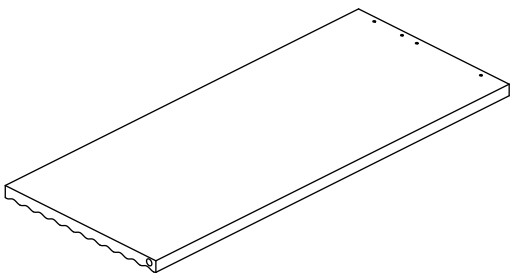


26

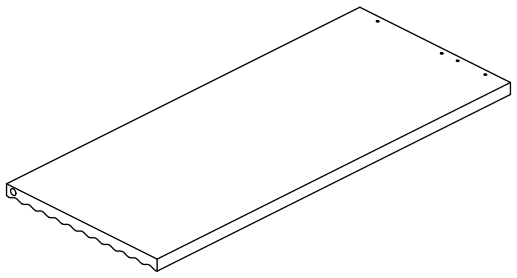


27 x2

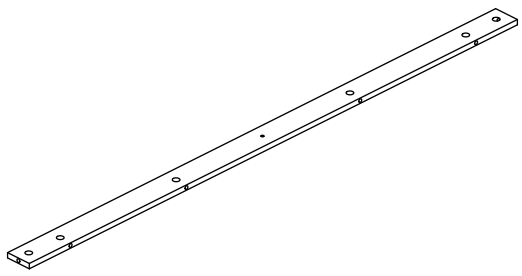


28

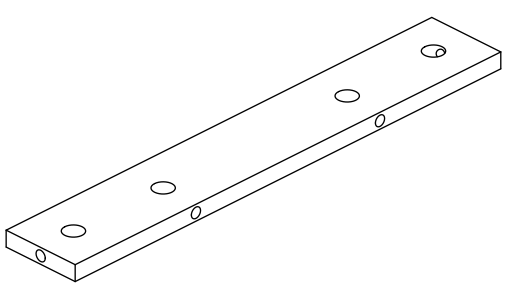

29

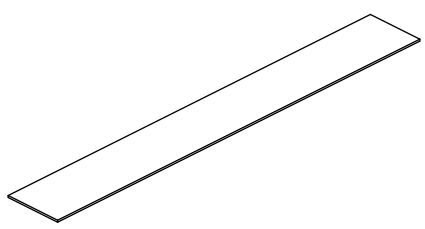


30

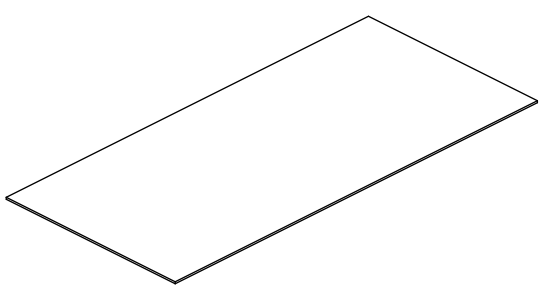


Package Contents


31 x2

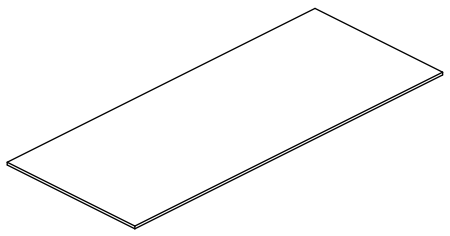


32

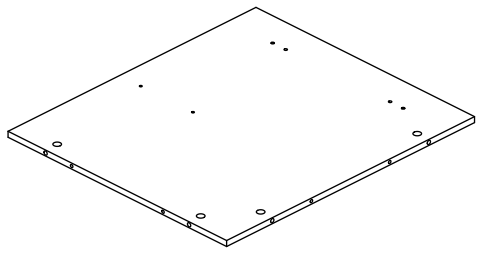


33

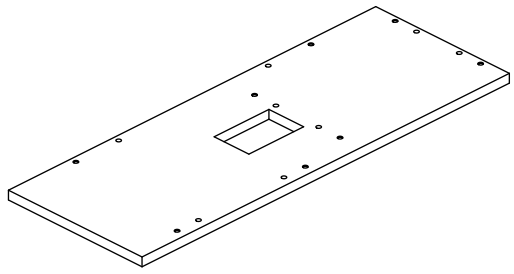


34

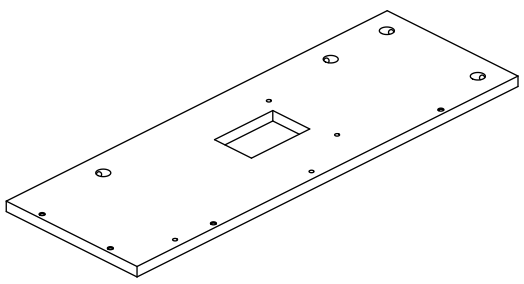


35

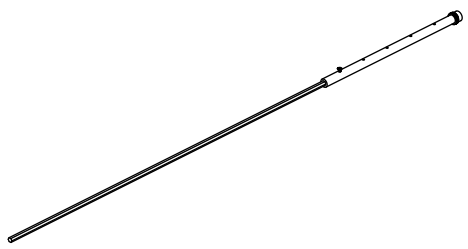


36

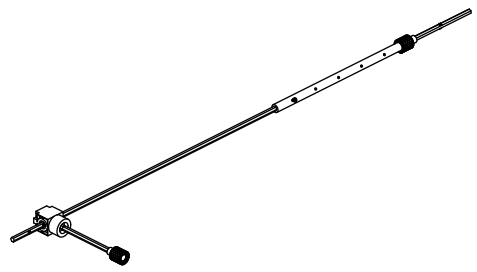


37

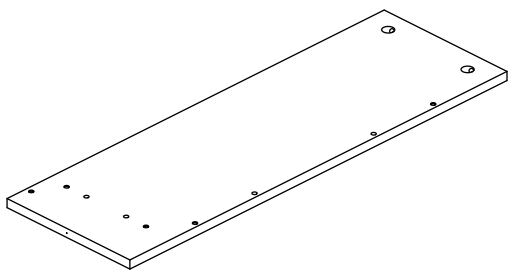


38

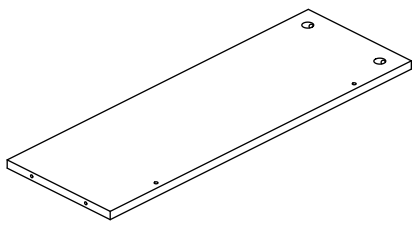


39

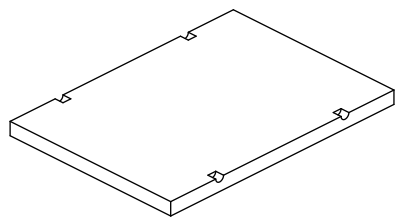


40

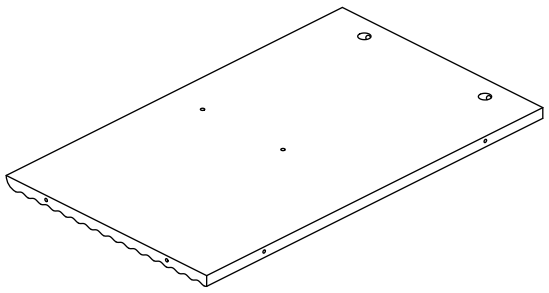


41

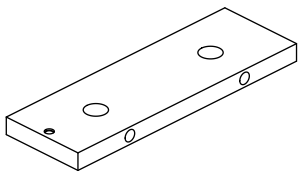


42

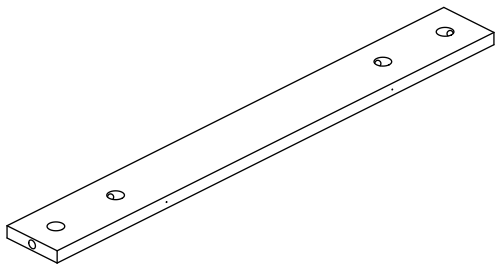


43 x2

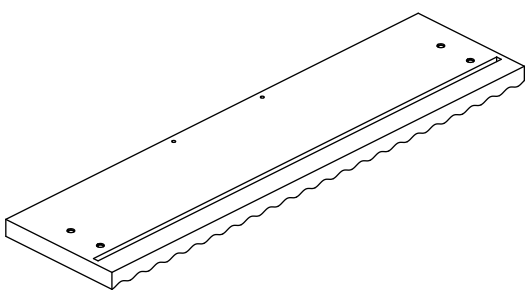

44 x2

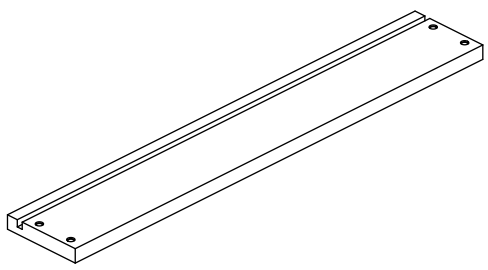


45 x4

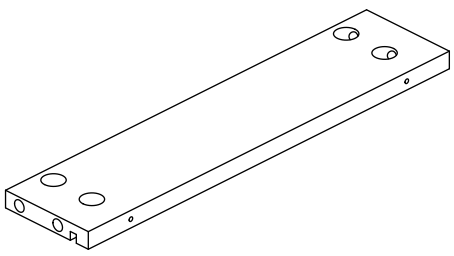


Package Contents


46 x4

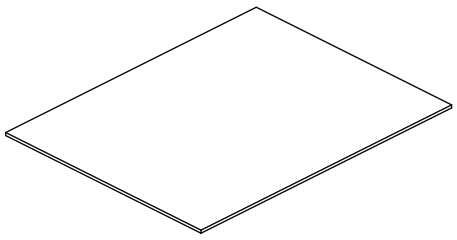

47 x2

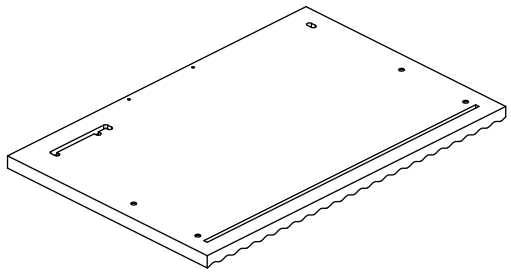


48 x2

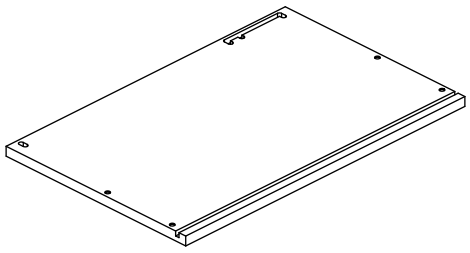


49 x4

50 x4























51 x4

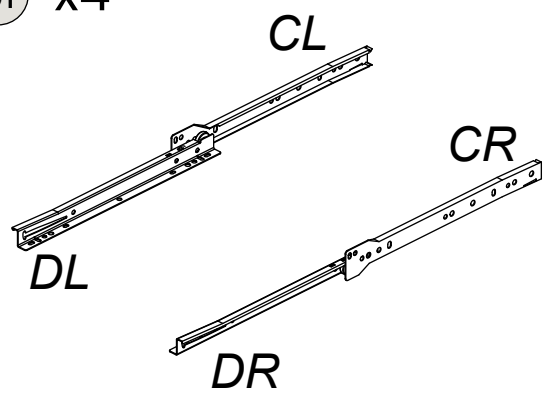




55 x2

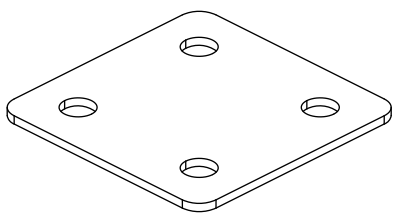


Tool sheet

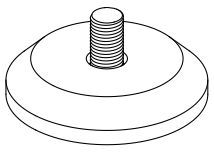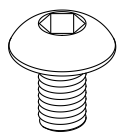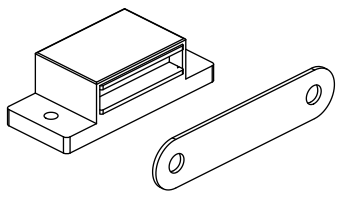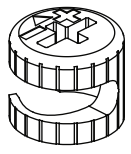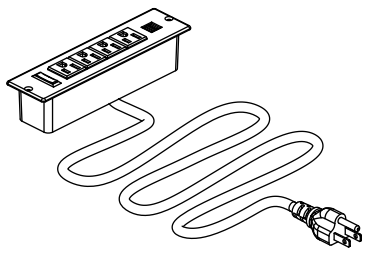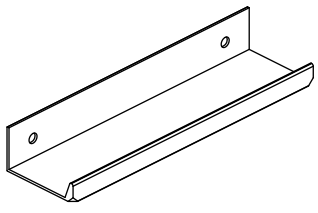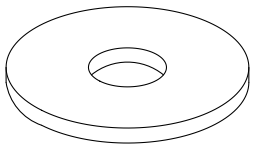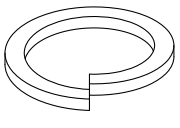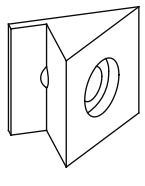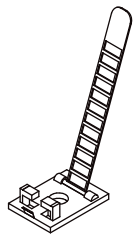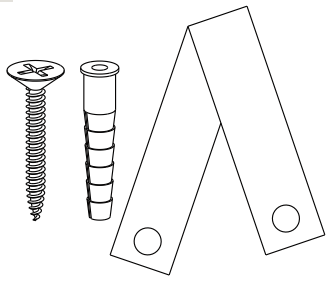
A x6 	**B** x10+2  M6x10MM	**C** x15+2  M6x10MM	**D** x20+3  M6x48MM
E x14+2  ST5x40MM	**F** x2+1  M4x12MM	**G** x6+1  M6x28MM	**H** x14+2  M6x40MM
I x2+1  ST4x25MM	**J** x34+4  ST4x12MM	**K** x16+2  ST4x14MM	**L** x4+1 
M x42+3  Ø6x30MM	**N** x2 	**O** x88+6 	**P** x88+6 
Q x4+1  Ø5	**R** x1 	**S** x6 	**T** x12+3  Ø20MM
U x12+3 	**V** x16+2 	**W** x4 	**X** x2 

Tool sheet

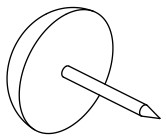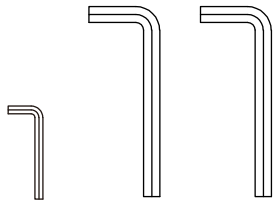Y x20+3  ST3x12MM	**Z** x18+2 	**AA** x1  3# 5# 5#	**BB** x1 

Tool sheet

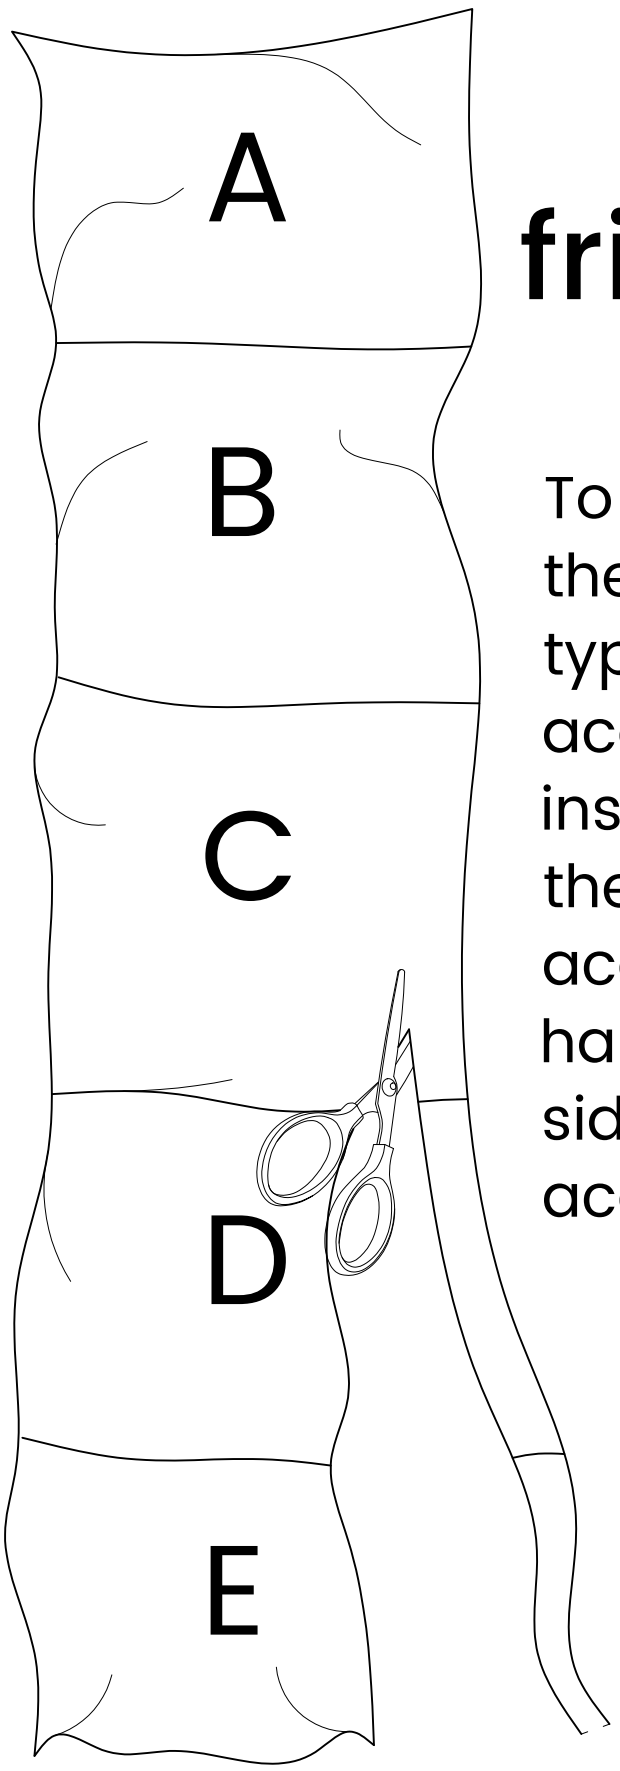

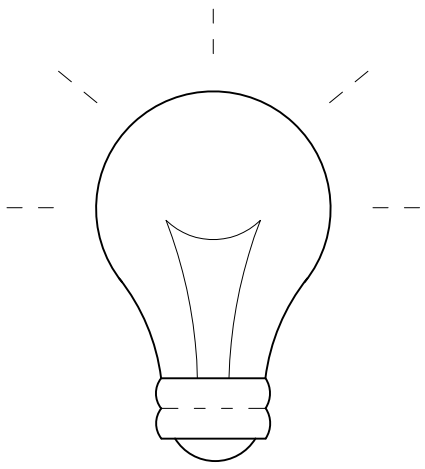



friendly reminder

To avoid errors and confusion during the installation of accessories, use the type and quantity of hardware accessories according to the installation procedure described in the instructions. First, unroll the accessories bag and lay out the hardware accessories, cut holes in the side, and take out the hardware accessories


Assembly Instruction

1

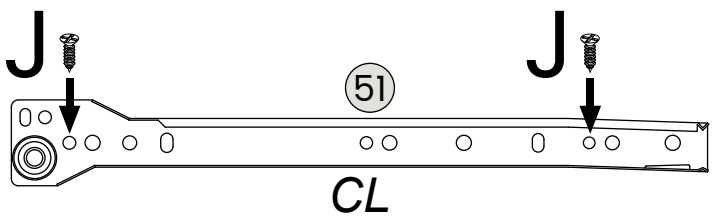

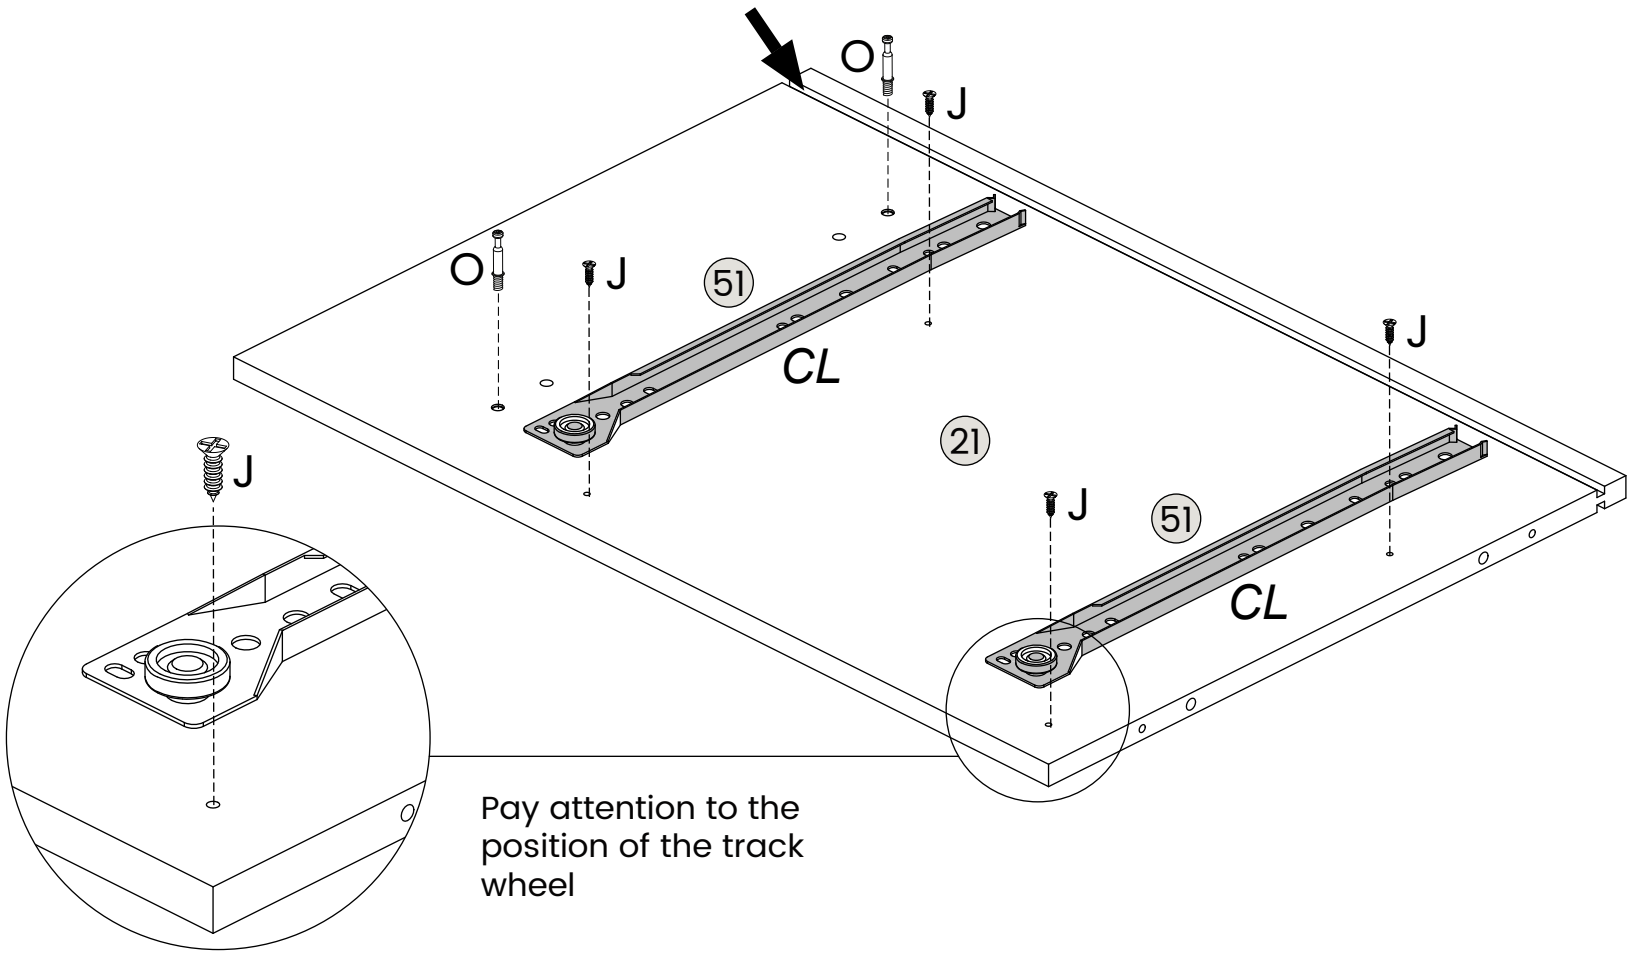


J x4





ST4X12MM

O x2



2

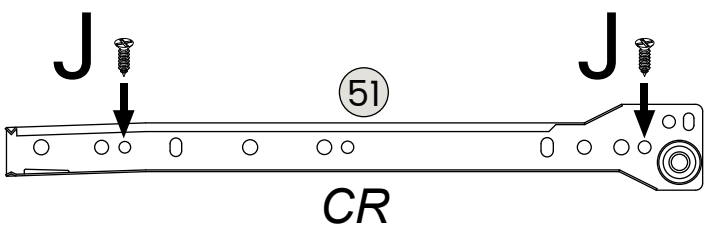

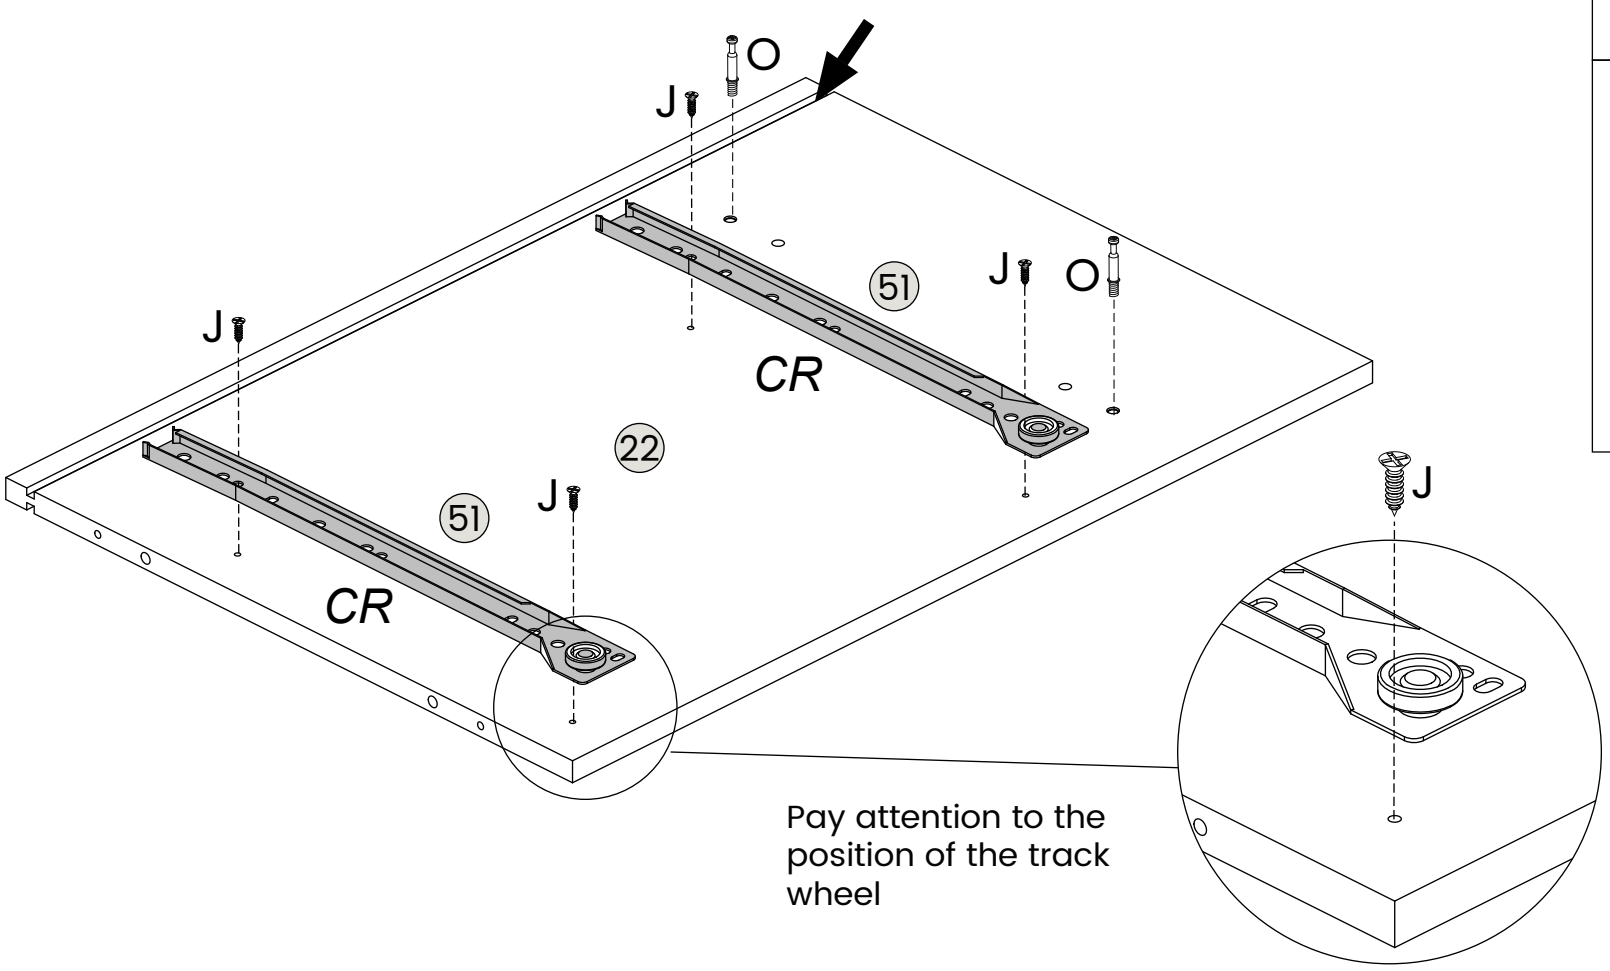

J x4




ST4X12MM

O x2


Assembly Instruction


J x8




ST4X12MM


3

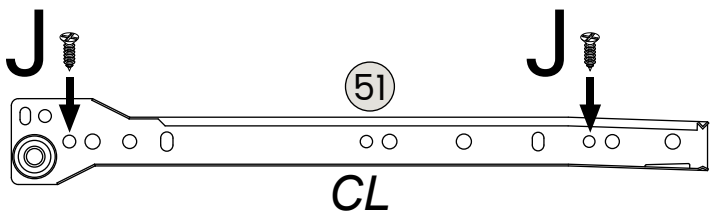

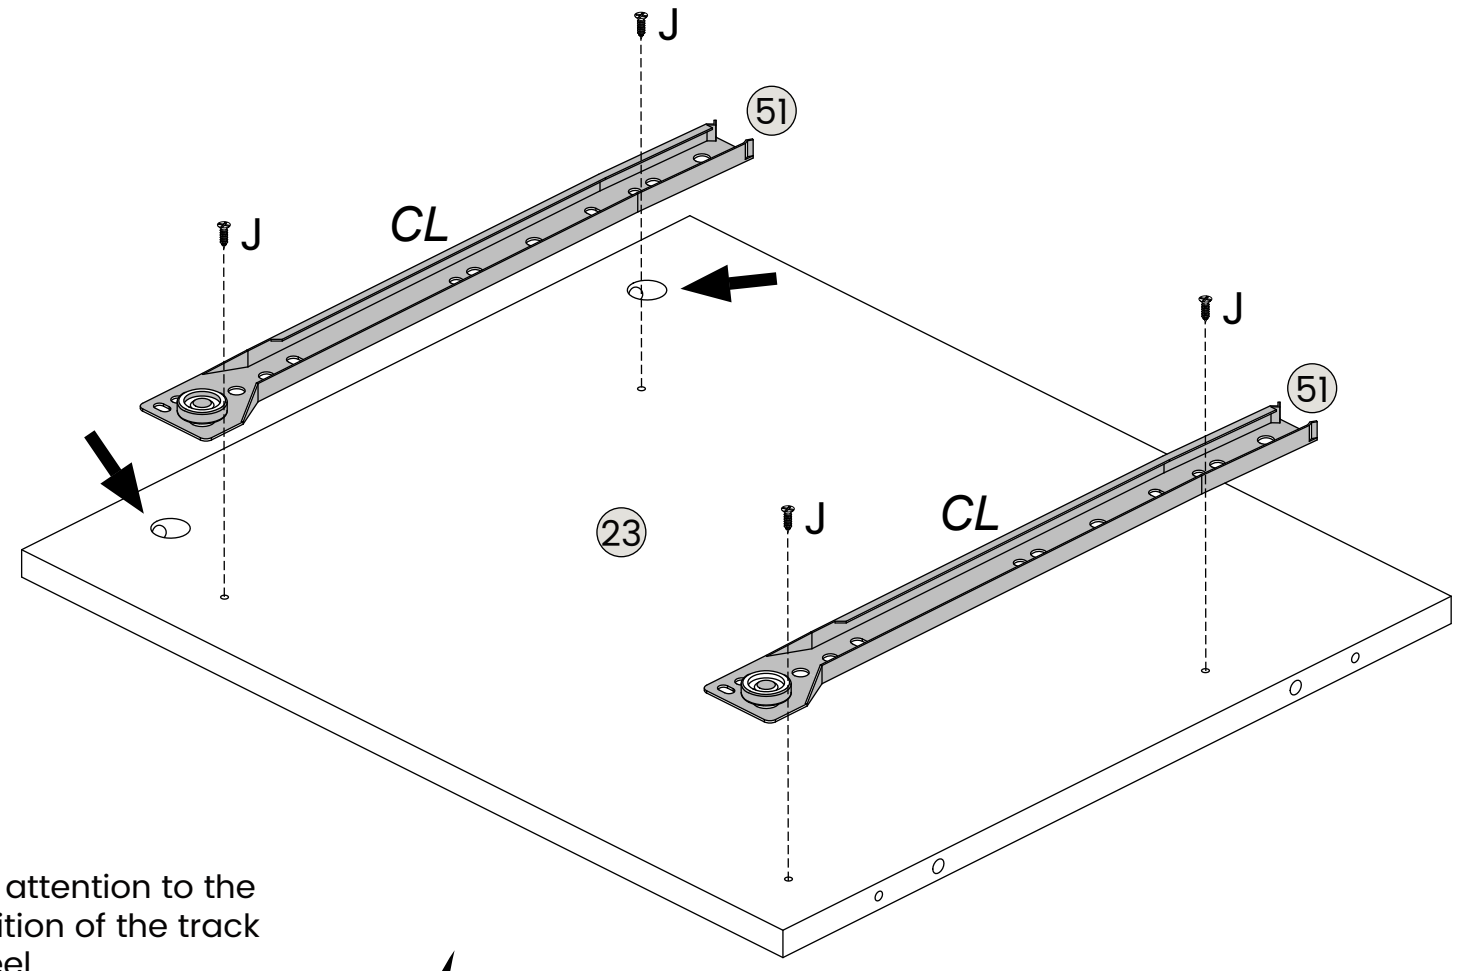


Pay attention to the position of the track wheel

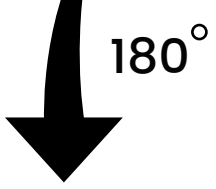

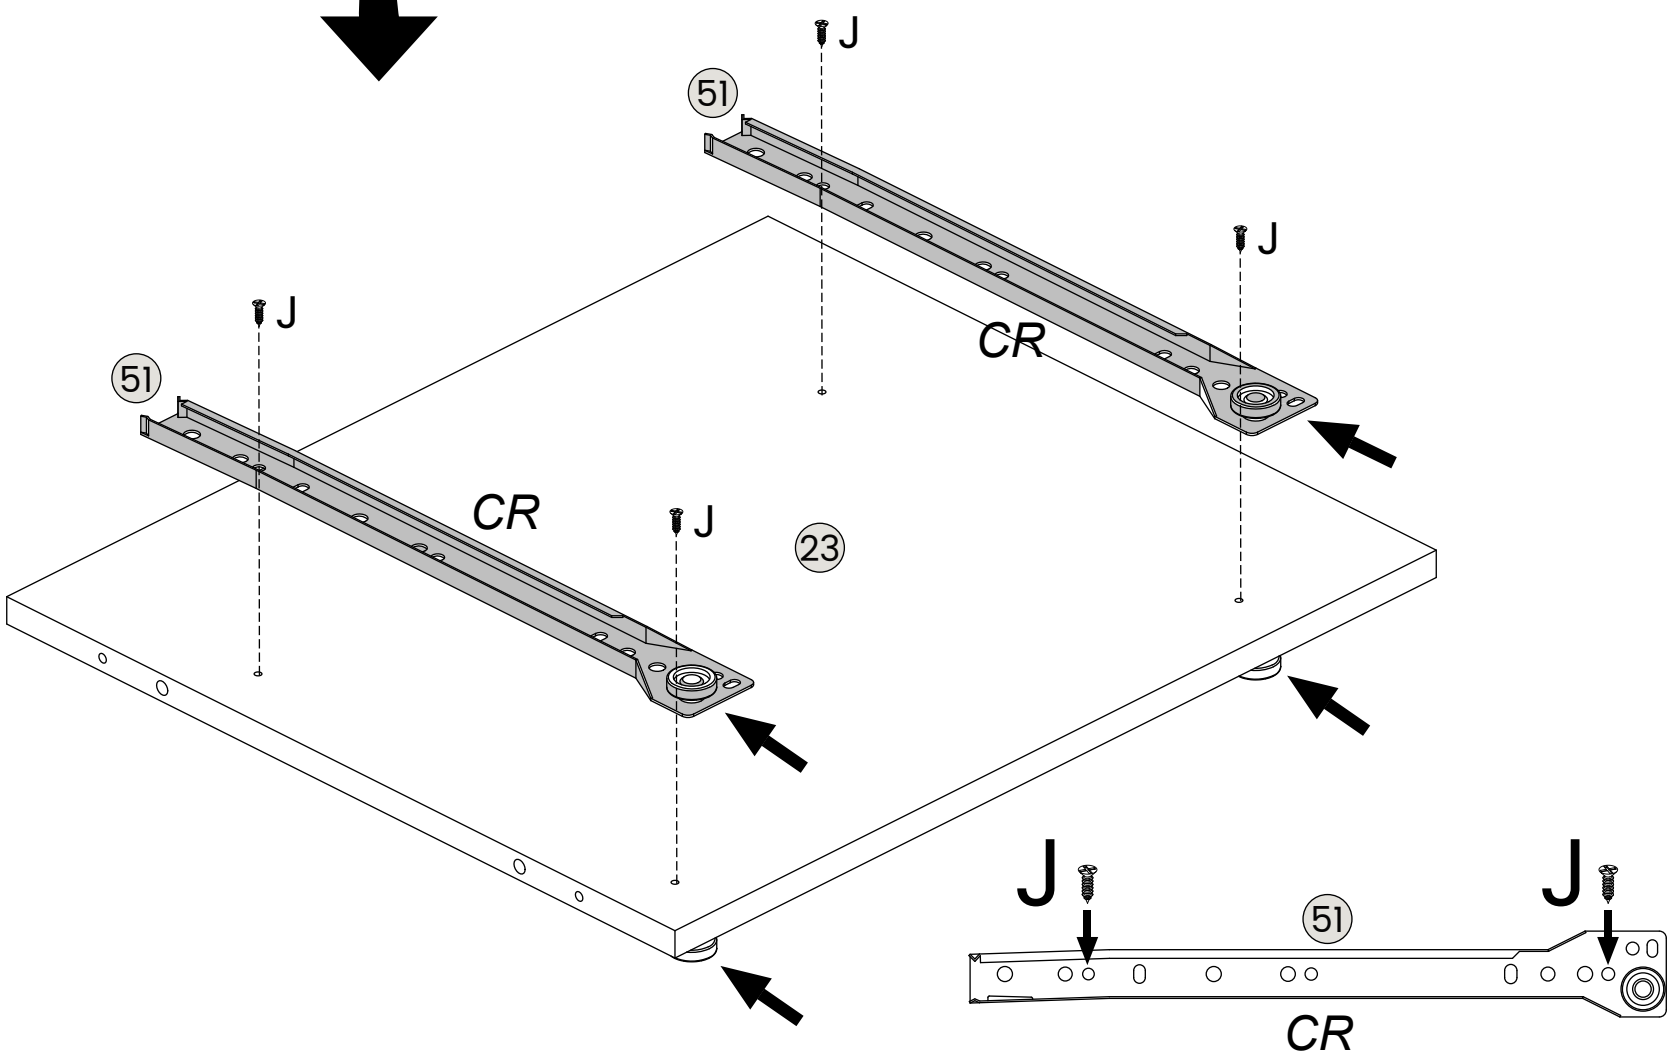


Assembly Instruction

4

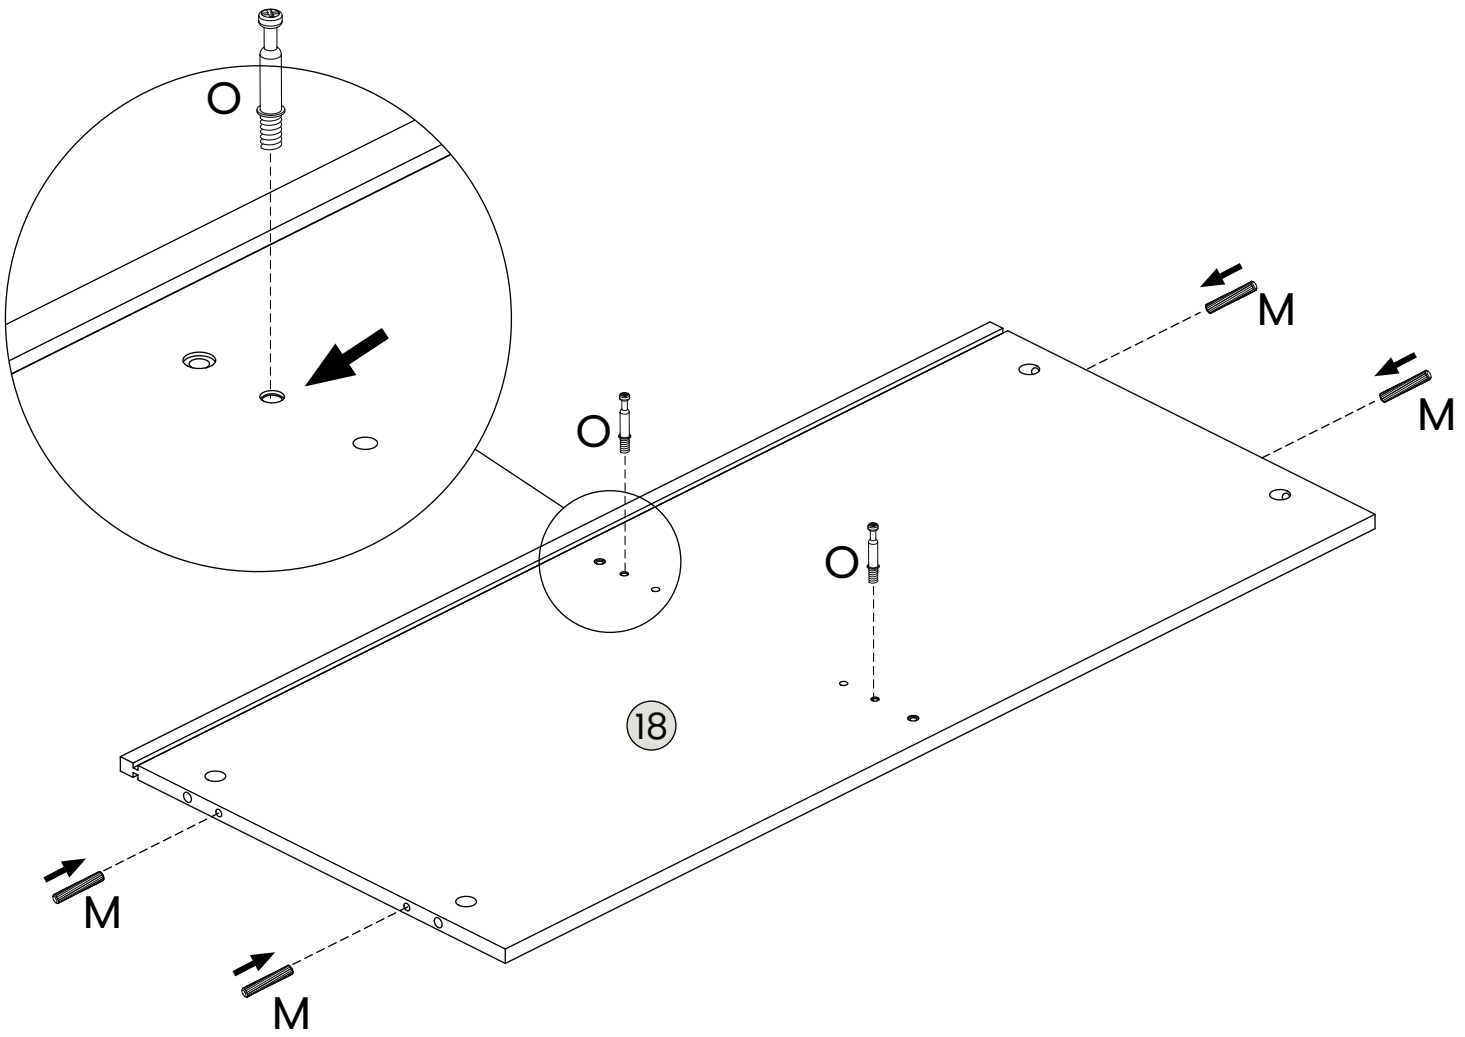

O x2




M x4




Ø6x30MM

5

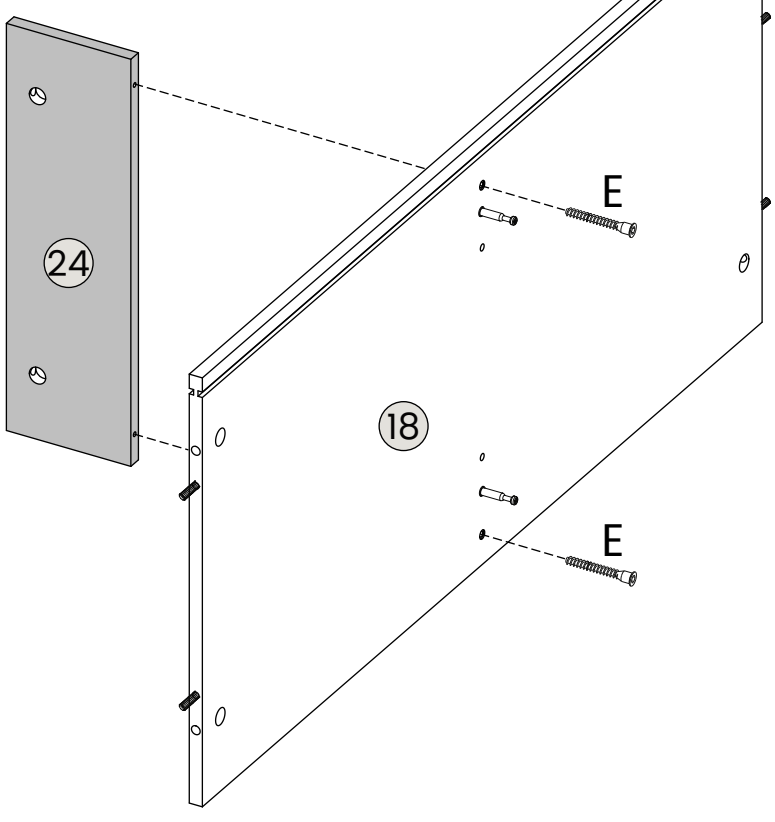

E x2





ST5X40MM

Assembly Instruction

6


P x4

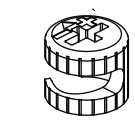

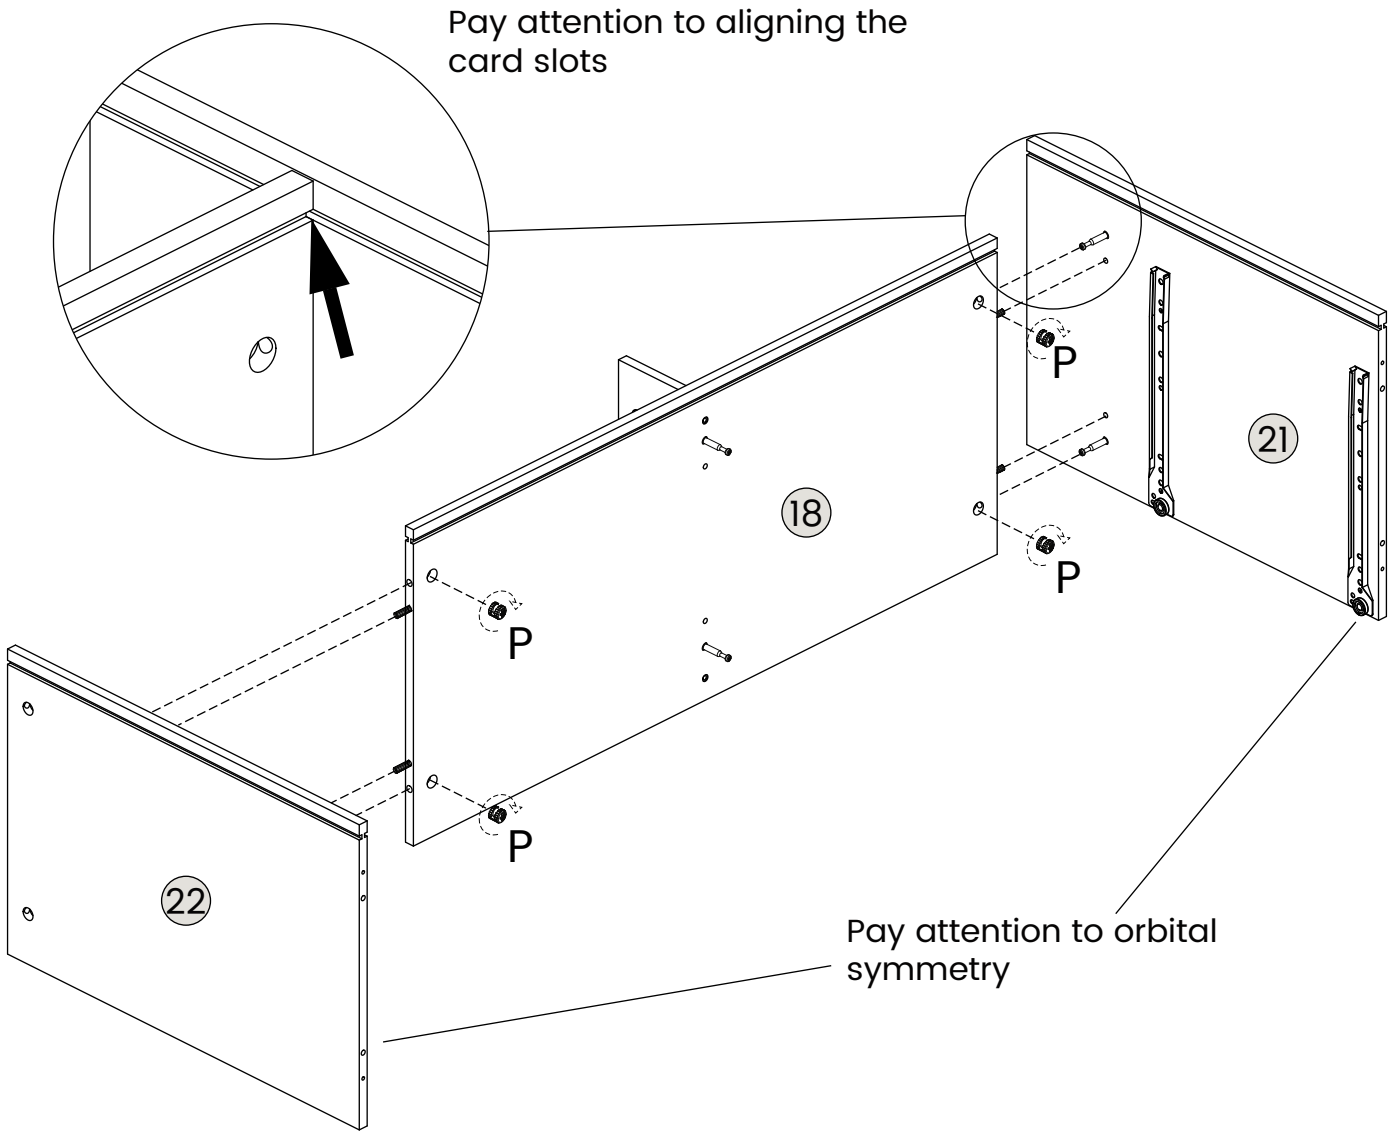


Installation instructions for eccentric rod


O

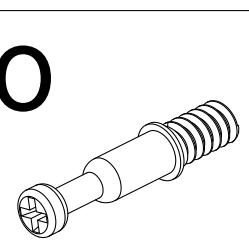


P

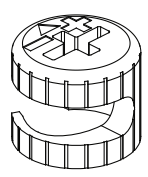


01

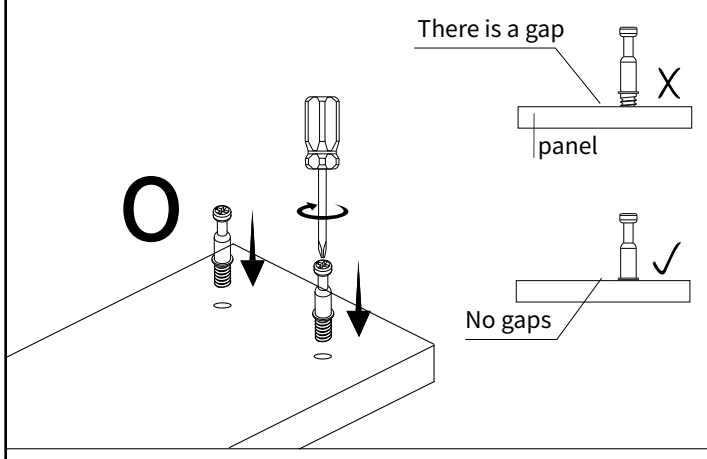


02

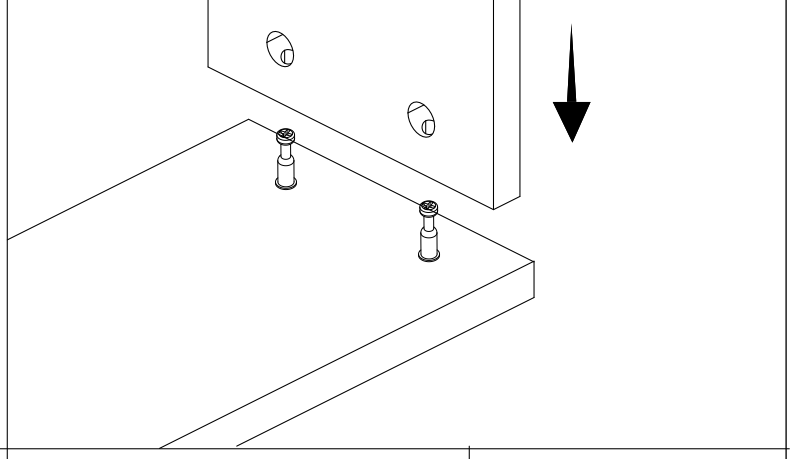

03

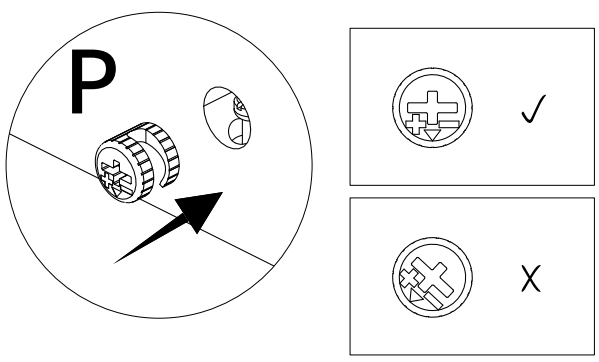


04

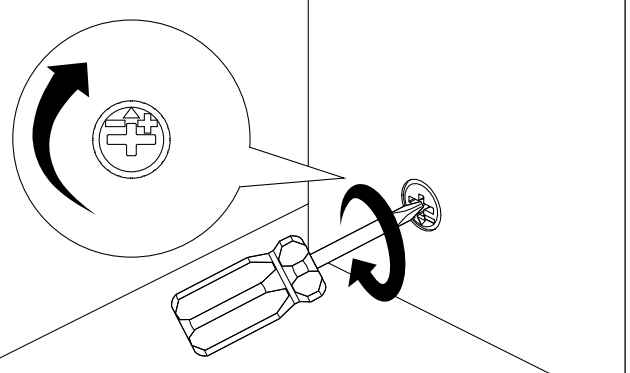

Assembly Instruction

7

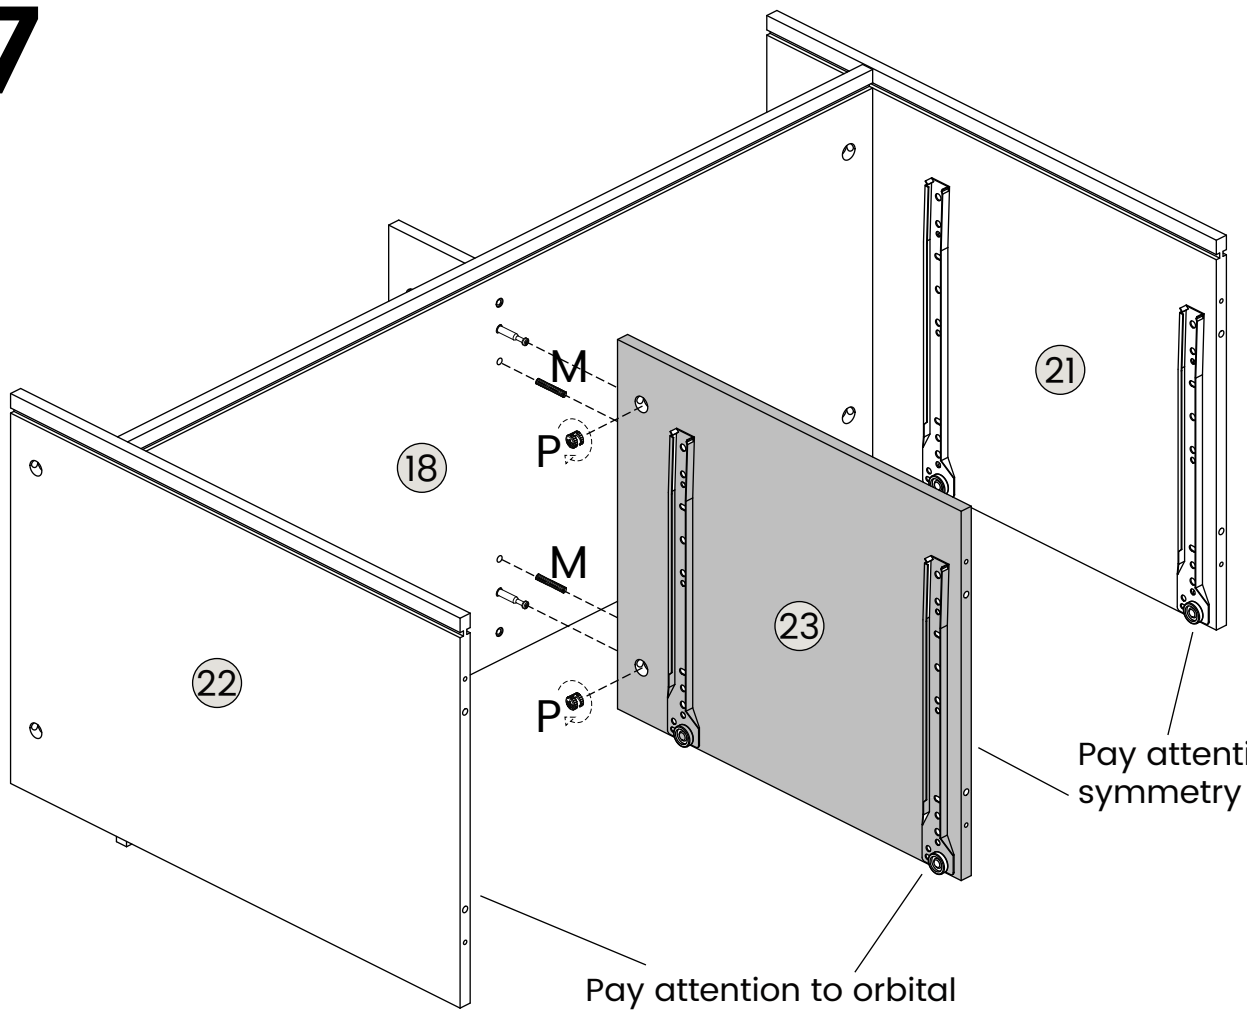


P x2




M x2



Ø6x30MM

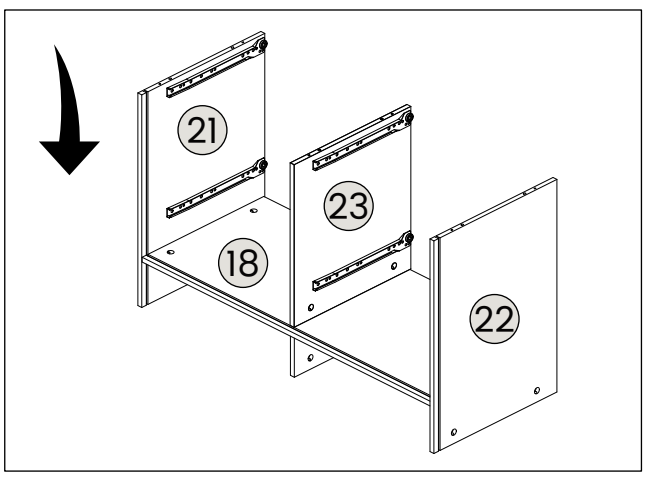


8

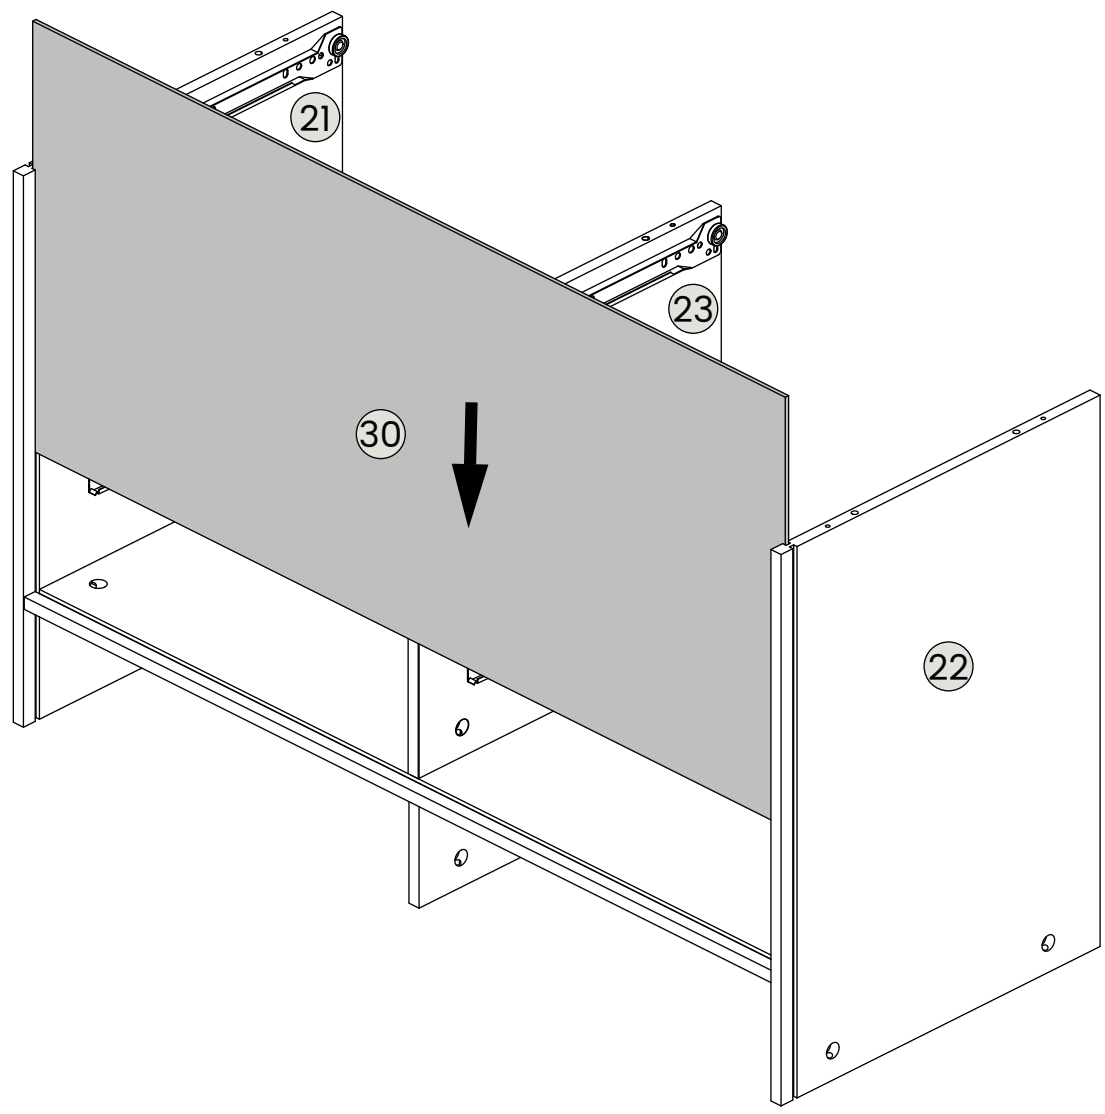


Assembly Instruction

9

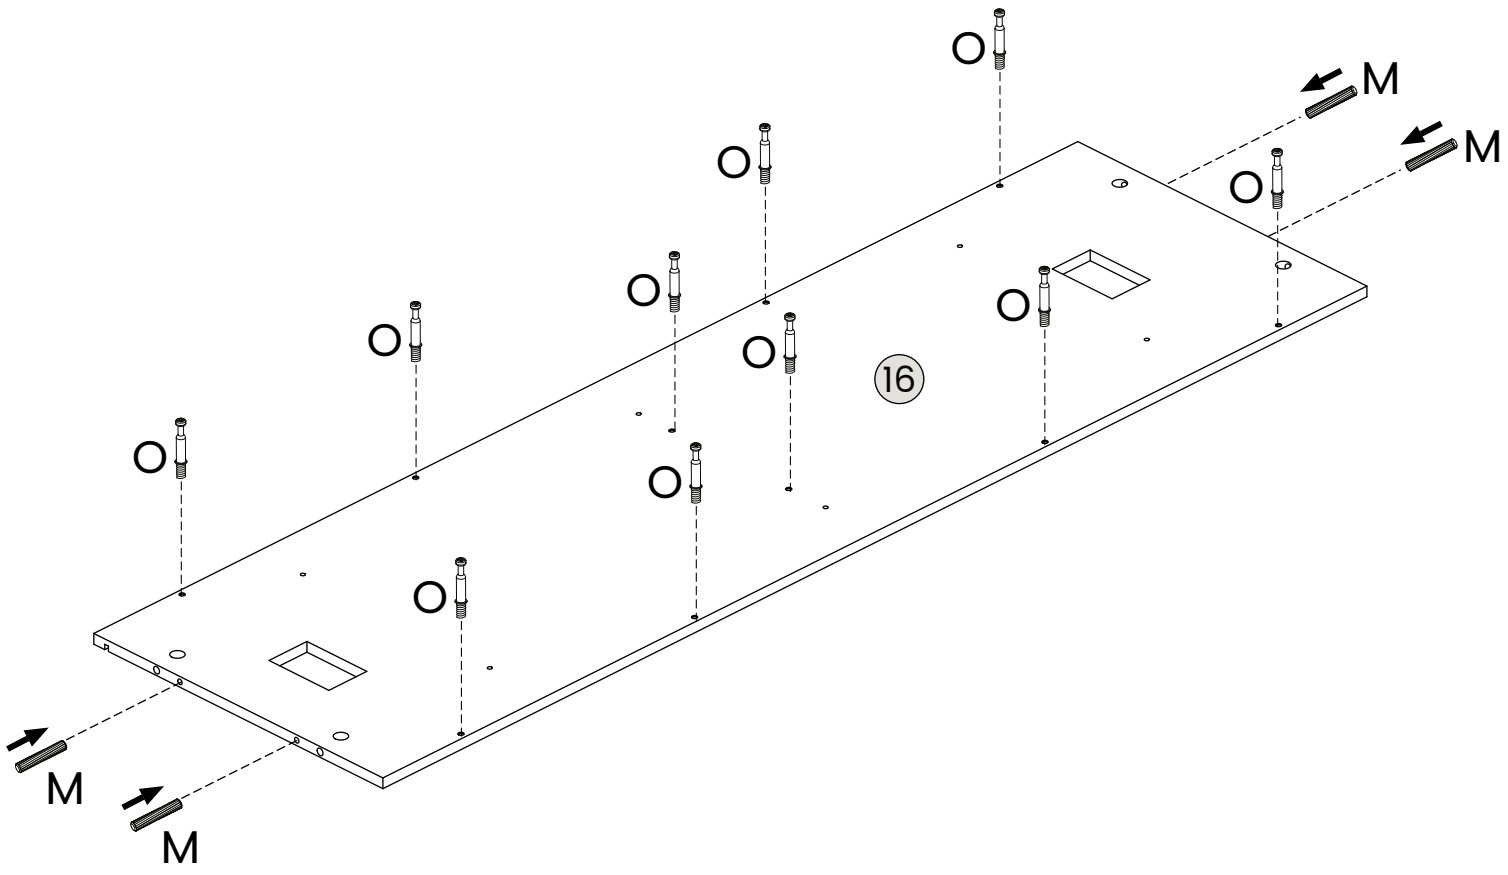

O x10




M x4




Ø6x30MM

10

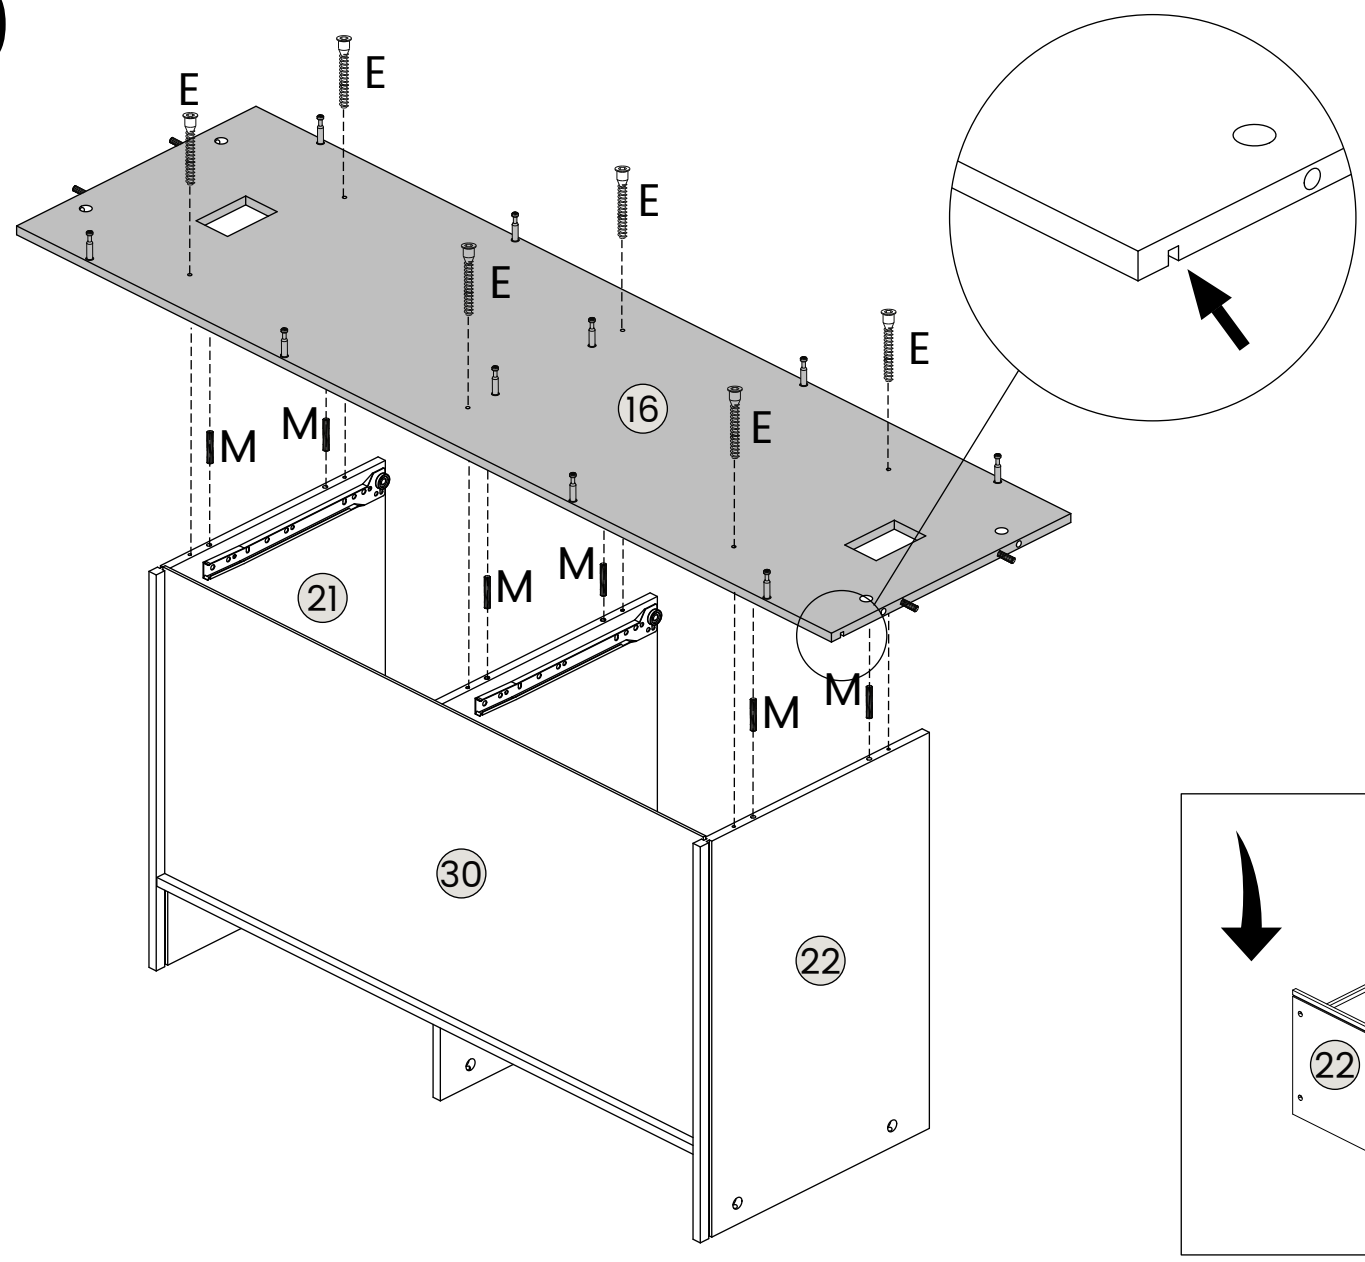

E x6




ST5X40MM

M x6




Ø6x30MM

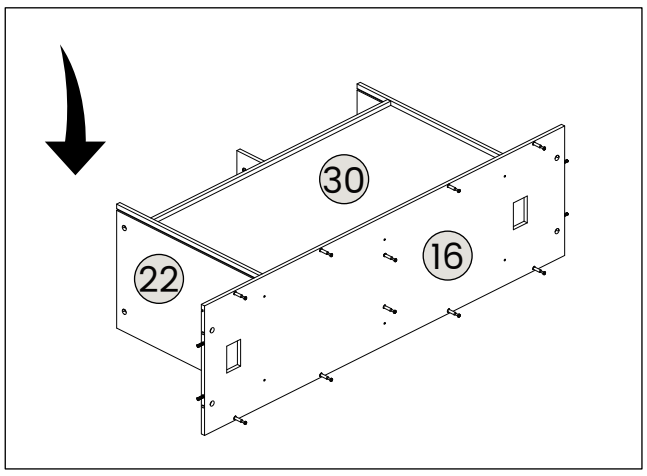


Assembly Instruction

11


O x2




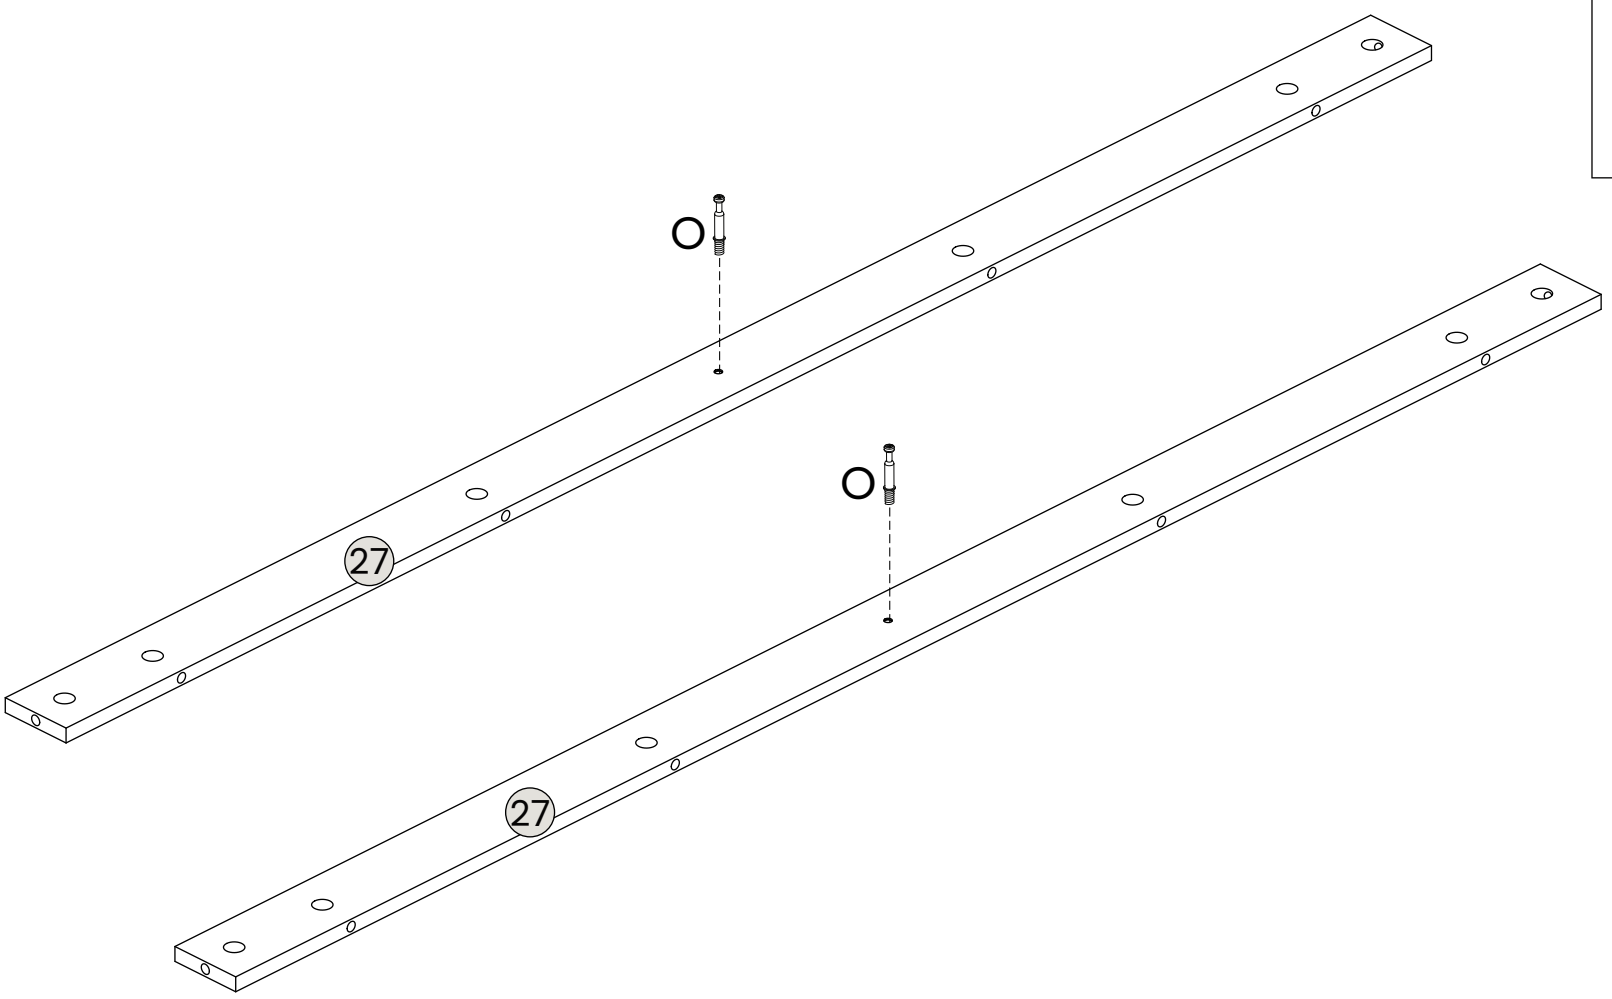

12

P x2



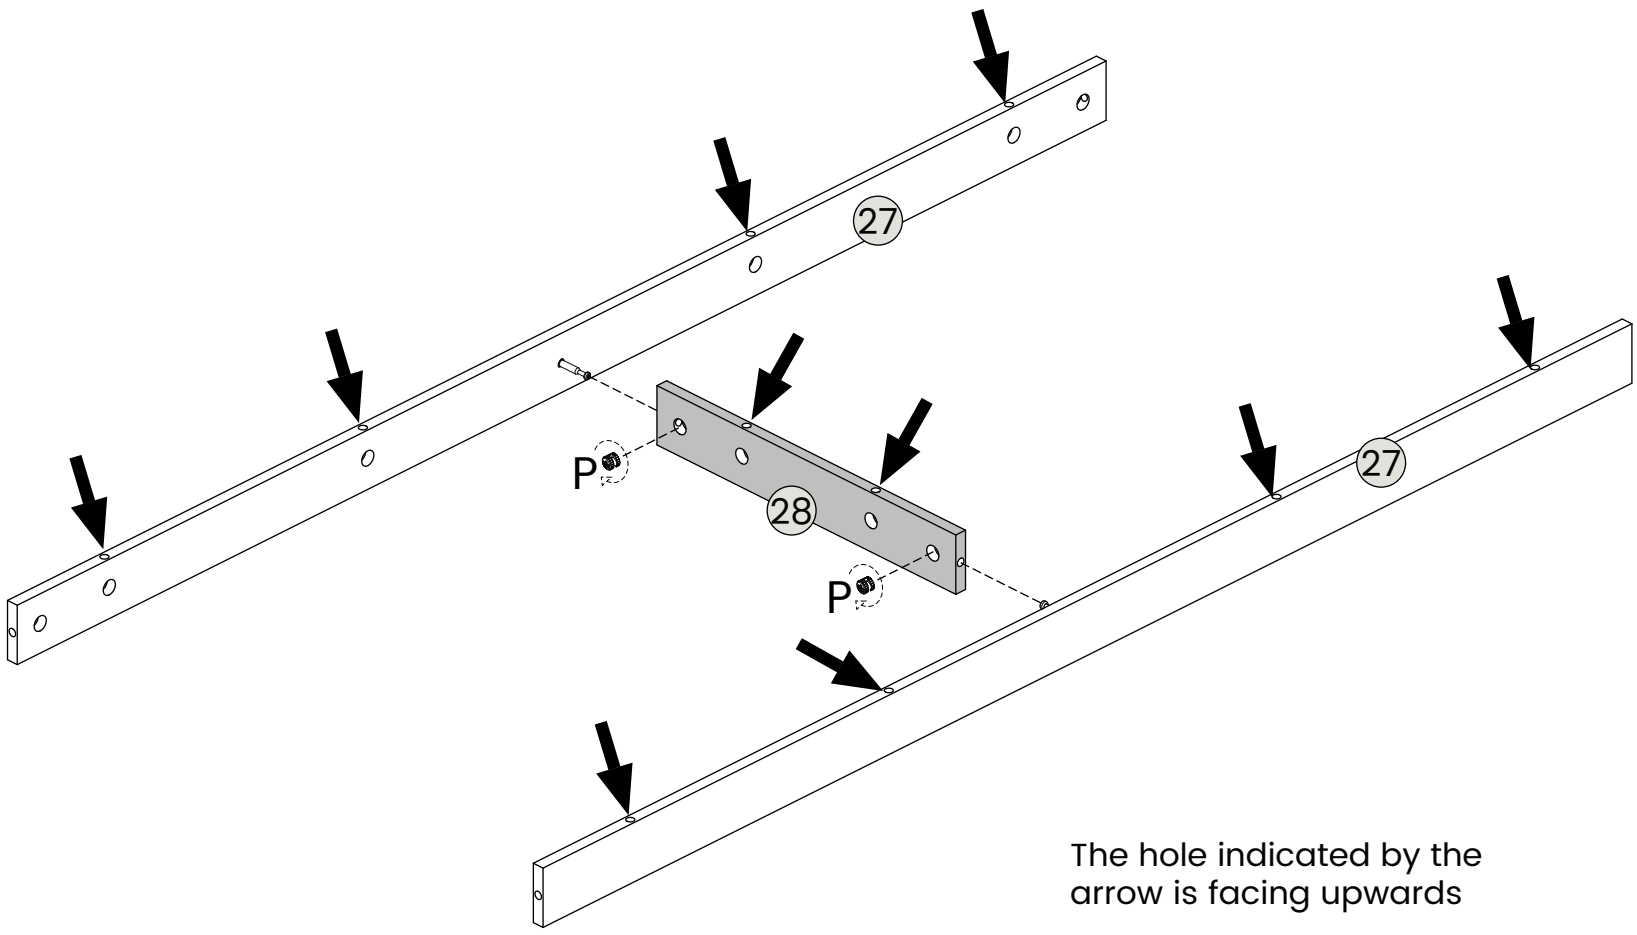



The hole indicated by the arrow is facing upwards

Assembly Instruction

13


P x10




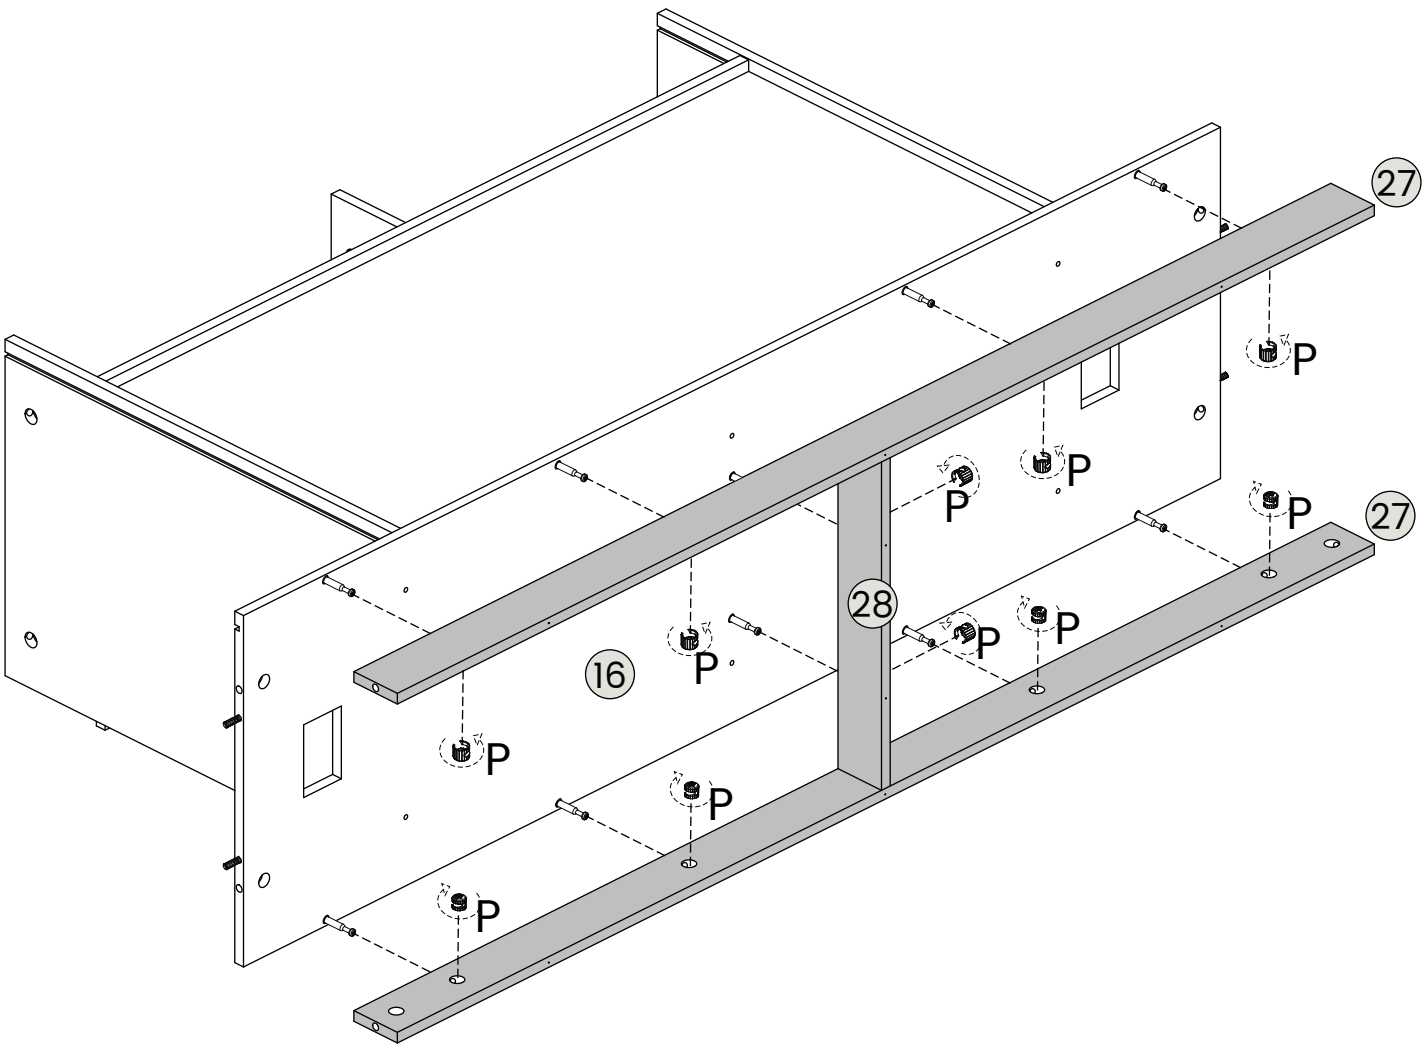

14

O x8




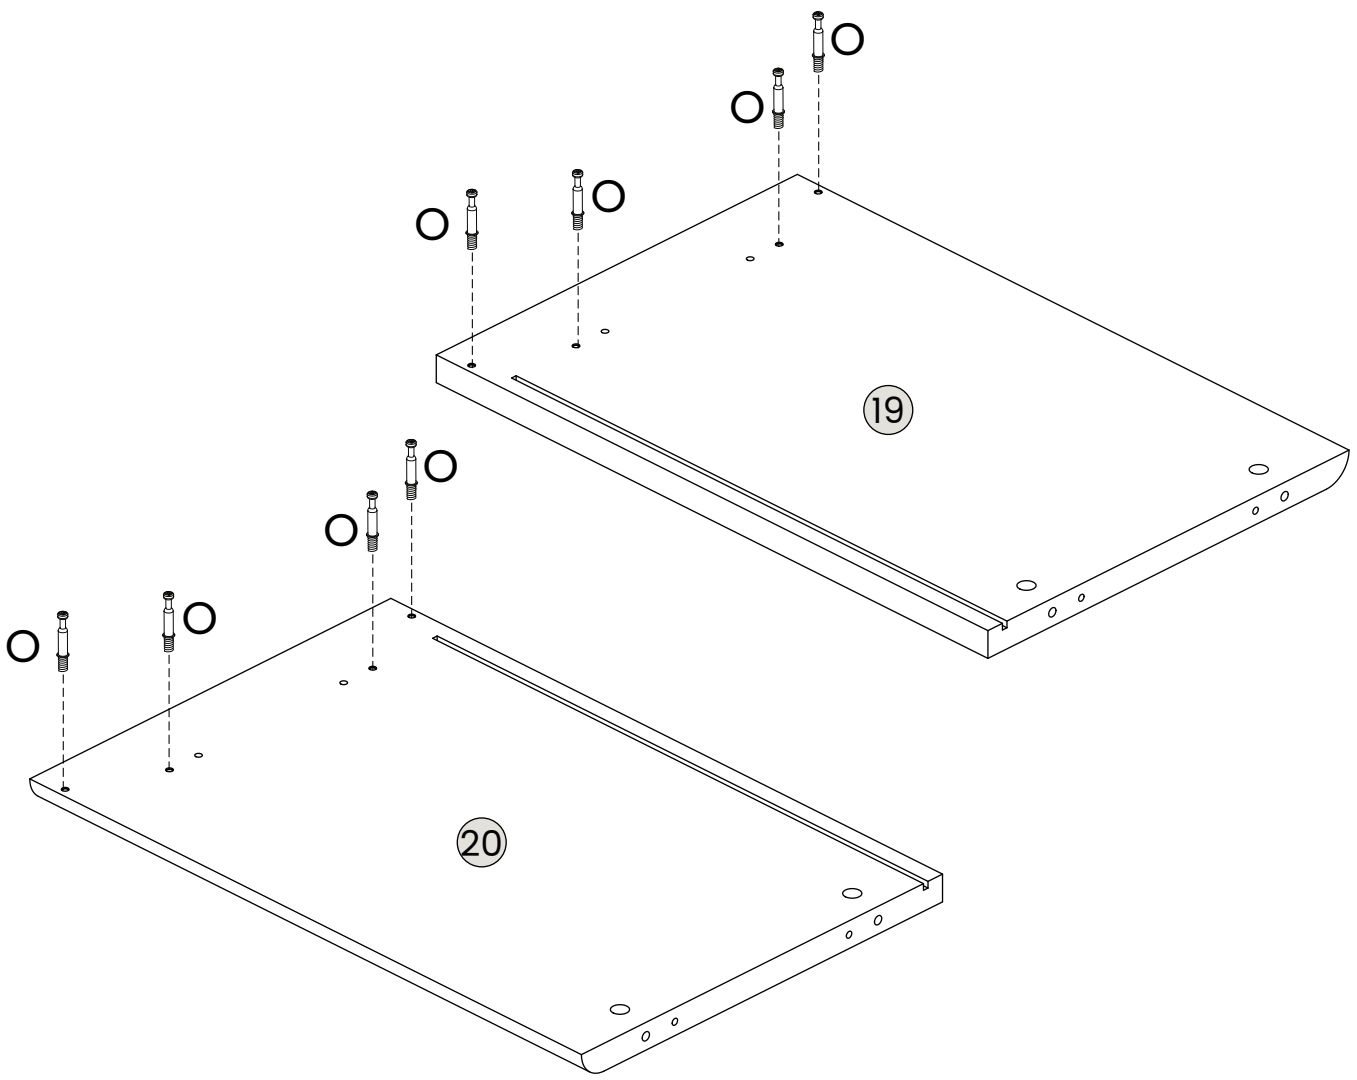


Assembly Instruction


15

P x8

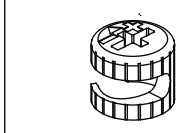


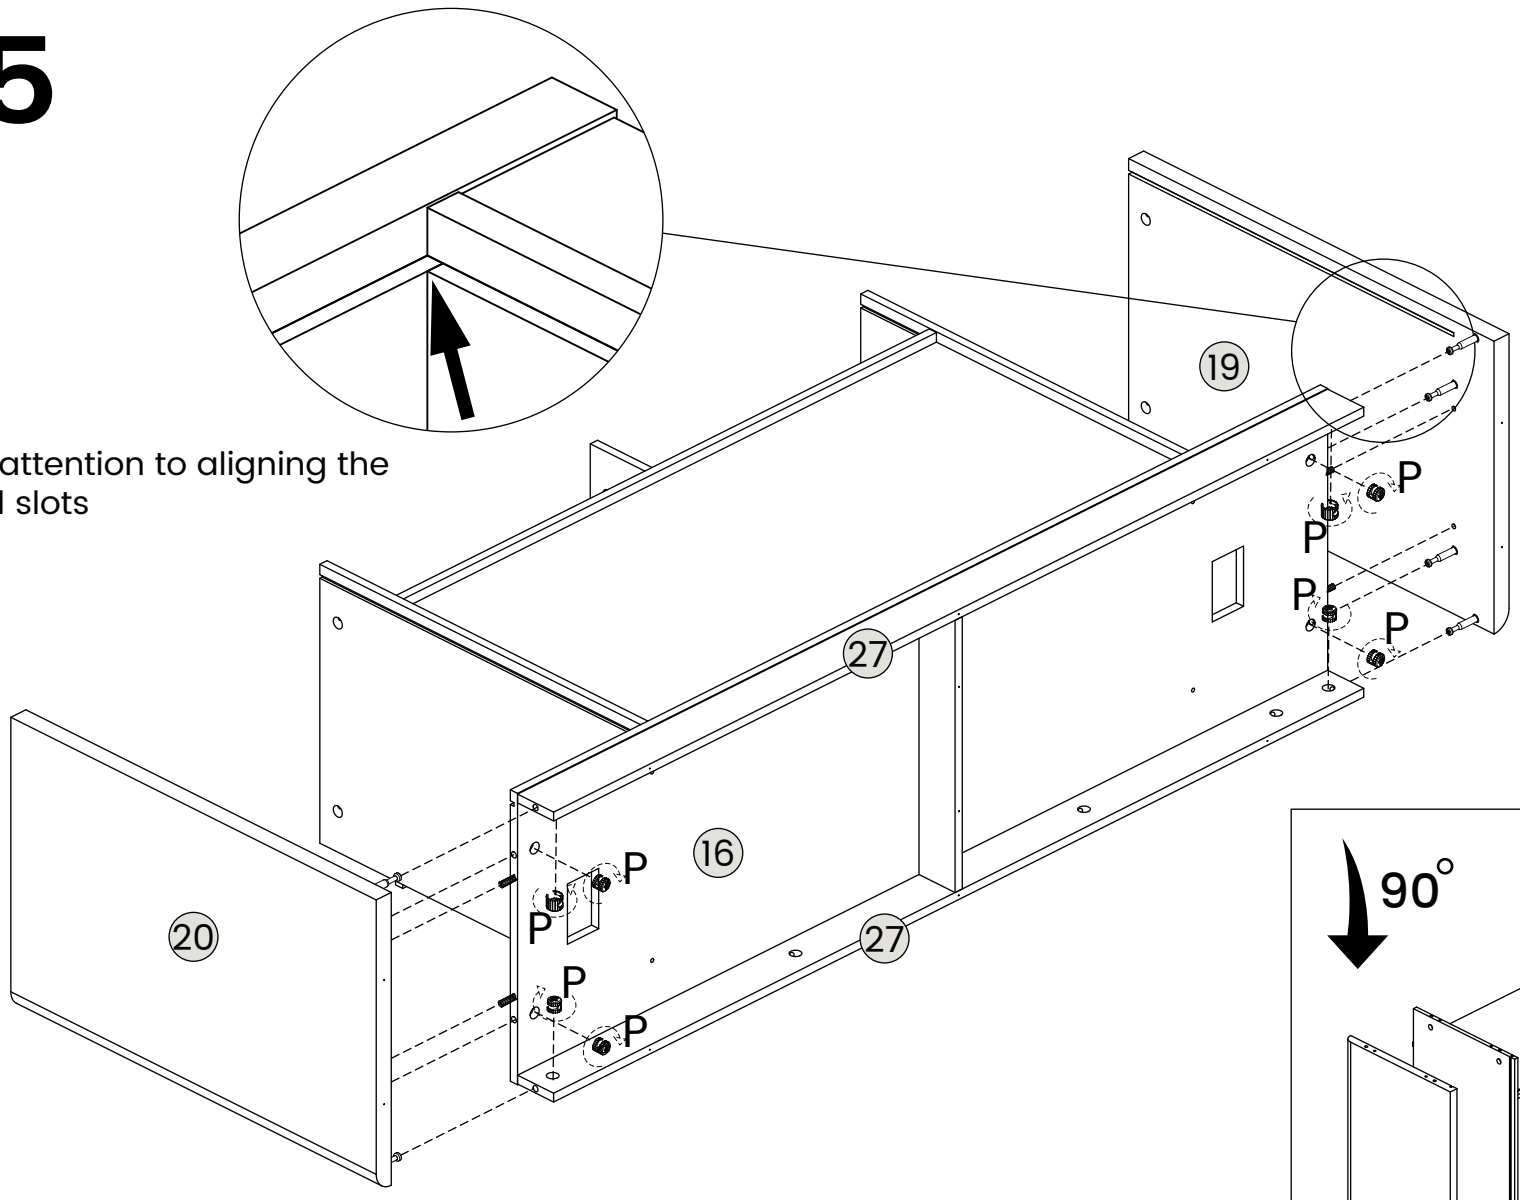

Pay attention to aligning the card slots

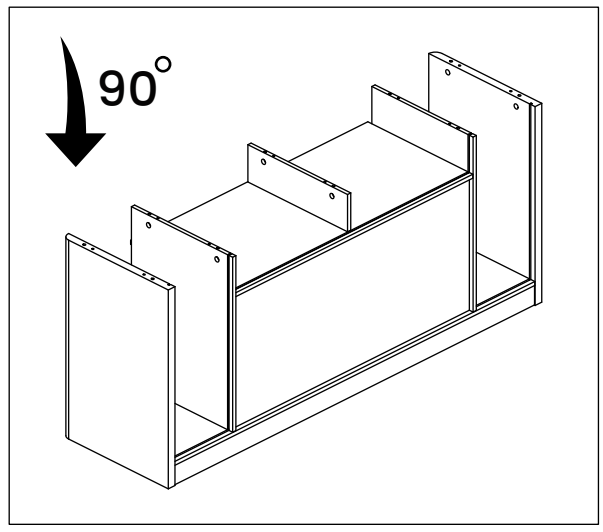


16

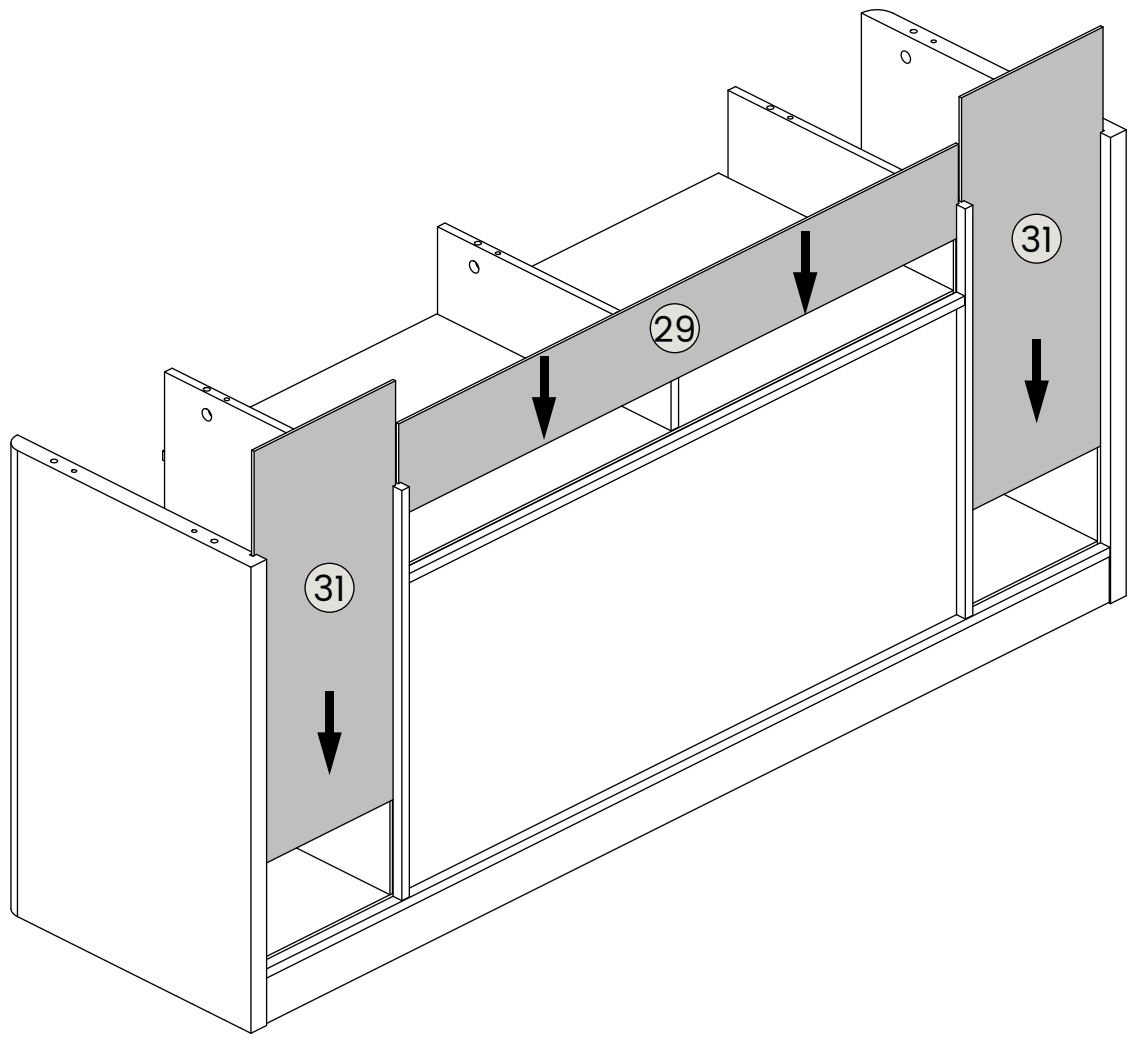


Assembly Instruction

17

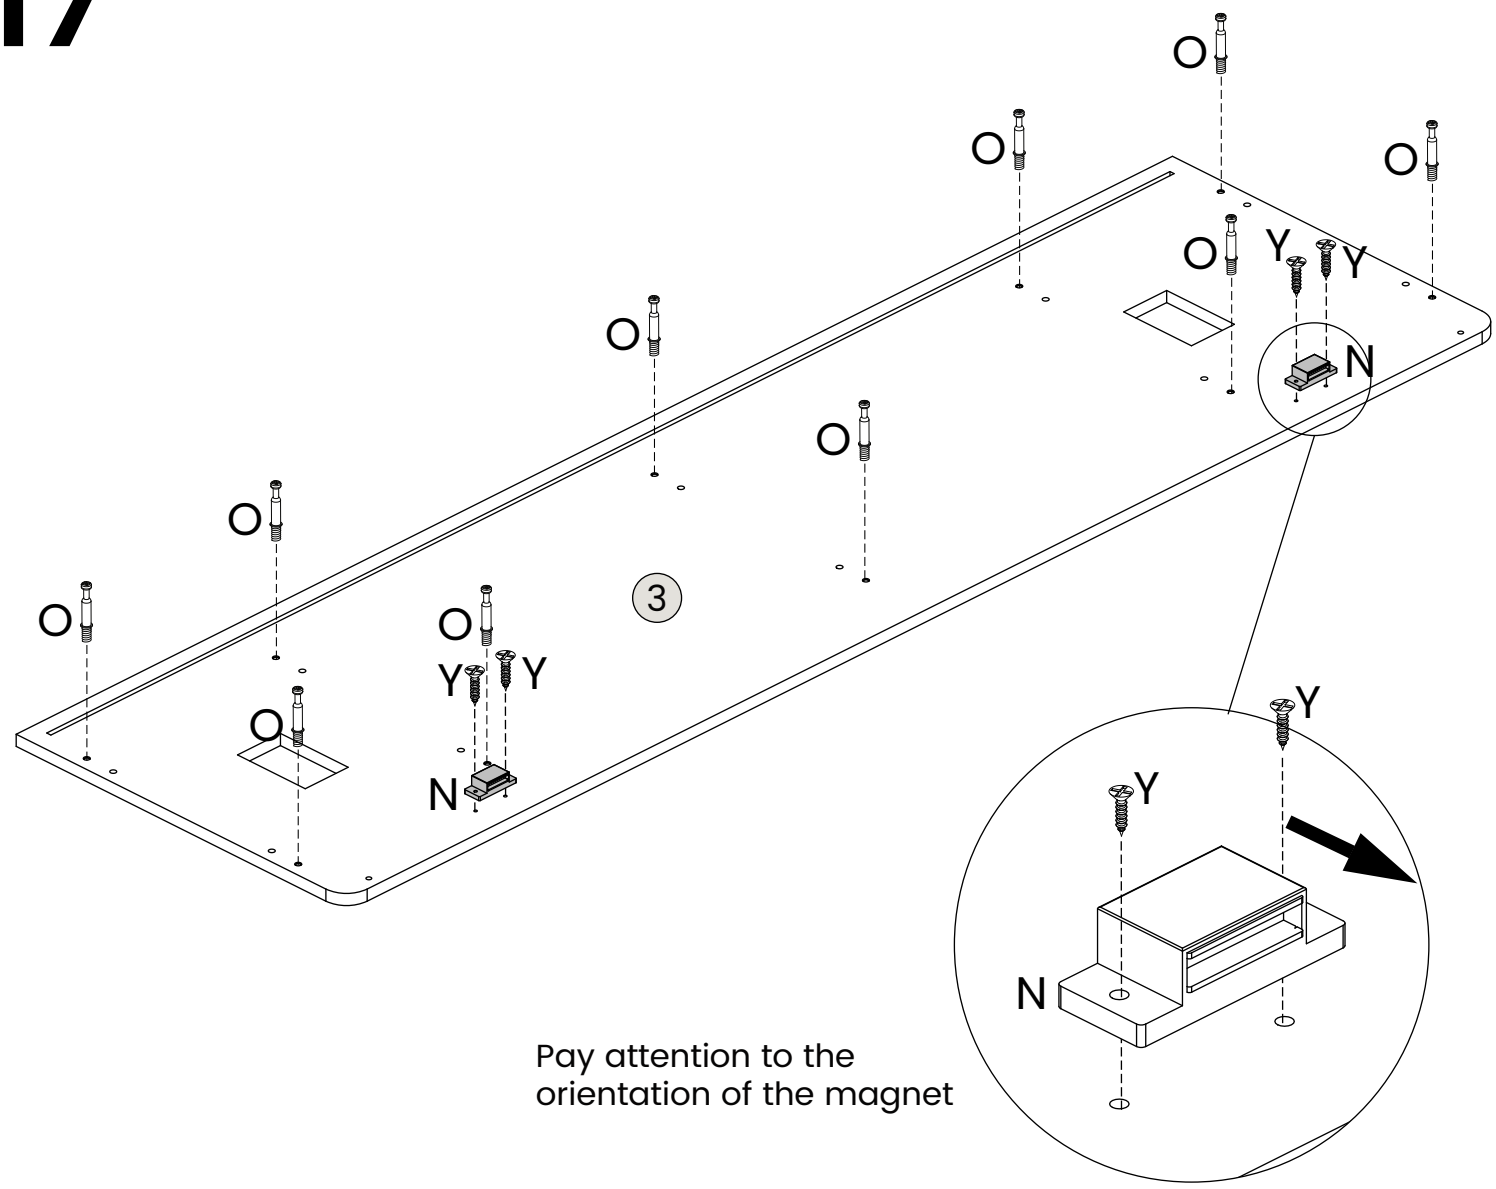

Pay attention to the
orientation of the magnet

O x10




Y x4




ST3X12MM

Nx2

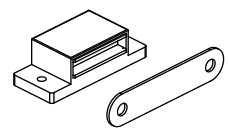


18

Pay attention to the
orientation of the arc

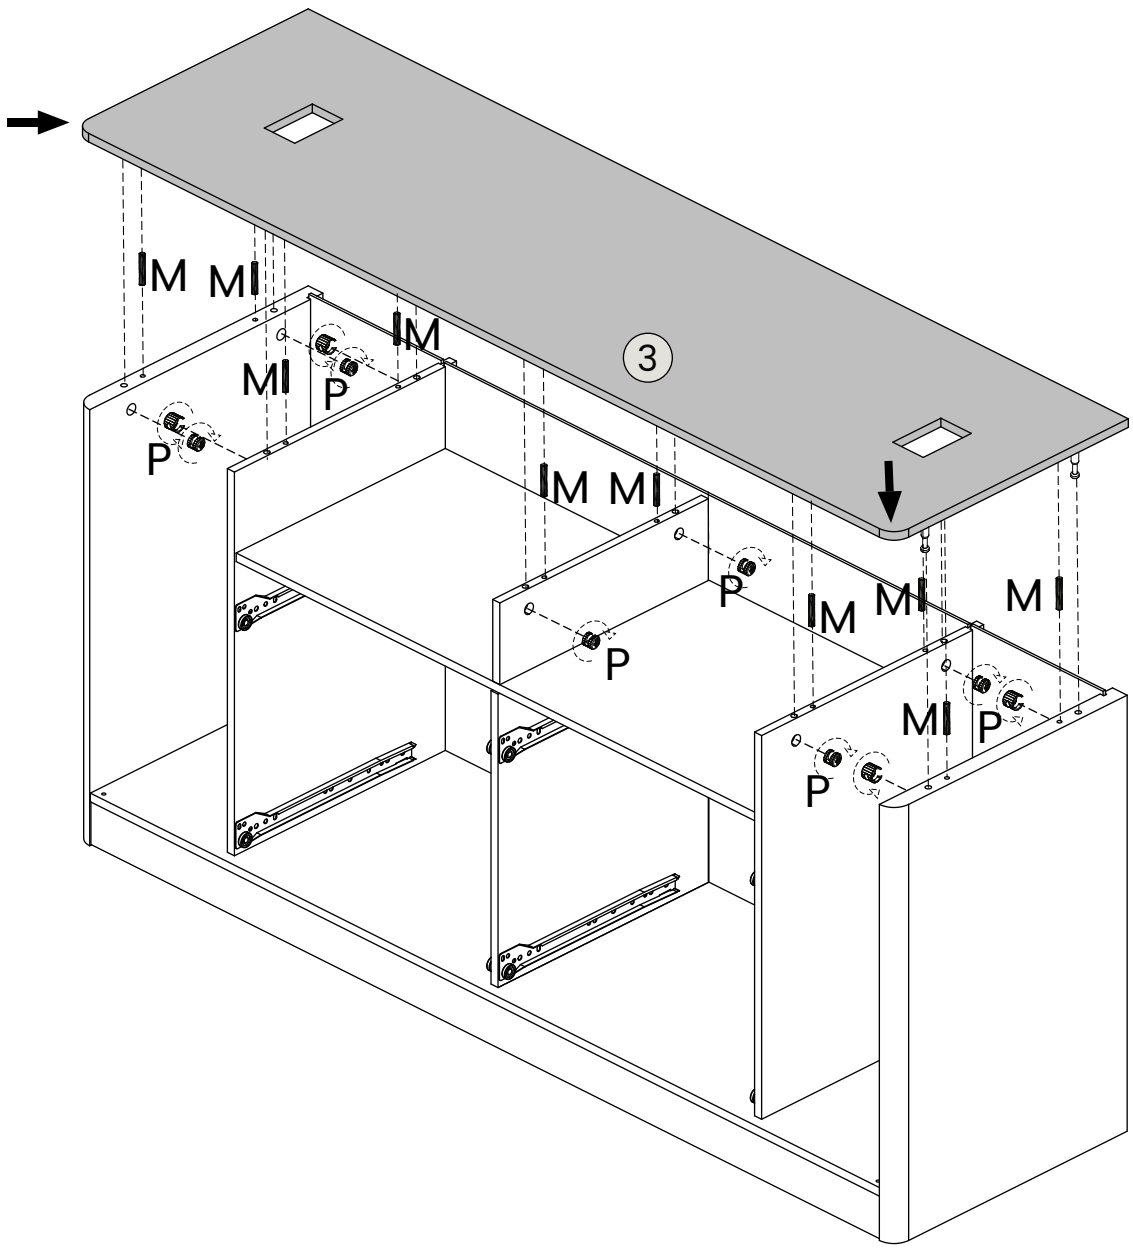


P x10



M x10




Ø6x30MM

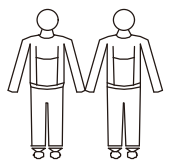

Assembly Instruction


19

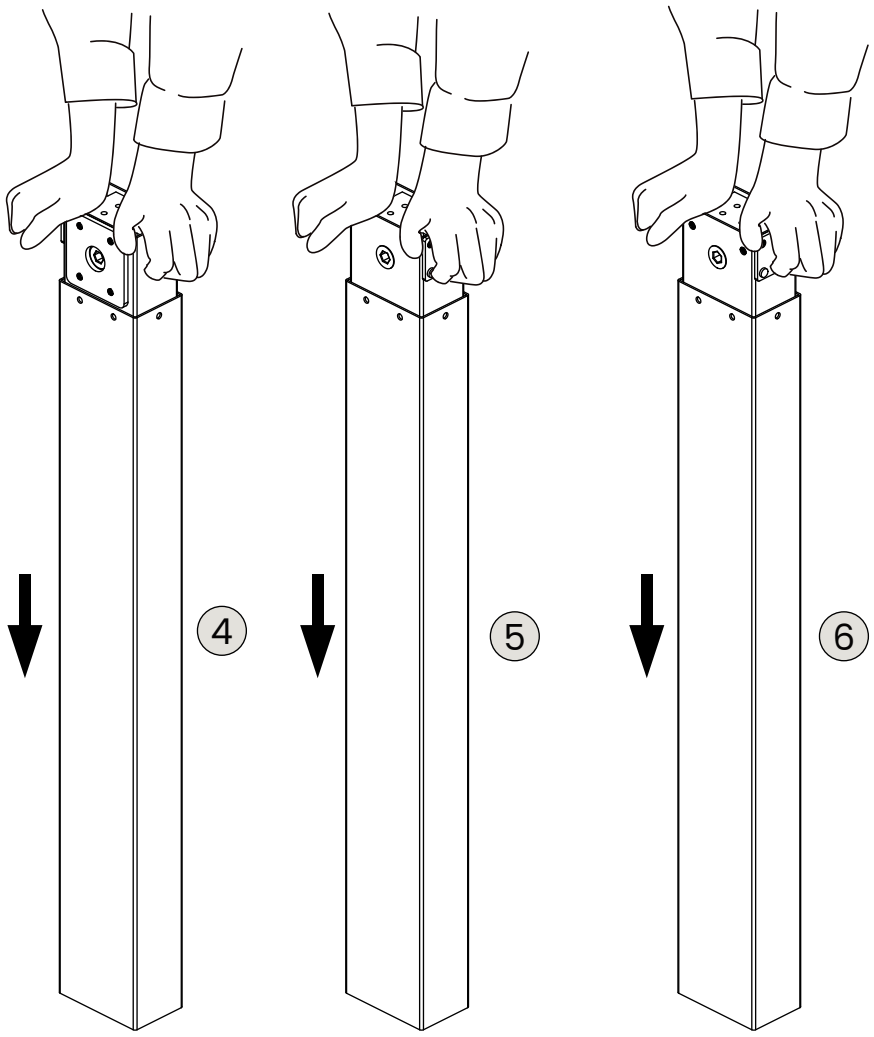

check whether the heights ofthe two table legs are the same.If there is a significant error,press down on them to ensurethat the heights of the two legsare consistent.

20


Pay attention to the direction of the telescopic feet

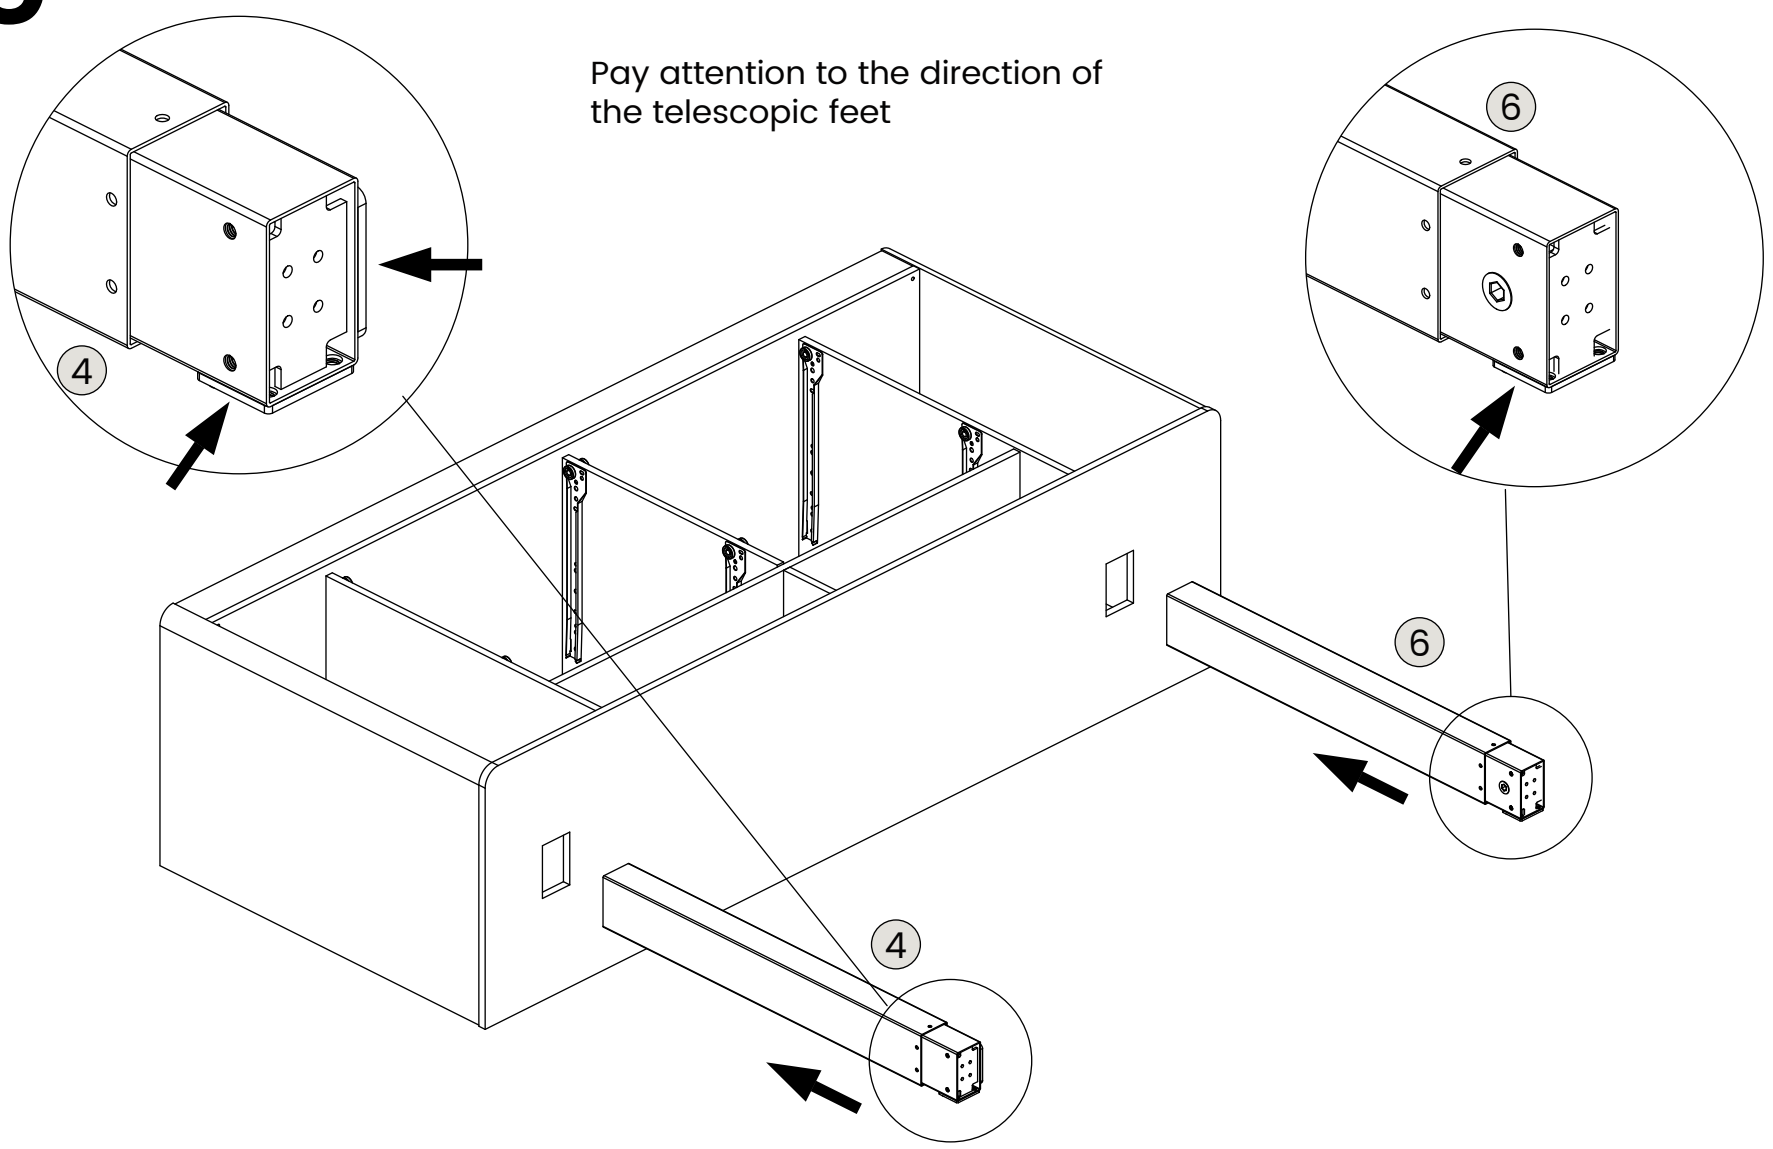


Assembly Instruction

21

U x8




H x8



M6X40MM

T x8



φ20MM


Pay attention to the orientation
of the hole indicated by the arrow


22


Z x12



A x4




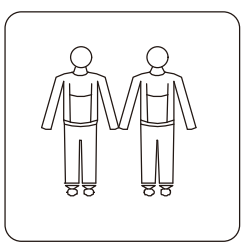

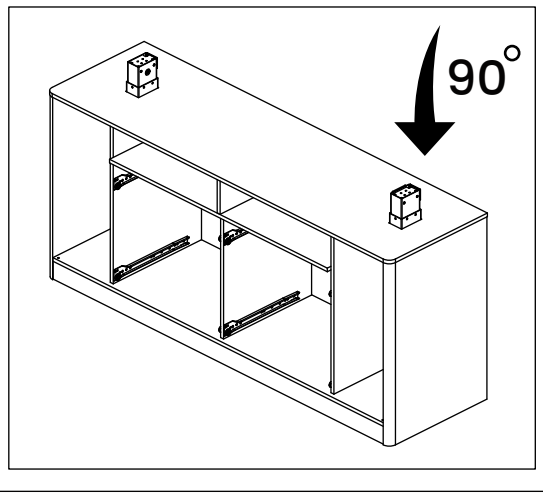


Assembly Instruction

23

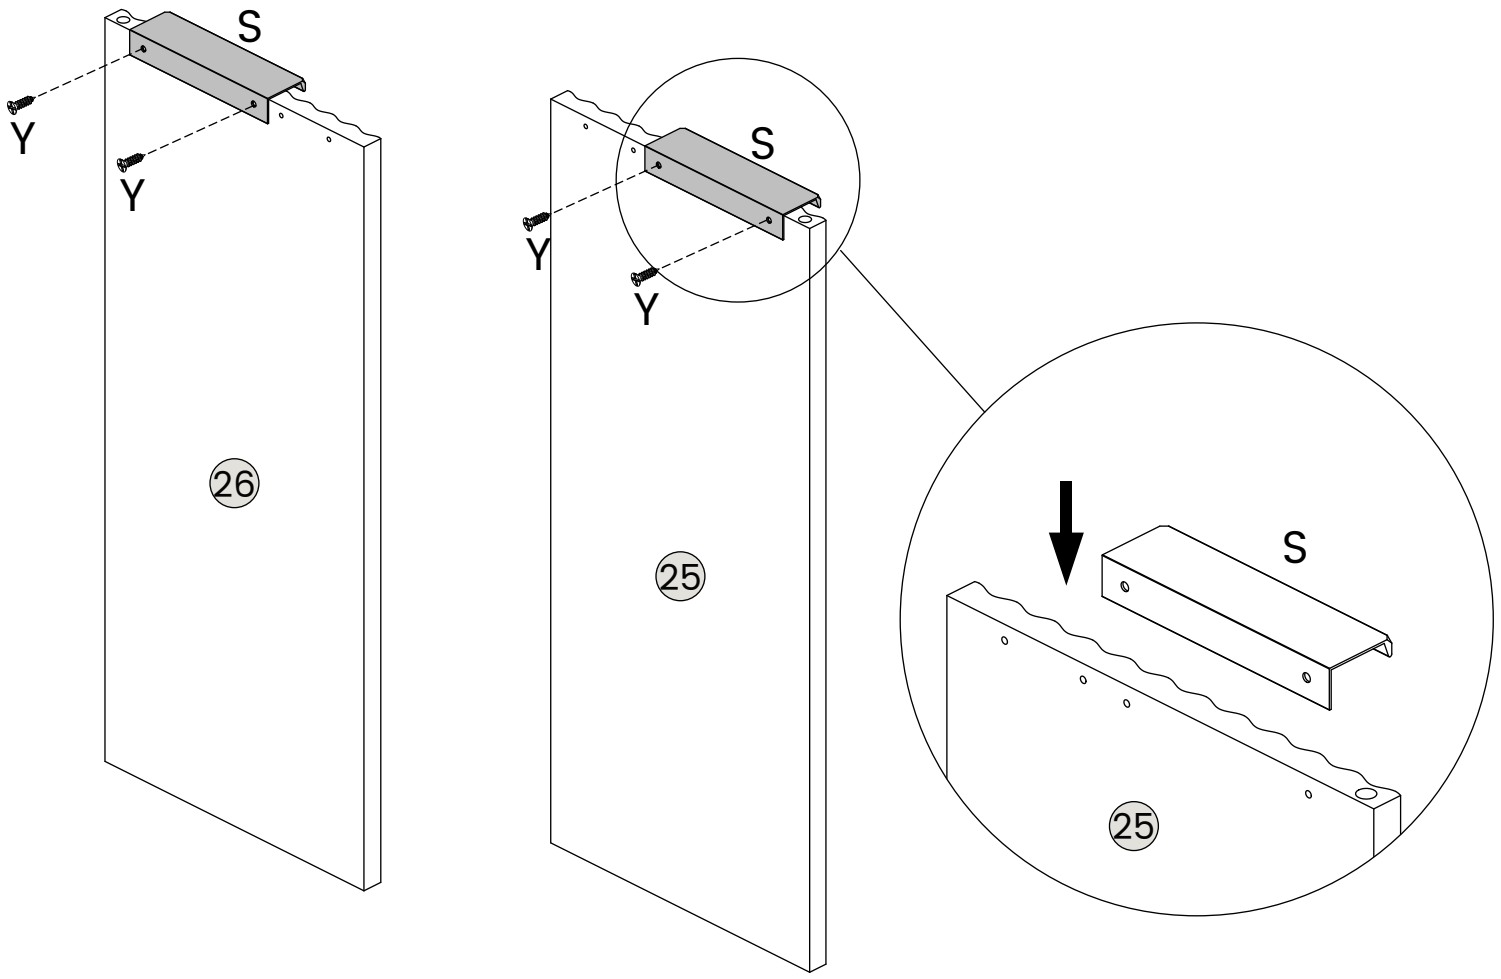


Y x4




ST3X12MM


S x2

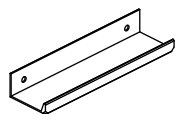

24

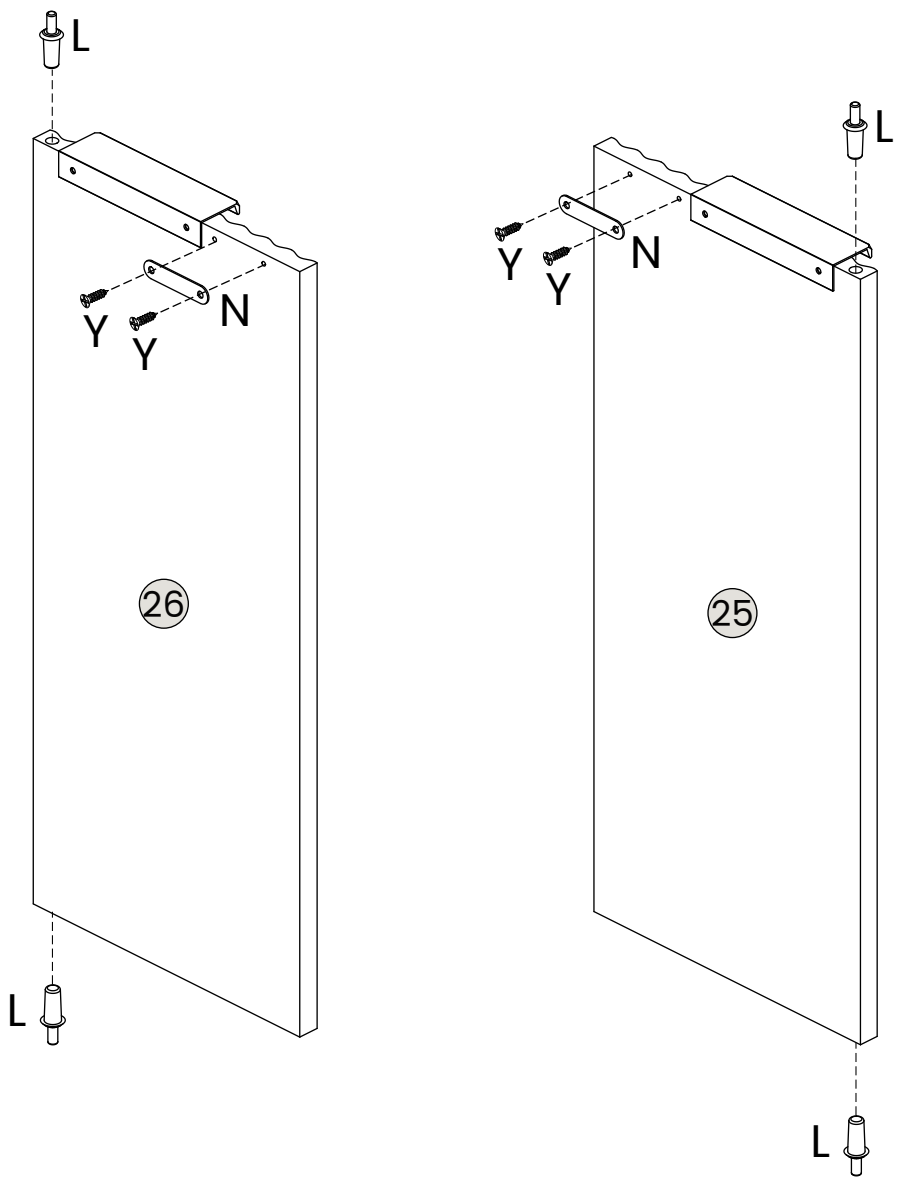


Y x4




ST3X12MM

L x4





Nx2

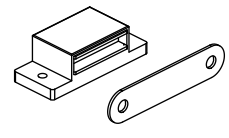

Assembly Instruction

25

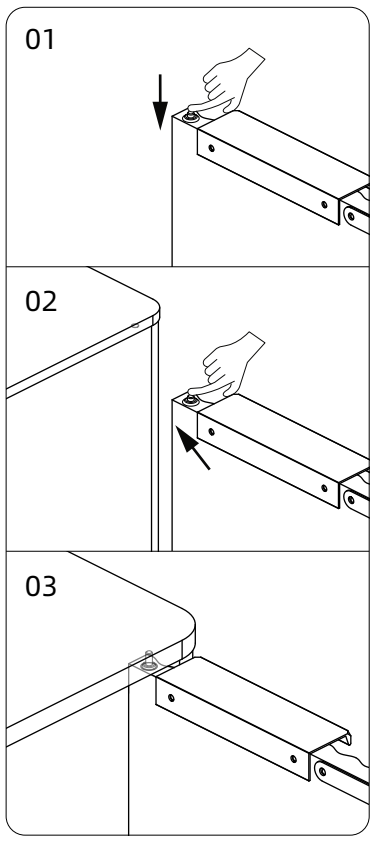


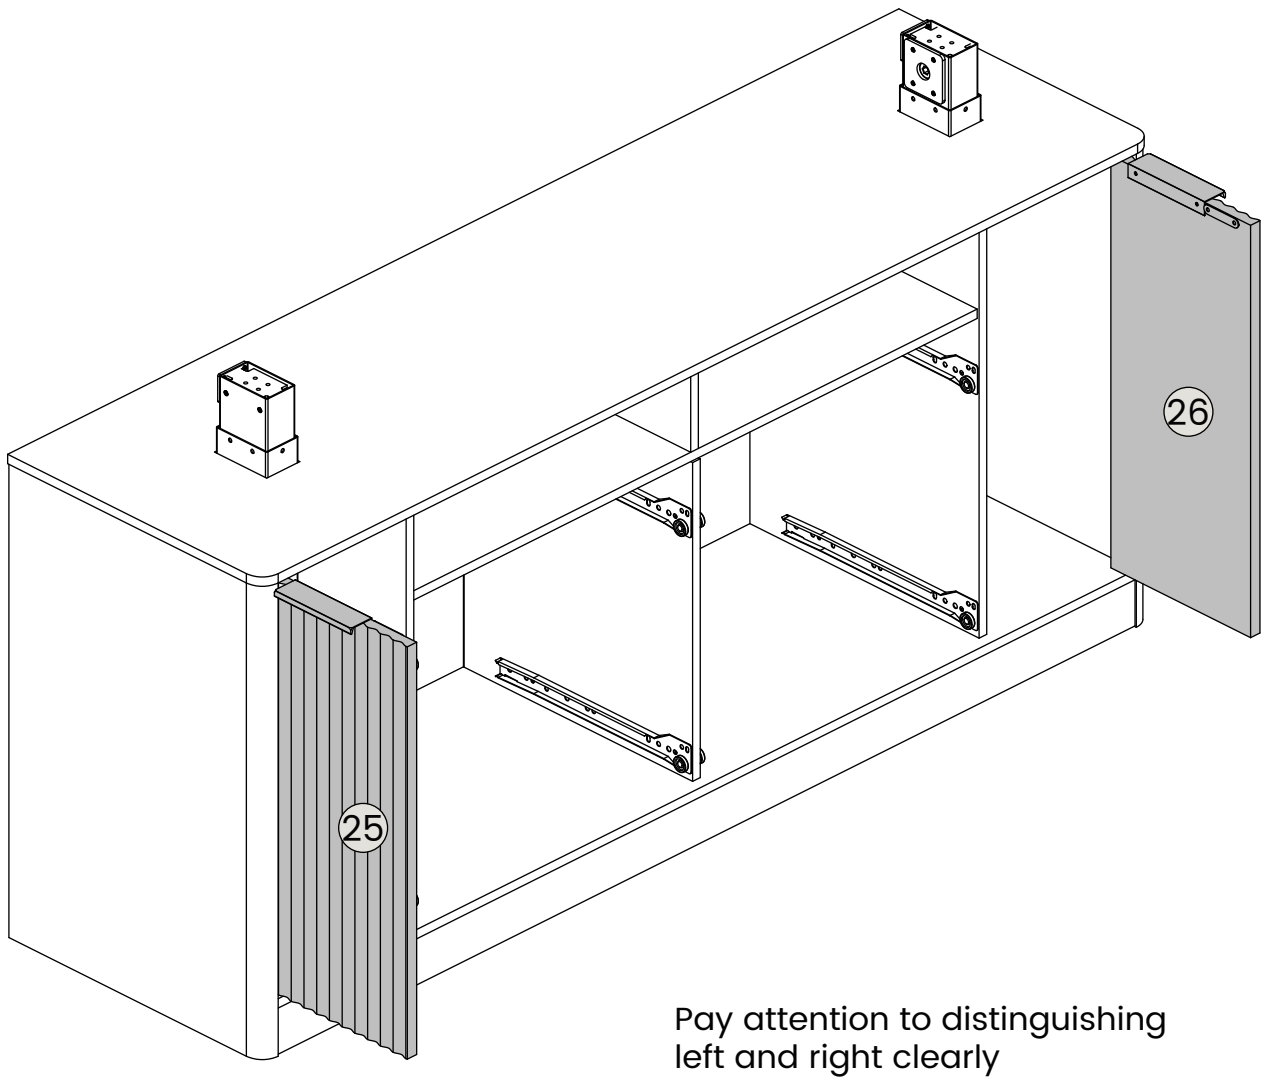

Pay attention to distinguishing
left and right clearly

26


Cx4




M6X10MM

Pay attention to the features
indicated by the arrow


27

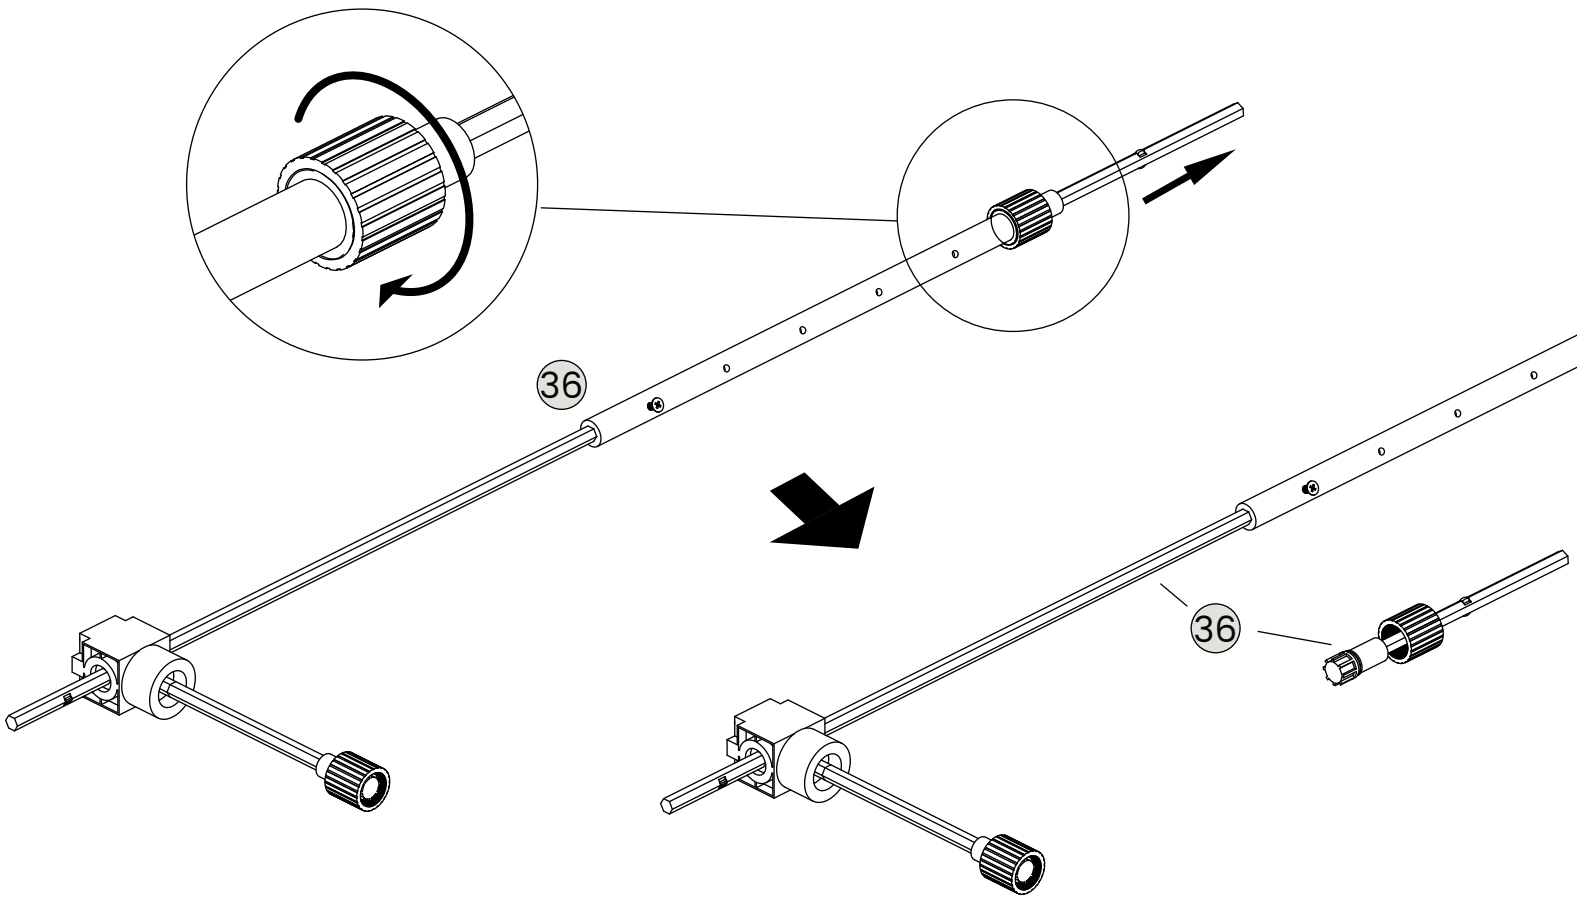

28

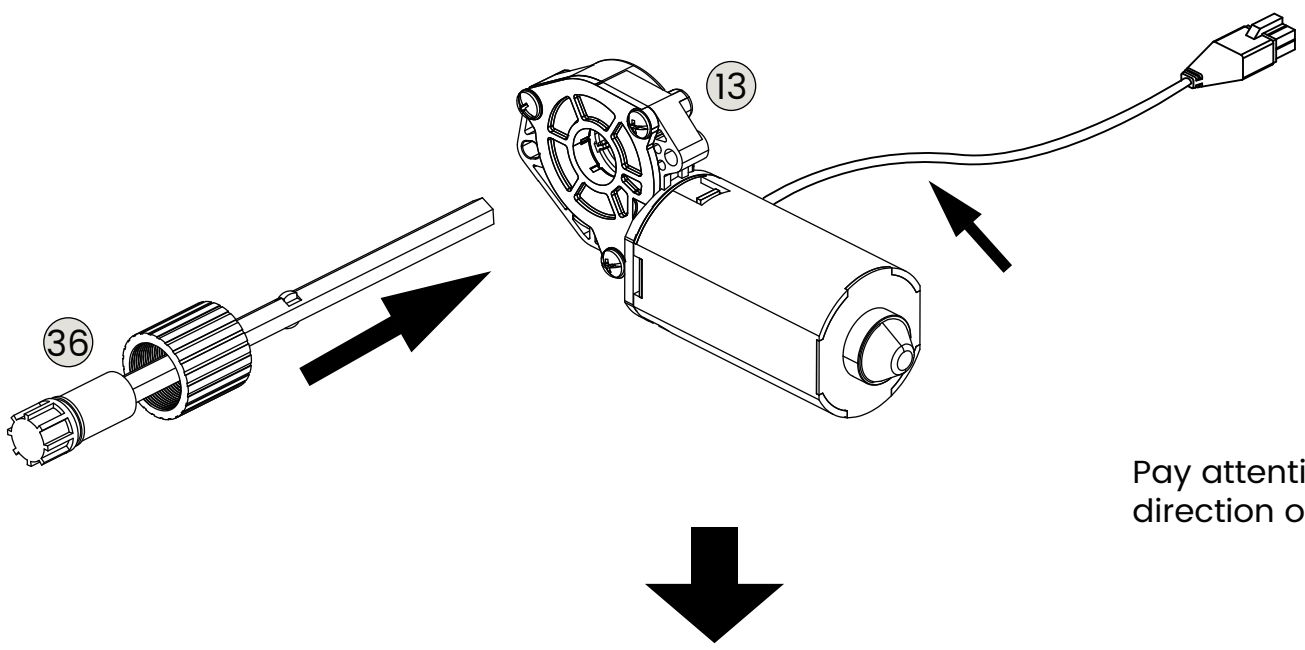


Pay attention to the direction of the motor

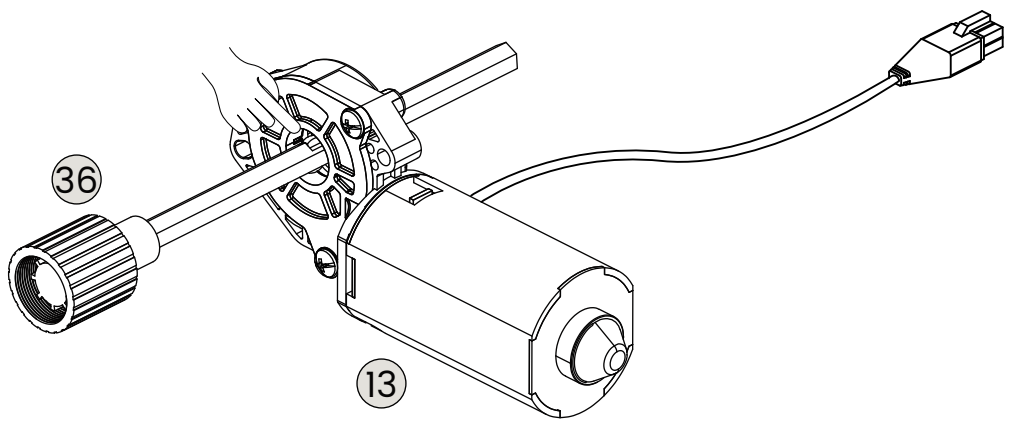


Assembly Instruction

29


I x2




ST4X25MM

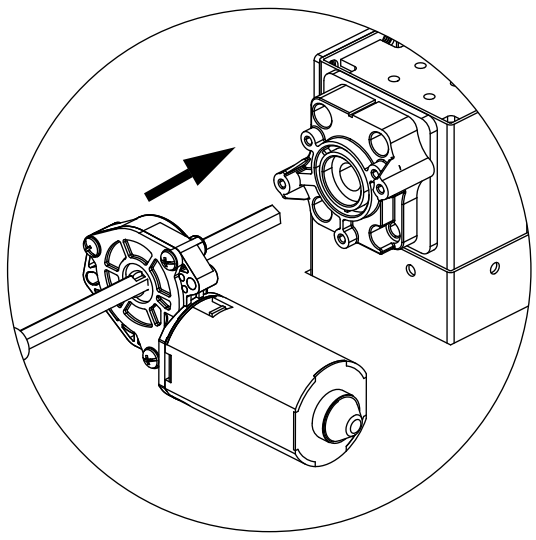

Firstly, determine the direction of the motor

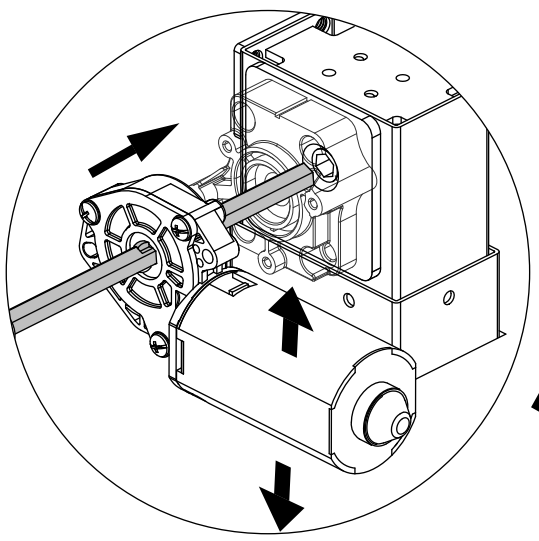


Secondly, rotate the motor slightly until the hexagonal rod can be inserted

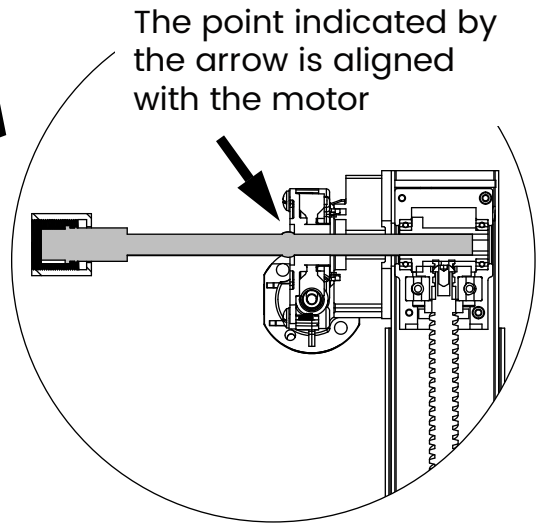


The point indicated by the arrow is aligned with the motor

Thirdly, ensure that the hexagonal rod is fully inserted into the lifting device of accessory 4

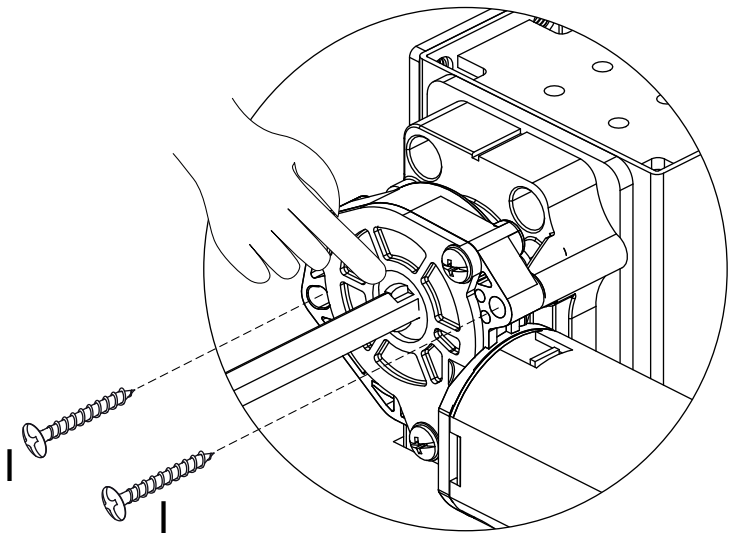

Fourth, tighten screw I to secure the motor

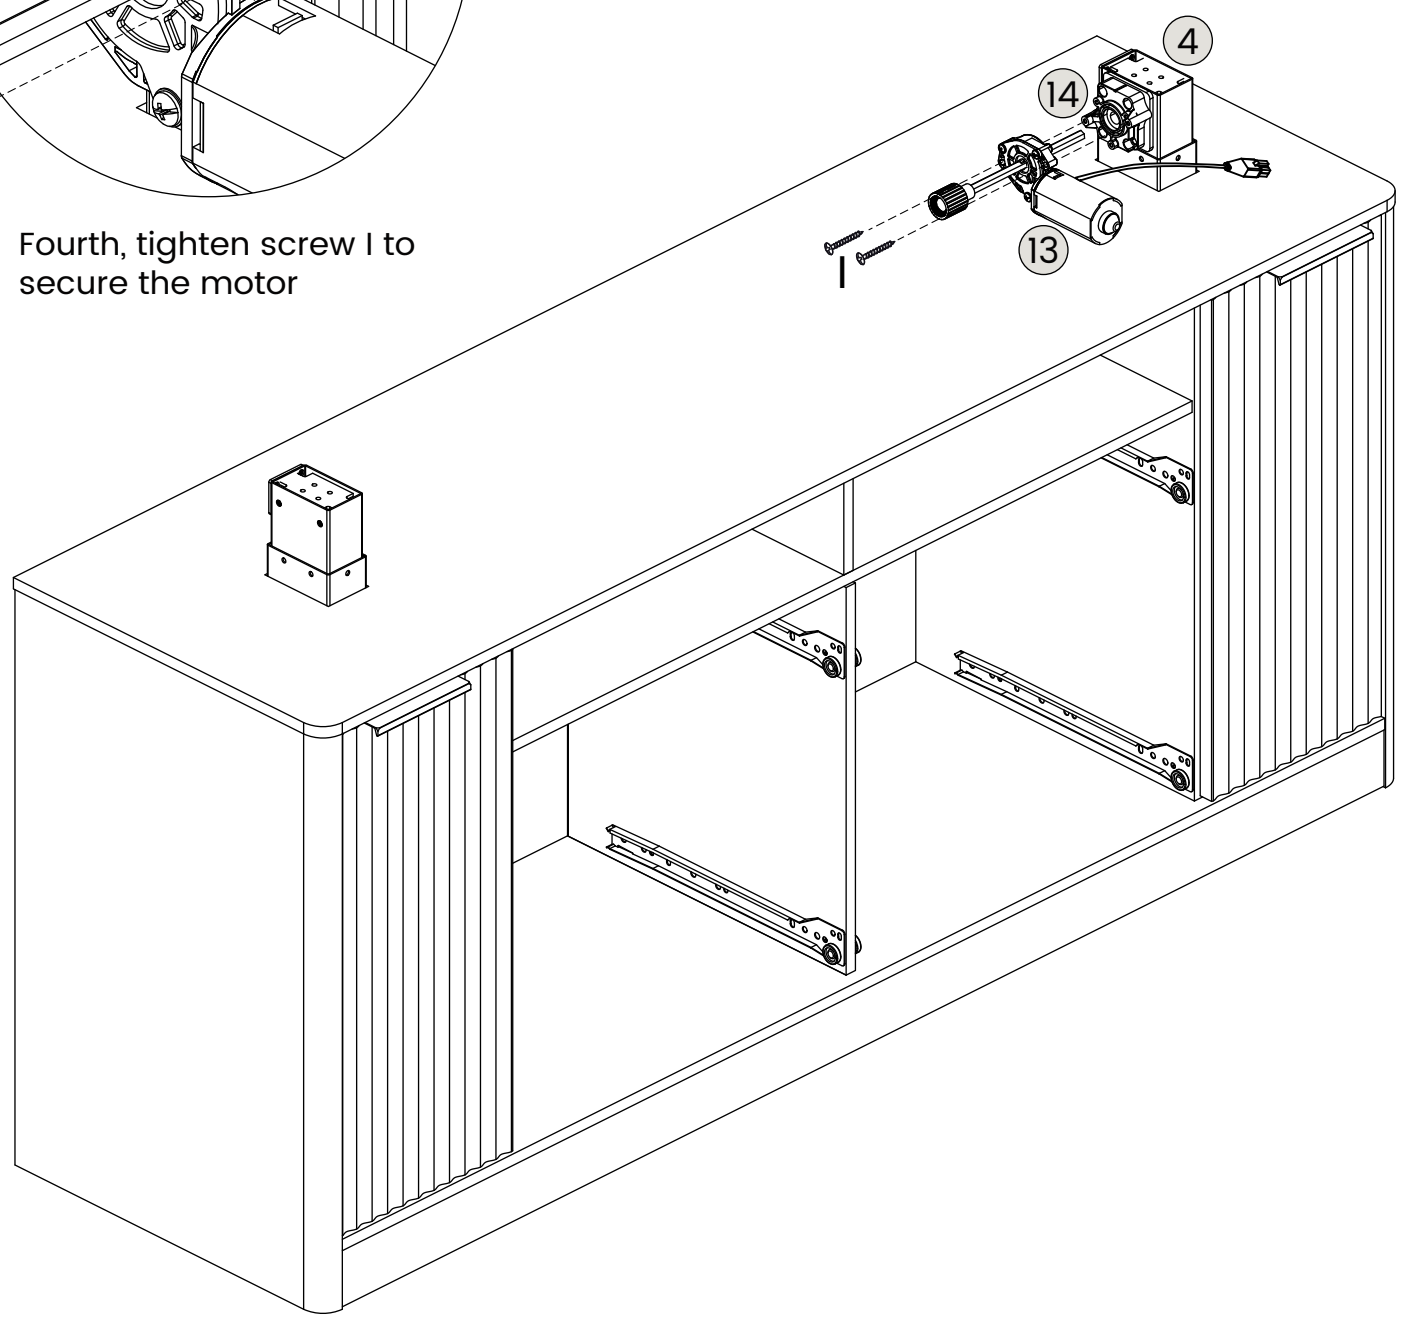


Assembly Instruction

30

M x4



Ø6x30MM

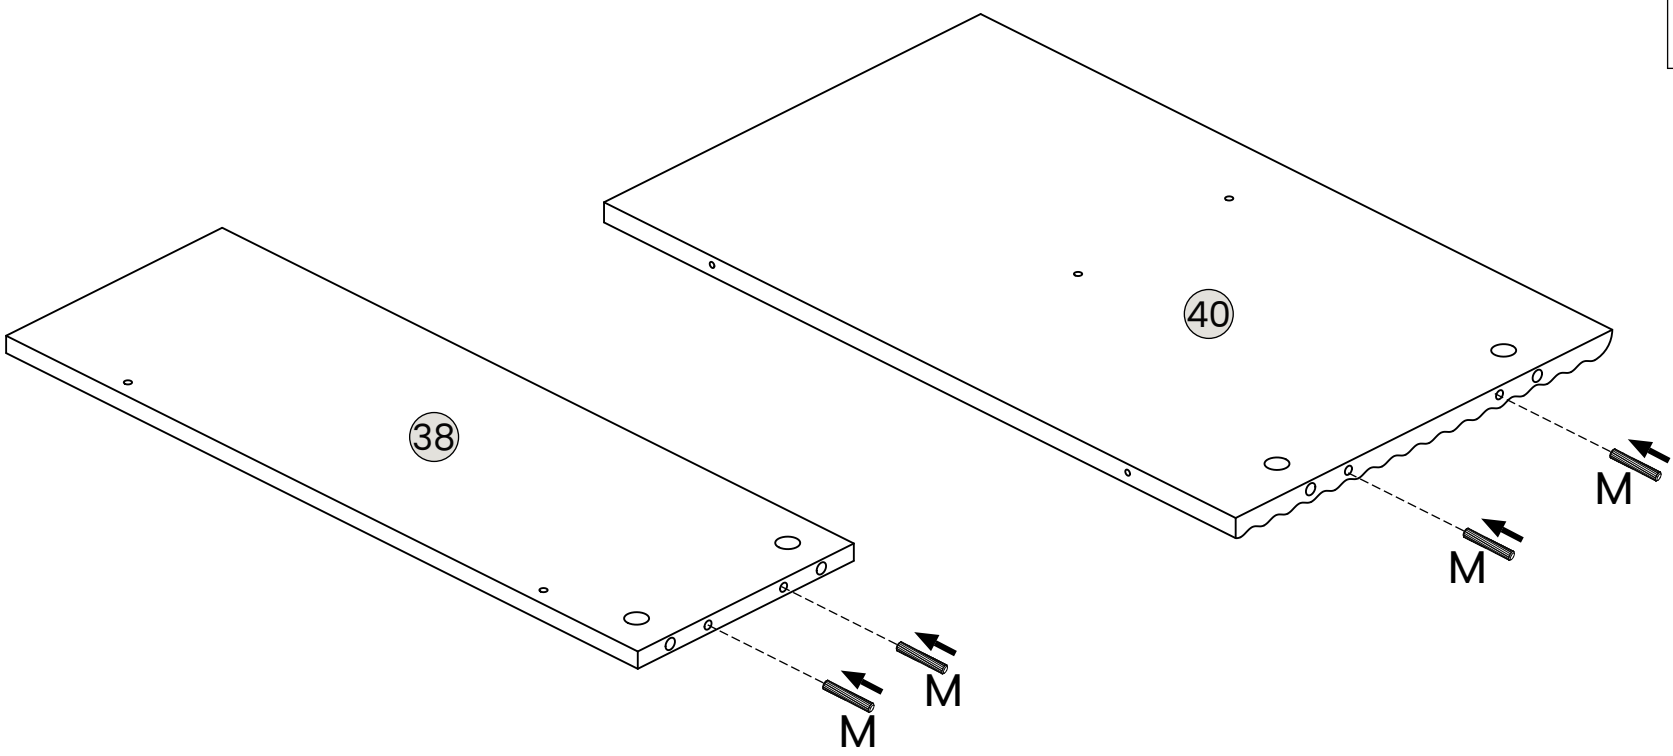


31


M x4



Ø6x30MM


O x3




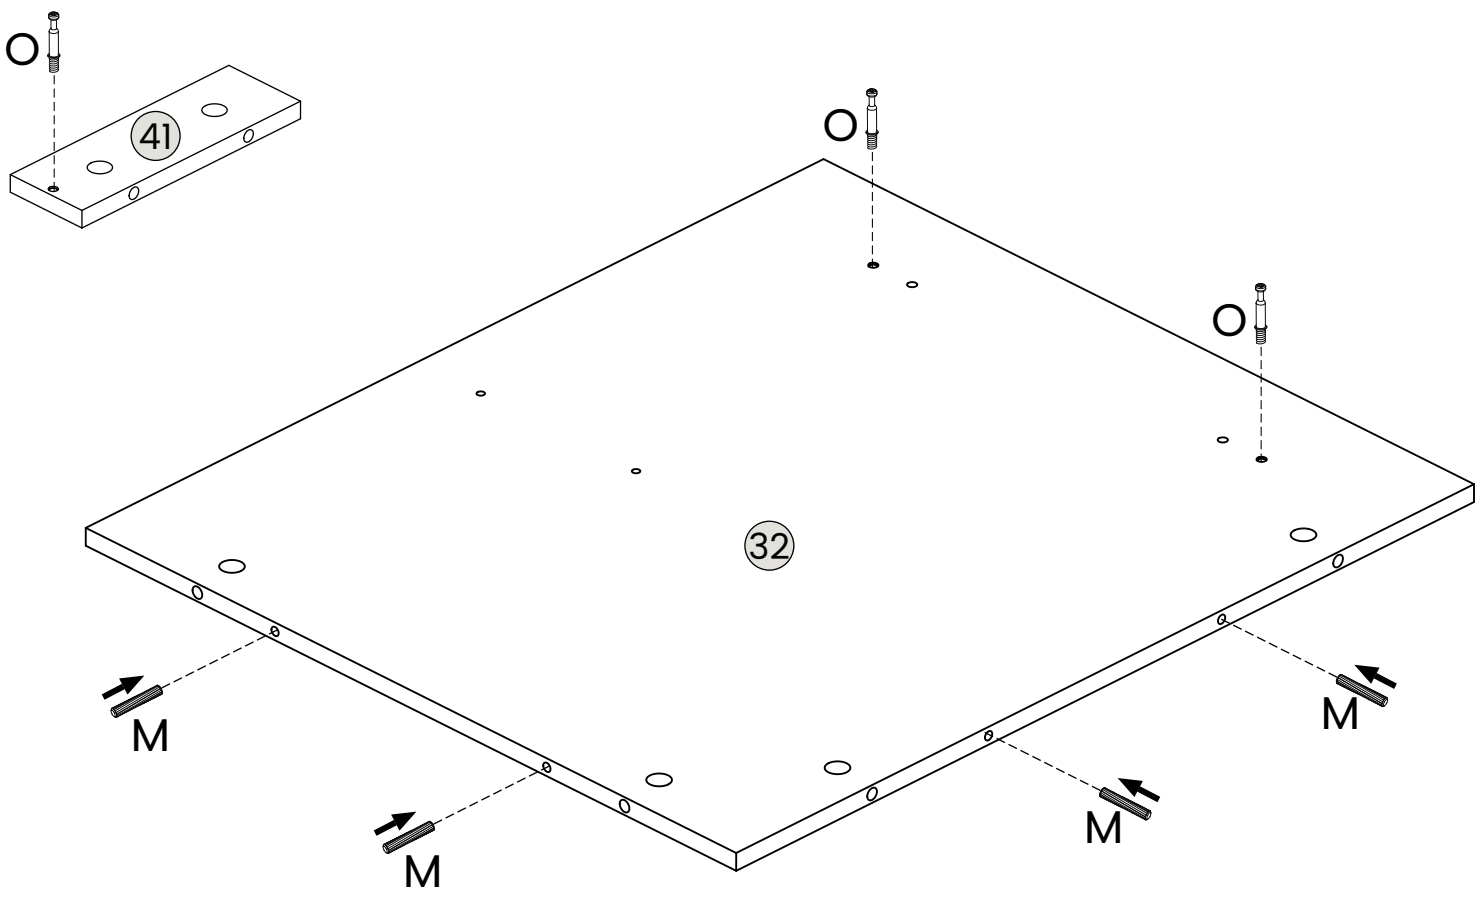


Assembly Instruction

32

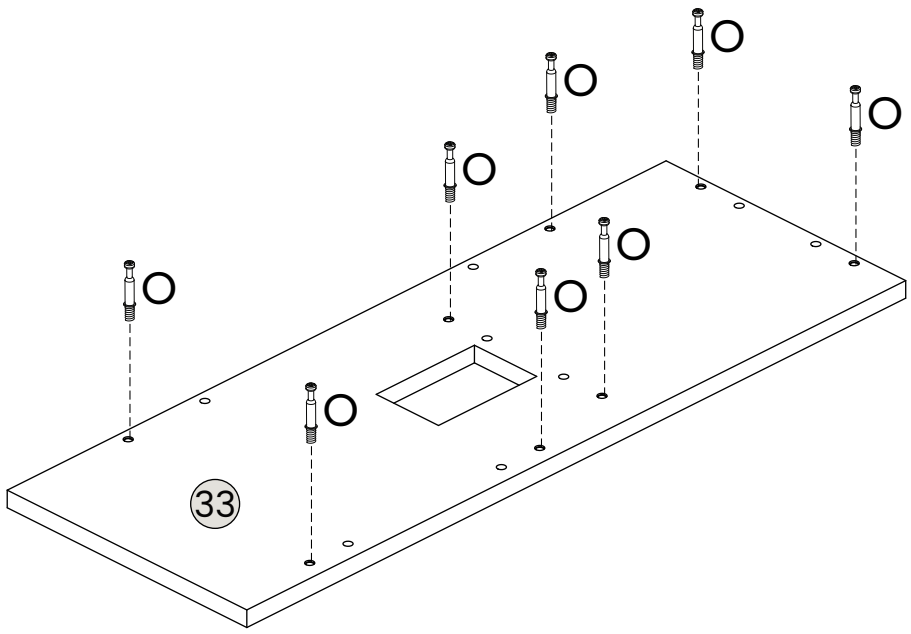

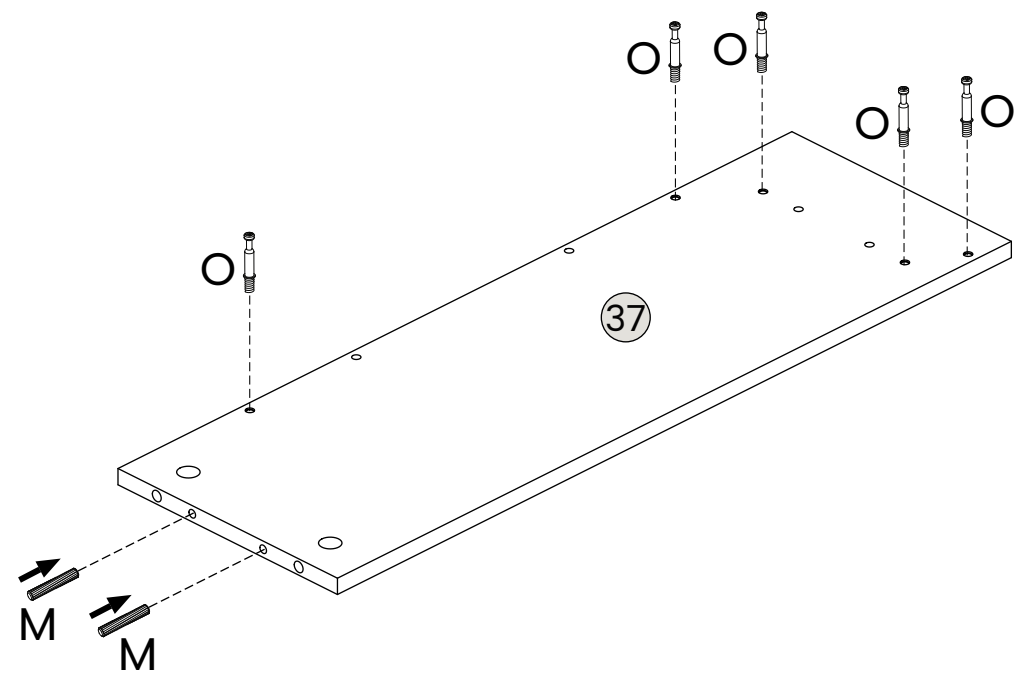

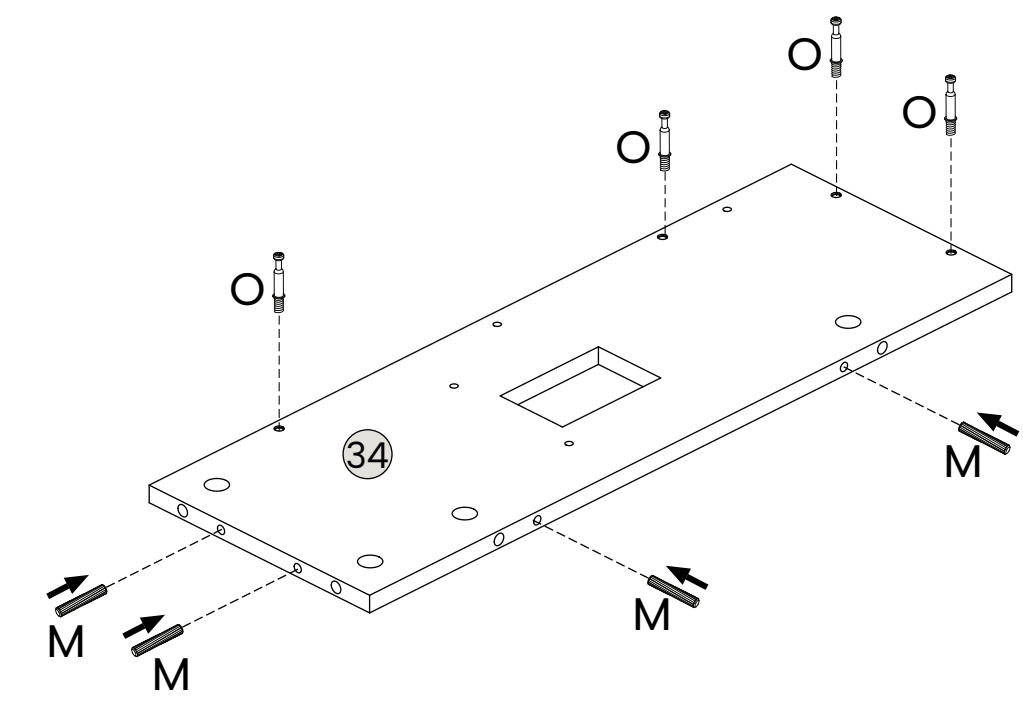

M x6



Ø6x30MM


O x17




Assembly Instruction

33

E x2




ST5X40MM

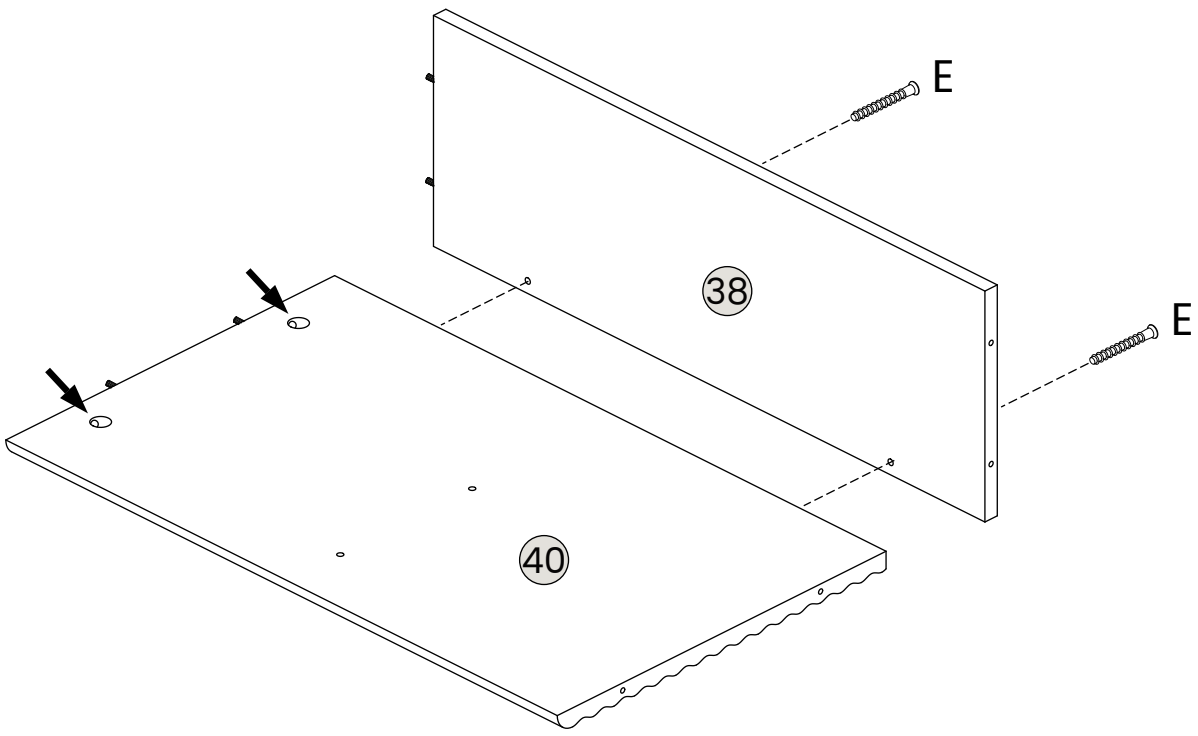


34

E x4





ST5X40MM

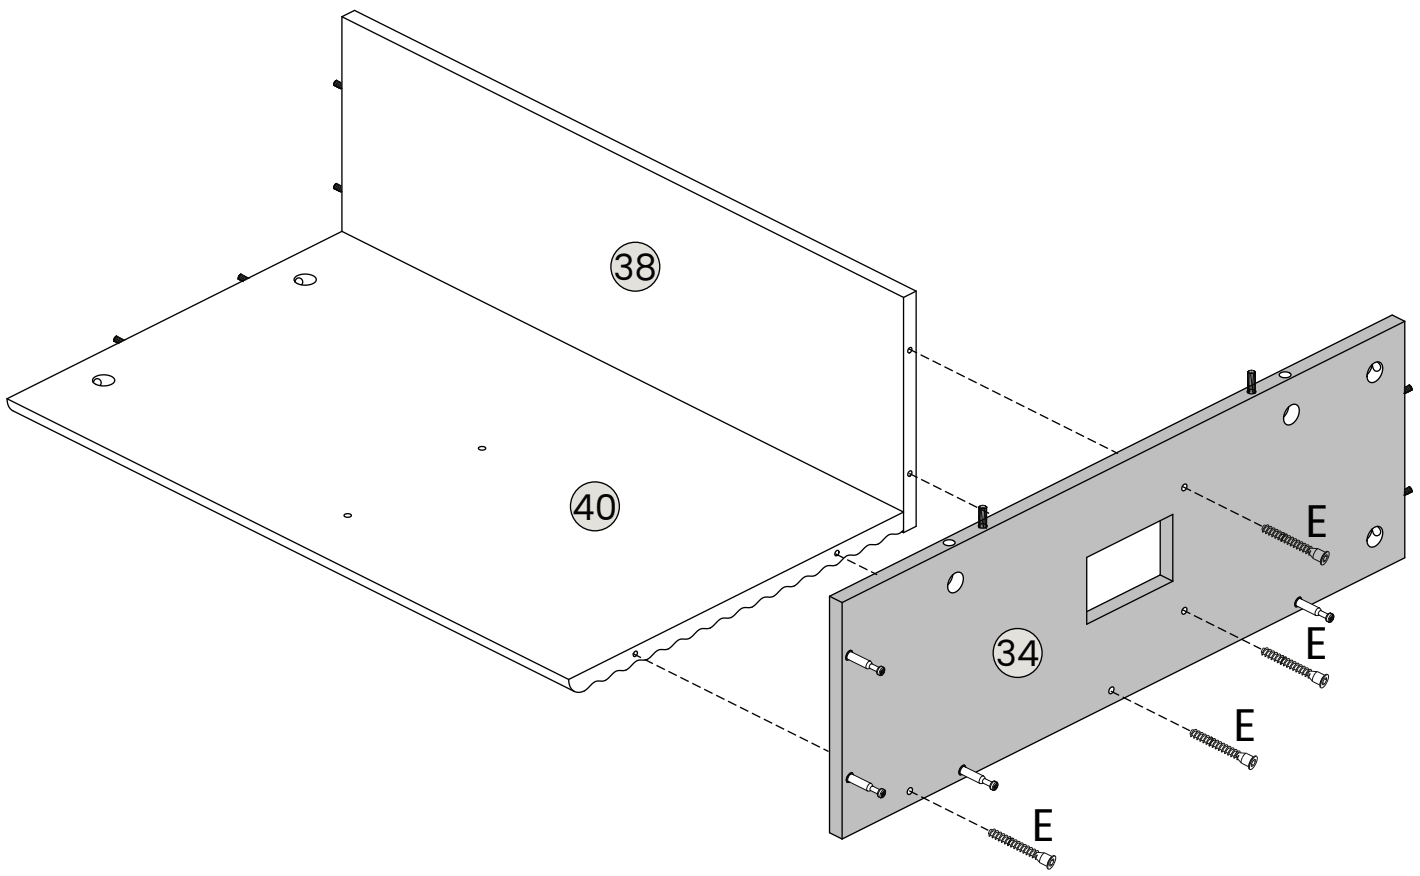

35

P x1

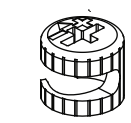


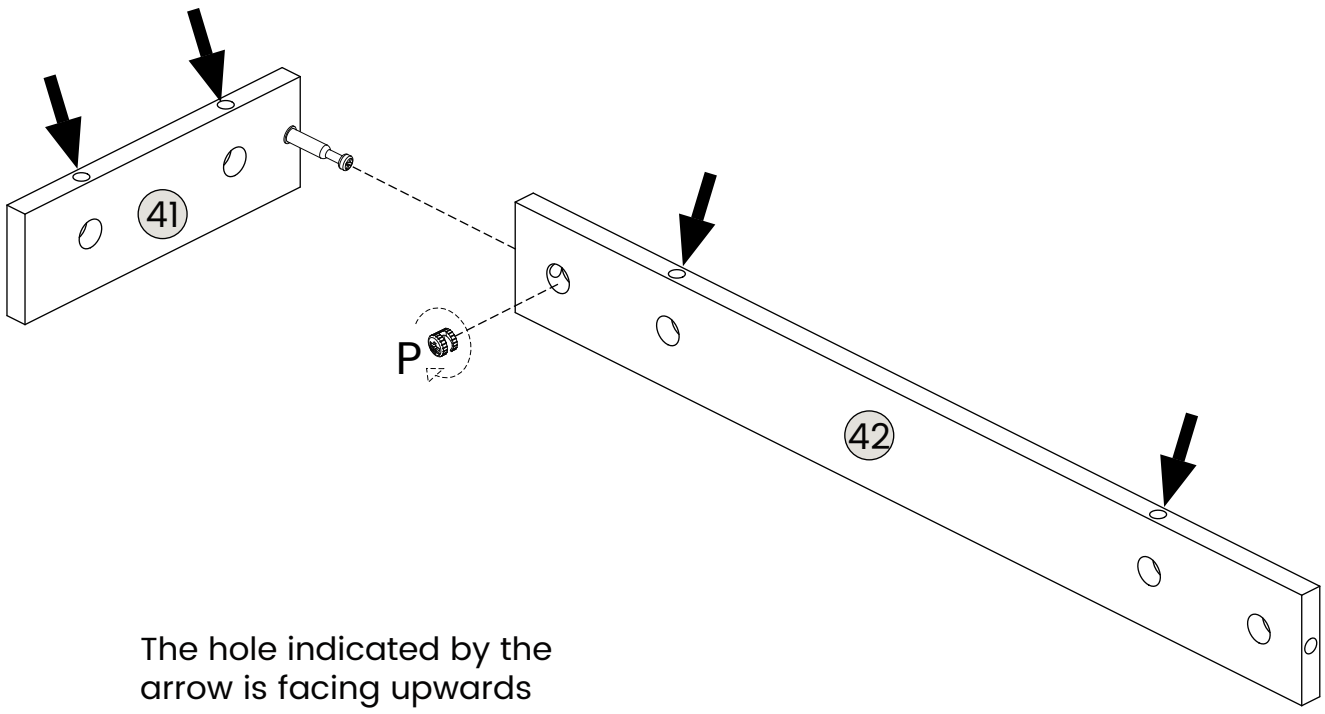


The hole indicated by the arrow is facing upwards

36

P x4

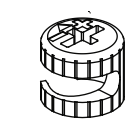


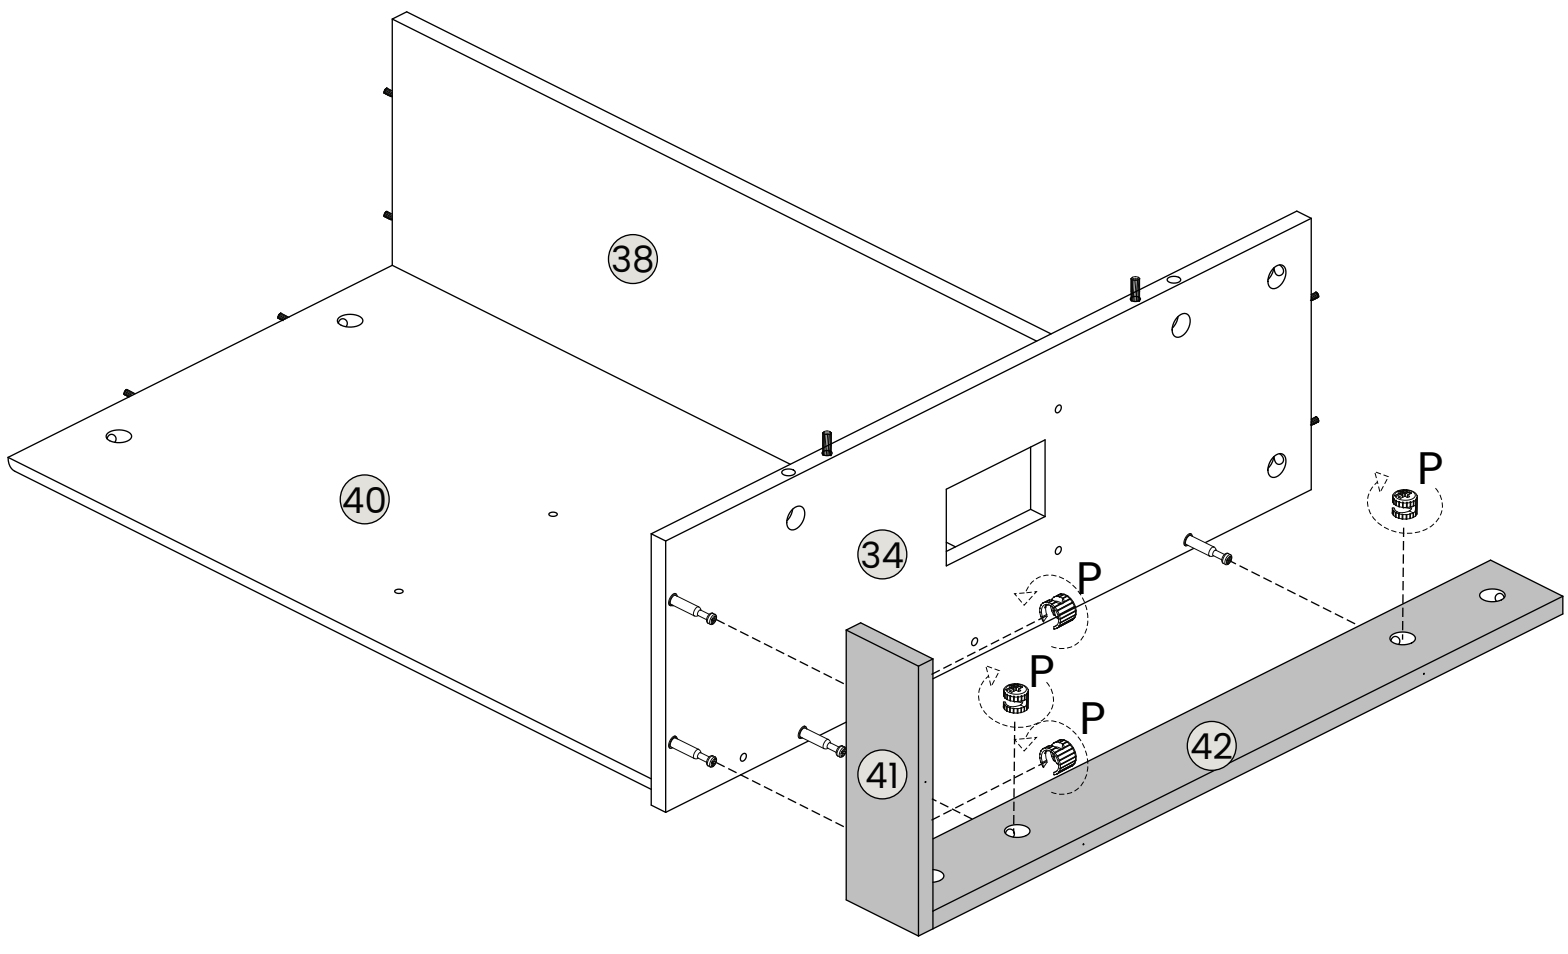



Assembly Instruction

37

P x2

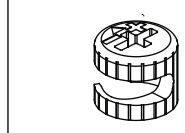

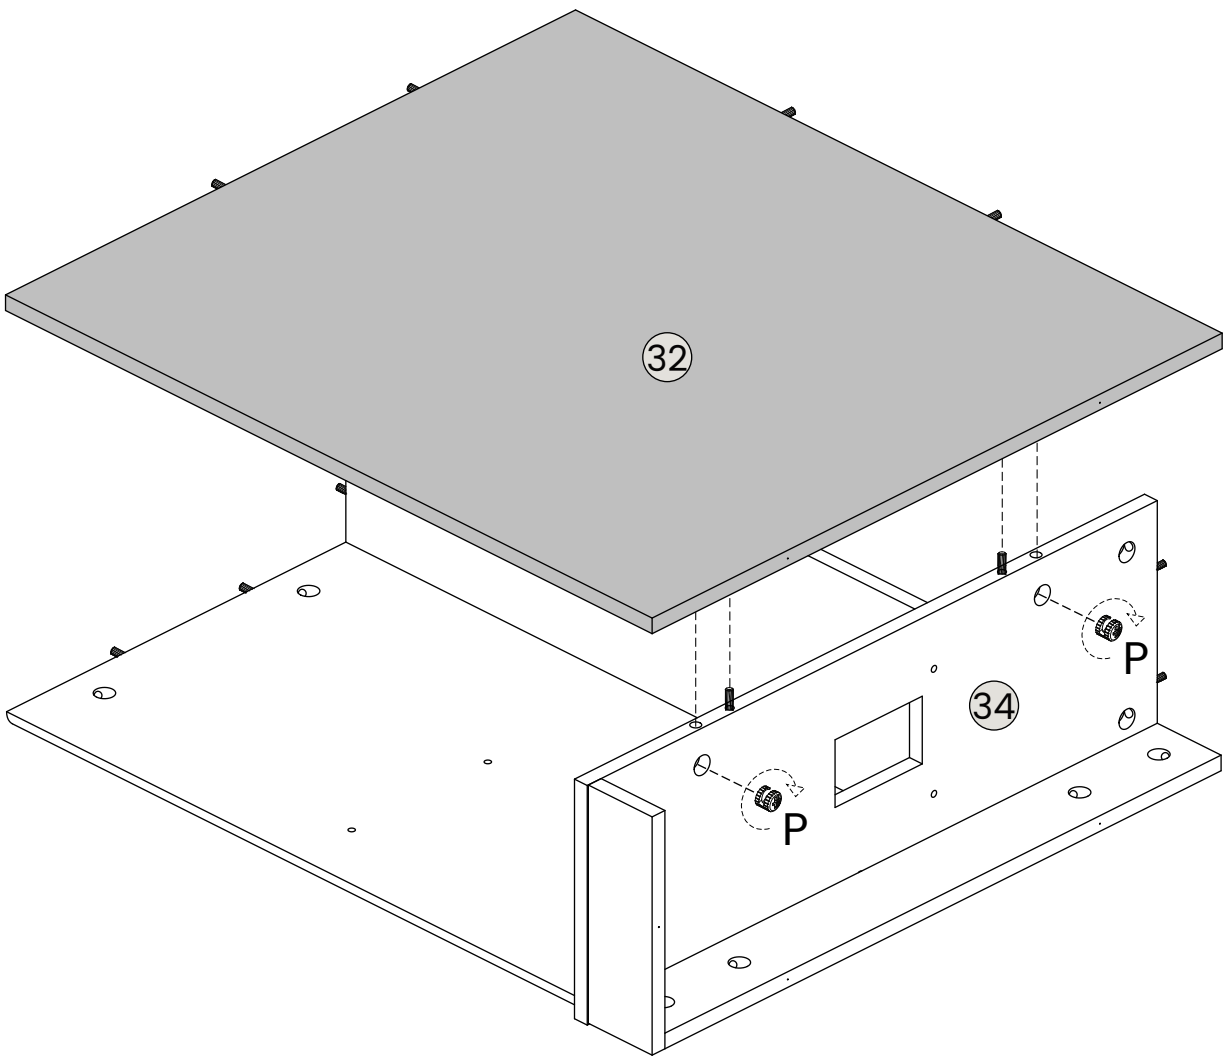


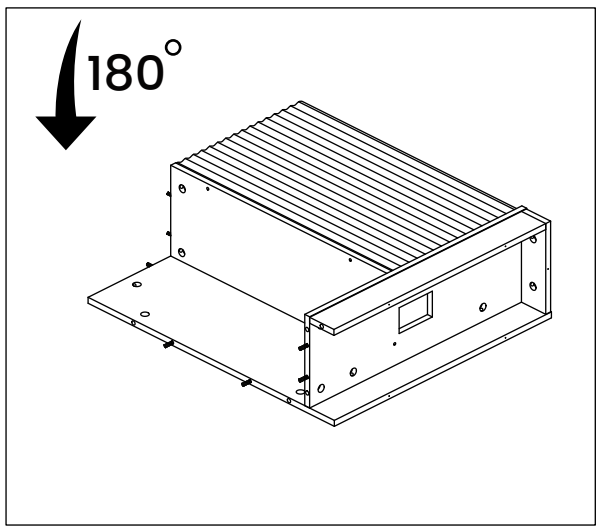

38

P x5




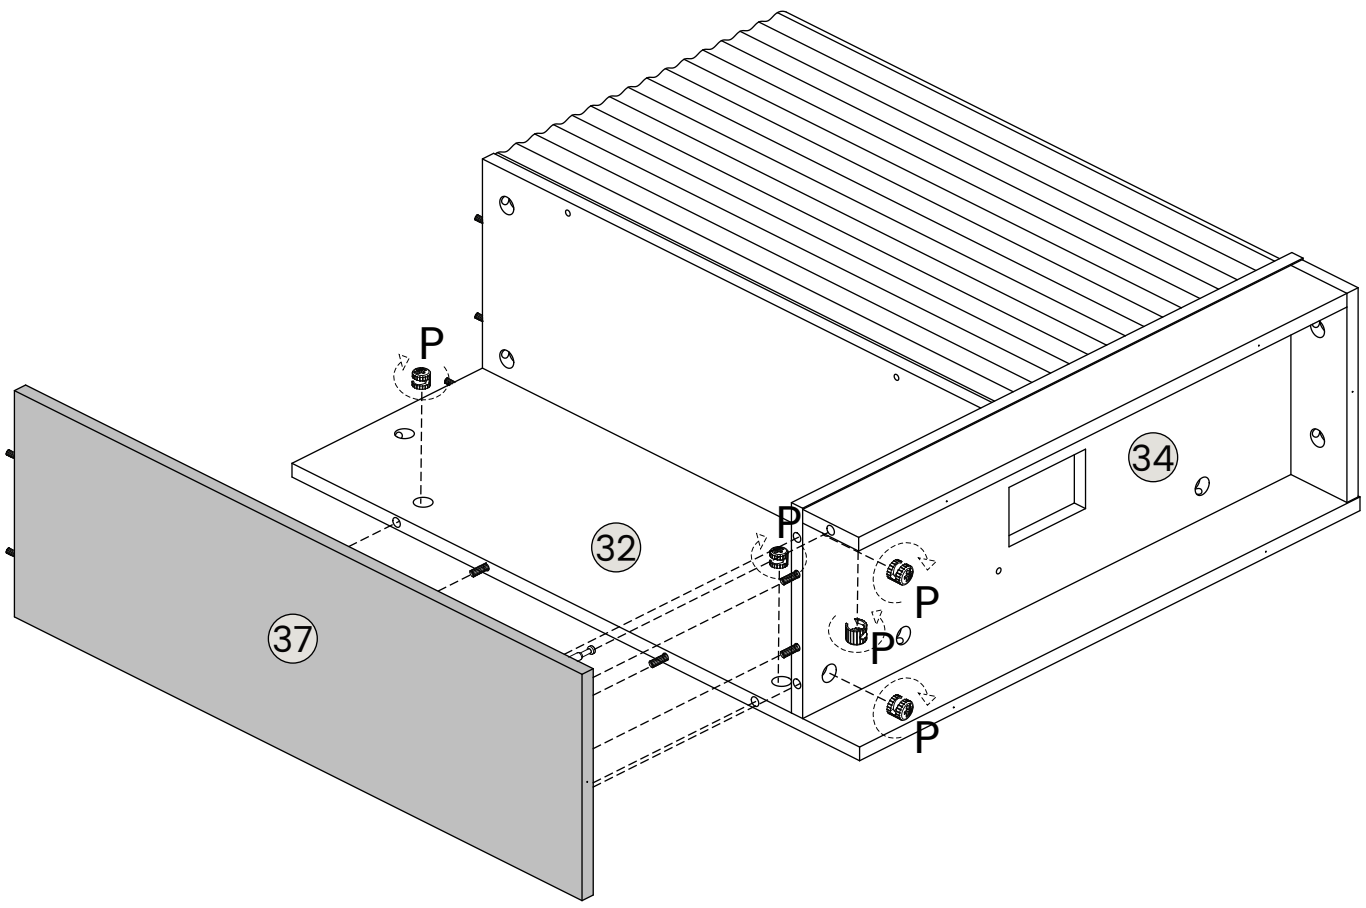


39

P x8




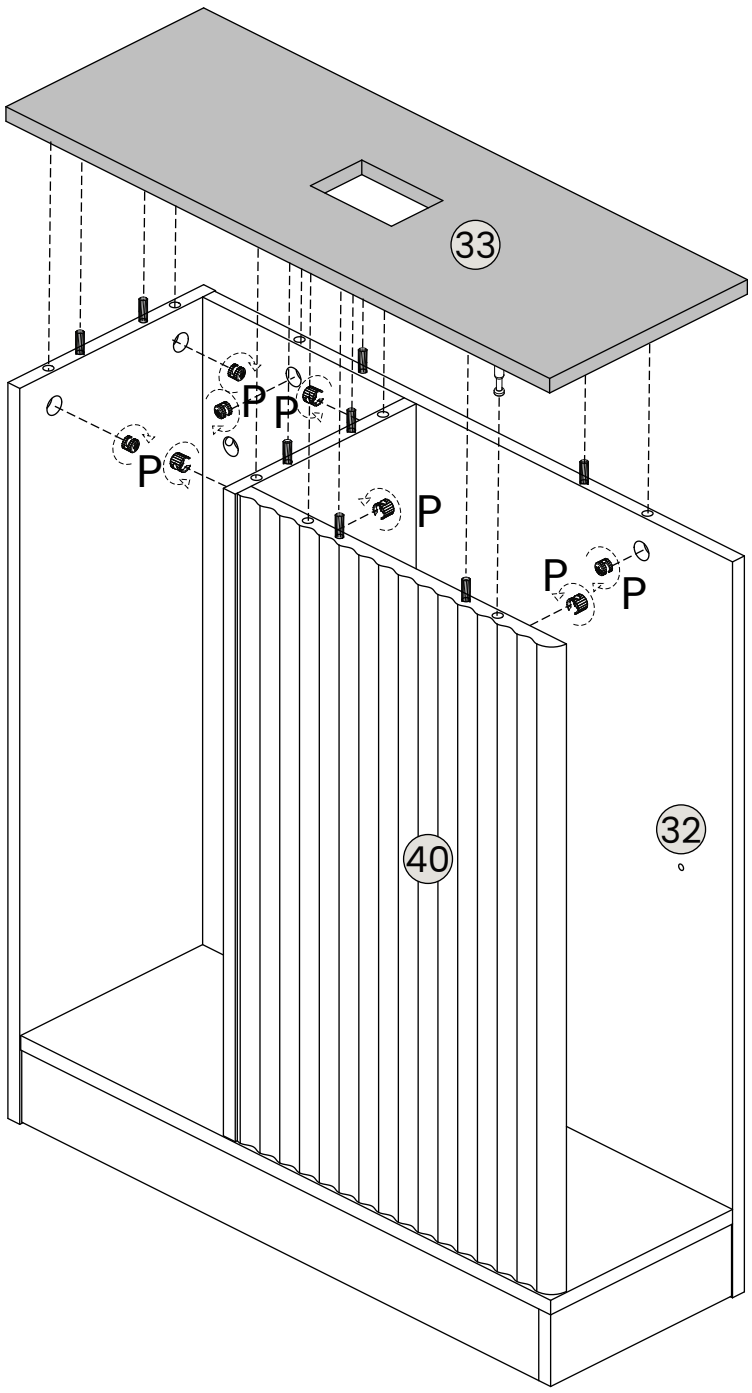


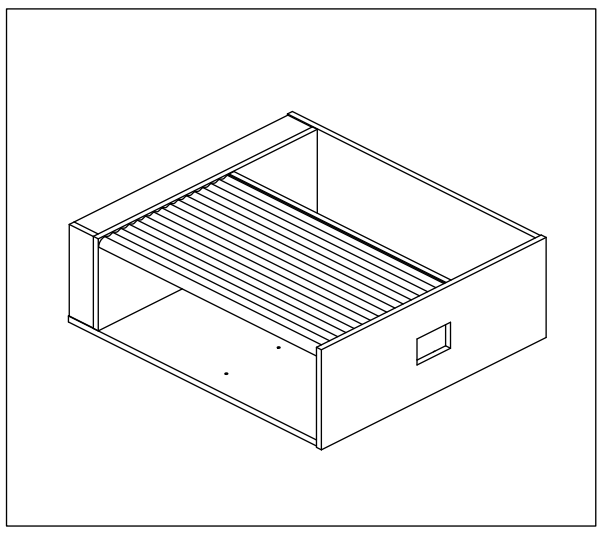

40

Pay attention to the direction of the telescopic feet

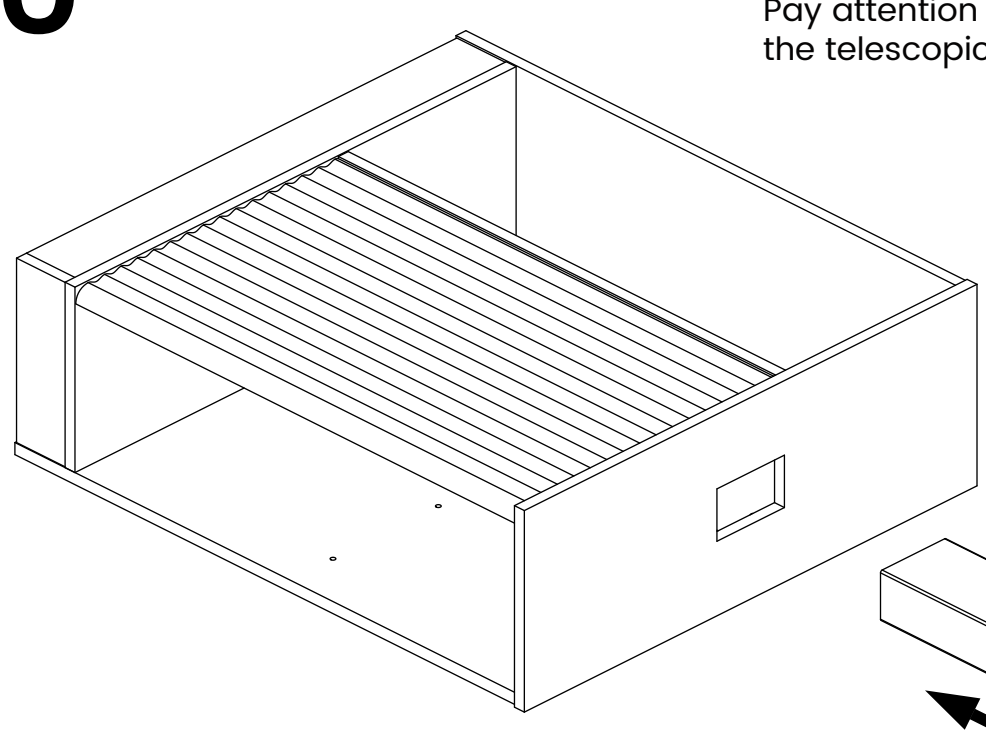


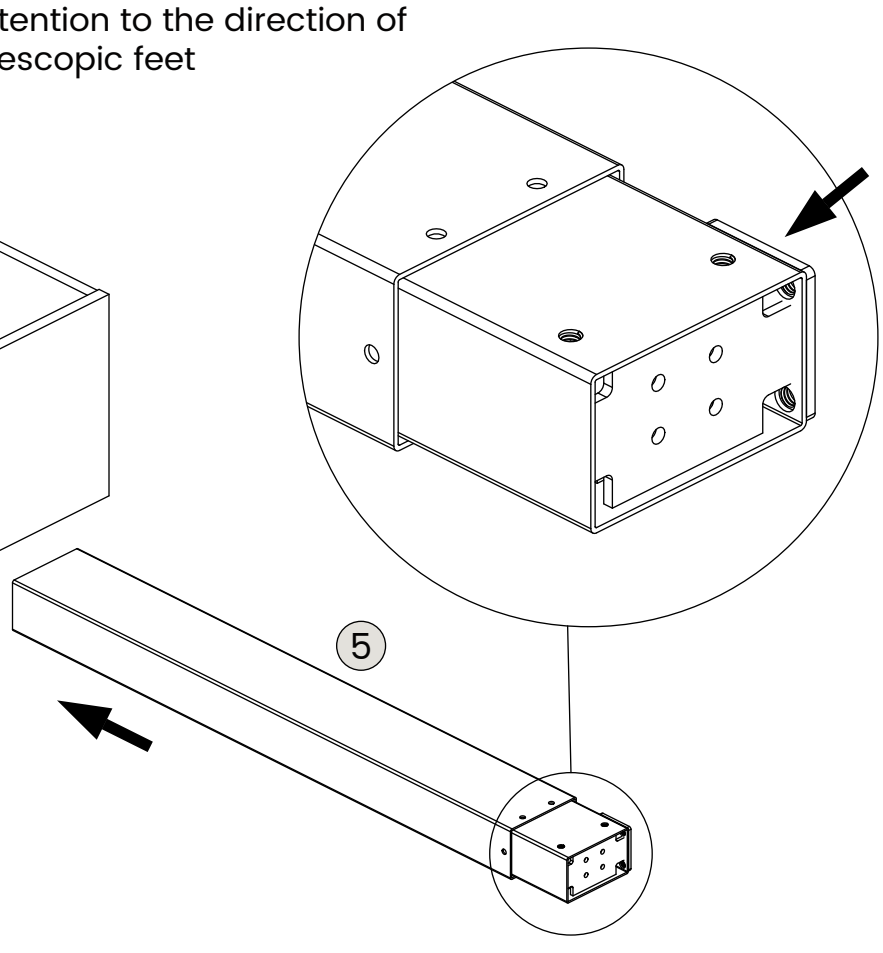


Assembly Instruction

41

U x4




H x4




M6X40MM

T x4



φ20MM

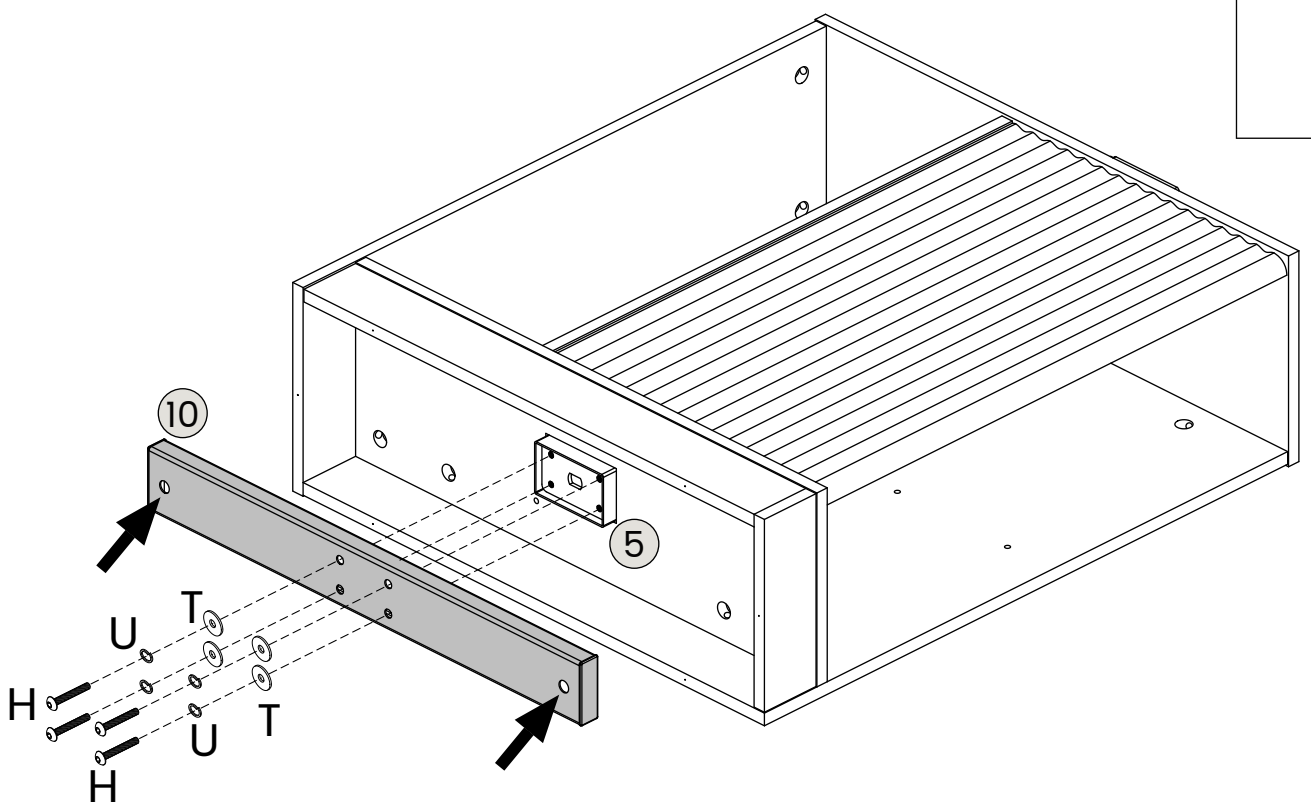


Pay attention to the orientation
of the hole indicated by the arrow


42

Z x6



A x2




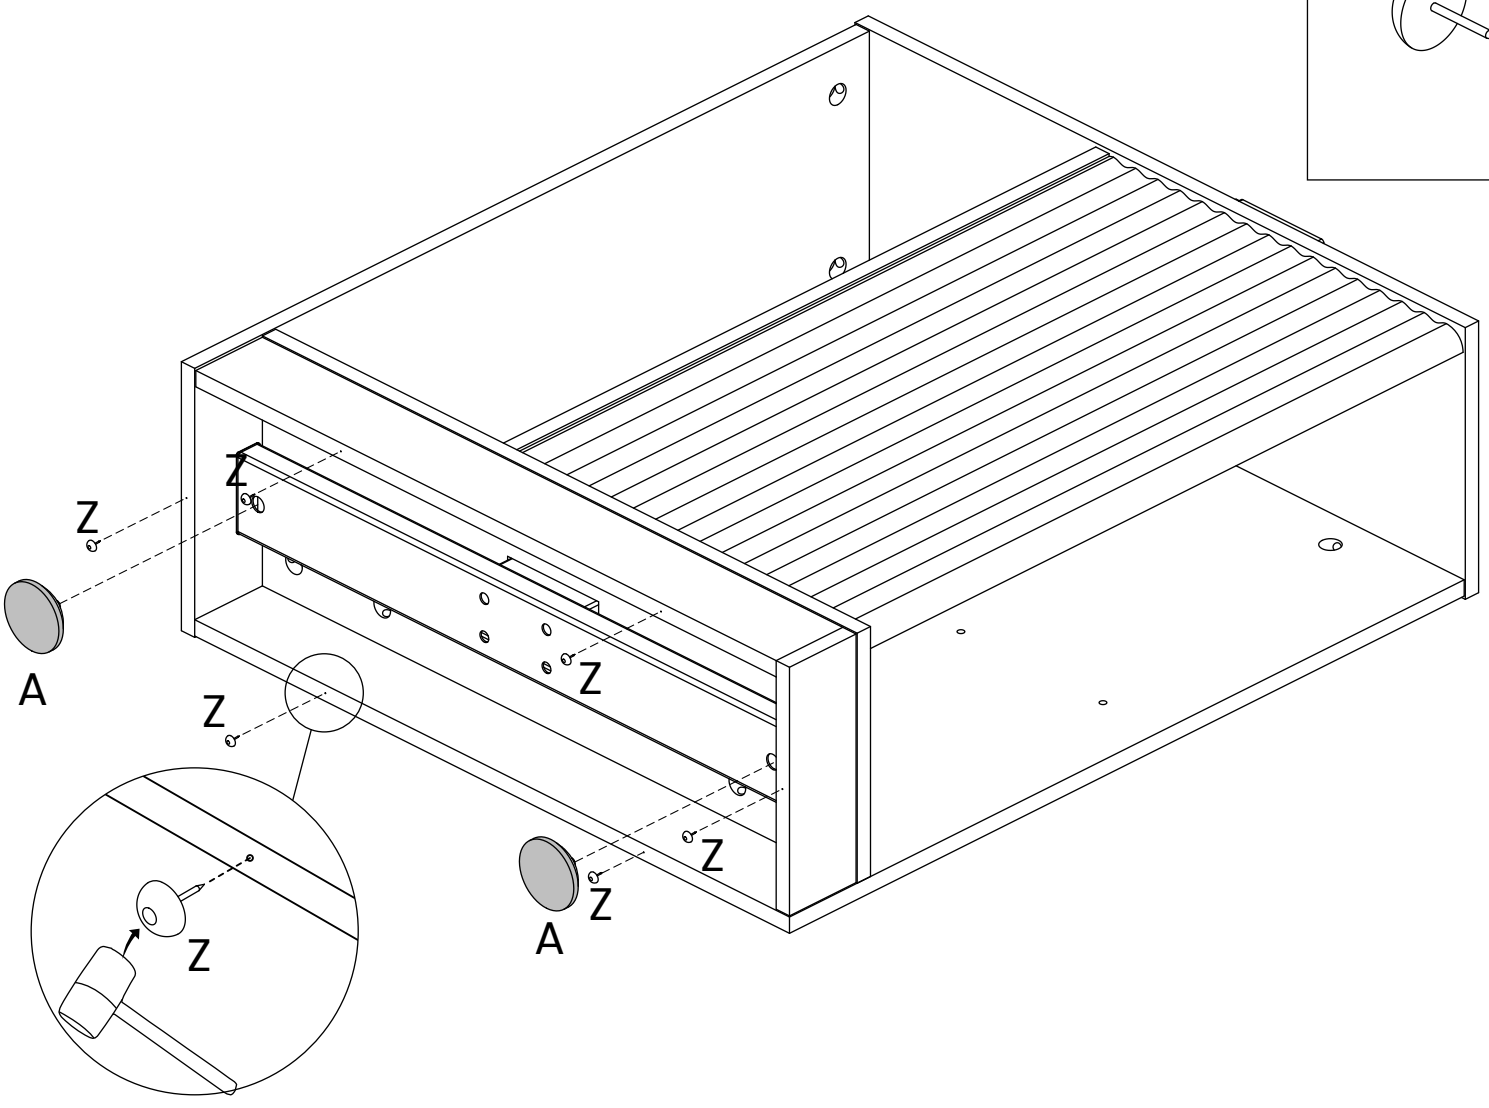


Assembly Instruction

43

Cx5




M6X10MM

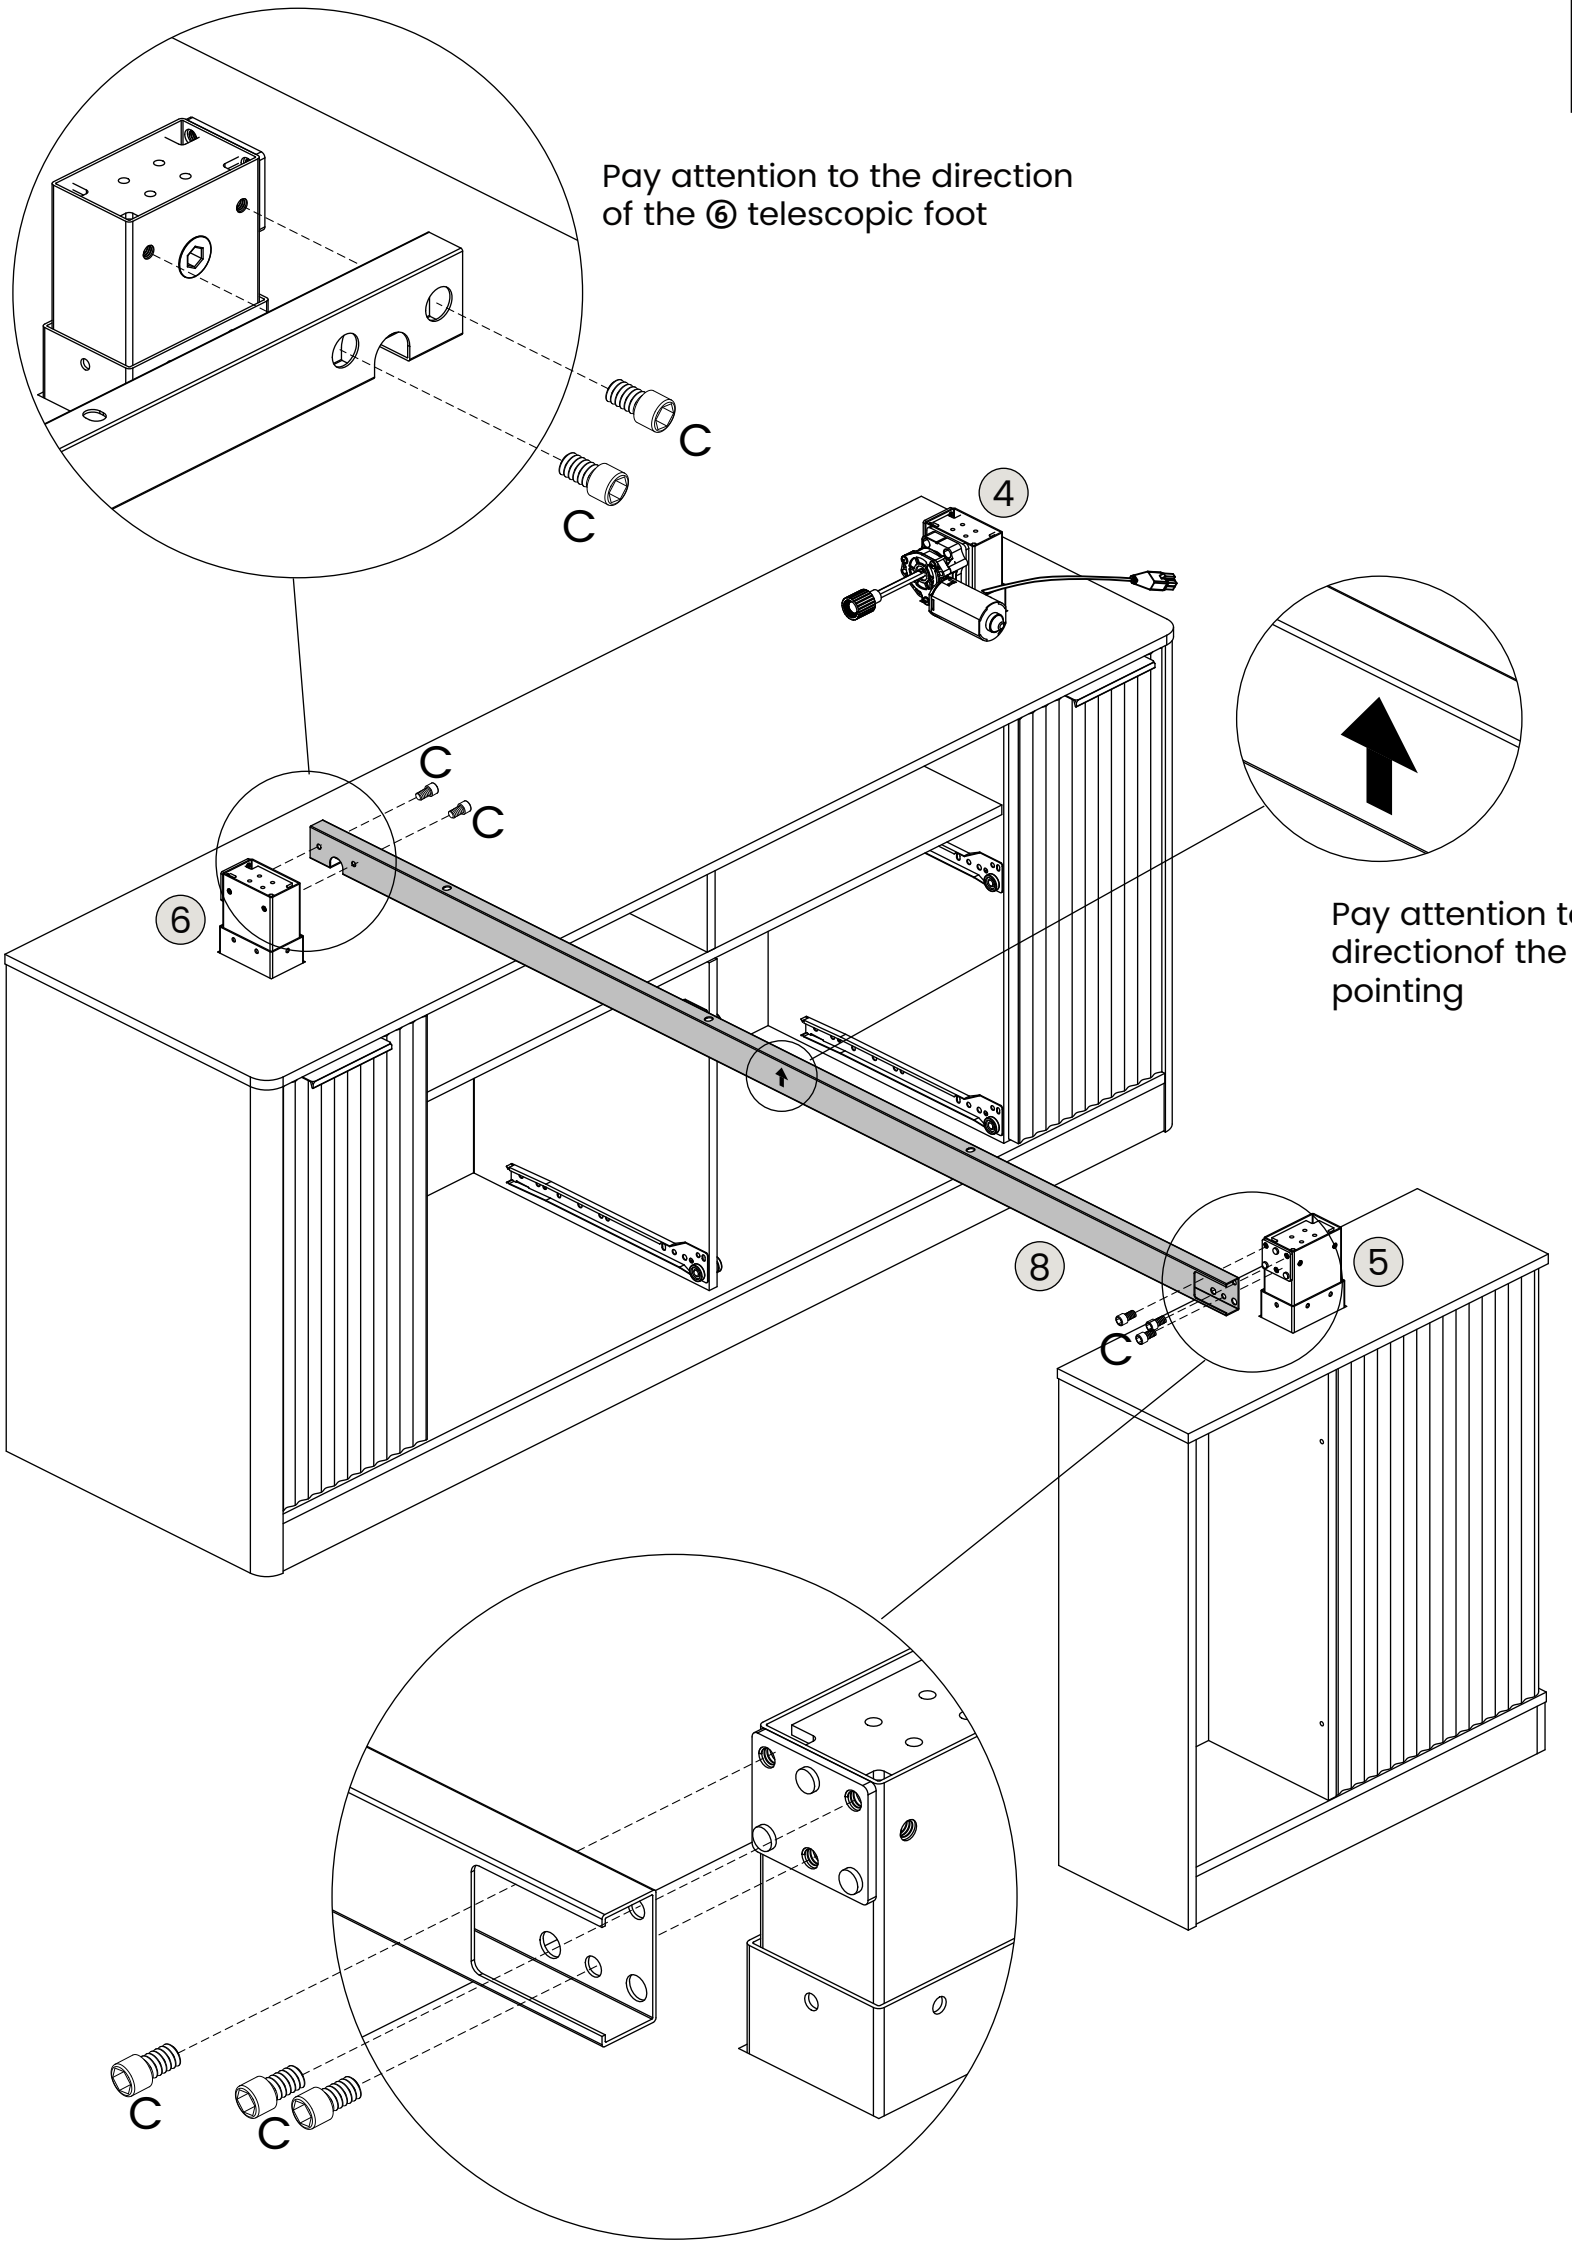


Assembly Instruction

44

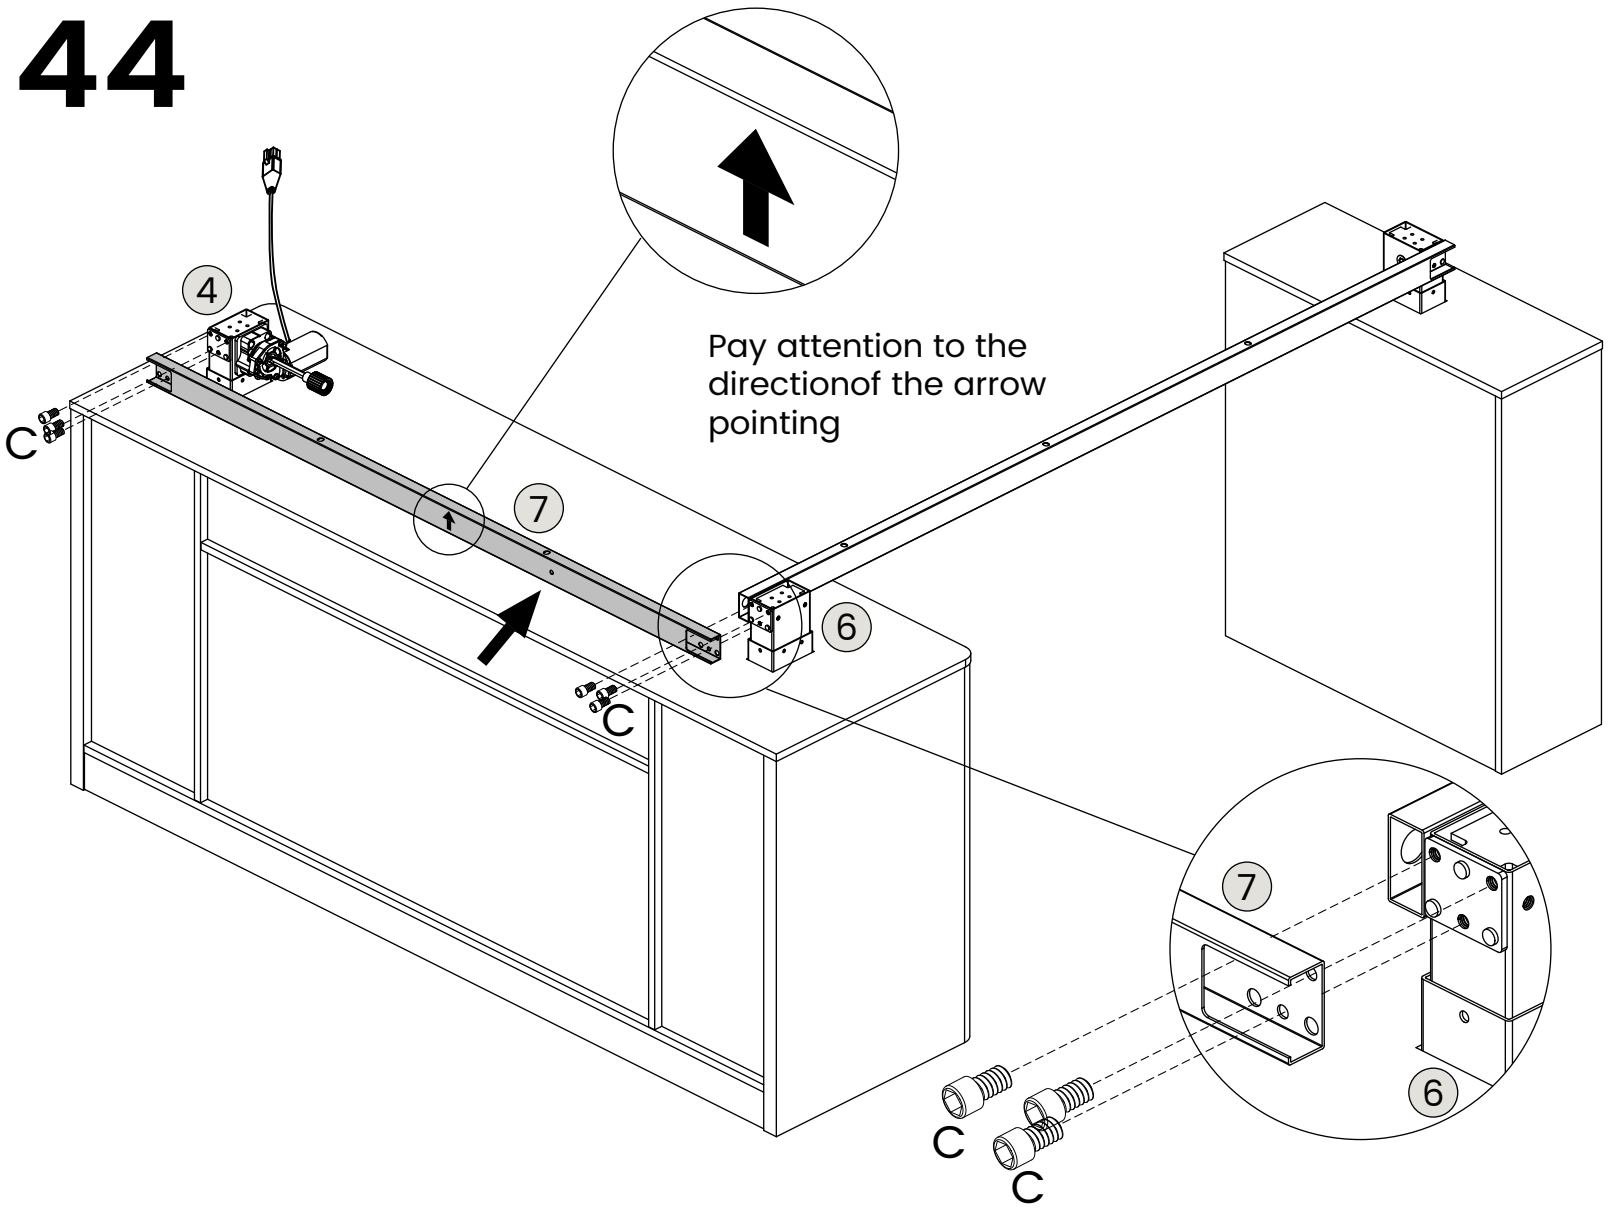


C x6




M6X10MM

45

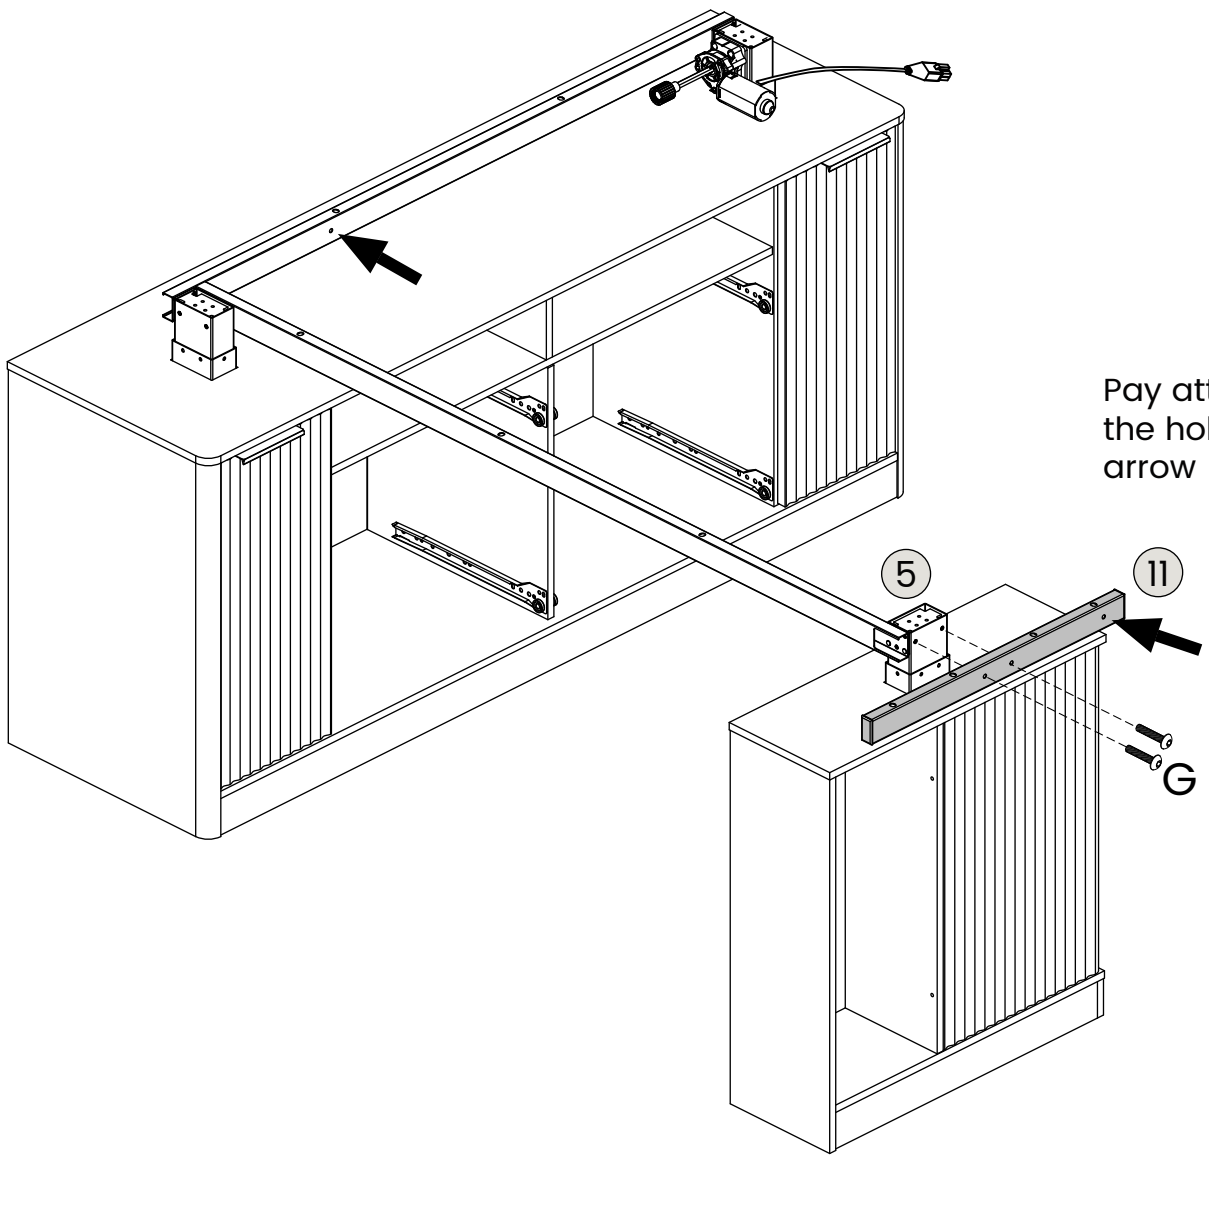

G x2




M6X28MM


Pay attention to the position of the hole indicated by the arrow

Assembly Instruction

46

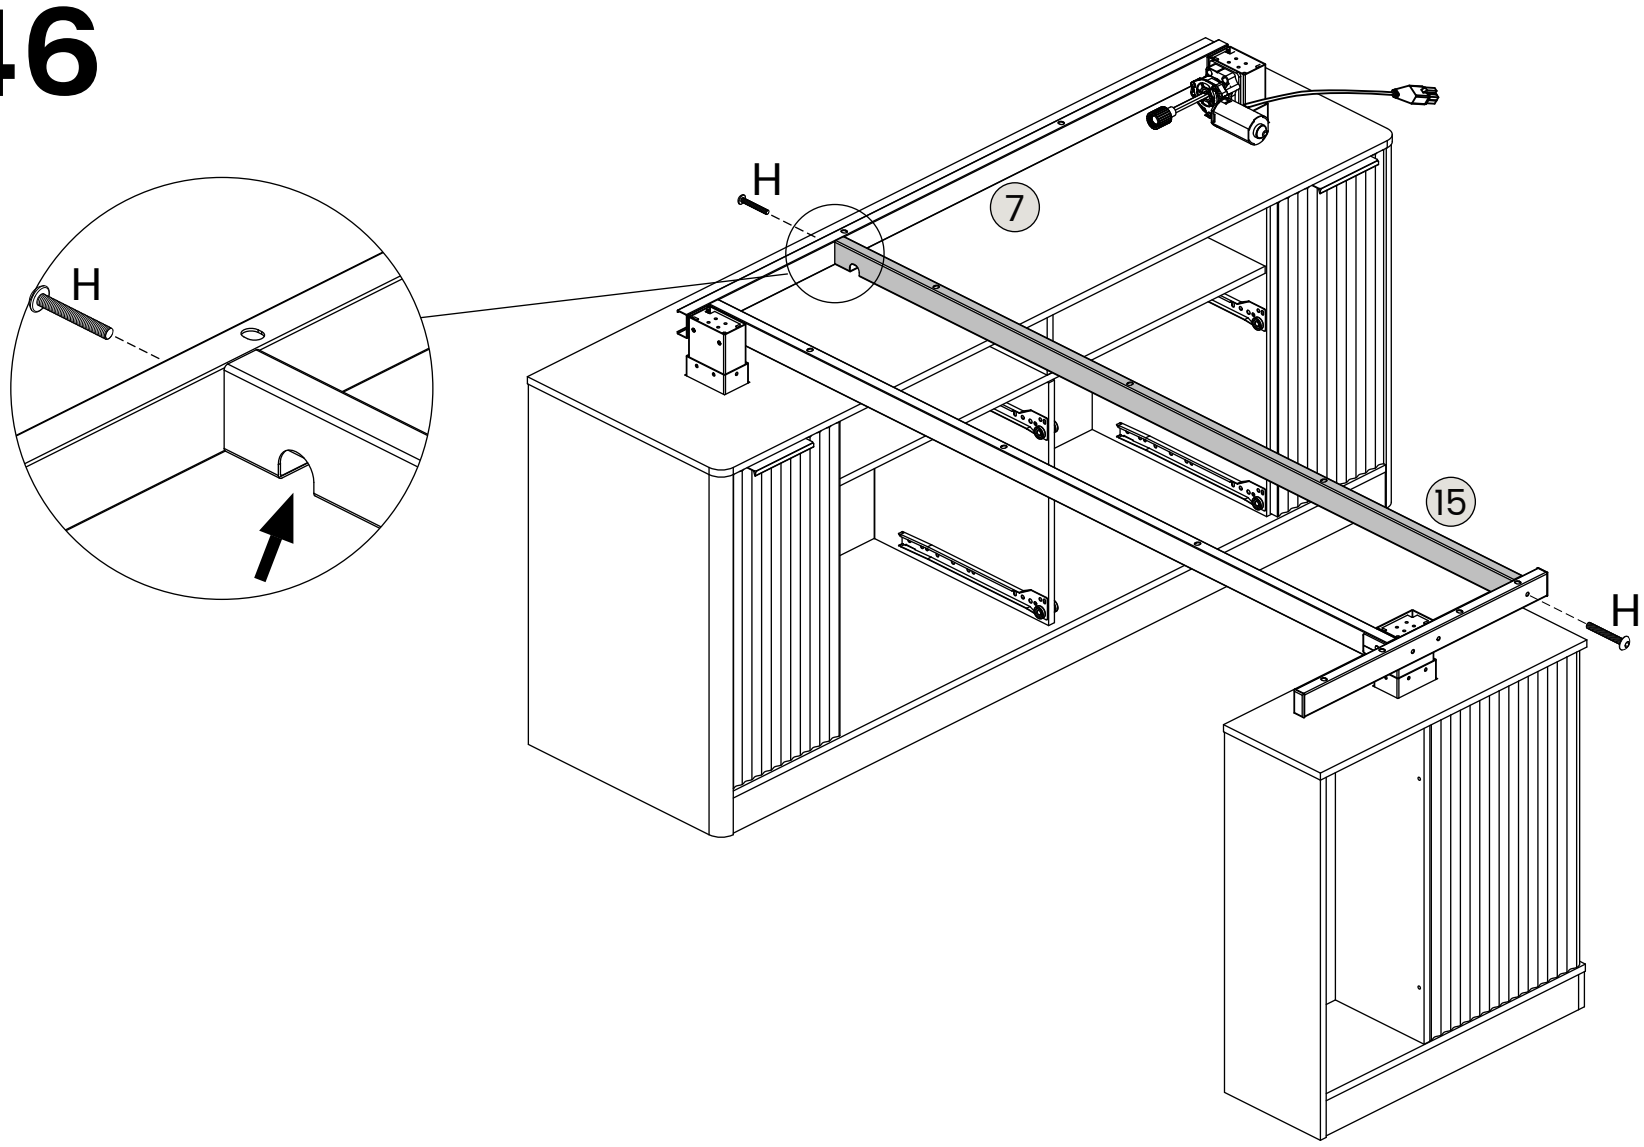


Hx2




M6X40MM


47

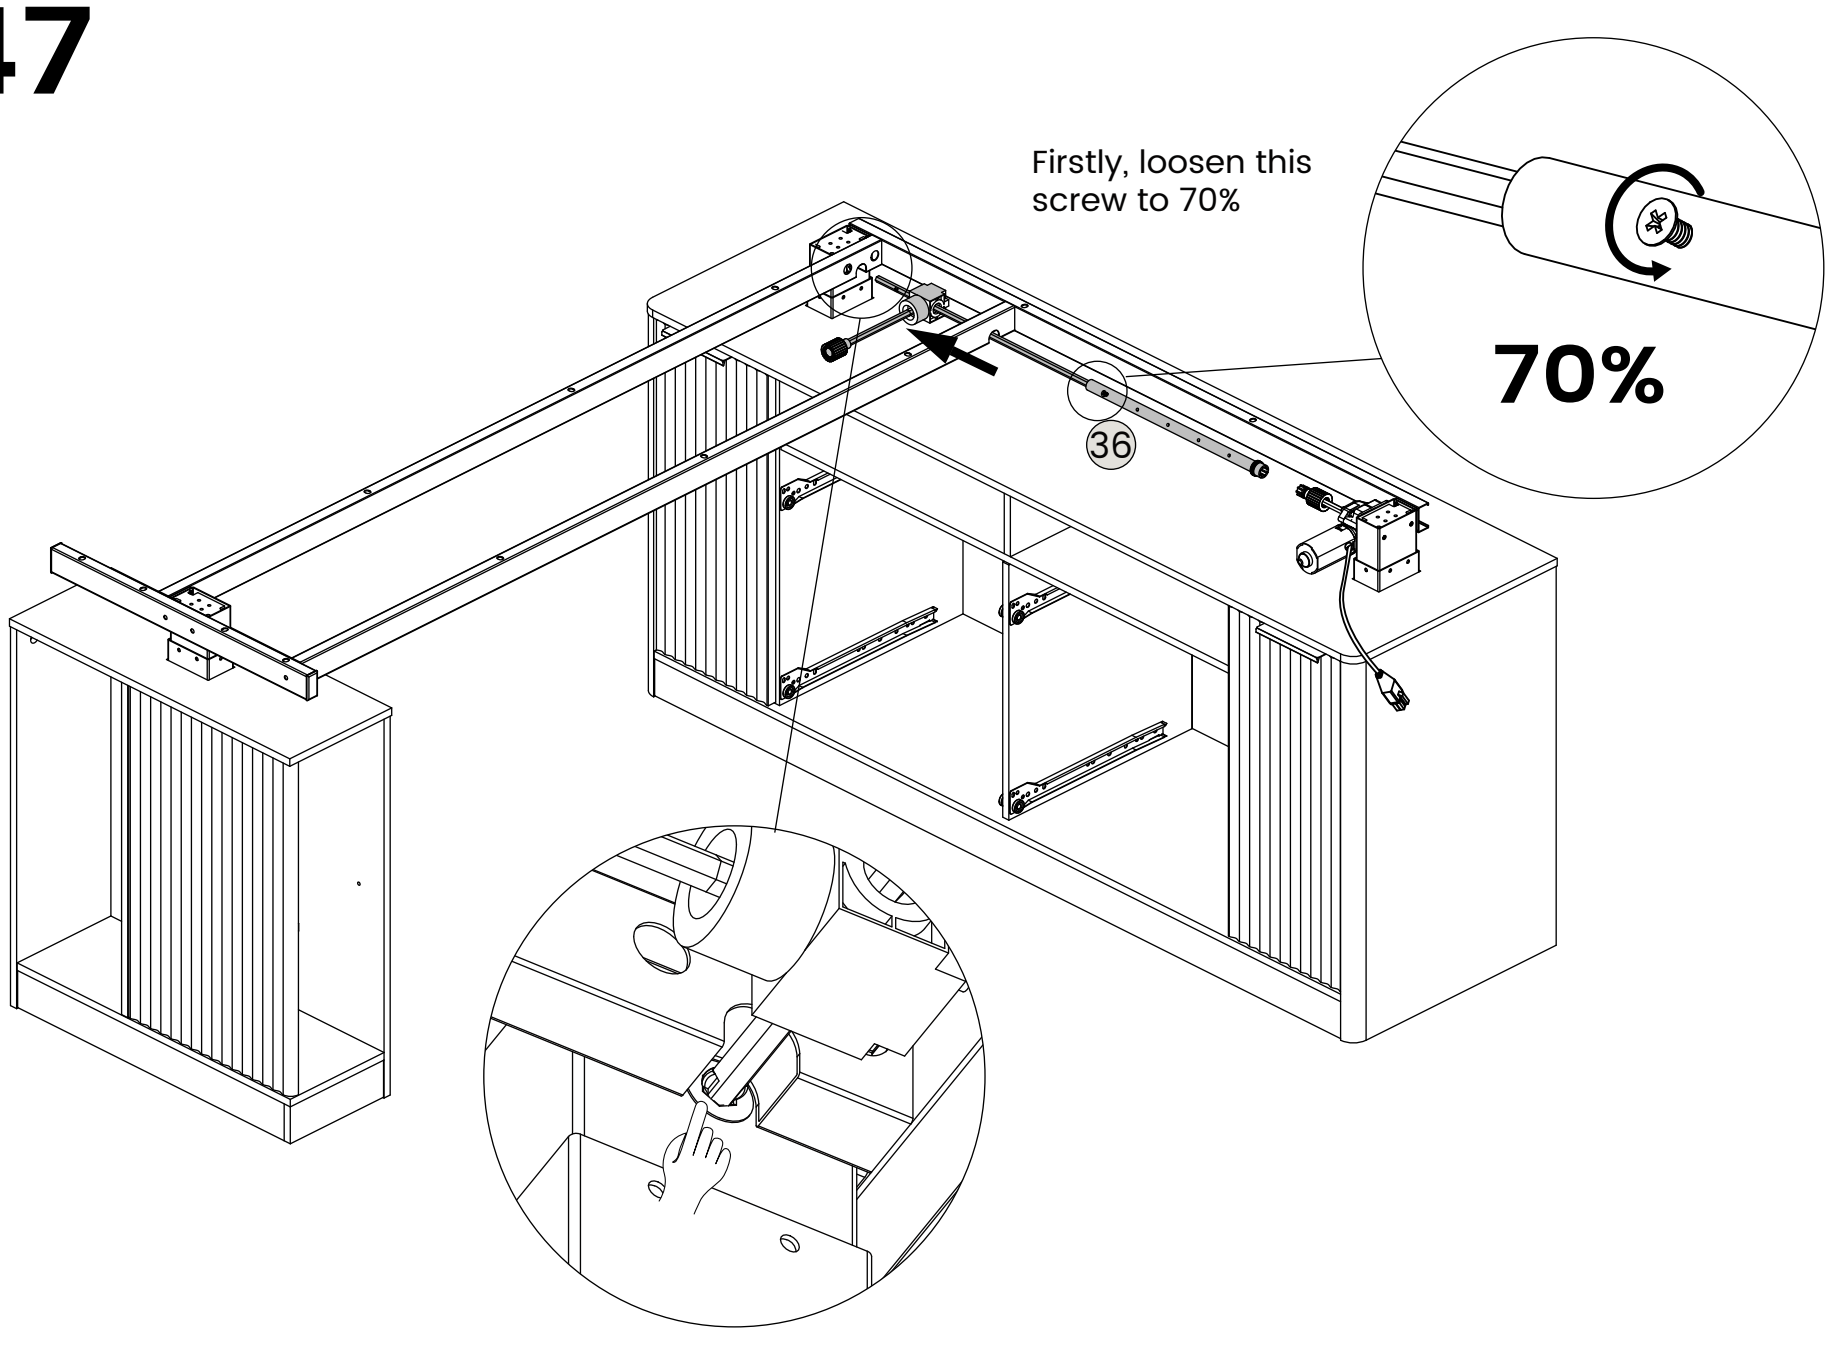

48

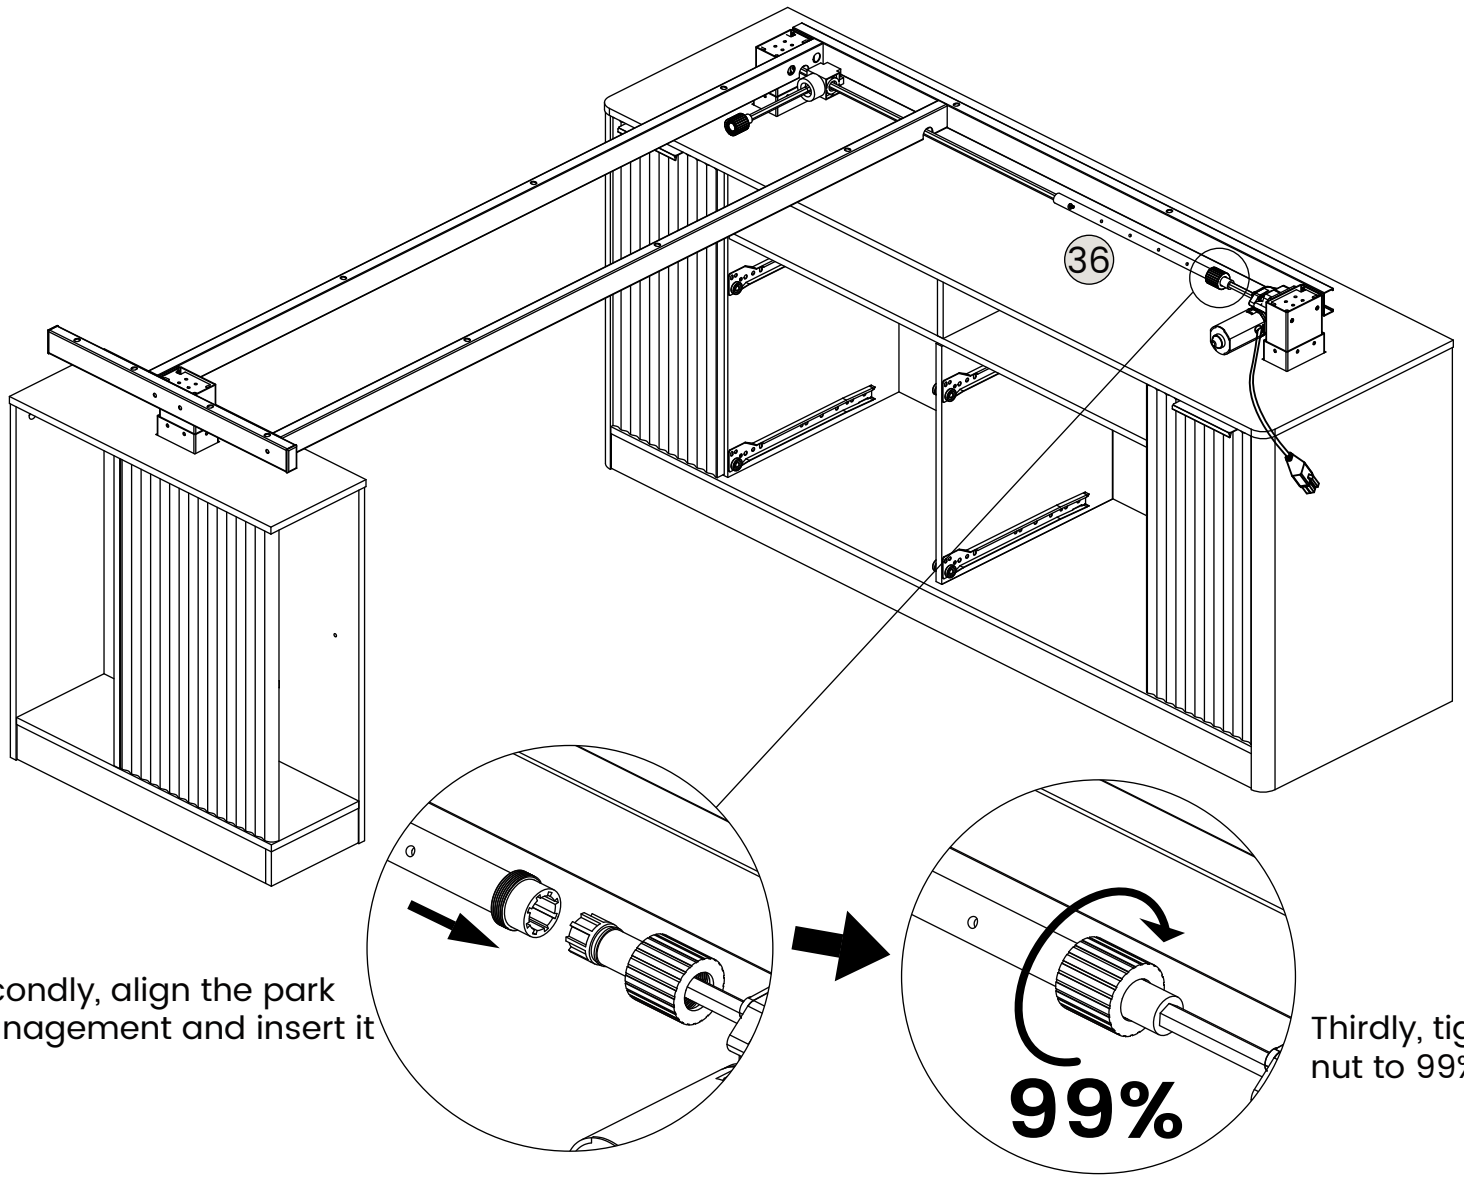

36
Secondly, align the park management and insert it
99%
Thirdly, tighten this nut to 99%

49

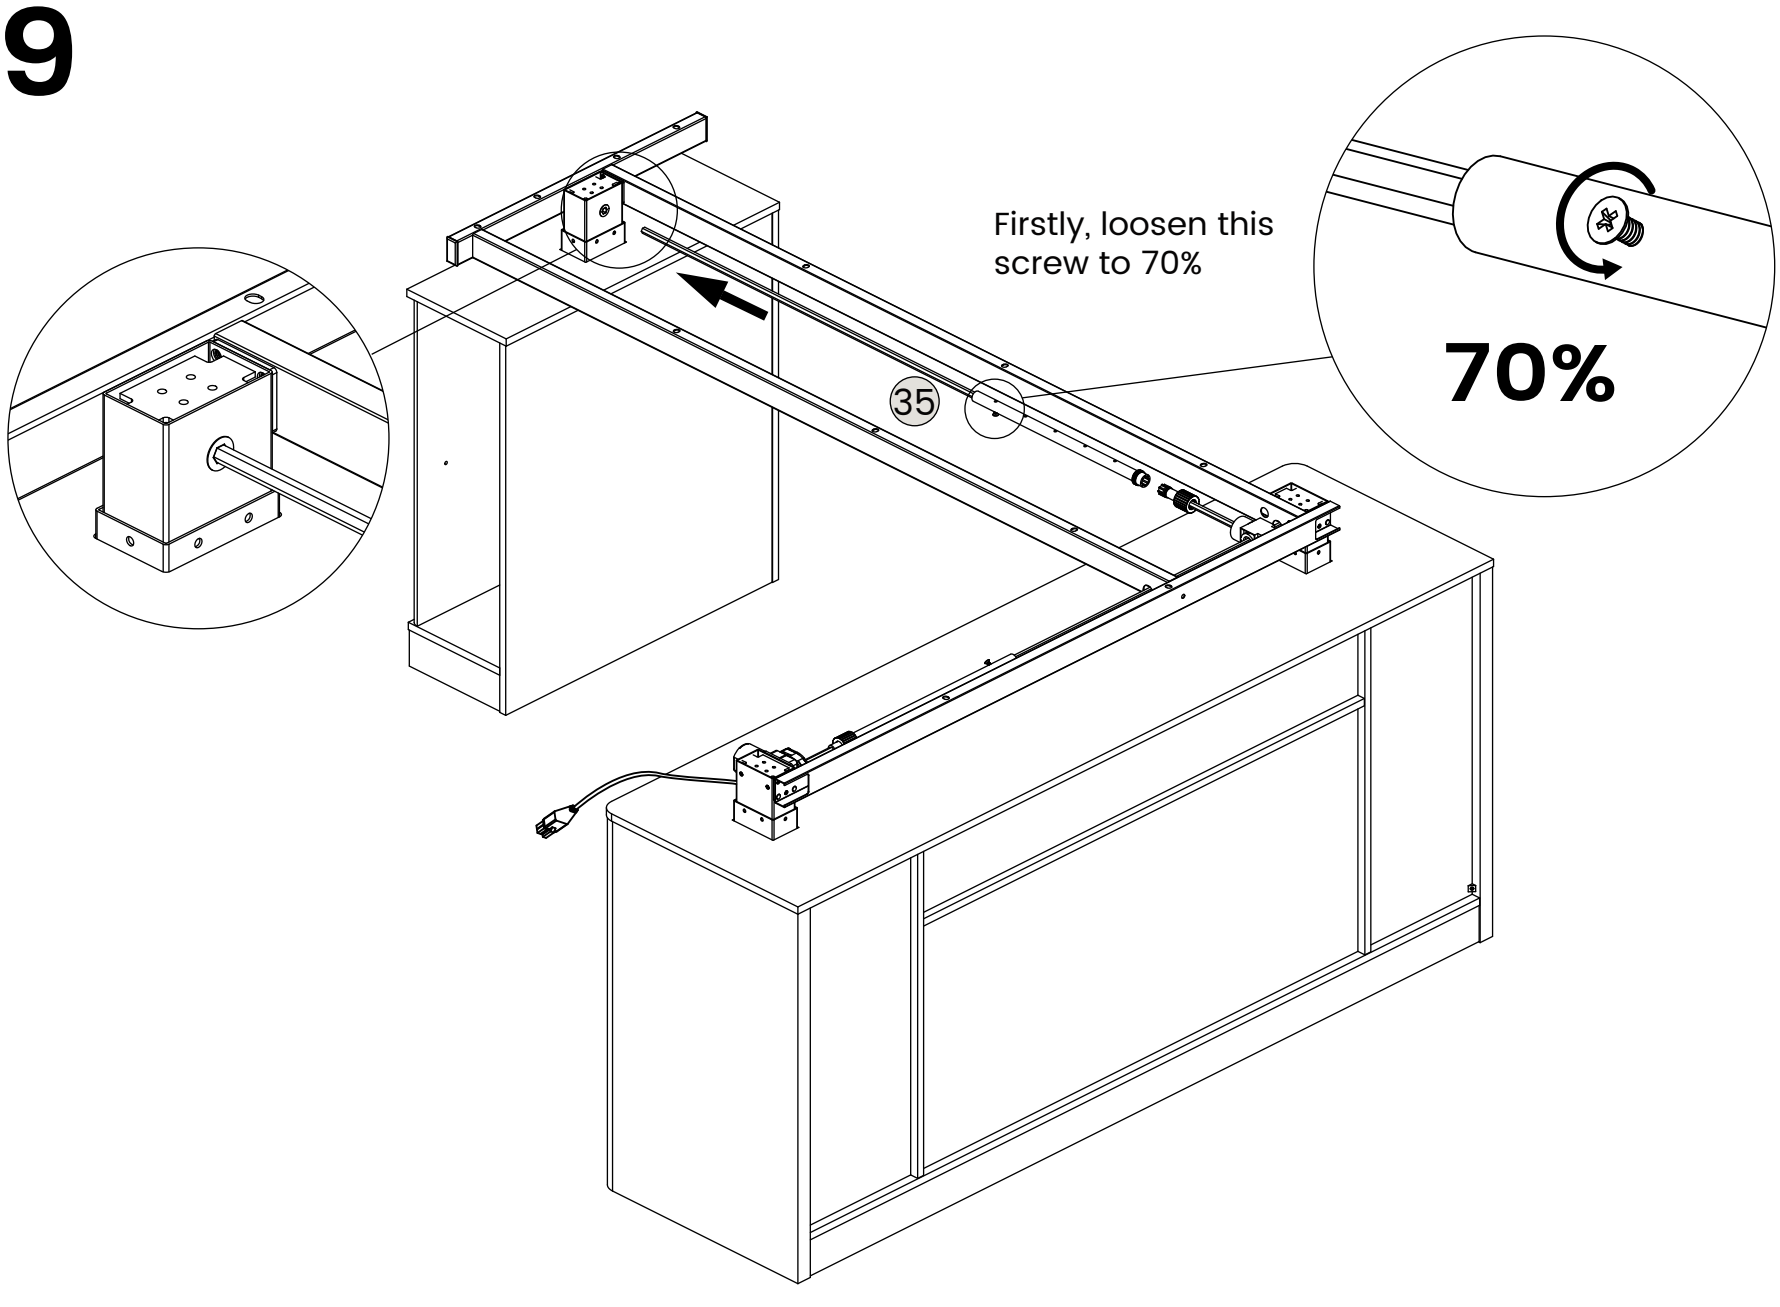

Firstly, loosen this screw to 70%
70%
35

Assembly Instruction


50

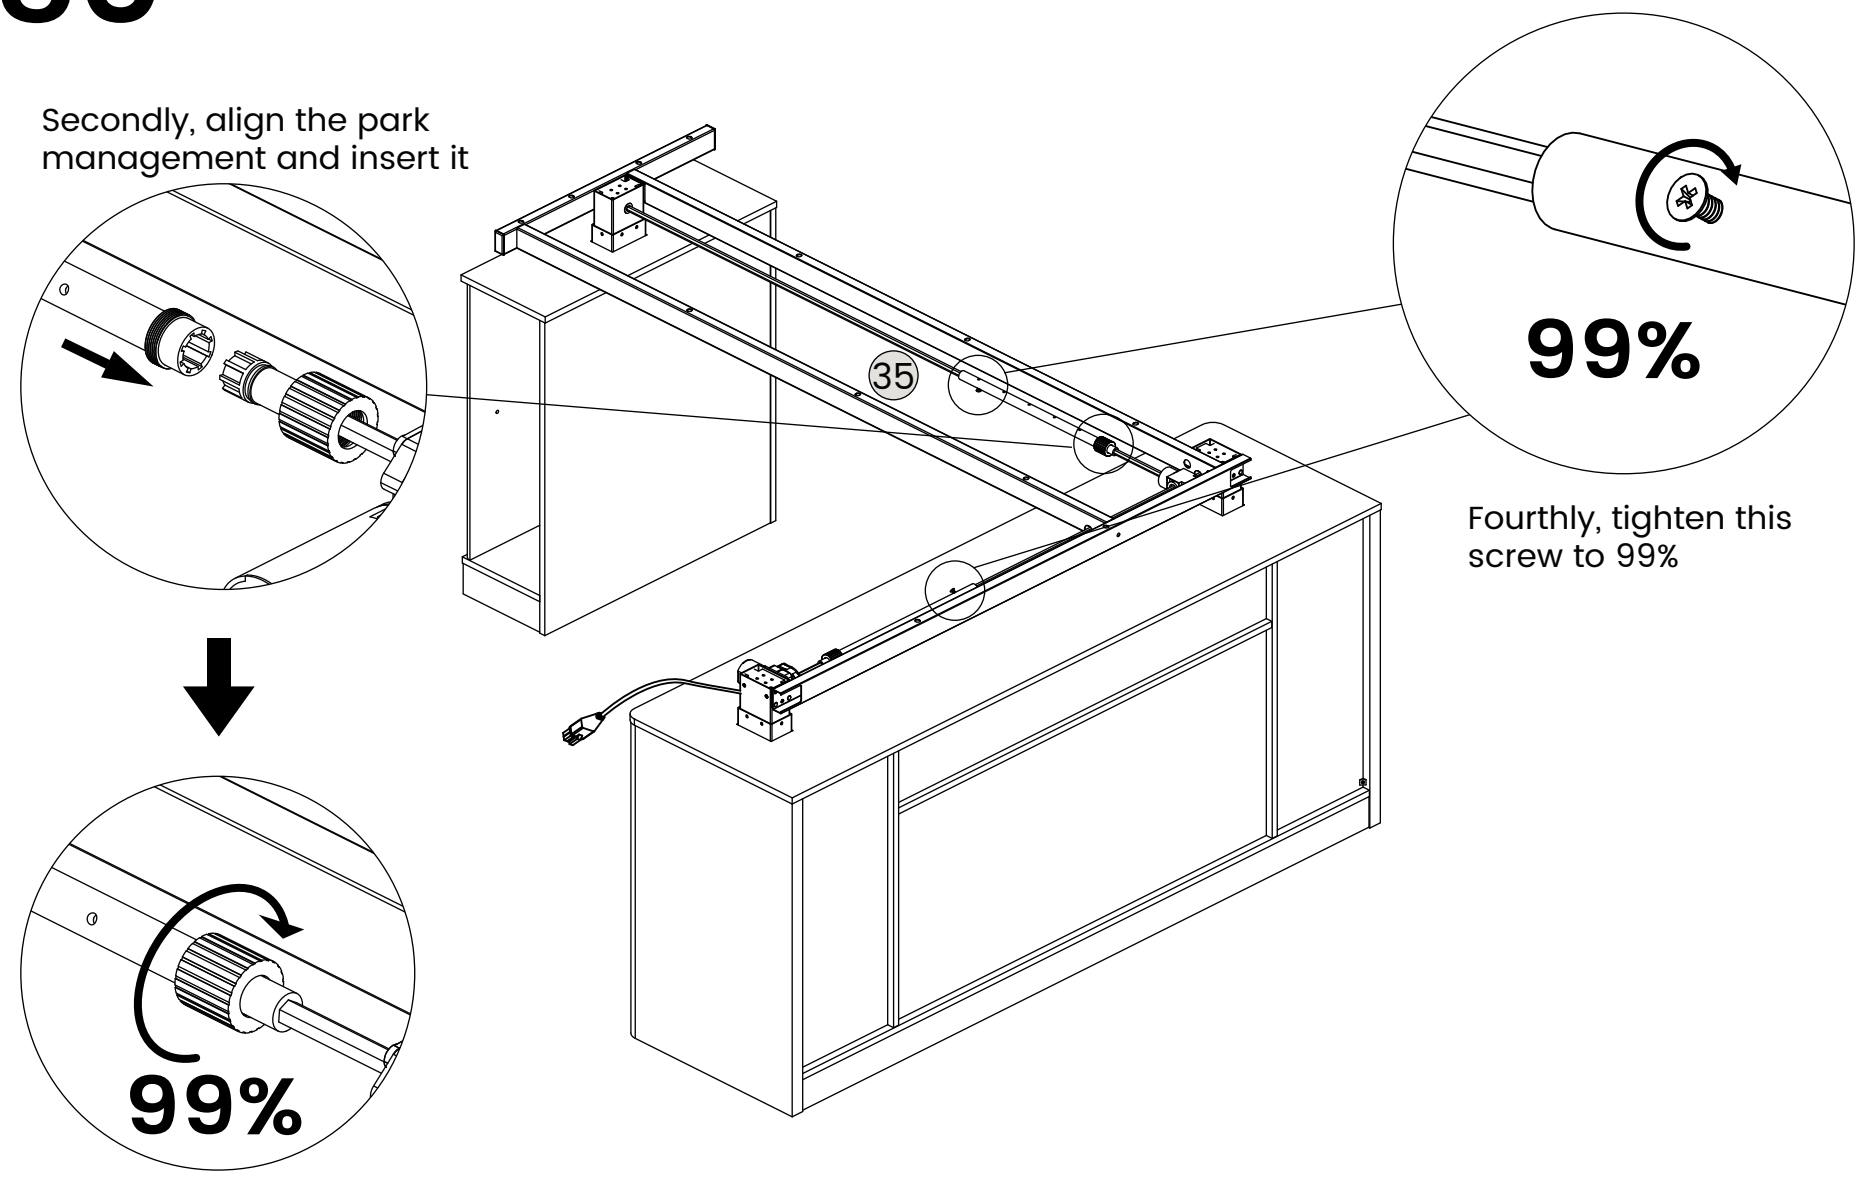

51

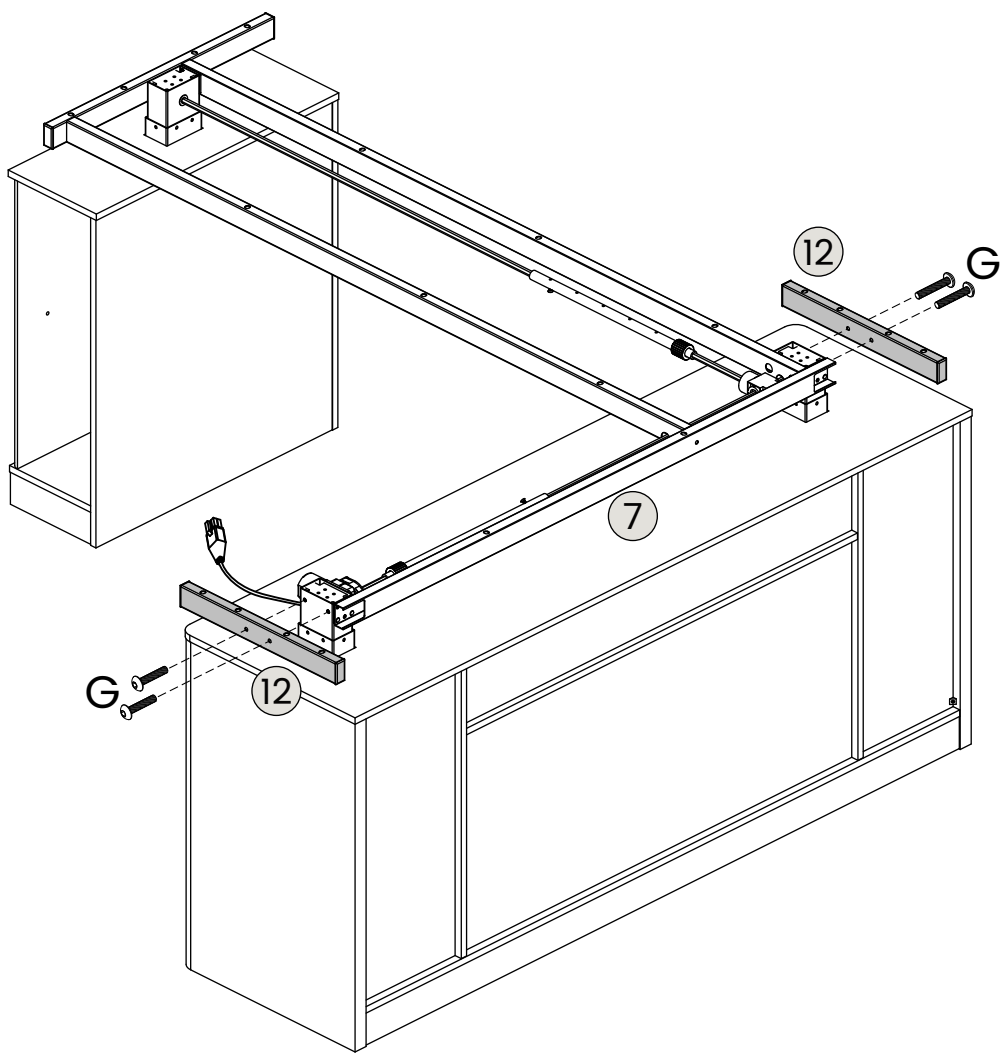


G x4




M6X28MM

52

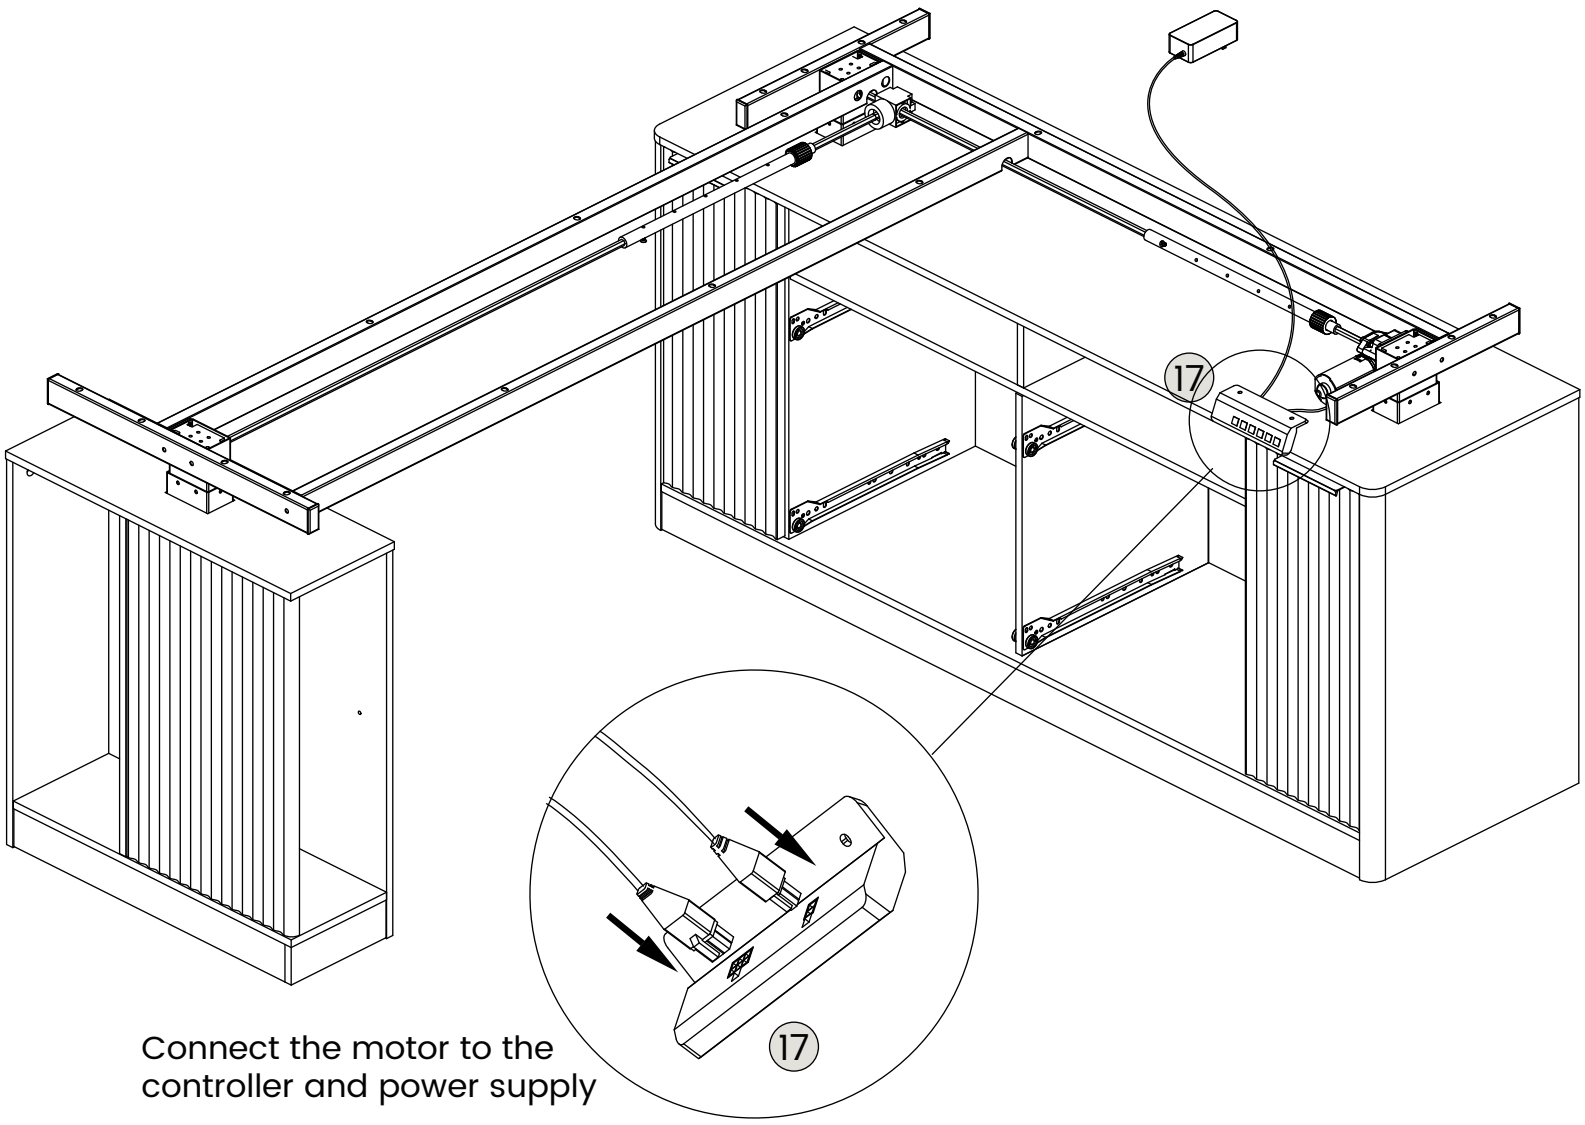

Connect the motor to the
controller and power supply


53

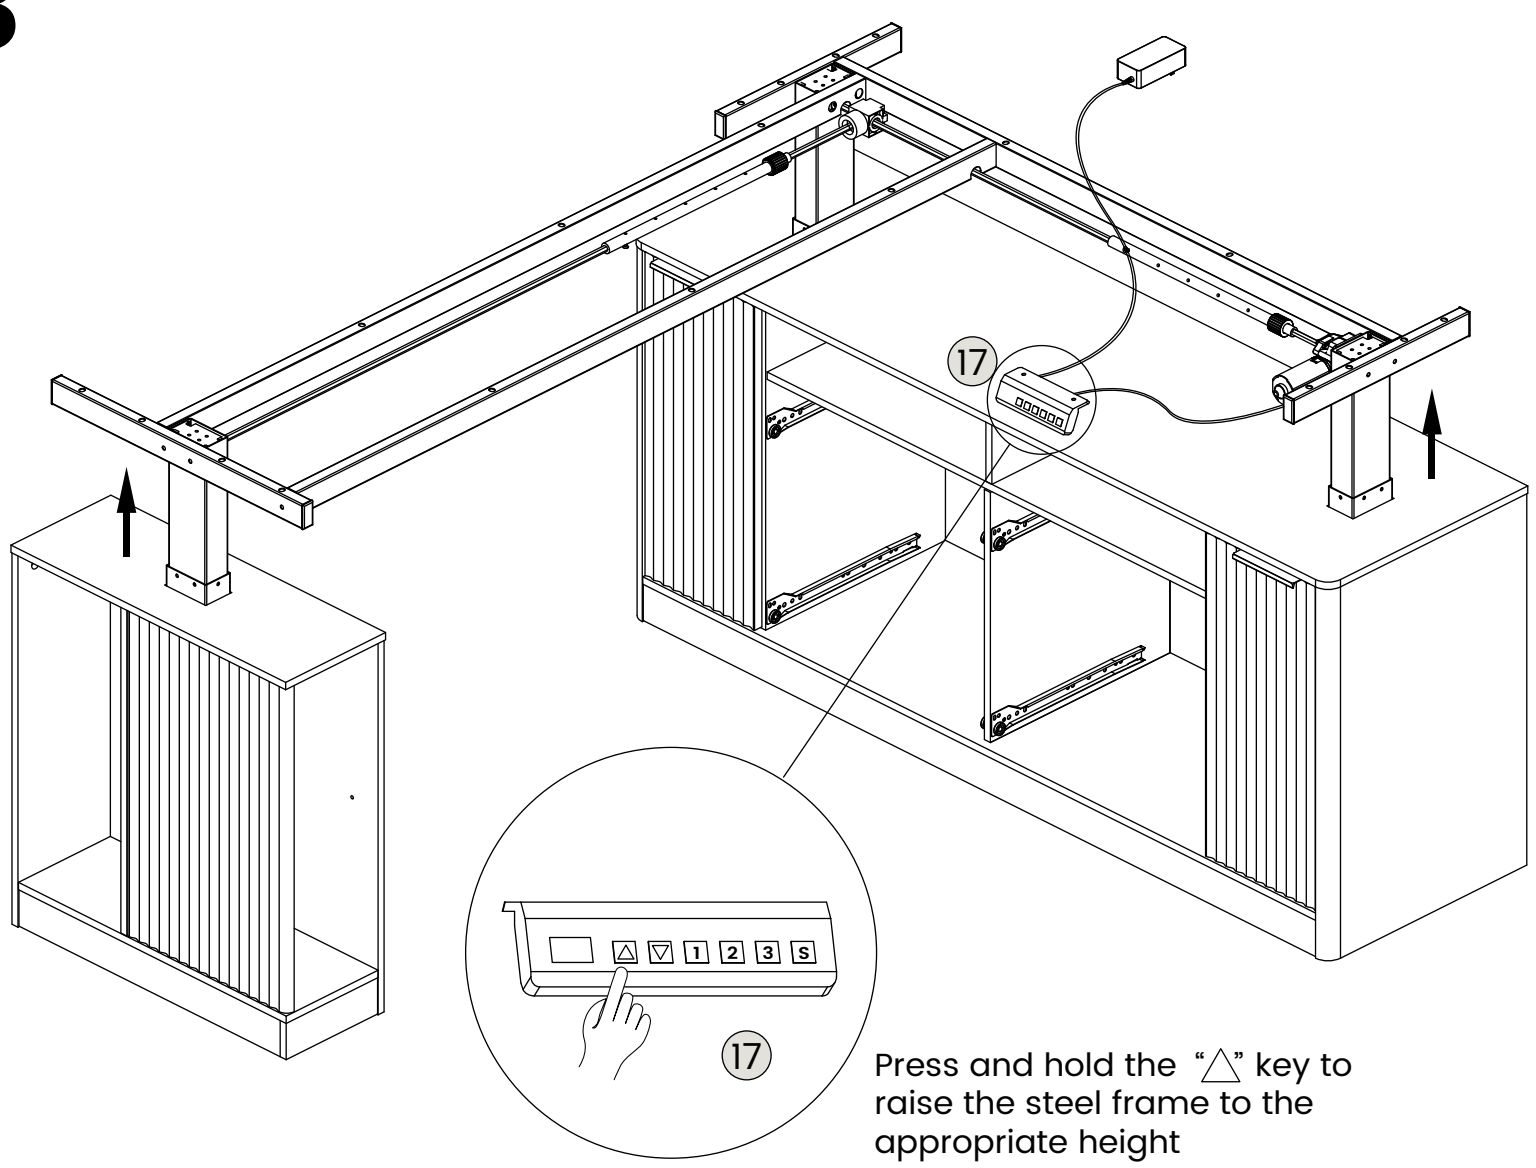


Press and hold the "△" key to
raise the steel frame to the
appropriate height

Assembly Instruction

54

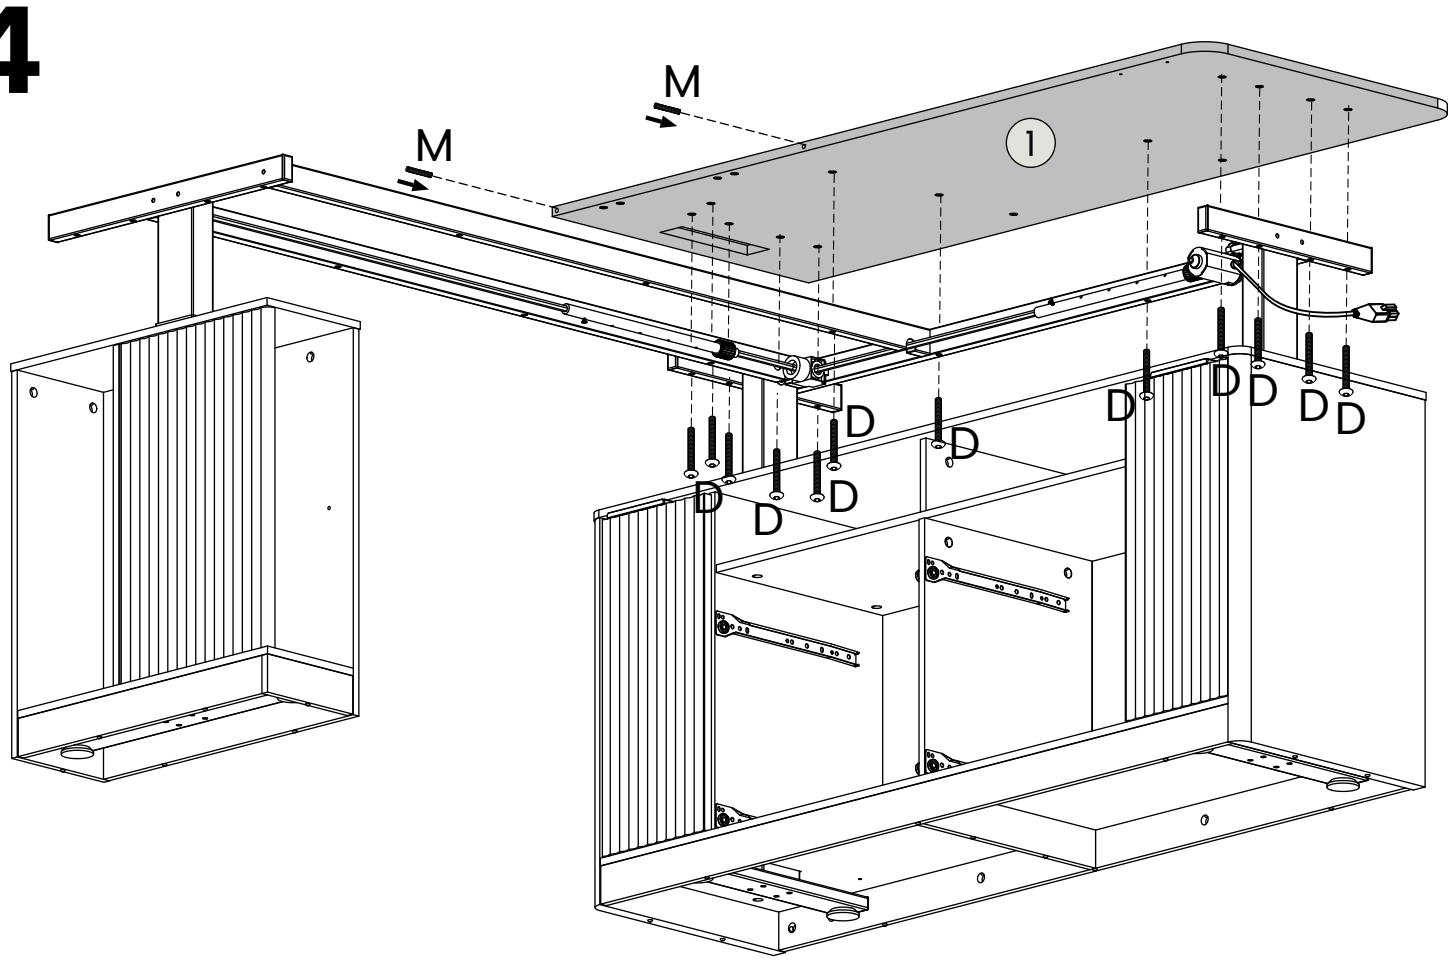

D x12




M6X48MM

M x2




Ø6x30MM




55

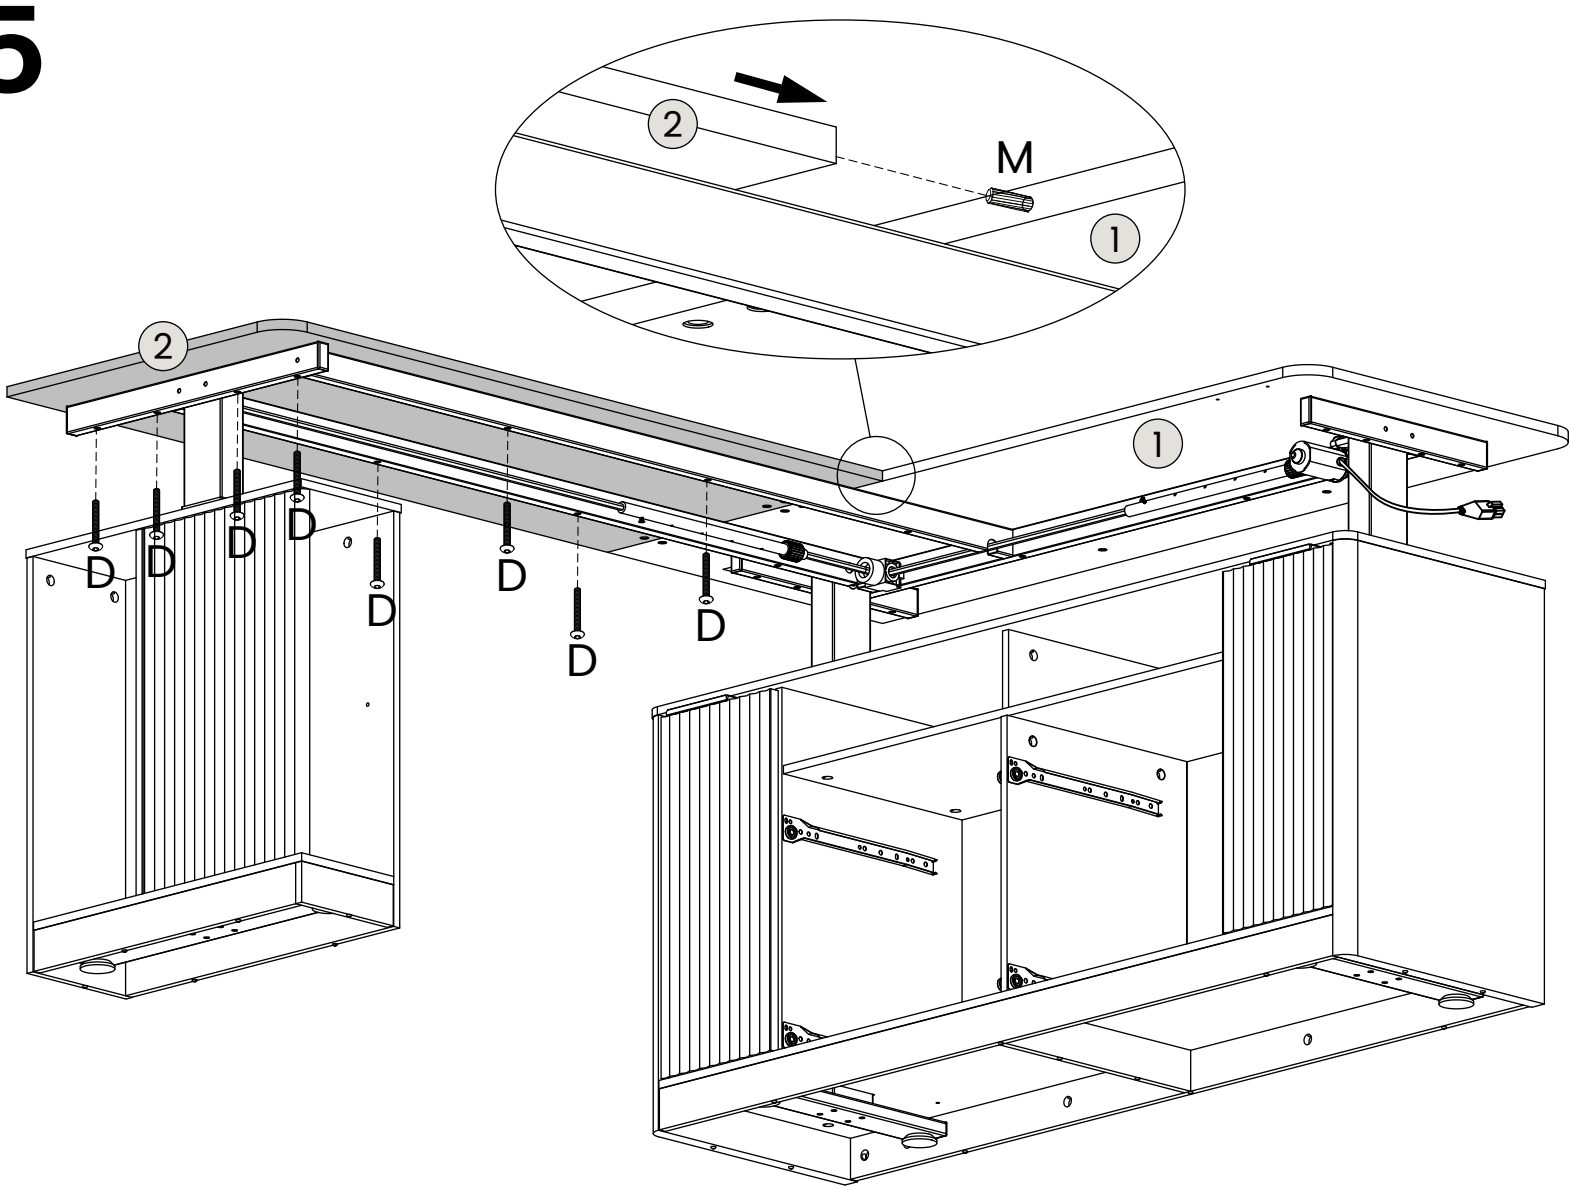

D x8




M6X48MM

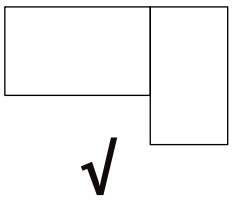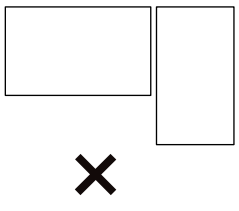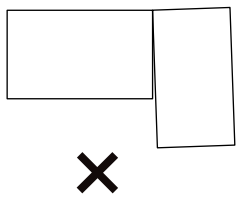
 √ Install correctly	 × Installation with gaps	 × Installation skewed

Assembly Instruction

56

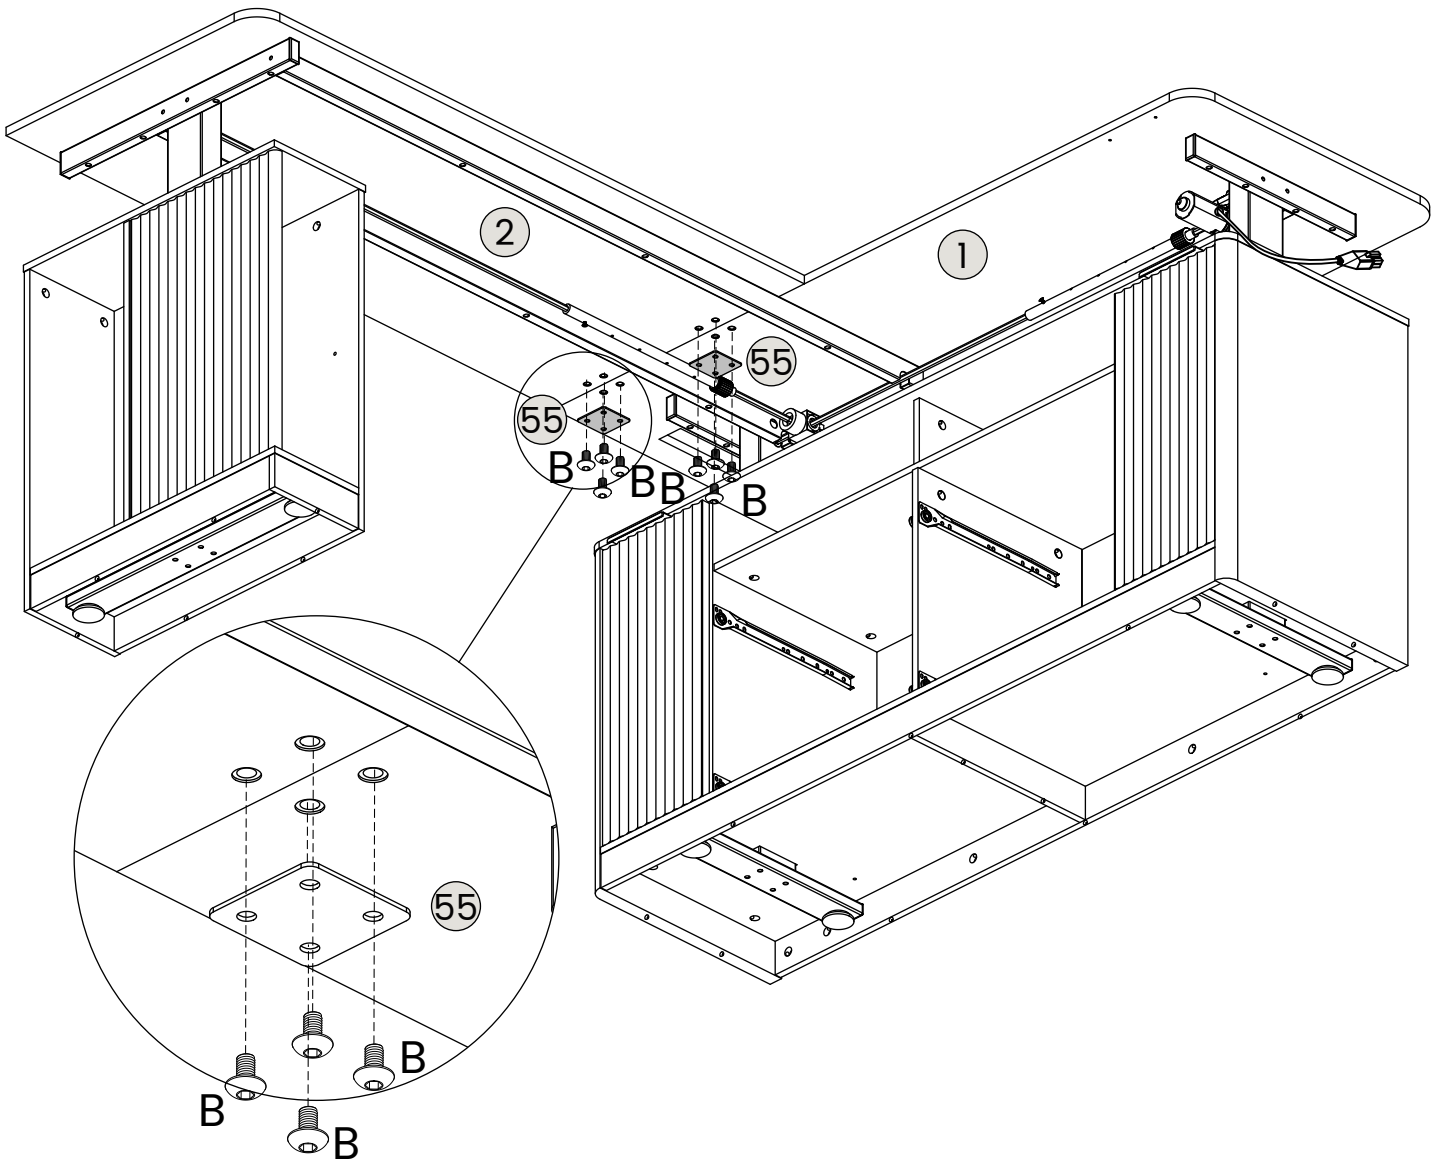


B x8




M6X10MM

57

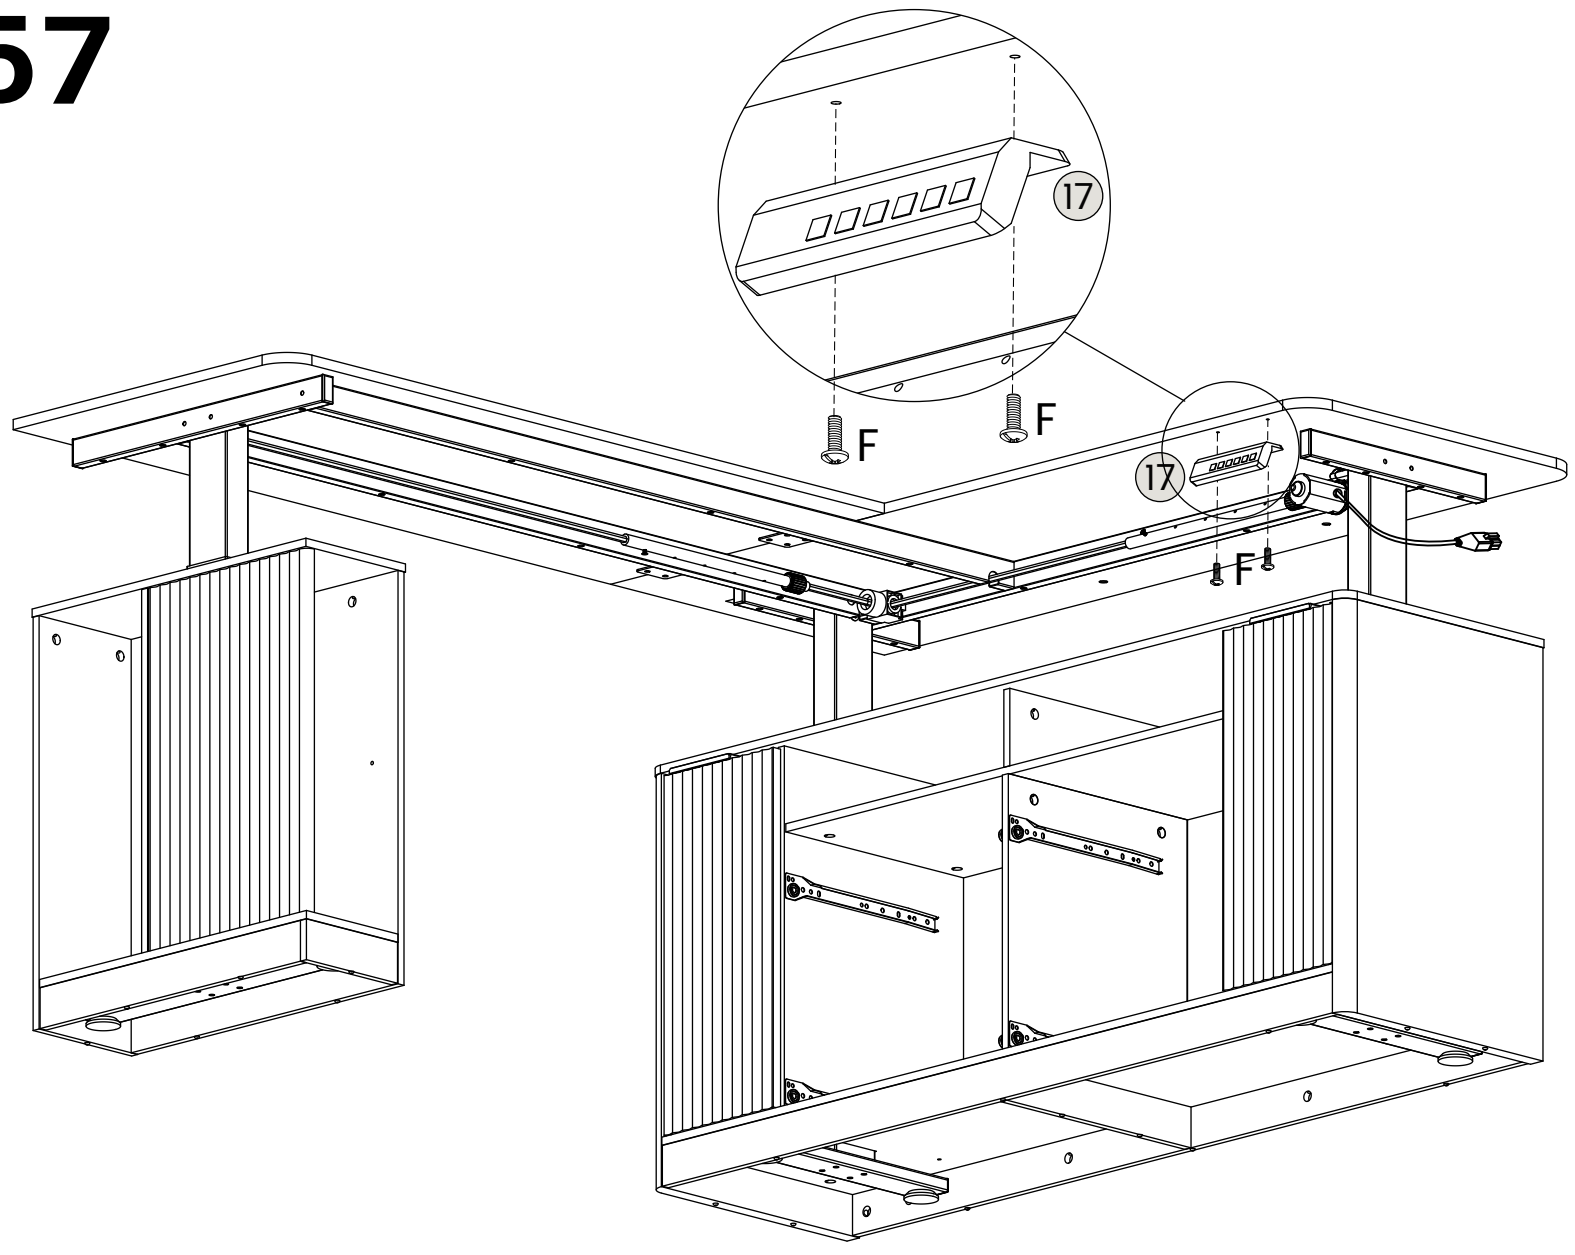


F x2




M4X12MM

Assembly Instruction

58

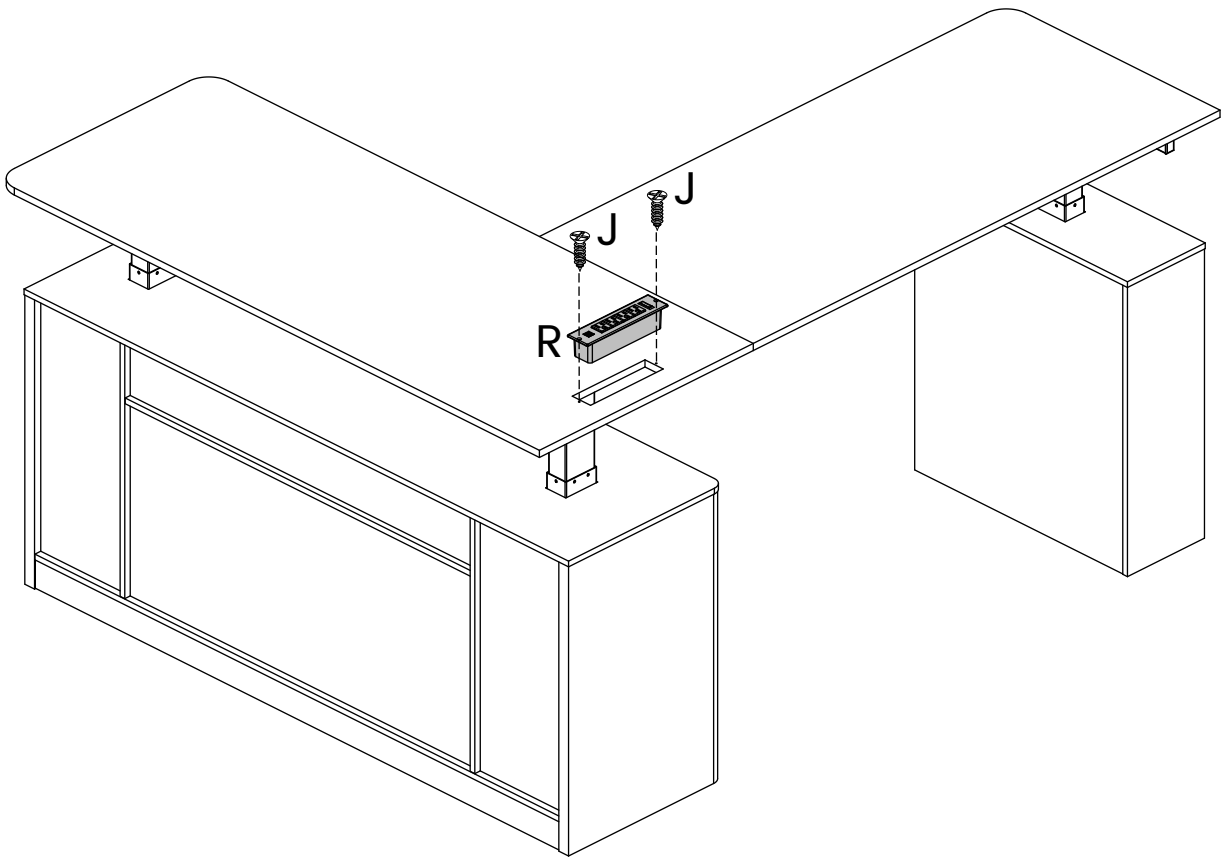


J x2



ST4X12MM


R x1

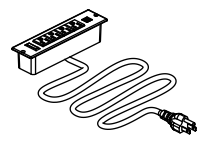

59


W x4



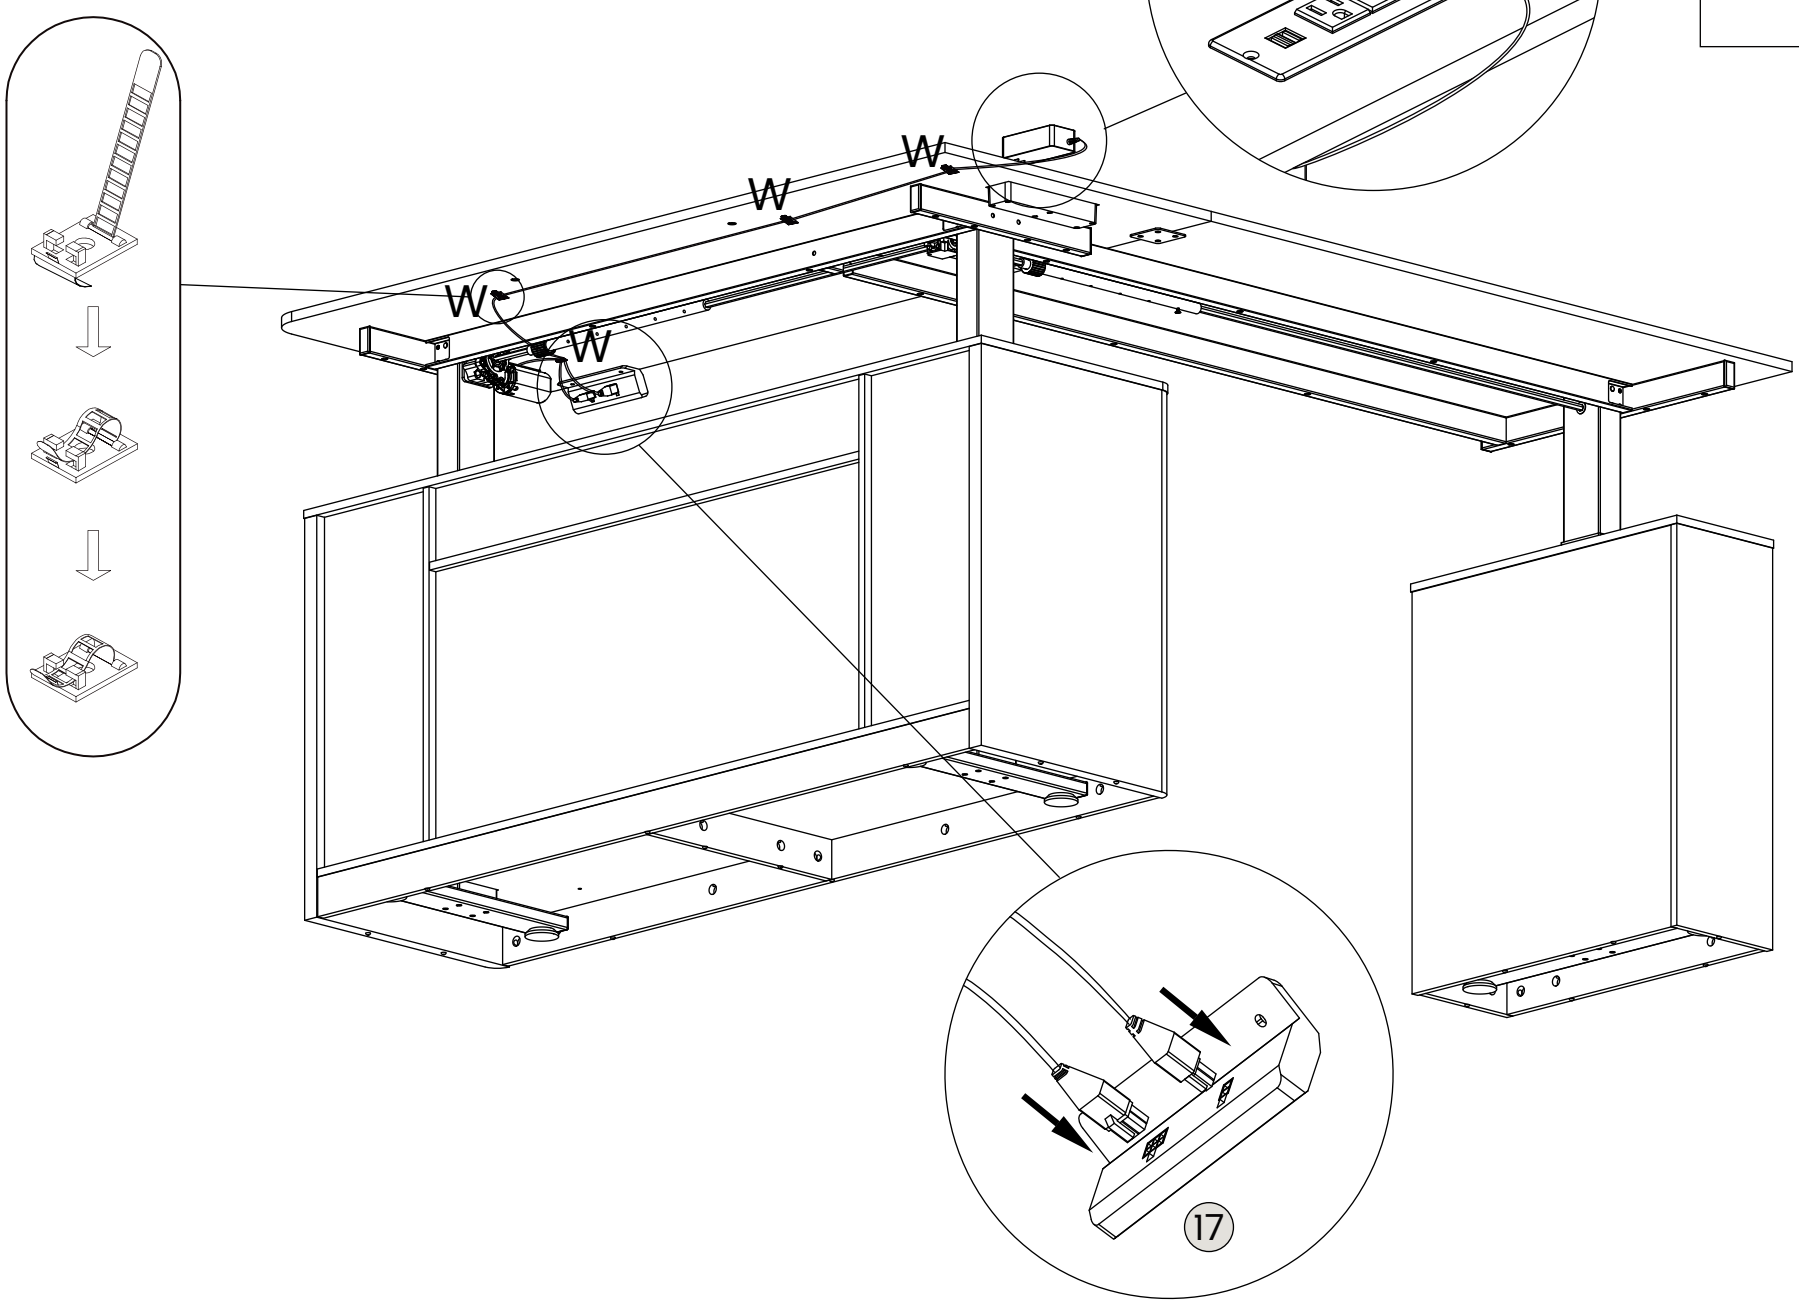


Assembly Instruction

60

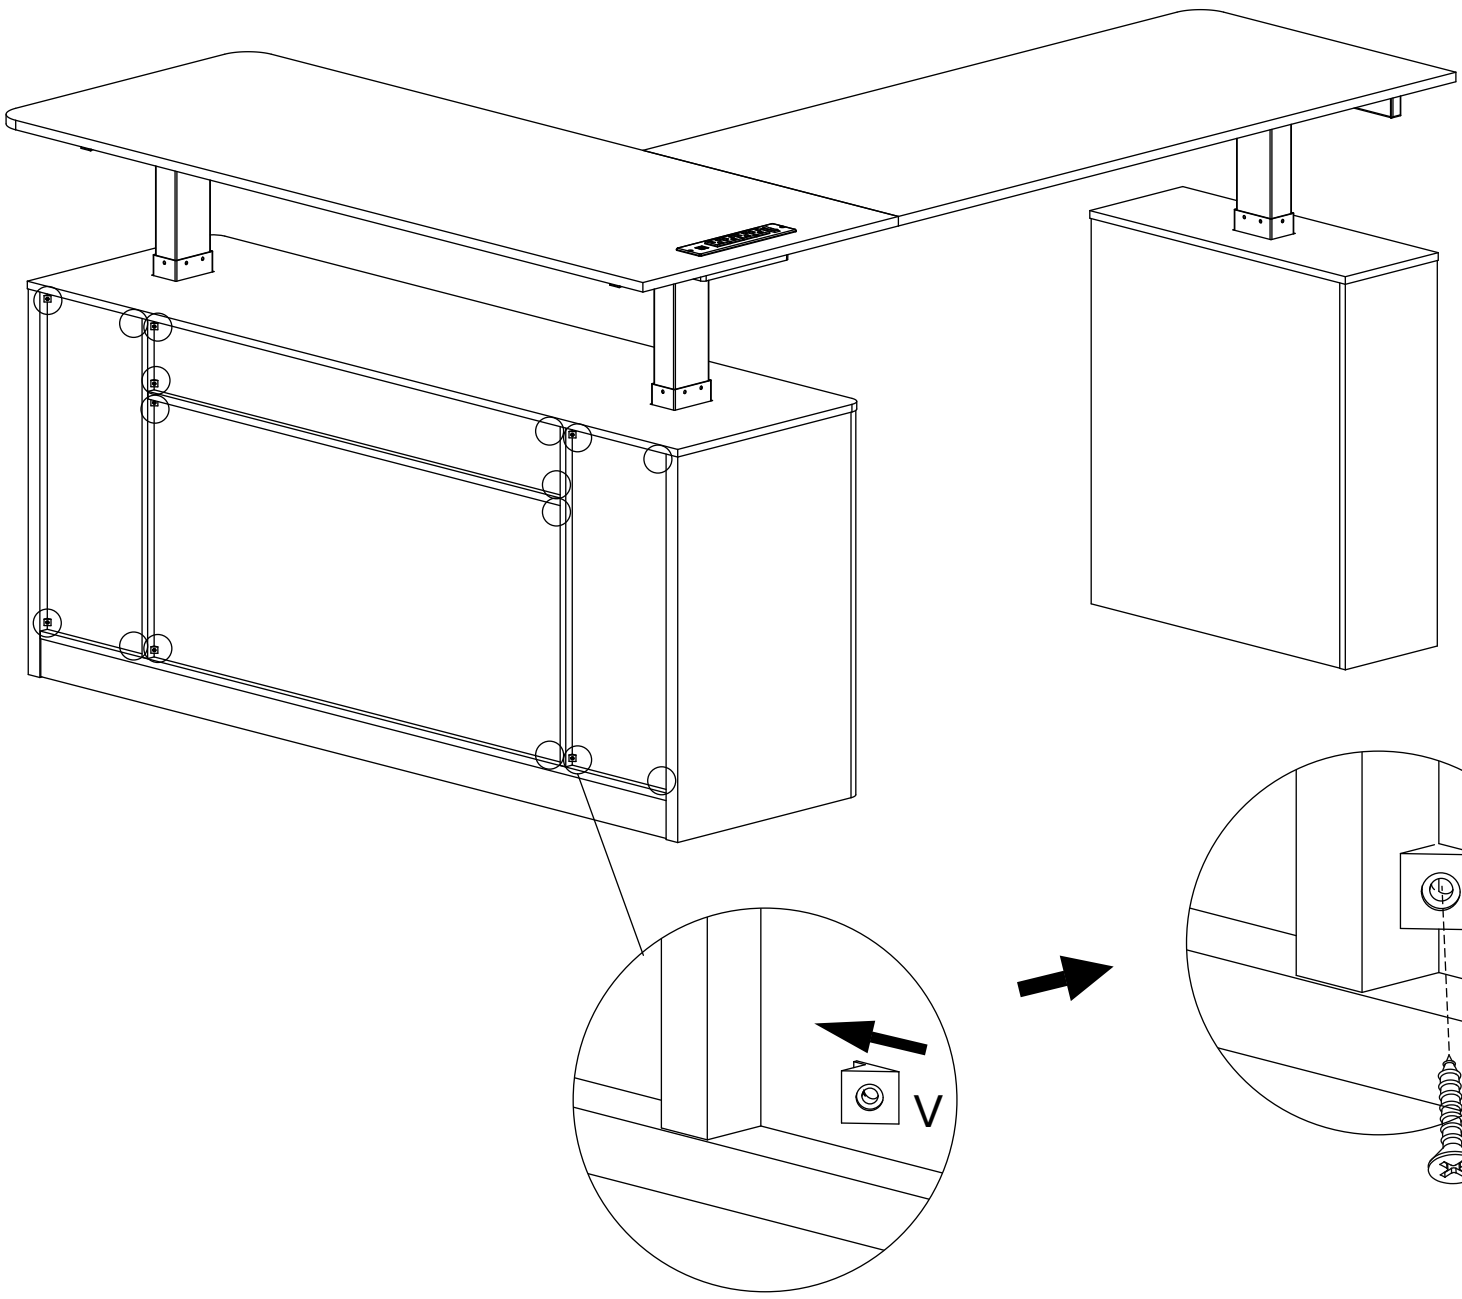


K x16




ST4x14MM

V x16

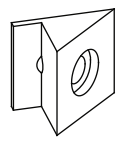


61

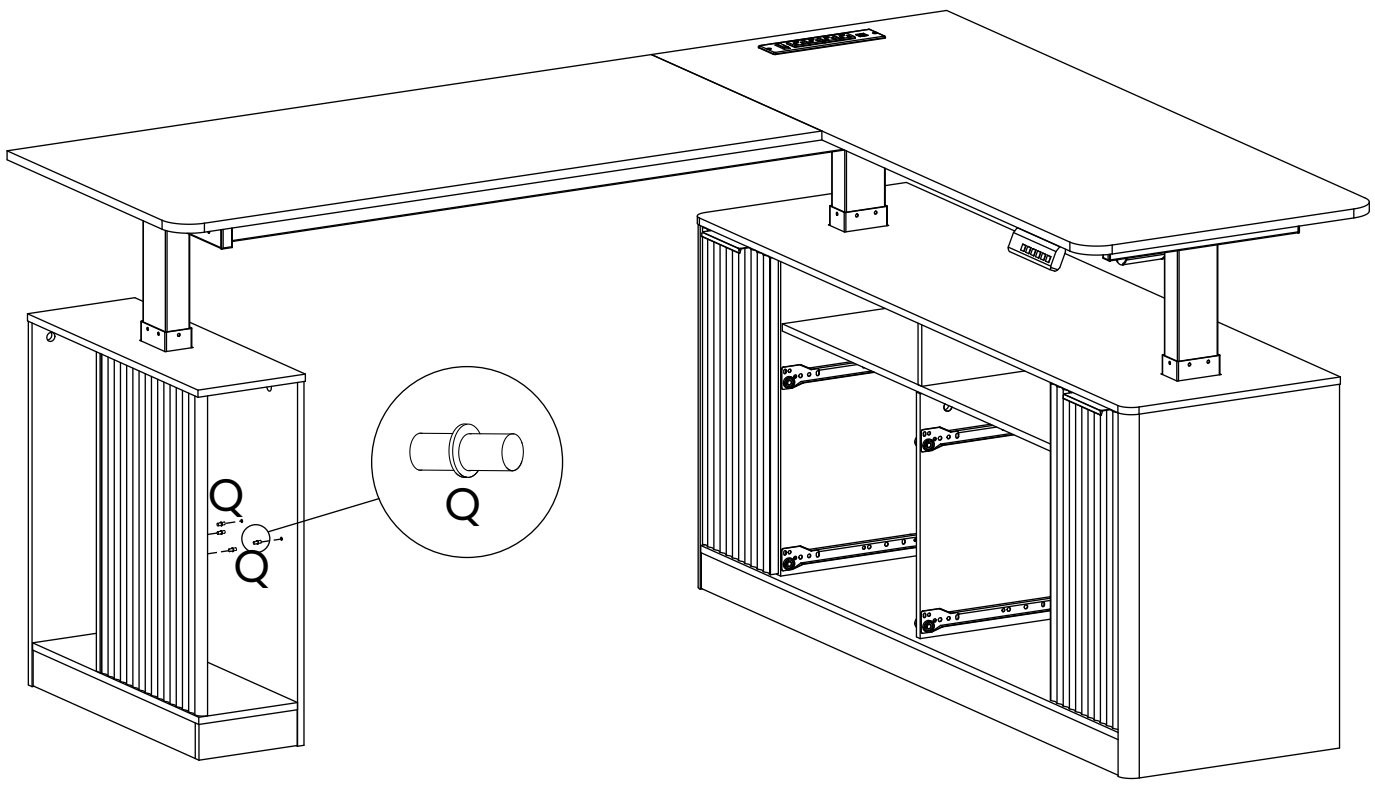

Q x4


Ø5


62

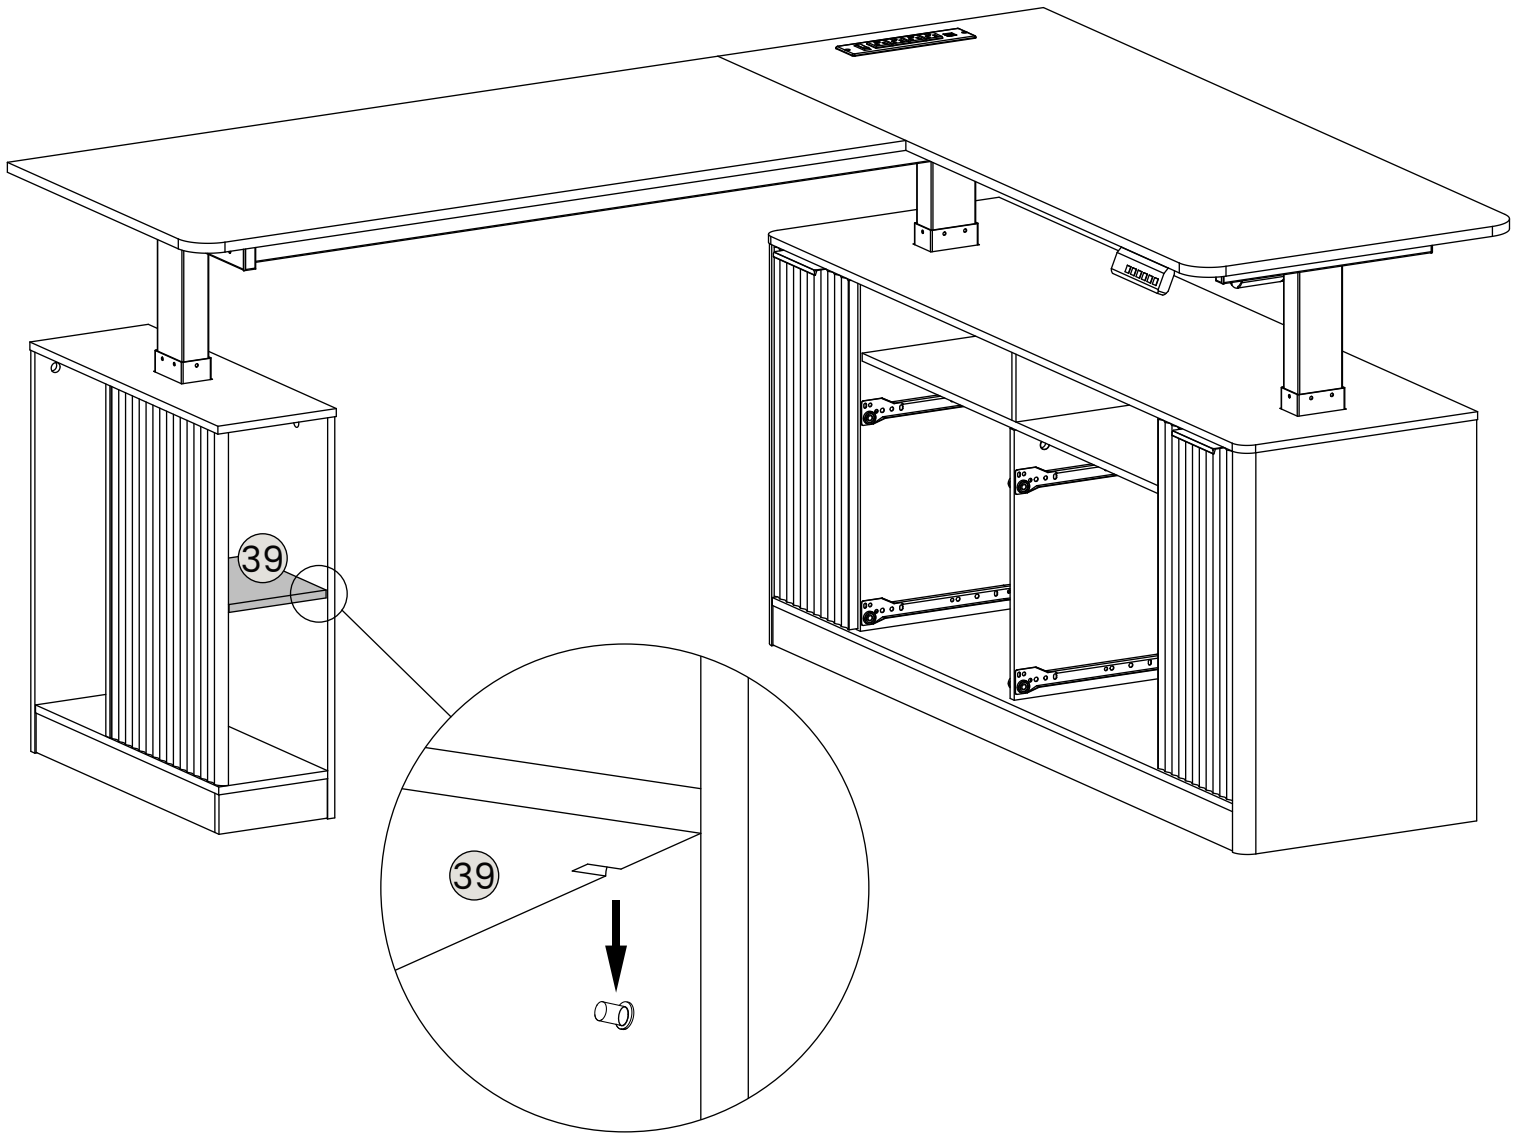


63

O x16



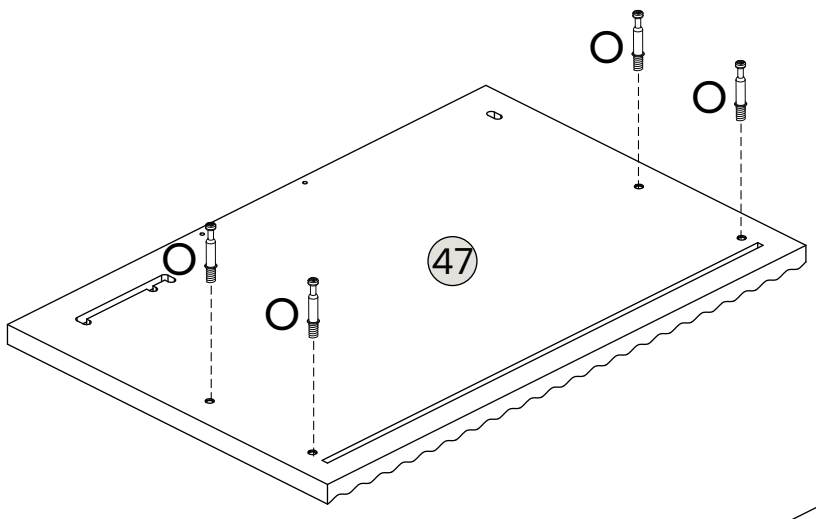

X2

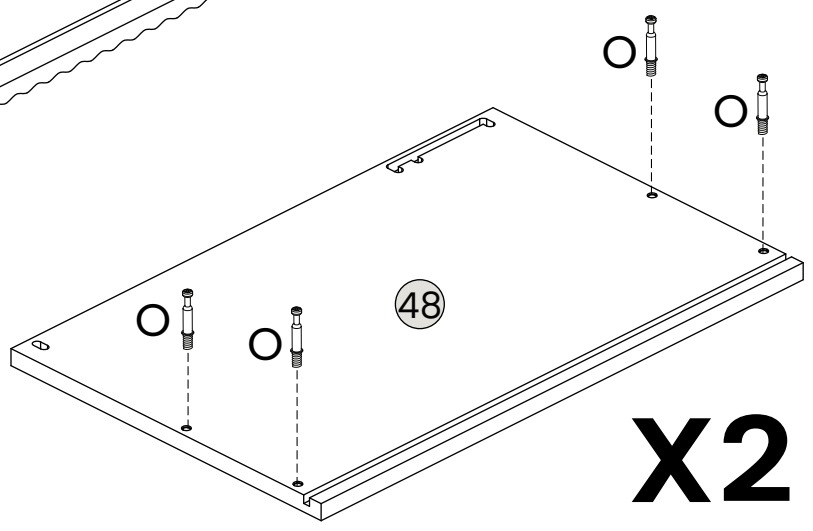



X2

Assembly Instruction

64

O x16

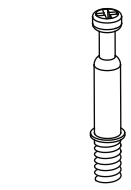

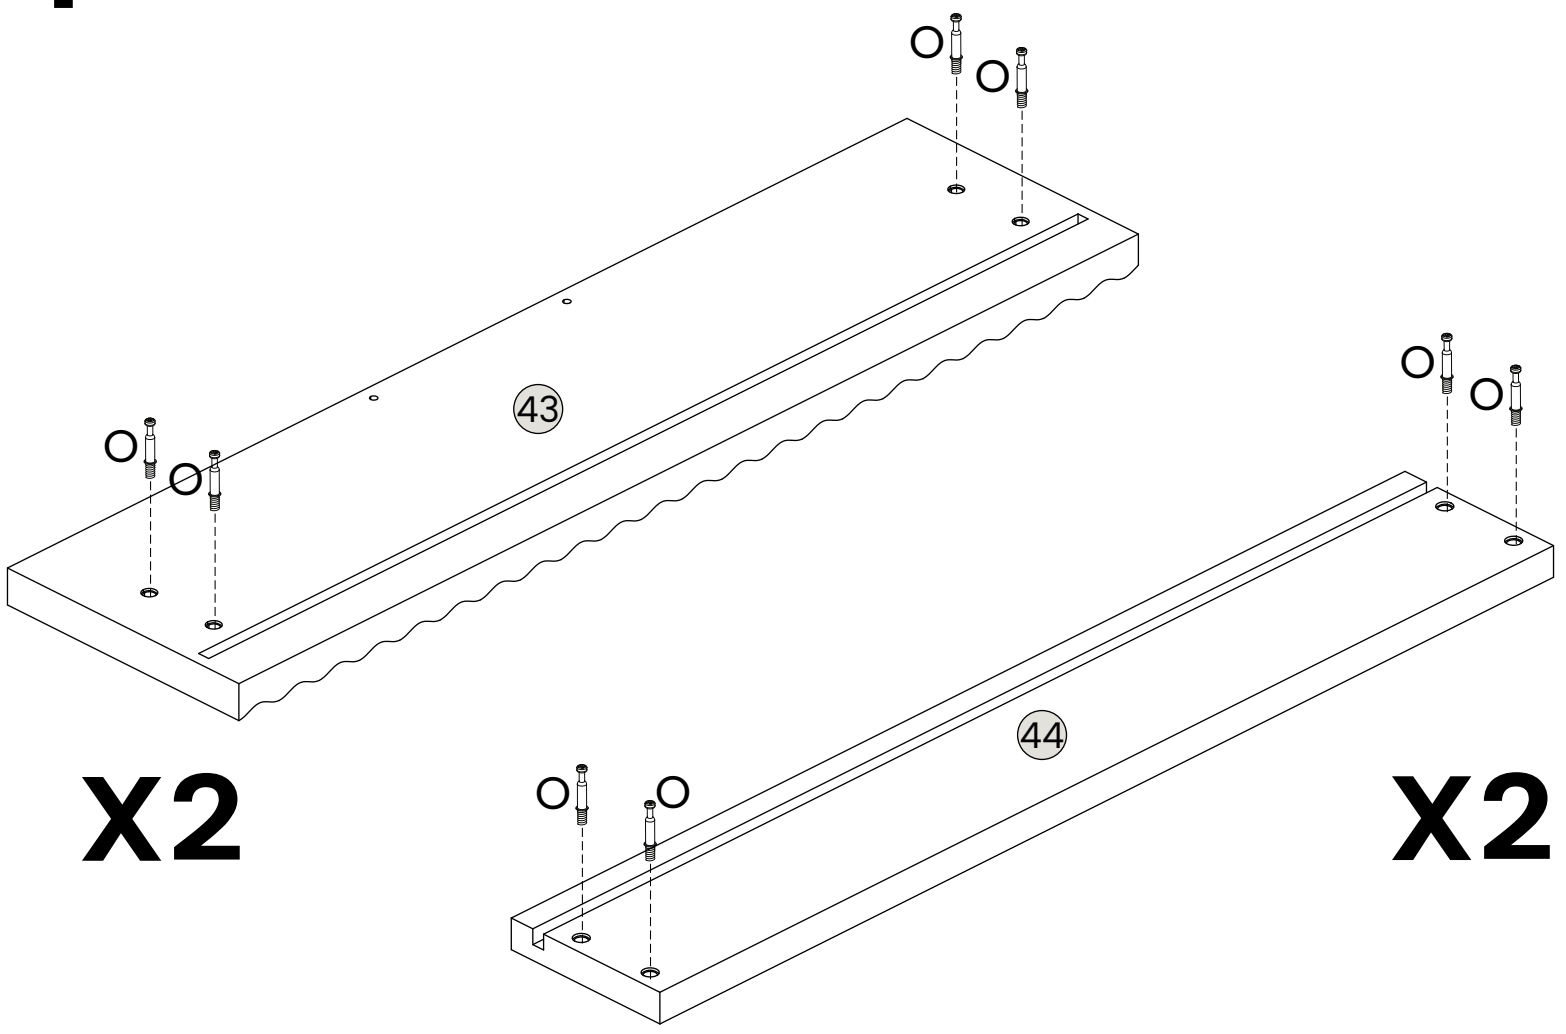


X2

X2

65

P x16

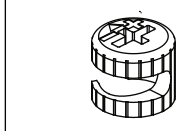


X2


X2

Assembly Instruction

66

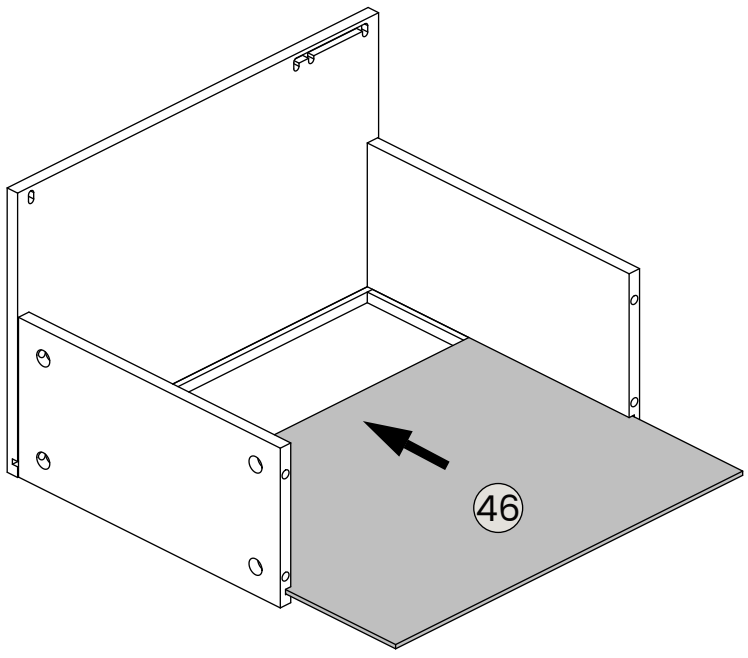

X2

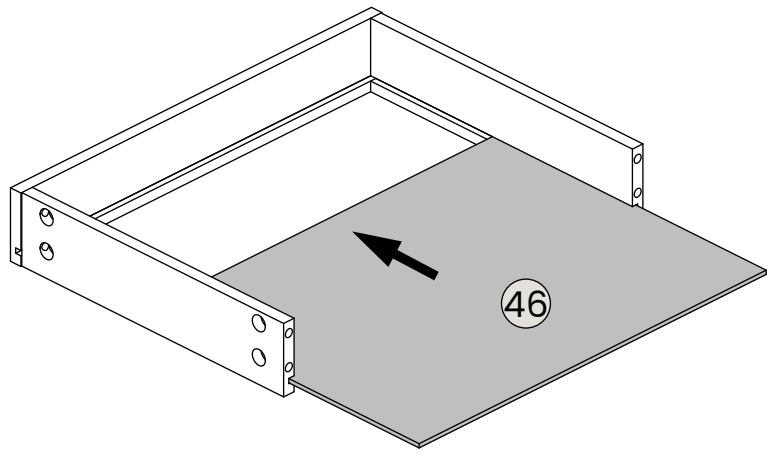


X2

67

P x16




X2

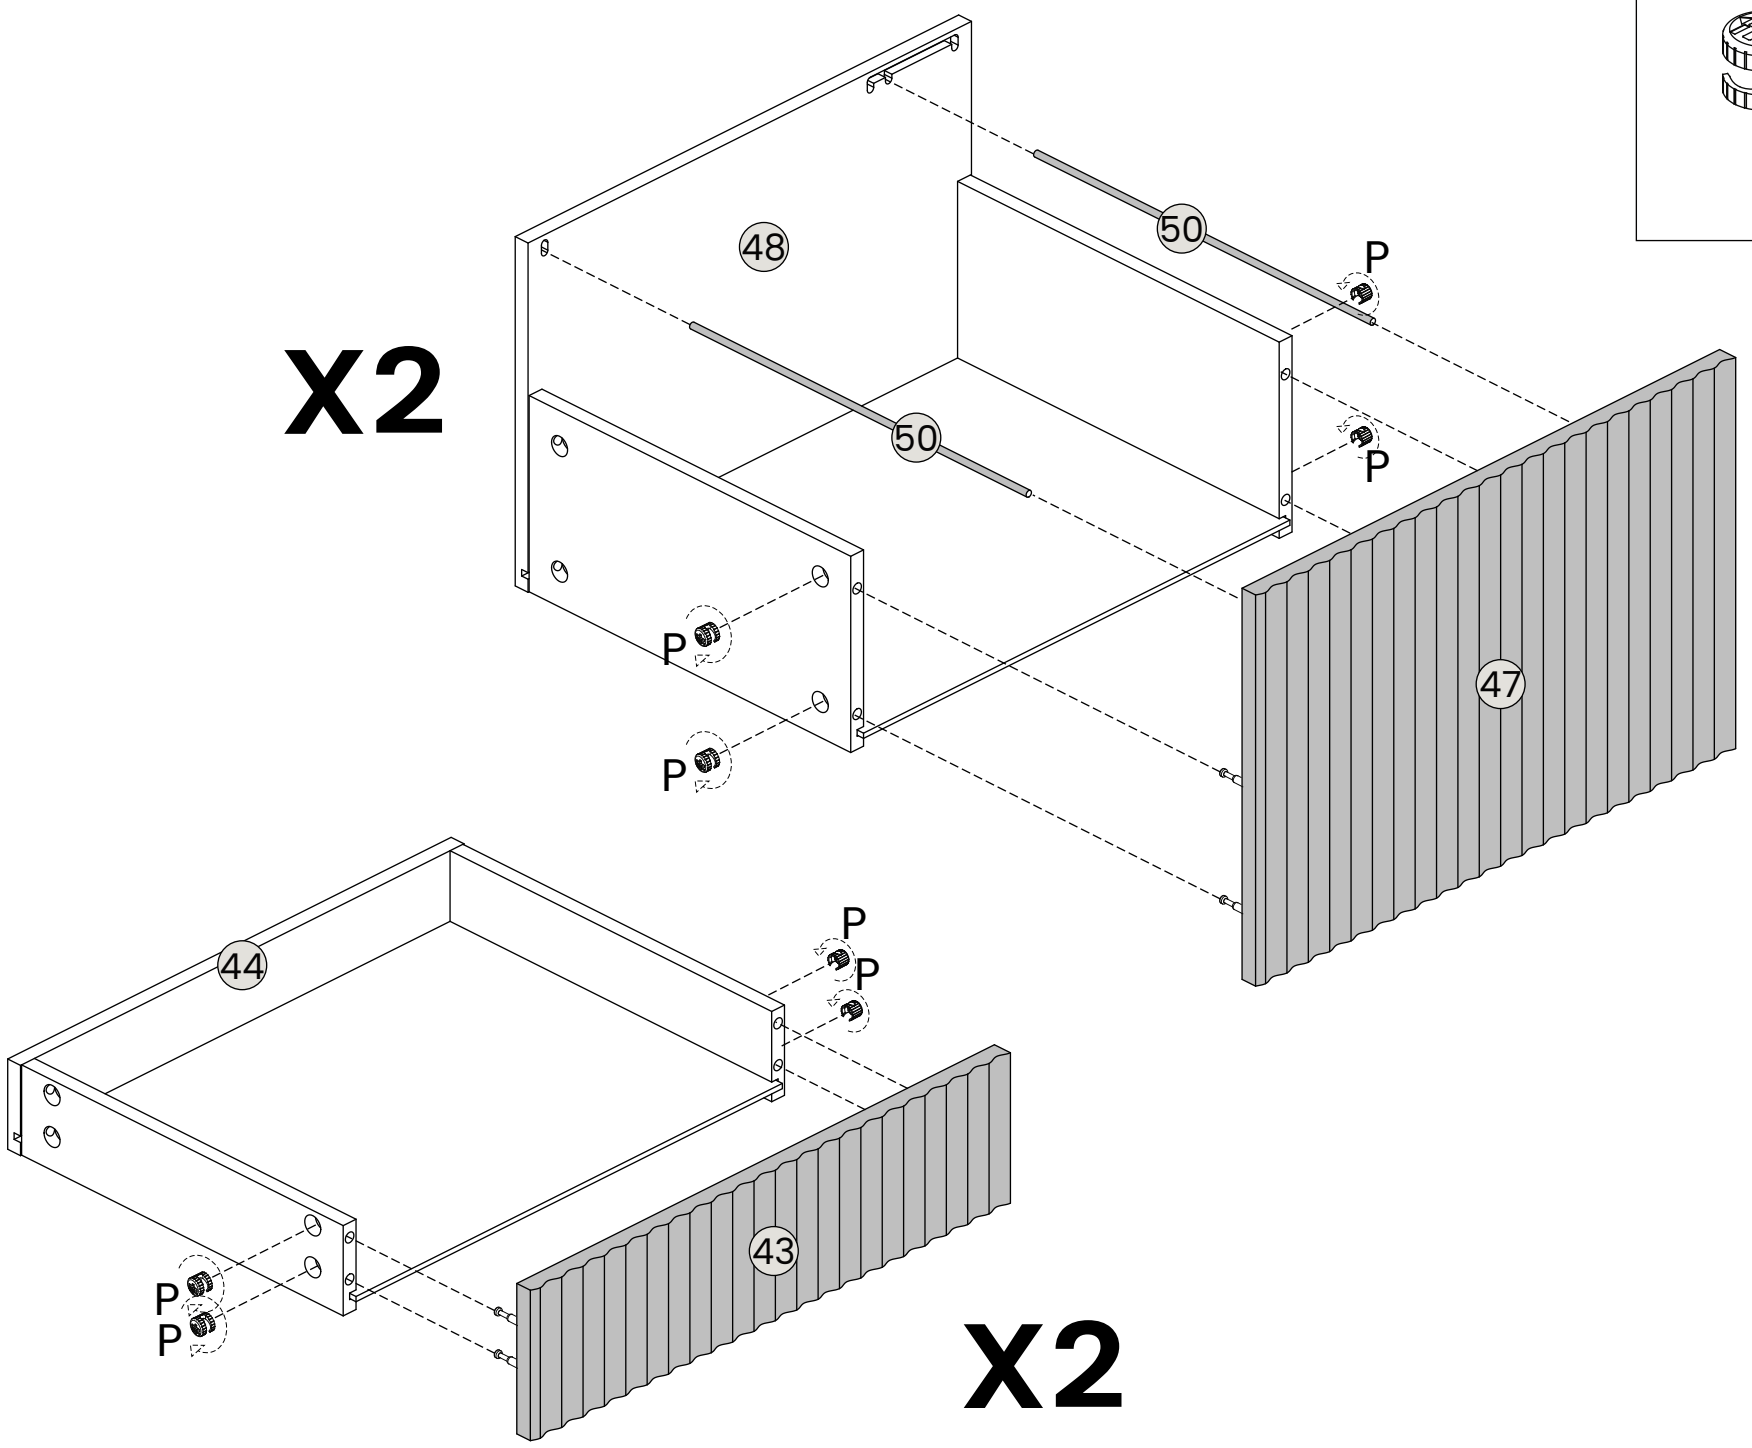


X2

Assembly Instruction

68

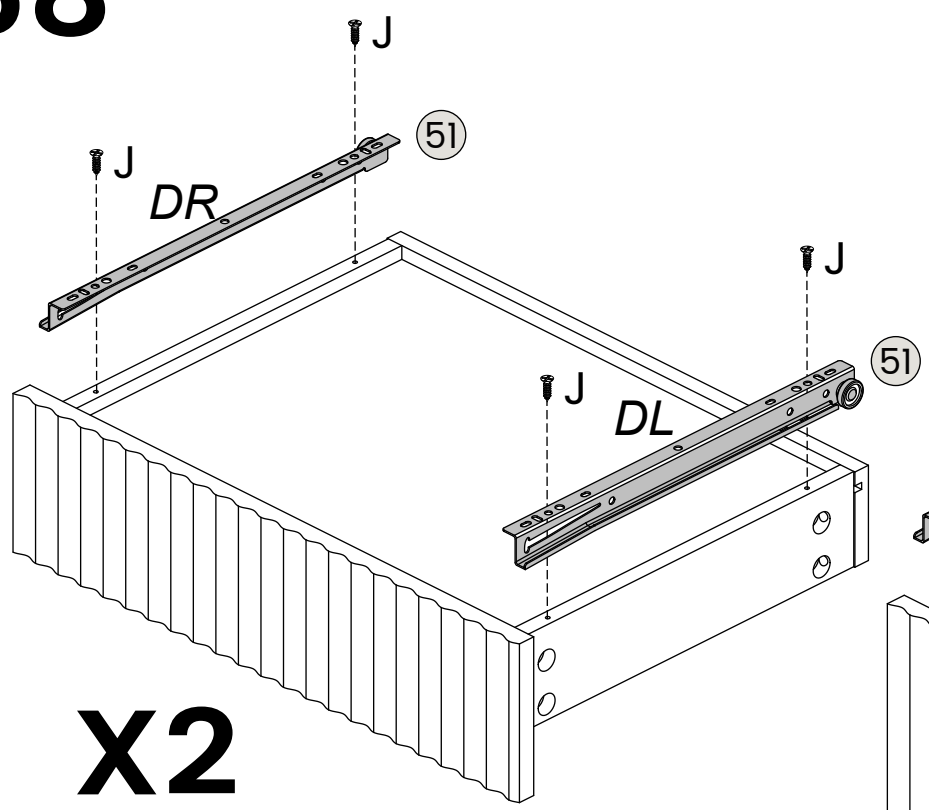


X2

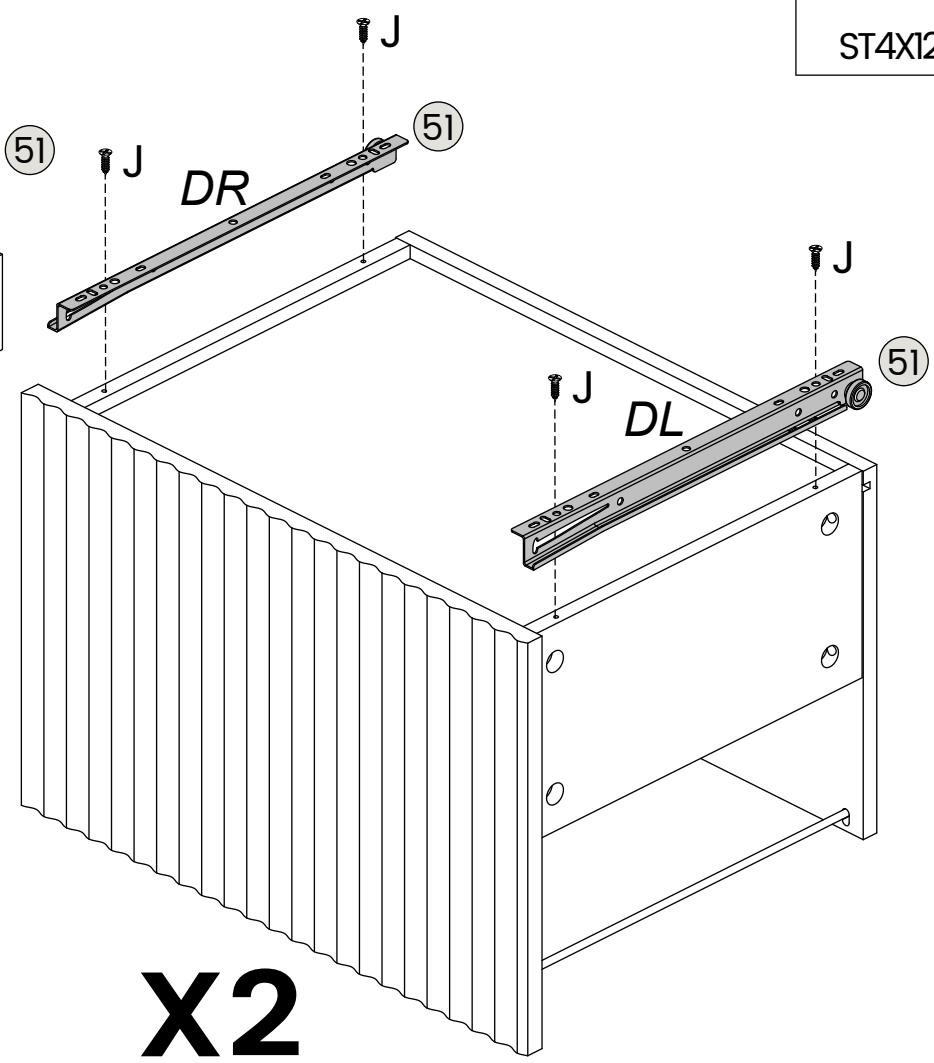


X2


J x16




ST4X12MM

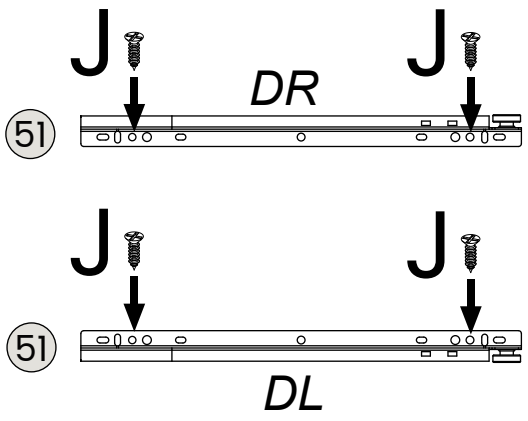

69

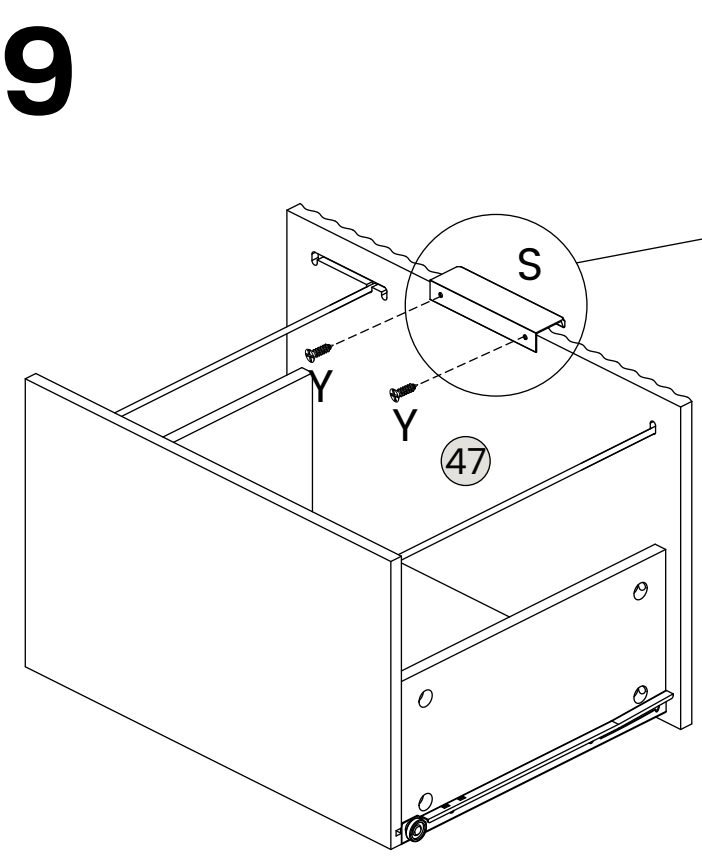


X2

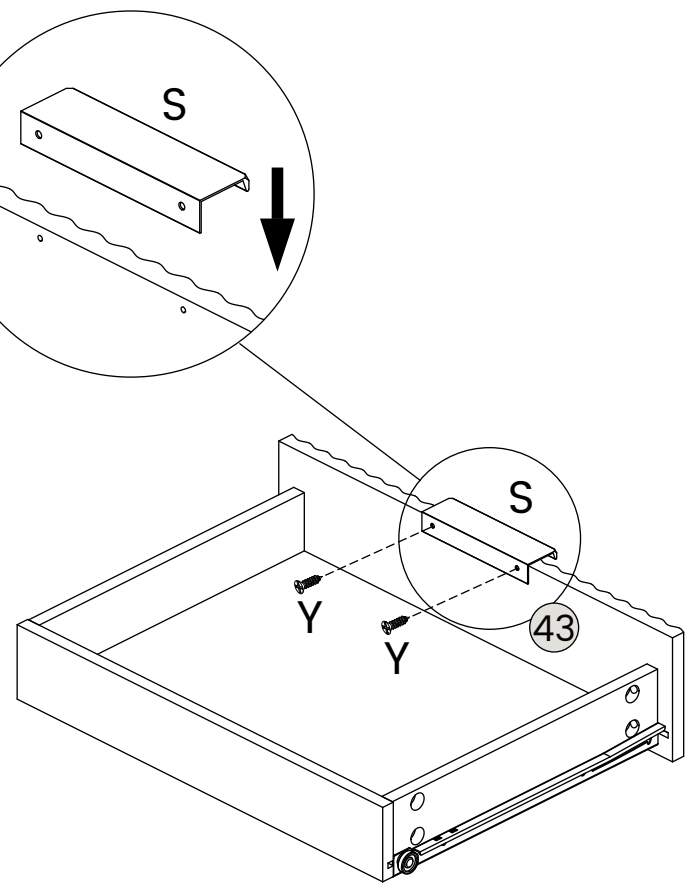


X2

Y x8




ST3X12MM

S x4




70

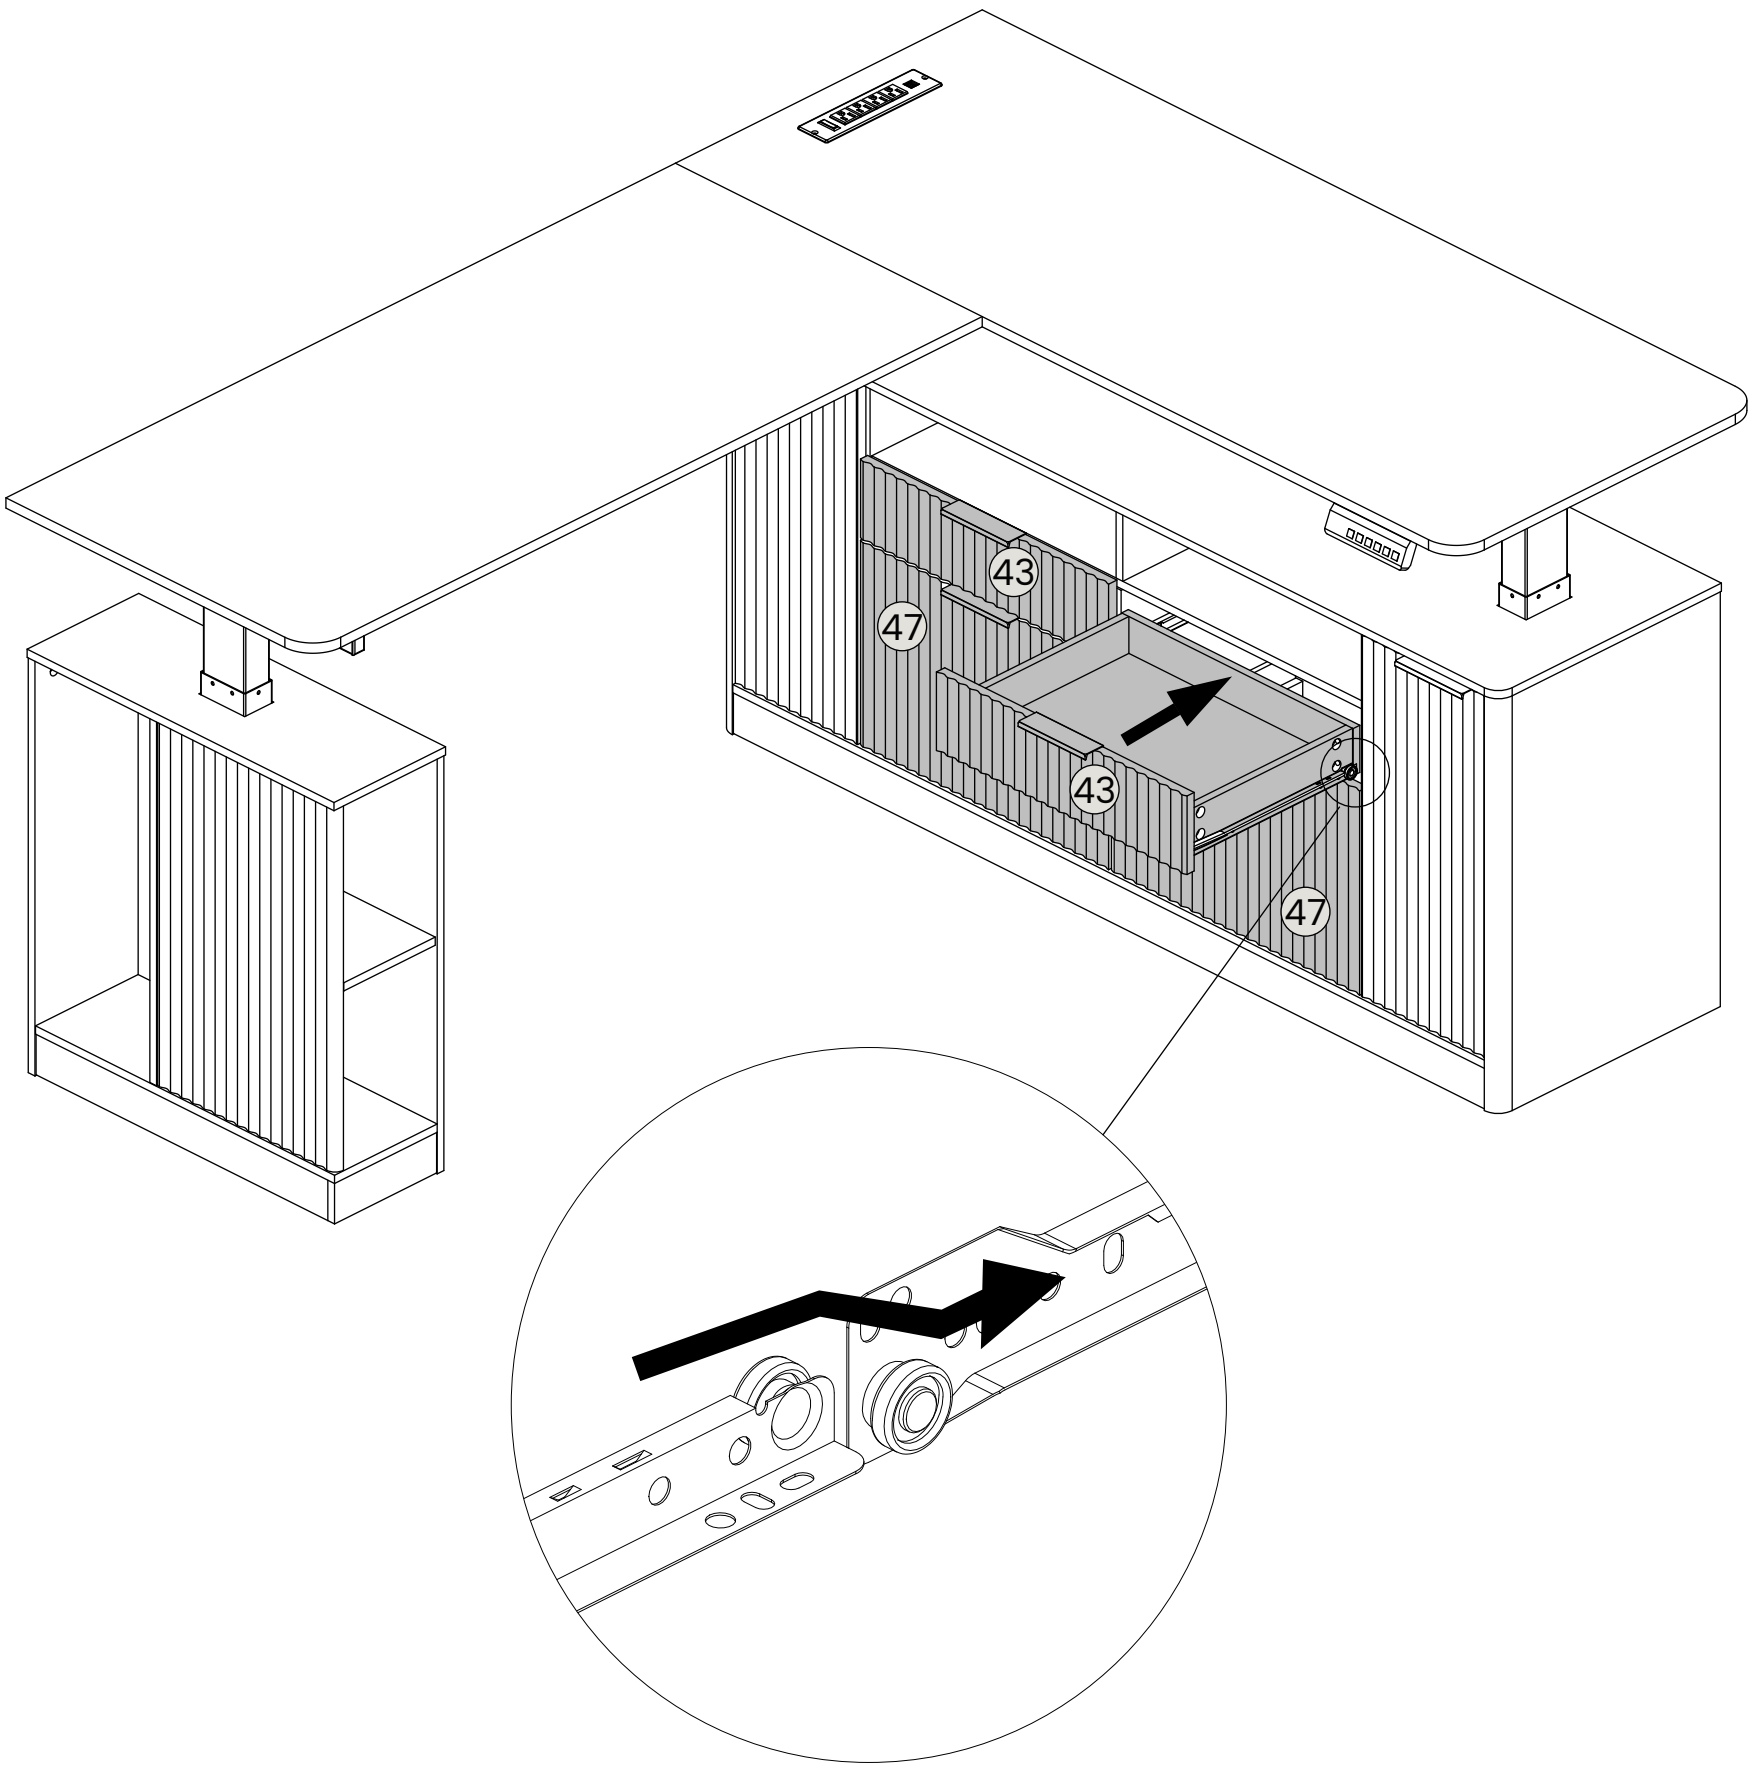


Assembly Instruction

71

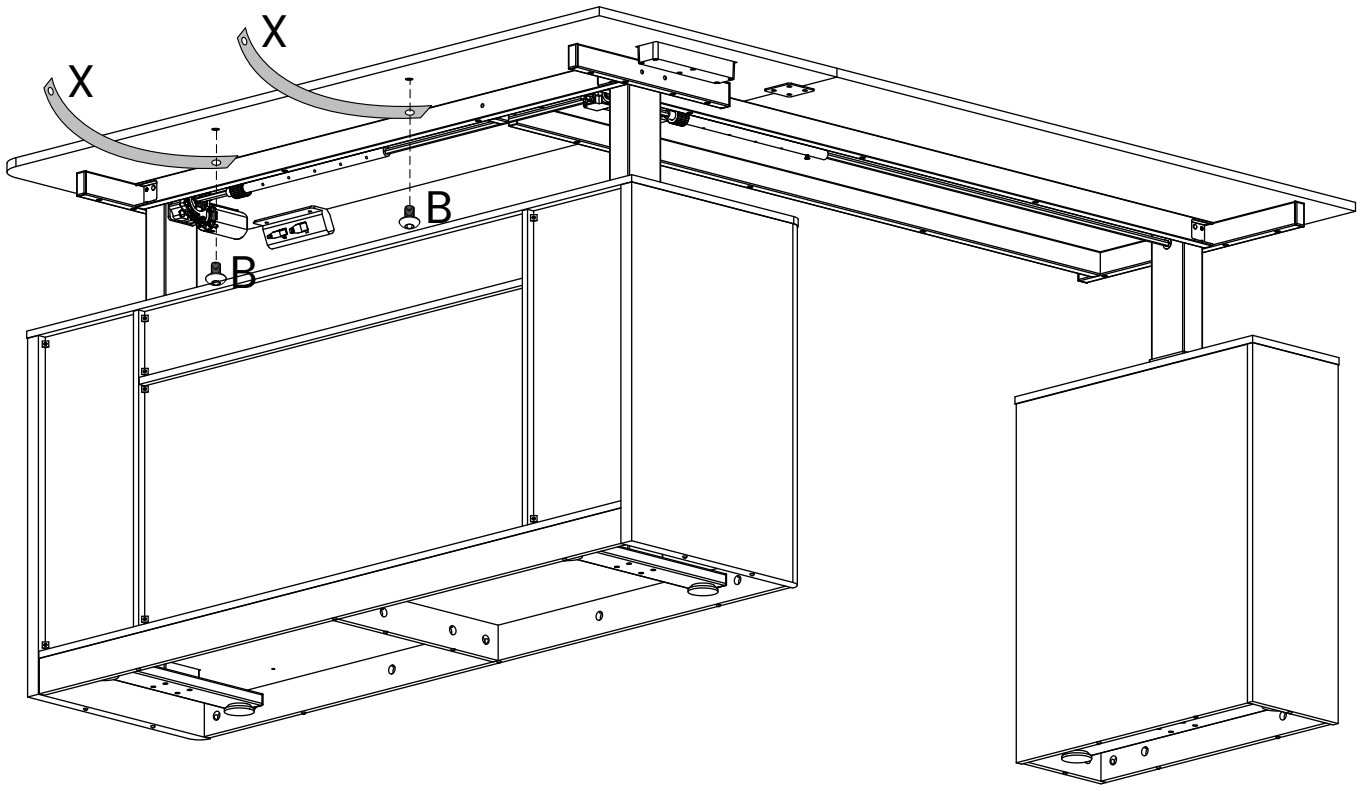


B x2




M6X10MM

X x2

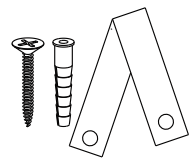

72


1

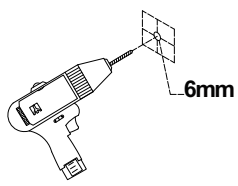

2


3



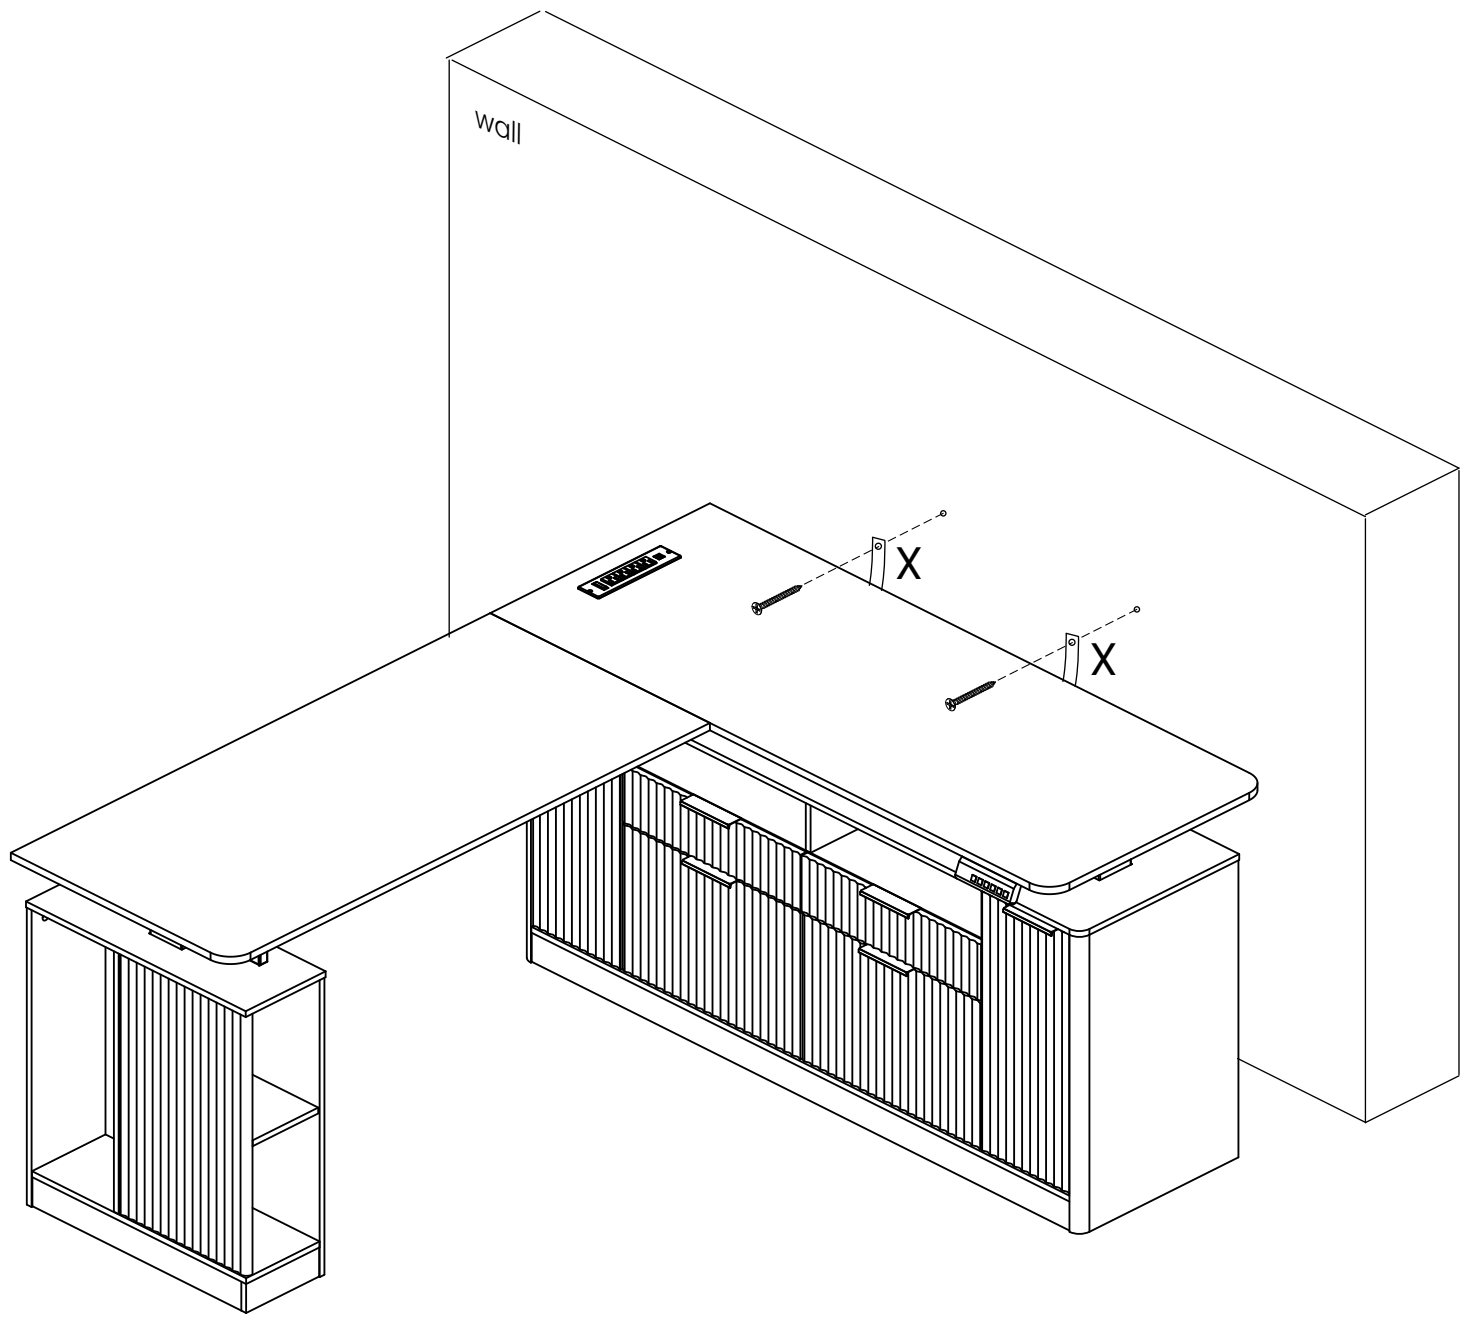

Assembly Instruction

Instructions for using the hand controller

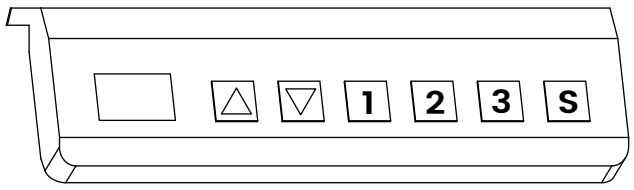

△	Up arrow key, adjust the standing desk to move upwards
▽	Press the down arrow to adjust the height of the standing desk to move upwards
1	Memory key 1, the first height saved by the user
2	Memory key 2, the second height saved by the user
3	Memory key 3, the third height saved by the user
S	Set key, used by users to set parameters

Table lifting and lowering

- Just hold down the "△" or "▽" key to control the height-adjustable table to rise or fall.
- Press and hold the "△" key to control the height-adjustable table to rise, and you can see the increase in height (the displayed number) on the three-digit digital tube;Press and hold the "▽" key to control the descent of the height-adjustable table. You can see the decrease in height (the displayed number) on the three-digit digital tube.

The invocation and setting of memory height

On the height display interface, press the number keys to call up the corresponding height, and the height-adjustable table will automatically run to the corresponding position.

On the height display interface, briefly press the S key, and the height value will start to flash. At this point, press the number keys (1, 2, 3) to record the current height to the corresponding position. If the flashing display shows no number keys pressed within 6 seconds, the memory mode will be exited.

Screen-off wake-up

If there is no key operation for a long time, the digital tube will automatically turn off. At this time, pressing any key will light up the digital tube.

Parameter setting

01 After holding down the S key for 3 seconds, the digital tube will display "S--" and start flashing.

02 Press the S key again to enter the Settings mode, and the function names will be displayed. The functions for which parameters can be set include:

- The display Unit for table height: Unit (Un);
- The Force of Collision protection: Collision Force (CF);

The functions of each key in the setting mode:

1	The back key can be used to go back to the previous level of the menu
△ ▽	Option switching
S	Confirmation key (Confirm entry to the next-level menu of the current interface or confirm selection of the current parameter item)

If no key is pressed within 20 seconds, exit the Settings mode

Assembly Instruction

Main menu interface	Submenu interface	Description
Un Unit	SI SI Metric	After entering, the height unit value set last time will be displayed. The "△" and "▽" keys can be used to flip In the options (SI, In). After selection, press the S key to save the current option value and keep the current option displayed for 2 seconds before exiting the setting mode.
	In Inch	
CF Collision Force	OFF off	After entering, the last set collision force level will be displayed. The "△" and "▽" keys can be used to flip among the options (Off, L, N, H). After selection, press the S key to save the current option value and keep the current option displayed for 2 seconds before exiting the setting mode.
	L Light	
	n Normal	
	H Heavy	

Protection and Alarm


Display	Display	Method
E02	Problem	When the desktop vibrates, is hit or tilts during movement, an alarm will sound and the movement will stop immediately. The reverse movement will be automatically released after setting the distance, or any key can be pressed during the reverse operation to stop and release it. It is necessary to check and ensure that the table does not vibrate significantly, hit obstacles or tilt during operation before running.
Hot	Overheat protection	Continuous long-term operation may activate this protection. Power on again or wait for at least 15 minutes before use.
E10	Motor abnormal protection	The power should be cut off. Recheck and ensure that the connection between the motor and the controller is reliable, and then reconnect the power.
E20	Overload protection	If this alarm occurs when running upward, some heavy objects on the table should be removed before running again. If this alarm occurs when running downward, power should be cut off, some heavy objects on the table removed, and then power should be restored.
E31	Under-voltage protection	The power should be cut off. Recheck and ensure that the connection between the power supply and the controller is reliable, and then reconnect the power.
E32	Overvoltage protection	The power should be cut off. Recheck and ensure that the connection between the power supply and the controller is reliable, and then reconnect the power.
Trip reset		When in the "E10, E20" alarm state or after reaching the lowest height position, hold down the key for 3 seconds. After the display (Reset) is shown, release it. The height-adjustable table will start to move downward to the bottom and rebound to a certain height. Once the reset is completed, the lowest height will be displayed.

Customer Service



3-years Warranty

We guarantee your product is free from defects in product materia and workmanship for three(3) years starting from the date of purchase during normal use of household conditions.If your appliance fails to operate properly within our warranty period,We will send the corresponding accessories,Replacement is free and all shipping costs are covered

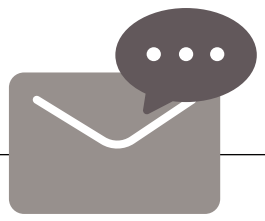

Quick Response within 24 Hours

If you are still unable to resolve the issue, please contact us through the Amazon order page for customer support. Whether the product has been installed or not, our customer support team will respond within 24 hours and assist you promptly.

Problems You May Encounter

Part	Problem	Solution
Cloth drawers	Why use cloth drawers	1. Reducing tree extraction is more environmentally friendly 2. More convenient to use and assemble 3. Reduced the thickness of the side panel, resulting in a larger actual storage space
Whole Produc	Parts are missing, defective or having wrong parts in package	You can contact us and we will get back to you within 24 hours
	Having issue(s) while reading the instruction or completing the assembly	Feel free to contact us and we will get back to you within 24 hours
	Encountering non-human caused damage during usage	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution
Table Surface	Board surface is broken, scratched or lacks some screw holes	Feel free to contact us and we will get back to you within 24 hours
	The screw holes on the board and the steel frame don't line up	1. Please tighten the screws on the board by 70%, do not tighten completely 2. Adjust board and steel frame until the screw holes are lined up, then tighten all the screws
	The desk board is uneven or not tight, has gaps after being assembled	1. Loosen the screws in the uneven or gap positions; adjust until the desktops are flat and tight, then tighten the screws 2. If your problem still can't be solved, please feel free to contact us
Steel Frame	The steel frame is bent, broken, painted, rusted or damaged	Feel free to contact us and we will get back to you within 24 hours
	The table is unstable after being assembled	1. Check if the screws are tightened 2. Read through the manual, check if there are any parts installed incorrectly or missing assembly 3. If your problem still can't be solved, please feel free to contact us
	Encountering non-human caused damage during usage	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution

Thank you
for choosing our product

Made In China