

ASSEMBLY INSTRUCTIONS


V-WD26-1366


PF021

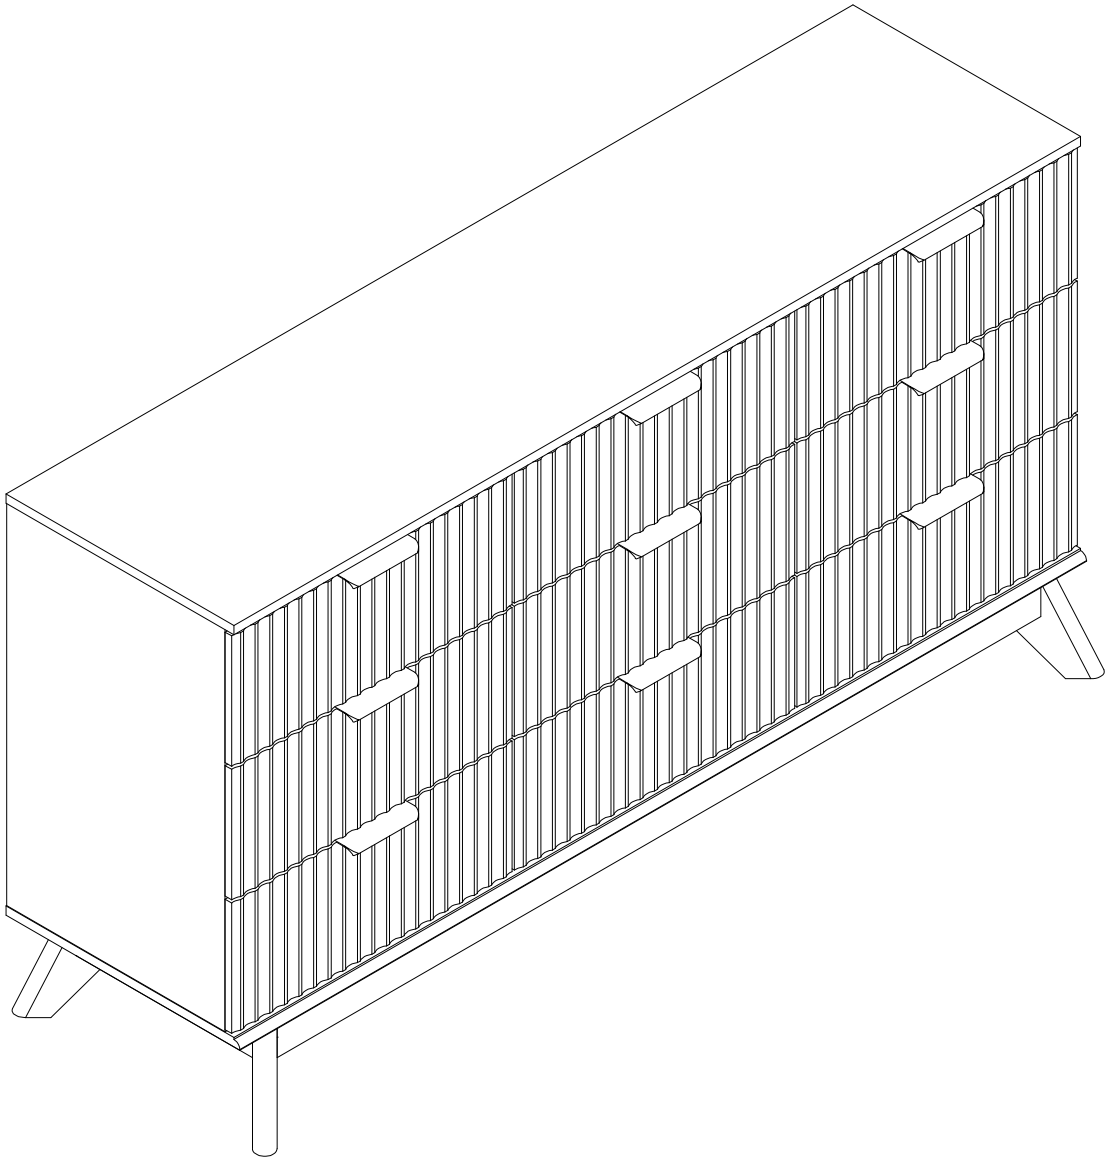


WARNING !



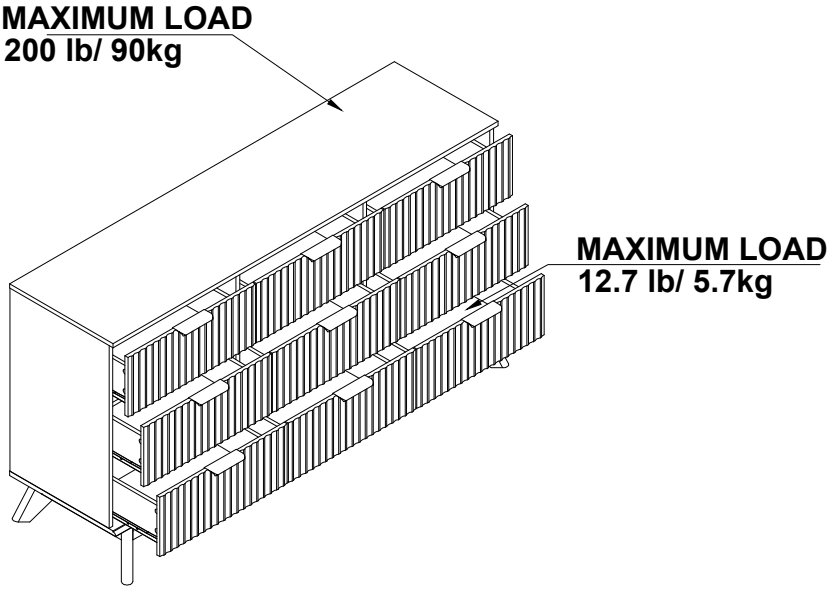

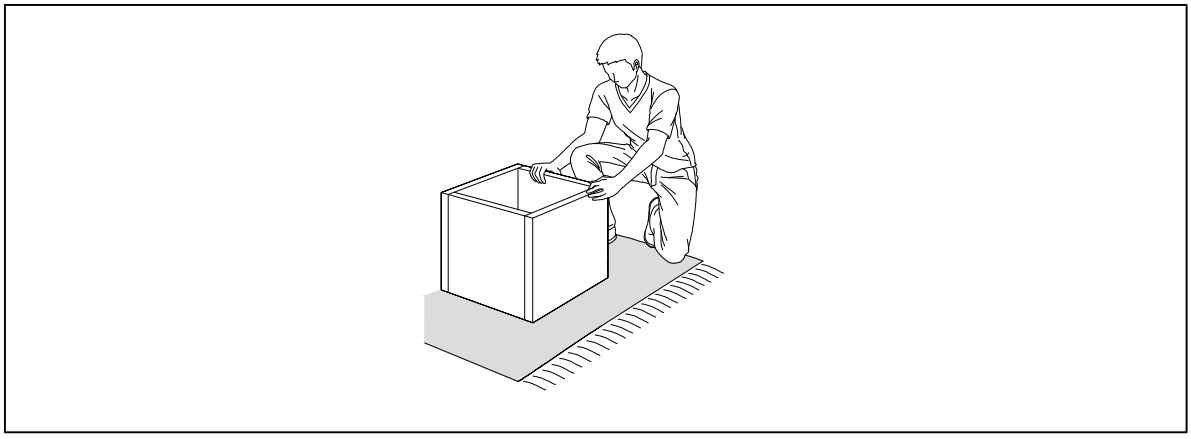

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

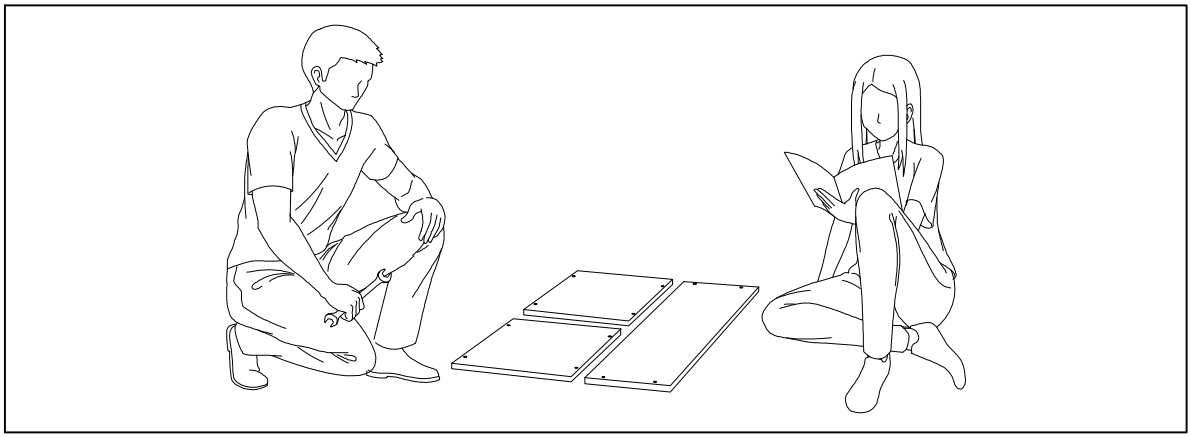


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.

PACKAGE CONTENT


Board Identification

Not actual size

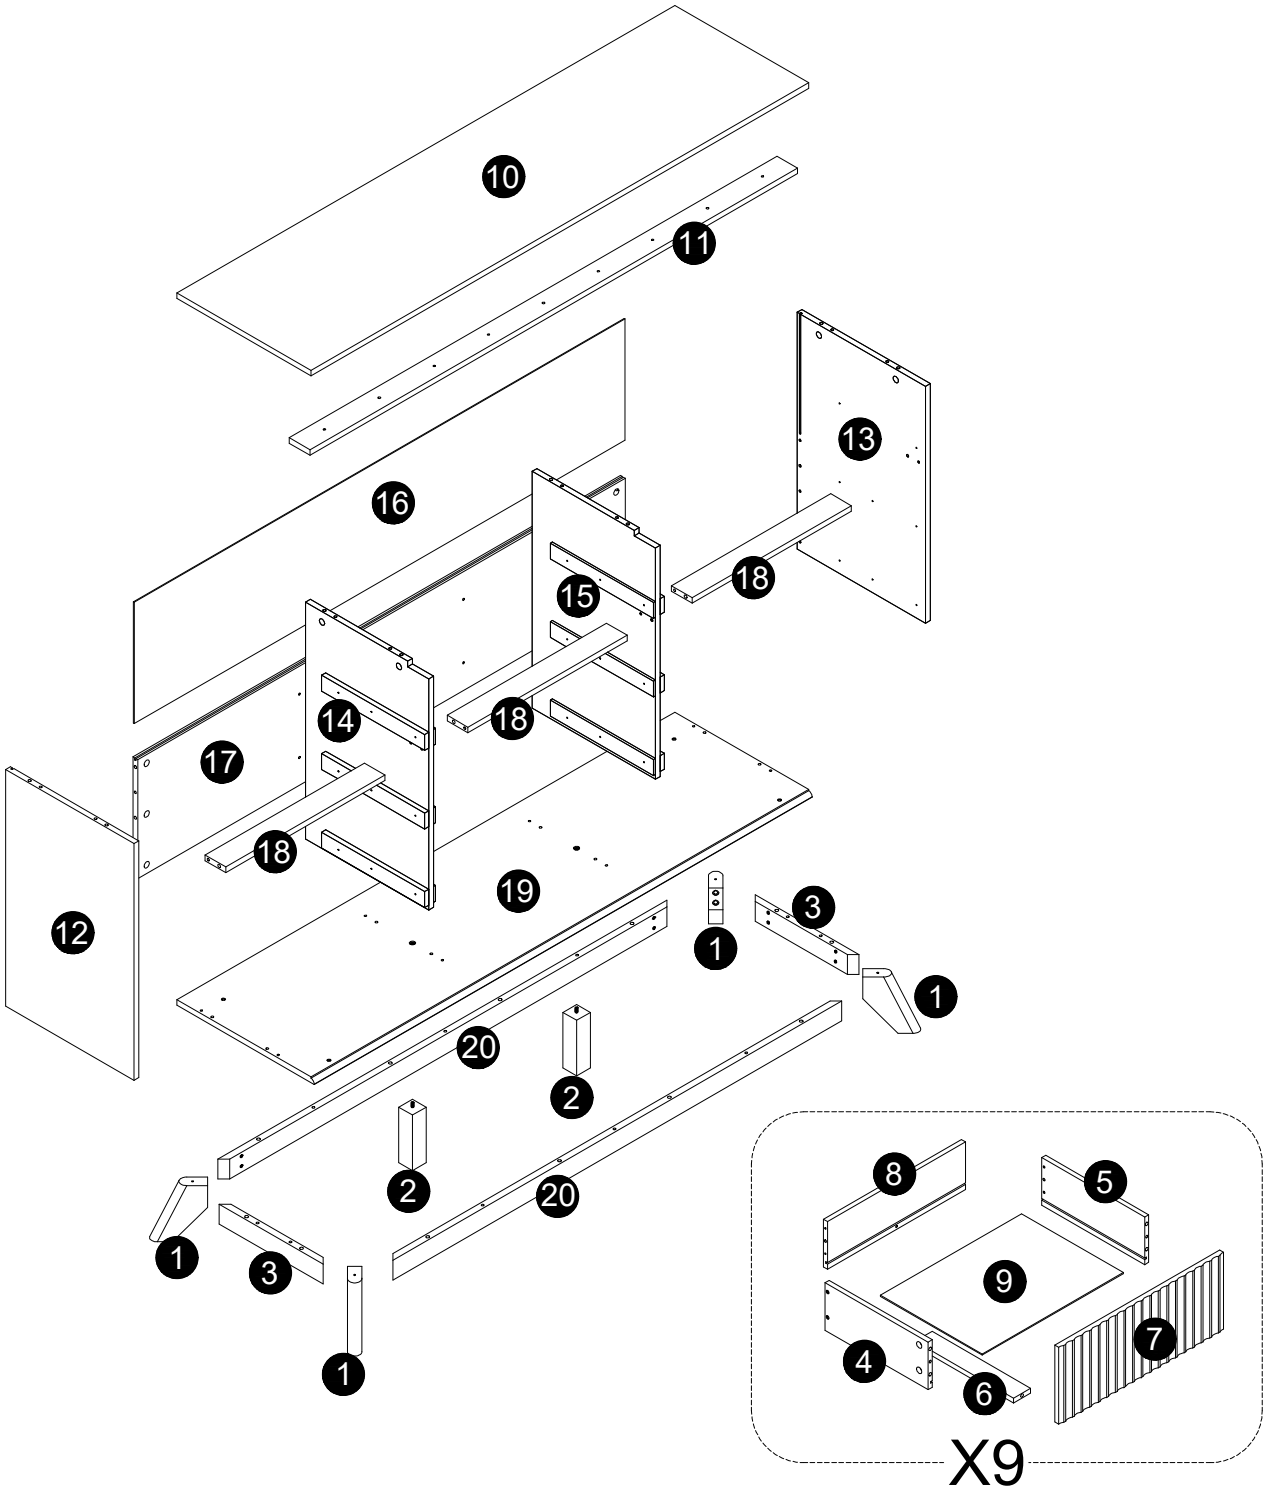


BOARD IDENTIFICATION


Not actual size




① x4

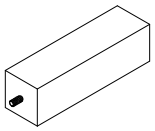


② x2

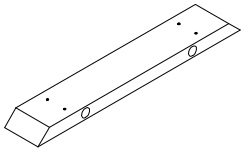


③ x2

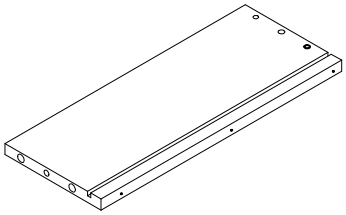


④ x9

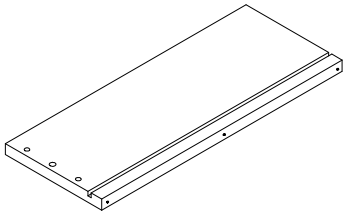


⑤ x9

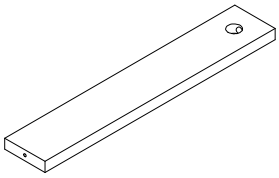


⑥ x9

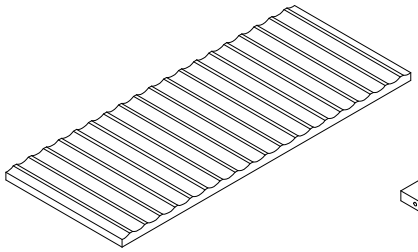


⑦ x9

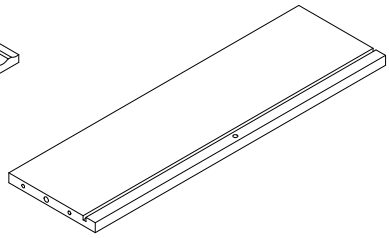


⑧ x9

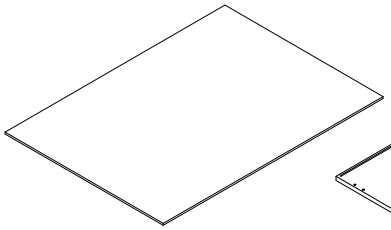


⑨ x9

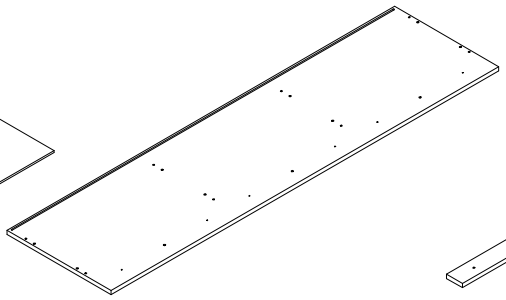


⑩ x1

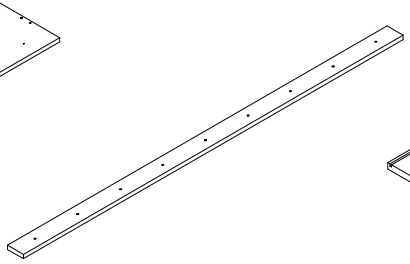


⑪ x1

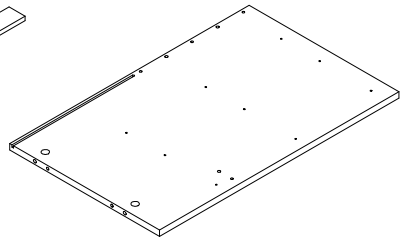


⑫ x1

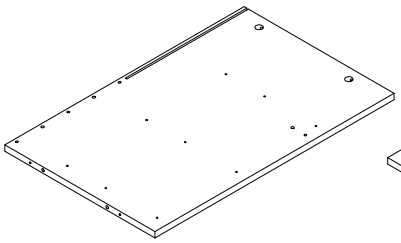


⑬ x1

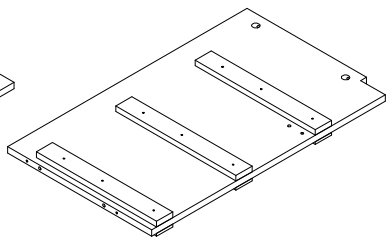

⑭ x1

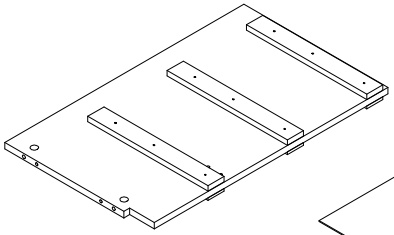


⑮ x1

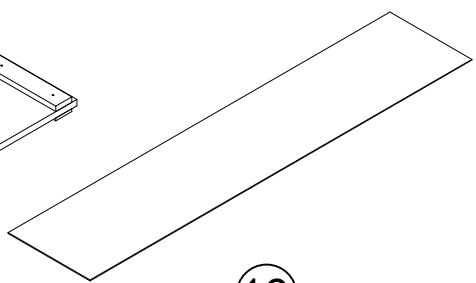


⑯ x1

BOARD IDENTIFICATION


Not actual size

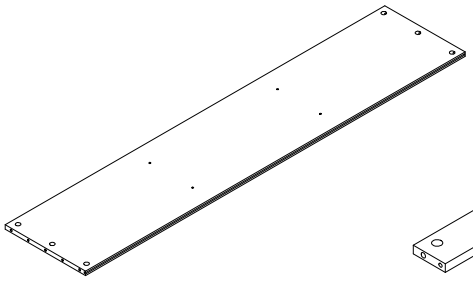


⑰ x1

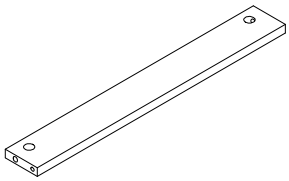

⑱ x3















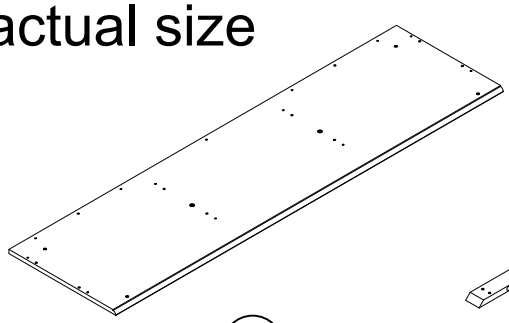






⑲ x1

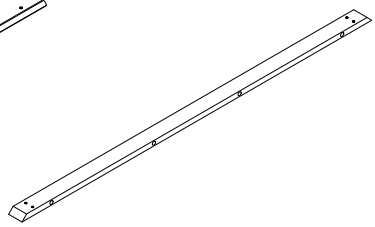

⑳ x2


HARDWARE LIST

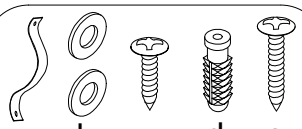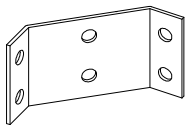 A x65+3	 Ø15x9.5 B x65+3	 Ø6x30 C x74+3	 Ø6x20 D x3
 Ø3.5x12 E x126+3	 Ø5x40 F x21+2	 Ø4x16 G x6	 Ø3x17 H x8
 Ø4x35 I x45+3	 J x9	 a b c d e K x2	 L x4
 #10*15 M x16+1	 M6x35 N x12+1	 M6x20 O x8	 P x2+2
 Q x1			

 CL x9	 CR x9	 DL x9	 DR x9


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

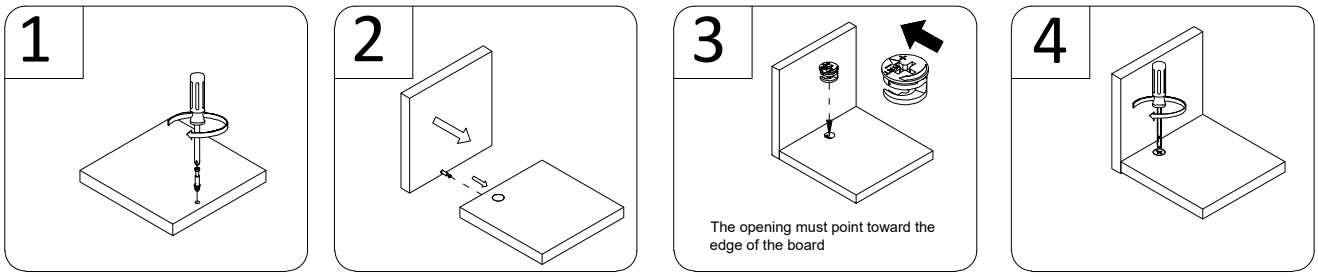


STEP 1


PF021




CR

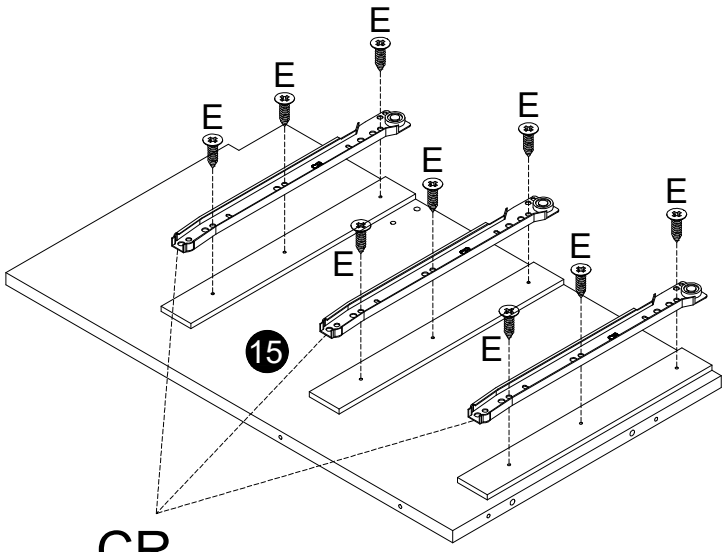


CR

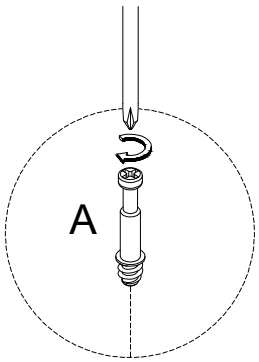




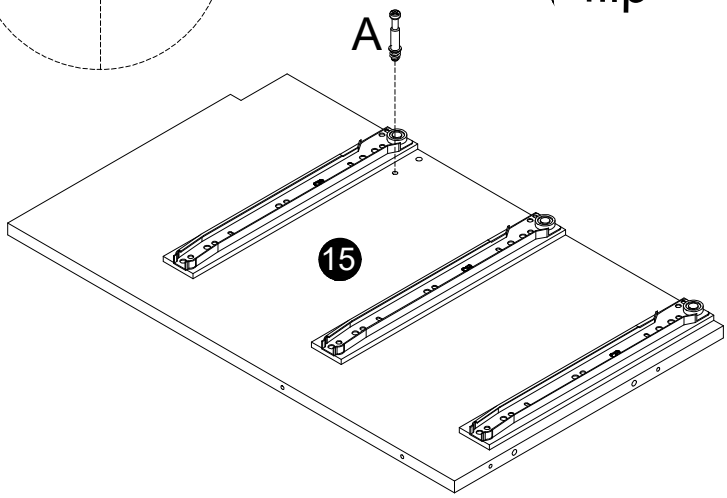


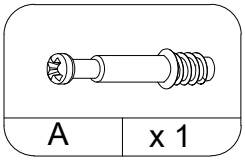

A	x 1

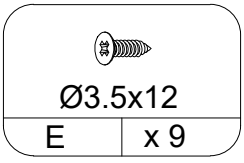



E	x 9

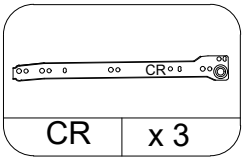


CR	x 3


STEP 2




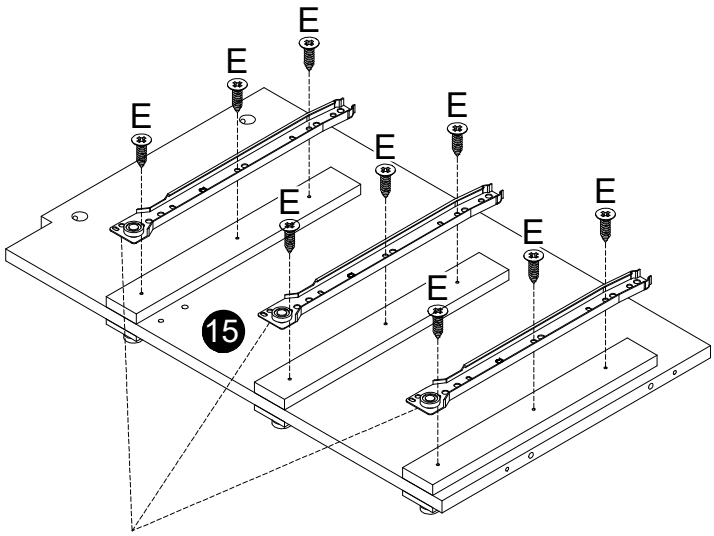


CL

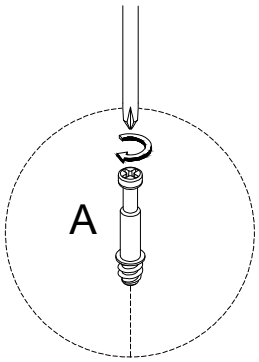

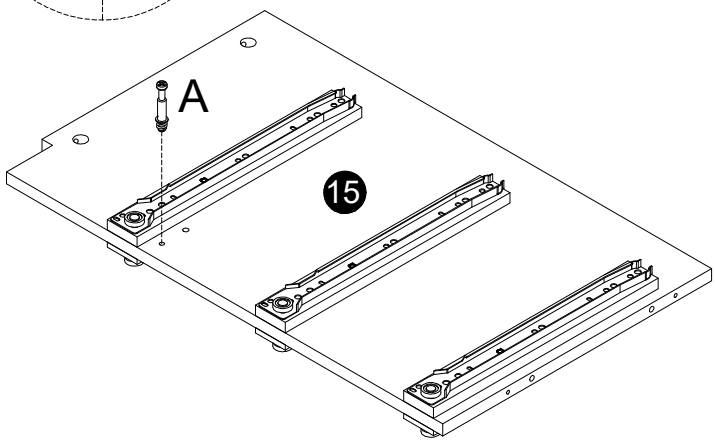


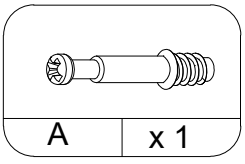

A	x 1

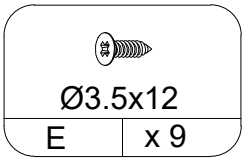


E	x 9

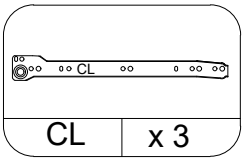


CL	x 3

STEP 3


PF021





CR

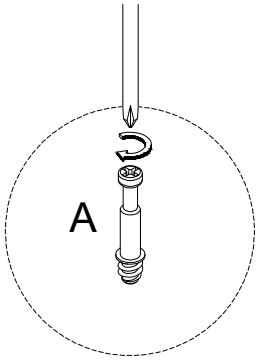




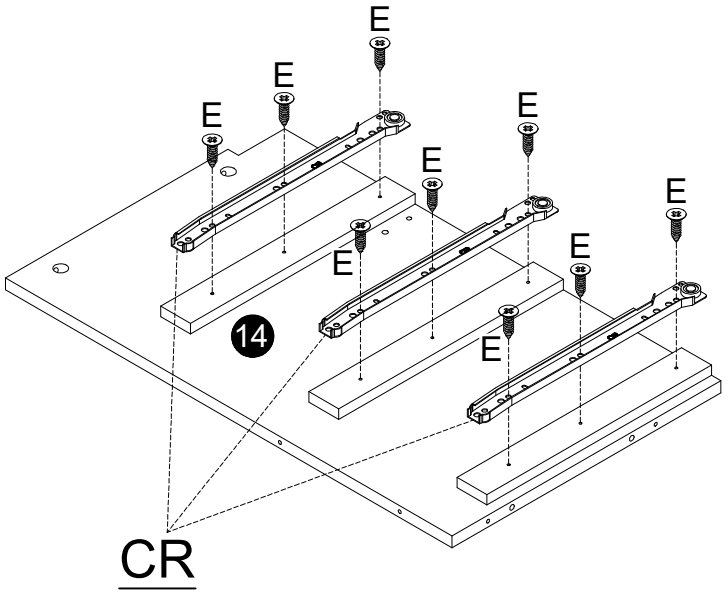

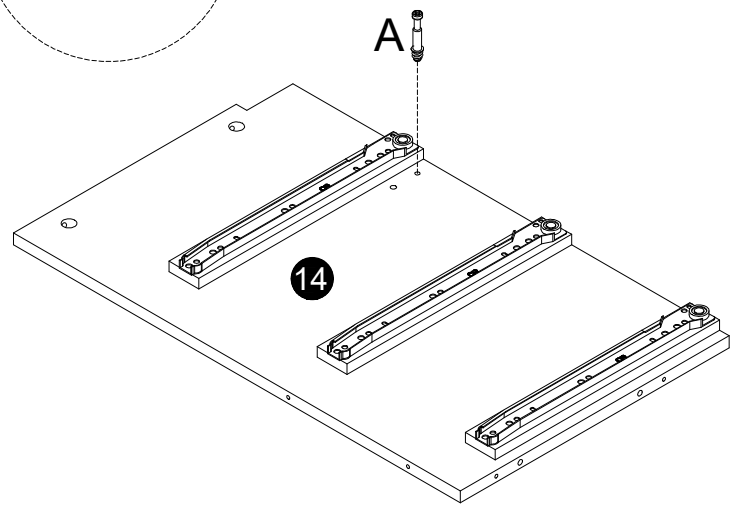


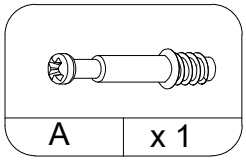

A	x 1

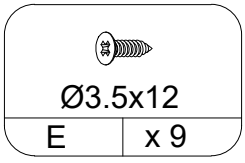



E	x 9

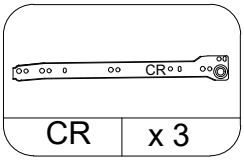



CR	x 3


STEP 4



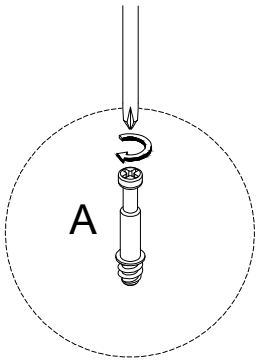


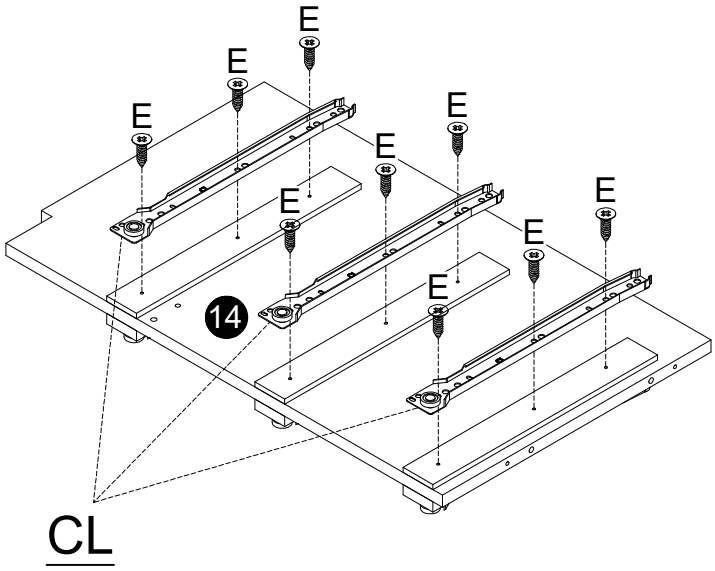

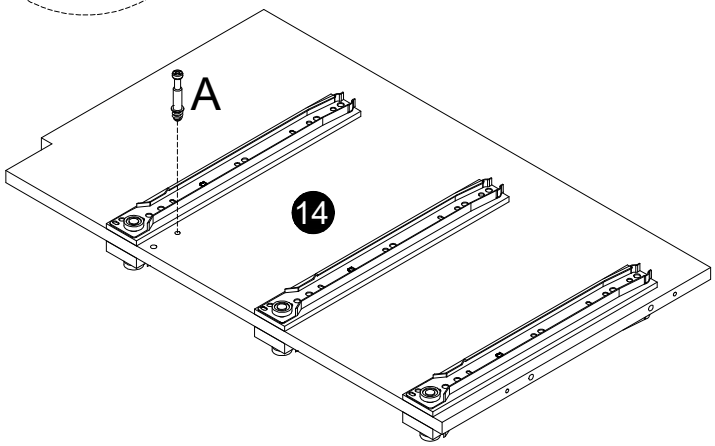


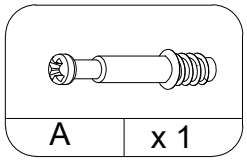

A	x 1

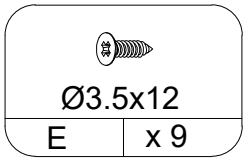


E	x 9

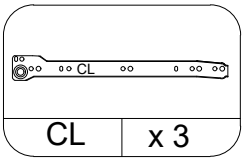



CL	x 3


STEP 5


PF021







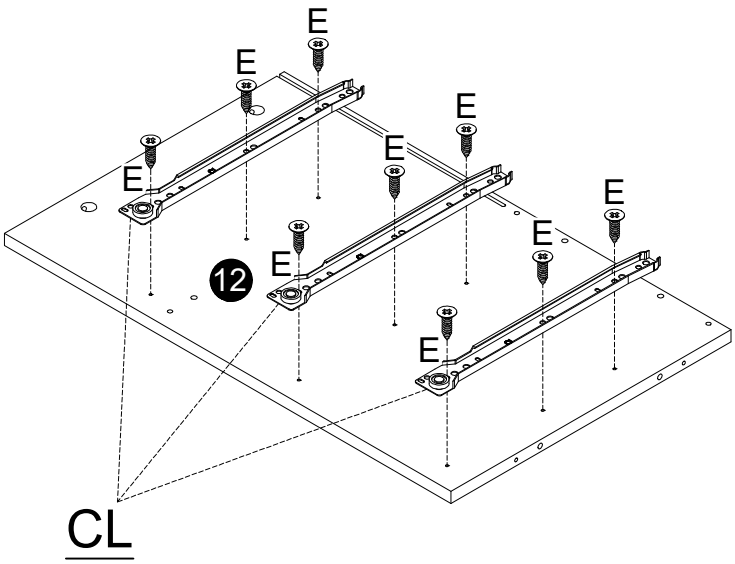

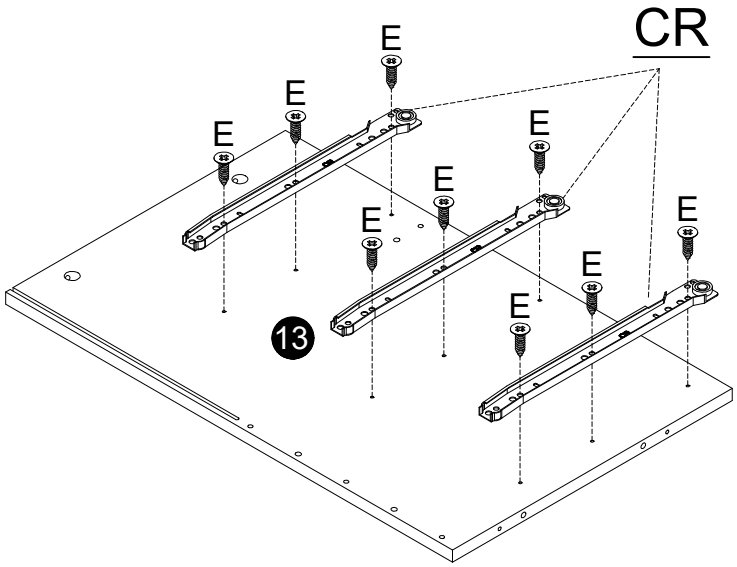


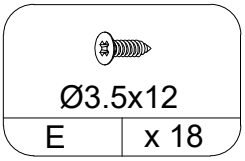


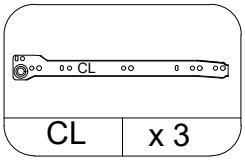


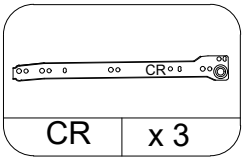


STEP 6

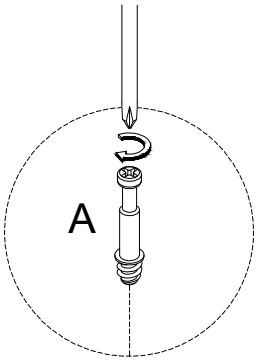

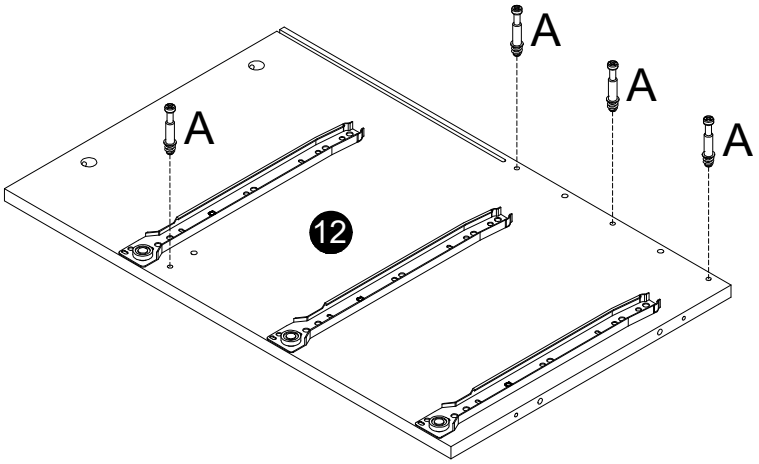


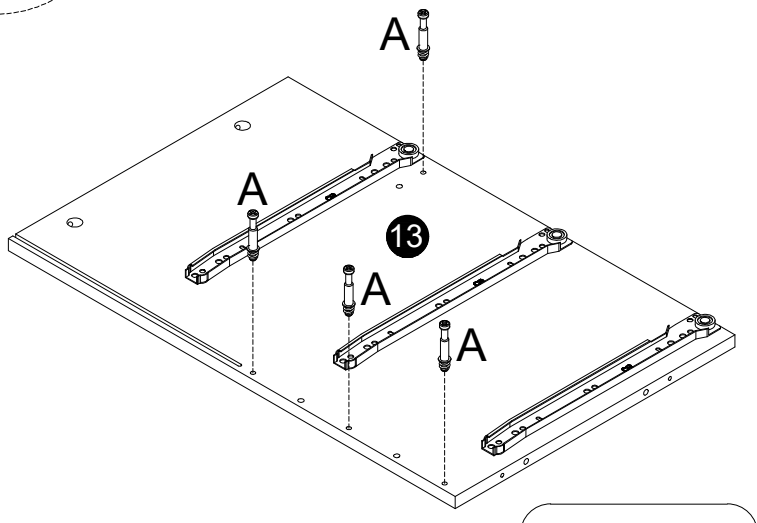


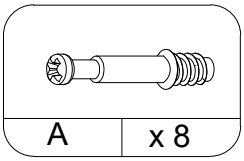


STEP 7

PF021

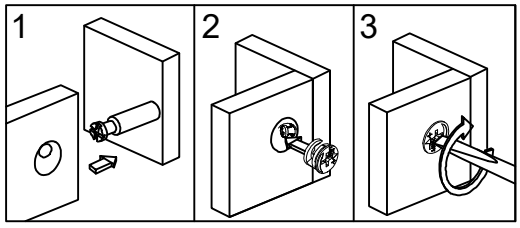

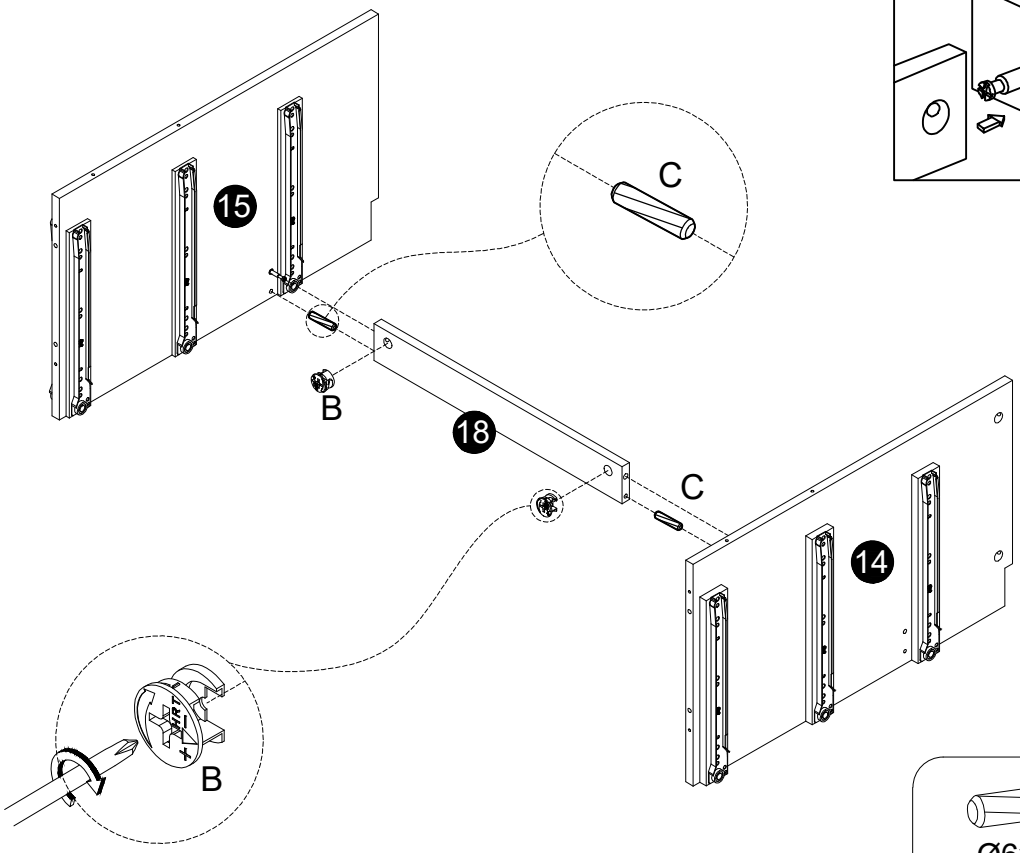





Ø6x30	
C	x 2



Ø15x9.5	
B	x 2

STEP 8

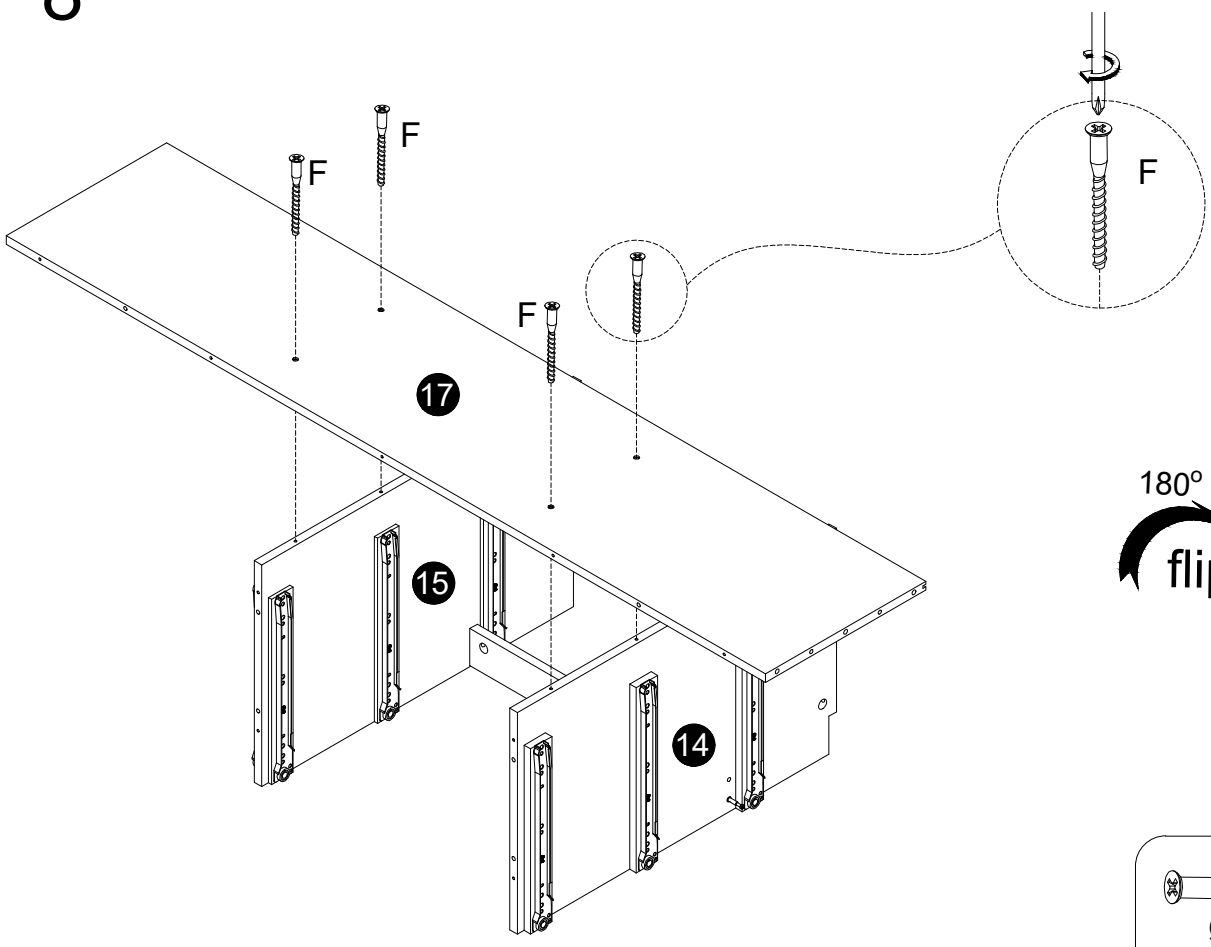





Ø5x40	
F	x 4

STEP 9

PF021

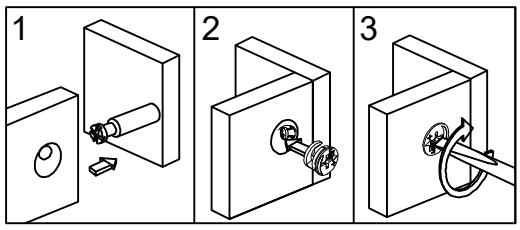


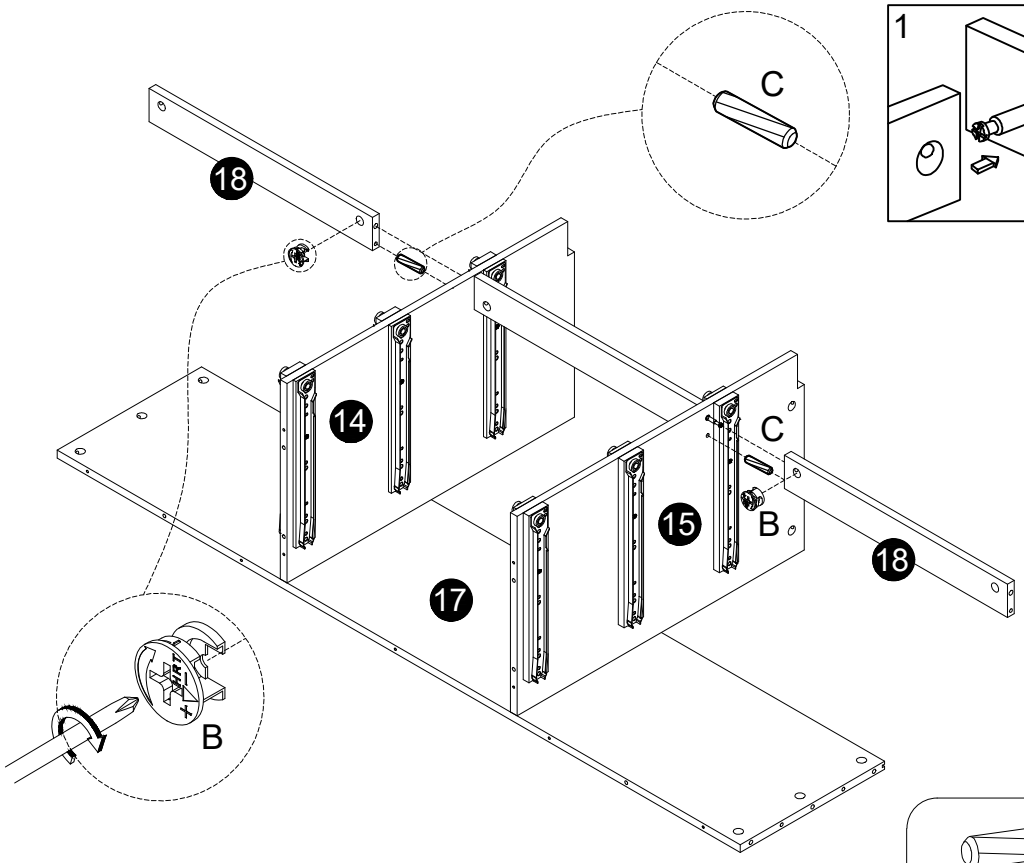

Ø6x30	
C	x 2

Ø15x9.5	
B	x 2

STEP 10

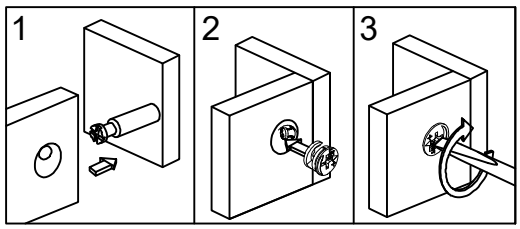

90°


flip

Ø6x30	
C	x 6

Ø15x9.5	
B	x 8

STEP 11


PF021

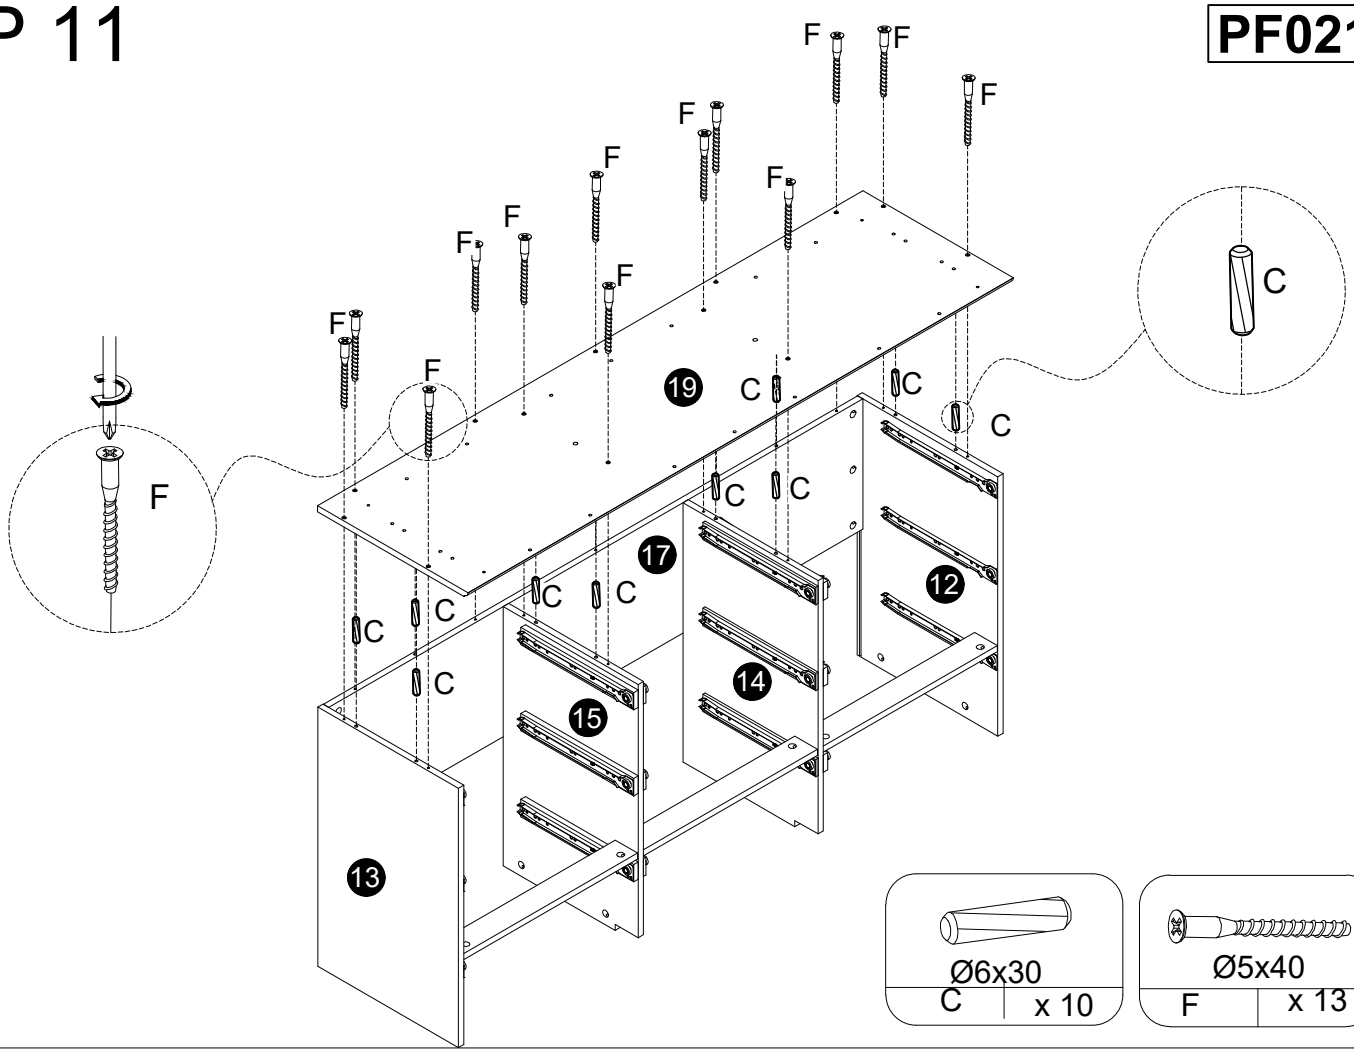

Ø6x30	
C	x 10

Ø5x40	
F	x 13


STEP 12

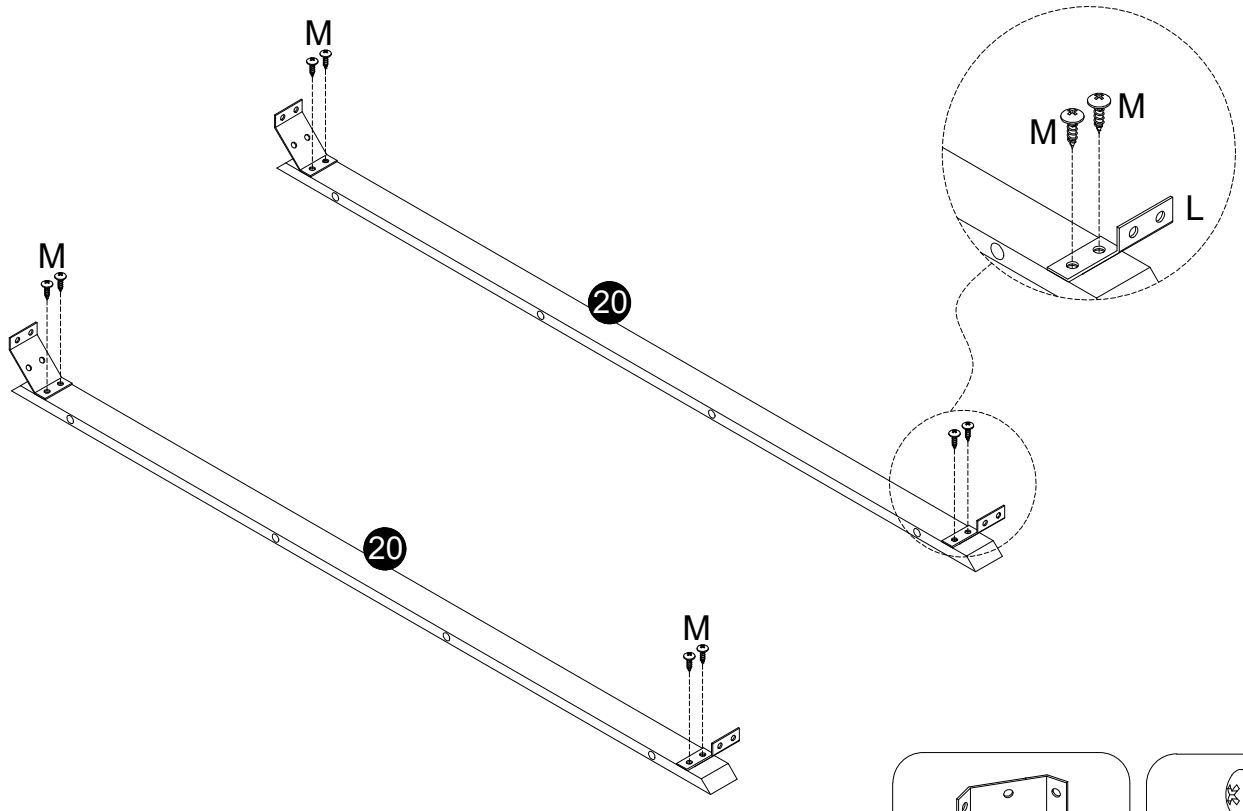


L	x 4

#10*15	
M	x 8


STEP 13 Note: Do not tighten the screws at this step. **PF021**

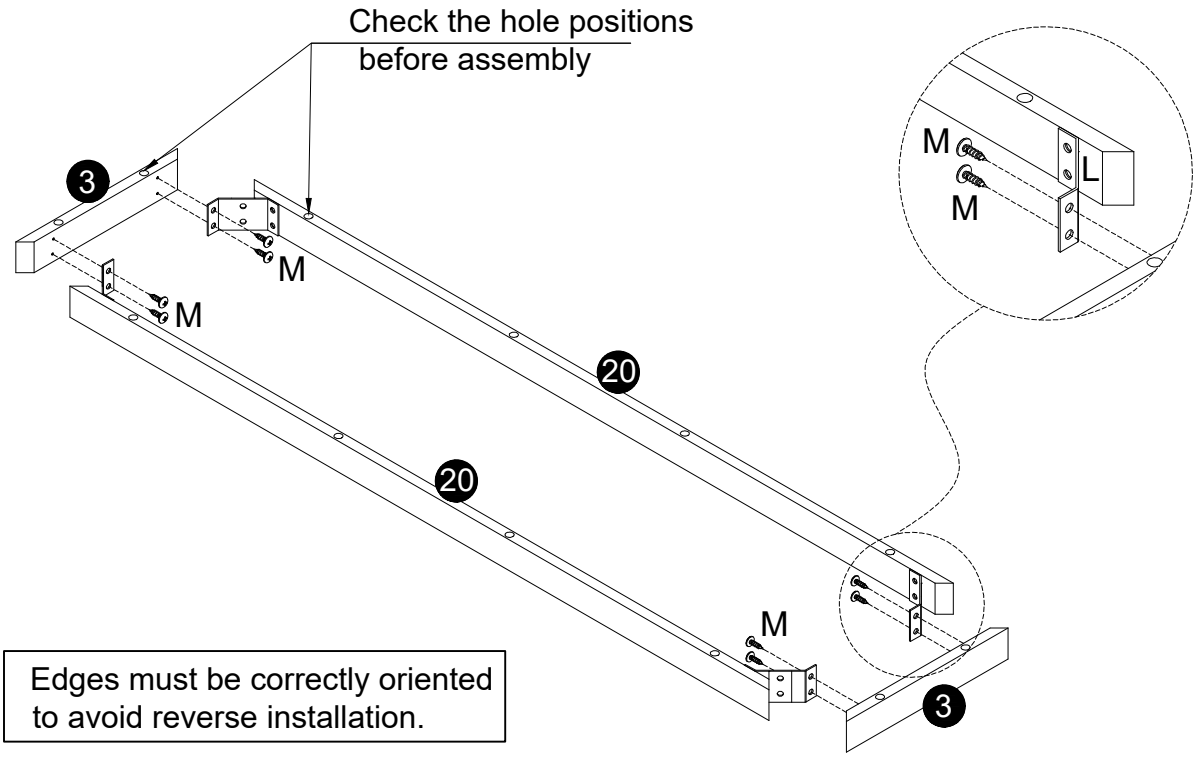


Edges must be correctly oriented to avoid reverse installation.

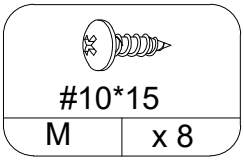


STEP 14 Tighten all screws and bolts.

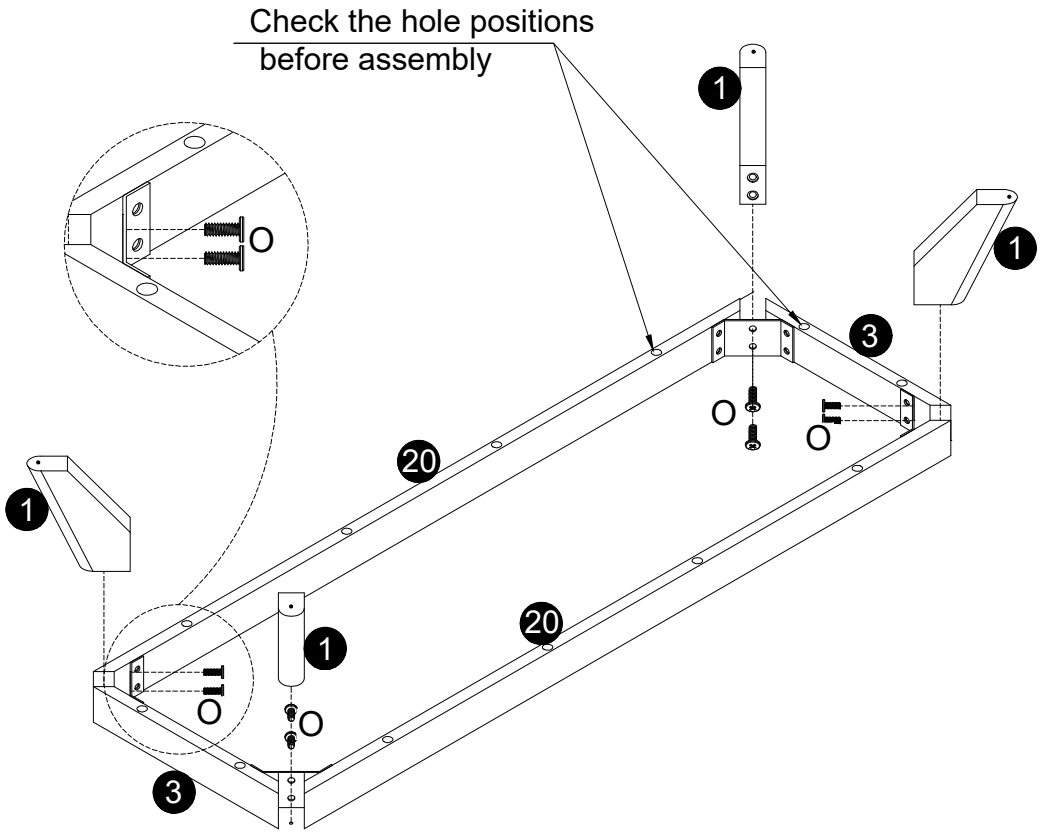

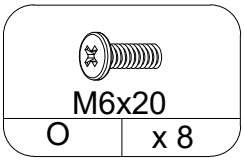

STEP 15


PF021

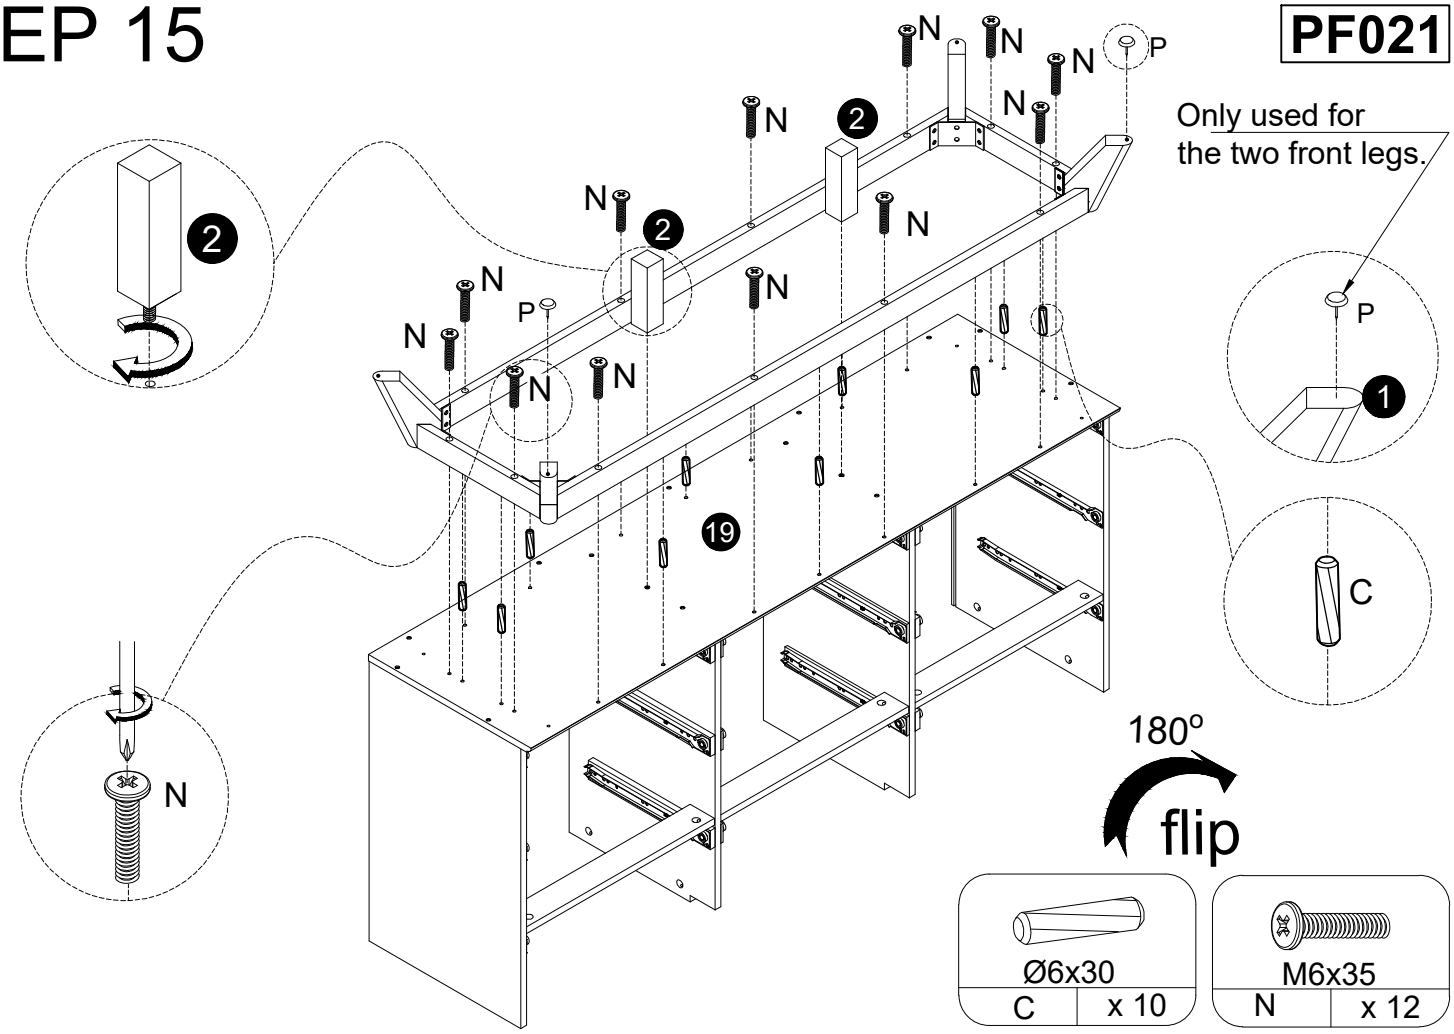

Ø6x30	
C	x 10

M6x35	
N	x 12


STEP 16

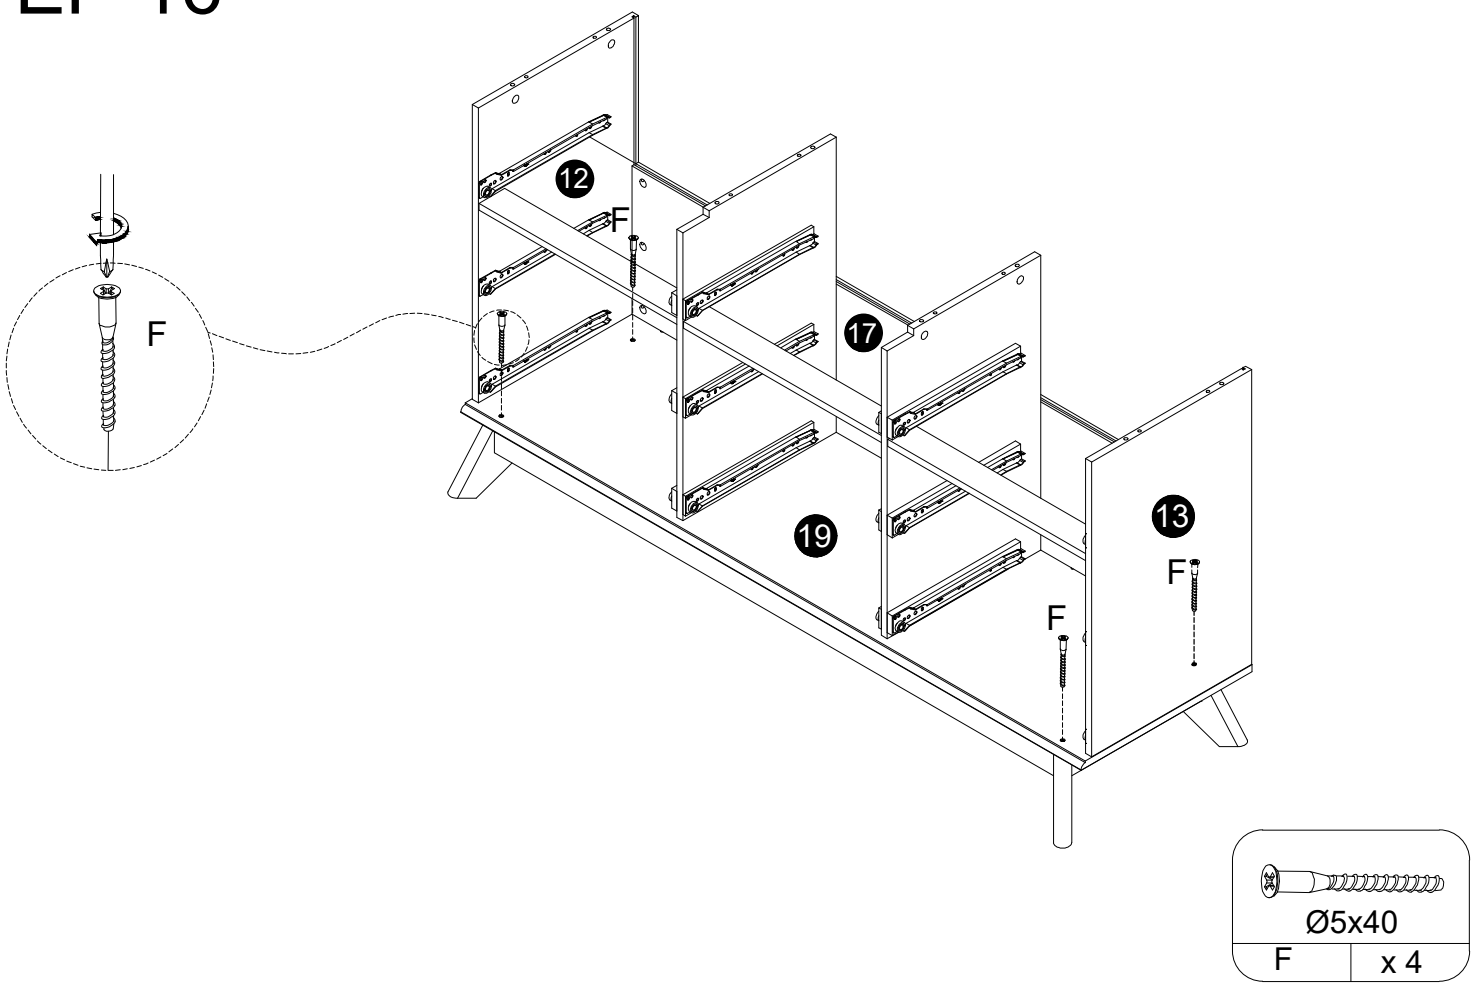


Ø5x40	
F	x 4


STEP 17

PF021

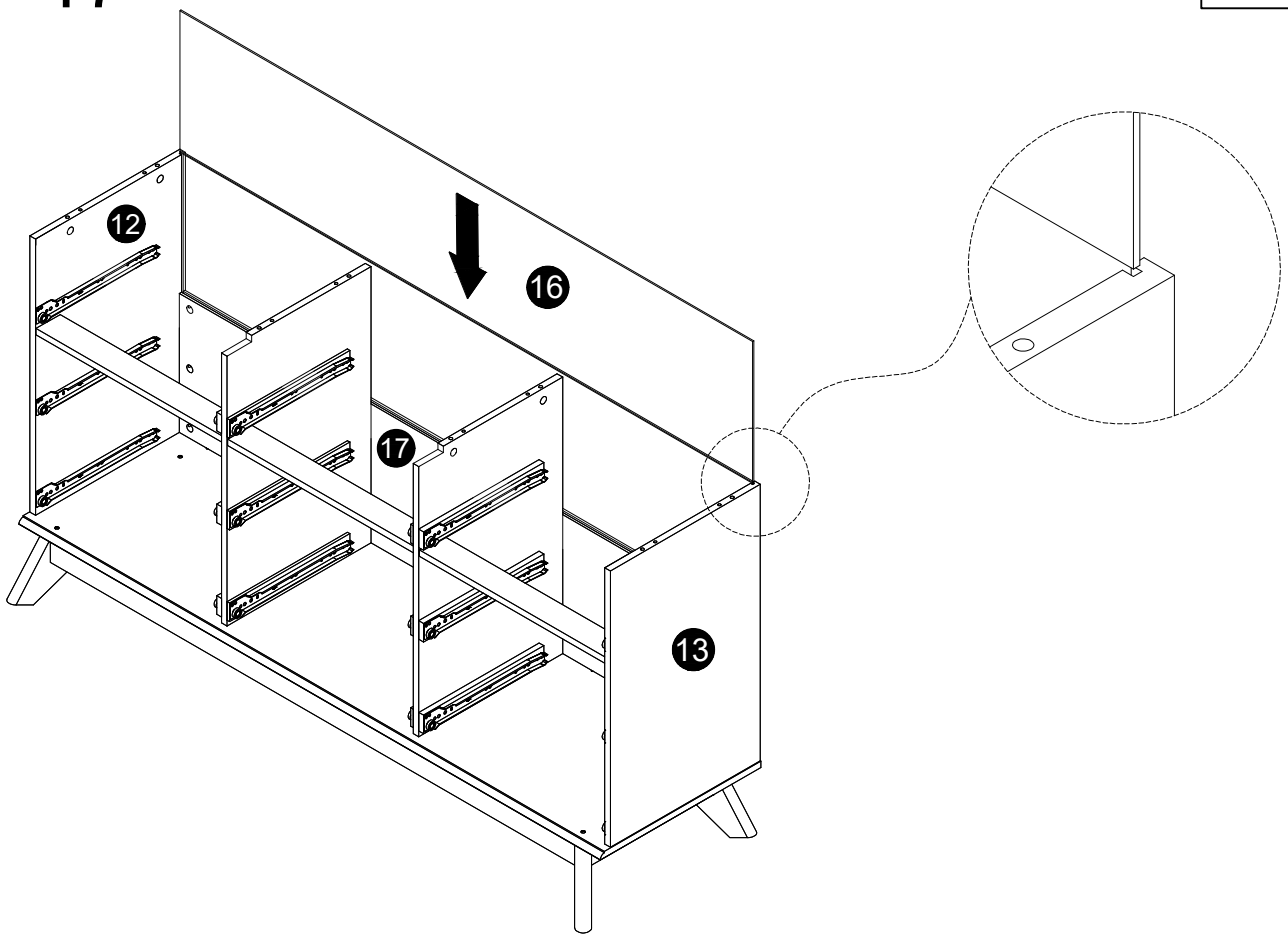


STEP 18

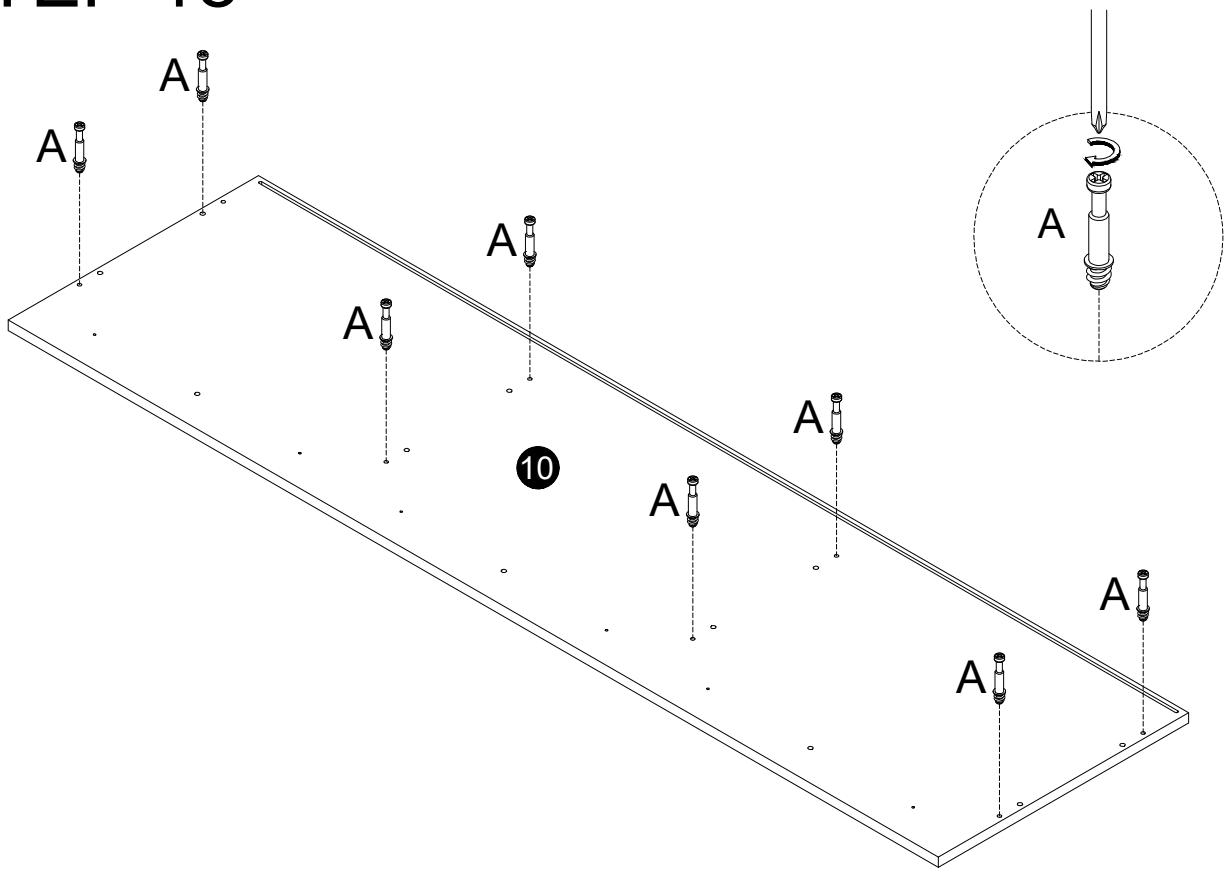


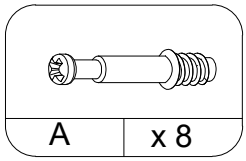

STEP 19

PF021

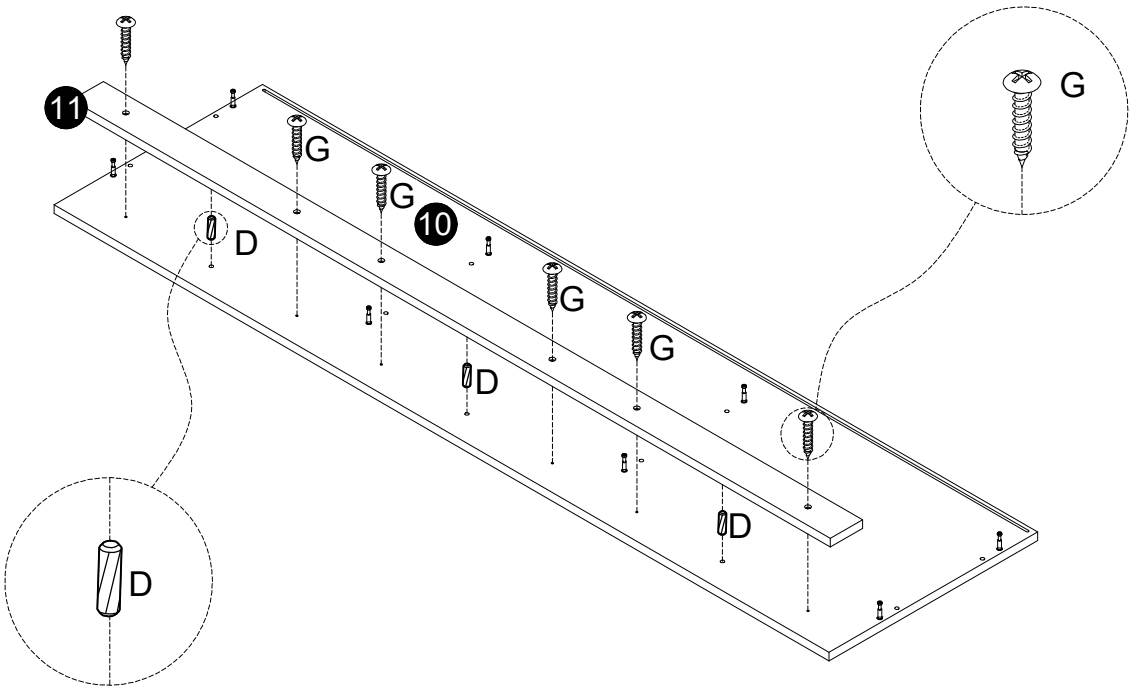



Ø4x16


G | x 6



Ø6x20


D | x 3

STEP 20

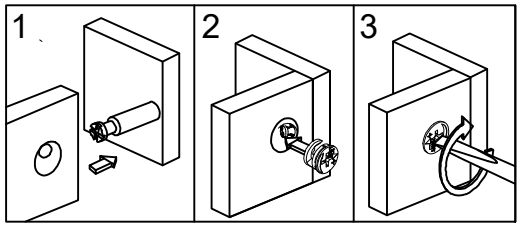

Ø6x30

C | x 8





Ø15x9.5

B | x 8


STEP 21


PF021

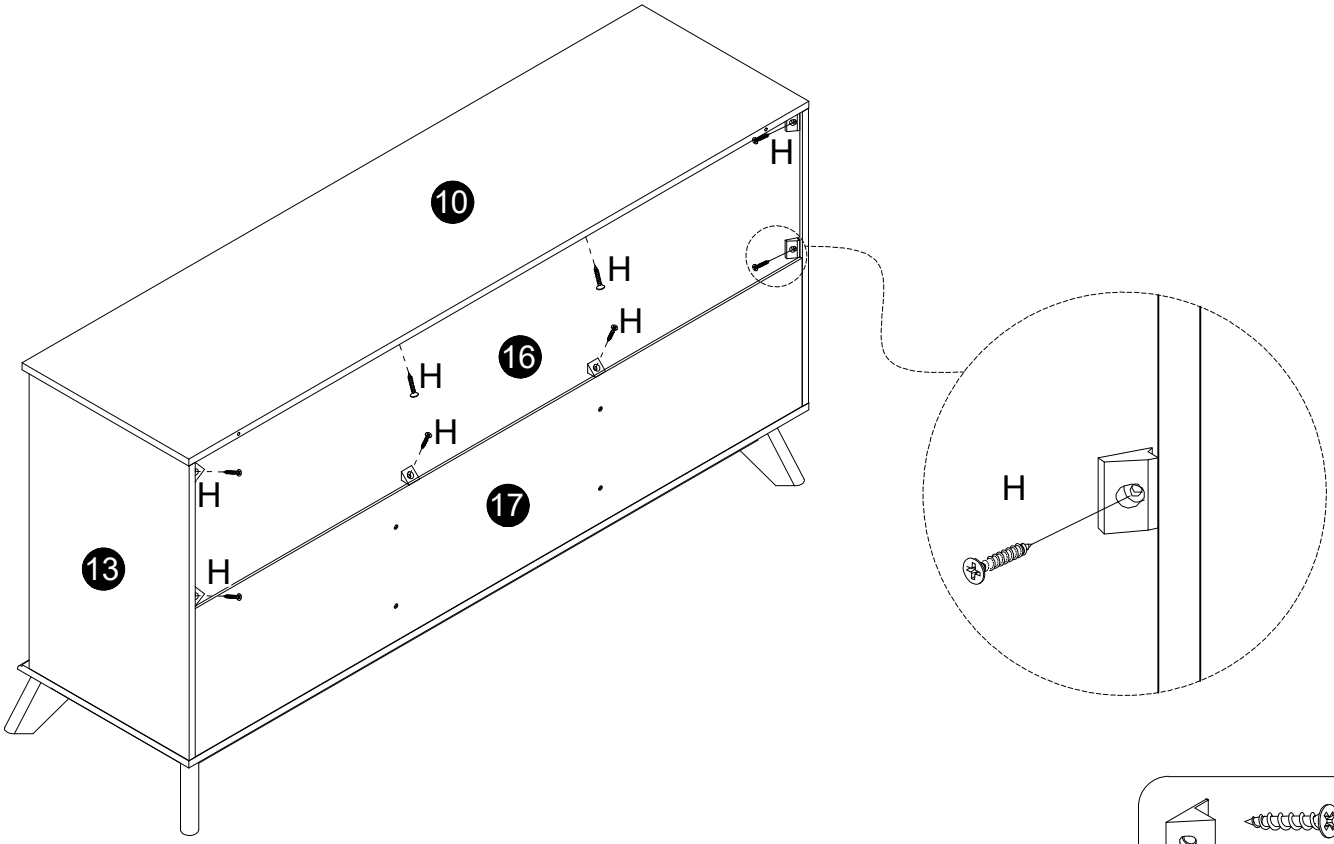

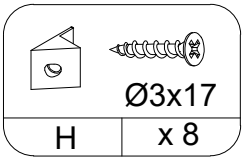


STEP 22

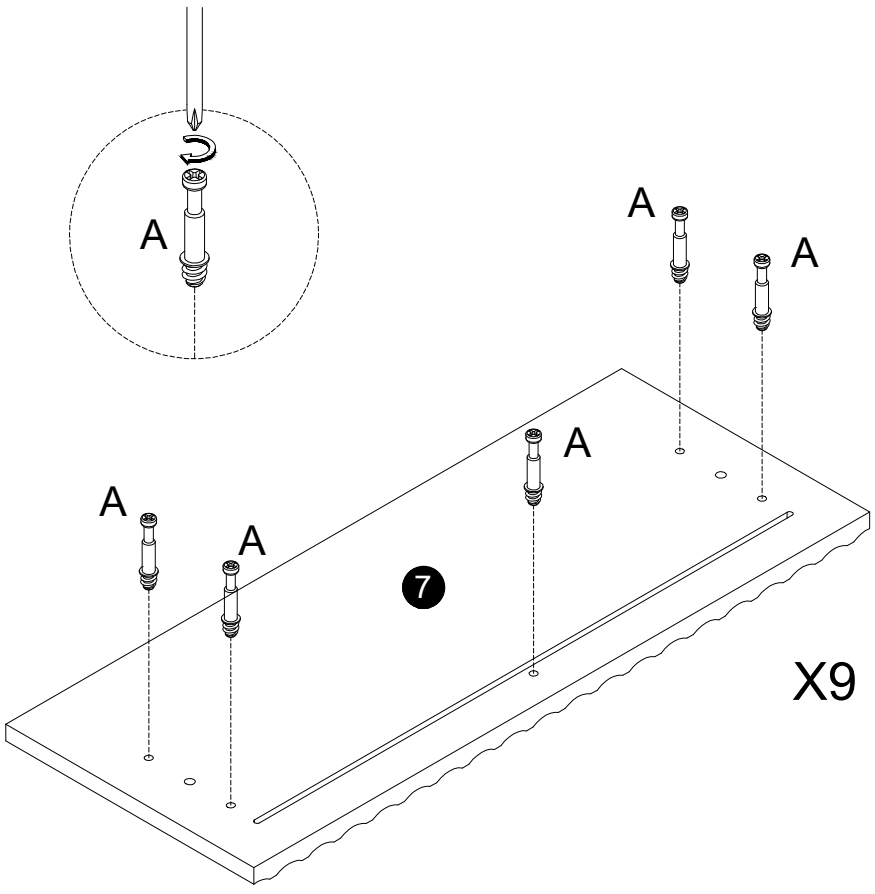

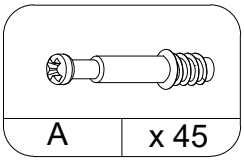

STEP 23

PF021

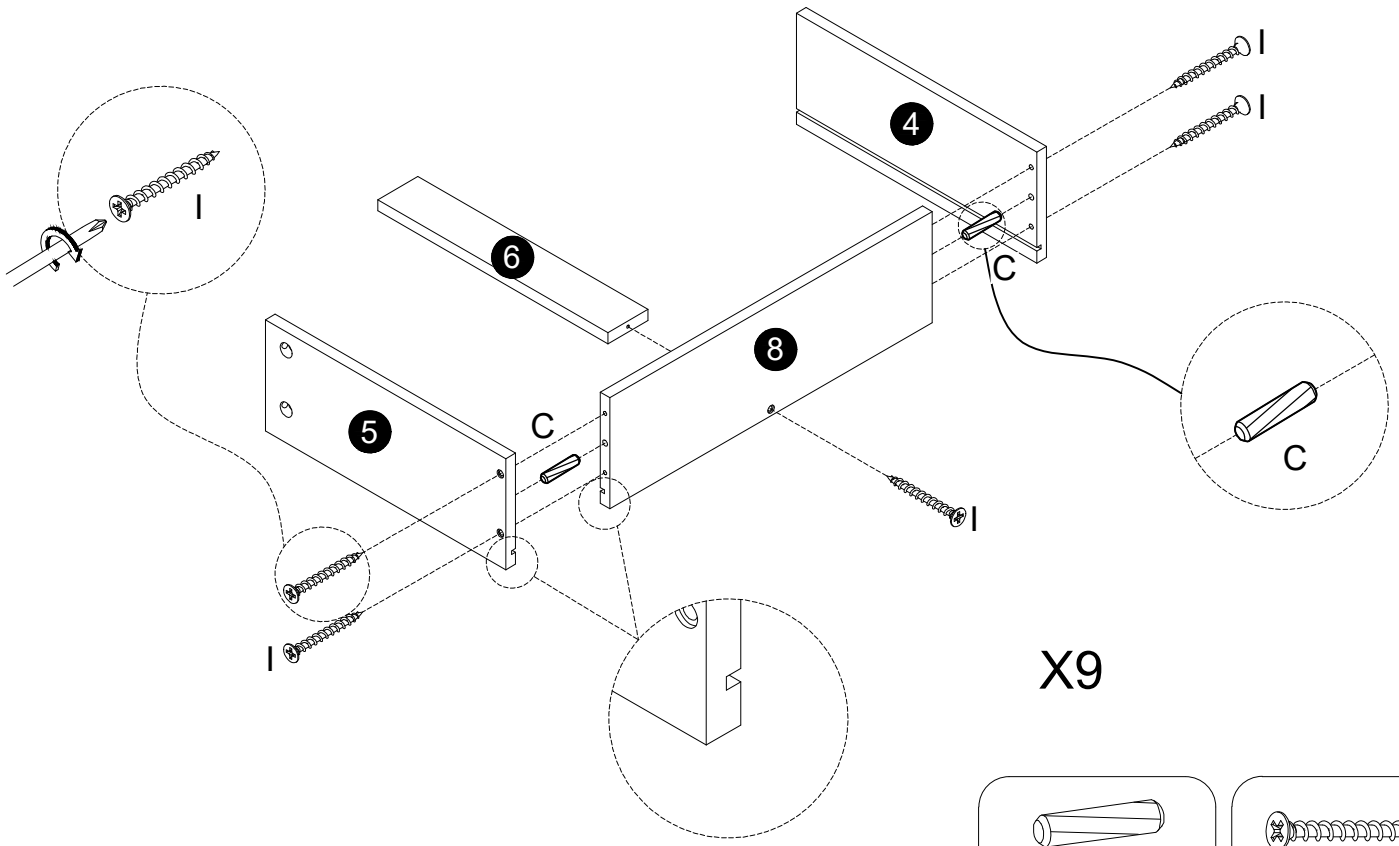


X9

Ø6x30	
C	x18

Ø4x35	
I	x 45


STEP 24

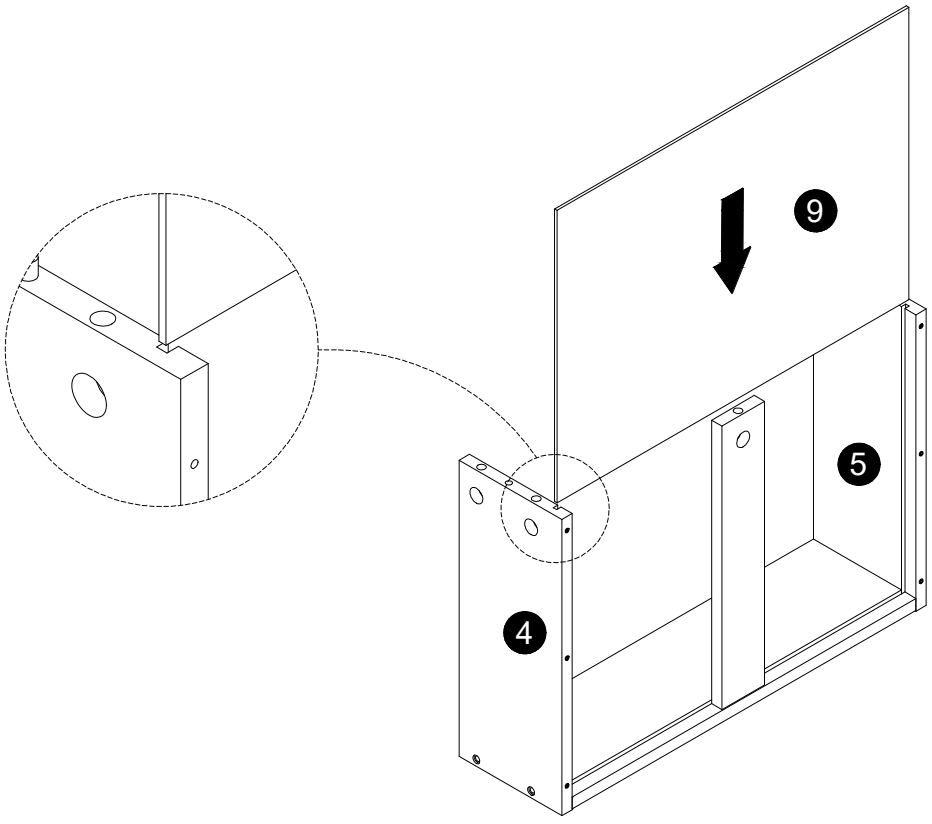

X9


STEP 25

PF021

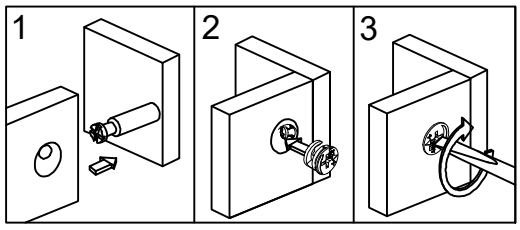

X9


STEP 26

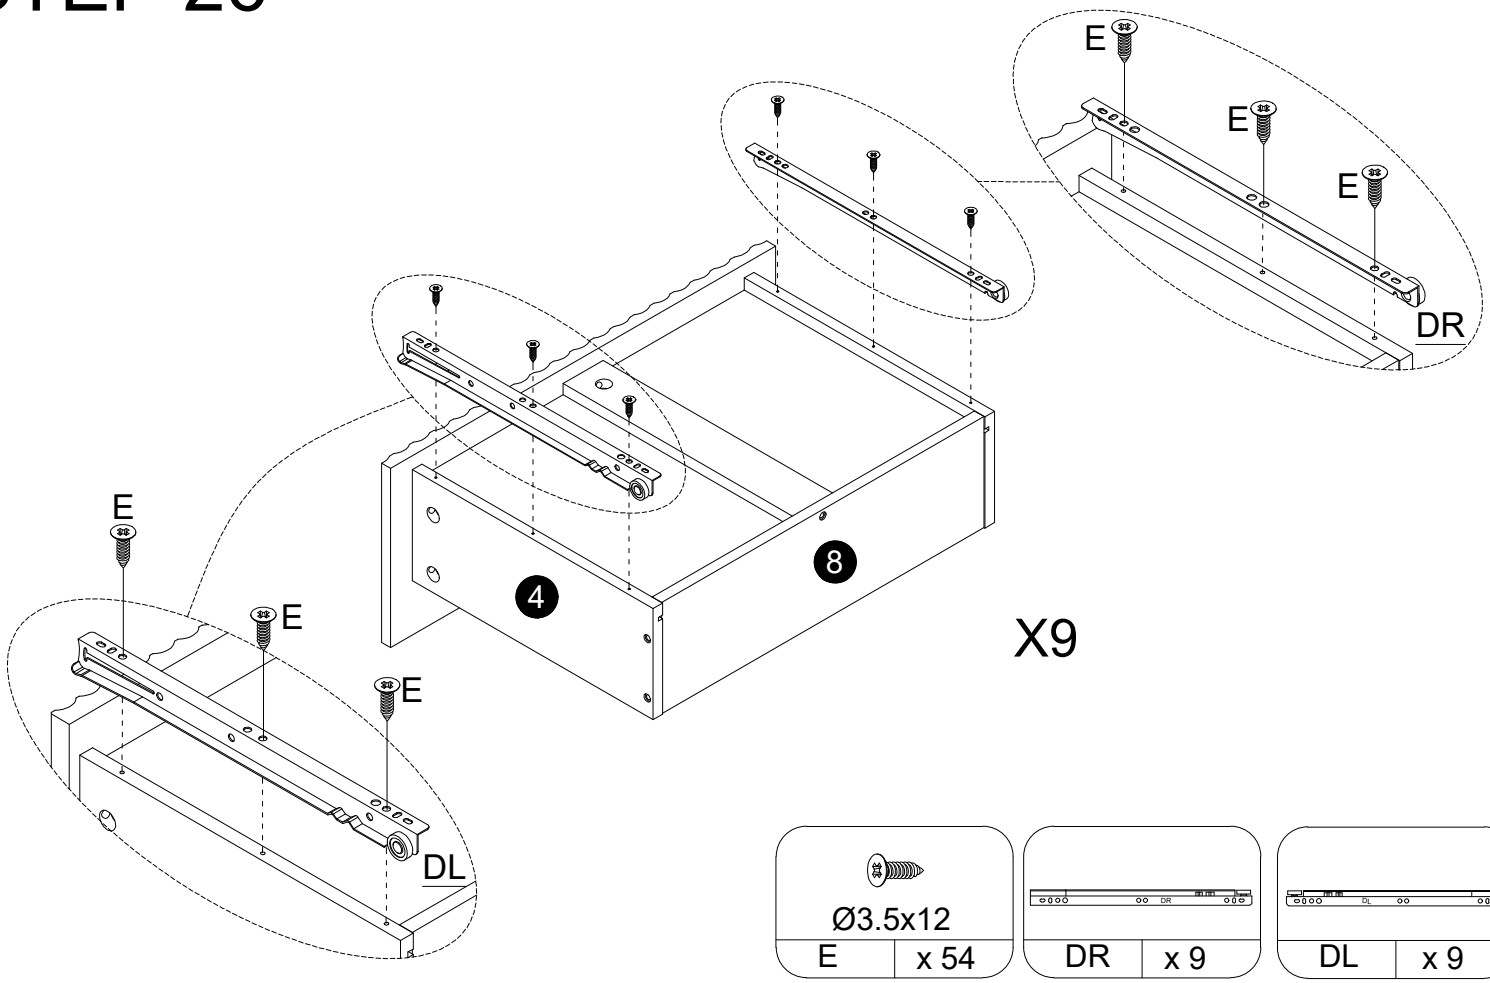

X9

STEP 27

PF021

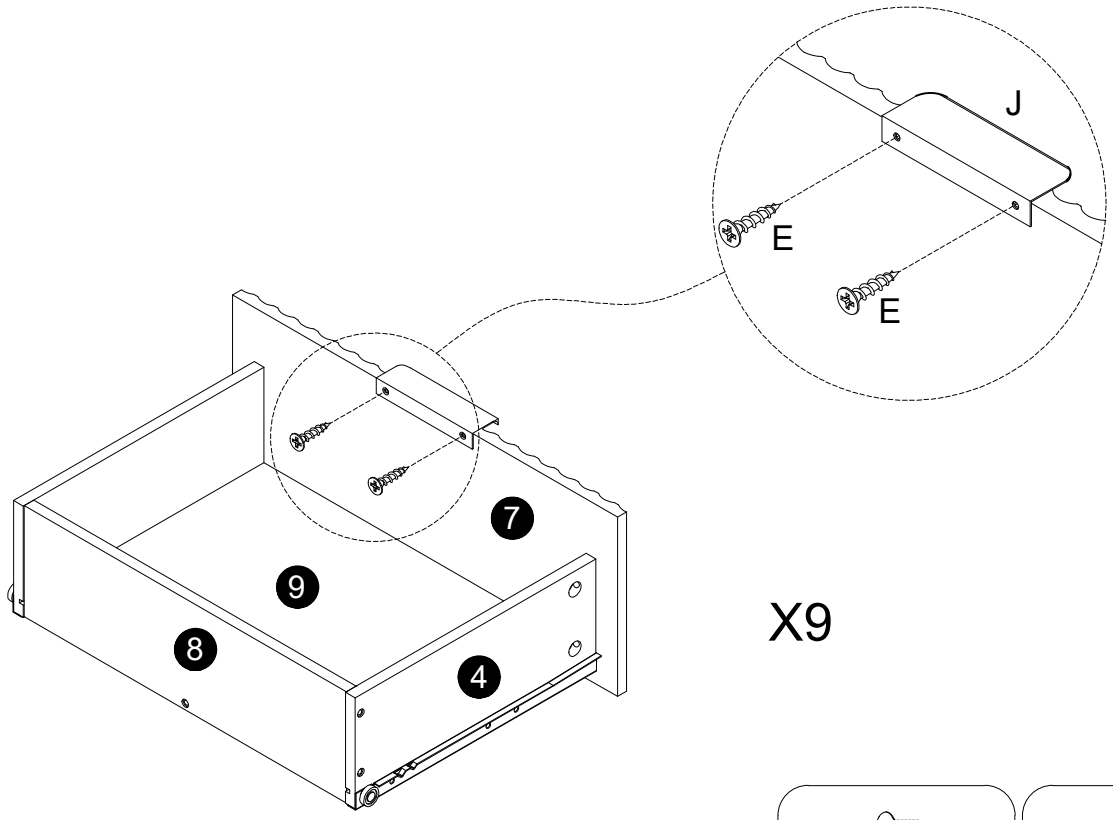


X9

Ø3.5x12	
E	x18


J	x 9


STEP 28

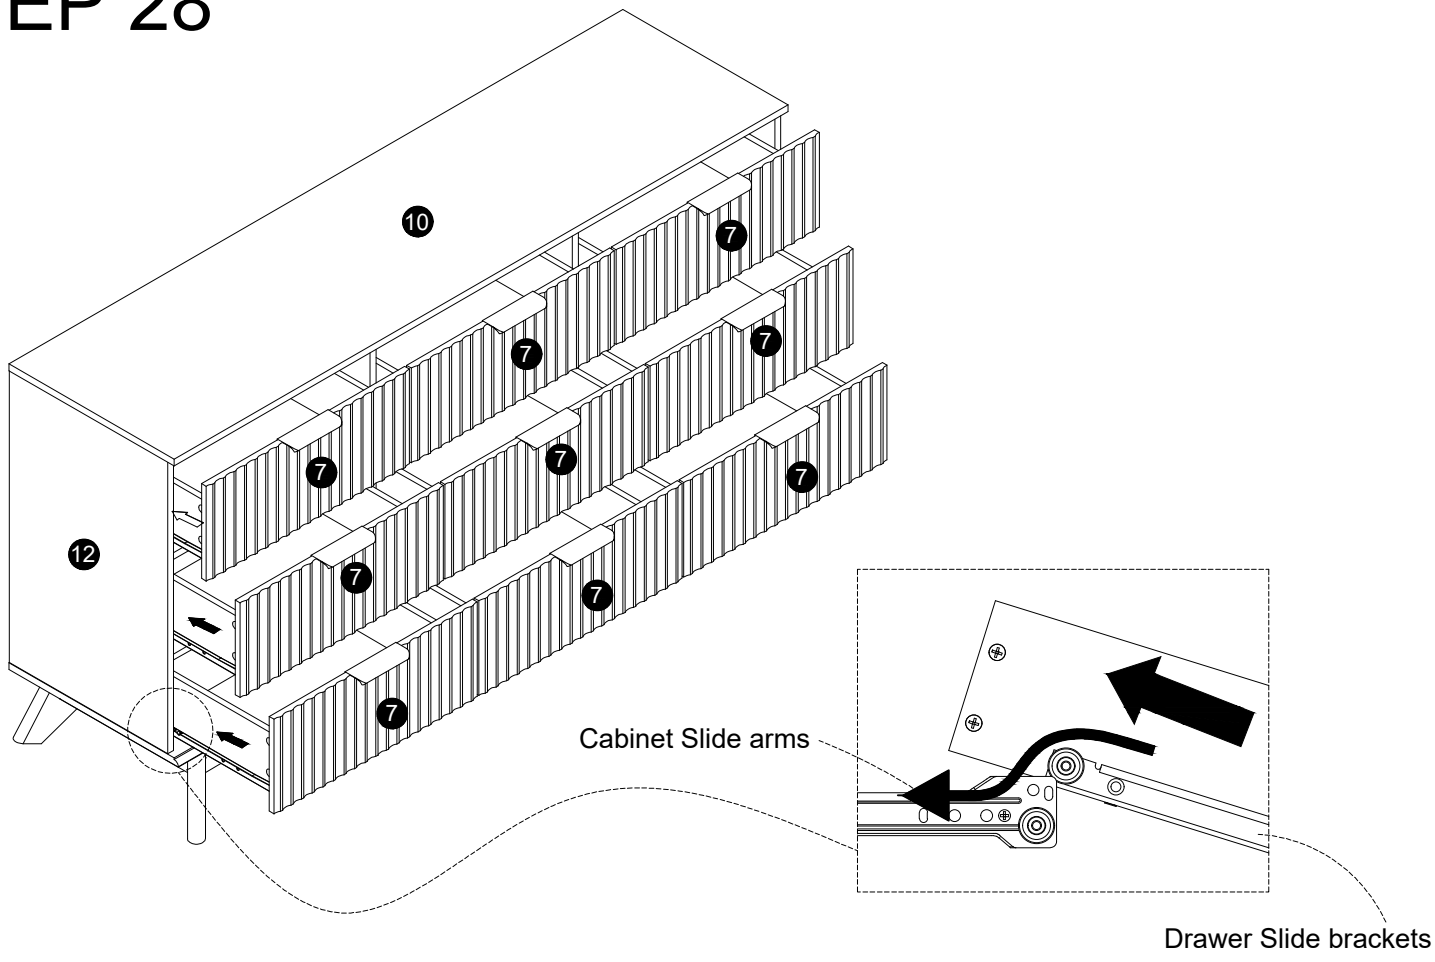


STEP 29


PF021

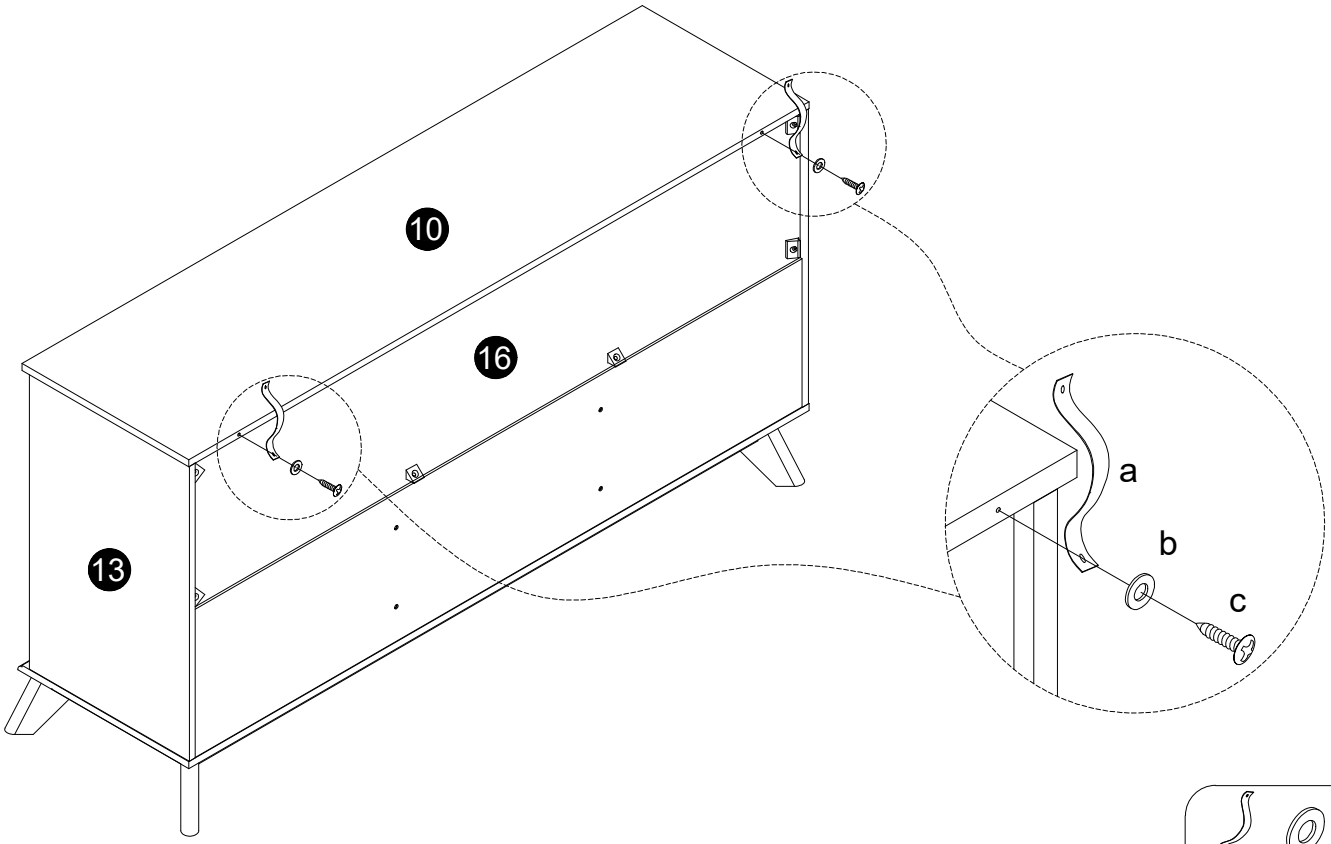

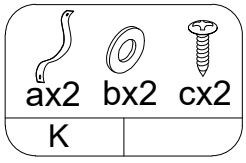


STEP 30

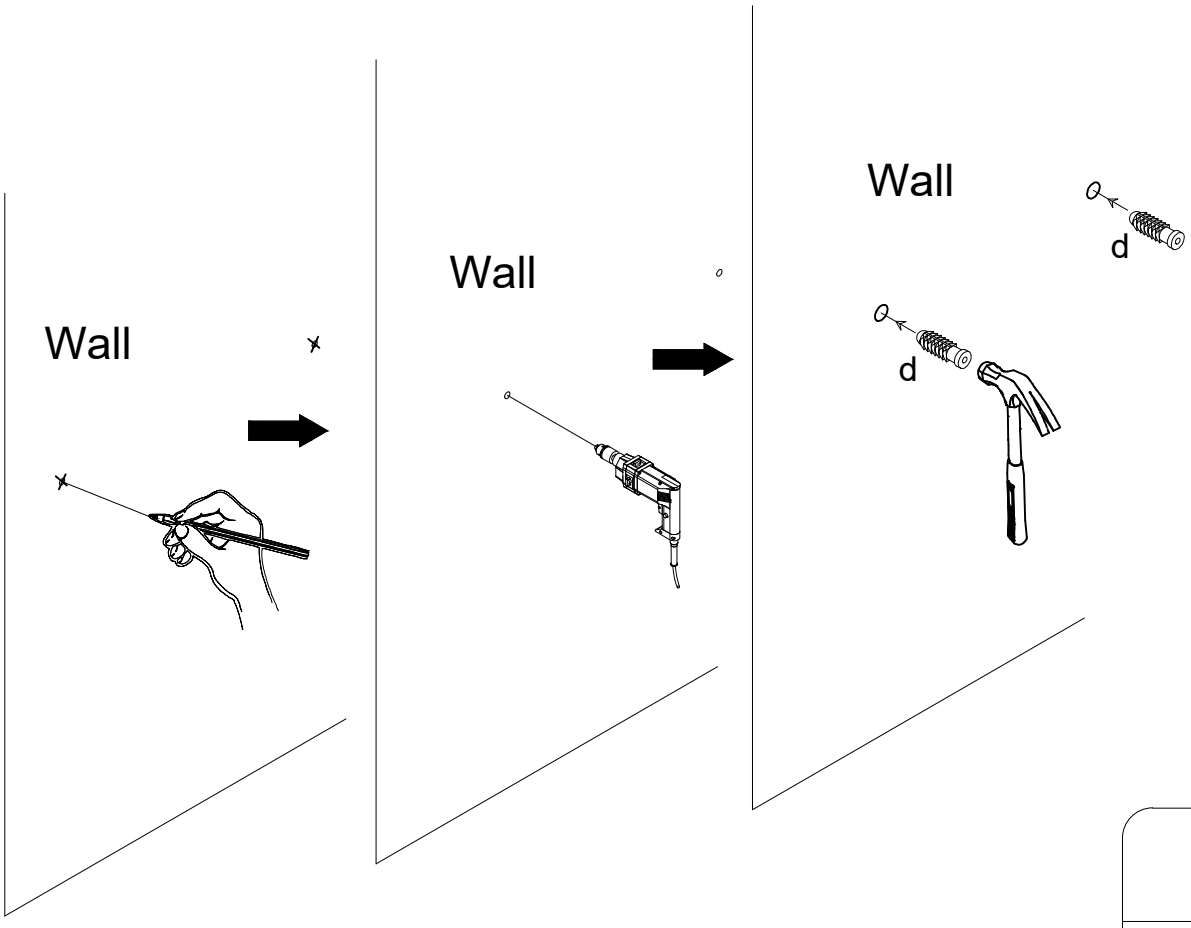

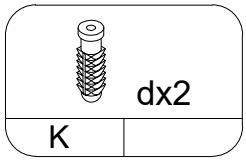

STEP 31

PF021

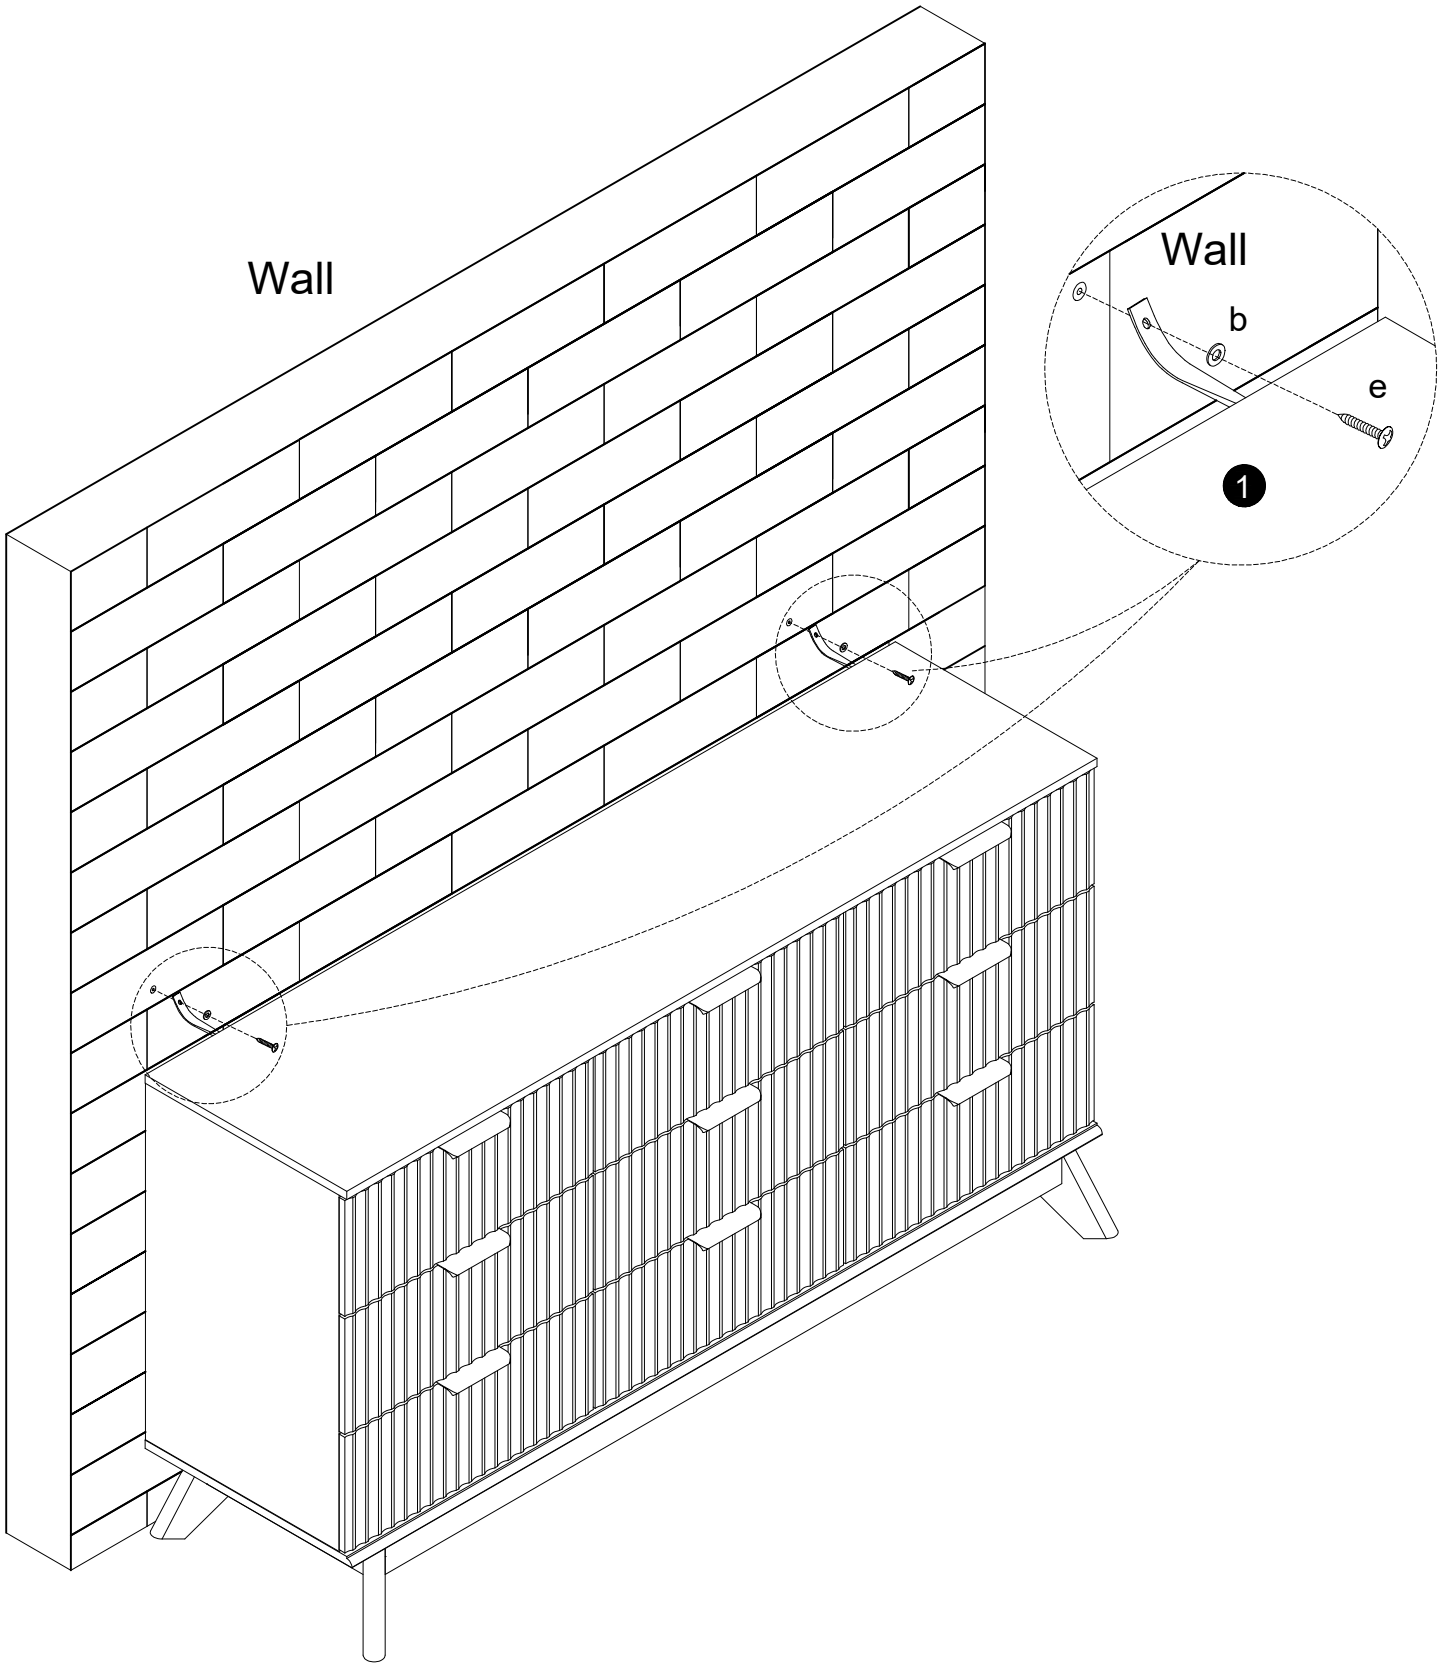

bx2	ex2
K	

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

· Tighten all bolts and screws again within the first 2 weeks of assembly
· Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

· Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
· Small amount of mild soap can be used if necessary
- **Dry the surface immediately after cleaning.**

⚠ DO NOT use bleach or alcohol detergent to clean the surface.
⚠ DO NOT apply wood treatment on parts made with MDF and PB.
Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.
Make sure to dry the furniture immediately after cleaning