

INSTALLATION
Product Manual

Version: 210374US-01-25A-AA

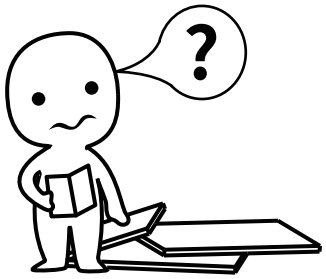


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

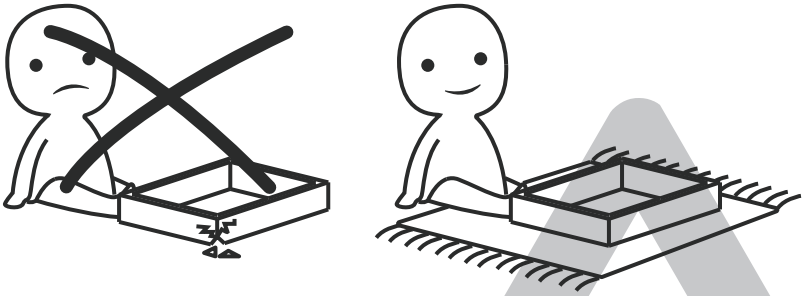


AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.

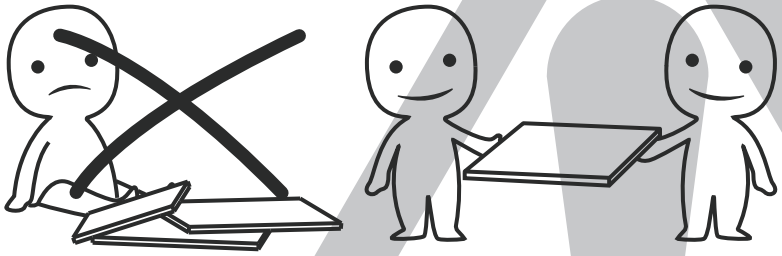

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

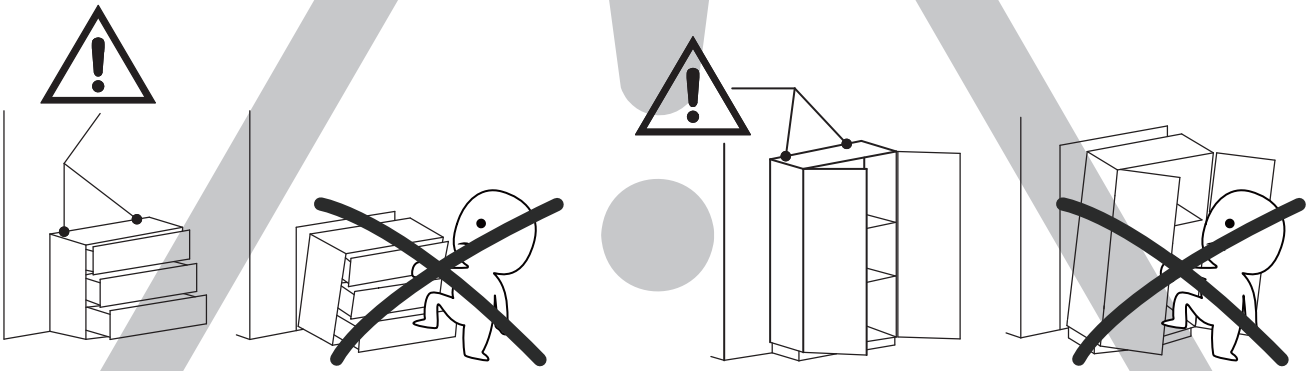

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.




For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.





Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.



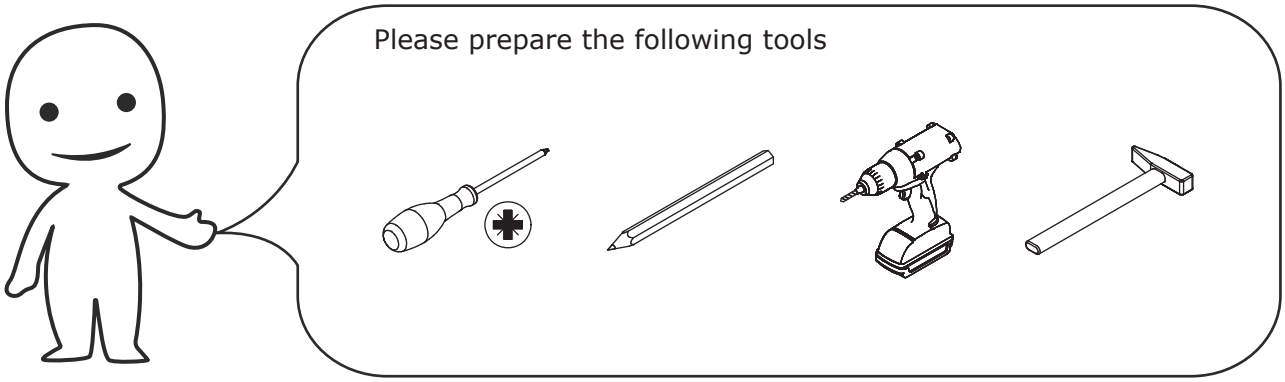







When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size


A x 41	B x 41	C x 51	D x 42	E x 29
 CRA0635B		 CRB1595A	 CRF0630A	 CRC0540A

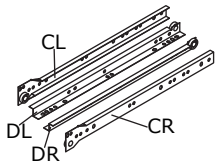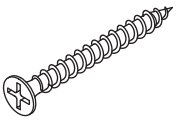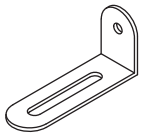F x 5	G x 20	H x 20	K x 32	L x 2
 WX1214A	 CRD3520A	 CRD3512A	 CRD3535A	

M x 2	N x 12	P x 16	Q x 10	R x 10
		 CRD0314A		 CRE0420A

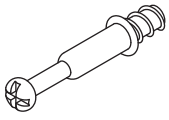S x 1	U x 10	V x 2
	 CRA0635A	 CRE3514A

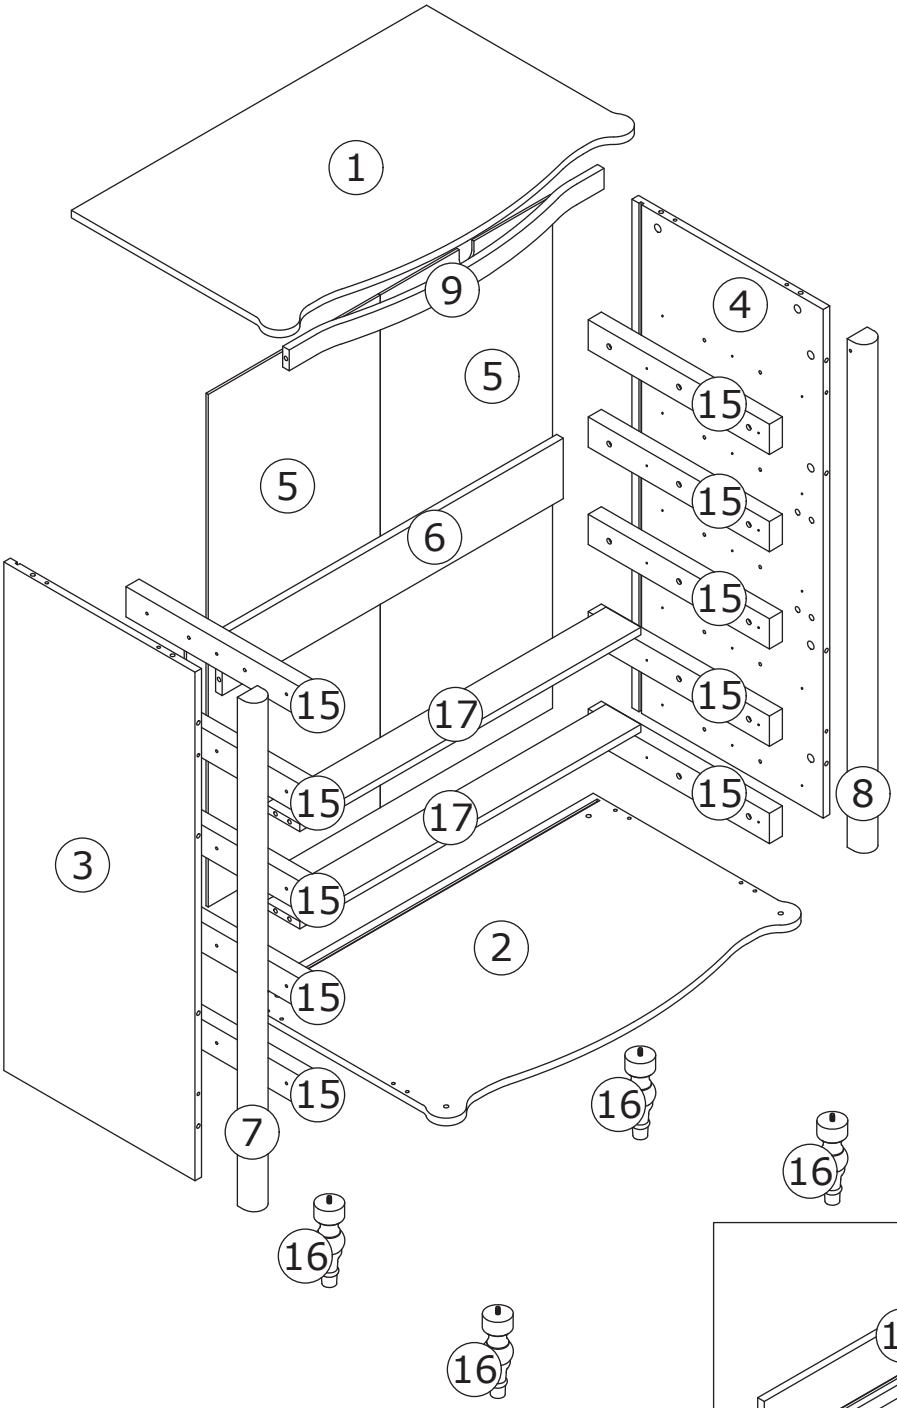

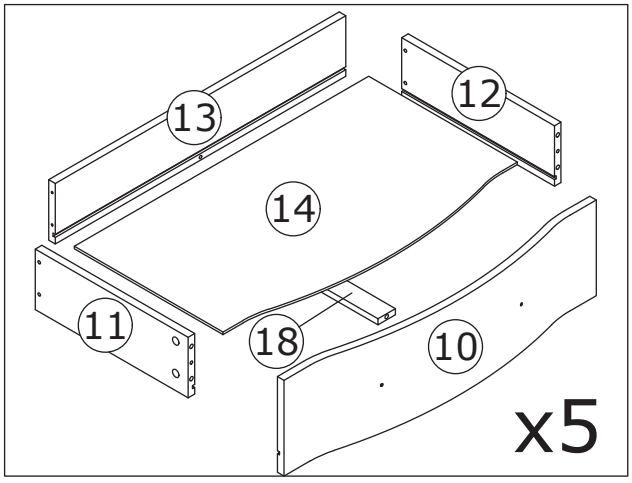


⚠WARNING


Children have died from furniture tipover.To reduce the risk of furniture tipover:


- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


This is a permanent label.
Do not remove!

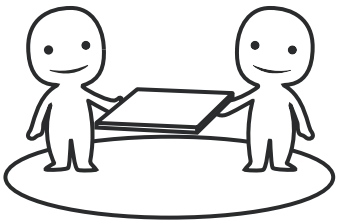


ASSEMBLED BY 2 ADULTS

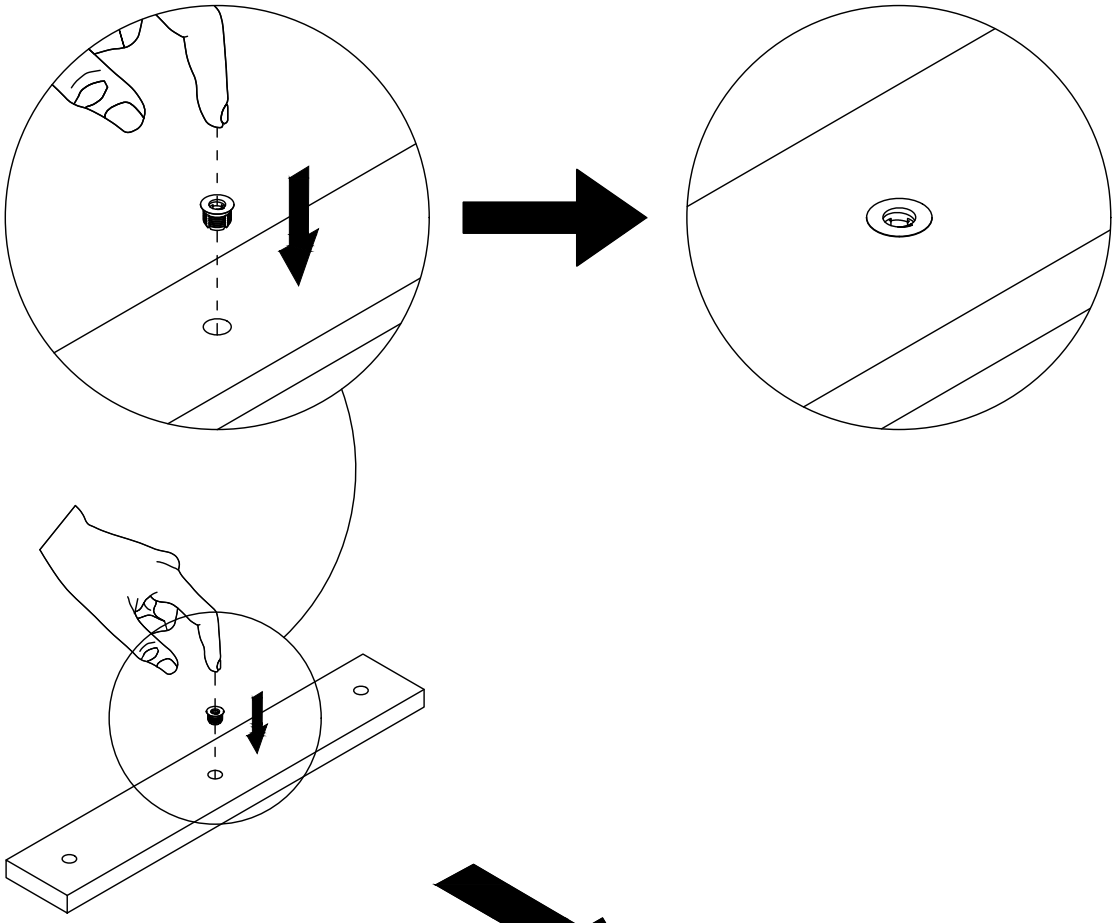


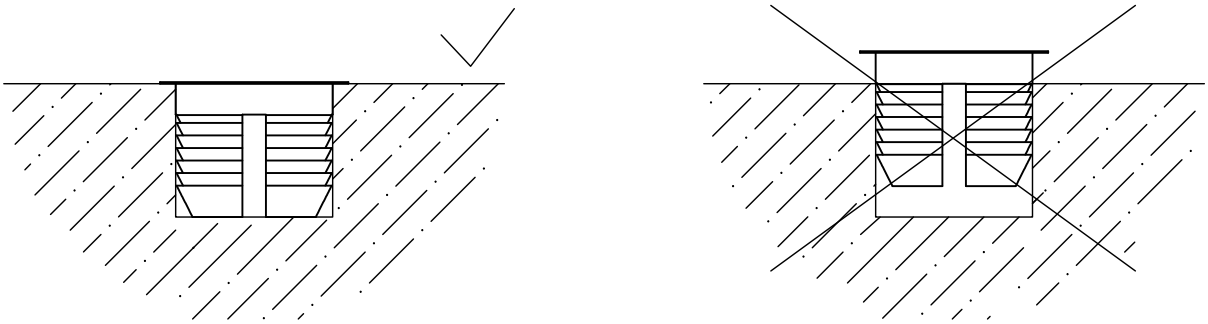


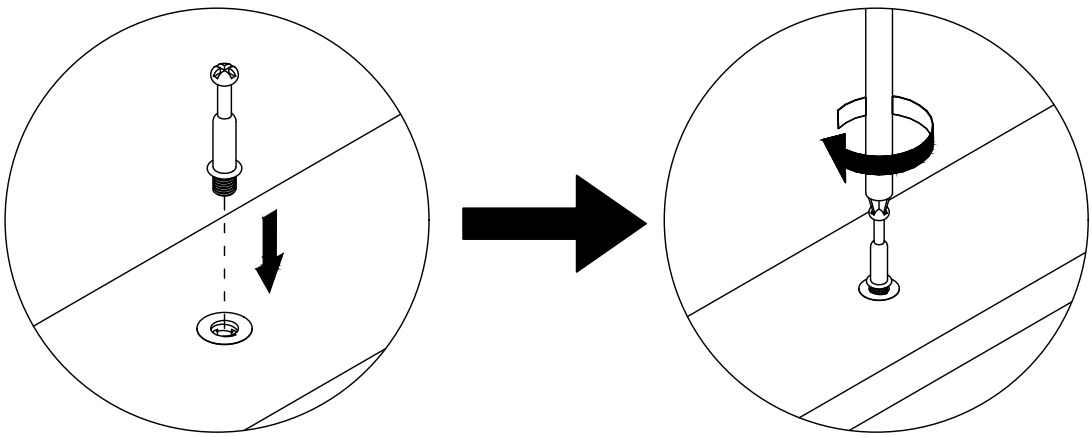



If you need to move the cabinet, do not push it horizontally.
It requires two people to cooperate:
lift the cabinet off the ground first, then place it at your designated position.

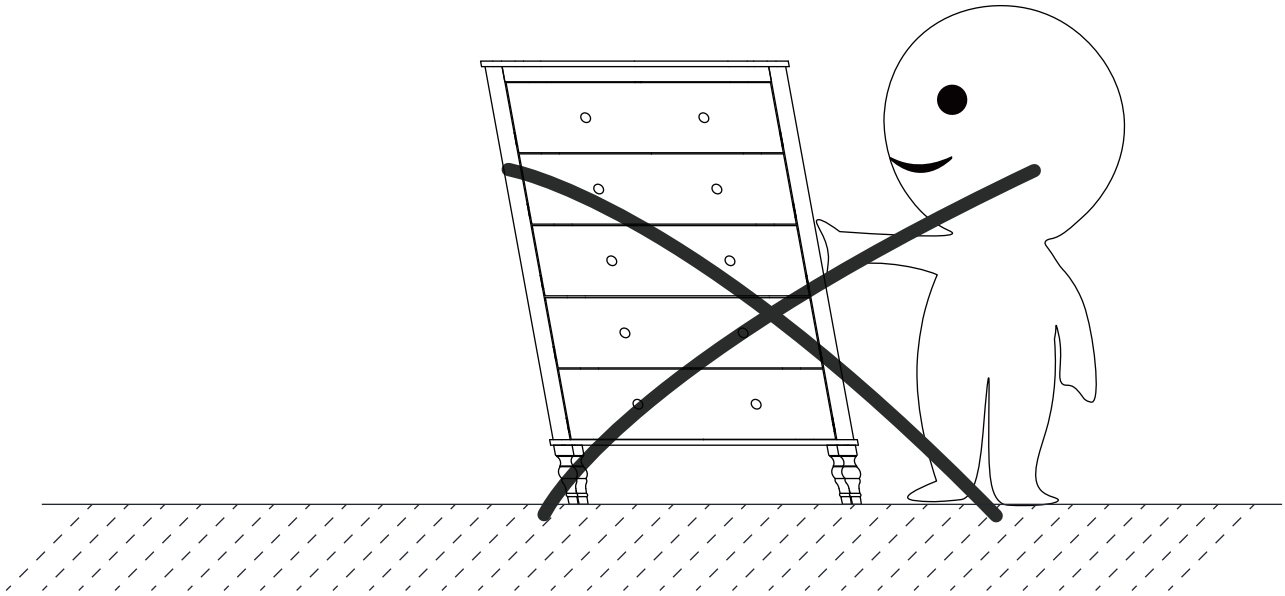

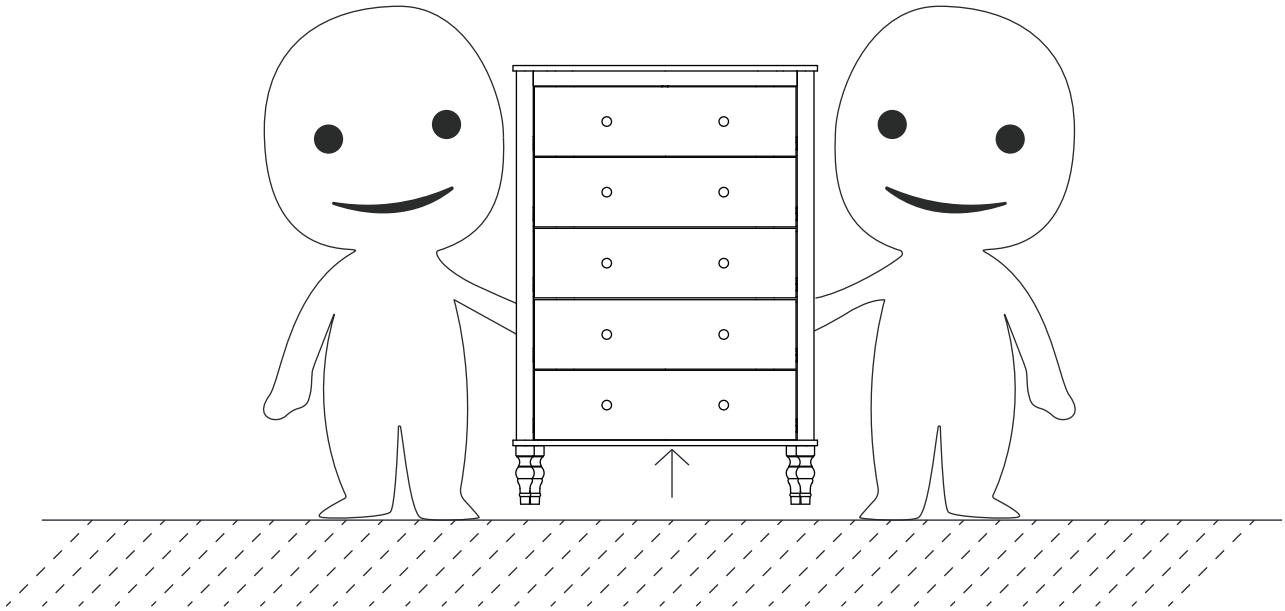


1



D x 20	K x 30	
		
CRF0630A	CRD3535A	

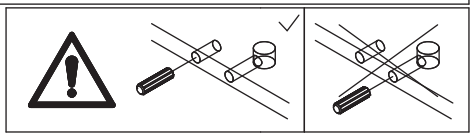


Connect panel 15 to panels 3 and 4 using dowels (D), and secure with screws (K).

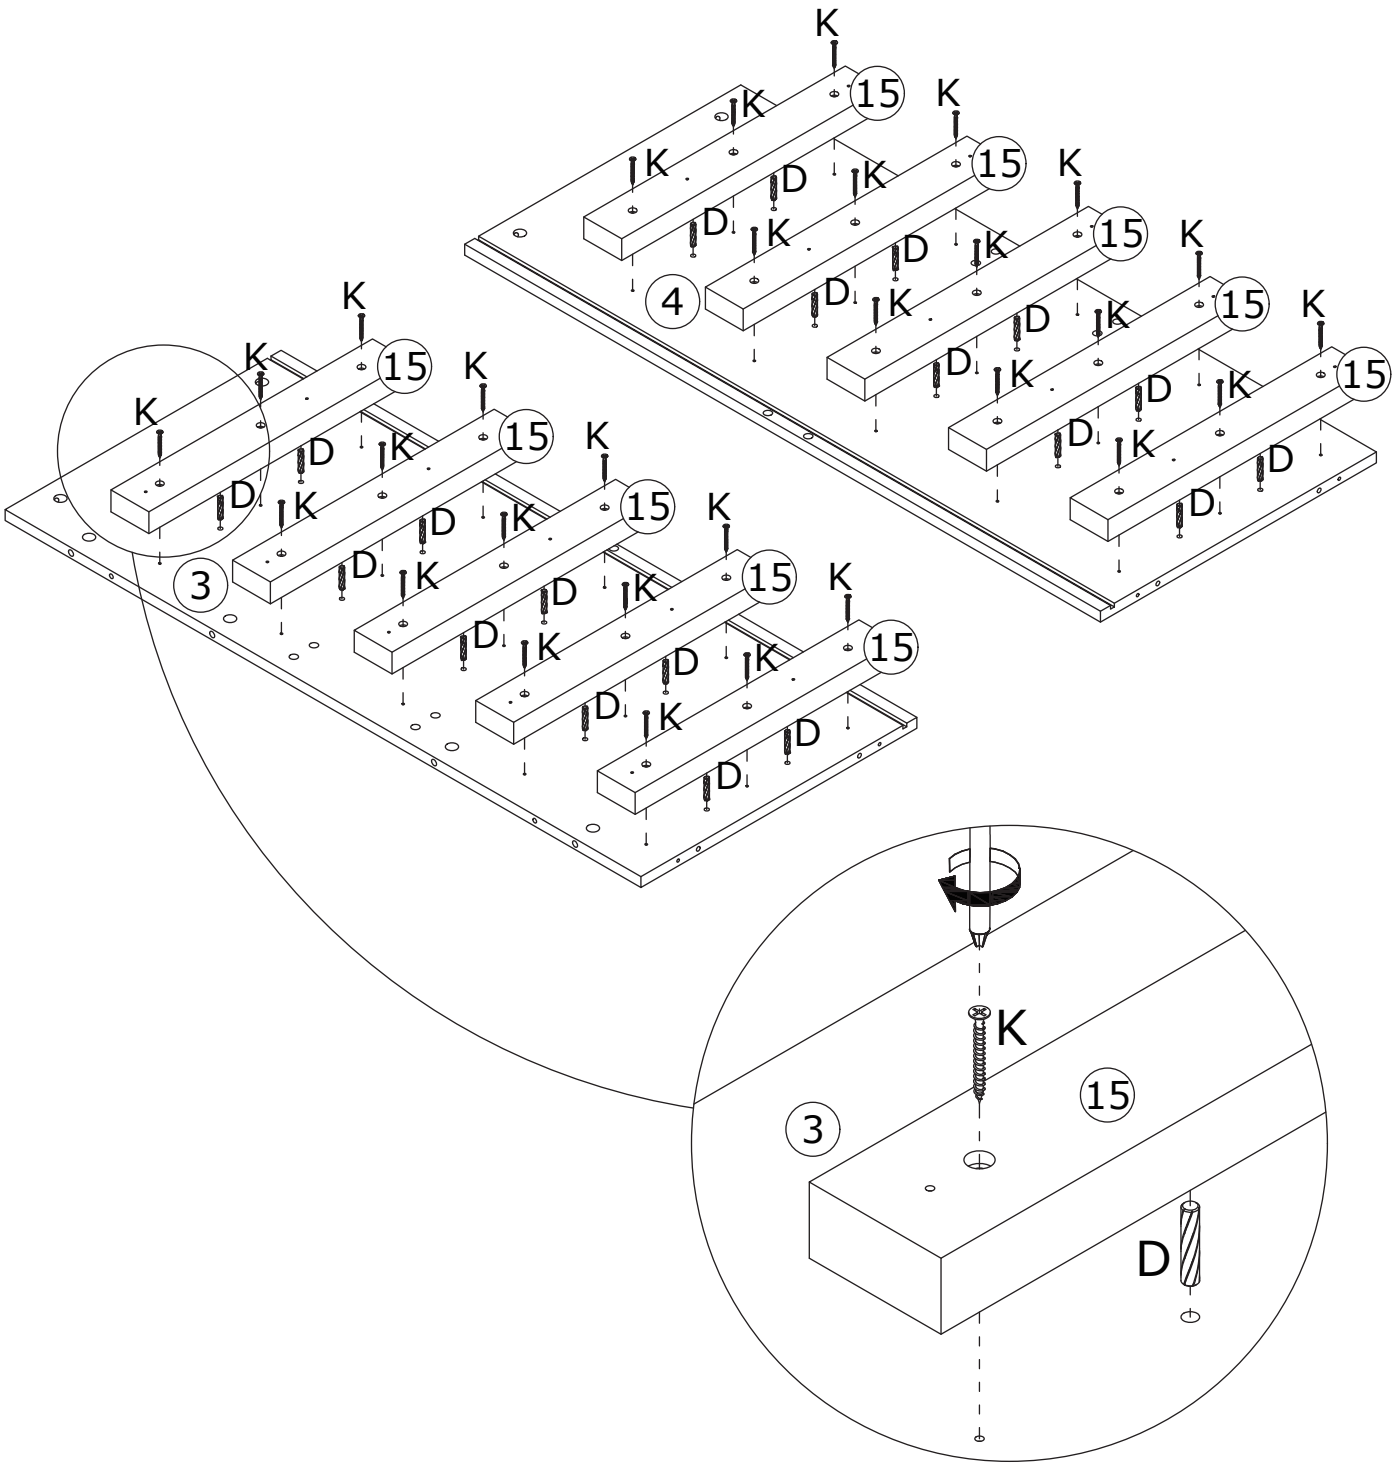


2

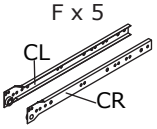A x 12	B x 12	F x 5	G x 20	
				
CRA0635B		WX1214A	CRD3520A	


Use screws (G) to mount slide rails F(F-CL) and F(F-CR) to panel 15.
First install plug (B) onto panels 3 and 4, then screw self-tapping rod (A) onto.

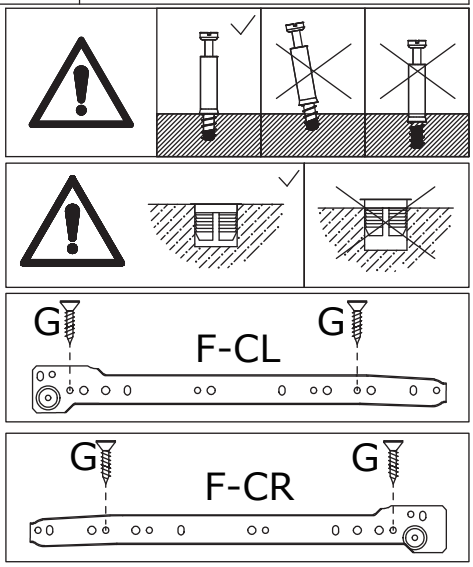

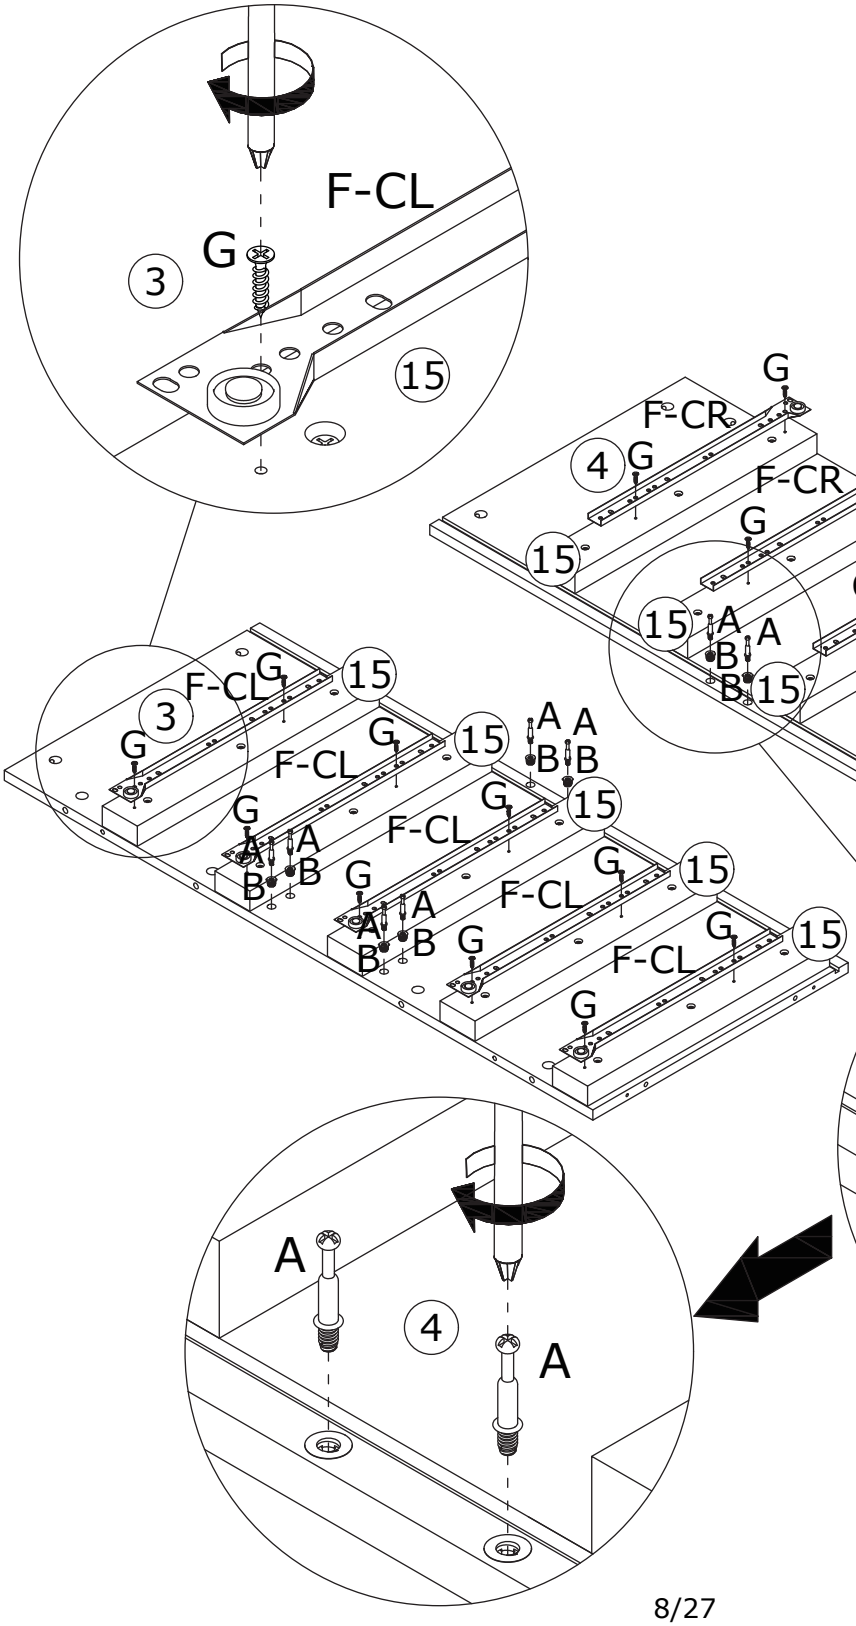



3

U x 8




CRA0635A





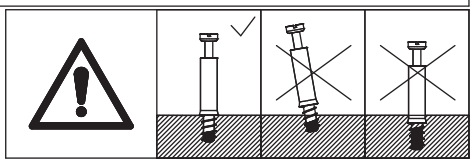


Screw self-tapping rod (U) onto panels 7 and 8.

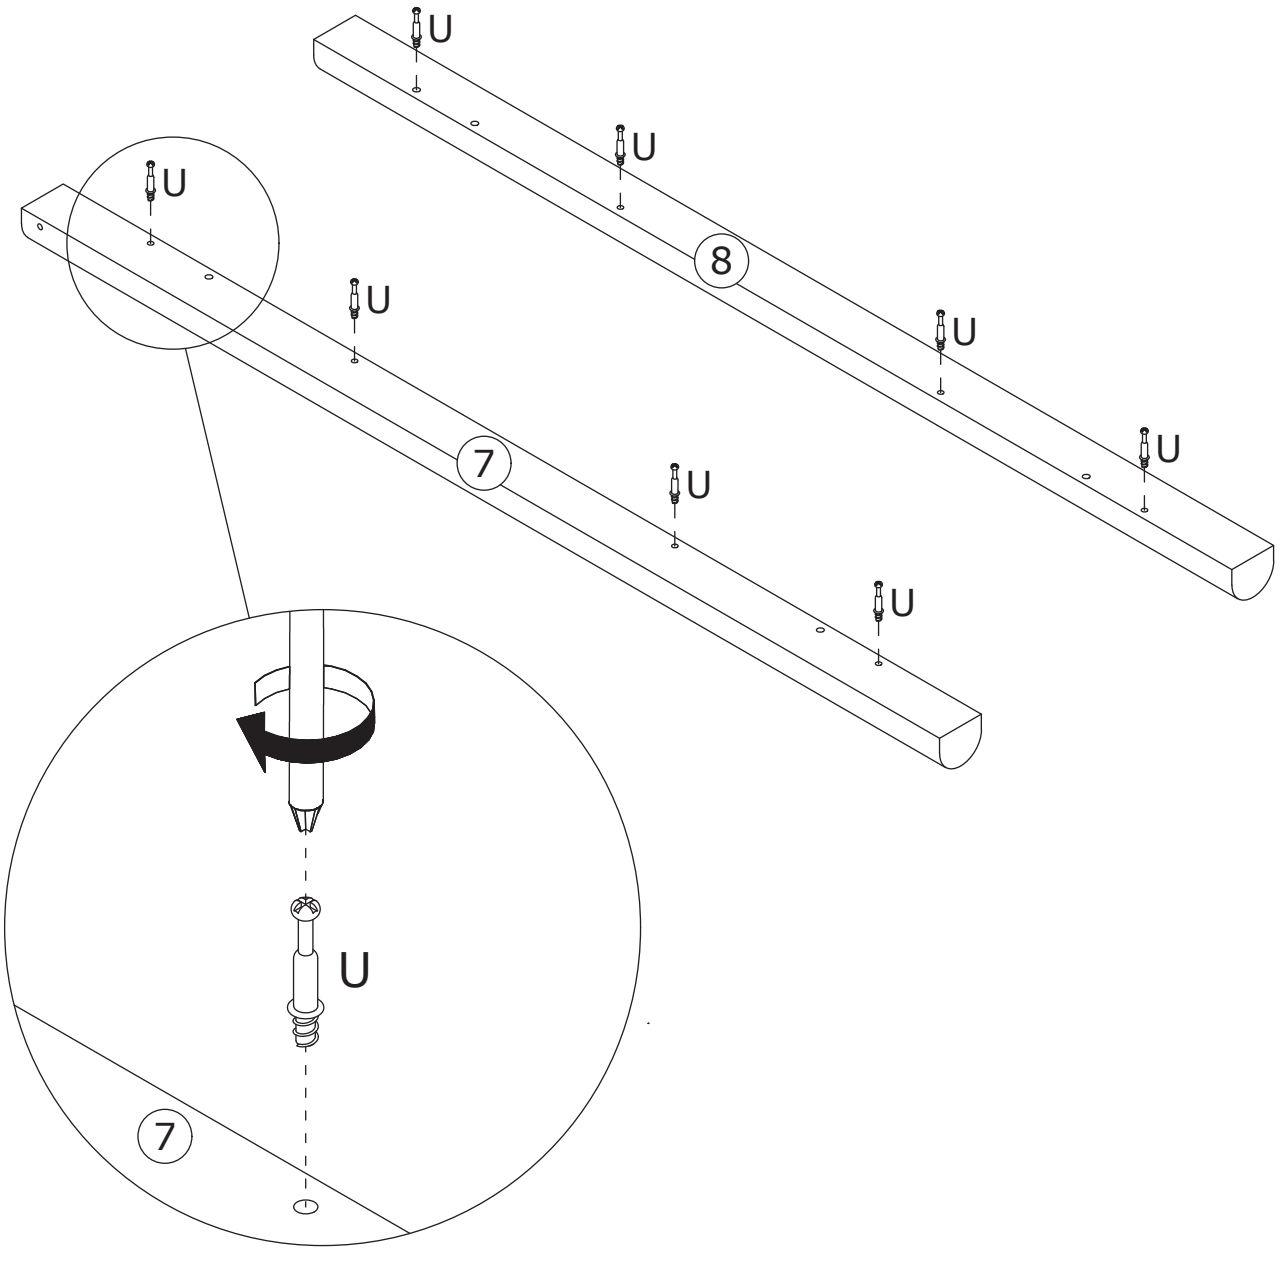


4

C x 8	D x 4	
		
CRB1595A	CRF0630A	

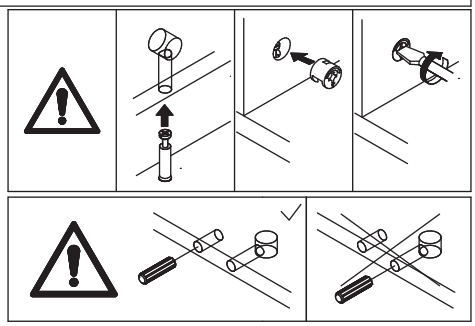


Use dowels (D) to connect panels 7 and 3, panels 8 and 4, then tighten by turning CAM lock (C) clockwise.

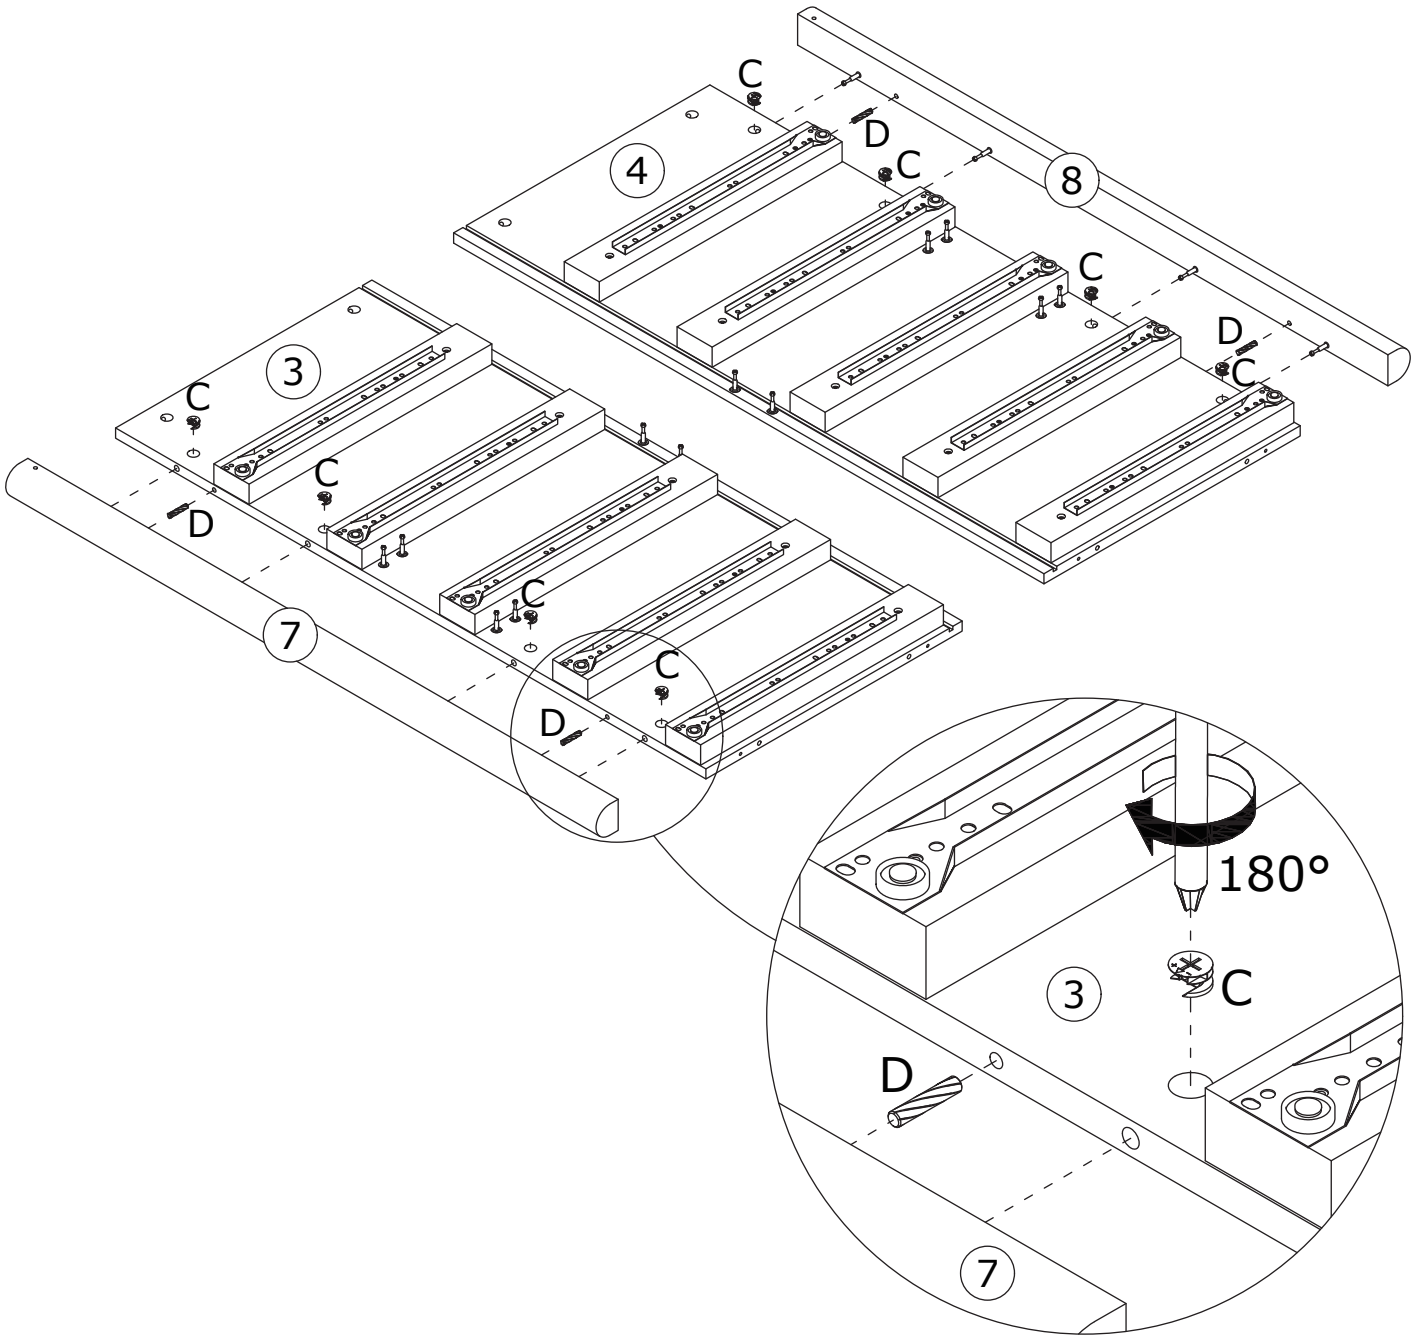



5

U x 2




CRA0635A



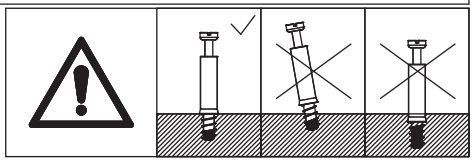

Screw self-tapping rod (U) onto panels 7 and 8.

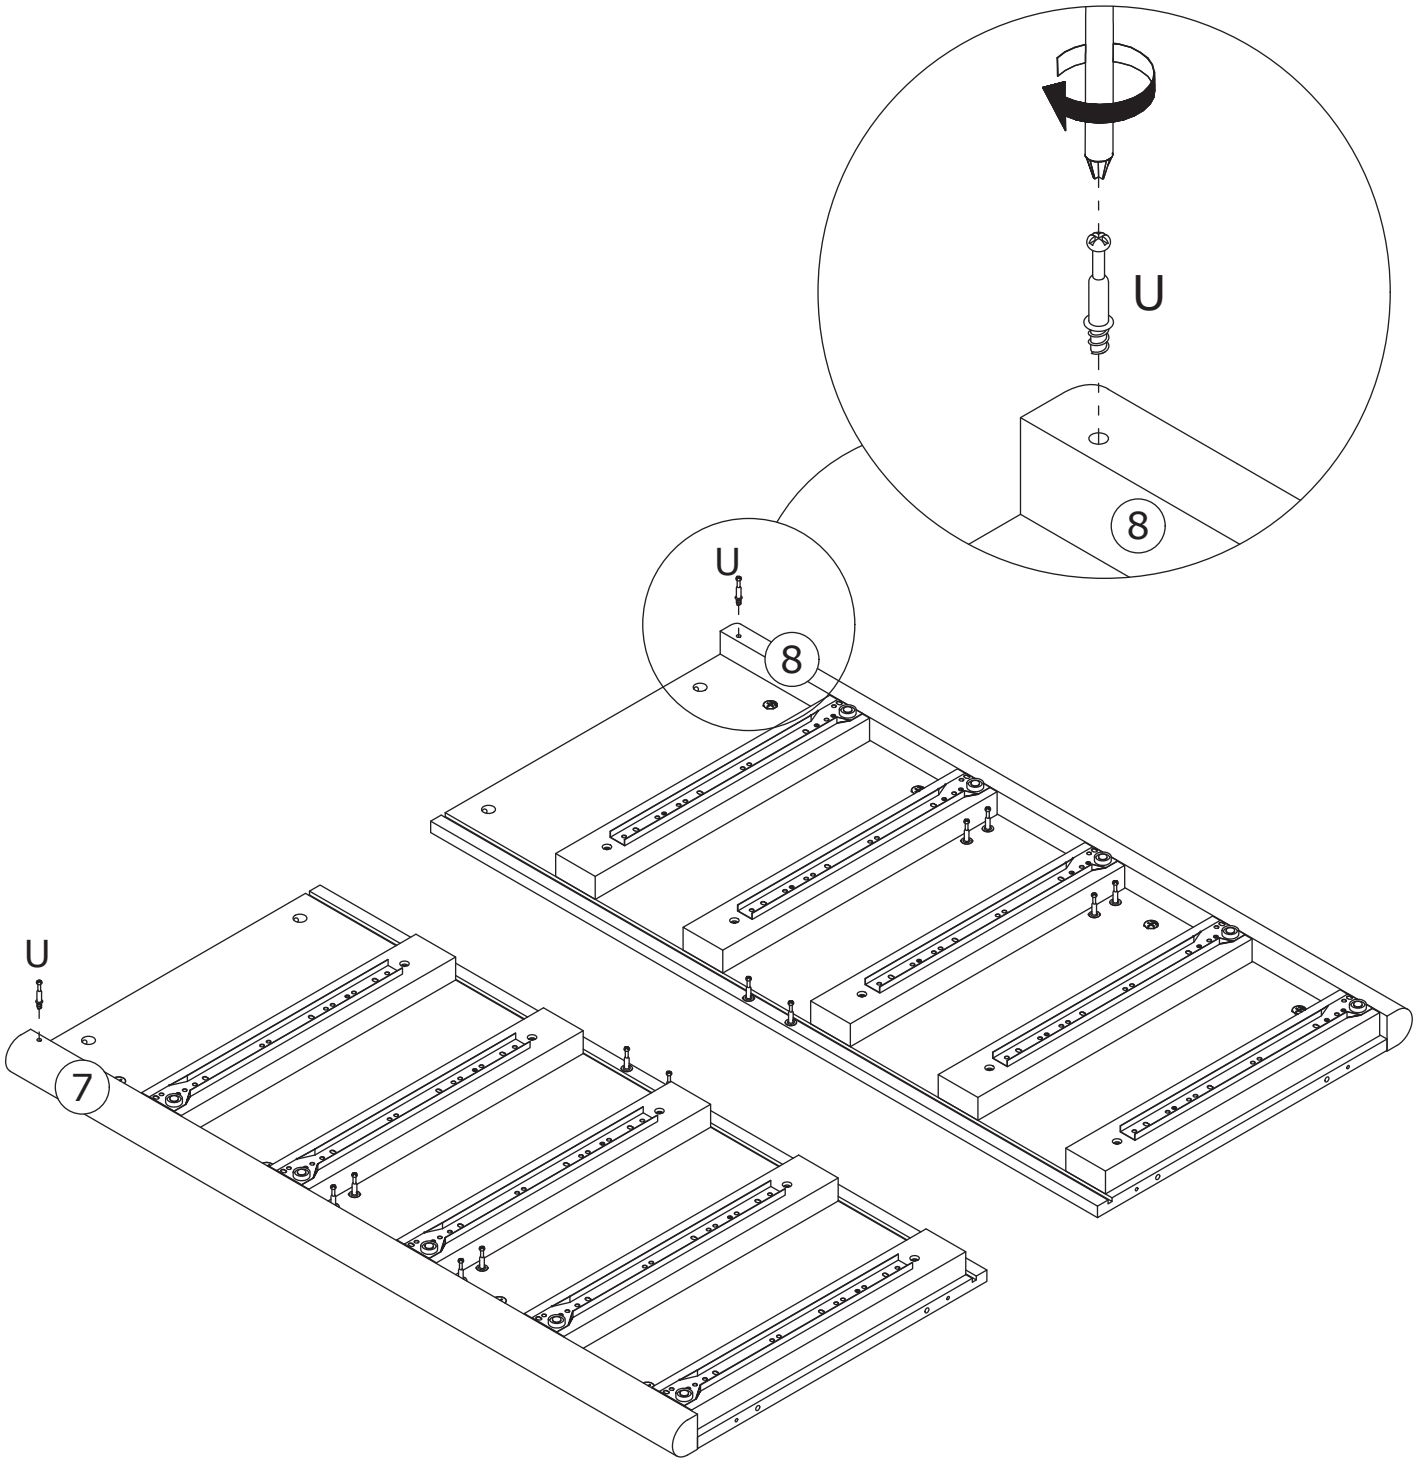



6

C x 7




CRB1595A



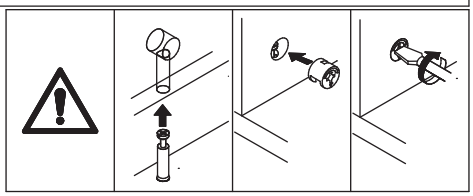

Connect panel 9 to panel 7, panels 6 and 17 to panel 3, then tighten by turning CAM lock (C) clockwise.

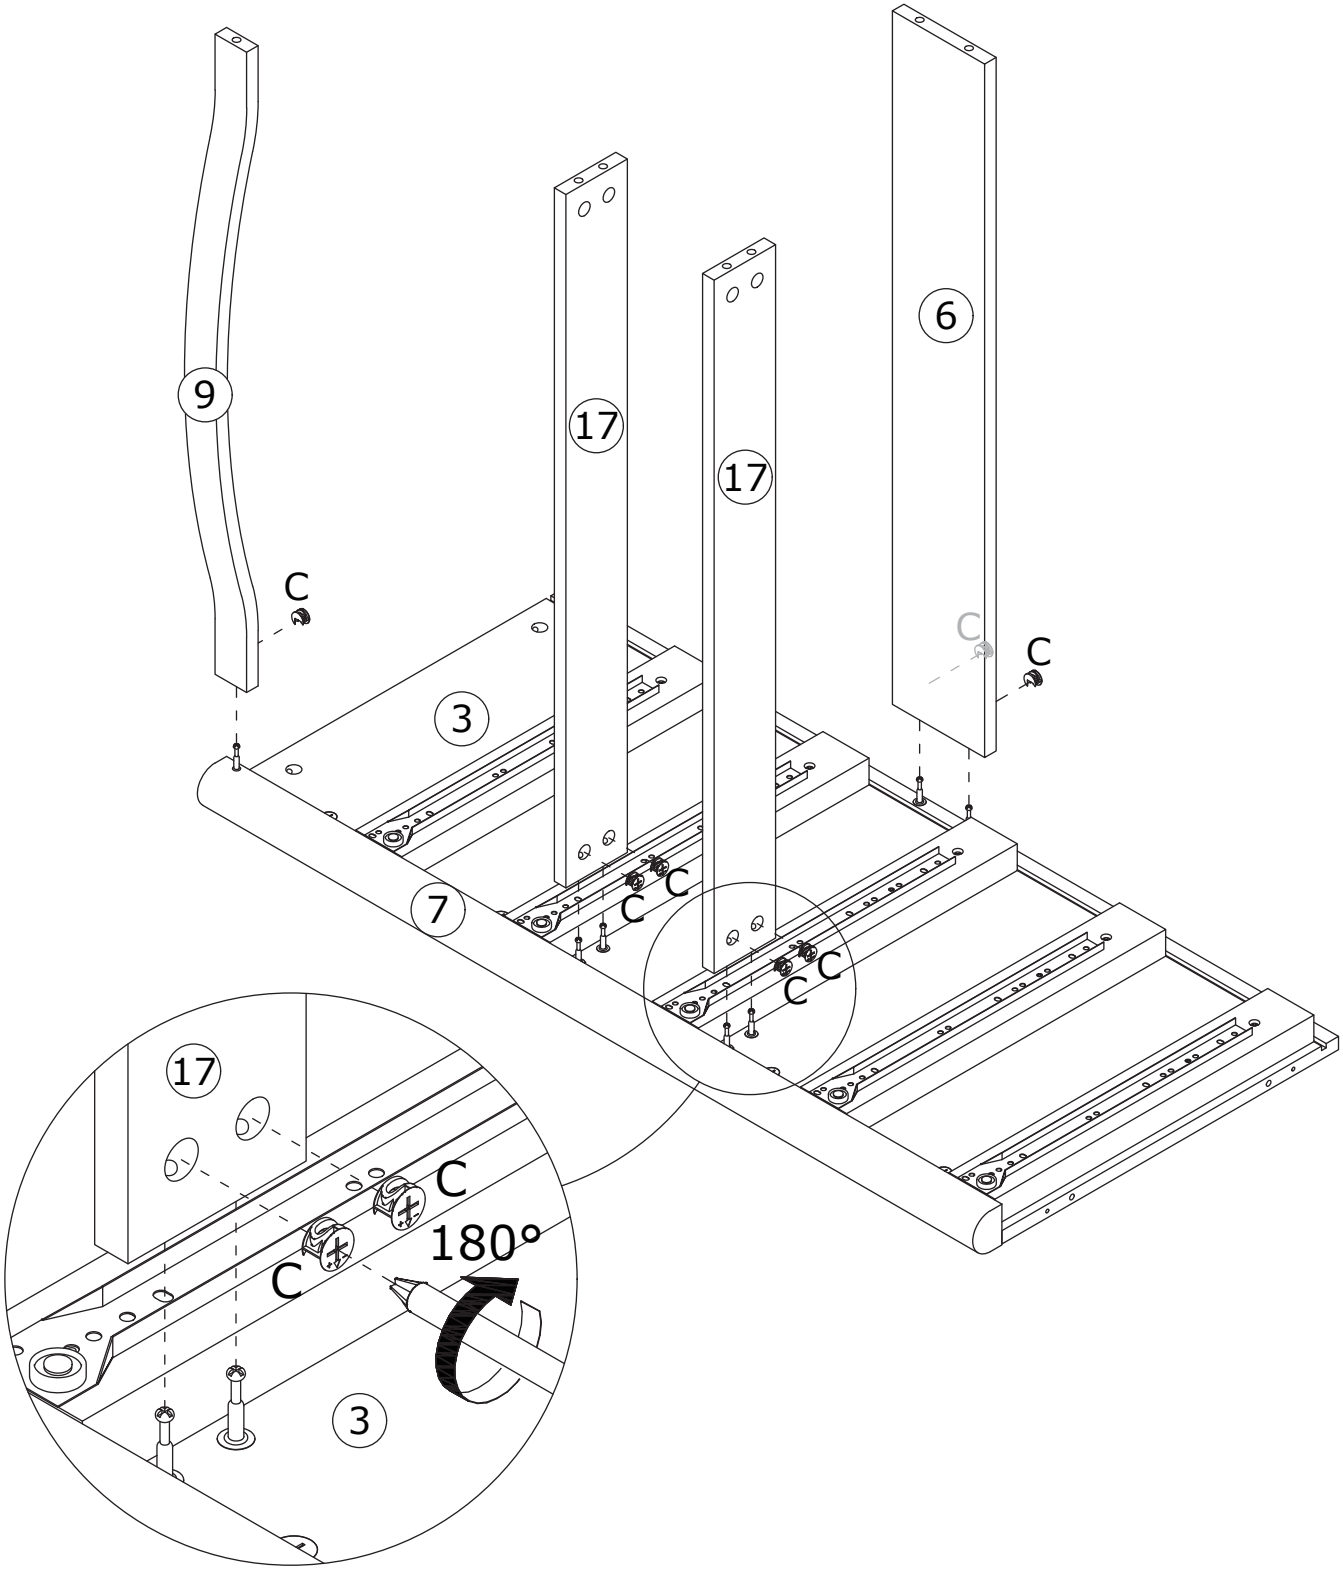



7

C x 7




CRB1595A






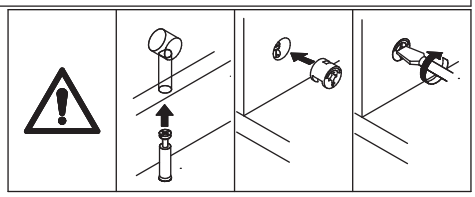


Connect panel 4 to panels 6 and 17, panel 8 to panel 9, then tighten by turning CAM lock (C) clockwise.

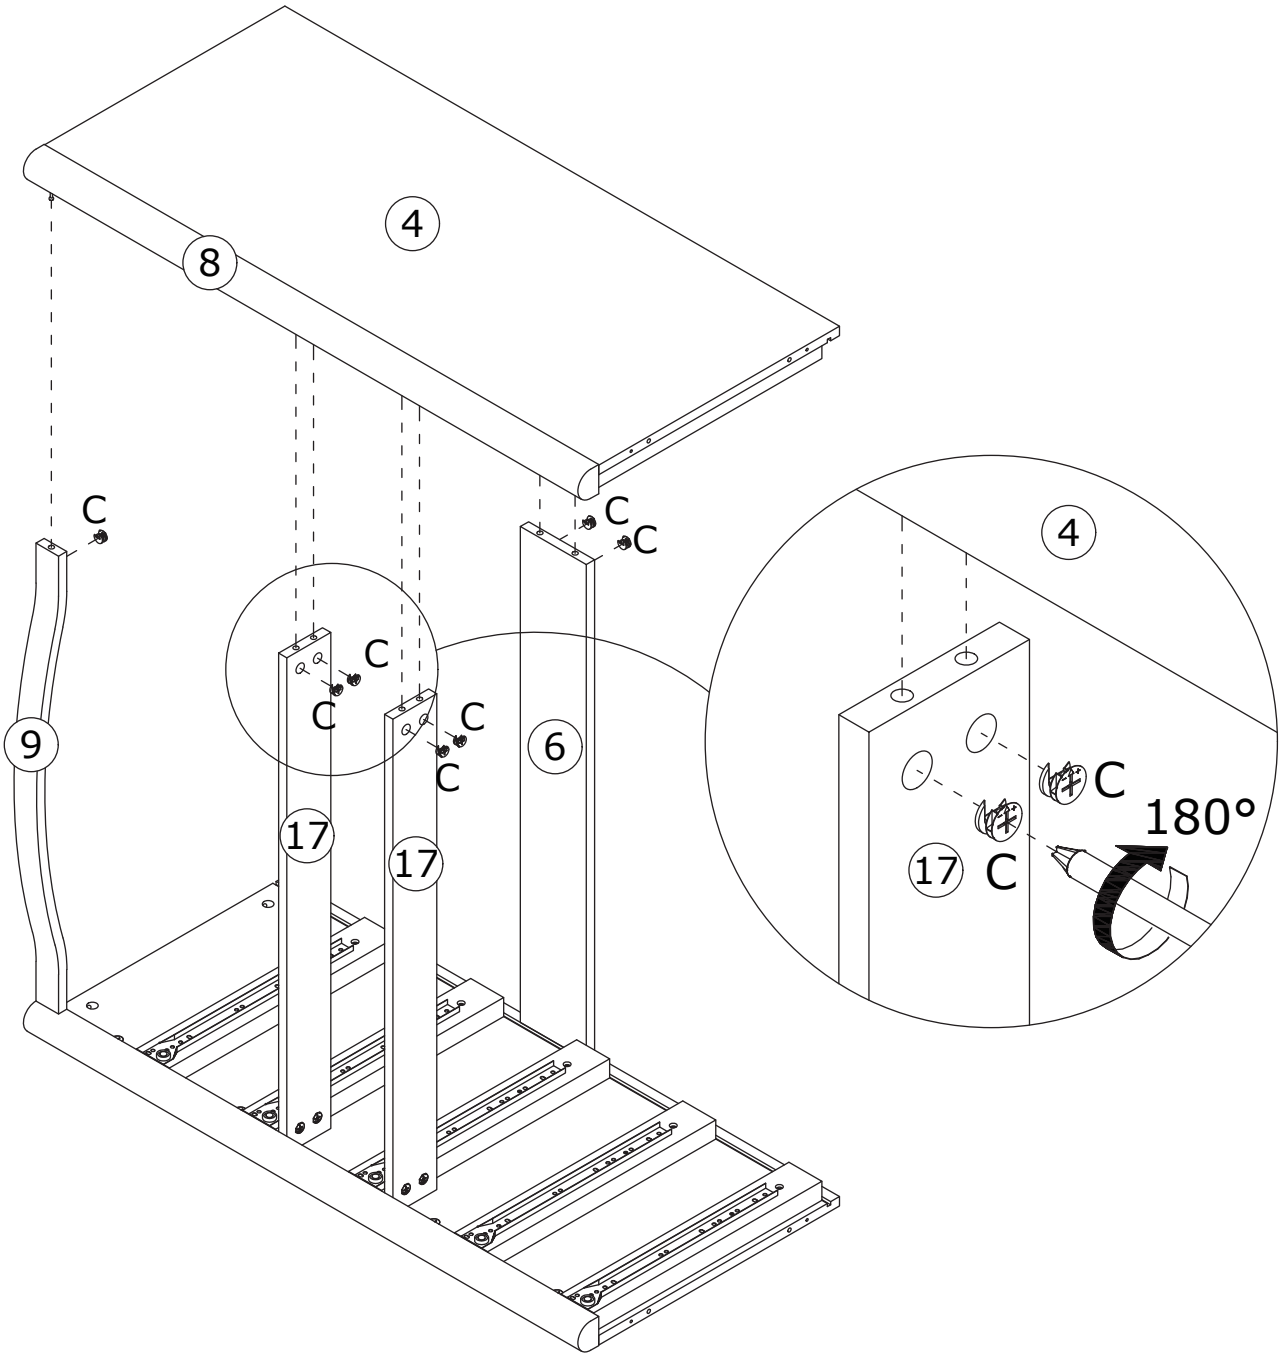


8

D x 4	E x 4	
		
CRF0630A	CRC0540A	

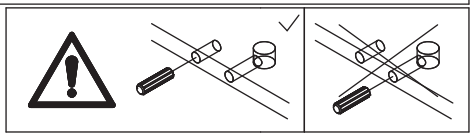


Flip the cabinet body over.
Use wooden dowels (D) to connect panels 2, 3 and 4, then secure with screws (E).

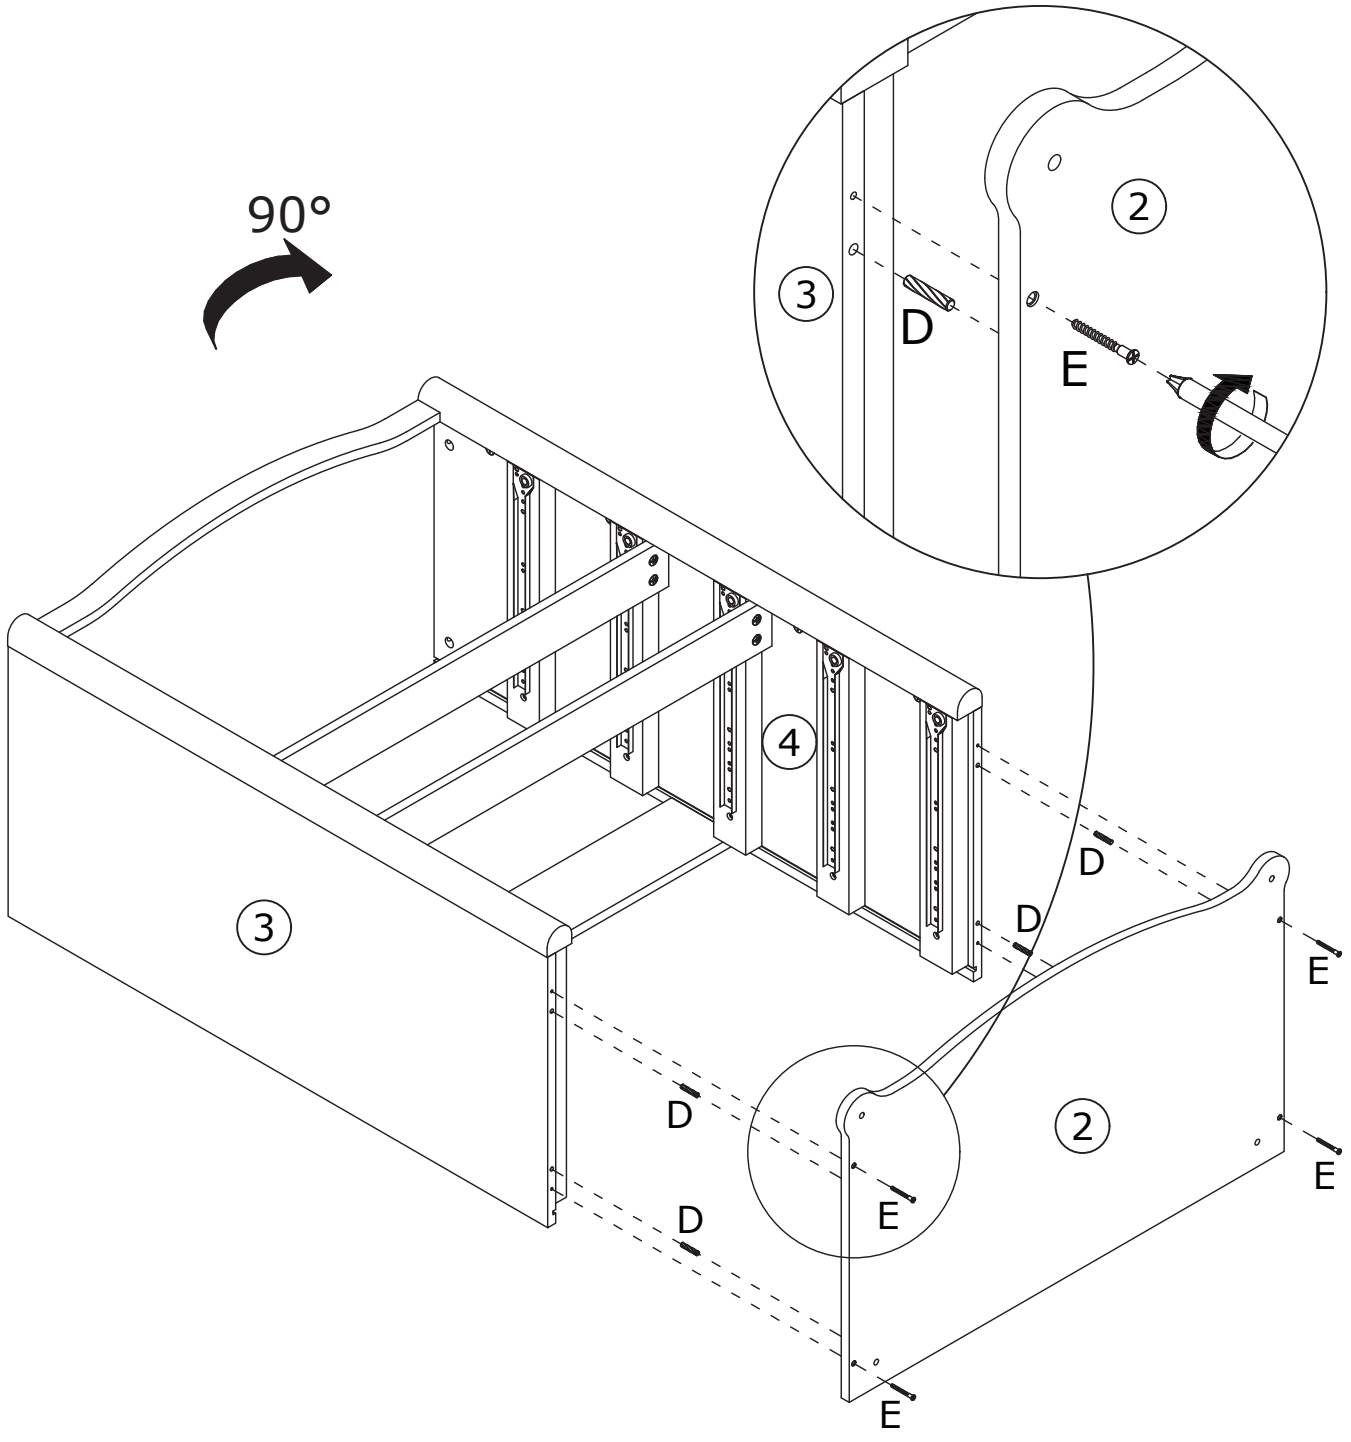


9


Install leg 16 to panel 2 and tighten by turning clockwise.

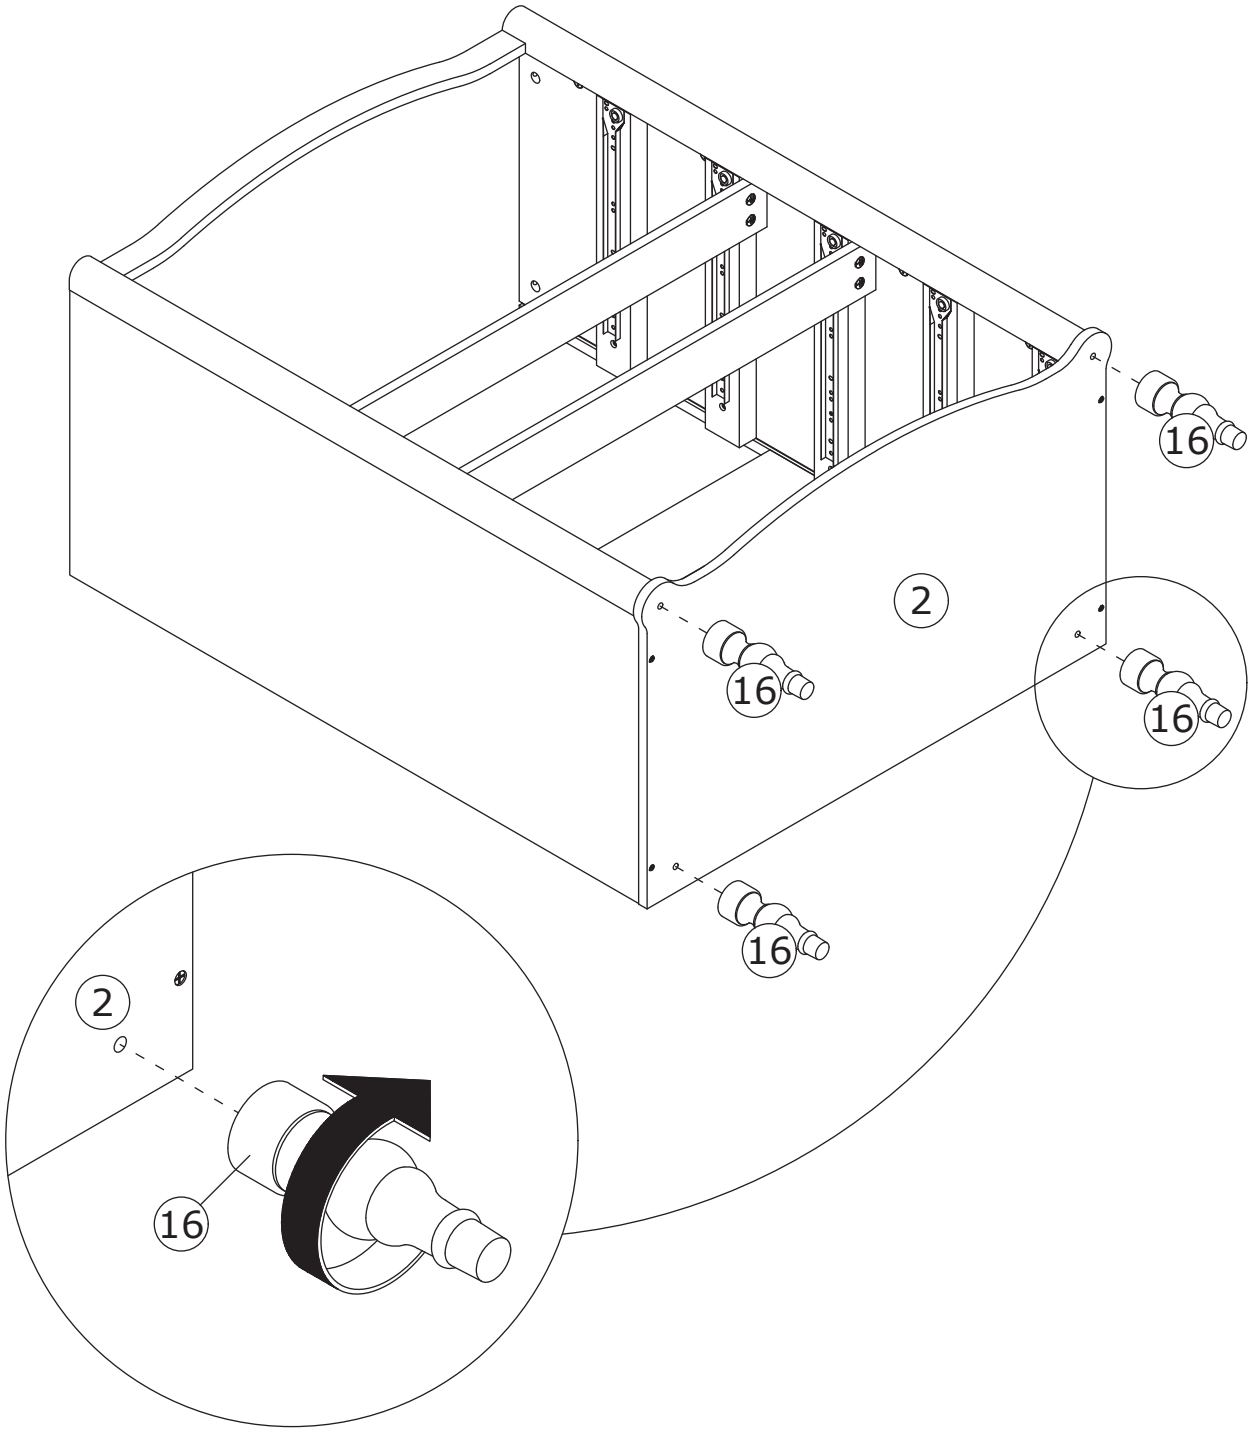



10


Insert panel 5 into the available slots.

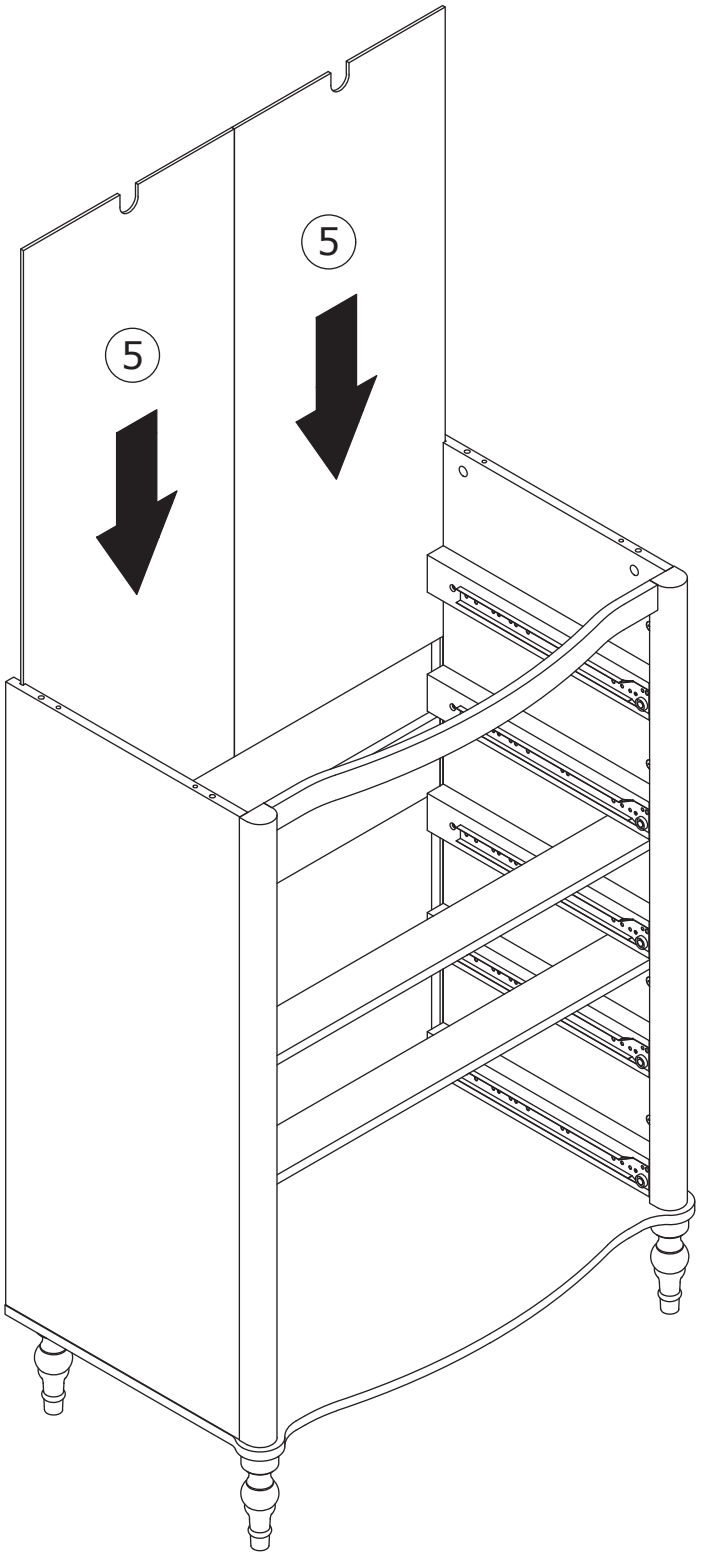

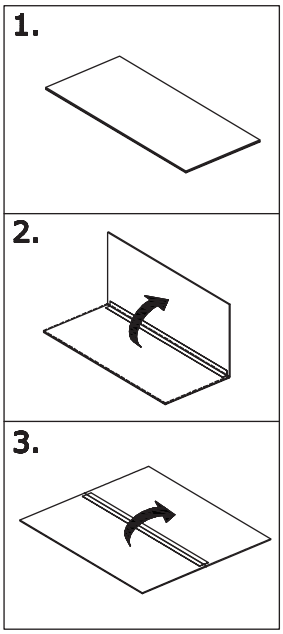


11


B x 4	L x 2	V x 2	
		 CRE3514A	

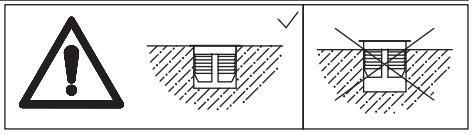



Install plug (B) onto panel 1.
Secure fitting (L) to panel 1 using screws (V).

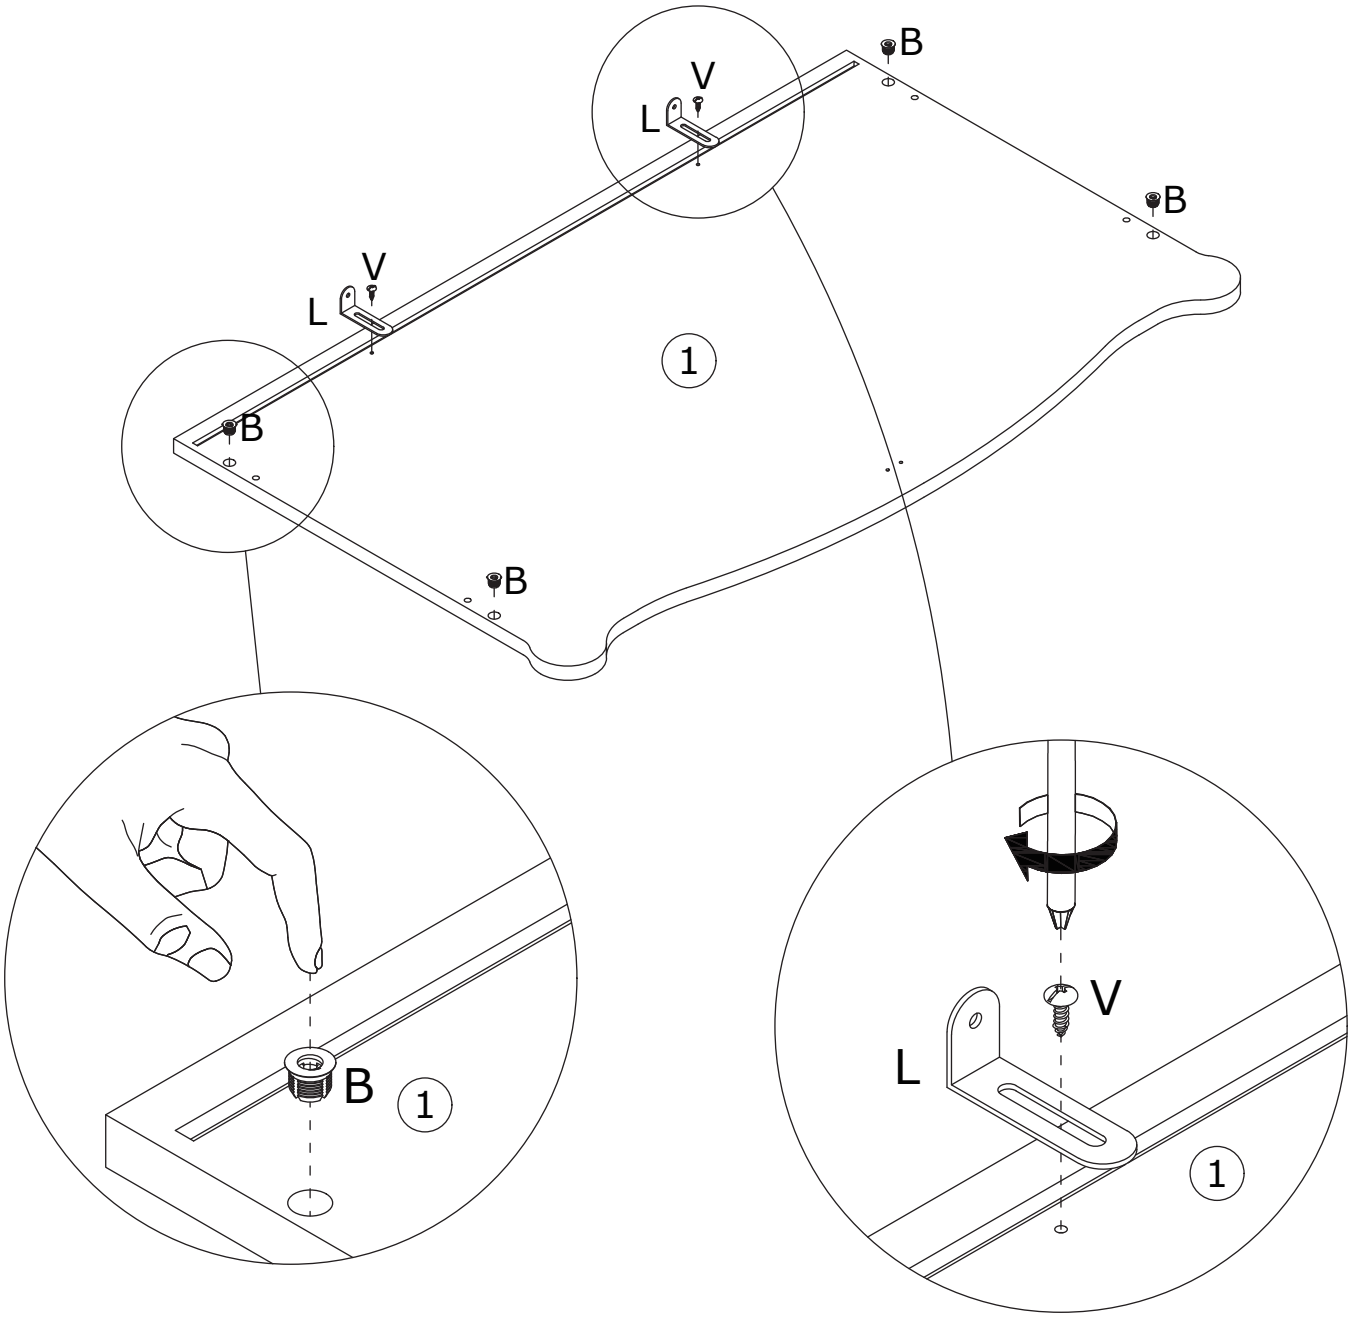


12

A x 4	P x 2	S x 1	
 CRA0635B	 CRD0314A		


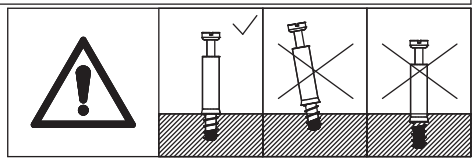


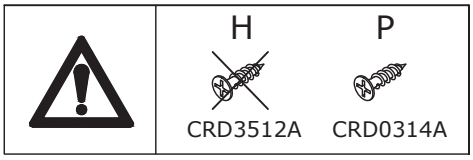


Screw self-tapping rod (A) onto panel 1.
Secure fitting (S) to panel 1 using screws (P).

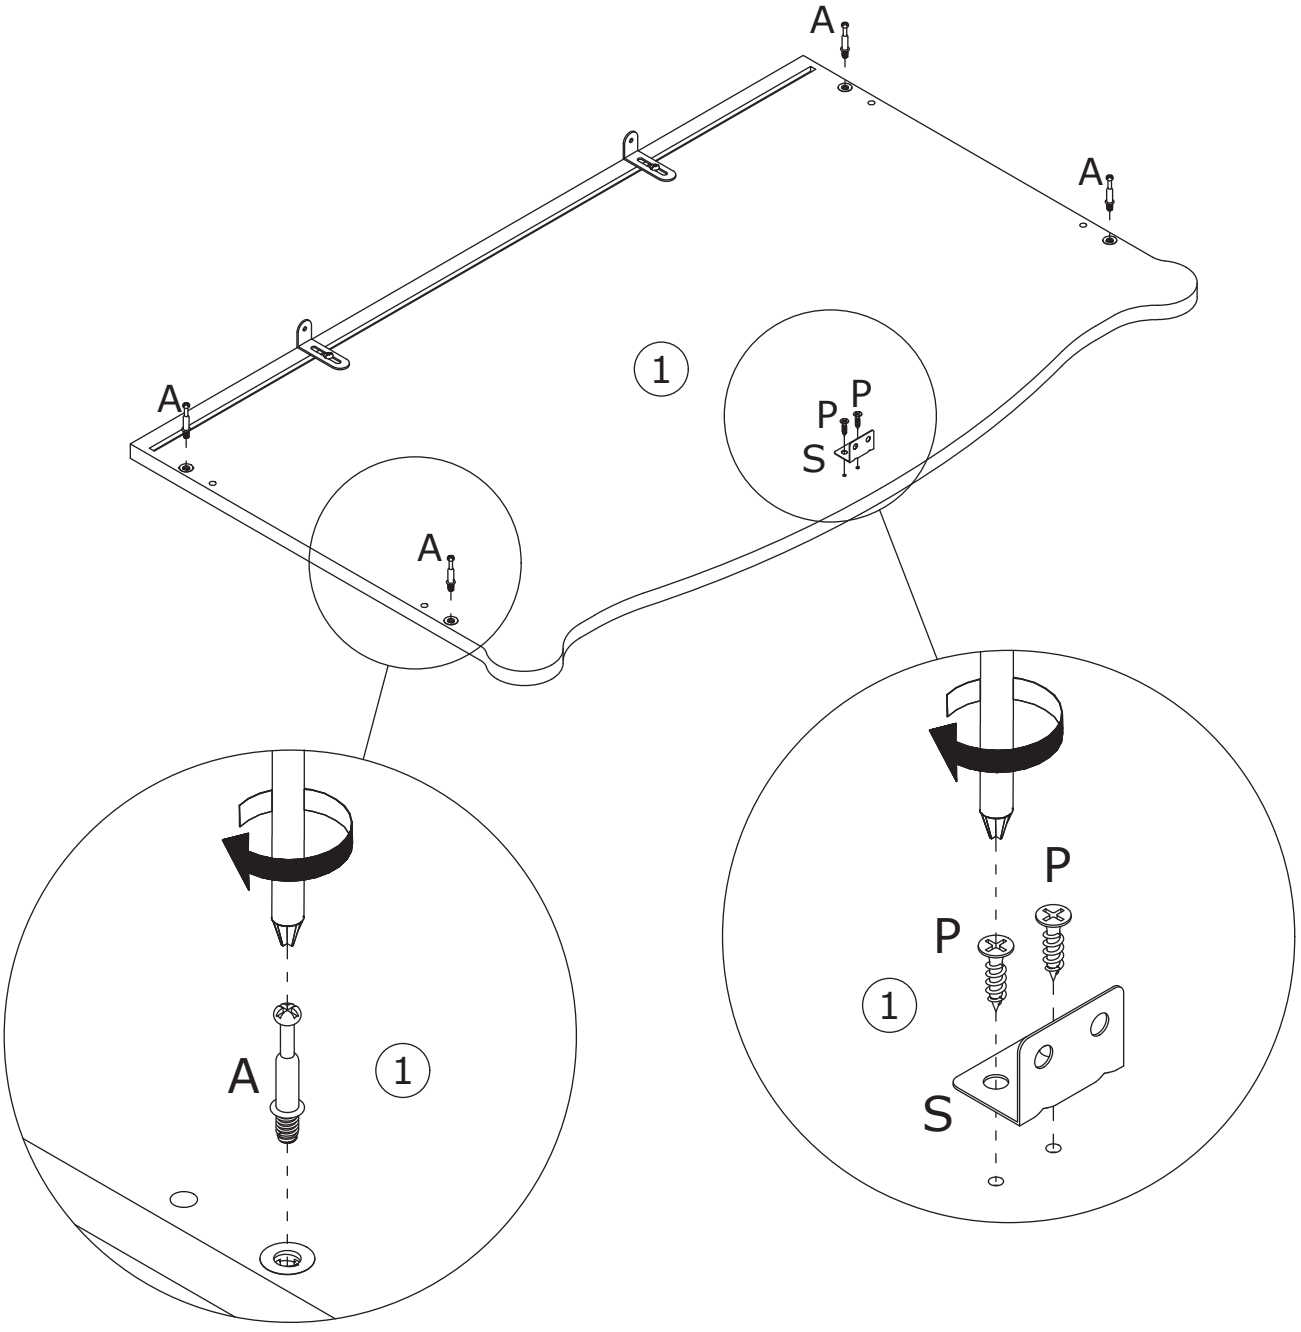


13

C x 4	D x 4	
 CRB1595A	 CRF0630A	

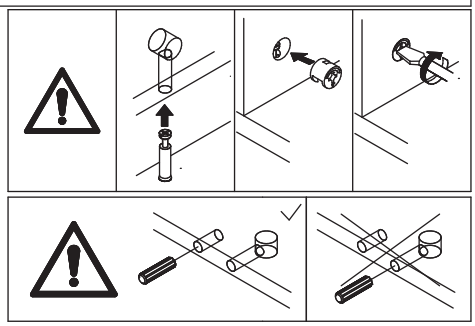

Use wooden dowels (D) to connect panel 1, 3 and 4, then tighten by turning CAM lock (C) clockwise.

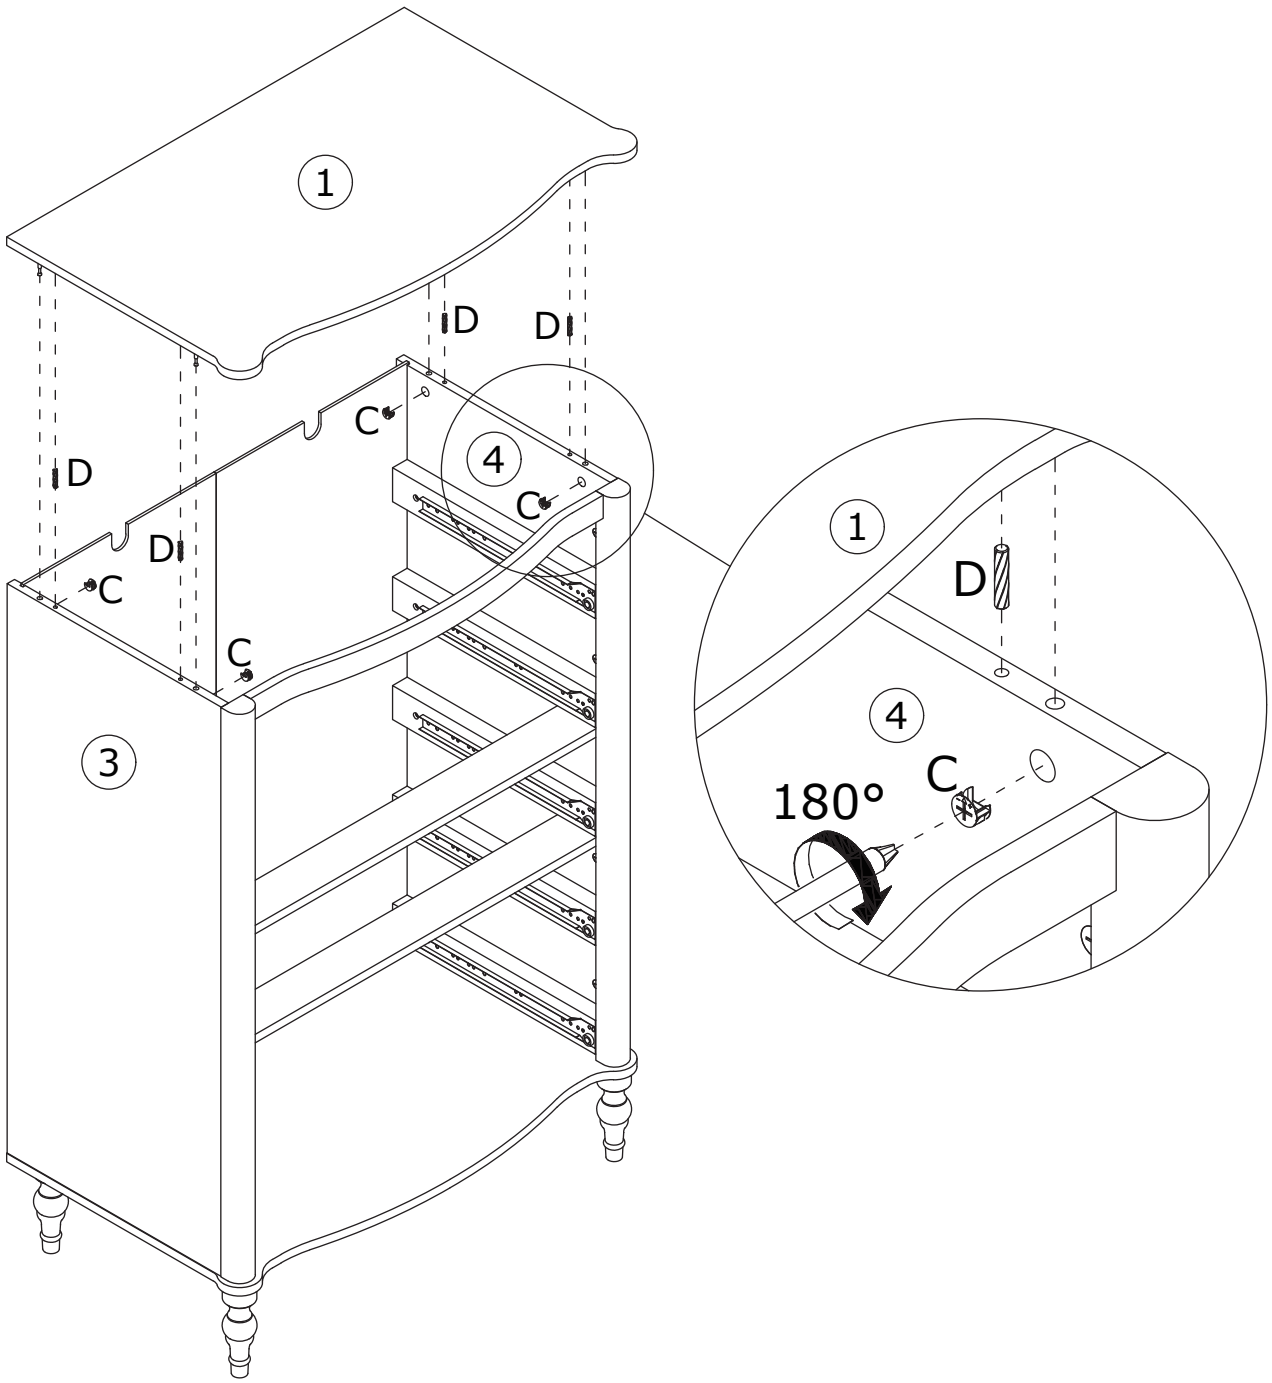


14


P x 2





CRD0314A




Use screws (P) to secure fitting (S) to panel 9.

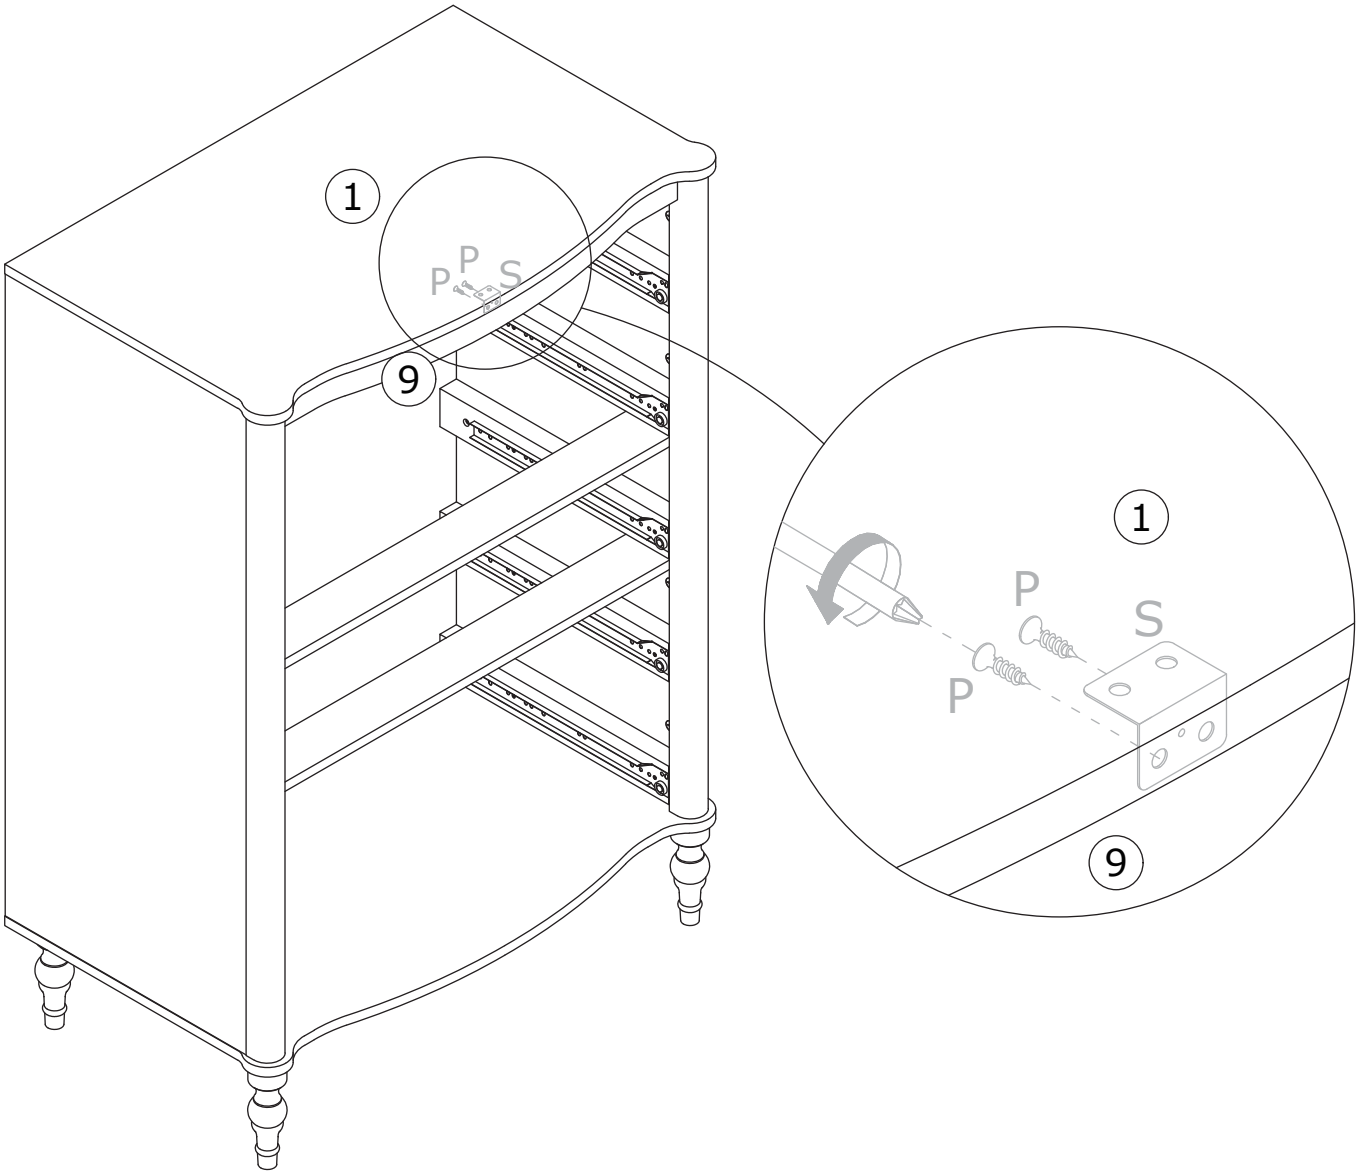



15

N x 12	P x 12	
	 CRD0314A	


Insert buckles (N) into the back slots, then secure with screws (P).

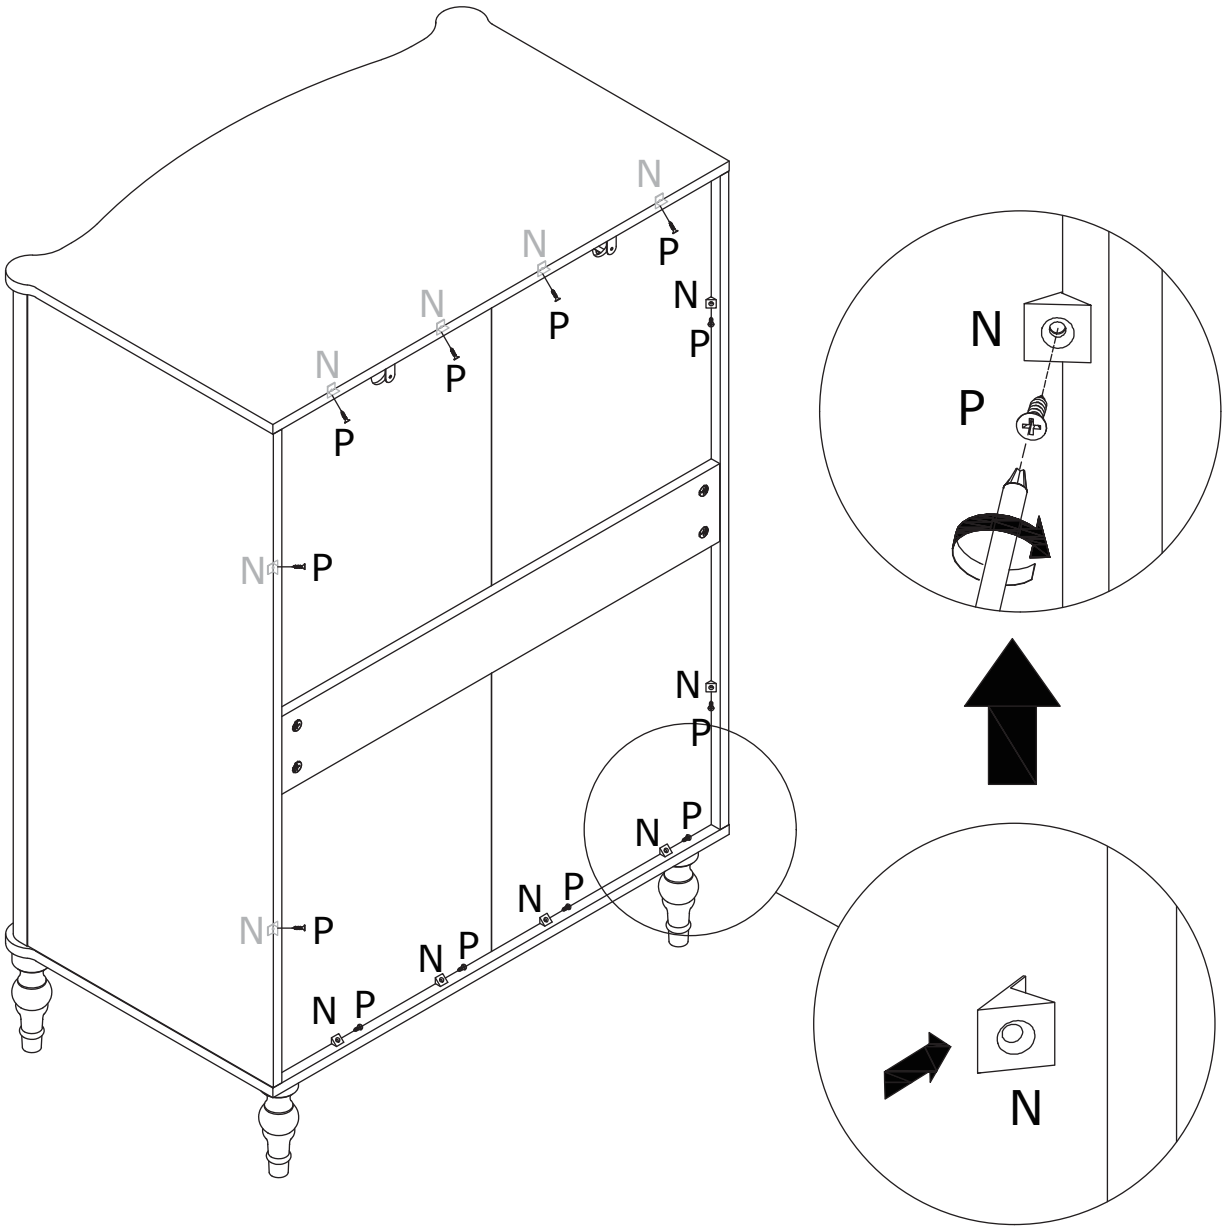
N
P
N
P
N
P


16

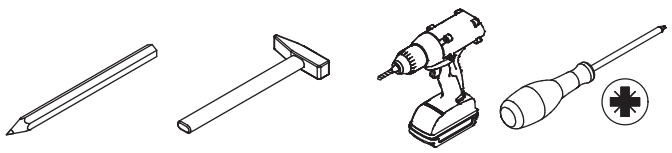K x 2	M x 2	
 CRD3535A		


Install anti-tip devices.

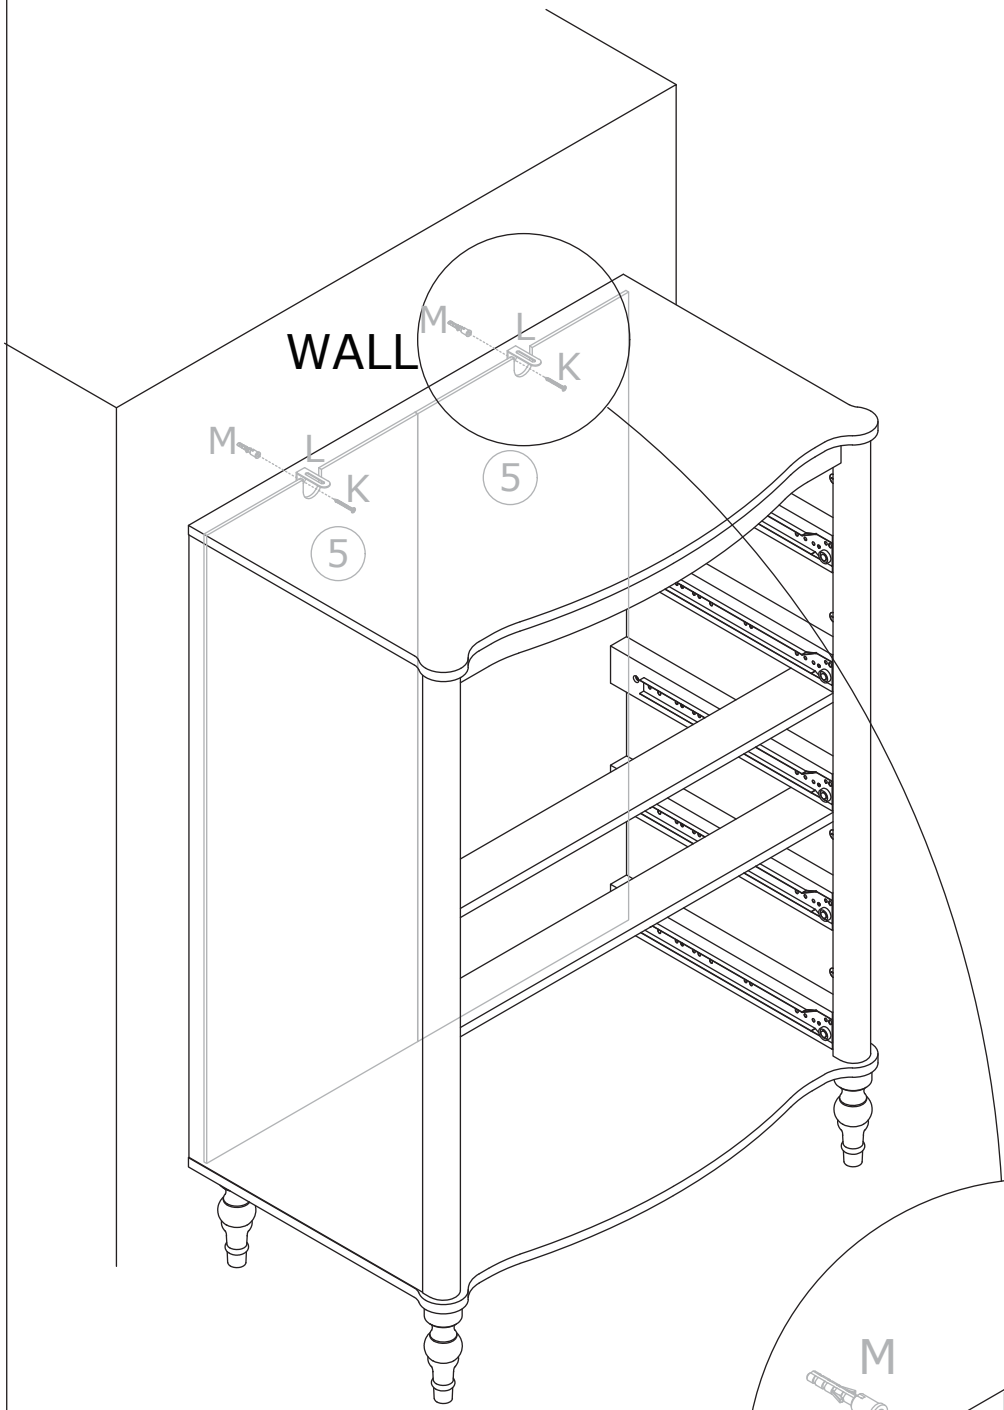


1.

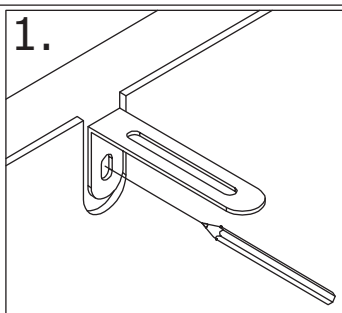


2.

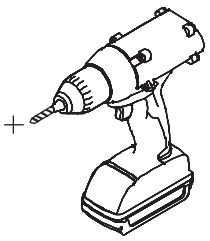


3.

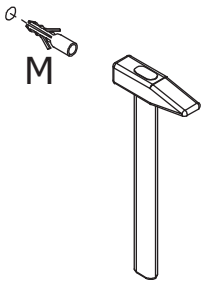


4.

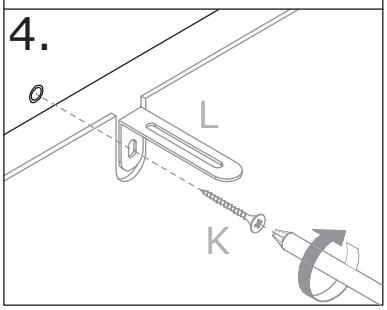

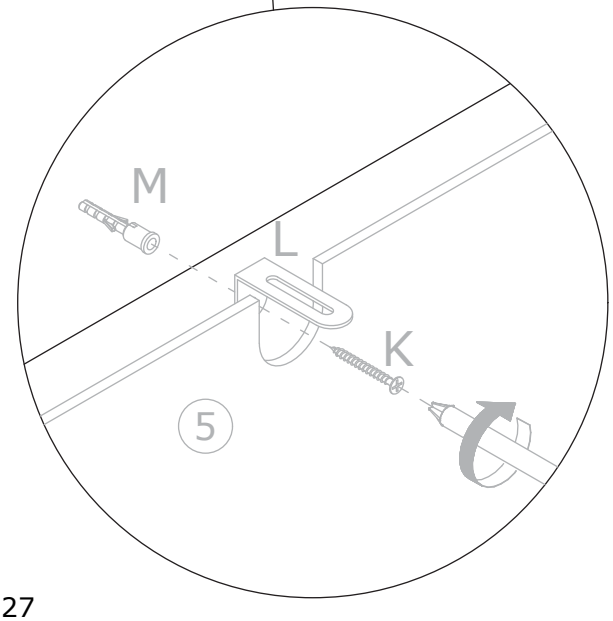


17


E x 25





CRC0540A




Connect panels 11, 12, and 18 to panel 13 using screws (E).
Insert panel 14 along the available slots.

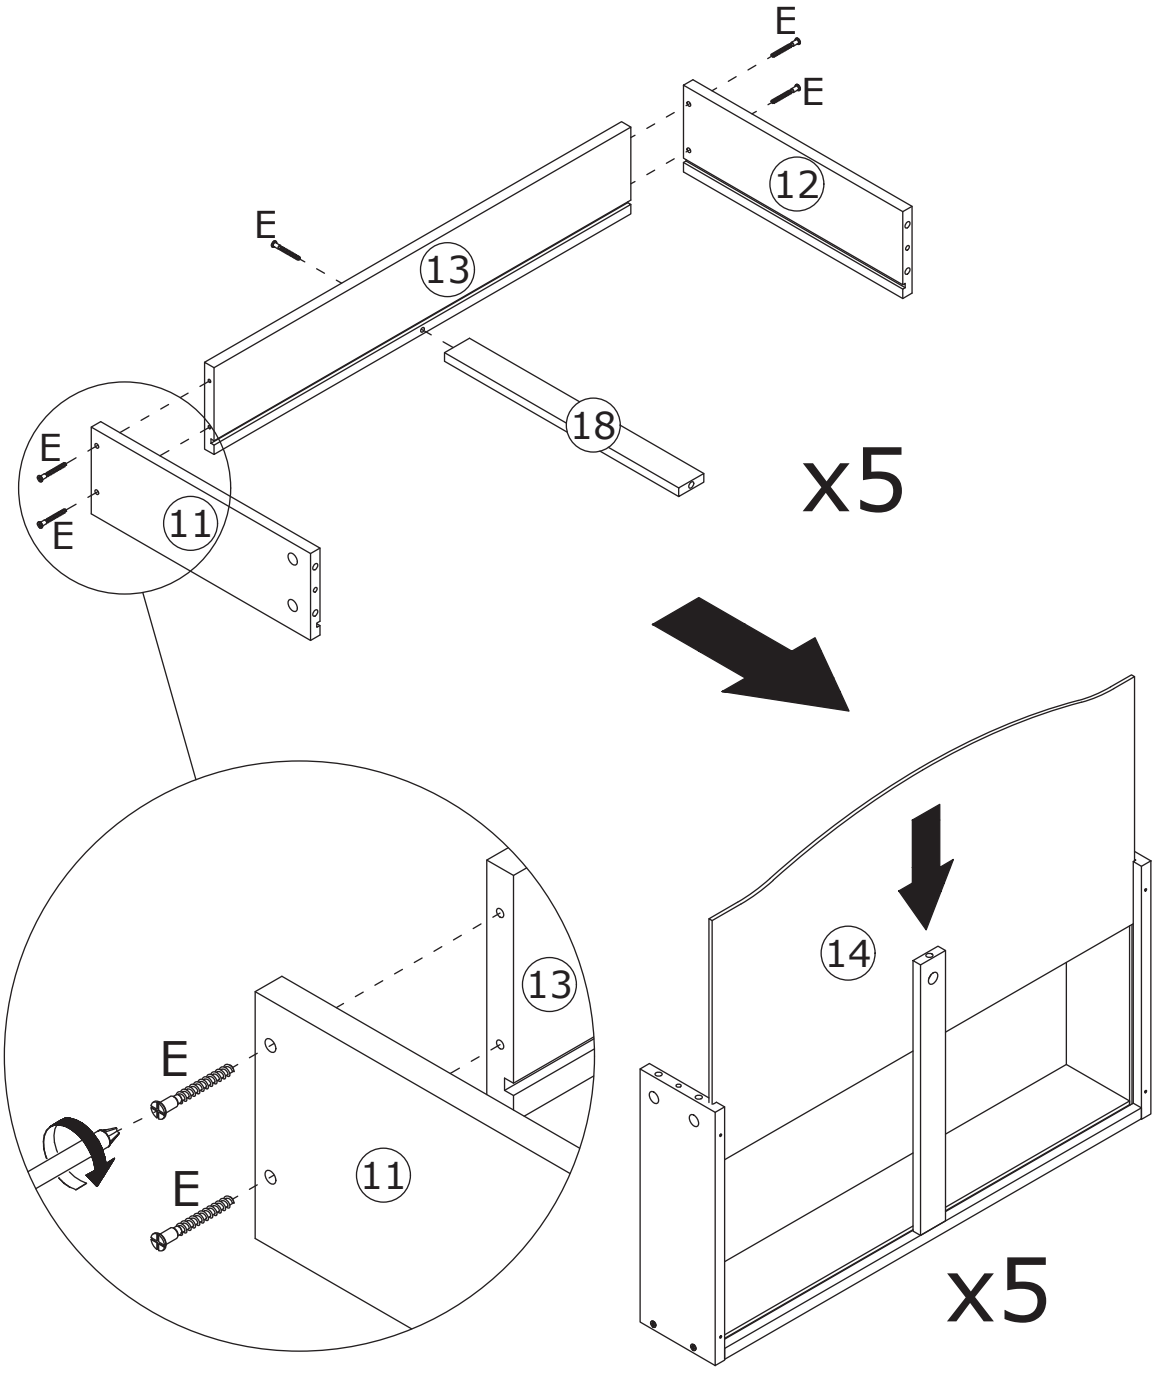


18



A x 25	B x 25	C x 25	D x 10	
				
CRA0635B		CRB1595A	CRF0630A	


First install plug (B) onto panel 10, then screw self-tapping rod (A) onto.
Use dowels (D) to connect panel 10 to panels 11, 12, and 18, then tighten by turning CAM lock (C) clockwise.

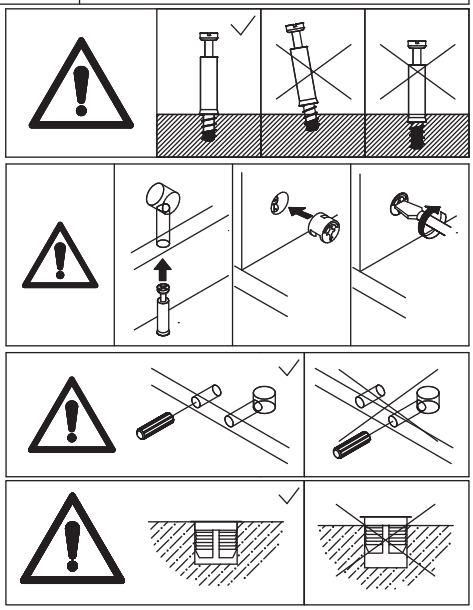

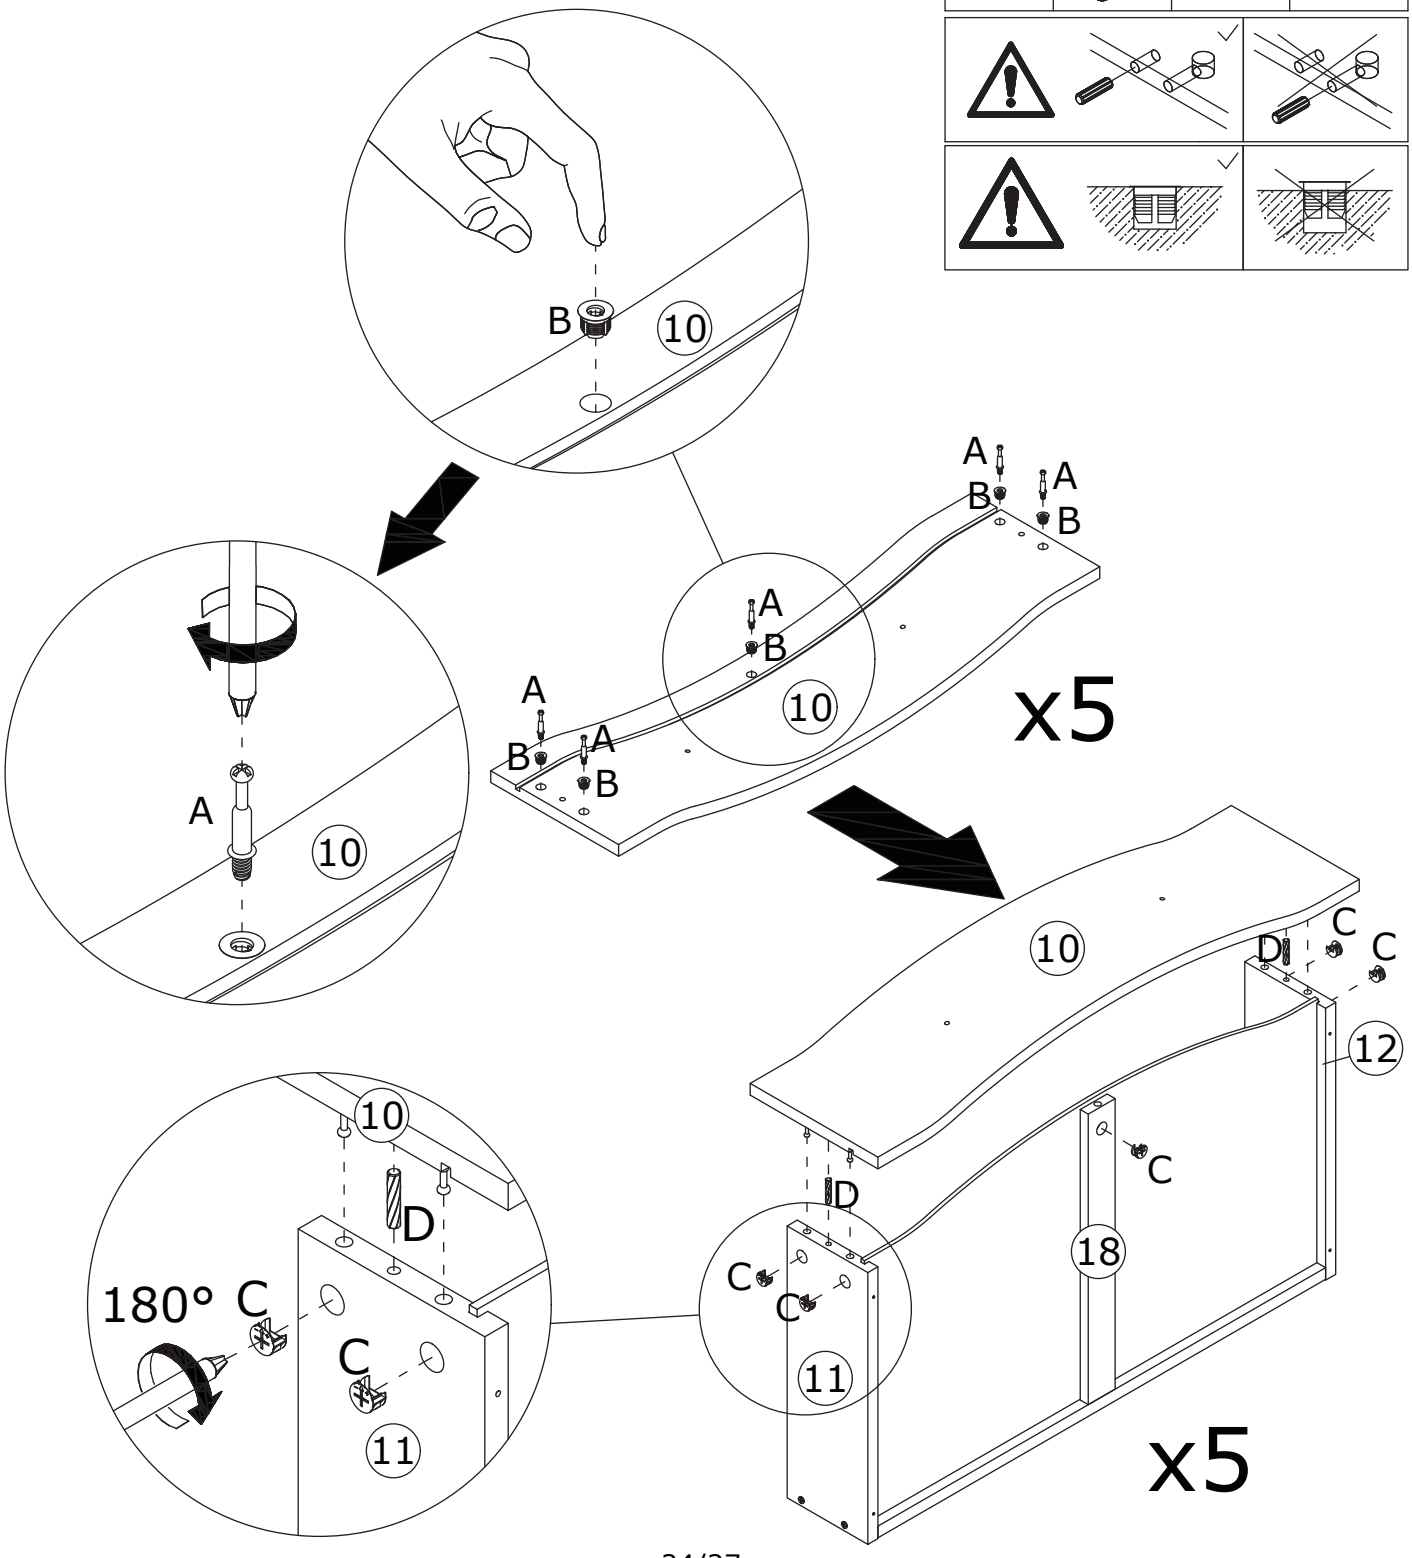



19

F x 5	H x 20	
		
DL DR WX1214A	CRD3512A	


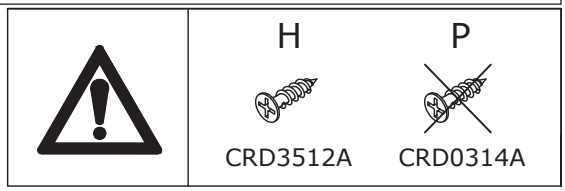


Use screws (H) to mount slide rail F(F-DL) and F(F-DR) to panels 11 and 12.

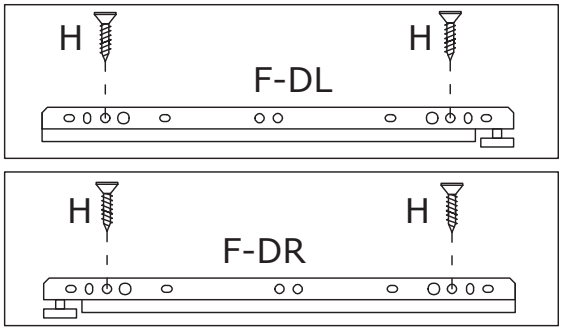


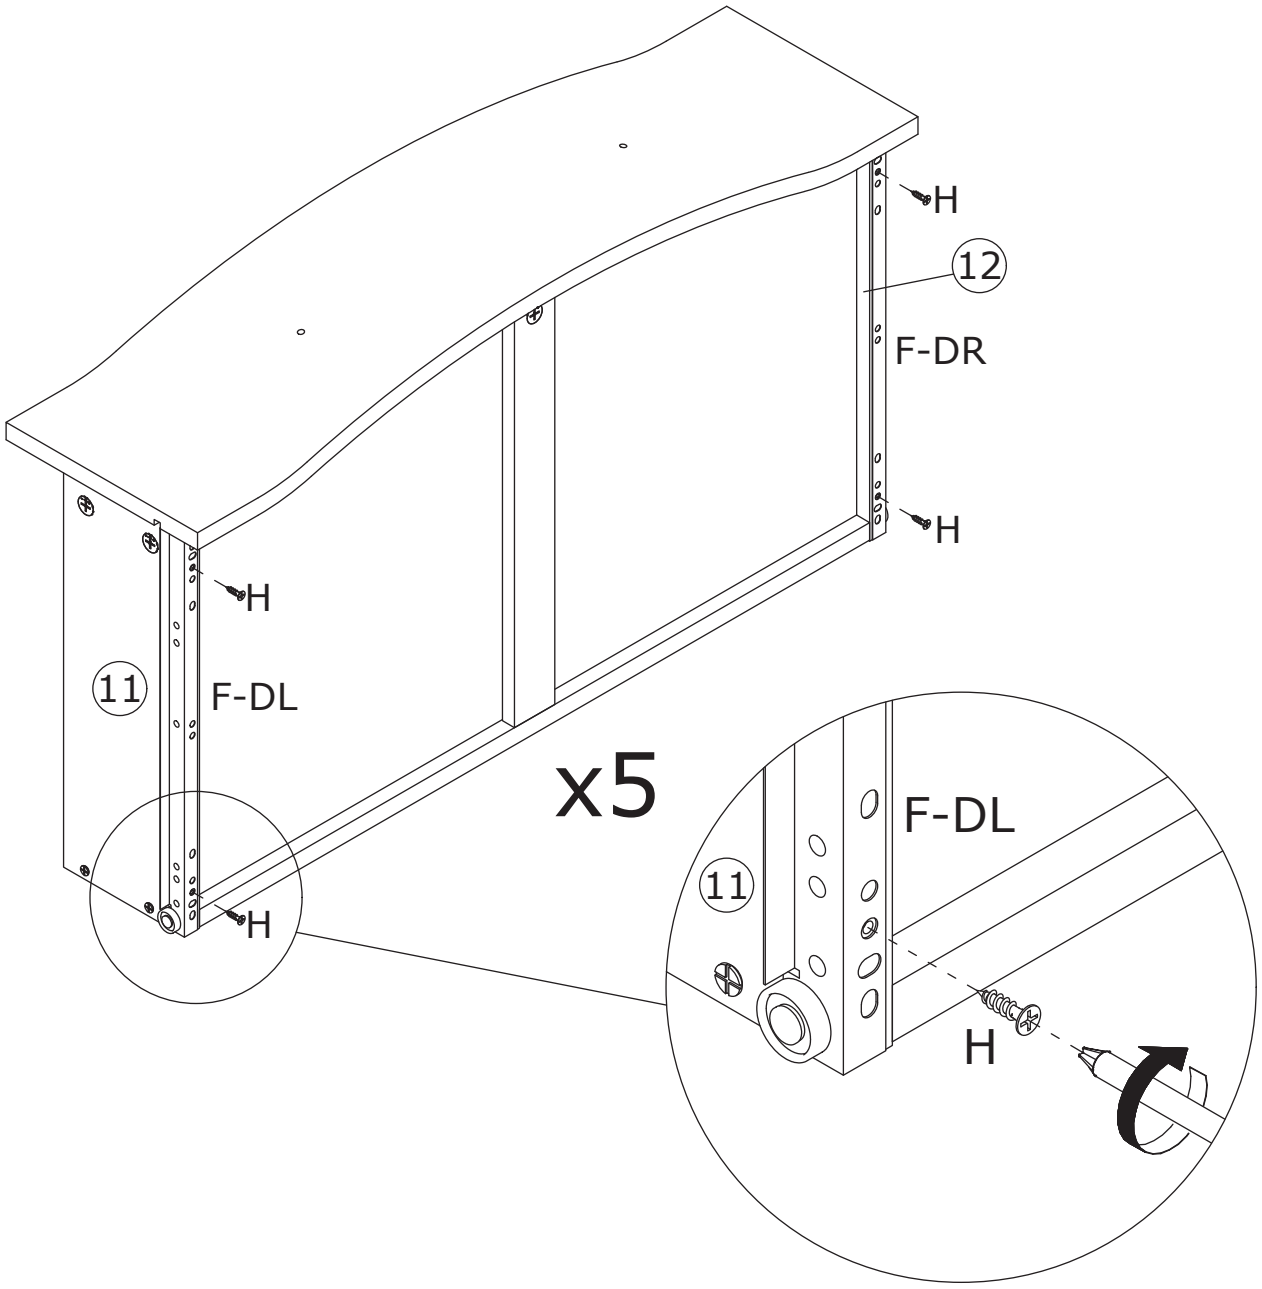


20


Q x 10	R x 10	
	 CRE0420A	

Secure knobs (Q) to panel 10 using screws (R).

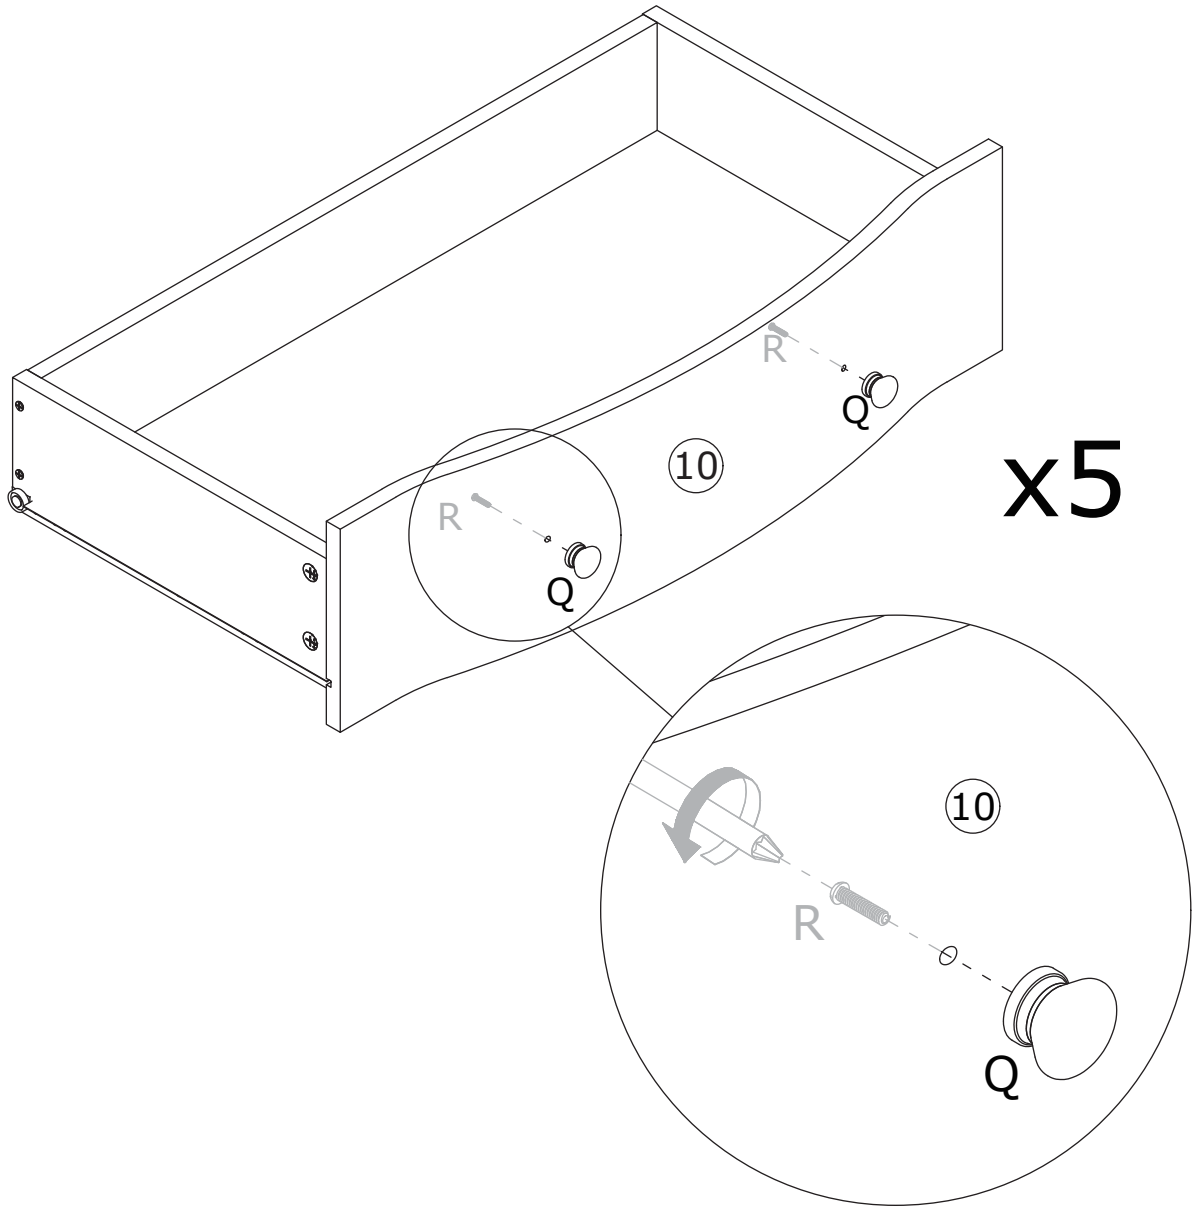

21

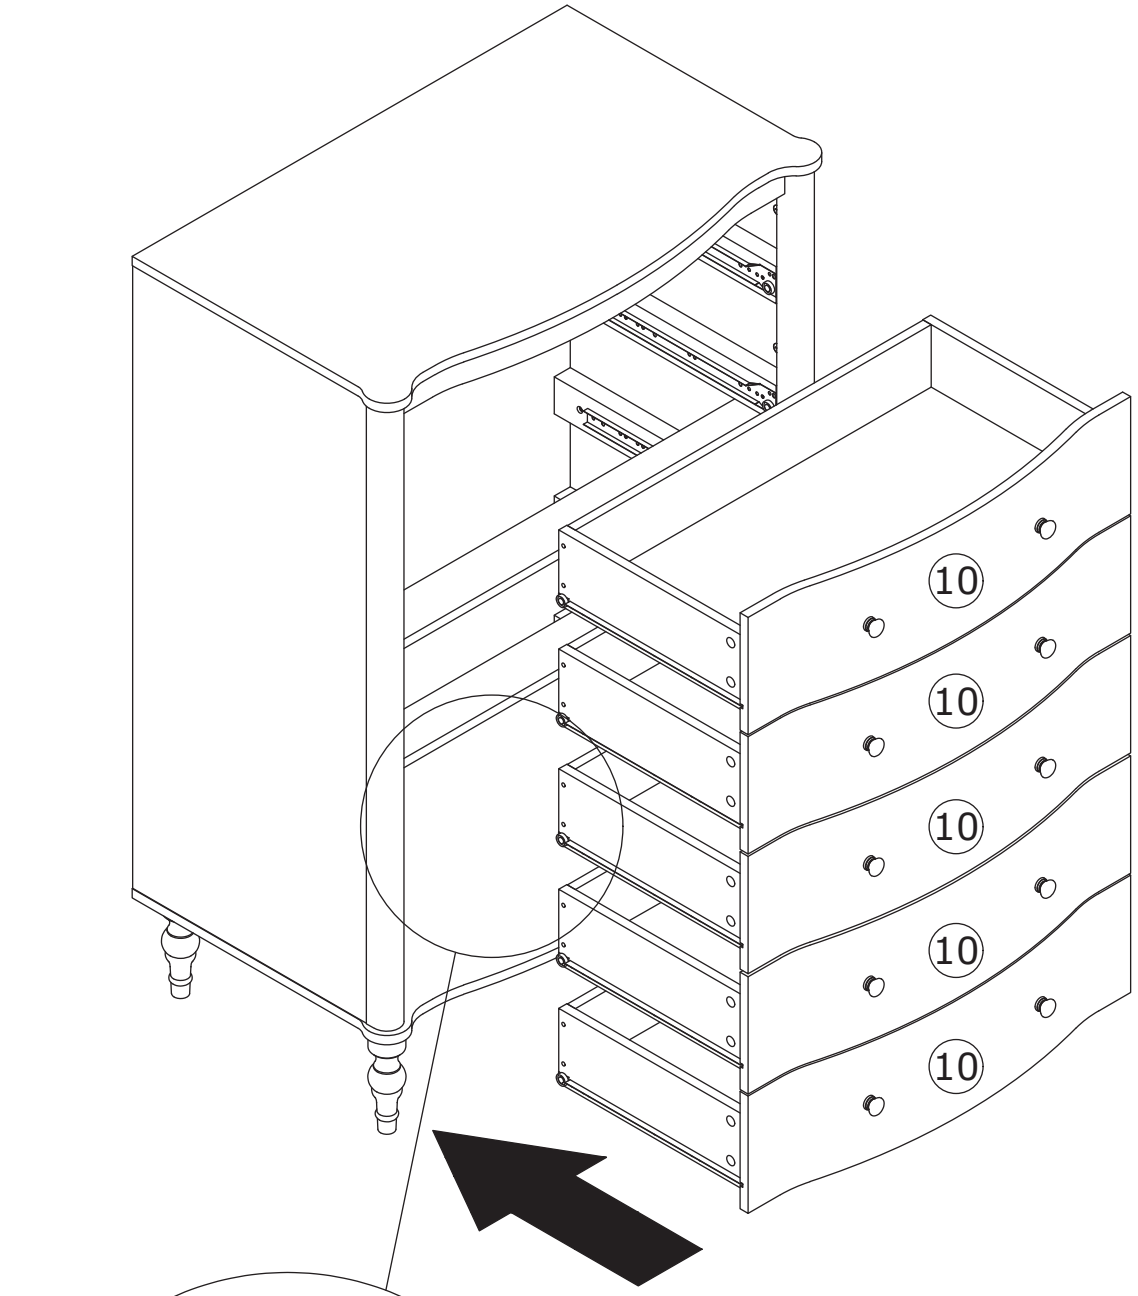

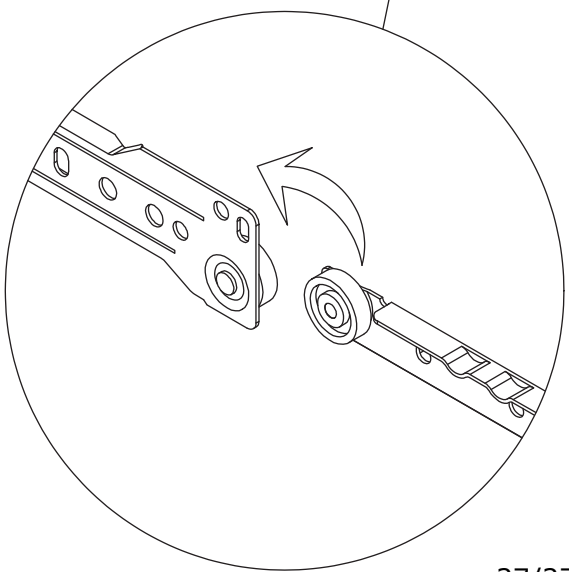

Assemble the drawers to the main unit.

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.

- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.

- The product must be used in accordance with the instructions provided. For health reasons.

- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.

- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.

- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.

- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
  In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT


adelahu@fufugaga.com


208-820-0068