
TV Stand

DSG032 | TV Stand


Assembly Instructions

2 people

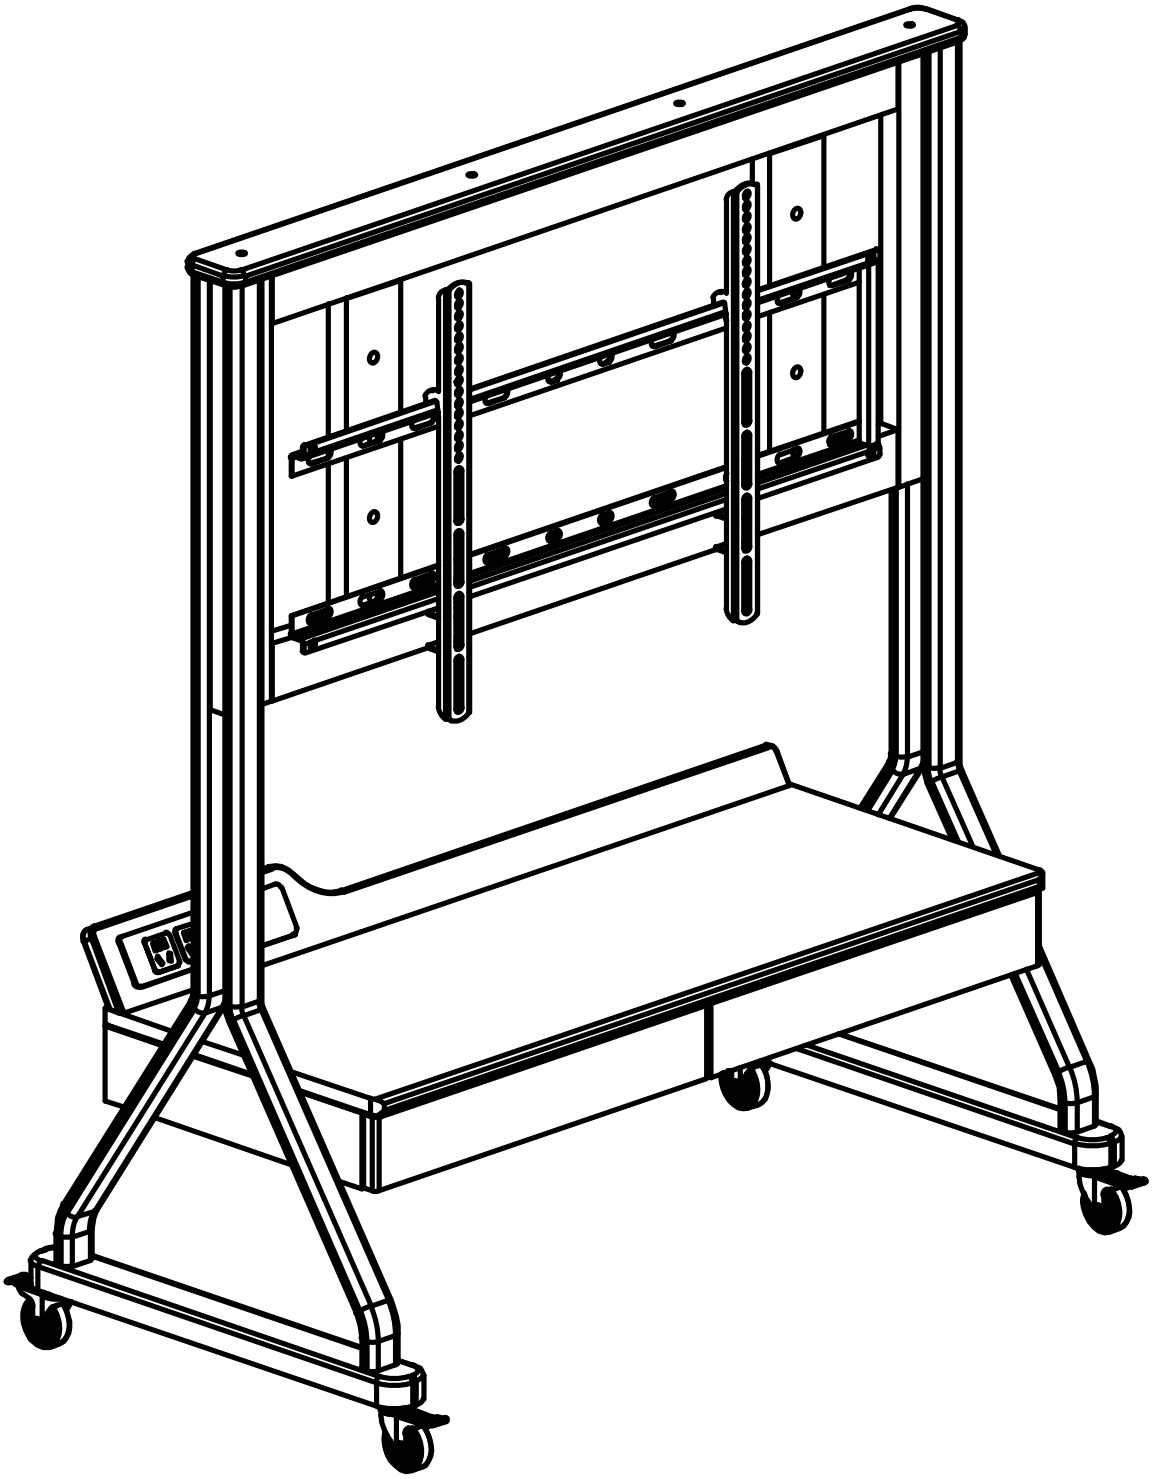

Parts List

DSG032 | TV Stand

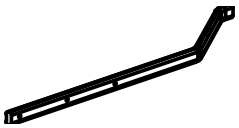

1 Left rear leg

1085 × 210 × 40MM

Quantity: 1



2 Right rear leg

1085 × 210 × 40MM

Quantity: 1



3 Left front leg

1085 × 210 × 40MM


Quantity: 1



4 Right front leg

1085 × 210 × 40MM

Quantity: 1

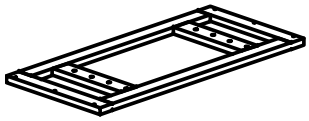


5 Back frame

991 × 455 × 25MM

Quantity: 1

Parts List


DSG032 | TV Stand



6 Upper crossbar

1024 × 74 × 17MM

Quantity: 1

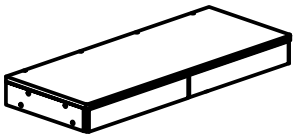

7 Drawer unit

930 × 378 × 97MM

Quantity: 1



8 Base rail

520 × 55 × 30MM

Quantity: 2



9 Socket mounting panel

930 × 90 × 17MM

Quantity: 1



10 TV mounting frame

812 × 508 × 65MM

Quantity: 1

Preinstalled items are already fitted to the product;
they are not included in the hardware bag.

Hardware & Tools

DSG032 | TV Stand



A Hex socket screws

M6 × 30MM

Quantity: 16



B Flat washers

M6 × 13MM

Quantity: 16



C Hex key

M4 × 100MM

Quantity: 1

Reusable tool



D Hex socket screws

M7 × 50MM

Quantity: 4

Hardware & Tools

DSG032 | TV Stand



E Hex socket screws

M6 × 55MM

Quantity: 6



F Hex socket screws

M6 × 15MM

Quantity: 4



G Power socket

223 × 53 × 29.5MM

Quantity: 1



H Casters

Ø50 × 64HMM

Quantity: 2

Hardware & Tools

DSG032 | TV Stand



I Casters with brakes

Ø50 × 64HMM

Quantity: 2



J Open-end wrench

14MM

Quantity: 1

Reusable tool



K Flat-head screws

5 × 15M

Quantity: 2

Included with G



L Cable clips

14 × 14 × 8MM

Quantity: 5


Step 1

DSG032 | TV Stand

After unpacking, check all parts against the parts and hardware lists.

Connect Parts 1, 2, 3 and 4 to Back Frame 5 using Screws E and Tool C.

Hardware: E Tool: C (reuse)

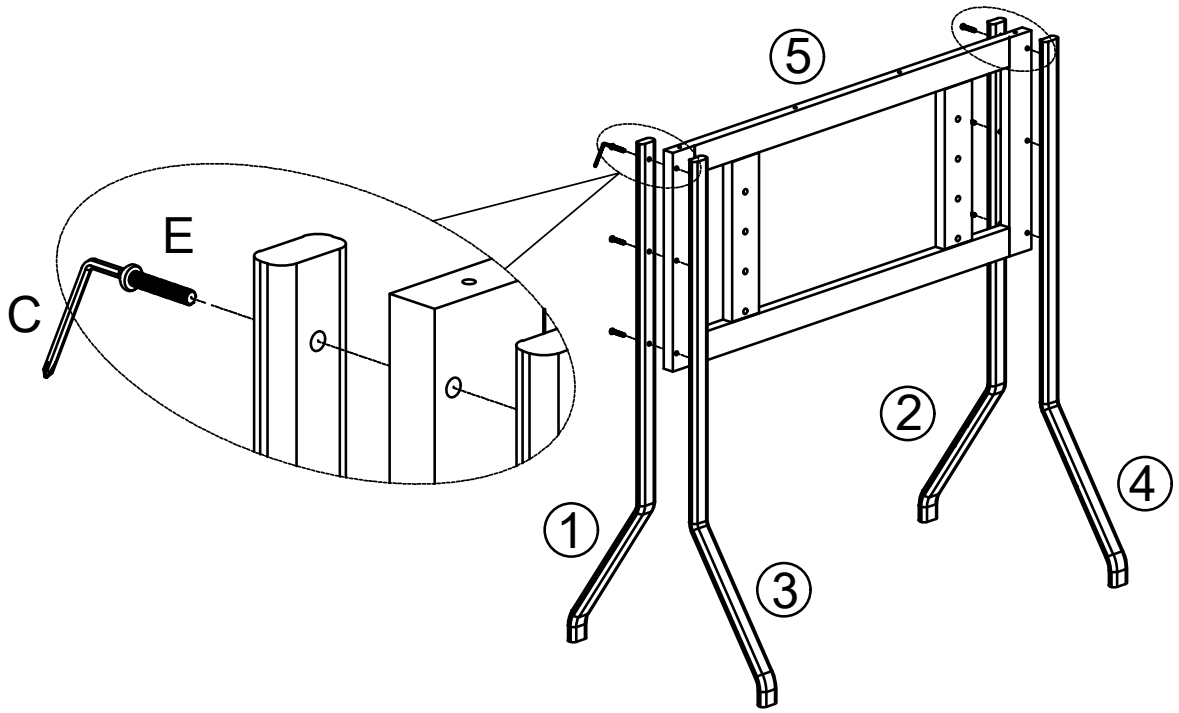


Step 2

DSG032 | TV Stand

Attach Crossbar 6 to the assembly from Step 1 using Screws D and Tool C.


Hardware: D Tool: C (reuse)

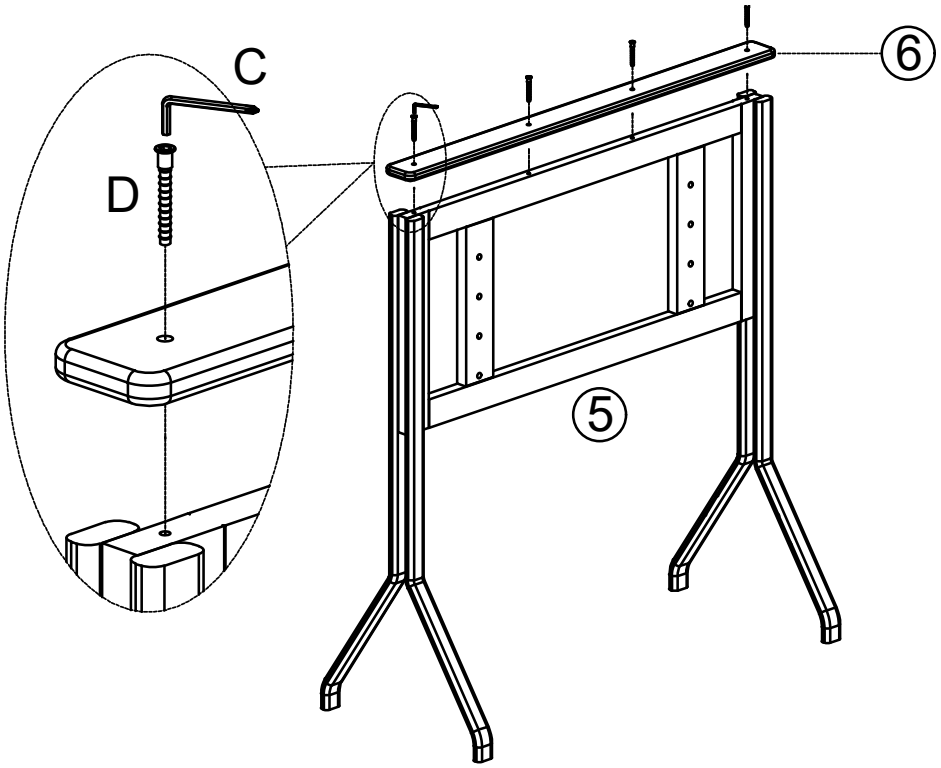

Step 3

DSG032 | TV Stand


Pull out the drawer from Part 7. Press the slide releases as shown
and remove the drawer completely.
Attach Part 7 to the assembly from Step 2 using Screws A and Washers B.
Hardware: A, B Tool: C (reuse)

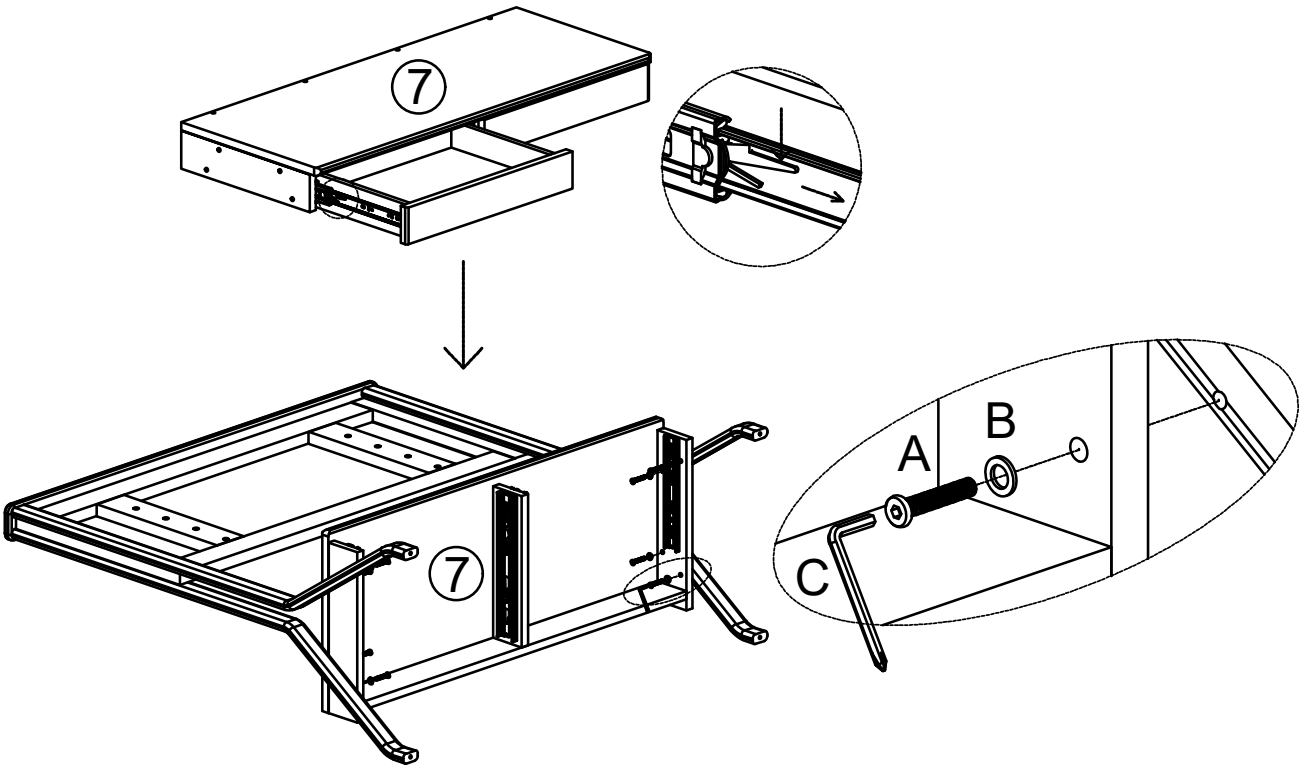

Step 4

DSG032 | TV Stand


Attach both Base Rails 8 to the assembly from Step 3 using A and B.
Fit Casters H and I to the rails using Tool J, in the positions shown.
Hardware: A, B, H, I Tools: C, J (reuse)

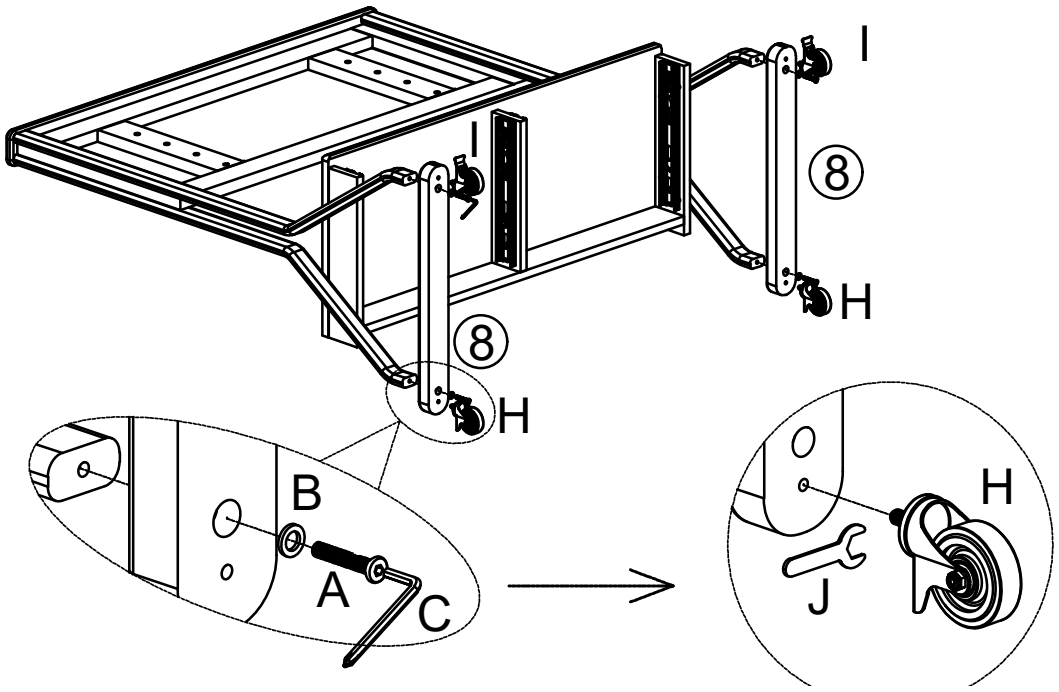

Step 5

DSG032 | TV Stand


Reinsert the drawer removed in Step 3.
Align the left and right drawer slides, then push the drawer in gradually in several stages.

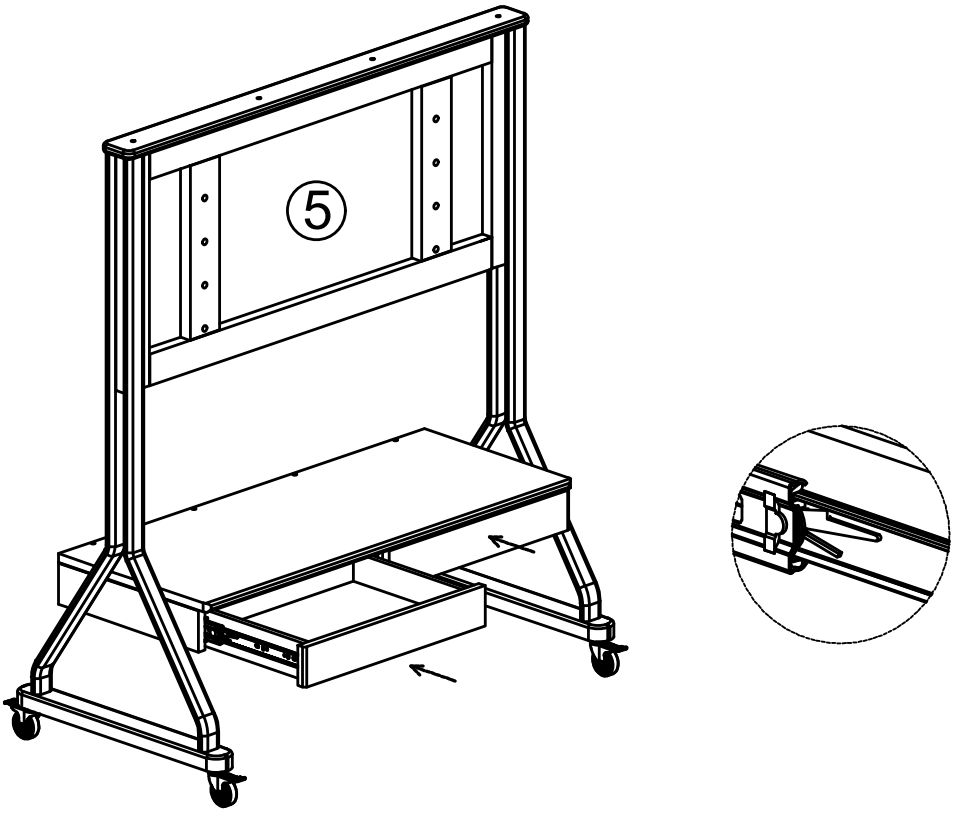

Step 6

DSG032 | TV Stand


Pass Socket G through Panel 9, open its cover and secure it with K.
Attach Panel 9 to the assembly from Step 5 using Screws A and Washers B.
Secure the power cord with Cable Clips L.
Hardware: G, K, A, B, L Tool: C (reuse)

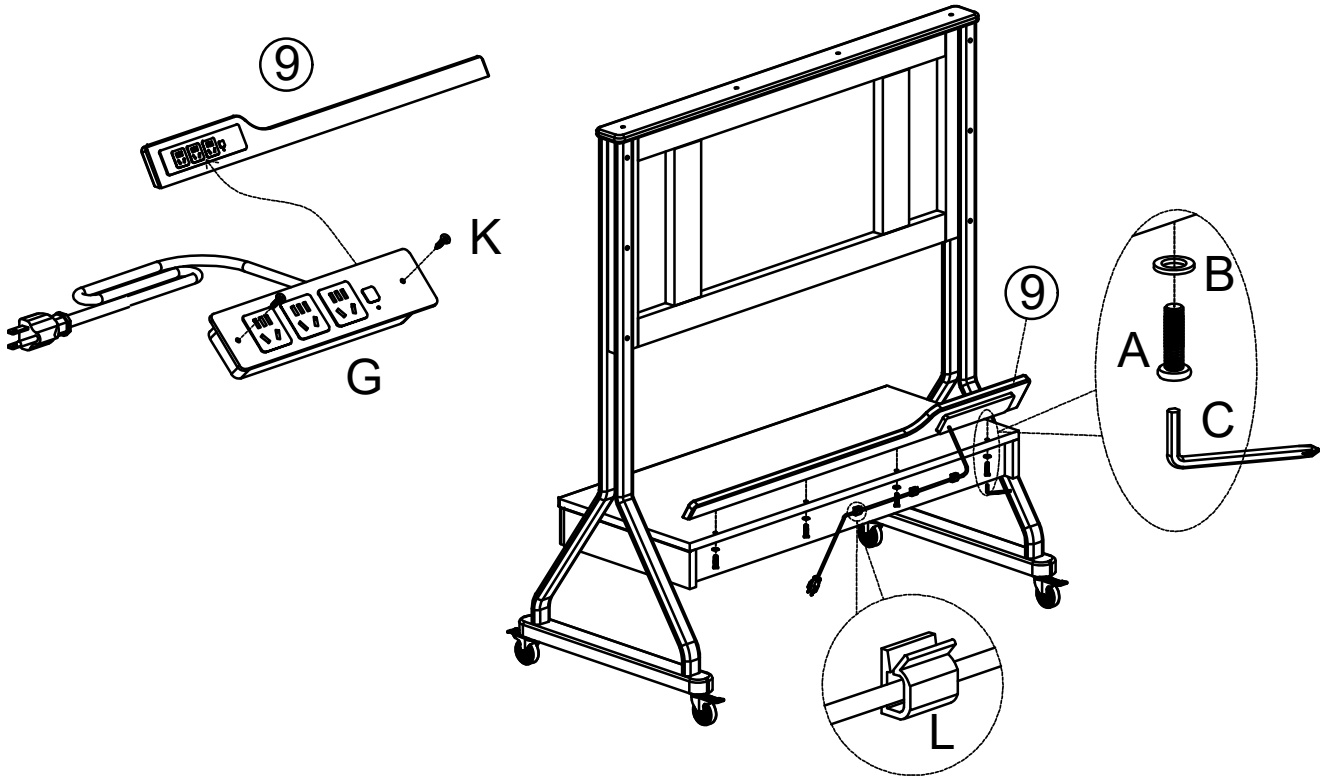

Step 7

DSG032 | TV Stand

Attach TV Mounting Frame 10 to Back Frame 5 using Screws F and Tool C.
Then hang and secure the TV as shown.
Hardware: F Tool: C (reuse)

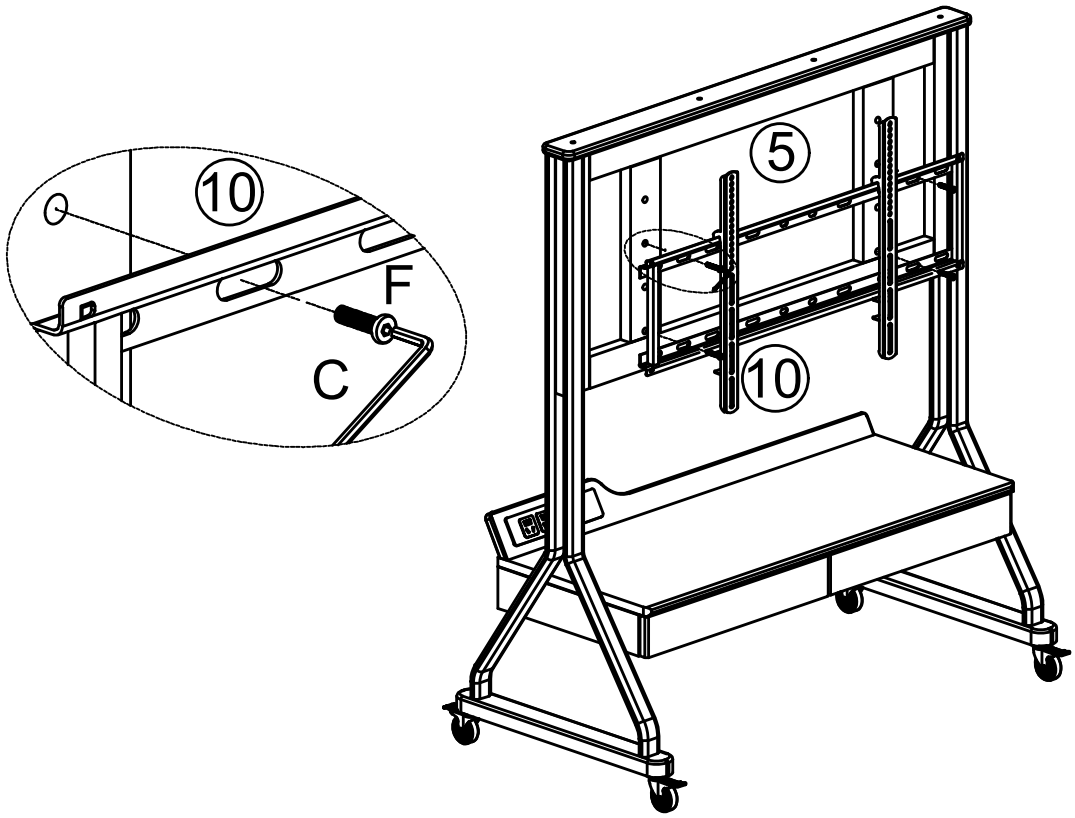

Step 8

DSG032 | TV Stand

Assembly complete.

