
Assembling lnstruction

Item # : CBM030

Generating Drawings

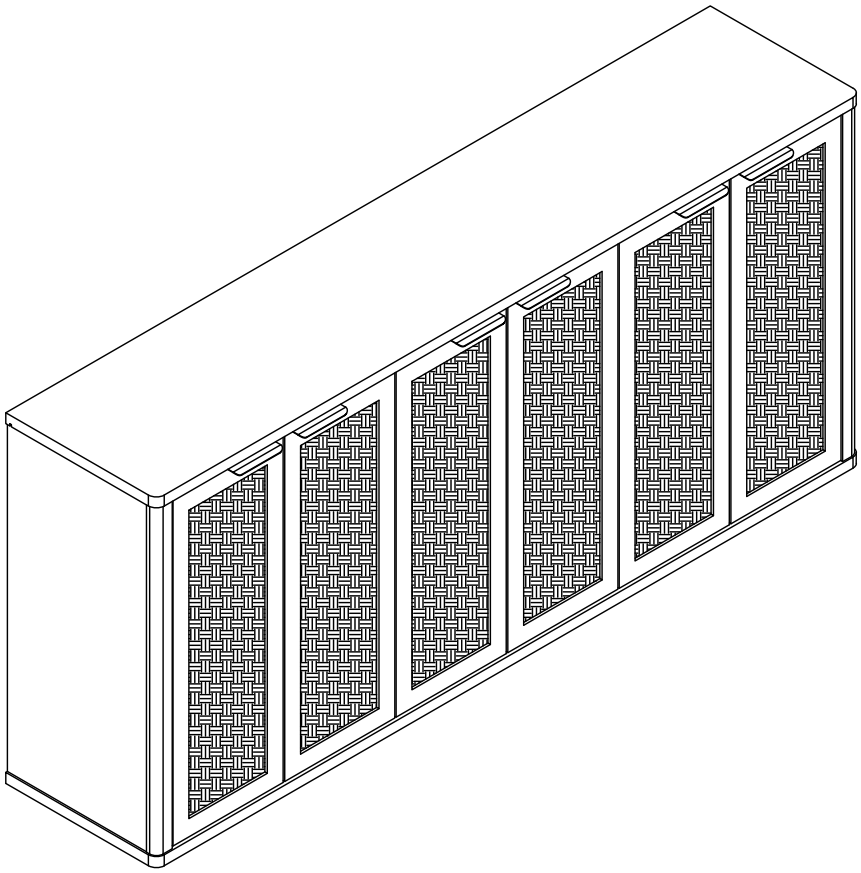

ATTENTION

If there is any missing, please kindly send us messages to let us know the name of missing part regarding to the first page of instructions.

We will send replacement to you asap. We are concerned about each customer's experience, if there is any loss or damage, please contact us at any time, we will provide effective solutions.
Customer service E-mail:XBMAria2025@outlook.com.
Please attach your Order ID so that we can assist you better.

General Assembly Guidelines


I. Ensure that all parts and hardware are available before beginning assembly.

II. Follow each step carefully to ensure the proper assembly of this product.


III. Two people are recommended for ease in the assembly of this product.

IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.


V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

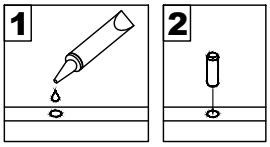


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

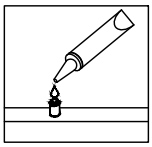


VI. A Phillips head screwdriver is required for the assembly of this product .

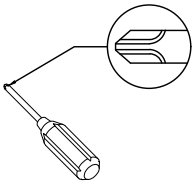


VII. Power tools should not be used to assemble this product .

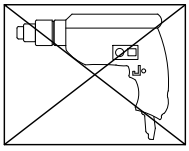



Parts List


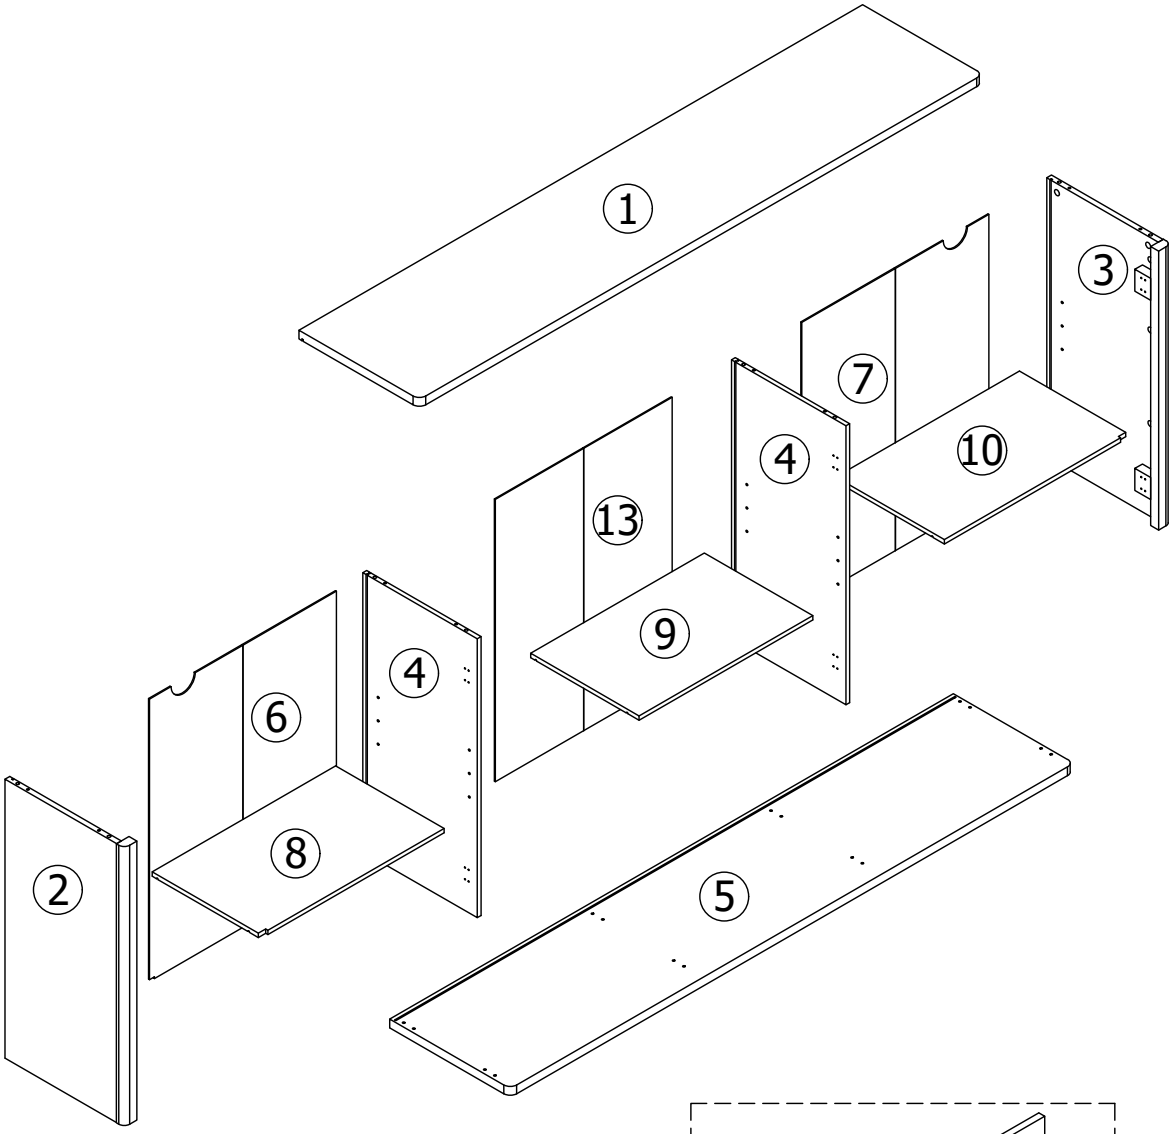




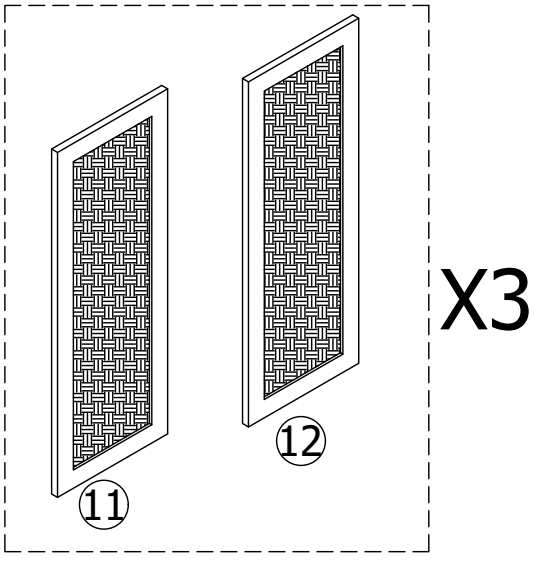



X3

HARDWARE PACK CONTENT

A	B	C	D	E	F	G
 Ø6x30mm	 Ø6x32mm	 Ø15x9mm	 Ø30mm	 Ø5x50mm	 M3	 42X19X17mm
16x+1	8x+1	8x+1	8x+1	8x+1	1x	3x

H	I	J	K	L	M	N
 Ø4x16mm		 Ø26mm	 Ø26mm	 Ø3.5x12mm		 Ø3X17
6x+1	12x+1	4x	8x	72x+3	24x+2	24x+2

O	P	Q	R	S	T	U
 73*24*15mm	 Ø4X14mm	 Ø4X40mm	 Ø6x40mm	 96mm	 Ø3x12mm	
2x	2x	2x	2x	6x	12x+1	1x




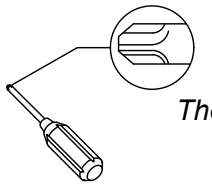


Philips head screwdriver required for assembly
(not included)

The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.


CAM LOCK/BOLT FASTENING INTRODUCTION


(You will use it during assembly)

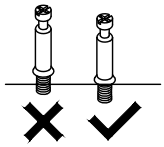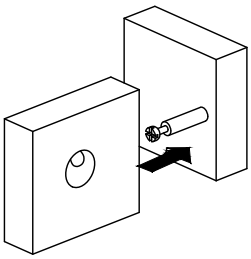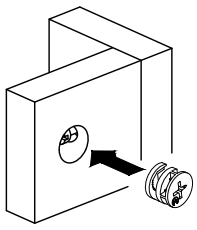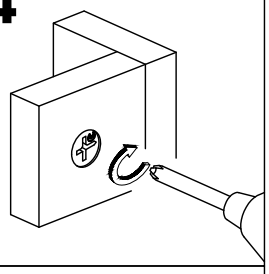1	2	3	4
			
1.Screw cam bolt into the threaded anchor gently. **(Attention:don't screw cam bolt too deep or too shallow.)**	**2.Please connect the 2 boards you want connect by inserting cam bolt.**	**3.Insert the cam lock into the round hole of the board.** **(Attention:point the arrow on the top of the cam lock to the outer edge.)**	**4.Turn the cam lock clockwise until it is firmly tightened.**

Step1


NOTE:Secure O with P to95% tightness, you can adjust the distance when locking the wall.

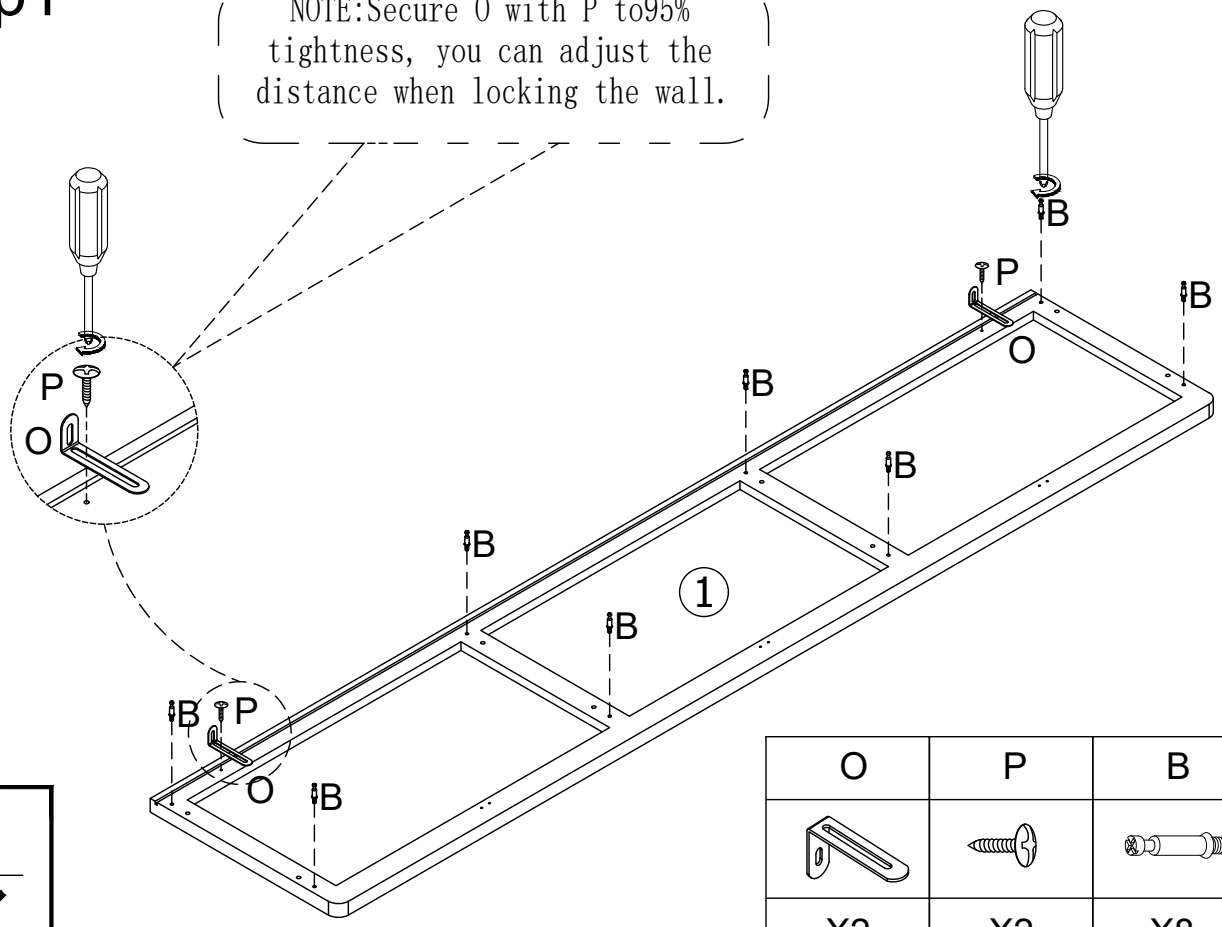

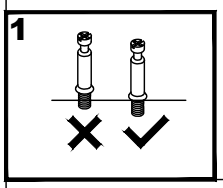


O	P	B
X2	X2	X8

Step2

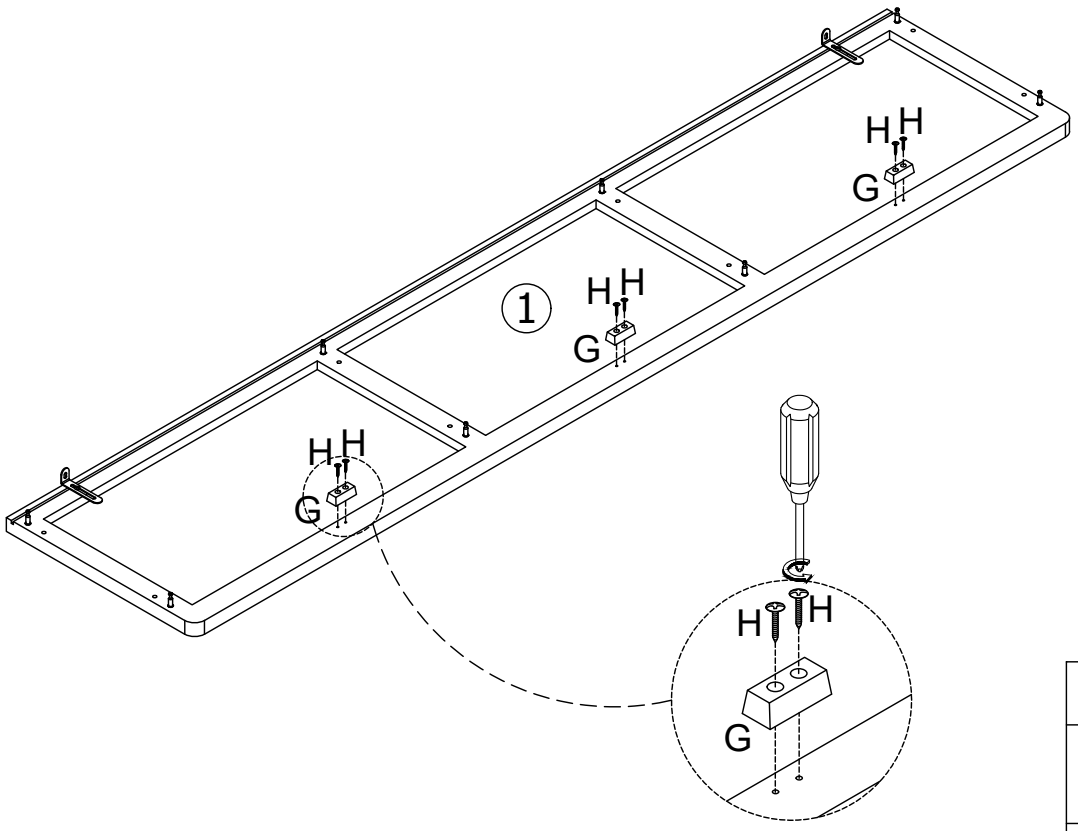


H	G
	
X6	X3

Step3

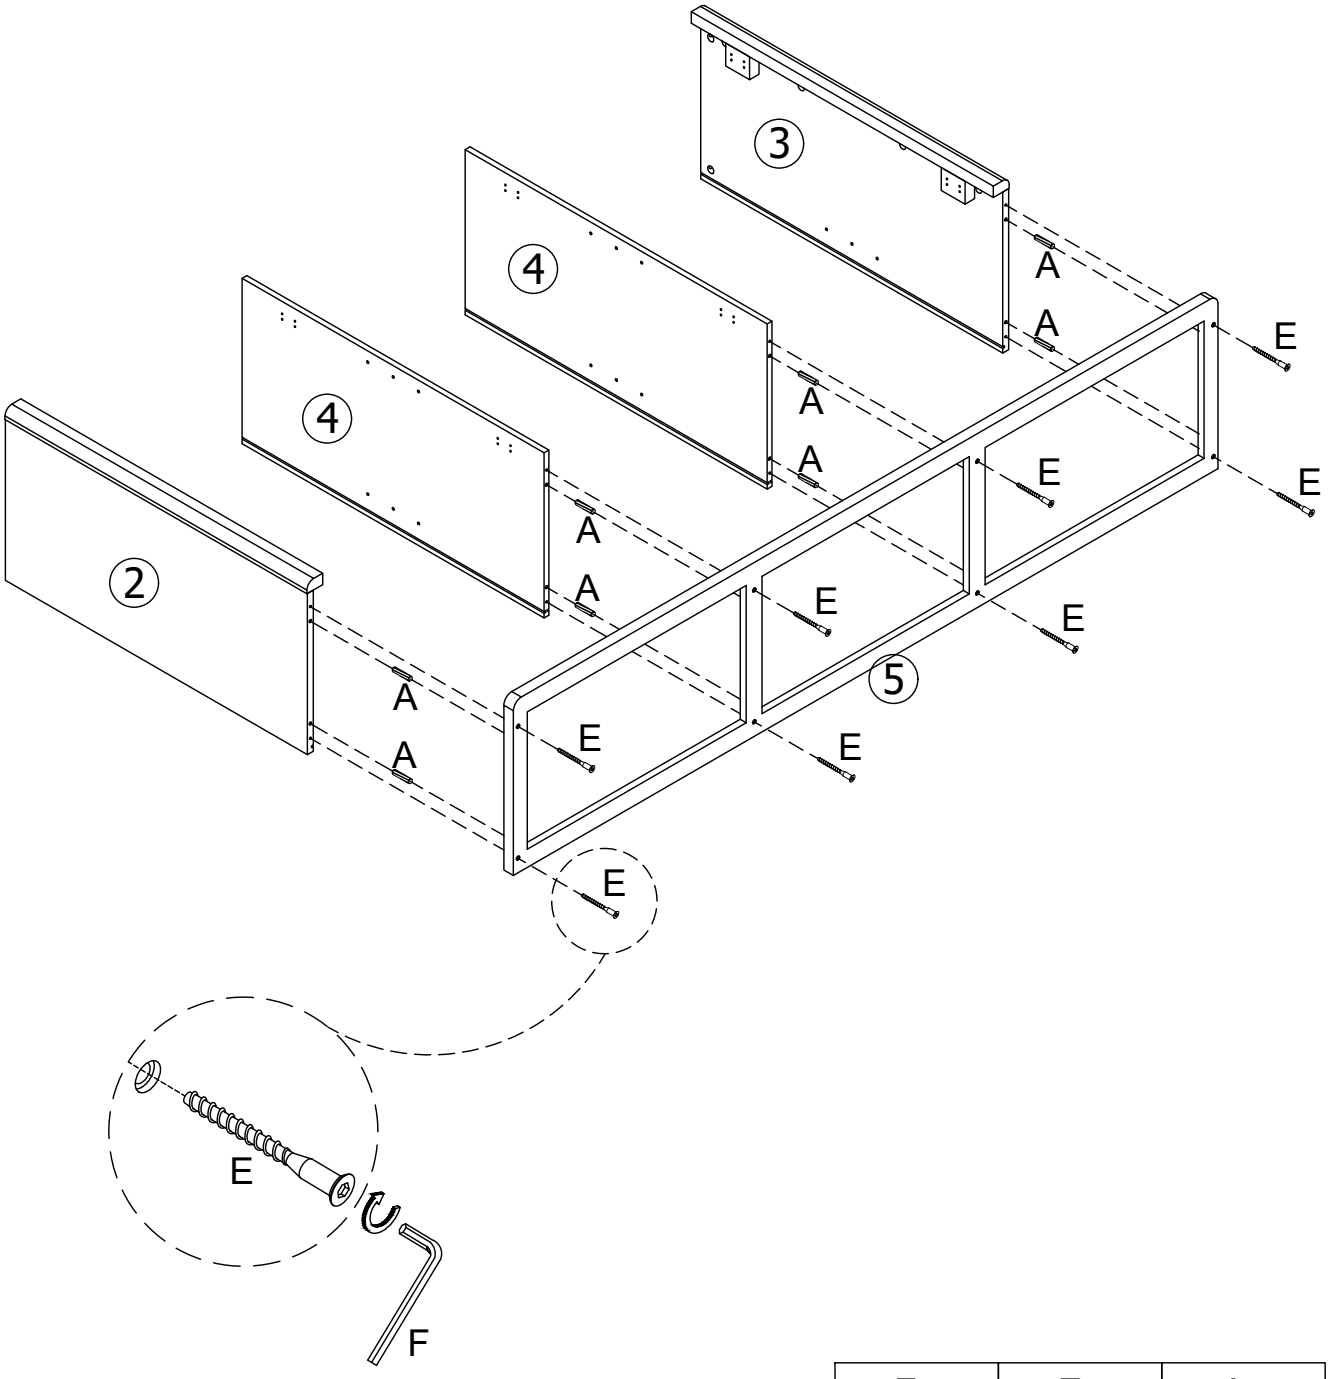


F	E	A
		
X1	X6	X8


Step4

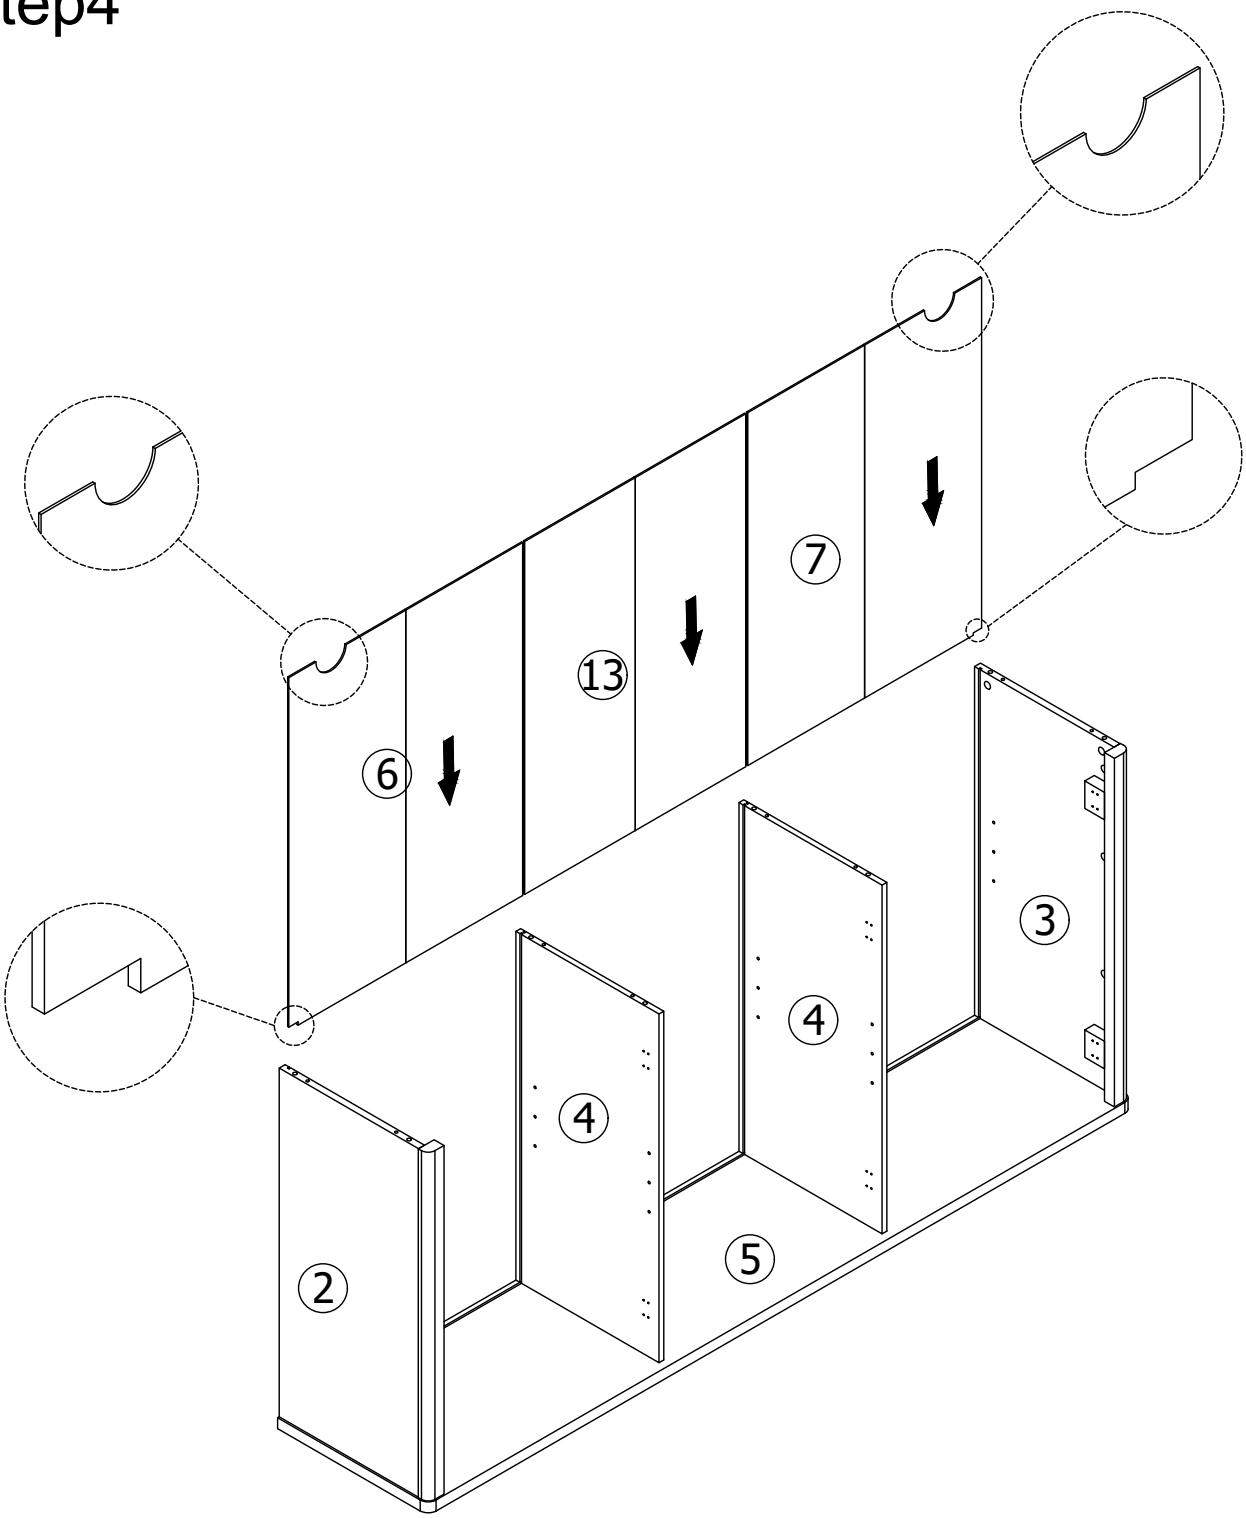

Step5

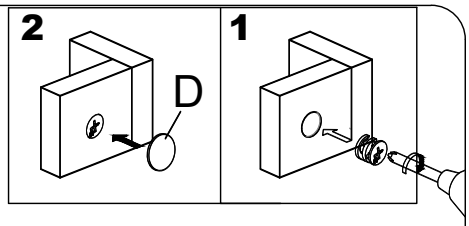


Notice:More than two people to assemble this item.

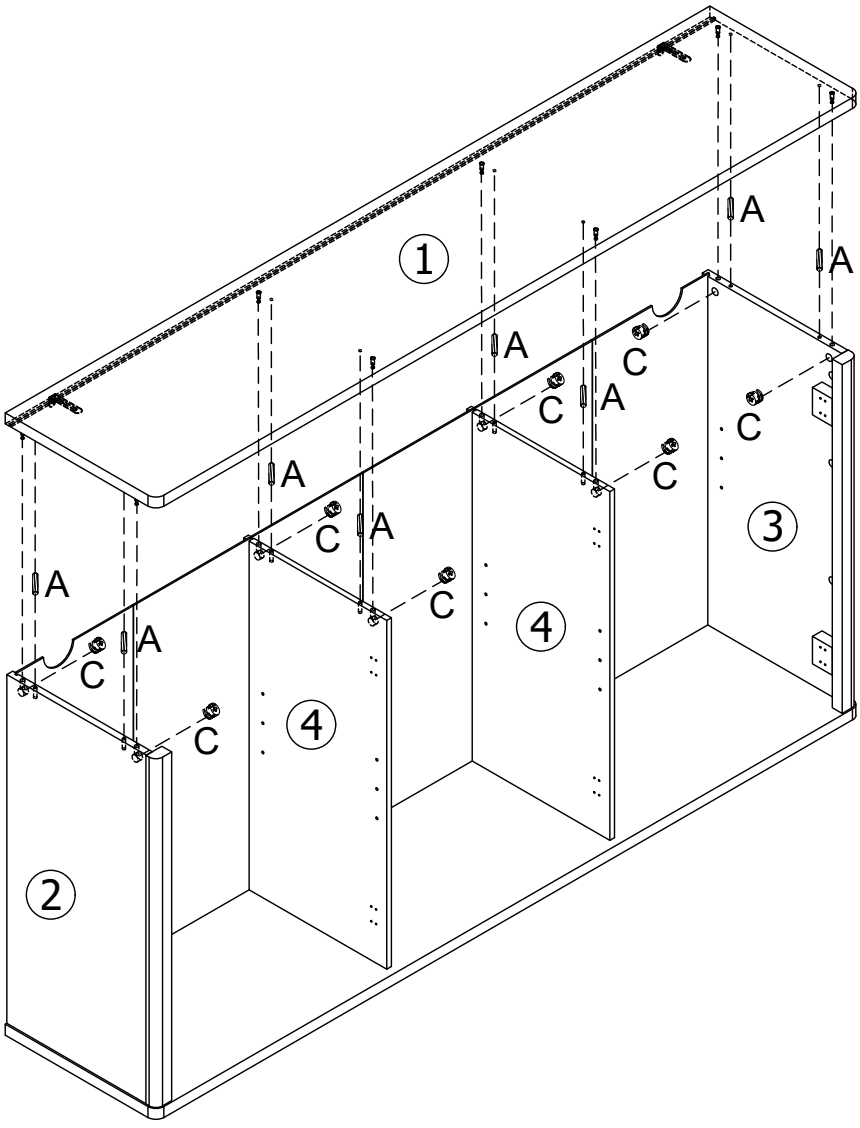

D	C	A
		
X8	X8	X8


Step6

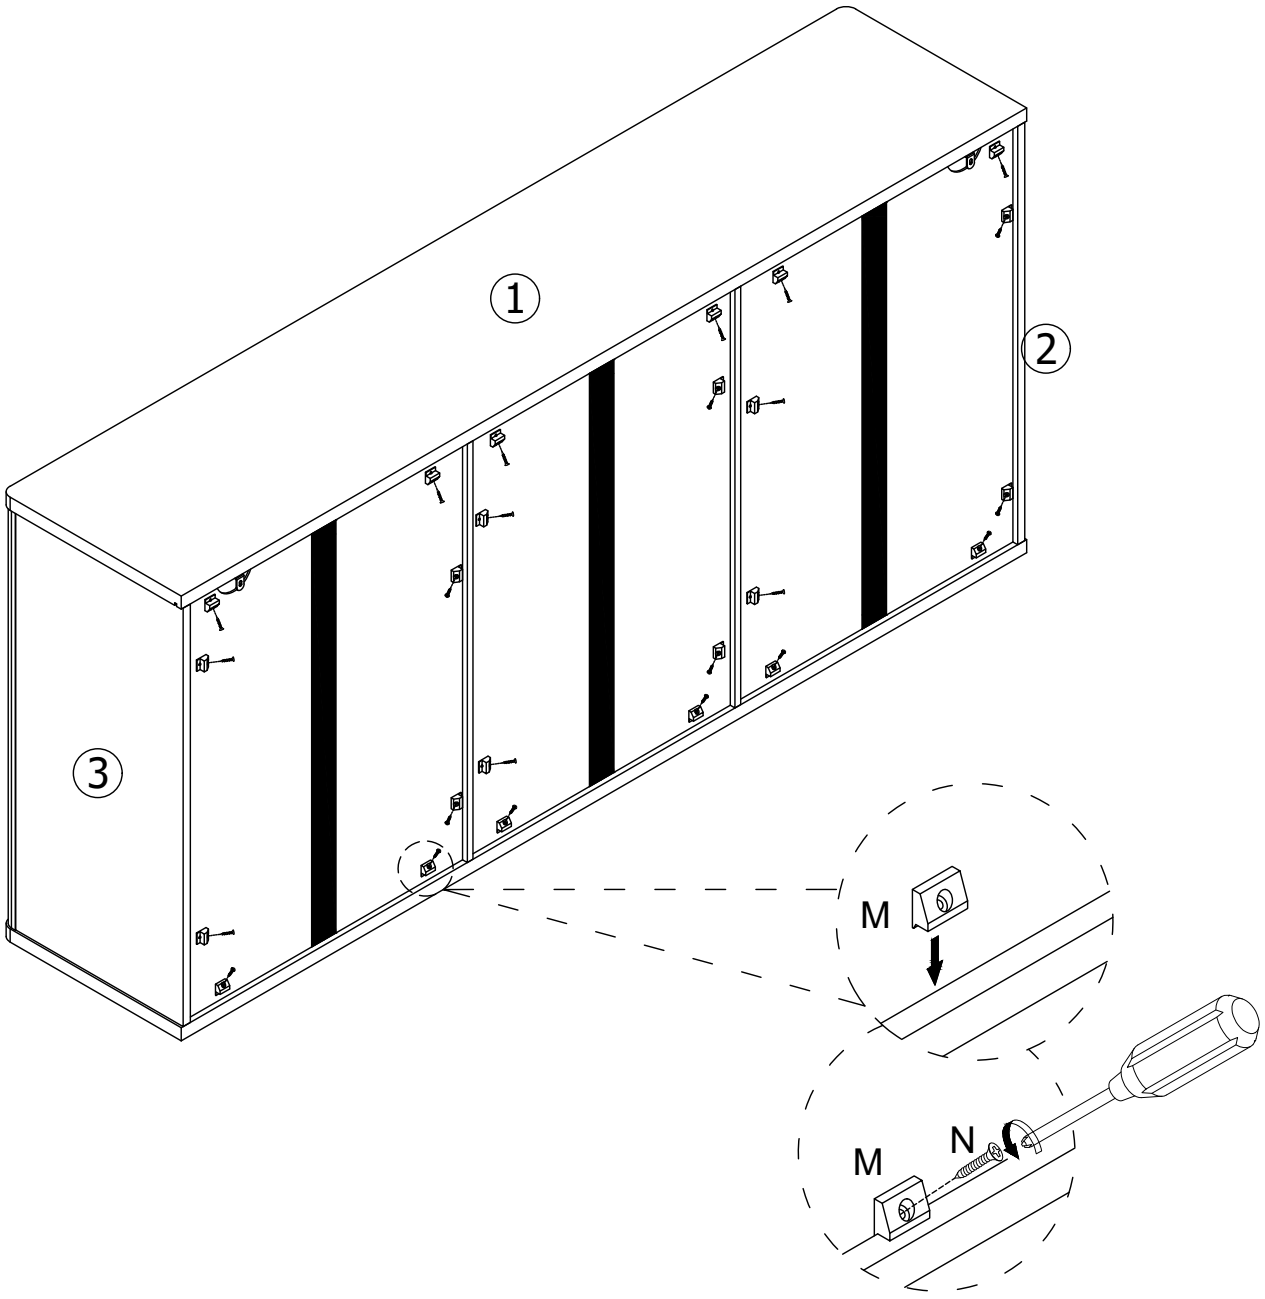

M	N
	
X24	X24


Step7

Make two holes 45MM deep

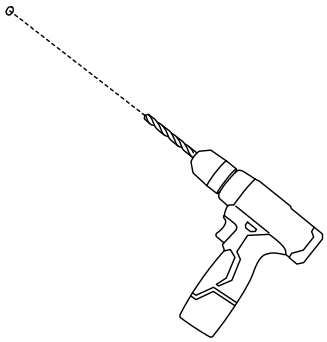

Wall

Step8

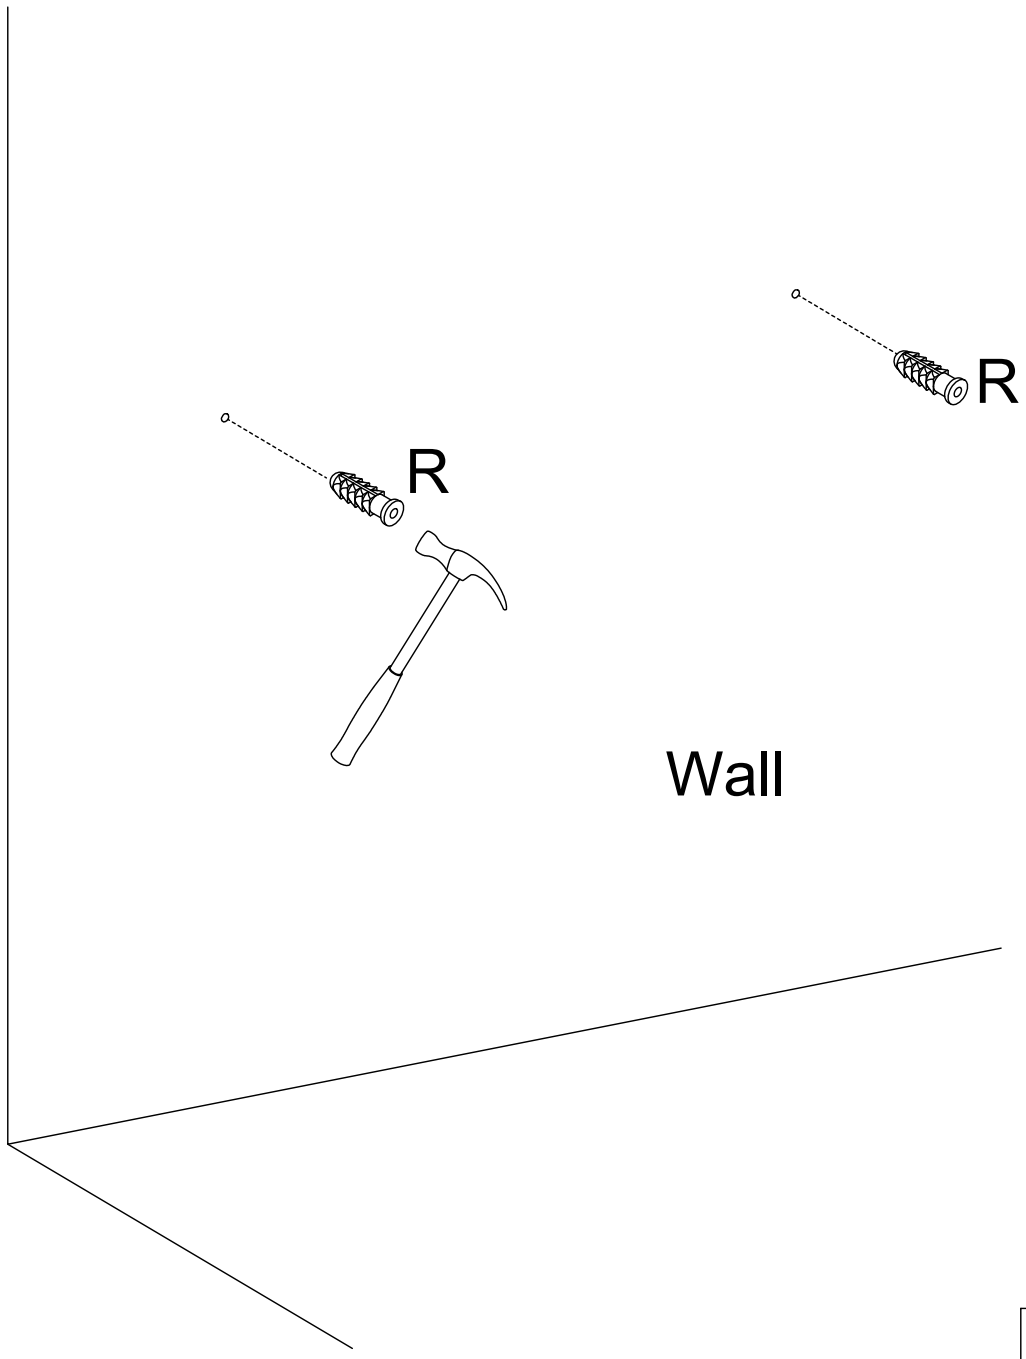


R

X2

Step9


NOTE:
According to the distance between the cabinet and the wall, adjust the #O fitting to the appropriate position , and then tighten all the screw on the #O fitting.

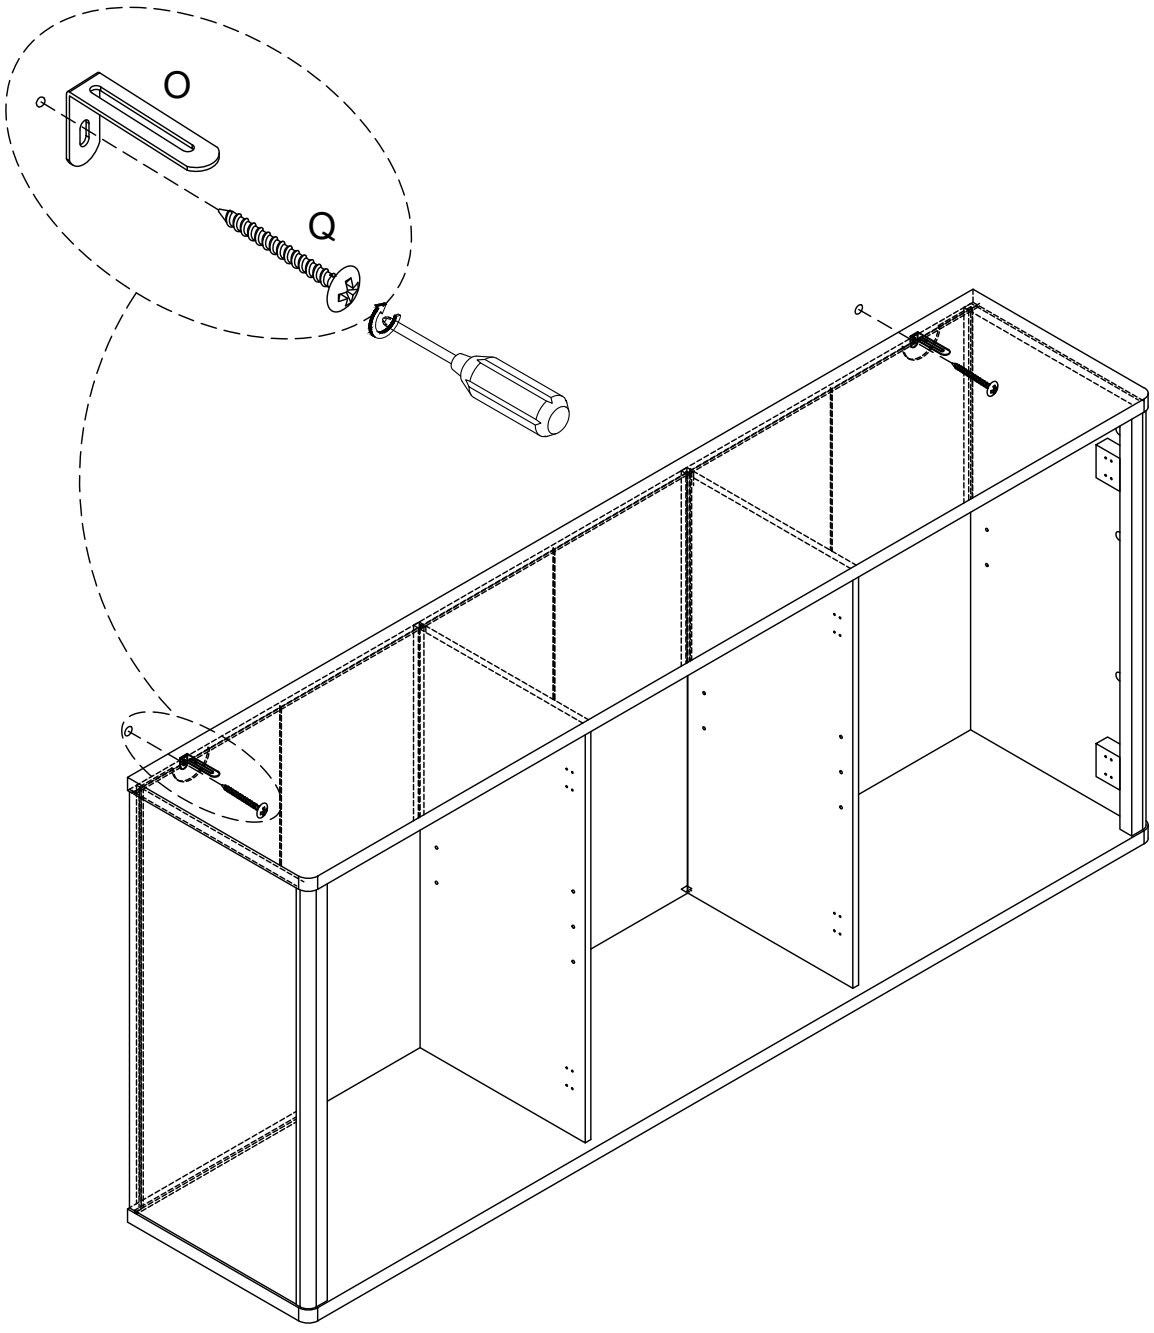

Q


X2

Step10

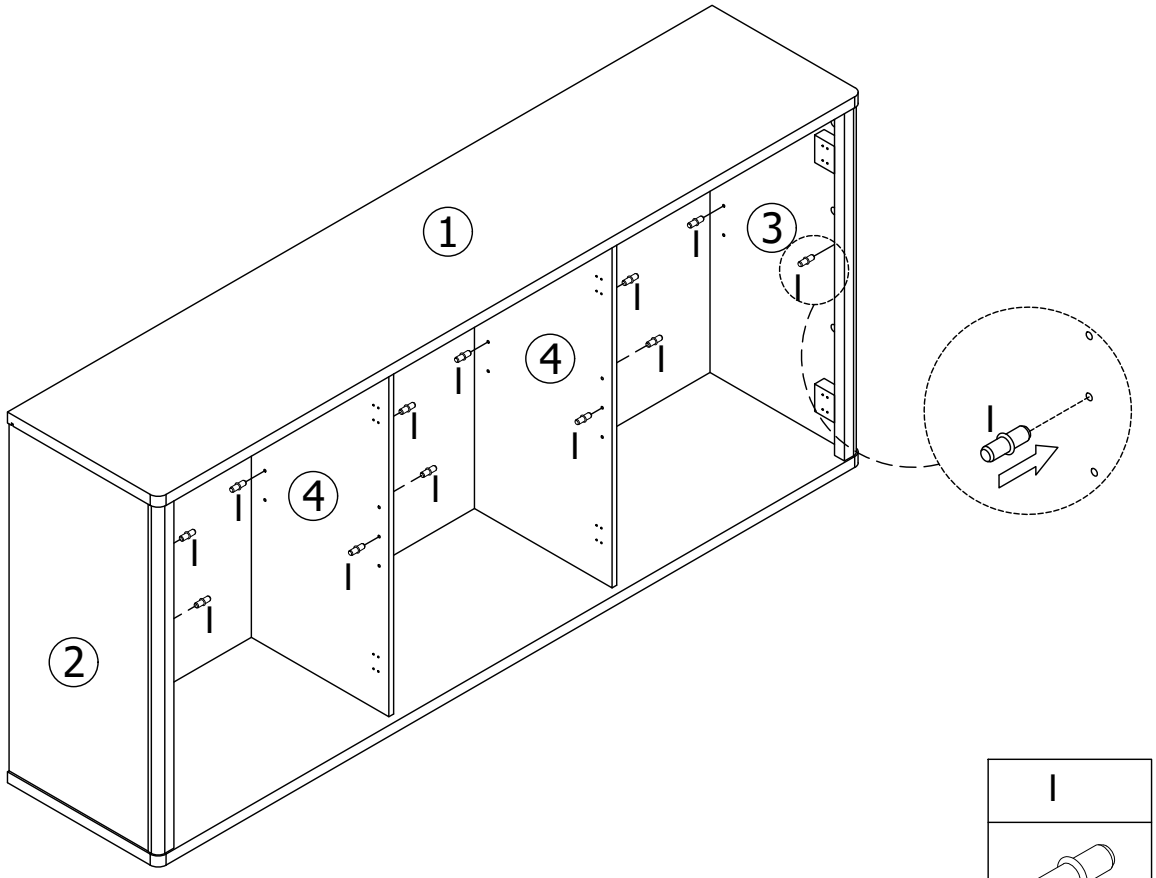




X12


Step11

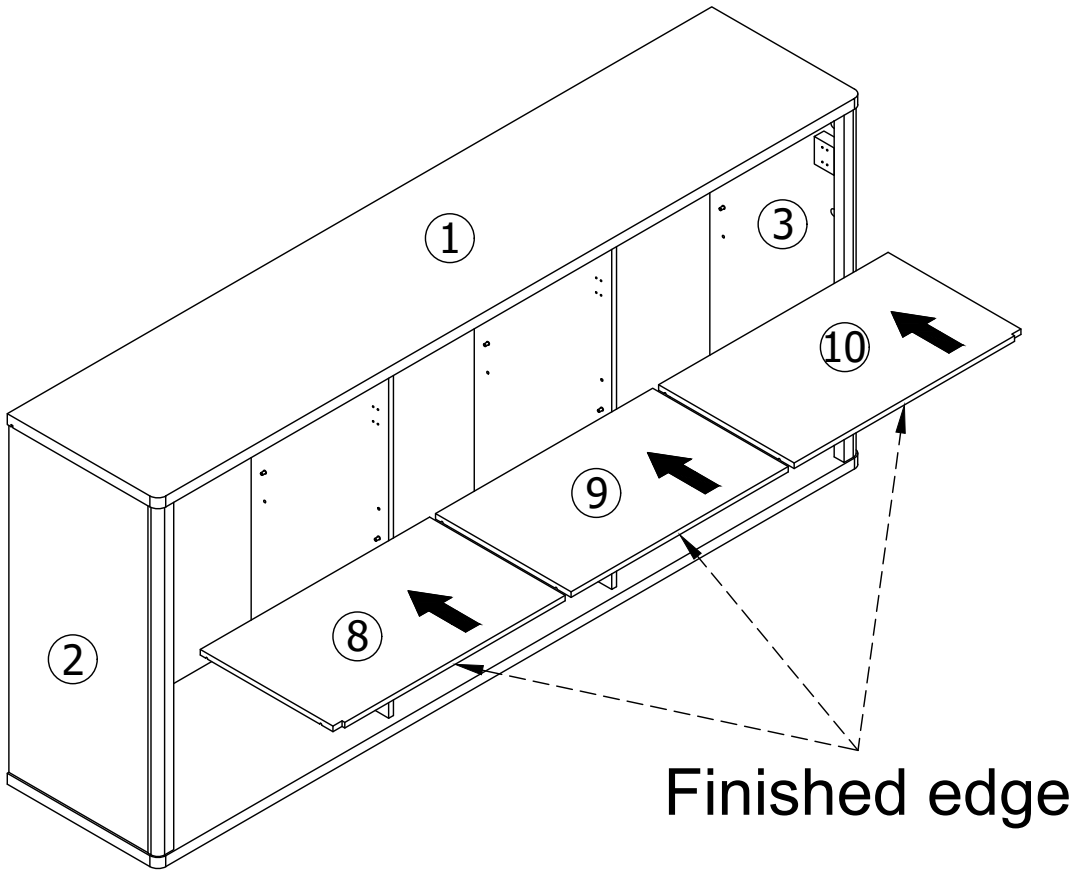

Step12


NOTE: This step use the FULL CRANKED hinge (J) ONLY! to part #11 & #12.

	J	K
		
	✓	✗

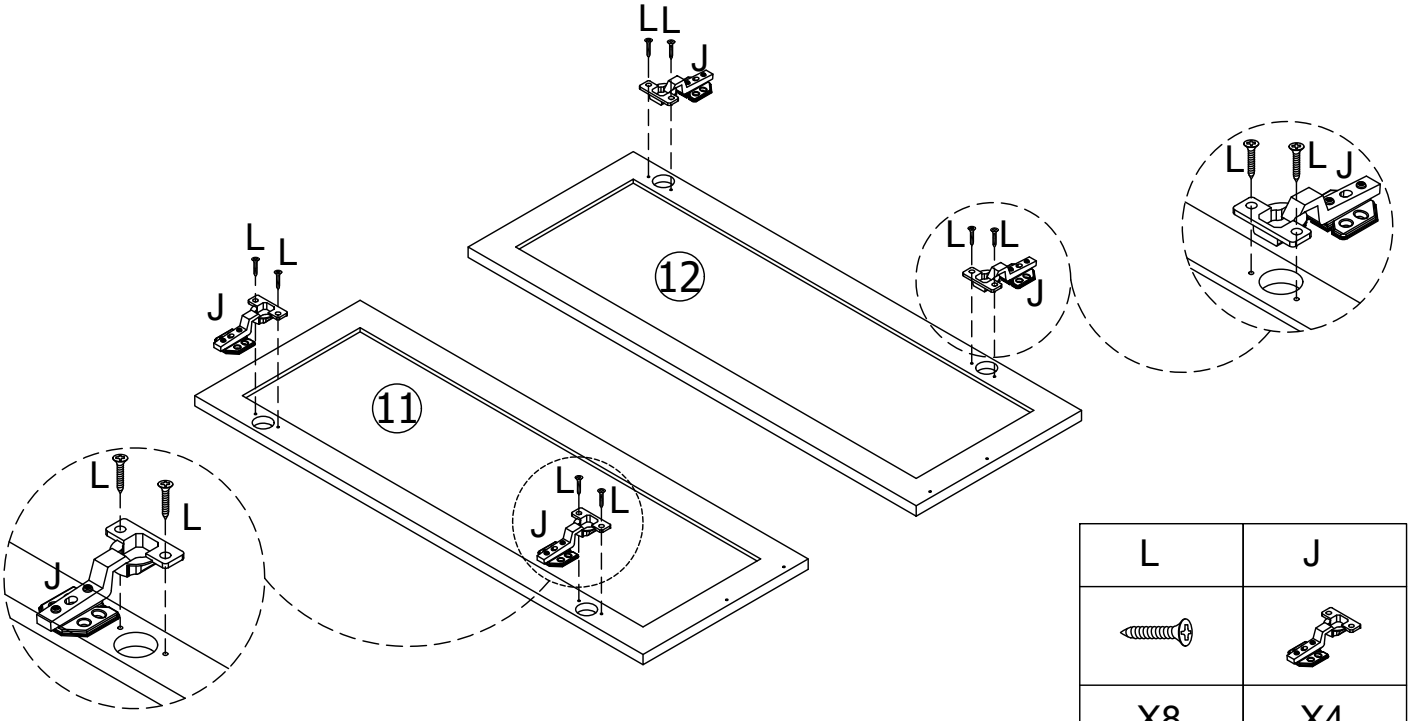


L	J
X8	X4

Step13

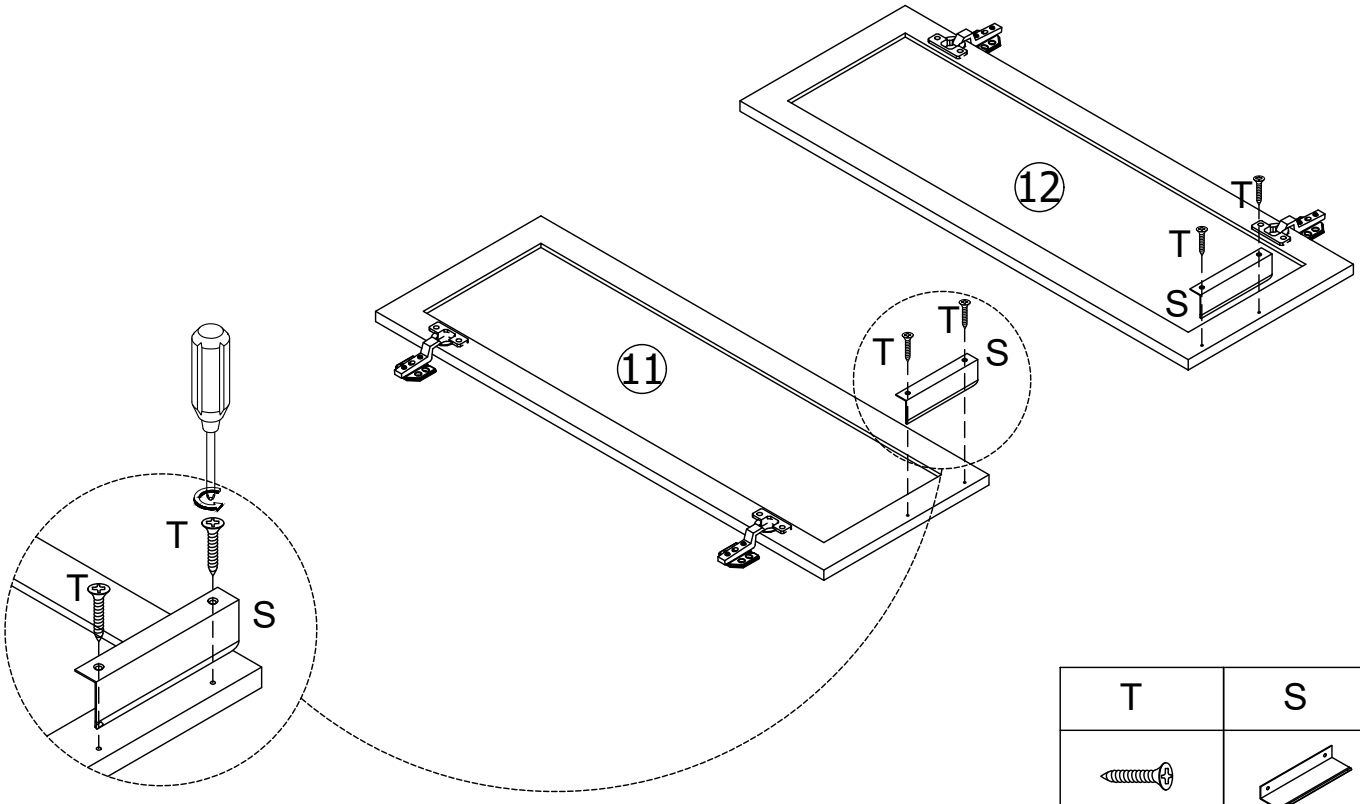



T	S
X4	X2

Step14

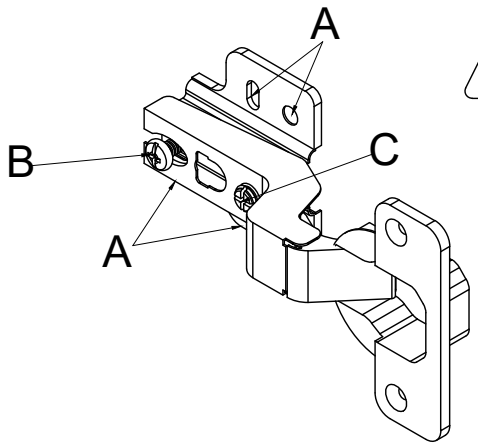


YOU WILL USE HINGE ADJUSTMENT INSTRUCTION ON THIS PAGE FOR THE NEXT STEP.

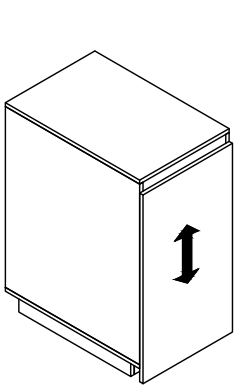


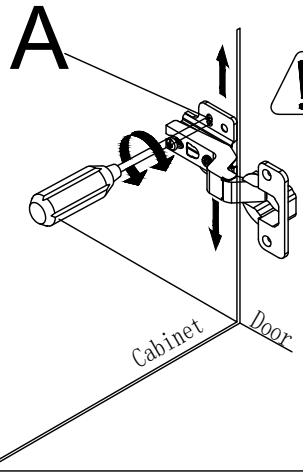


If you find a large gap above or bellow the door.

To adjust the vertical height.
Loosen the four screws "A" on both hinges.
Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.
Then tighten back up.

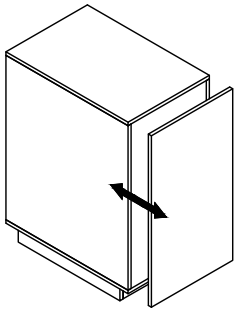


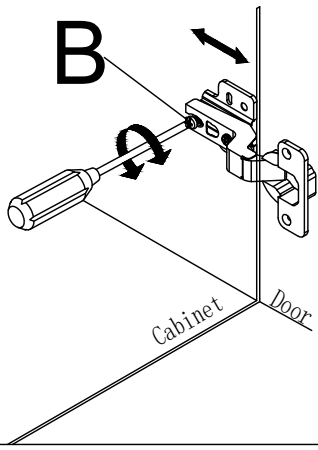


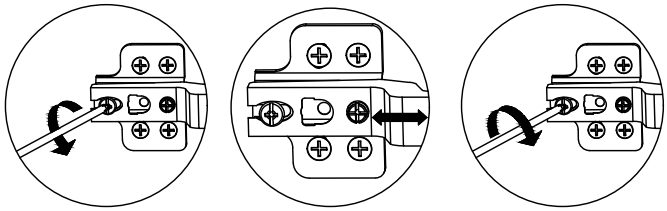


If you find the door is too protruding or too inside.

To adjust depth.
Loosen screw "B" on both hinges and move the door to suit.If the door doesn't move,turn screw "C" on both hinges 1-2 turns and try again.Finally,tighten both screw"B"and reset both screw"C".

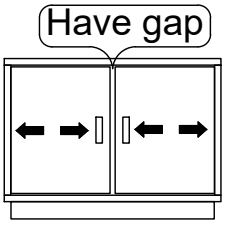

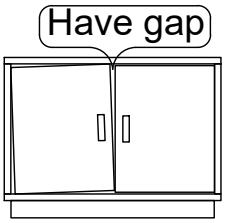


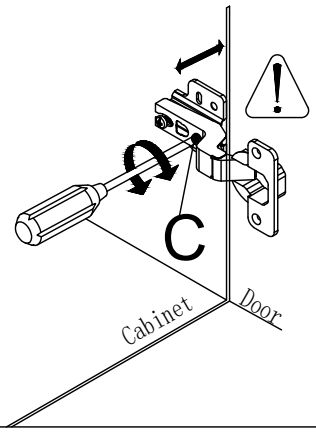


If you notice large gaps between or beside the doors, or if two doors in middle get stuck together, don't worry — this is not a product defect.

To adjust side ways.
Turn screw"C"clockwise or counterclockwise on both hinges until the door is in the desired position.

Step15

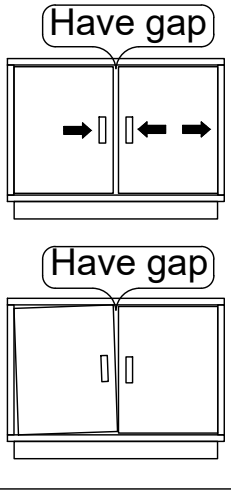

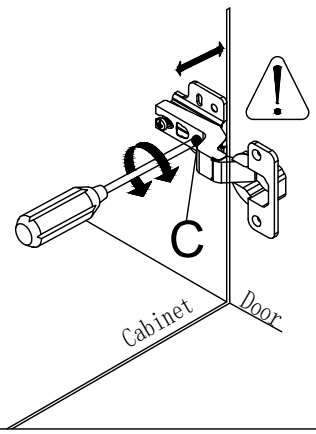


If you notice large gaps between or beside the doors, or if two doors in middle get stuck together, don't worry — this is not a product defect.

To adjust side ways.

Turn screw"C"clockwise or counterclockwise on both hinges until the door is in the desired position.


NOTE:Install the door with part (J) of #11 at the far left end.

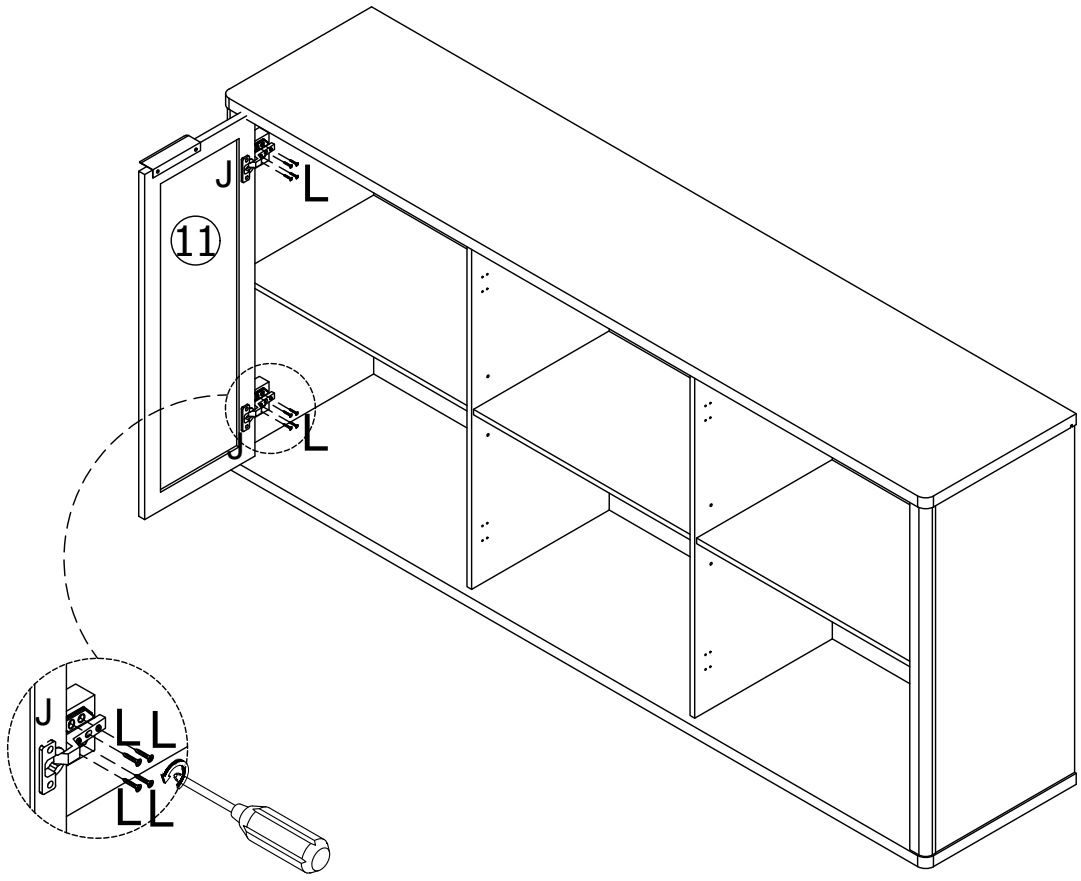


L

X8

Step16

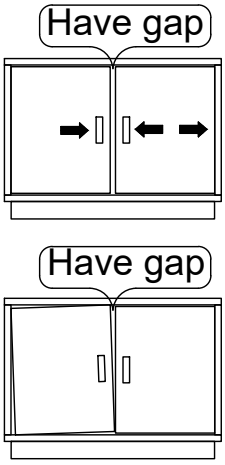

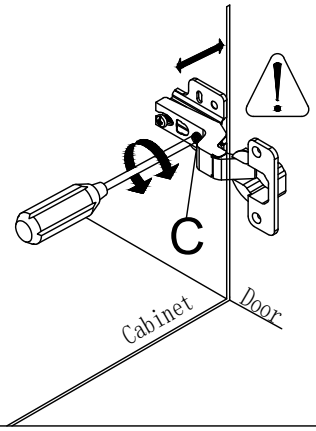


If you notice large gaps between or beside the doors, or if two doors in middle get stuck together, don't worry — this is not a product defect.

To adjust side ways.

Turn screw"C"clockwise or counterclockwise on both hinges until the door is in the desired position.

NOTE:Install the door with part (J) of #12 at the far right end.


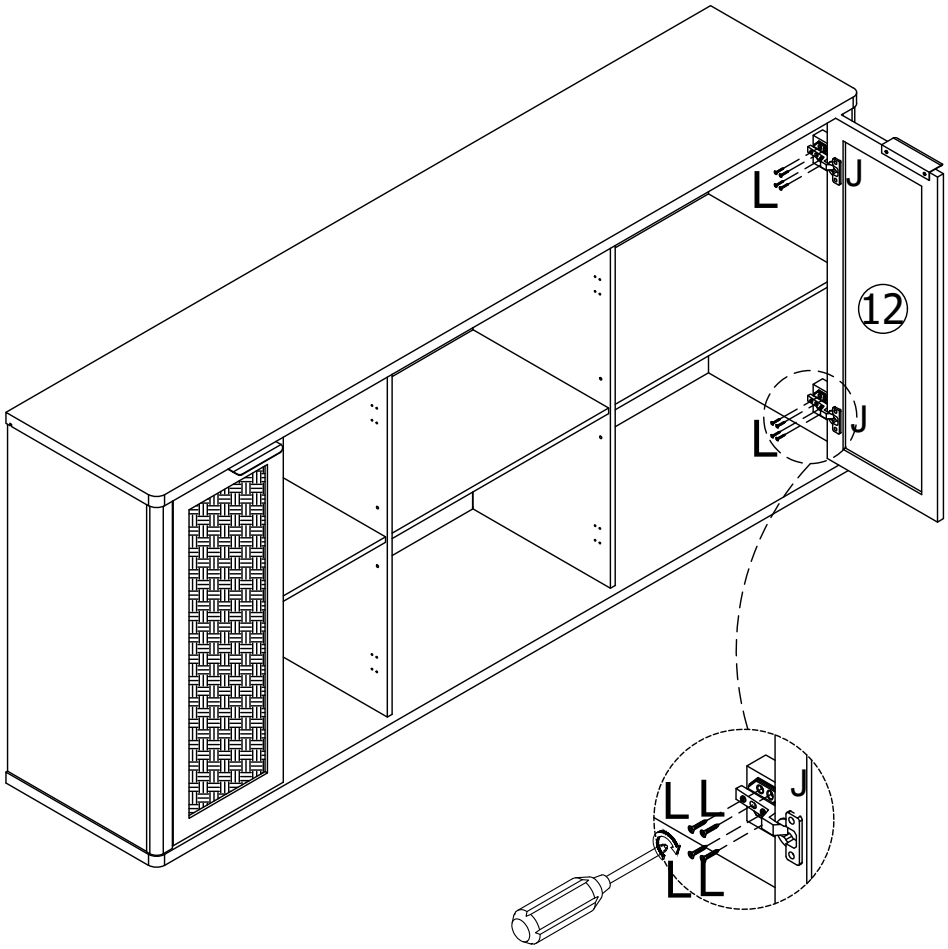



L

X8

Step17


NOTE: This step use the FULL CRANKED hinge (K) ONLY! to part #11 & #12.

	J	K
		
	✗	✓

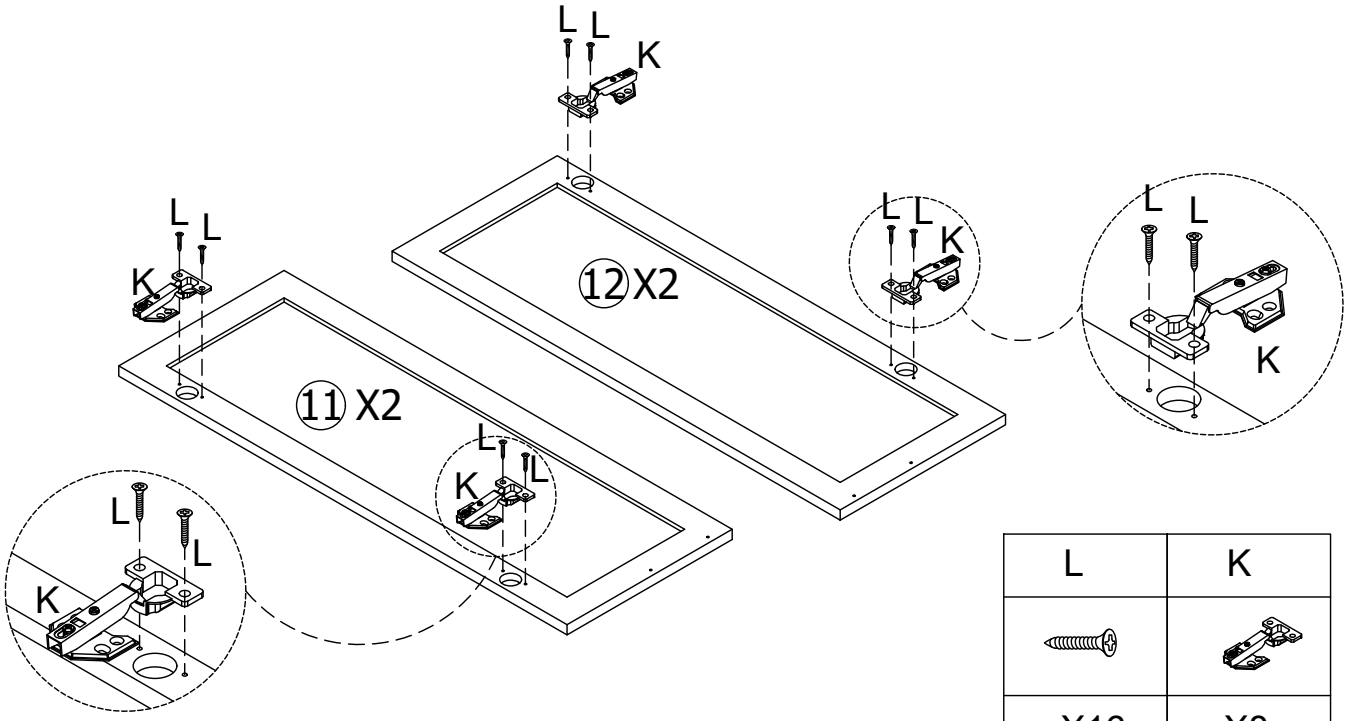


L	K
X16	X8


Step18

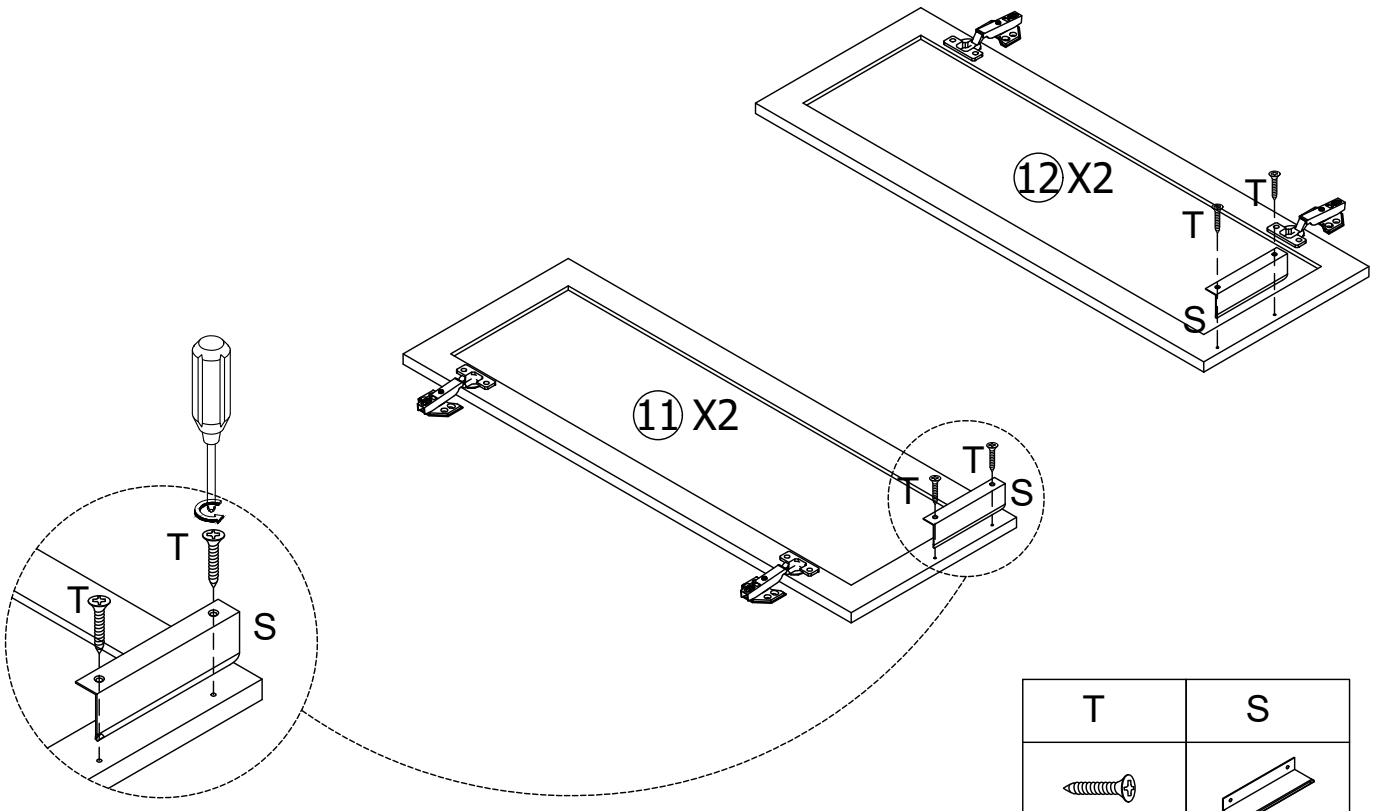

T	S
X8	X4

Step19

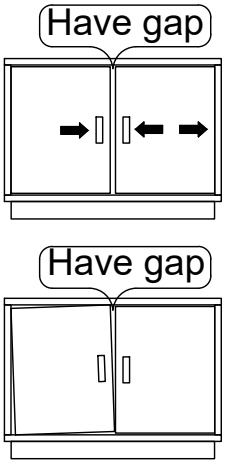

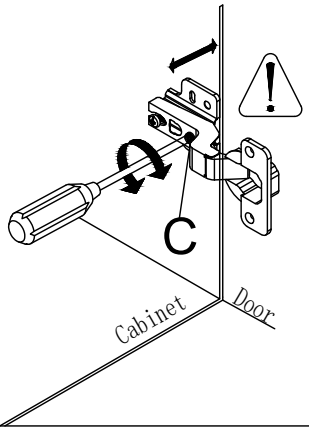


If you notice large gaps between or beside the doors, or if two doors in middle get stuck together, don't worry — this is not a product defect.

To adjust side ways.

Turn screw"C"clockwise or counterclockwise on both hinges until the door is in the desired position.


NOTE:Install the door with part (K) of #11 at the middle left position.

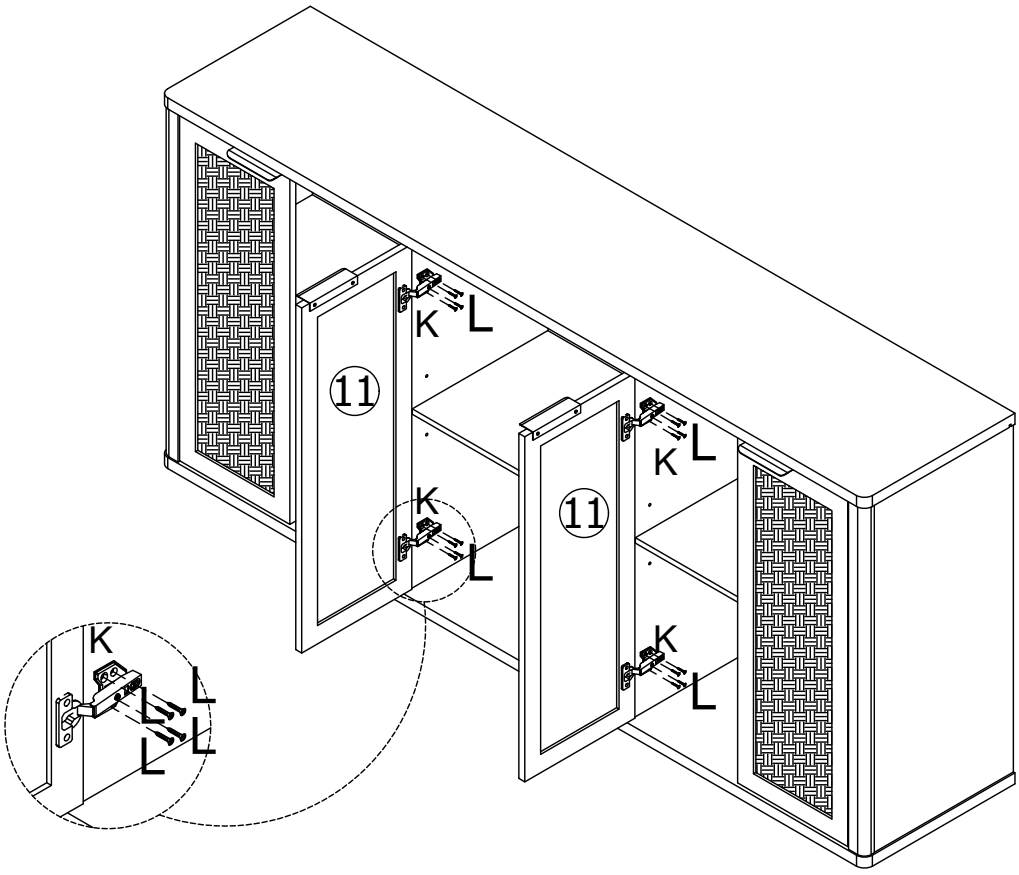


L

X8

Step20

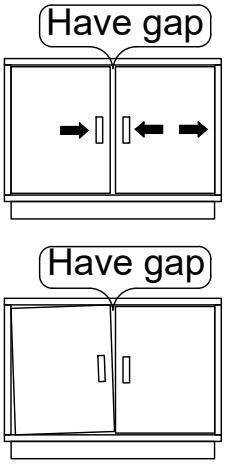

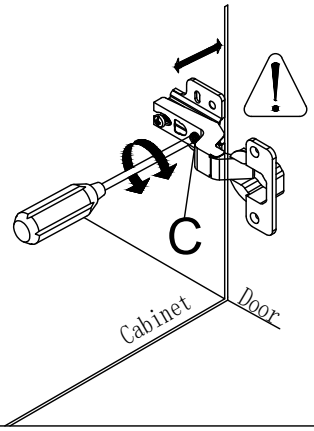


If you notice large gaps between or beside the doors, or if two doors in middle get stuck together, don't worry — this is not a product defect.

To adjust side ways.

Turn screw"C"clockwise or counterclockwise on both hinges until the door is in the desired position.

NOTE:Install the door with part (K) of #12 at the middle right position.

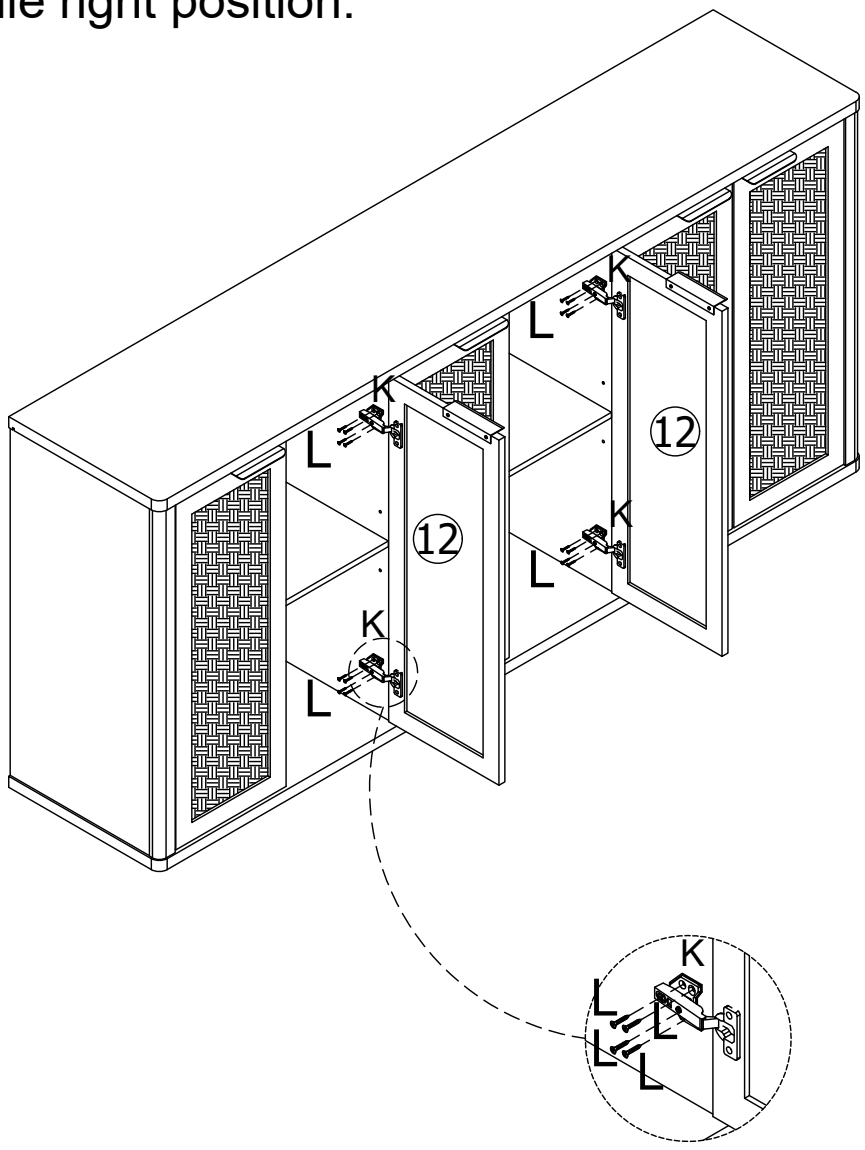


L

X8

Step21

ASSEMBLY COMPLETED

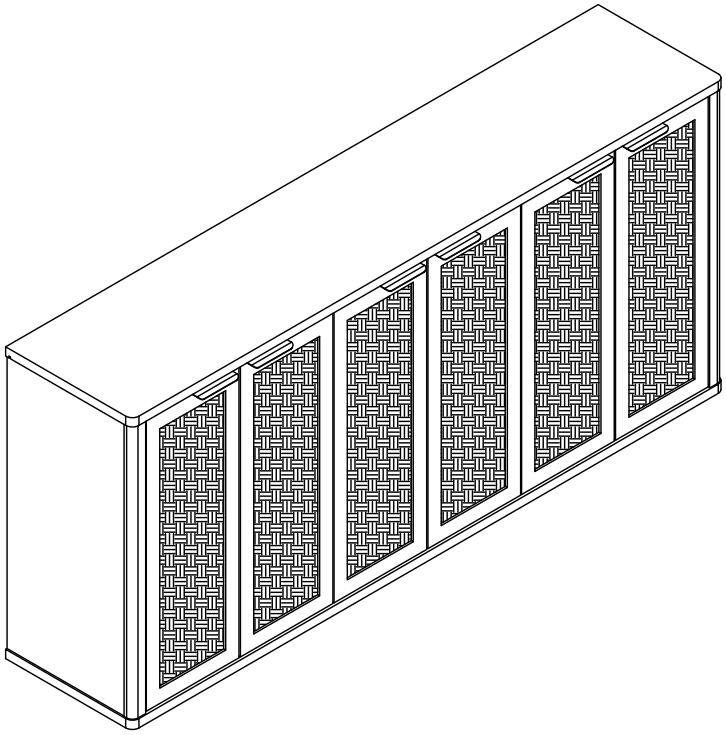

⚠ WARNING





Children have died from furniture tipover. To reduce the risk of furniture tipover:

- **ALWAYS install Anti-tip device provided.**
- **NEVER put a TV on this product.**
- **NEVER allow children to stand, climb or hang on drawers, doors, or shelves.**
- **NEVER open more than one drawer at a time.**
- **Place heaviest items in the lowest drawers.**