GeekChef®

Bring The Future Home

Geek Technology Co., Ltd.
35 Henry St Secaucus
NJ 07094
Toll Free 1-844-804-0108


Version Update: –2026.08

GeekChef®

Toaster

User Manual

Model No.: MT-302

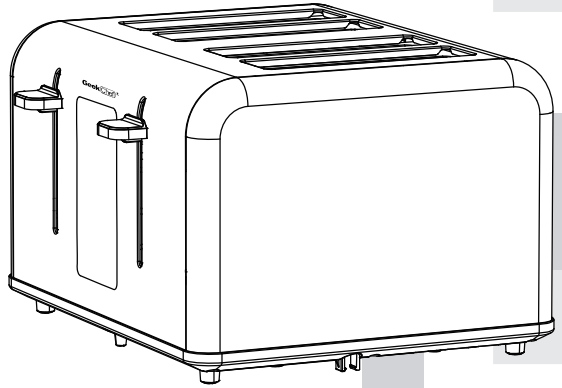

Toll Free: 1-844-804-0108

IMPORTANT: Read the instructions carefully before operating the appliance and keep them for future reference.

TABLE OF CONTENTS

Safety Instructions	**2**
Product Components	**4**
How To Use	**5**
Cleaning And Maintenance	**7**
Troubleshooting	**9**
Limited Warranty	**10**

TECHNICAL SPECIFICATIONS

Model No.:	MT-302
Power :	1550W
Voltage:	120V~ 60Hz

Scan the QR code for more assistance and support.

LIMITED WARRANTY

LIMITED WARRANTY

Geek Technology Co., Ltd. warrants to the original consumer or purchaser this Geek Chef Toaster Maker is free from defects in material or workmanship for a period of One (1) year from the date of purchase. If any such defect is discovered within the warranty period, Geek Technology Co., Ltd. at its discretion, will repair or replace the Product at no cost. This limited warranty is good only to the original purchaser of the product and effective only when used in United States.

For warranty or repair service: Call 1-844-804-0108 and choose the appropriate prompt, or email care@geektechnology.com. Please have your Product's model number, date code(on rating label), your name, address, city, state, zip code and phone number ready.

NO OTHER WARRANTY IS APPLICABLE TO THIS PRODUCT. THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPERSS OR IMPLIED. INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW. IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. NEITHER THE MANUFACTURER NOR ITS U.S.DISTRIBUTOR SHALL BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDI RECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY NATURE. INCLUD ING WITHOUT LIMITATION. LOST REVE- NUES OR PROFITS, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT, OR OTH ERWISE, SOME STATES AND/OR TERRITORIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU, THE ORIGINAN PURCHASER, SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR TERRITORY TO TERRITORY.

THIS LIMITED WARRANTY DOES NOT APPLY TO :

1. Failure of product to perform during power failures and interruptions or inadequate electrical service.
2. Damage caused by transportation or handling.
3. Damage caused to the product by accident, vermin, lightning, winds, fire, floods, or acts of God.
4. Damage resulting from accident, alteration, misuse, abuse, or improper installation, repair, or maintenance. Improper use includes using an external device that alters or converts the voltage or frequency of electricity.
5. Any unauthorized product modification, repair by unauthorized repair center, or use of non-approved replacement parts.
6. Abnormal cleaning and maintenance as described in the user's manual.
7. Use of accessories or components that are not compatible with this product.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSES	SOLUTIONS
Product not powering on	Power plug not inserted properly	Insert the plug properly
The display does notshow functions	Lift lever cannot be pressed down correctly	Seek professional repair
	Electronic board failure	Seek professional repair
Functions not working properly	Electronic board failure	Seek professional repair
	Electronic board failure	Seek professional repair

IMPORTANT SAFETY INSTRUCTIONS

Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

Read all instructions, product labels and warnings before using the toaster.

1. Check that the mains voltage corresponds with the rating of the appliance before operating.
2. Do not touch hot surfaces-Use handles or knobs.
3. To protect against electric shock, do not immerse cords, plugs or appliances in water or any other liquid.
4. Do not leave any appliance unattended while it is operating.
5. Close supervision is necessary when any appliance is used by or near children or infirm persons.
6. Unplug from outlet when not in use or before cleaning.
7. Allow to cool before putting on or taking off any parts.
8. Do not aerate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner.
9. If the supply cord or appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
10. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
11. Do not use outdoors.
12. Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
13. To disconnect-remove the plug from the outlet.
14. Do not pull plug out by the cord.
15. Do not use this product for anything other than intended use.
16. This product is intended for household use only.
17. No liability can be accepted for any damage caused by noncompliance with these instructions or any other improper use or mishandling.
18. Use the toaster without bread for the first time. There will be some smoke at first; this is normal.
19. The toaster reaches very high temperatures, particularly in the area of the openings for the bread.
20. Bread may burn. Therefore this toaster must not be used near or below curtains and other combustible materials.
21. Do not place the cable or any other object over the bread openings whilst the toaster is in operation.

SAFETY INSTRUCTIONS

22. Do not attempt to dislodge food while the toaster is in operation.
23. Toasting lever must be in the‘UP’ position before attaching or disconnecting the plug from wall outlet.
24. Do not insert metal objects or other utensils into the toaster, as this will cause an electric shock or cause a fire.
25. Do not leave the toaster unattended whilst in operation.
26. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
27. Keep the appliance and its cord out of reach of children less than 8 years old.
28. The surfaces are liable to get hot during use.
29. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
30. The door or the outer surface may get hot when the appliance is operating.
31. HOT SURFACES- RISK OF BURNS
    CAUTION: HOT SURFACE!



FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS

CLEANING AND MAINTENANCE

Storage

Store the entire appliance on a clean and dry surface, where it may not tilt or fall and no other objects could fall on it and where it is safe from frost and inadmissible strain (mechanical or electric shock, heat, moisture, direct sunlight) and where it is out of reach of young children. Do not place any hard or heavy objects on the appliance or any parts of it.

Always switch off the appliance by pressing the CANCEL button and unplug the powerconnector if the appliance is not in use.

If the appliance is not in use for a long period of time, clean the appliance before storage.

If required, wind the power cord around the cord storage in the bottom of the appliance.

CLEANING AND MAINTENANCE

1. Always the appliance to cool before cleaning.
2. Before cleaning, always turn off the appliance and unplug it from the power supply.
3. Do not immerse the appliance and power cord in water or other liquids or wash them in the dishwasher.
4. Wipe off the toaster with a damp cloth and a little dish washing detergent. Do not use any abrasive scouring agents, steel wool, metal objects, hot cleaning agents or disinfectants, since they can damage the appliance.
5. To remove jammed bread slices, unplug the toaster and turn it over and shake lightly.

   Never attempt to remove stuck bread slices with sharp or pointed tools or silverware.
6. Remove crumb and any small pieces of bread from the crumb tray regularly. To do this, pull the crumb tray with a damp cloth, then dry it thoroughly and push it back into the appliance.

Warning : Crumbs will accumulate in the crumb tray and could catch fire if not emptied periodically.

7. The appliance must be completely dry before you use it again.


Tips:

Your toaster has been designed for optimum toast balance. Some elementson the inside of the toaster may glow more brightly than others when in use.This is part of normal toaster operation.

To remove food jammed in the bread slots:
Unplug the toaster and removethe food once the toaster has cooled down.
Do not place food on top of toaster while it is warming.
Do not try to force the food out with the toast lift lever.
This may damage the toaster.

PRODUCT COMPONENTS

CONTROL PANEL

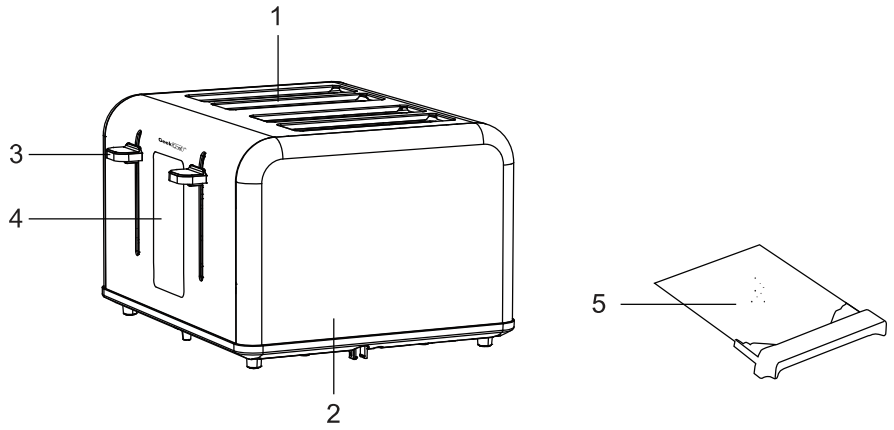

1. Bread slots
2. Metal housing
3. Press lever
4. Function touch panel
5. Crumb tray x 2

MAIN FUNCTION DESCRIPTIONS

1. **Cancel (Mid-cycle stop):** During toasting, press the Cancel button to stop toasting at any time.
2. **BAGEL (One-side toasting):** This function toasts only one side. When this button is pressed, the middle heating element stops heating, while the left and right elements continue to heat.
3. **Reheat:** This function is used to briefly reheat already toasted but cooled bread.When the toaster is started and this BUTTON is pressed, the indicator lights up. The electronic board controls the heating element for a short time. This function is not controlled by the browning level/timer.
4. **Defrost:** This function is used for toasting bread in cold climates or bread that has been refrigerated. When the toaster is started, the indicator lights up. The electronic board extends the original set time by 25 seconds to defrost the bread before toasting, ensuring the browning level remains consistent with normal climate and non-refrigerated bread.
5. **Level selection buttons:** After power on, press different color buttons to select levels1-6. Each level corresponds to a different browning level for bread.
6. **WHITE (White bread):** This function is used for toasting regular white bread.
7. **WAFFLE:** This function is used for toasting waffles or similar types of bread pastries.
8. **GLUTEN FREE:** This function is used for toasting gluten-free or low-gluten bread.

OPERATING INSTRUCTION

1. **Prepare the toaster:** Fully unwind the power cord. Place the toaster on a level, dry, heat-resistant surface, then plug the power cord into a suitable power outlet.
2. **Insert food:** Place evenly sliced bread or similar cakes and pastries (10x10cm, 0.5 to2.4cm thick) into each slot of the toaster.
3. **Select browning level and function:** According to personal taste, freely choose between levels 1-6. Level 1 gives the lightest browning, level 6 the darkest. For first use, it is recommended to select a medium level.
4. **Start toasting:** Carefully press down the lift lever until it clicks into place. This starts the toaster, and the Cancel button lights up.

Note: The lift lever will not click into place unless the toaster is connected to the power supply.

5. **Finish toasting:** When toasting is complete, the bread will pop up automatically. Lift the lever upwards to easily remove the food.

Note: Frozen food may require a longer toasting time. Please use the Defrost function.

Note: Even if the heating elements do not glow red, the food will still be toasted when the toaster is connected to power. During toasting, the elements may not glow red but are working normally.