SuNvivi

French Fry Cutter

OPERATION MANUAL

SKU:ZVC004

707-392-8405 | **support@sunvivi.com** | **www.sunvivi.com**

Product Description

Welcome to purchase and use the company's multi-functional fruit and vegetable cutter series products, this series of products are in line with food-grade contact metal materials. It is precision processed by high-quality aluminum alloy, stainless steel and ABS and other materials. We have always been in line with the goal of safety, efficiency, convenience, and practicality, and truly achieve "cutting a variety of fruits and vegetables casually."

Product characteristics:

1. Made of metal materials with an exquisite structure, the device is safe, reliable, durable, easy to operate, and efficient in cutting. Its one-piece molding design saves labor and enhances efficiency.

2. The blade is made from high-quality, ultra-thin, food-grade stainless steel and is precision-ground for quick, clean cuts that prevent squeezing or damage, preserving the ingredients' original taste.

3. The machine is easy to clean and can be washed and rinsed in multiple ways, ensuring food hygiene and safety.

4. The machine offers a full range of cutting specifications to meet various needs and allows for quick cutter replacement. It is convenient to use, with all operations performed manually.

IMPORTANT NOTICE: Read this manual carefully before use!!

This manual is considered an integral part of the device and will be provided to hotel or restaurant owners, managers, and responsible persons for training device operators. Please read the precautions carefully before use and retain this manual for future reference.

⚠!Important Safety Precautions

Always follow basic safety precautions when using these devices. These include:

- This device is not intended for use by children. It contains very sharp blades, which could cause serious injury. Keep the device out of reach of children.
- To ensure optimal performance and longevity of the device, please follow the instructions carefully.
- Always clean the device after each use by rinsing it with clean water.
- The blades are very sharp. Take care not to touch the blades directly or operate the device while wearing gloves.
- Do not place the device in a dishwasher or any other automatic cleaning device.
- Avoid using alkaline cleaners as they may damage the finish of the device.
- The use of non-approved accessories or modifications may pose safety risks.
- This device is designed for cutting fruits and vegetables only. Do not use it for other purposes.

! Before using this equipment for the first time, please remove all packaging and securing materials as shown in the illustration, and only use the equipment after it has been properly assembled.

!These devices require regular lubrication

When lubrication is required, wipe the guide rod with mineral oil, food-grade lubricant, or a towel. Do not use cooking oil or other greases, as they may become viscous and affect performance.

!Caution: Do not cut food beyond the edge of the plate.

! Note: When replacing the blade set, ensure that the specifications and model of the blade plate and pressing block are compatible.

（前三页不做改动，因PDF转word有变形，建议参考附件PDF）

French Fry Cutter

SKU:ZVC004



手柄: Handle

滑杆: Slide Rod

连动杆: Linkage Rod

食物推块: Food Pusher Block

支撑脚: Support Foot

刀盘: Blade Plate

Description:

1. Main body: Aluminium alloy material

2. Potato holder： one sets blade inould Size for potato chip is 9mm.



CAUTION SHARP BLADES!

KEEP FINGERS,HANDS,OTHER BODY PARTS AND OBJECTS CLEAR OF THE BLADE ASSEMBLY!

Installation Guide:

1.Open the packaging and remove the device.

2.Pull out the pin and install the pin corresponding to the handle (as shown in the picture).

3.Insert the potato into the potato holder, then press the handle by hand until the potato finish cutting.





Operation Guide:

● After installing the equipment,select a flat and sturdy table. Ensure that the suction cups are firmly attached to the tabletop. The height should be adjusted according to the operator's needs,ideally at a height that allows for easy pushing.

● The equipment's blade set consists of a blade plate and a food pushing block.When replacing the blade set,both the blade plate and the food pushing block must be replaced simultaneously.The machine offers a choice of 4 different blade sets.

● The blade is designed for cutting ingredients such as cucumber, radish,potatoes,onions,and other vegetables into strips or dice. Initially,the food is cut into strips or small pieces by pushing. The strips can then be re-placed into the blade to be cut into smaller granules.

● The size of the food to be cut should not exceed the edge of the cutter;otherwise,the food must be cut into smaller pieces first.

● During operation,place the ingredients in the center of the blade. The blade is very sharp,so do not touch it with your hands. Place the ingredients quickly,remove your hand,and then push the handle.Do not pause during compression;push all the way down in one motion to avoid damaging the blade.

Blade Plate Replacement:

1. As shown, remove the food pusher block.



2. Pull the blade plate upwards and replace it with a different size blade plate as needed.



3. When replacing the blade, make sure the blade edge is facing up. Do not install it upside down.

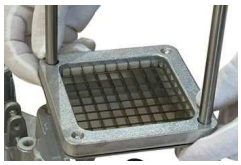

4. When replacing the blade, you also need to replace the corresponding food pusher block. Use a screwdriver to remove and replace the pusher block.



Reminder:

About changing the blade mold: If you need another size for potato chips, adjust the rows of the blade set and the mold. Remove the blade and mold, and install another size blade mold.

Precautions and Maintenance:

- The entire machine can be rinsed. After each use, ensure the blade is clean by flushing with water to prevent corrosion and extend its service life.
- The equipment belongs to precision machining machine. Self-modification and recreation of equipment will affects the use, which belongs to artificial damage.
- The blade belongs to the natural wear part of equipment. After cutting a certain time and quantity of ingredients, the blade will be broken or worn. It is necessary to timely purchase the blade of corresponding specification for replacement (Improper operation or cutting too hard ingredients will also damage the blade).
- The equipment adopts an ultra-thin blade and cannot cut tough and hard foods, such as meat and sweet potatoes.
- The guide must be lubricated regularly.
- If it cannot be pushed when cutting, it indicates that the cutter plate is worn and needs to be replaced. Do not apply excessive pressure. First, remove the cutter plate, replace it with one of the correct specifications, and then continue use.
- During operation, ensure that the entire machine is placed on a flat, stable table and that the suction cups are securely attached to the tabletop. Otherwise, the machine may slip, causing the blade to be hit and affecting its performance.
- Periodically check for loose screws, tighten them promptly, and maintain the machine.

Sunvivi®

Any Problem? Let Us Know

707-392-8405

support@sunvivi.com

www.sunvivi.com