
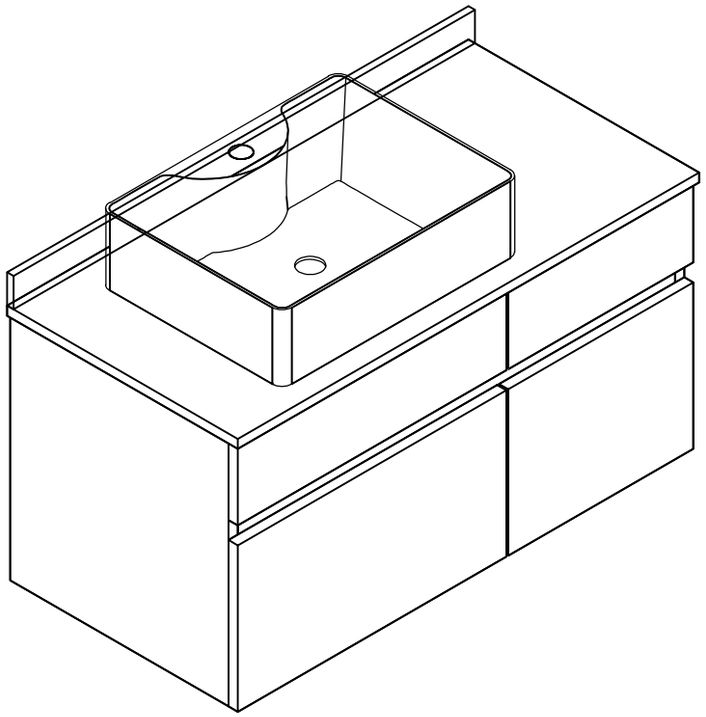
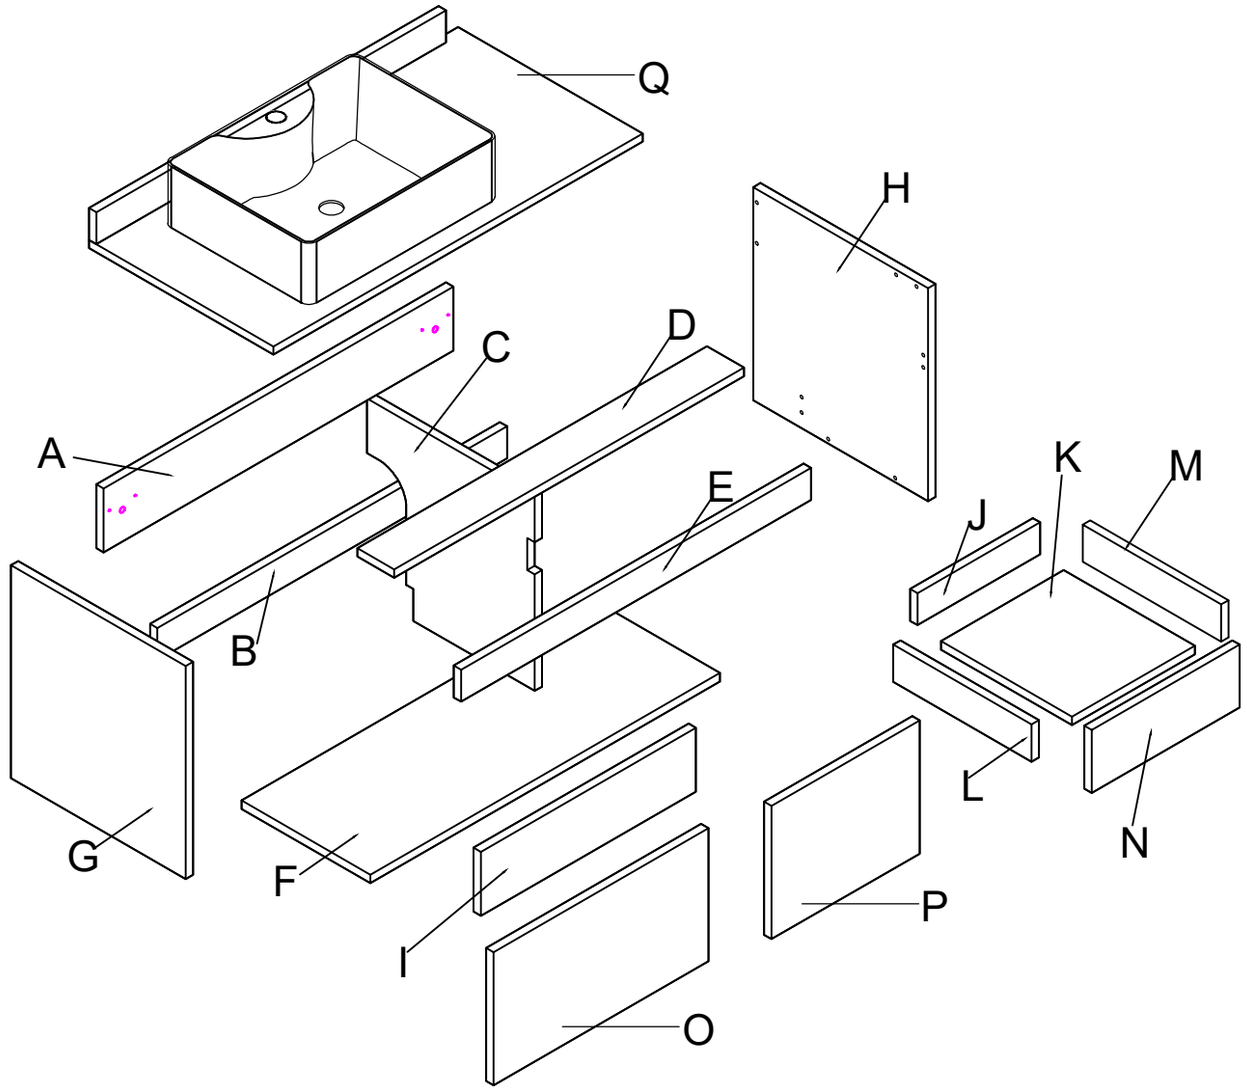
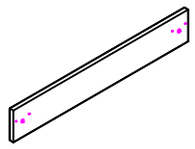
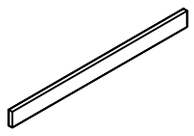

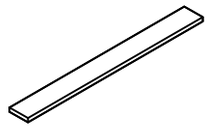
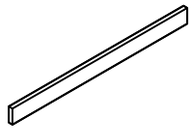

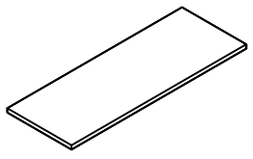




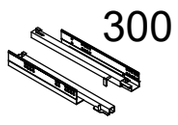


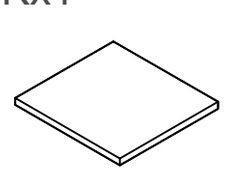
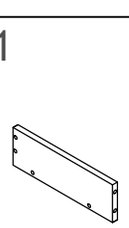
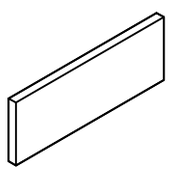
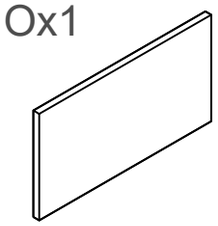
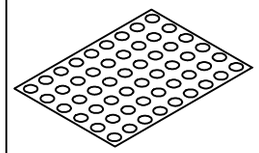
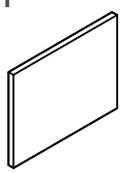



HYBC671

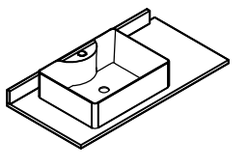

Ax1 	Bx1 	Cx1 	Dx1 	Ex1 	AAx51 	BBx51 	CCx60 	DDx2 	EEx2 
Fx1 	Gx1 	Hx1 	Ix1 	Jx1 	FFx1 	GGx4 	HHx1 	IIx2 	JJx2 
Kx1 	Lx1 	Mx1 	Nx1 	Ox1 	KKx2 	LLx2 	MMx2 	NNx4 	OOx1 
Px1 	Qx1 				PPx1 	QQx1 			


AA x4

BB x4

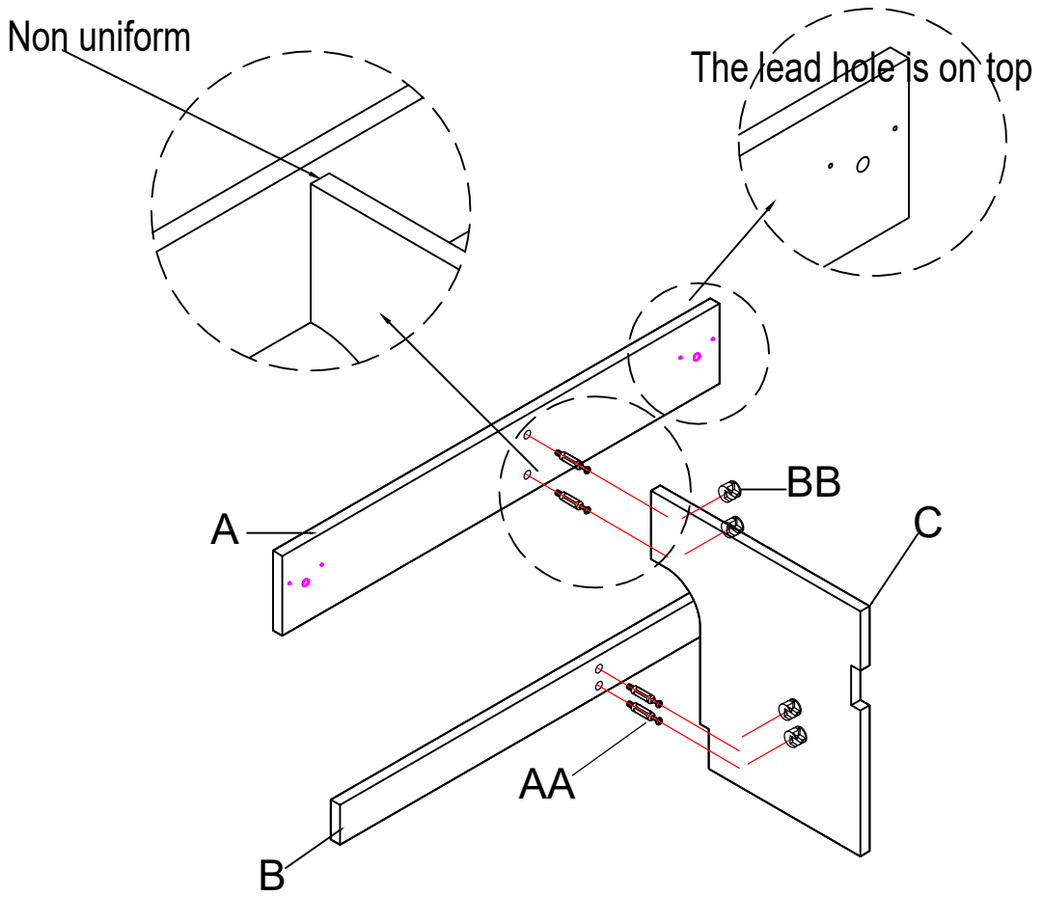


AA x3

BB x3

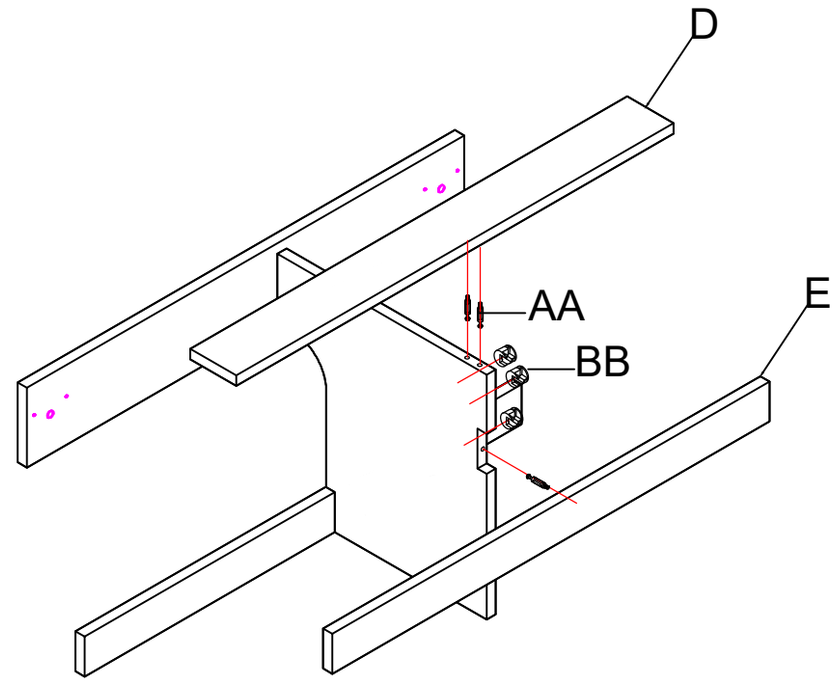


AA x4

BB x4

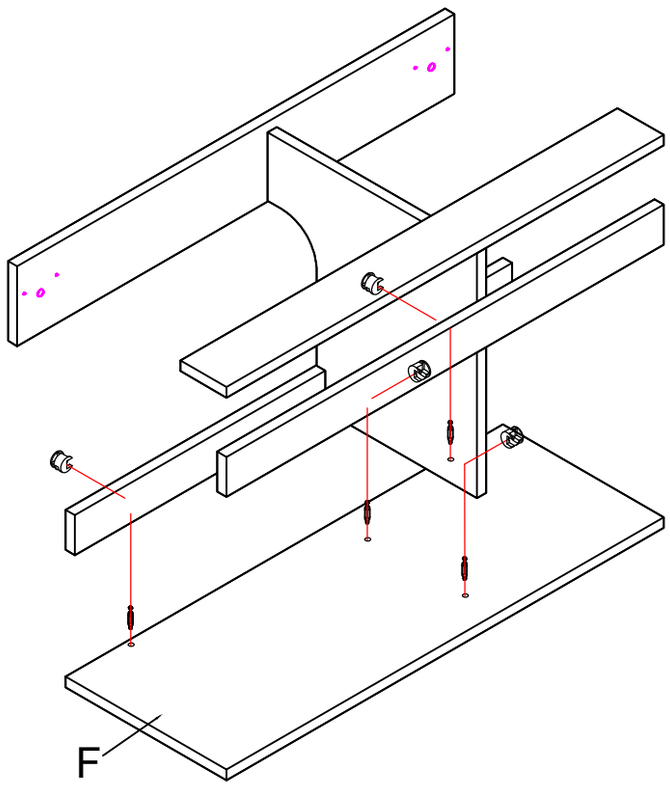


AA x20

BB x20

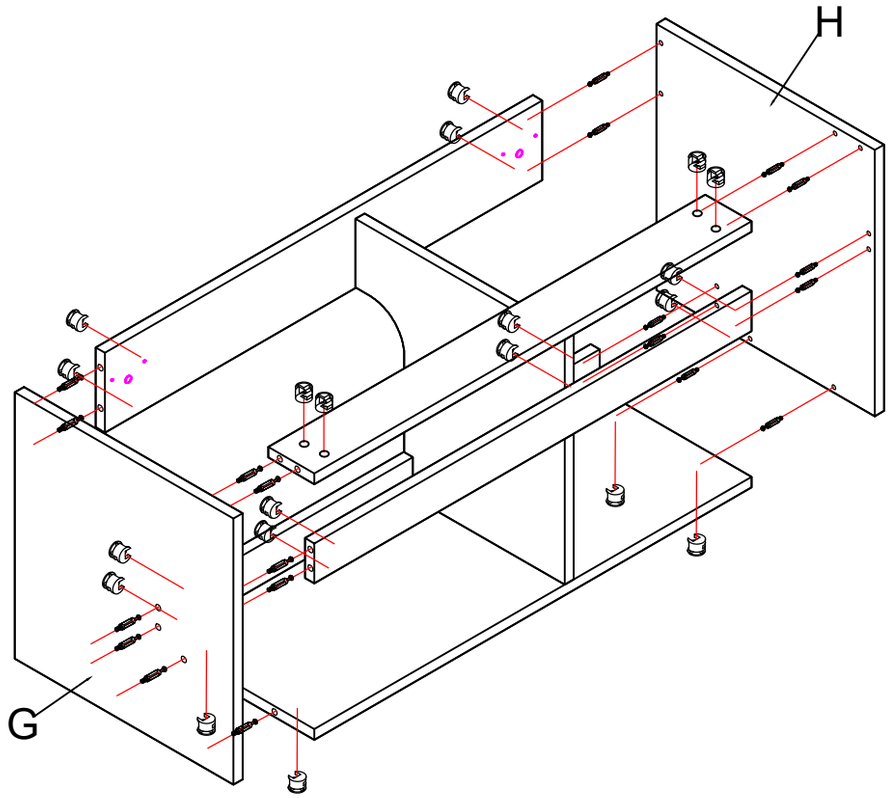


AA x4

BB x4

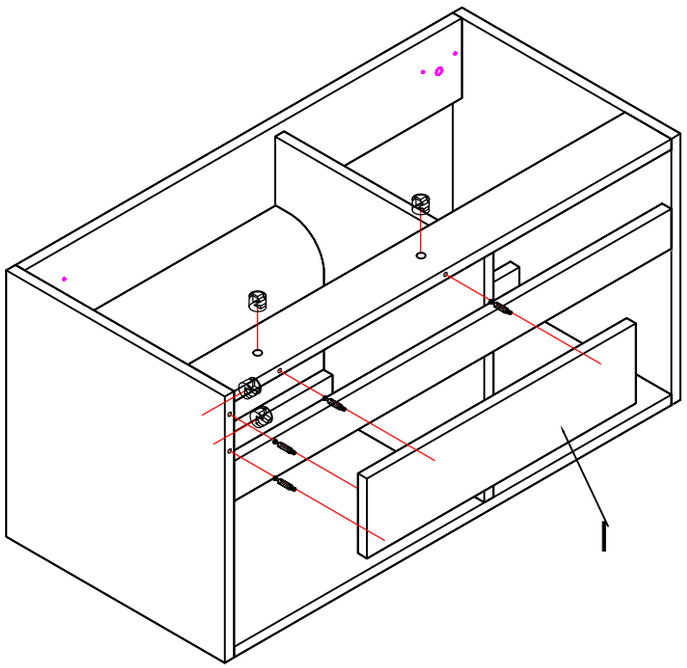


AA x2

BB x2

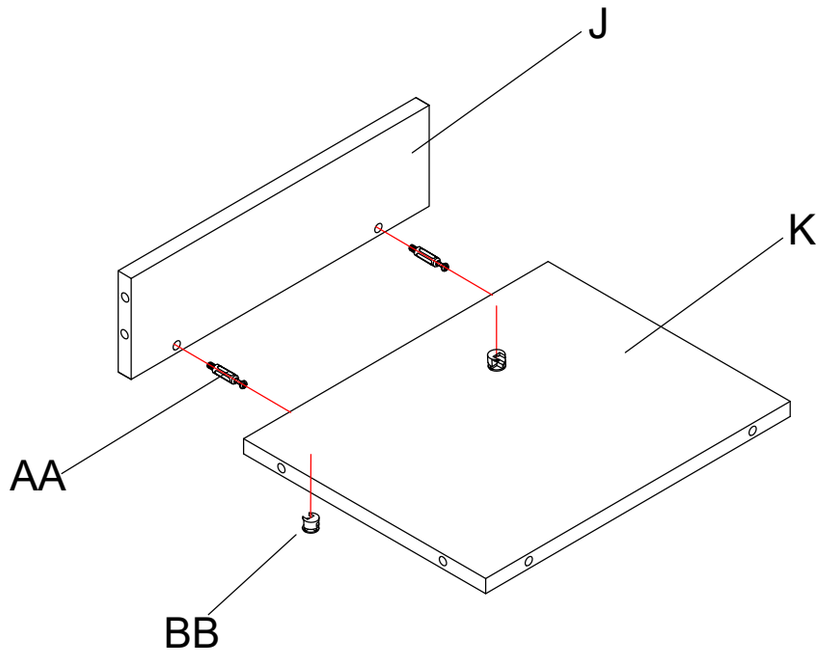


AA x8

BB x8

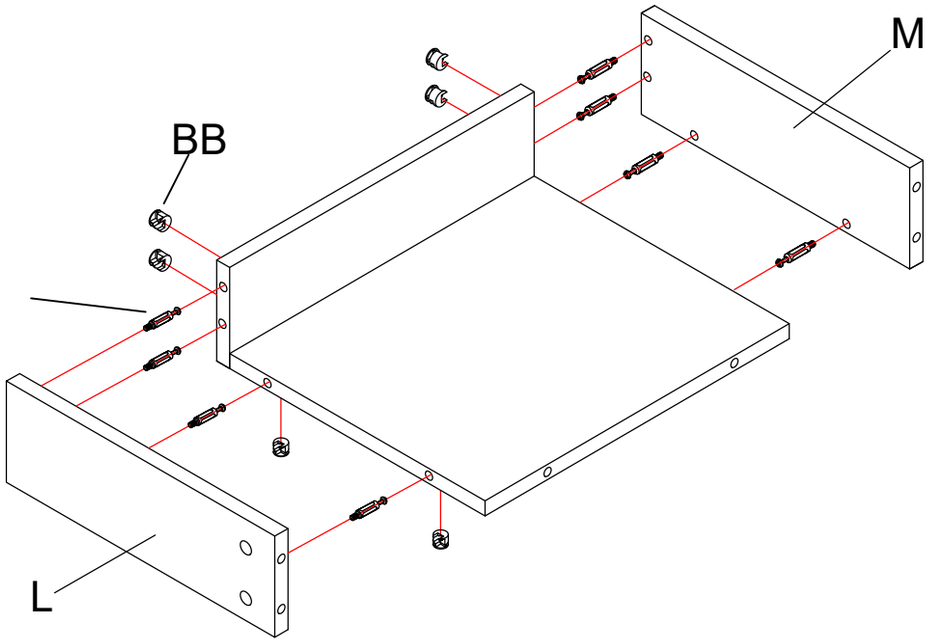

AA x6

BB x6

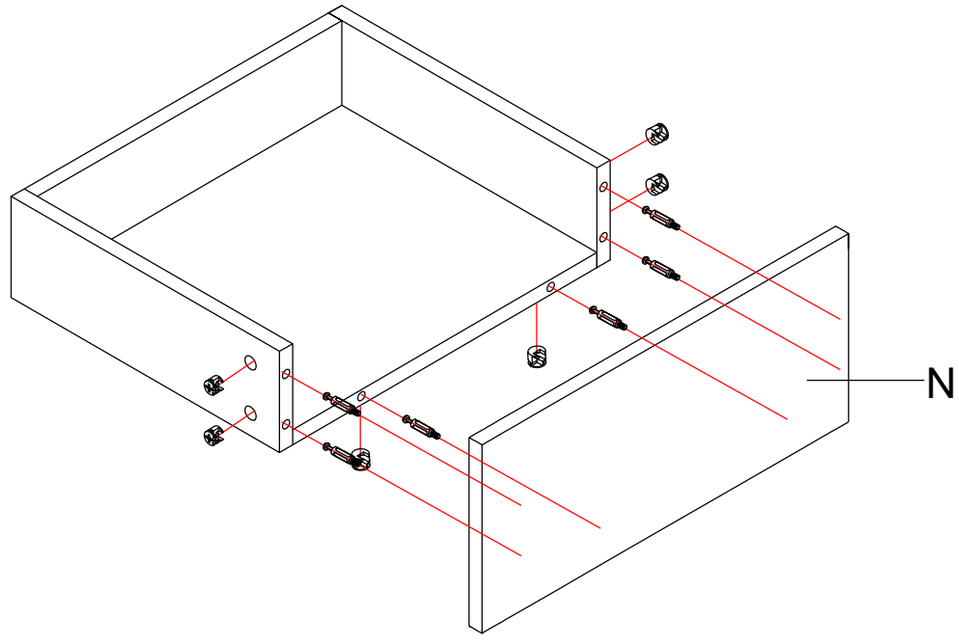



CC x30


DD x2


EE x2


FF 300 x1

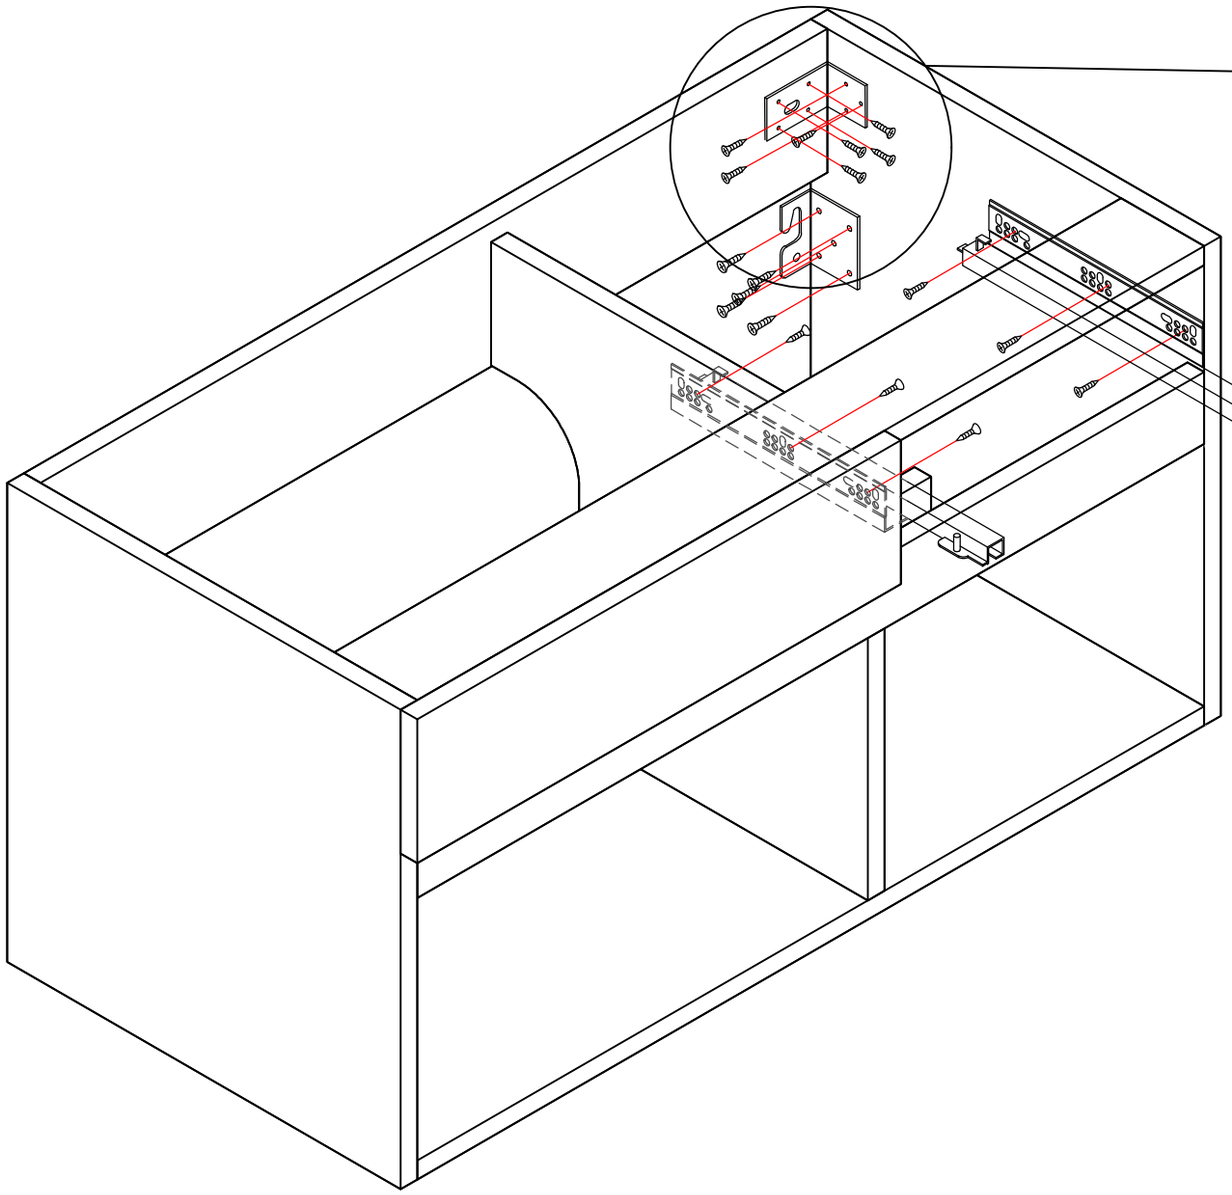

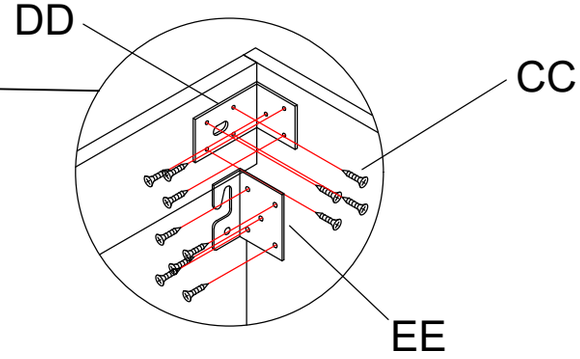

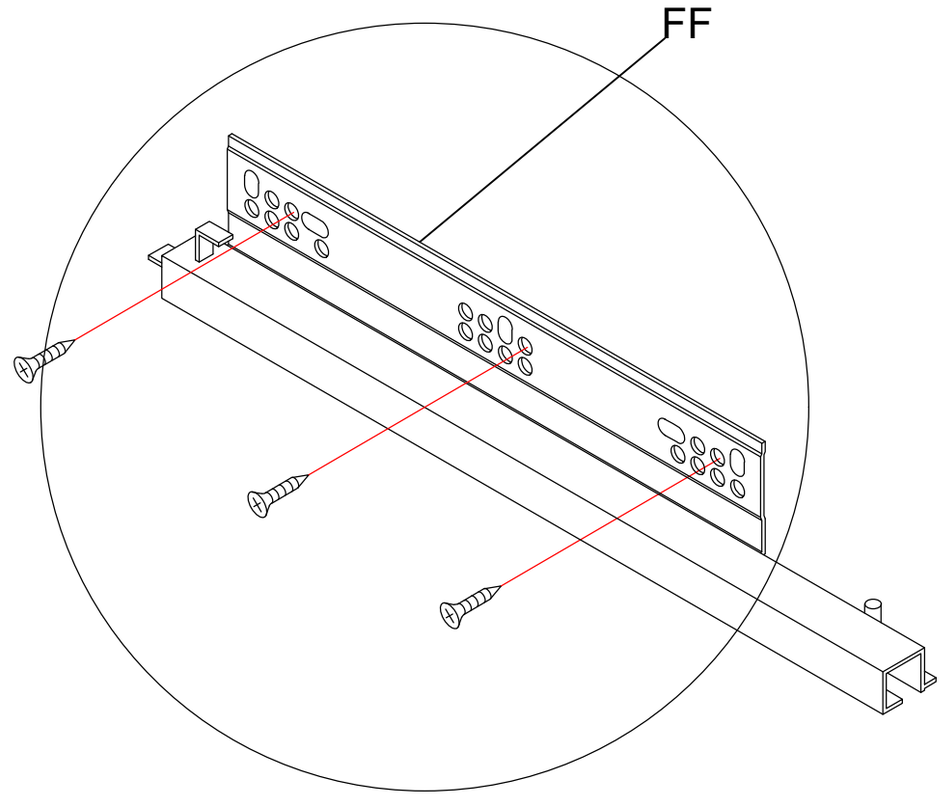


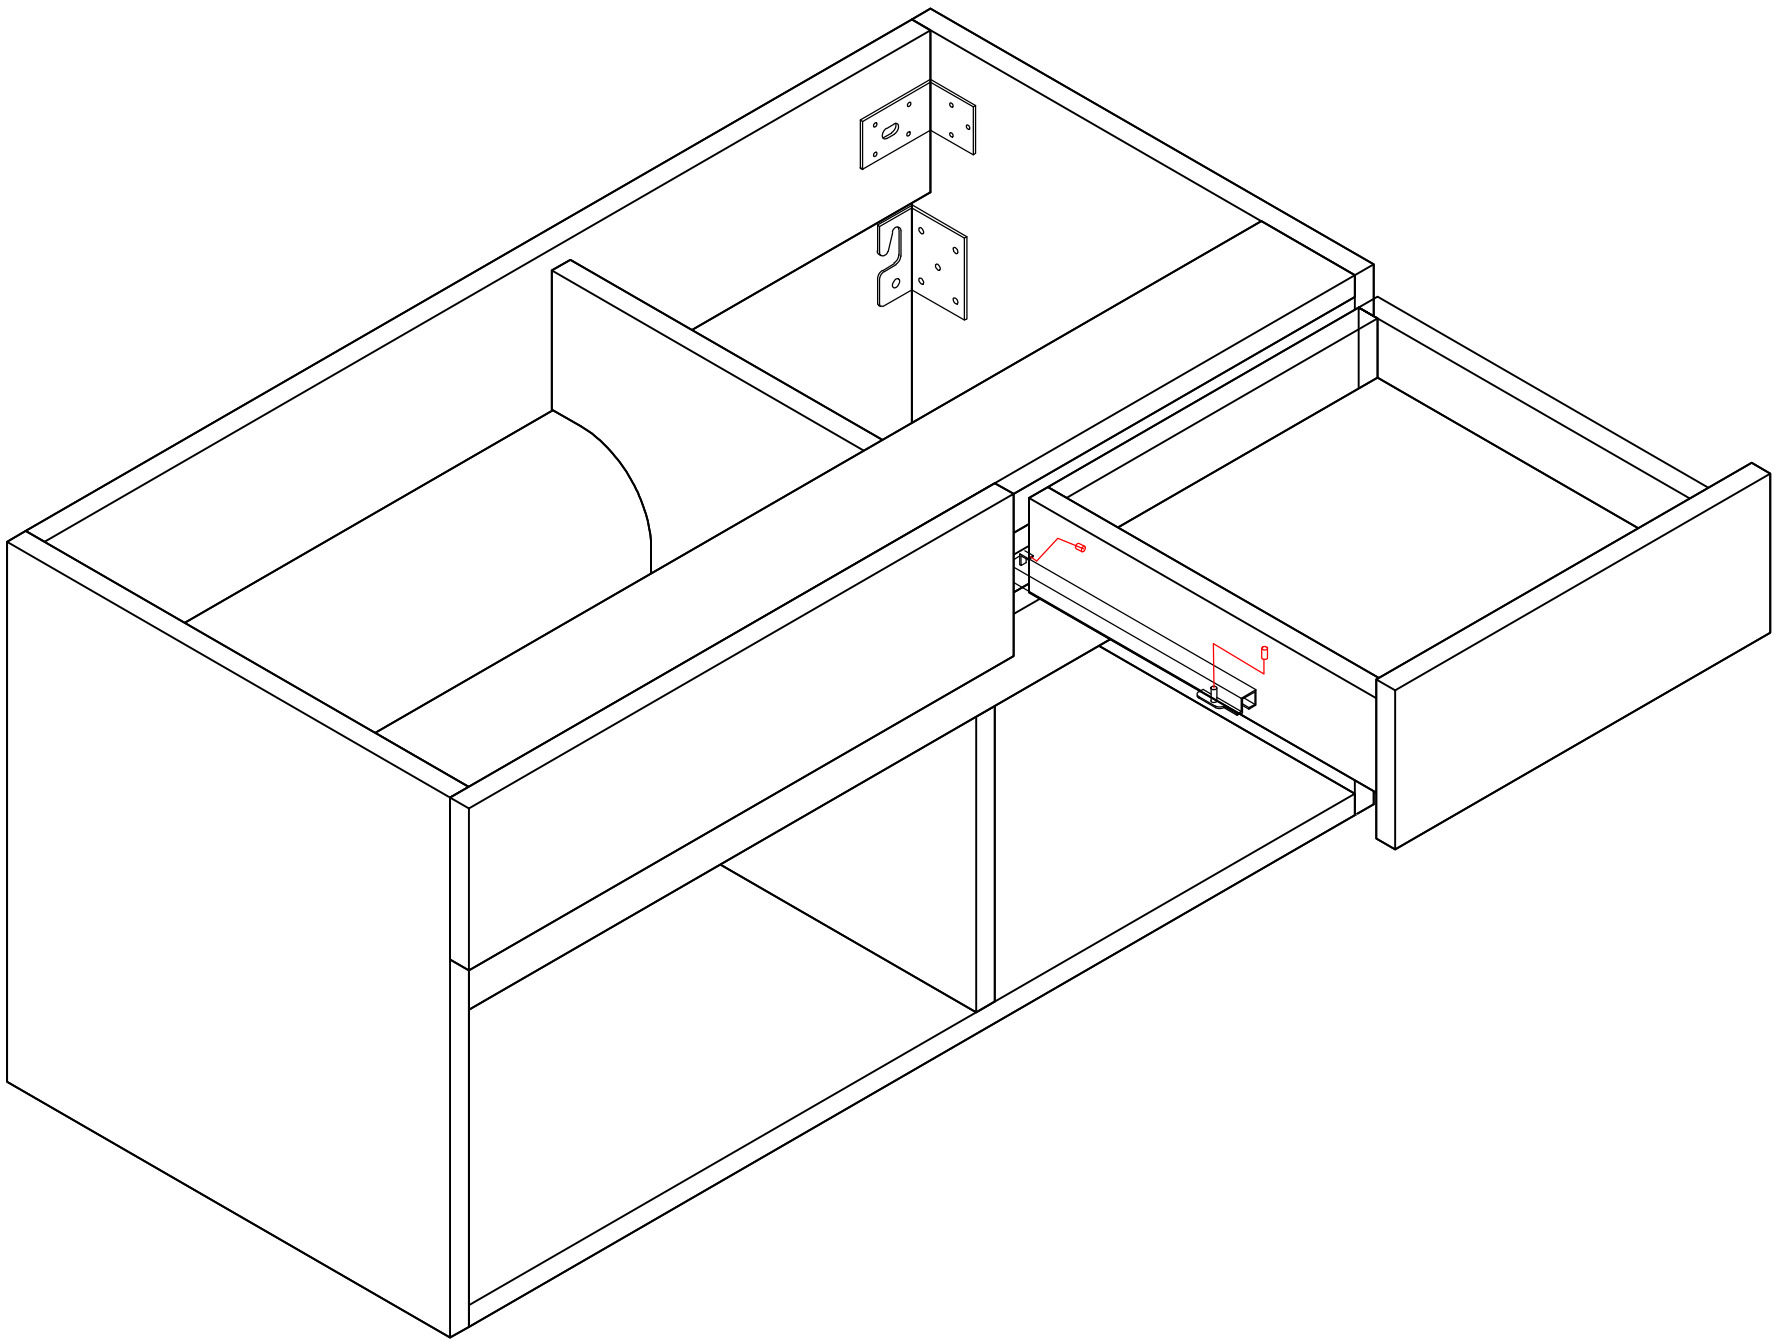

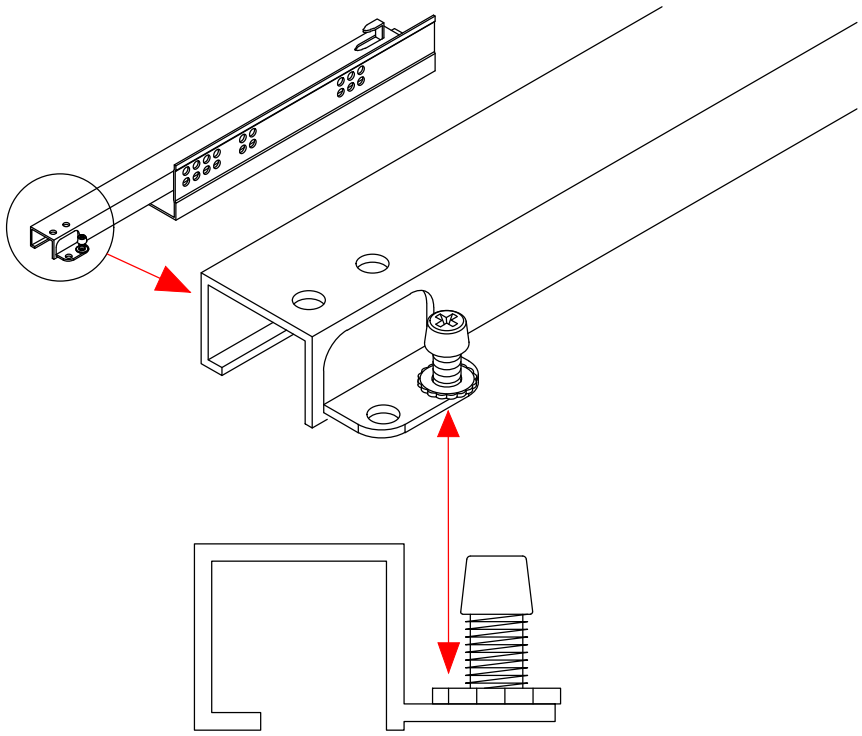


front view


1. Check that the nut is screwed to the bottom.

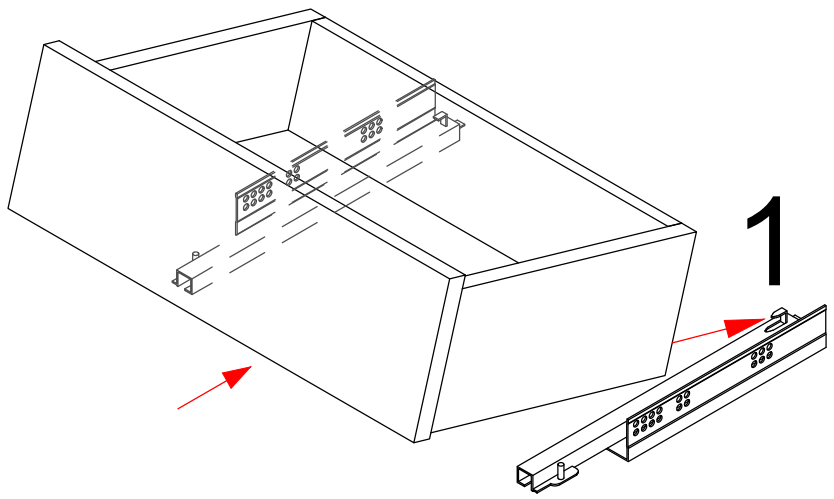

2. Tilt the drawer down, and slide the drawer inside along the rails.

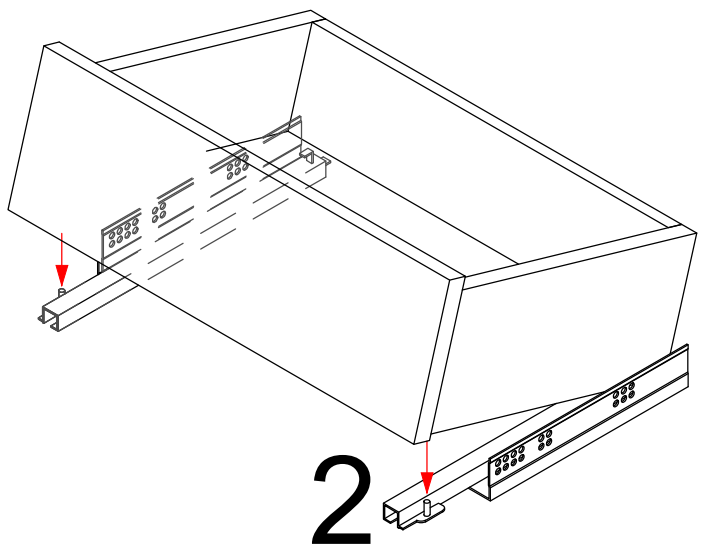

3. Put the drawer down naturally.

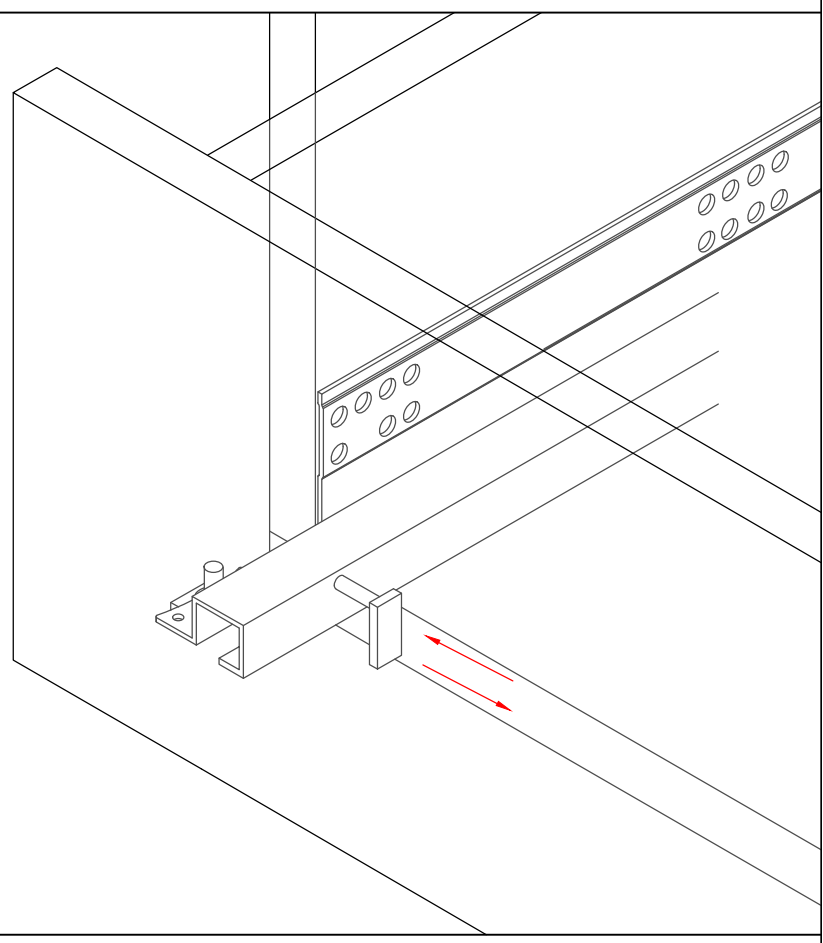


4.Push to lock
Pull to unlock

CC x30

GG x4

HH x1

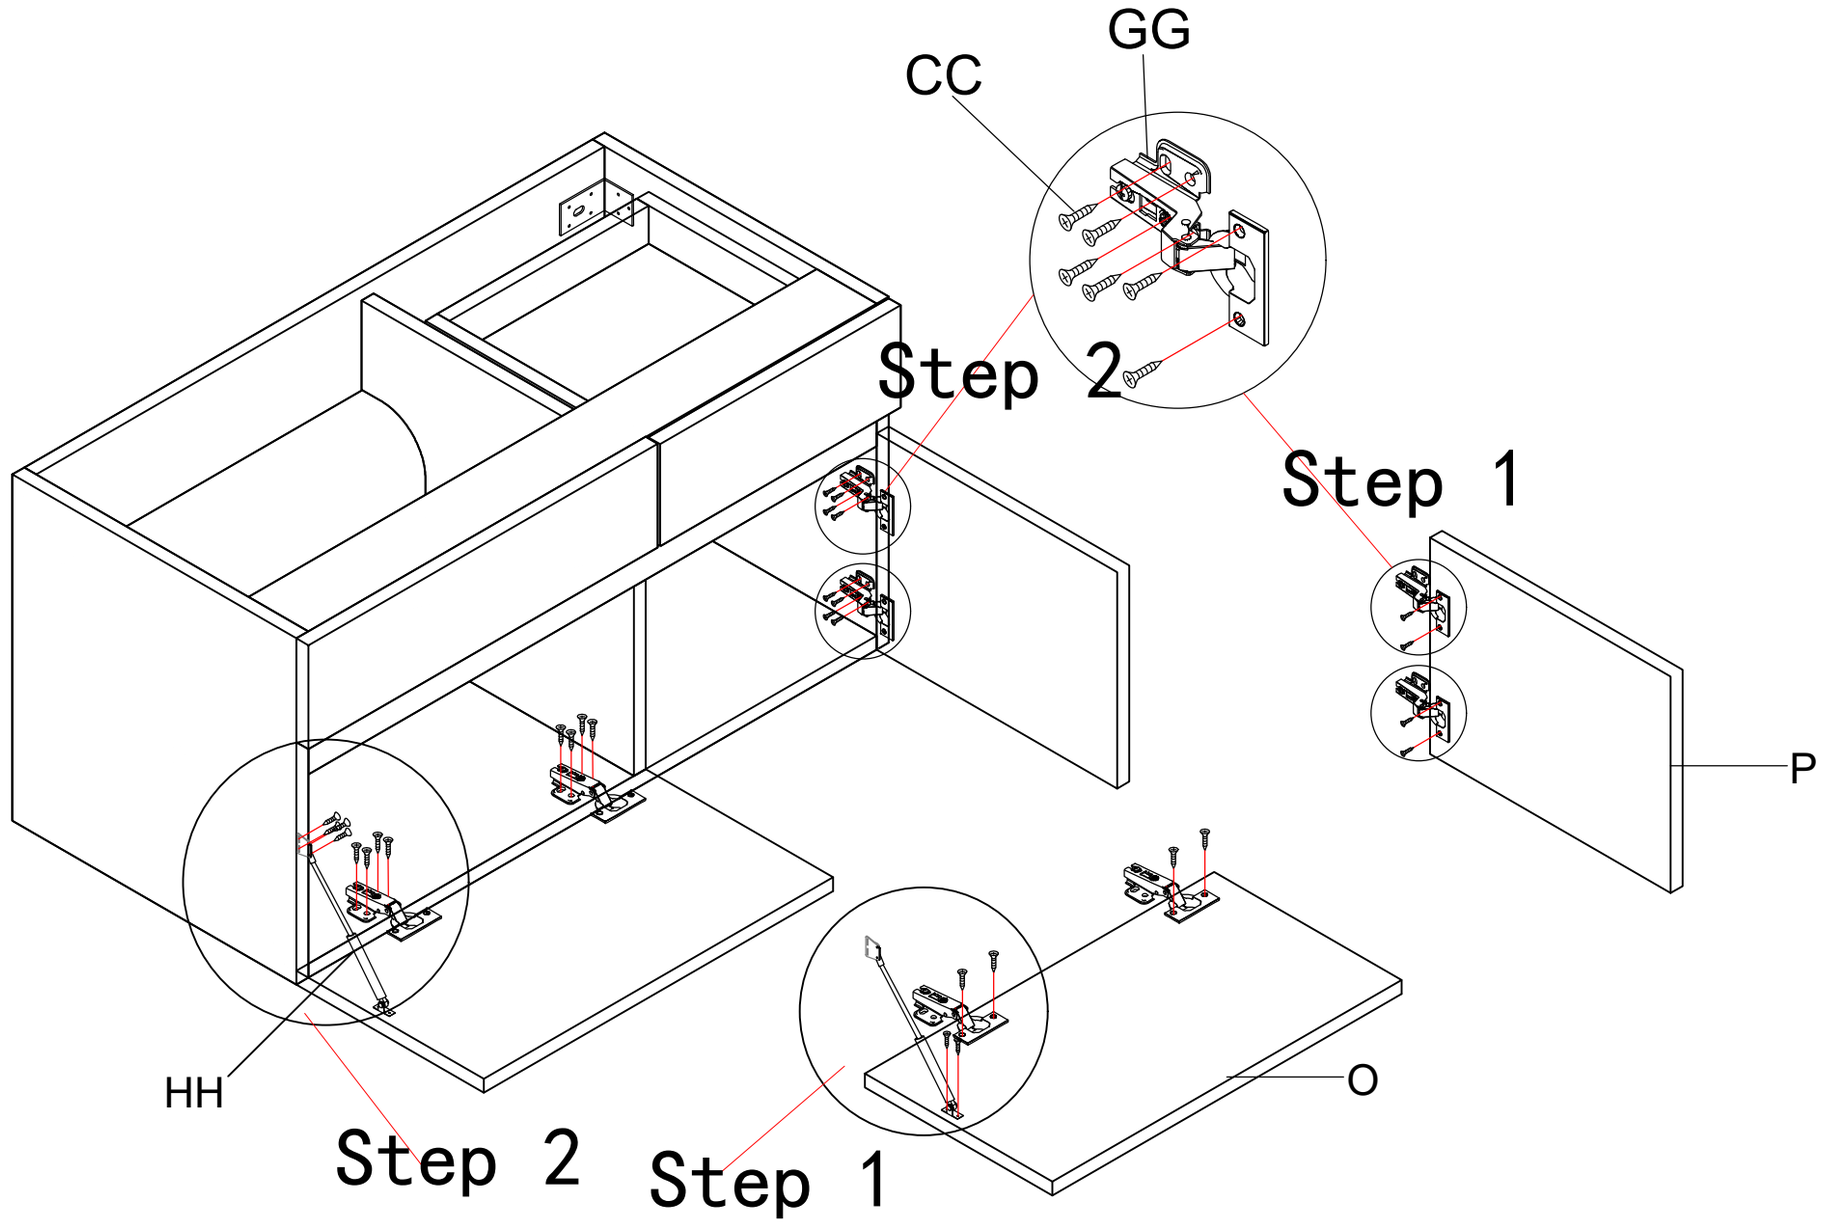


II x2

JJ x2

KK x2

LL x2

MM x2

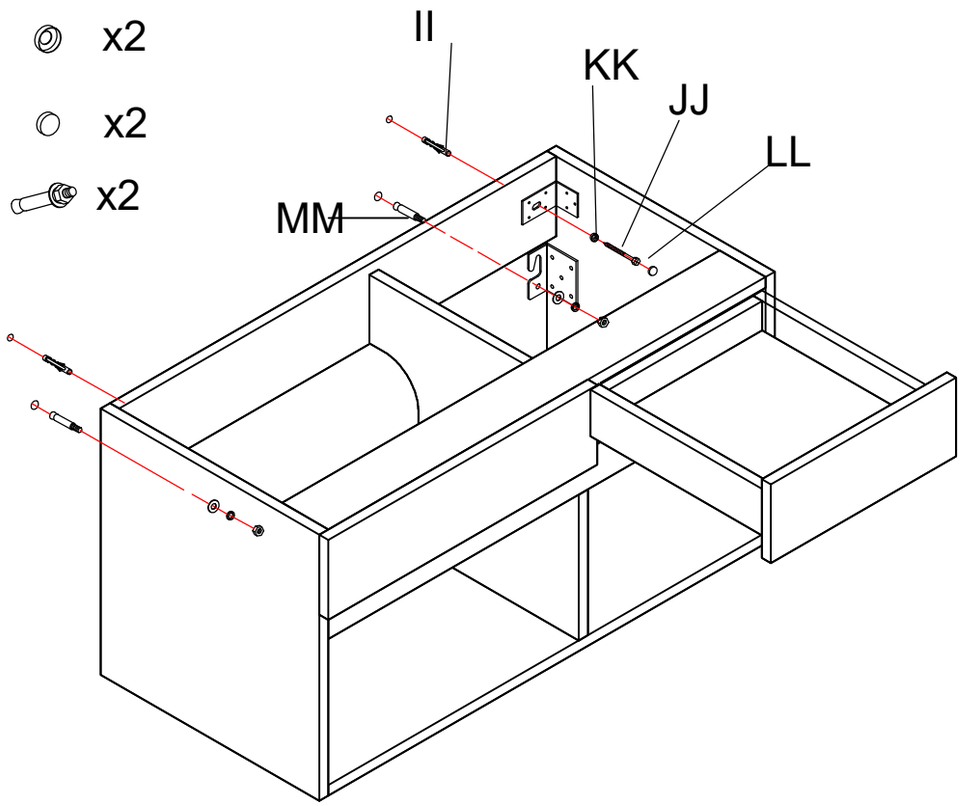

NN x4

OO x1

