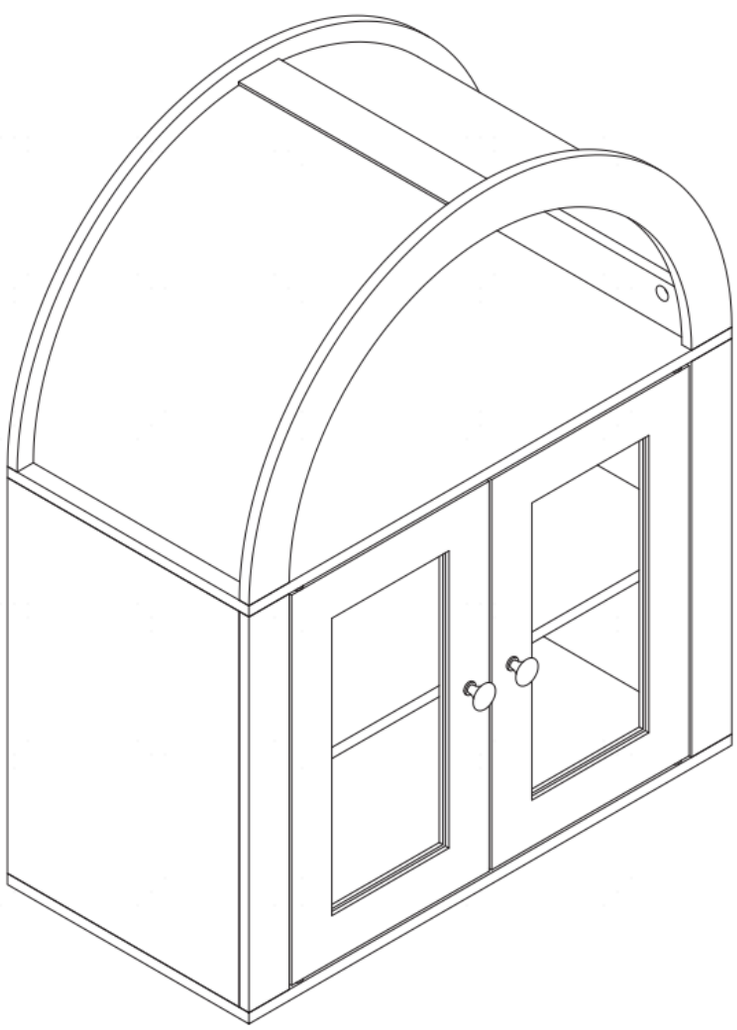

Exploded Drawing

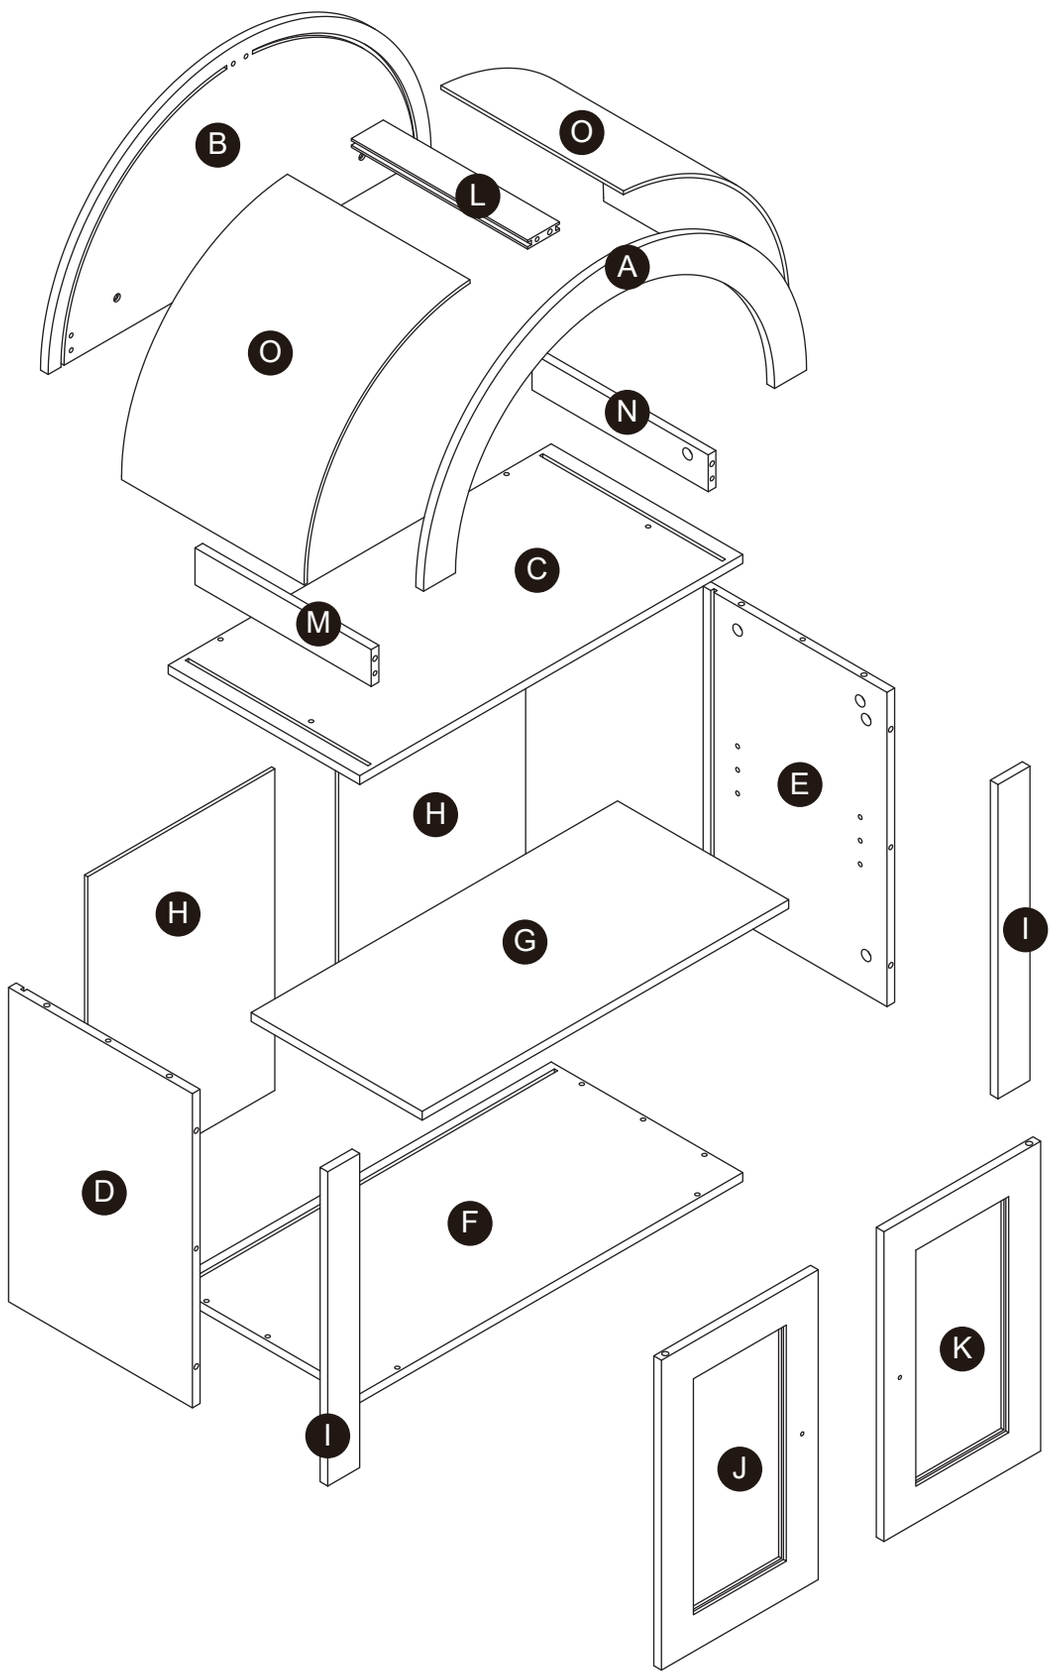

Product Parts

A

1 pc

B

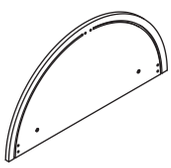

1 pc

C

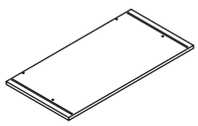

1 pc

D



1 pc

E



1 pc

F

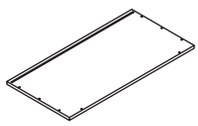

1 pc

G

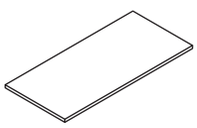

1 pc

H



2 pcs

I

2 pcs

J

1 pc

K



1 pc

L

1 pc

M

1 pc

N

1 pc

O

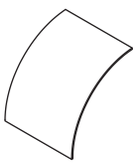

2 pcs

Hardware

1

11 pcs

2

11 pcs

3

12 pcs

4

11 pcs

5

2 pcs

6



1 pc

7

2 pcs

8

2 pcs

9

4 pcs

10

2 pcs

11

2 pcs

12

4 pcs

13

2 sets

14

8 pcs

15

8 pcs

Step 1

3 3 pcs

4 3 pcs

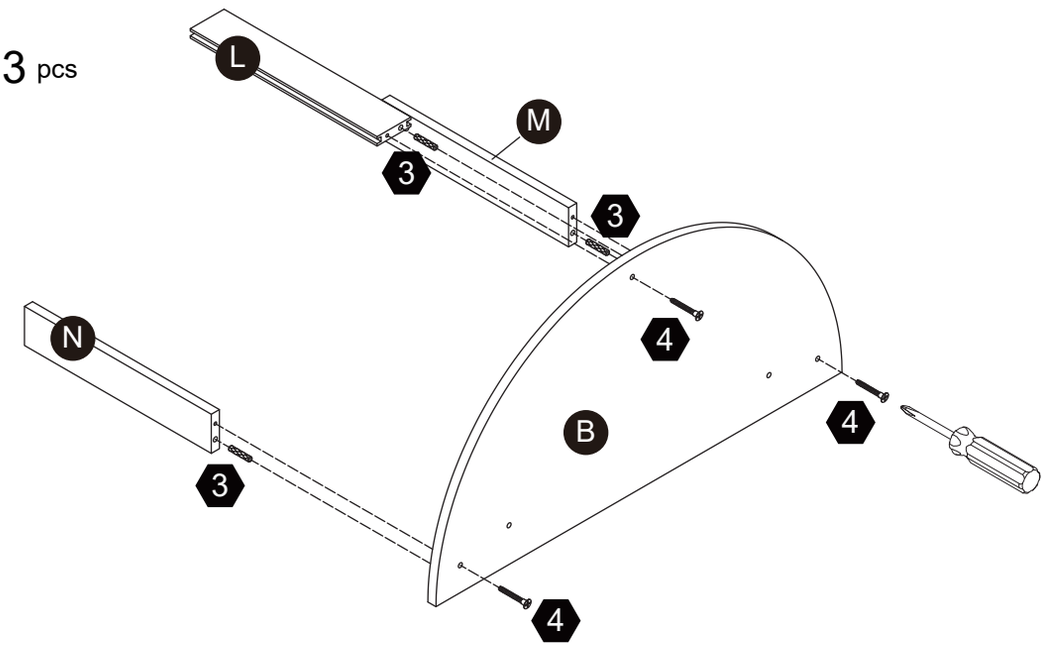

Step 2

1 4 pcs

5 2 pcs

6 1 pc

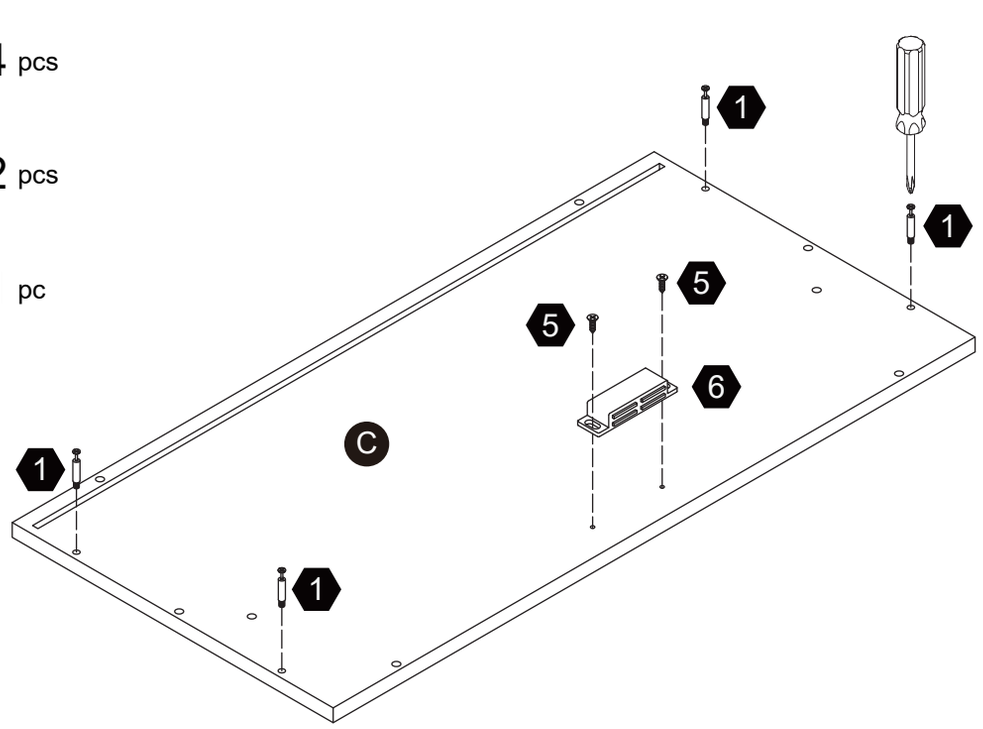

Step 3

4 4 pcs

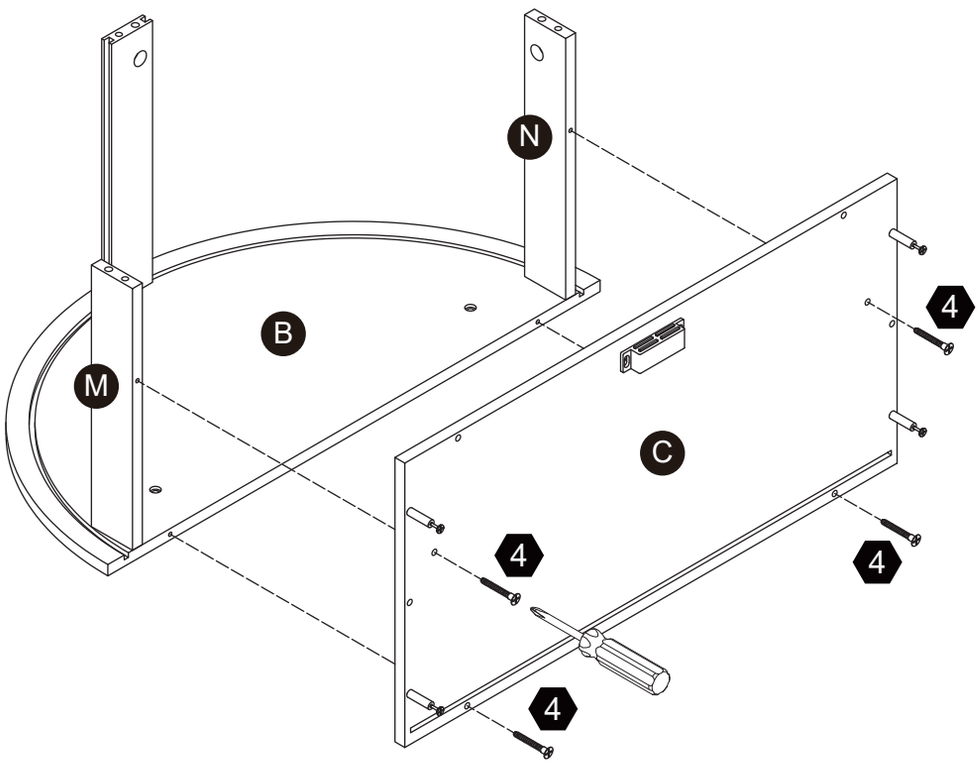

Step 4

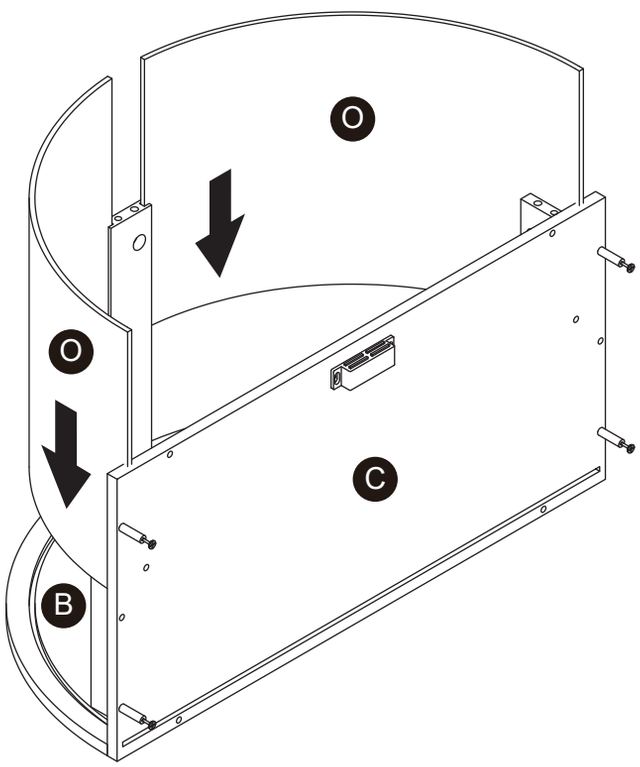

Step 5

1 3 pcs

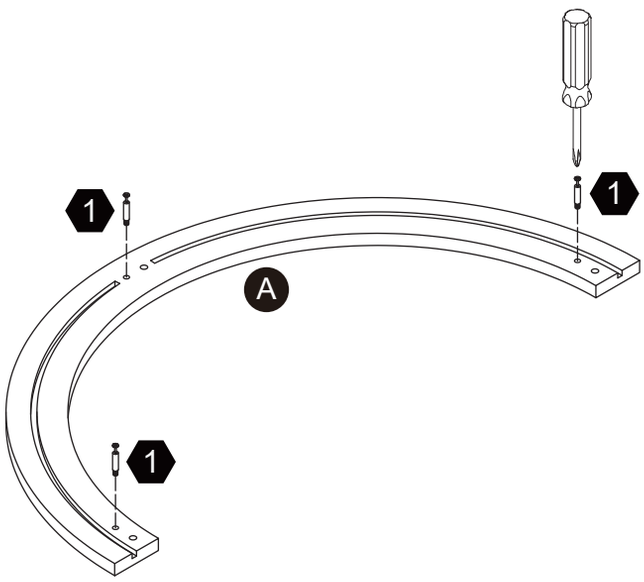

Step 6

2 3 pcs

3 3 pcs

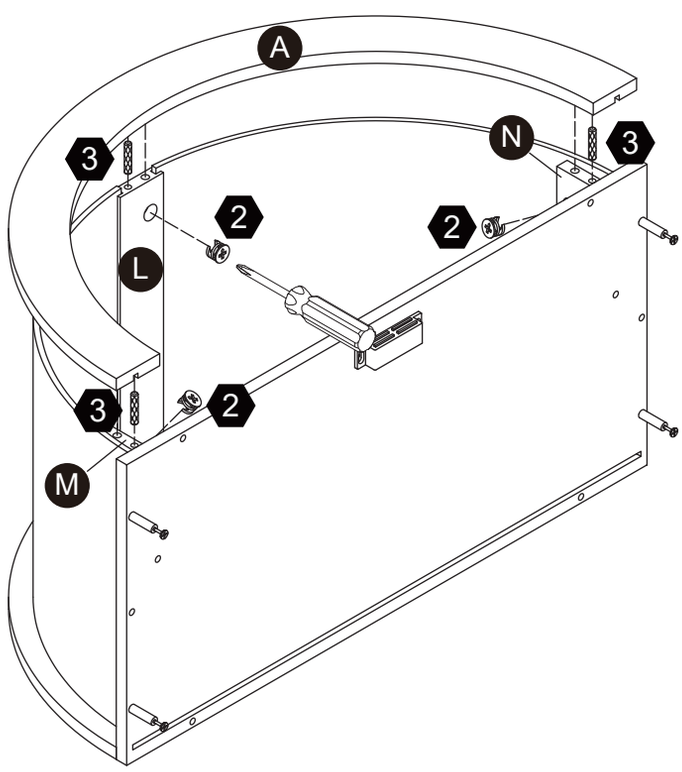

Step 7

1 4 pcs

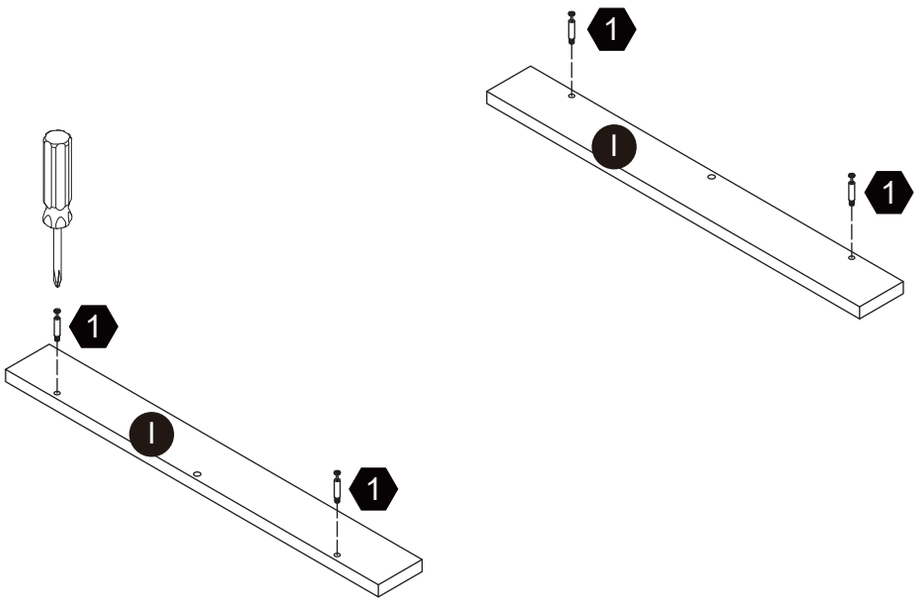

Step 8

2 4 pcs

3 2 pcs

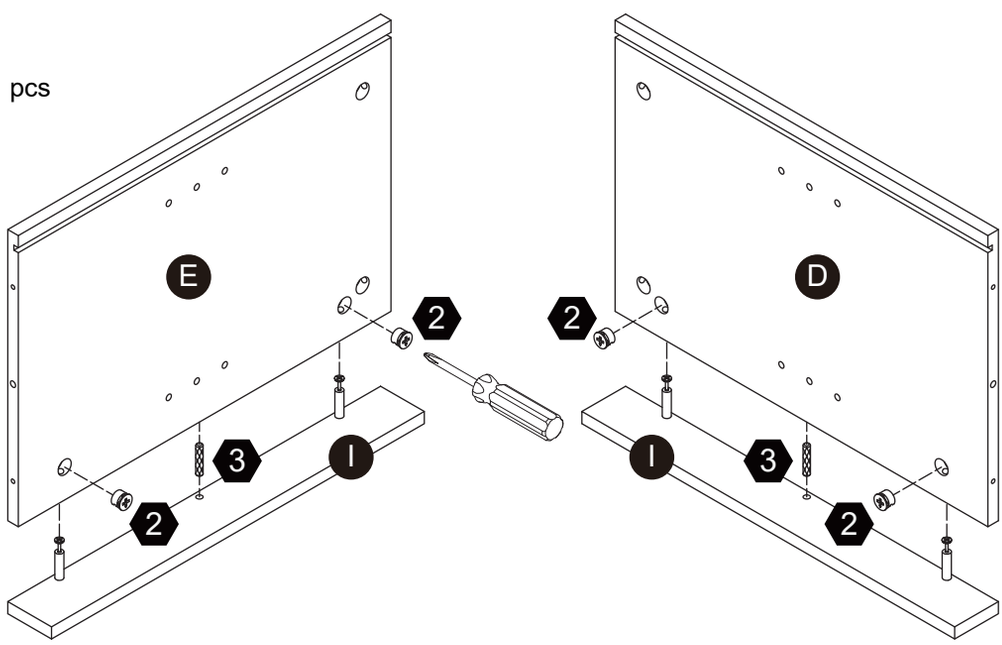

Step 9

3 2 pcs

4 4 pcs

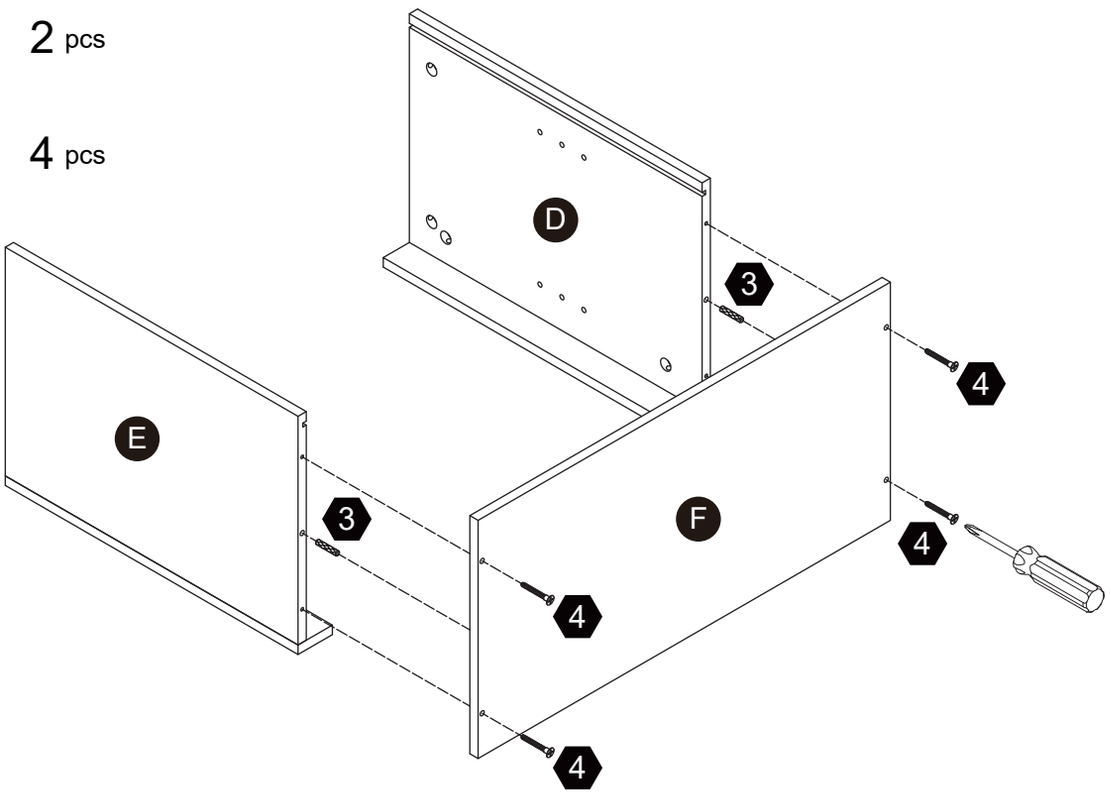

Step 10

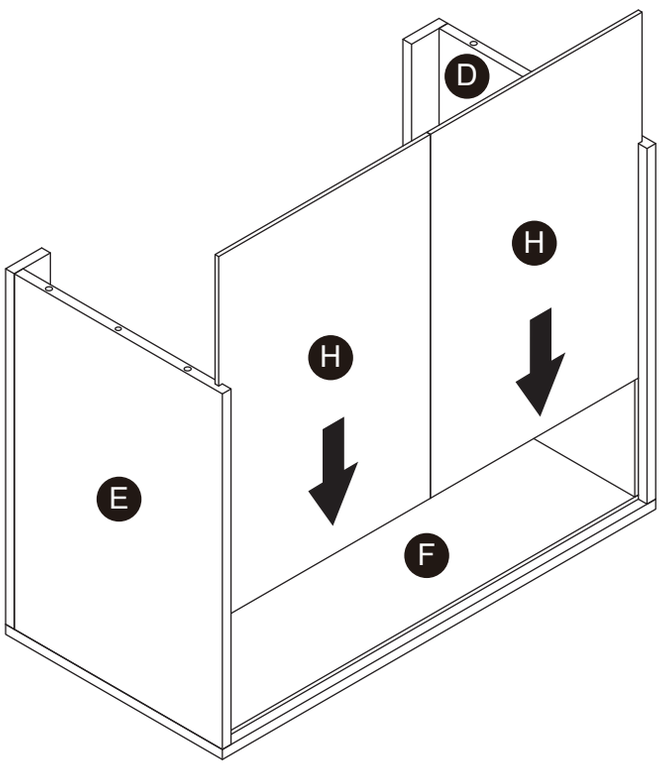

Step 11

2 4 pcs

3 2 pcs

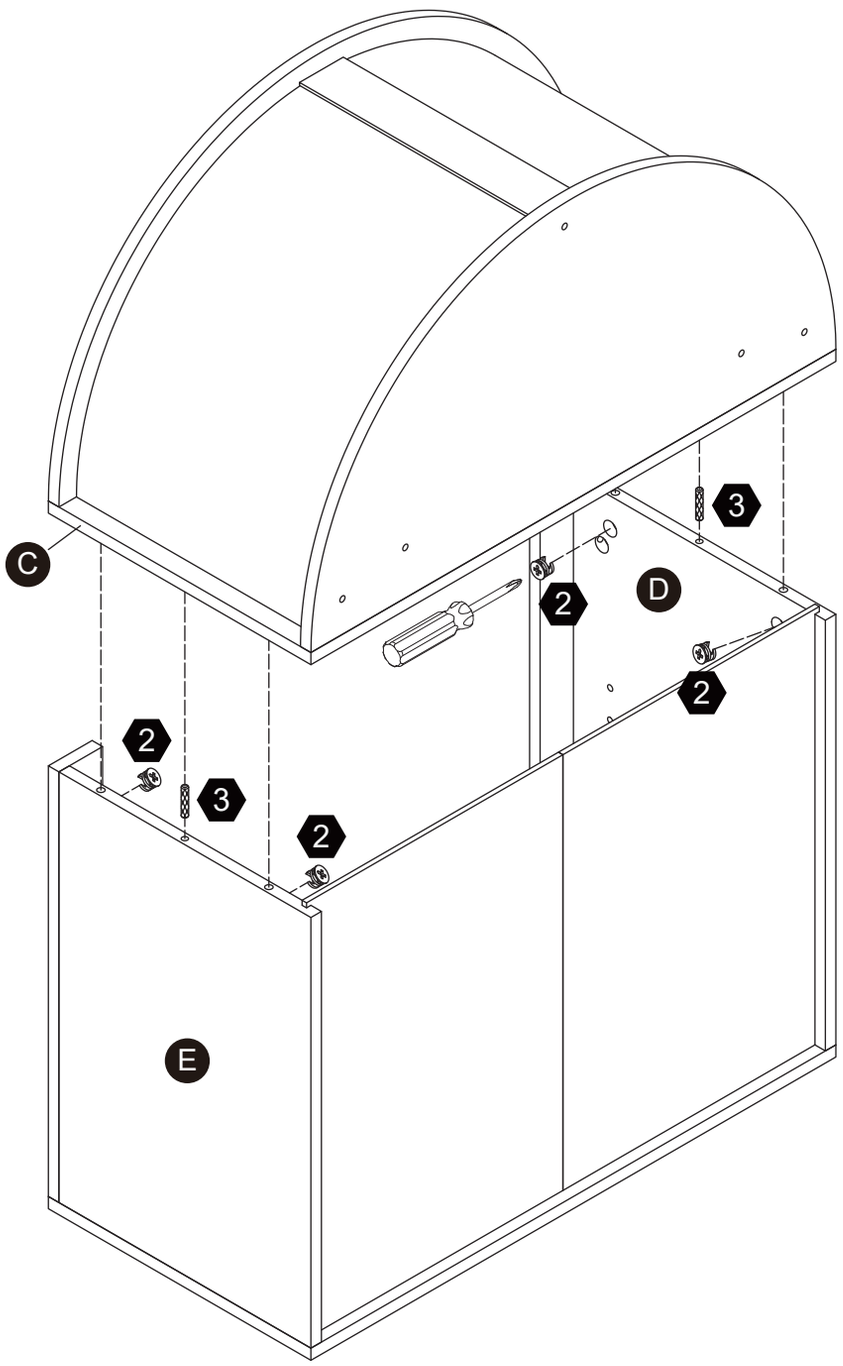

Step 12

9 4 pcs

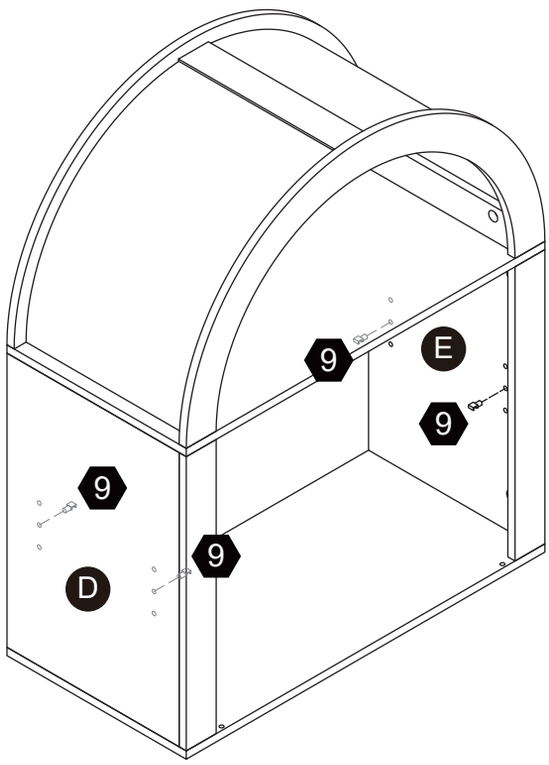

Step 13

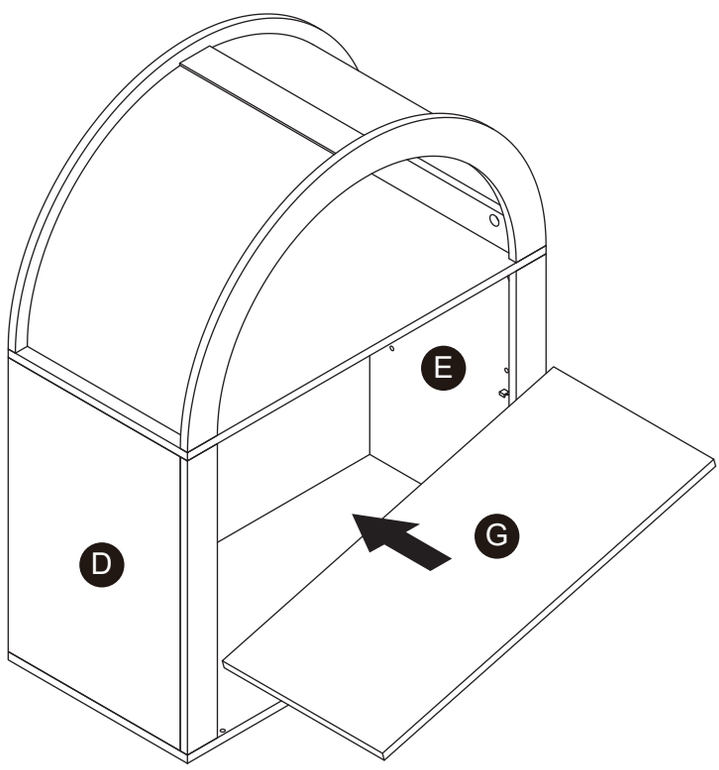

Step 14

7 2 pcs

8 2 pcs

12 4 pcs

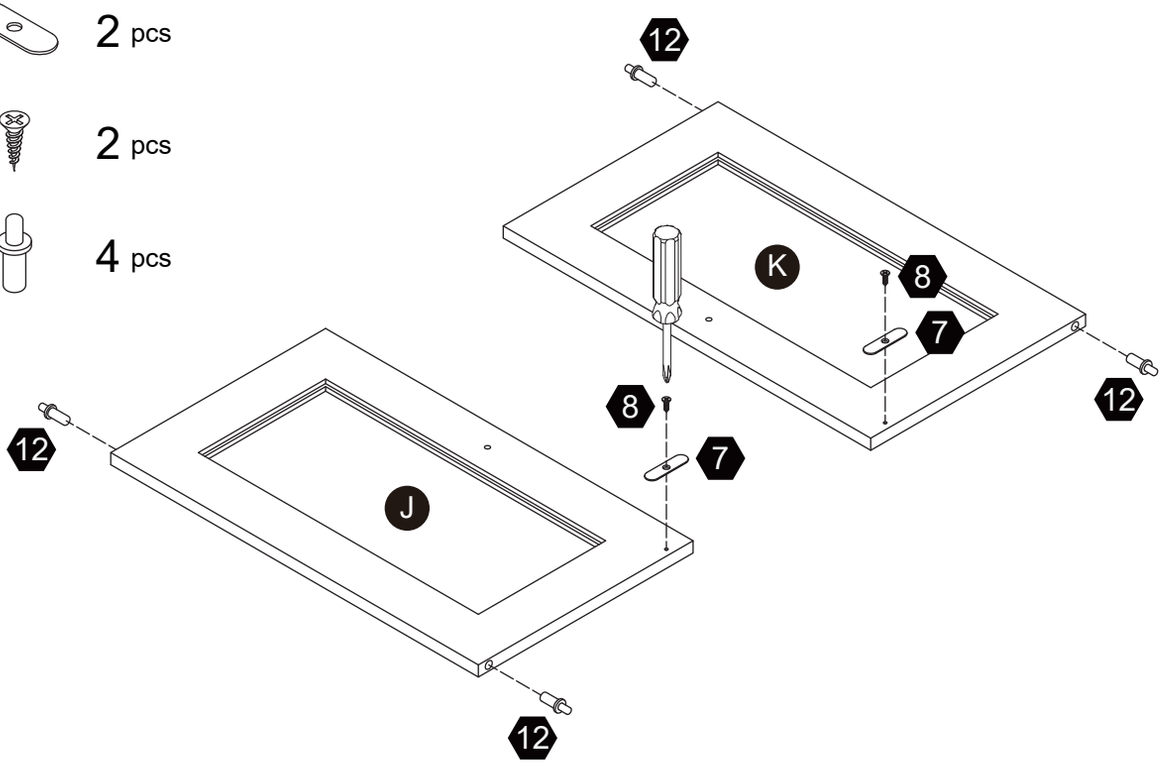

Step 15

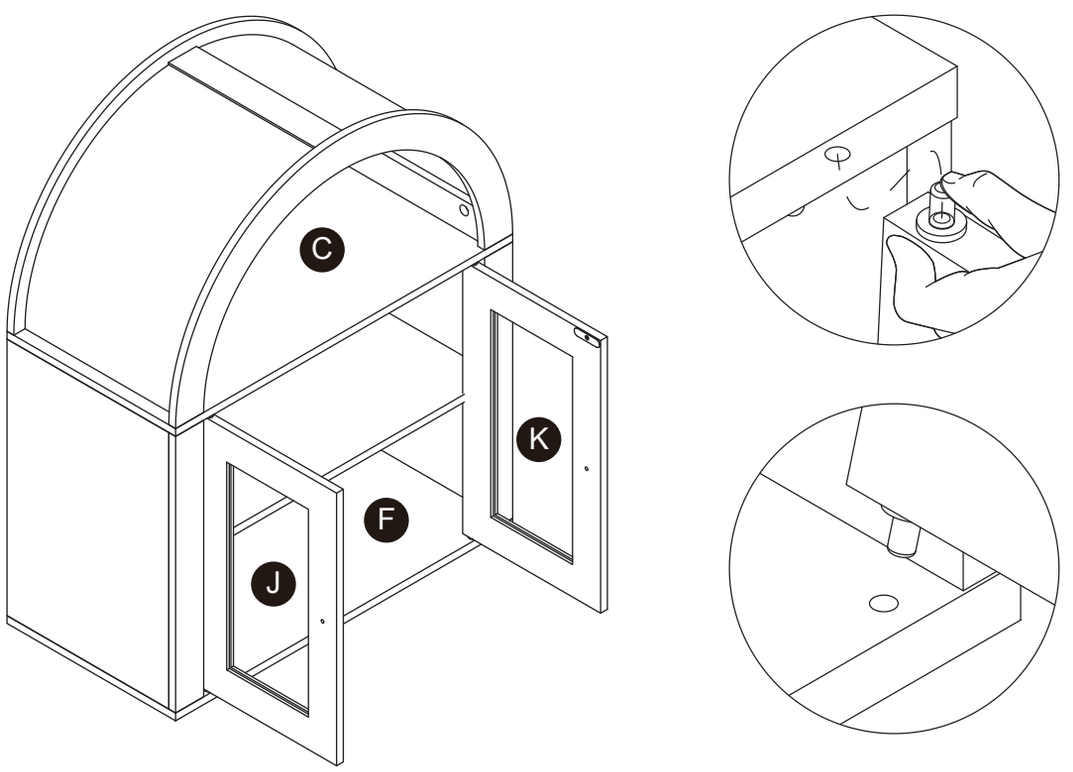

Step 16

10 2 pcs

11 2 pcs

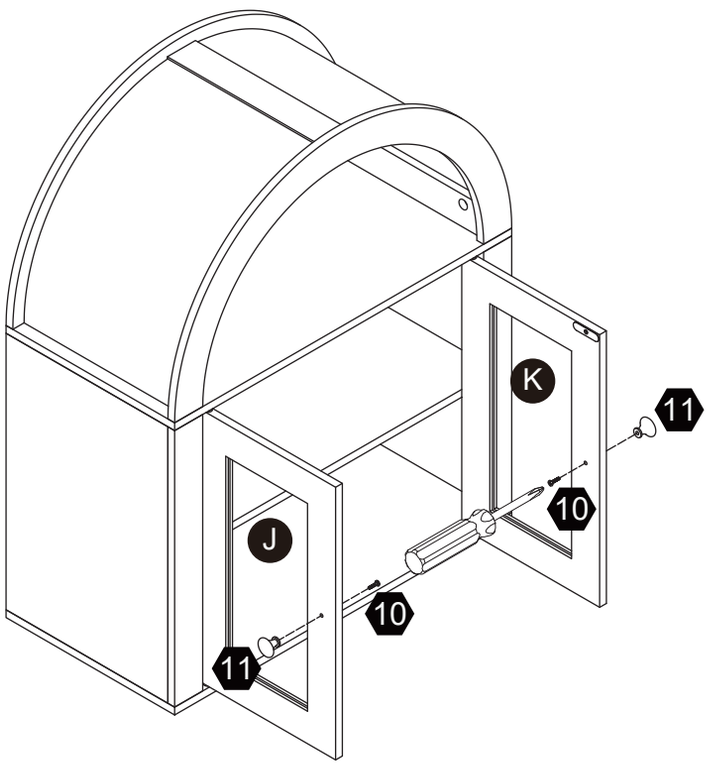

Step 17

14 8 pcs

15 8 pcs

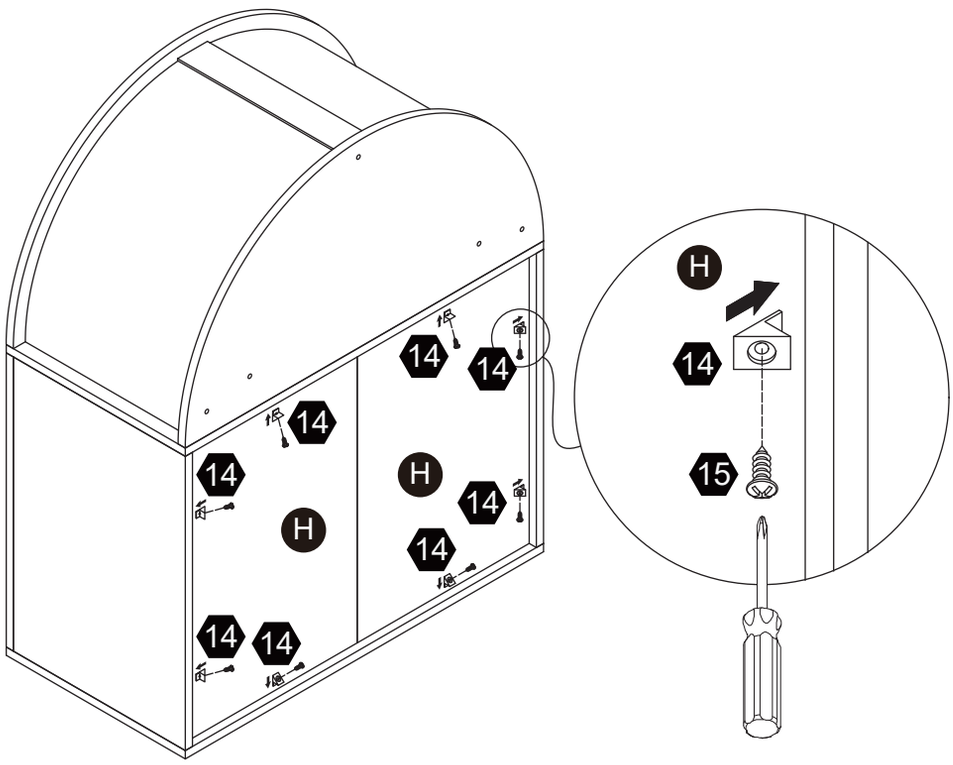

Step 18

13 2 sets

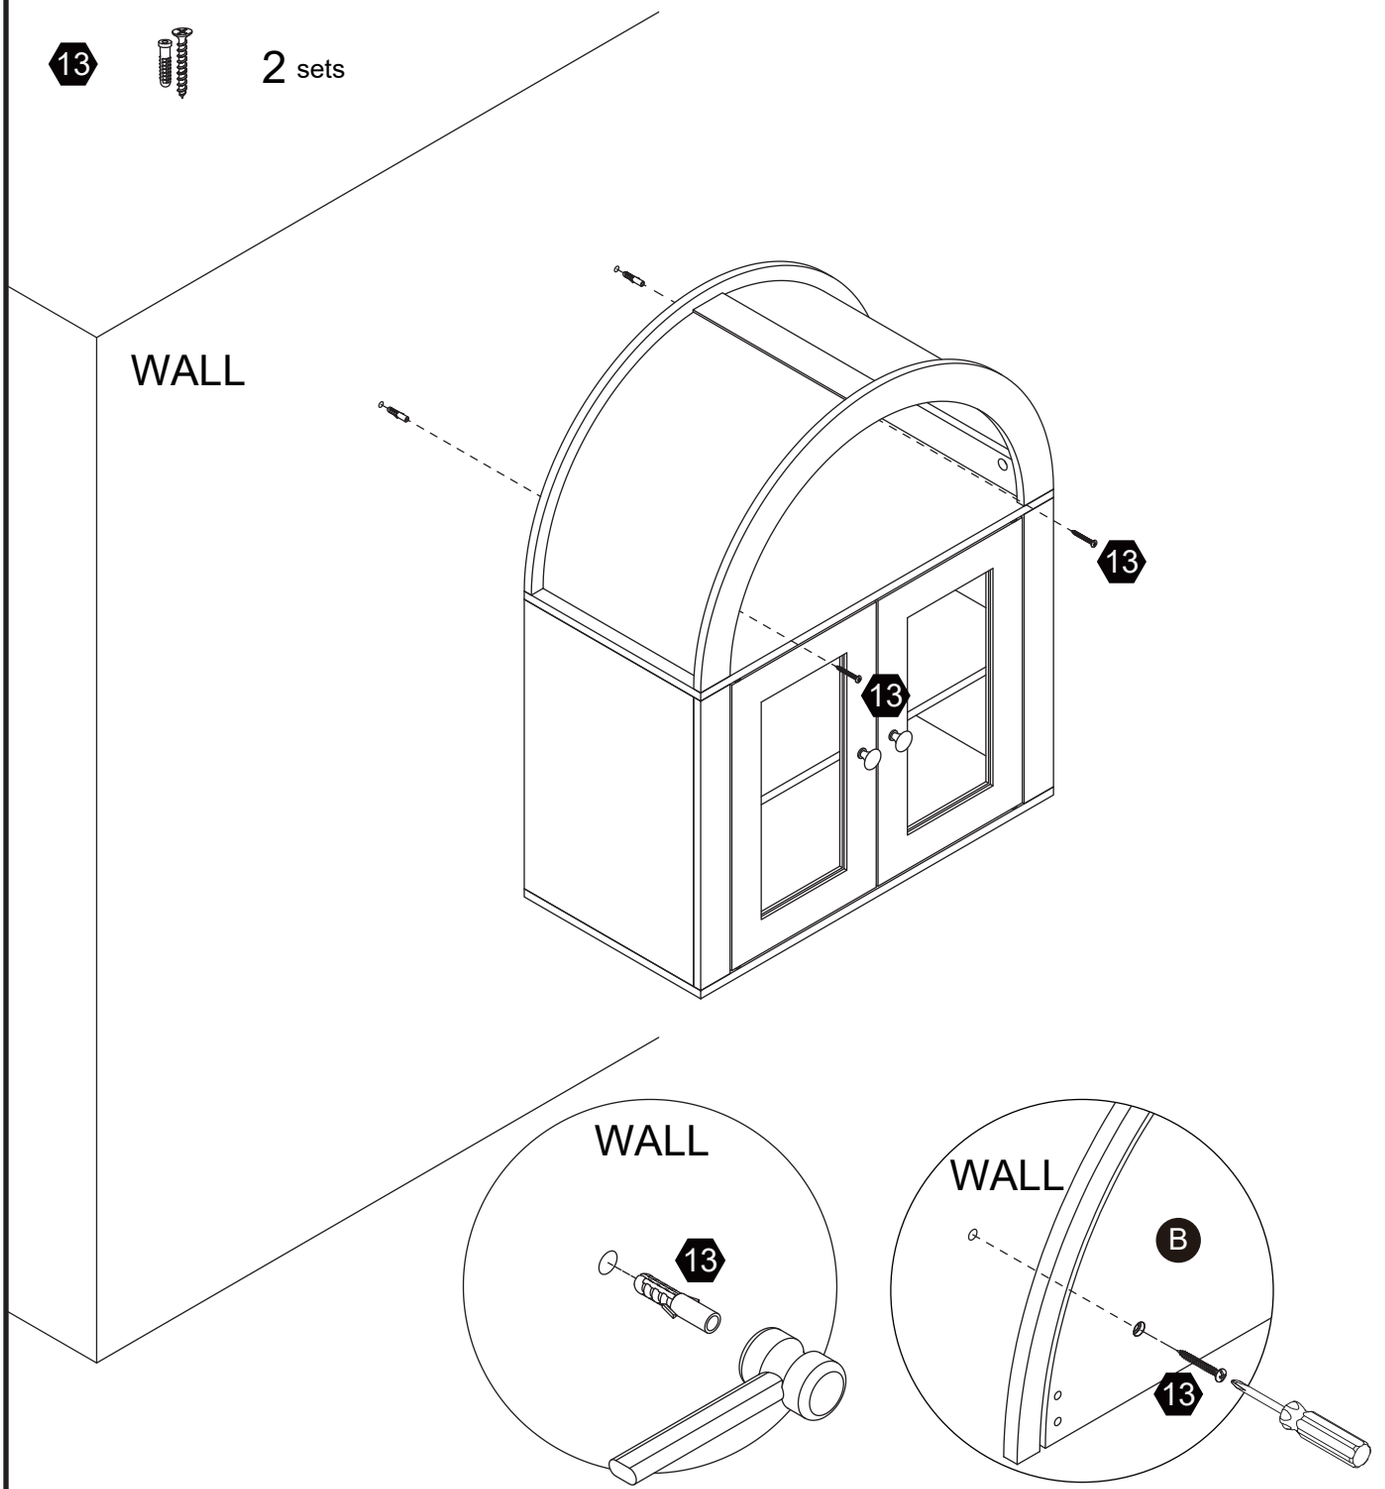

Warning:
Serious or fatal injuries can occur from furniture tip-over. To help prevent furniture tip-over:
Use provided mounting hardware to secure furniture to the wall.
This may reduce but not eliminate the risk of furniture tip-over.
Do not allow children to climb on furniture.
Keep remote controls, toys, and other items that might attract children off of this product.
Unless specifically designed to accommodate, do not set televisions or other heavy objects on top of this product.