Instruction Manual

GLASS FLUSHMOUNT

Questions?

E-mail our customer service department

IMPORTANT SAFETY INSTRUCTIONS:

This fixture must be installed by a qualified electrician! Disconnect the power at the main electrical panel before installation.

This fixture is for indoor use only. The fixture should not be used near water. Never cover the lamp with any object, including cloth or paper as this is a fire hazard. Do not handle the bulb immediately after the light is turned off as it will be hot. This is not a toy. It is recommended that you wear gloves during assembly.

ASSEMBLY INSTRUCTIONS:

1. TURN THE MAIN POWER SUPPLY OFF
2. THREAD THE 2 LONG SCREWS "A" INTO MOUNTING PLATE "B" AND ATTACH THE MOUNTING PLATE TO OUTLET BOX "C" WITH SCREWS "D".
3. MAKE THE WIRE CONNECTIONS. CONNECT BLACK TO BLACK WIRE AND WHITE TO WHITE WIRE. IF THE WIRES ARE NOT BLACK AND WHITE, CONNECT THE BLACK WIRE IN THE OUTLET BOX TO THE PLAIN OR ROUNDED SIDE OF THE FIXTURE WIRE. CONNECT THE WHITE WIRE IN OUTLET BOX TO THE RIBBED WIRE OF THE FIXTURE WIRE. ATTACH GROUNDING WIRE "E" TO MOUNTING PLATE GROUNDING SCREW "F".
4. ALIGN THE HOLES IN CANOPY "G" WITH THE 2 LONG SCREWS IN THE MOUNTING PLATE, AND PLACE THE CANOPY ONTO THE SCREWS. SECURE THE FIXTURE IN PLACE WITH KNOBS "H".
5. THREAD PIPE "I" INTO PIPE CONNECTOR "J" AND TIGHTEN WITH HEX NUT "K"
6. SECURE SHADE "L" TO THE CANOPY WITH RUBBER WASHER "M" ,STEEL WASHER "N" AND HEX NUT "O".
7. ATTACH CAP "P" AND FINIAL "Q" TO THREADED PIPE "I"

CLEANING & MAINTENANCE:

BULB REPLACEMENT

Disconnect the power before replacing bulb.

TROUBLESHOOTING

I. If lamp does not light, check the bulb for a broken filament. Replace bulb if necessary.

2. If the external flexible cable or cord of this fixture is damaged, it must be replaced by a qualified electrician in order to avoid a hazard.

MAINTENANCE

I . To clean, use a soft cloth only.

2. Do not use any chemical or abrasive cleaners.

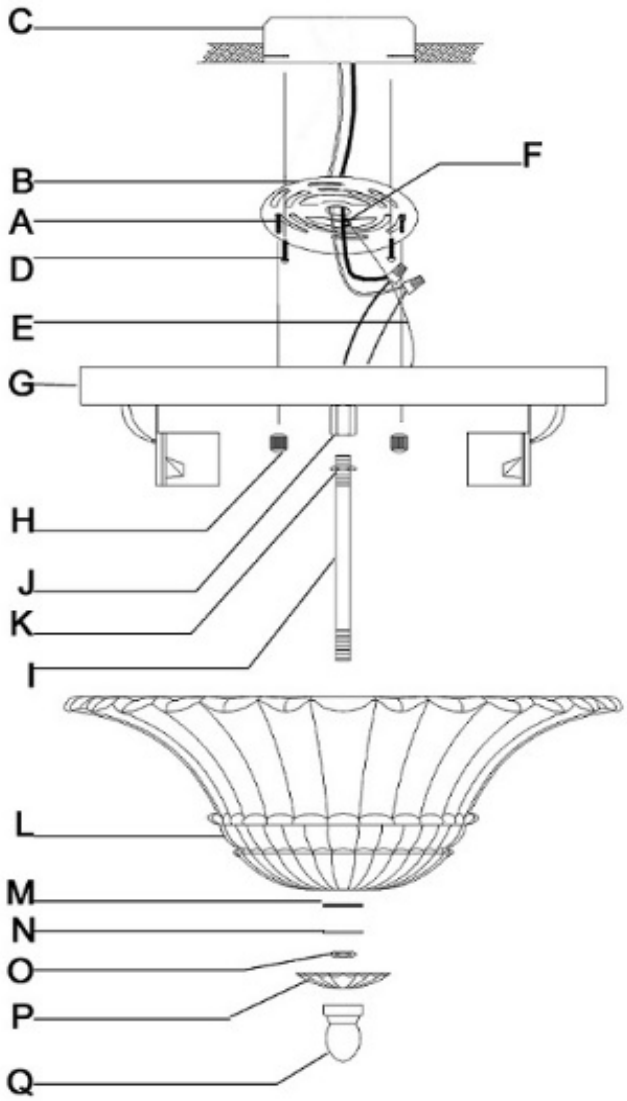

REQUIRES:
2- 40W MAX MEDIUM BASE
TYPE B BULBS (NOT INCLUDED)

LIMITED WARRANTY

[redacted]