WH-NDY-WY02R - installation

Precautions for safe use

1. Please use 120V voltage for safe. (Picture 1)
2. Do not plant the machine after add water, please carry it smoothly to prevent overflow of the water.
3. Do not use the machine on the uneven surface. (Picture 2).
4. Do not cover the air outlet. (Picture 3)
5. During using the machine, do not put any shelter before or behind it within 1 meter distance. (Picture 4)
6. The water in the tank will go bad easier in summer, please change the water frequently when use it in the hot season.
7. Do not wash the machine use water.
8. Please dry the machine and the water tank if you need to store it for a long time.
9. Please unplug the plug after no longer using it.
10. Please add water in time when the water level come to the minimum.
11. Please keep children away from the machine.
12. Do not clean the machine with chemical cleanes.

(Picture 1)

(Picture 2)

(Picture 3)



(Picture 4)

Warning

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children with out supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Unplug the appliance during filling water and cleaning.
- Do not use hot water to add the tank.

Correct Disposal of this product:

This marking indicates that this product should not be disposed with other household wastes through out the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

service@woohoo.com

If you have any question, Please feel free contact us by after-service email address.

WOHO

New Air, New Life

WOHO

AIR COOLER

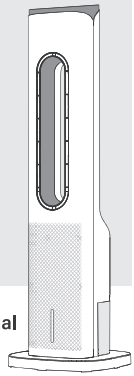

WH-NDY-WY02R

User Manual

Please read the manual carefully before use

Schematic Diagram of Product Parts

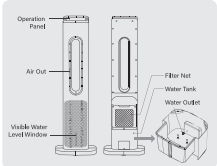

Note:
The appearance is only for reference. Please see the real product for detailed information.

Unpacking

- Please check the device after unpacking for any damage or scratches on it.
- Accessories list

No	Designation	Quantity (pcs)
1	Instruction manual	1
2	Remote control	1
3	Ice Box	4
4	Screwdriver	1

- Product Specification

Product Mode	Voltage	Frequency	Power	Operation Mode
WH-NDY-WY02R	120V	60HZ	65W	Remote

Operation Panel User Instruction

Put the plug into the power outlet, when you hear the buzzer comes out a "beep" sound, the whole fan comes to standby.

	ON/OFF	Firstly press the button, the fan starts to work.It will show the current environmental temperature and in the low wind speed, Press the button again, the whole machine will standby and recycle in turn.
	SPEED	It comes low speed when it starts, press the button first time, it changes to medium speed, press again, turns to high speed, recycle in turn.
	TIMER	After the machine begin to work, press the timer button one time, th indicator lights up. It means the fan will stop to work after 1 hous.Press for one more time, 2h indicator lights up. Operation like this, can totally timer for 12 hours. Up to 12 hours, press again, the timer function will shut off, recycle in turn.
	MODE	Press the wind mode button, it comes to natural wind, the fan will provide alternations on strong and weak air flows, just like the real natural wind. Press again, it turns to sleep mode, again, return to normal.
	COOL	Press this button, the indicator light on screen turns on, it comes cooling wind. Press again, the function is shut off. It could easily accommodate your cooling needs. Notice: It is forbidden to use when the water tank is out of water, please add water in time.
	SWING	Press this button, the oscillation indicator light turns on, the machine starts to swing left and right for air flowing, press again means shut off the function and push wind in a single way.

★ Remote controller control panel with the same function as the unit.

Operation and Use

- Open and take the machine out, please check carefully if anything missing or not according to the package list.
- The assembly of the base please refer to the following steps. Please assemble according to picture 1-4.



1. Schematic diagram of the product before the base is assembled.
2. The upper and lower half-circle base are combined by the guide arrow.
3. Schematic diagram of the combined base, fixed with 4 screws in the direction of the arrow.
4. Put the assembled base into the product main body, and fix the bottom of the product with 4 screws in the direction of the arrow.

- After finishing the assembly of the base, the machine should be placed in horizontal orientation, forbidden to tilt when using. Please check the plug outlet is the same as the machine nameplate data or not before use.
- In hot summer season, the water is easier to produce odor, bacteria, please change the water in time.
- Adding water operation: Please open the water box lid on the back of the machine, then add pure tap water gradually (as picture).
  During adding water, please control water level through checking the visible water level window. Please pay attention to the points as following: In order to protect the health of your family and you, please must use the pure tap water.Please make sure to add water in a unplugged condition.
  Never splash water into the control panel and surrounding parts to avoid electricity leakage accidents.
  Just add water to the max level, otherwise the water will overflow from the machine.

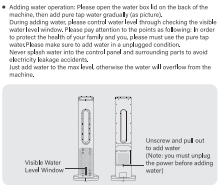

- Usage of ice crystal: The machine comes with free ice crystal boxes which has 4 ice crystal boxes inside.
  1. Please check the ice crystal box before use, the box just has little ice crystal cube inside, you need to add water to max level, and tight the lid (as picture). Please put the box in normal temperature for >2 hours after adding water, the ice crystal particles will become full ice crystal.
  2. Put the ice crystal box filled with water into the refrigerator to freeze when the ice crystals in the box freeze and harden, then put the ice crystal box into the water tank. Turn on the cooling function, enjoy the cool wind.

  Notice:
  a. Do not eat ice crystals in the box, and do not use the ice crystal box as a toy for children to prevent accidental ingestion.
  b. It is best to freeze for about 6 hours for the first use, and then just freeze each time until it hardens.
  c. Please take and put ice bottle lightly, in order to hurt the water recycling cooling system.
  d. Ice crystal boxes can be used in turn to ensure a longer period of humidification and cooling effect in the hot summer.



(Picture)
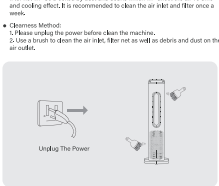
- When you need packaging to store and transport,should drain the water first, then use normal wind fora period to make sure the wet curtain has dried for packaging, thus can prevent odor due to moisture. Put the whole machine in a plastic bag when storing, and put it in a box for reuse.
- Cleaning: After the machine has been running fora long time, the air inlet and filter net will be blocked by dust and debris which will affect the air volume and cooling effect. It is recommended to clean the air inlet and filter once a week.
- Cleanness Method:
  1. Please unplug the power before clean the machine.
  2. Use a brush to clean the air inlet, filter net as well as debris and dust on the air outlet.