furniturebox

LILIBET

Dining Chair

Assembly Guide



furniturebox

IMPORTANT: please read these instructions fully before starting assembly



SAFETY AND CARE ADVICE



NO POWER TOOLS

- Check you have all the components and tools listed
- Remove all fittings from their bags and separate into groups
- We do not recommend use of power tools - this could damage the unit. Only use hand screwdrivers and Allen keys
- Keep children and animals away from the work area, small parts could cause choking if swallowed
- Make sure you have enough space to lay out the parts before starting
- Assemble the item as close to its final position (same room) as possible
- Do not over tighten the nuts to avoid damage to the threads
- Only clean using a damp cloth and mild detergent. Do not use bleach or abrasive cleaners
- Do not allow children to climb or play on this product
- From time to time, check there are no loose screws in this unit
- This product should not be discarded with household waste. Take to your local authority waste disposal centre
- Unless otherwise stated, this product is designed for domestic use and is not certified for commercial or contract settings.

furniturebox

IMPORTANT INFORMATION

20 Minute Build

One Person Build

Max Weight Capacity 120kg

Note: Assembly estimates are approximate and can differ based on the specific environment and user experience.

Label	Part Name	Drawing	Quantity
1	Chair Seat		1
2	Left Leg		1
3	Rail		1
4	Right Leg		1

Please note, the fixings above are for a single chair.

furniturebox

WHAT'S IN THE BOX

Note: the quantities are the correct amount to complete the assembly. In some cases more fixings may be supplied than are required.

Label	Part Name	Drawing	Size (mm)	Quantity
A	Screw		M6 x 60	2
B	Barrel Nut		M6 x 15	2
C	Screw		M6 x 25	8
D	Spring Washer		M6	8
E	Washer		M6	8
F	Allen Key		M4	1
G	Felt		25x2	4

Please note, the fixings above are for a single chair.

furniturebox

Note:


- Use a clear, flat surface to avoid bumps or scratches before assembling.
- Insert all fixings loosely at first to allow for alignment; only tighten them once everything is properly positioned, as some adjustment may be required.
- Avoid over-tightening, as this may damage the parts.
- Seek assistance when moving large or heavy parts

STEP 1

Carefully align Rail [3] in between Left Leg [2] and Right Leg [4], and secure using 2x Barrel nut [B] and 2x Screw [A] into the designated holes.

Tighten using Allen Key [F].

NOTE: Ensure the slot on the head of the Barrel nut [B] is aligned parallel to the rail.

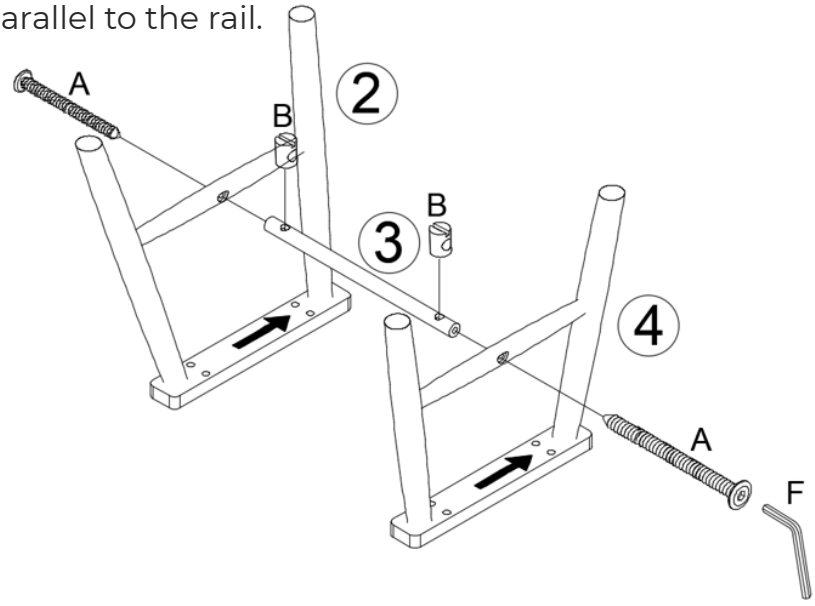


furniturebox

STEP 2

Place chair seat [1] upside down and align the Legs [2 + 4].

Secure using 8x washers [E], 8x Spring washers [D] and 8x Screws [C]. Tighten using Allen Key [F].

NOTE: Ensure the leg marked with an arrow is positioned at the front

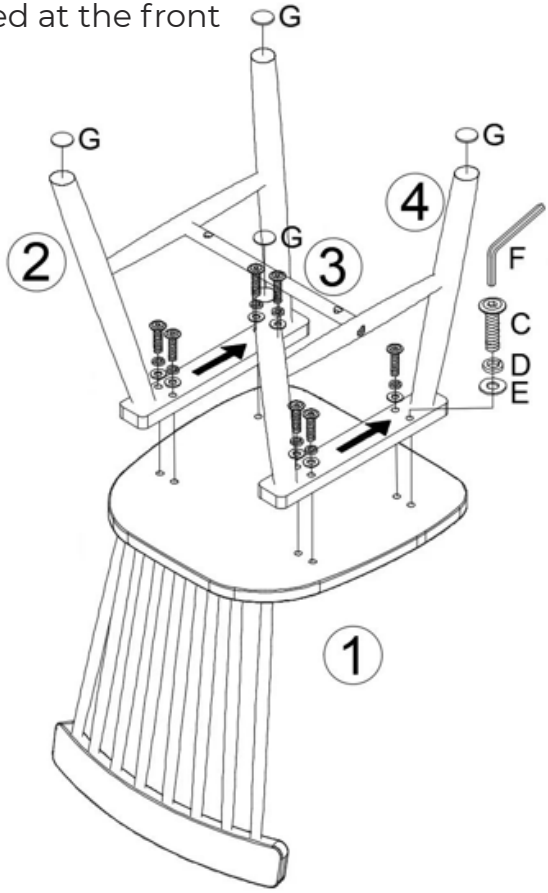


STEP 3

Attach the 4x Felts [G] to the bottom of the four legs.

furniturebox

STEP 4

Carefully, turn your chair over to stand on the feet.
Apply weight to the chair to allow the legs to level.
Ensure all fixings are fully tightened.

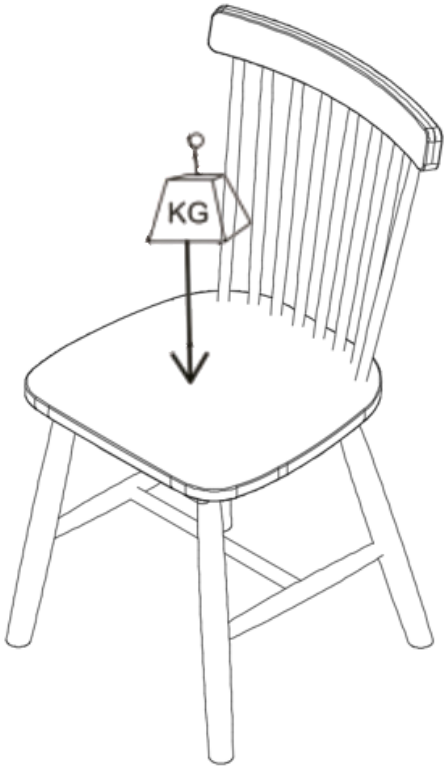

STEP 5

Check the stability.
Your Chair is now ready to use!

STEP 6

Repeat the assembly process for any subsequent chairs.

Please ensure any and all fixings and fittings are FULLY tightened before using this product

our 2 year GUARANTEE

Our products come with a 2 year guarantee, giving you extra peace of mind when shopping with us!

What the guarantee covers

PRE-INSERTED FIXINGS
e.g. loose metal threads

FAULTY JOINTS
e.g. legs bending

EXTERNAL FIXING FAULTS
e.g. metal discs removing from table top

STRUCTURAL INTEGRITY
e.g. the frame of the product

Activate your Guarantee

Scan the QR code to read the full guarantee online and register your product. It only takes a moment to fill out.
Or visit: furniturebox.co.uk/our-guarantee

Furniturebox Unit 6, Indurent Park Chippenham, Clanville Way, Chippenham, SN15 5BD, UK
Telephone: 01747 863 333 **Email:** sales@furniturebox.co.uk