

Clothes rack

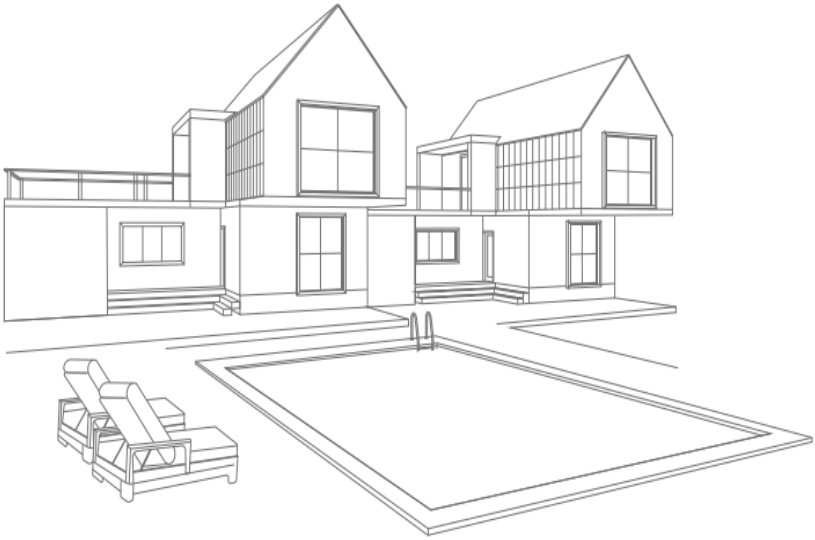

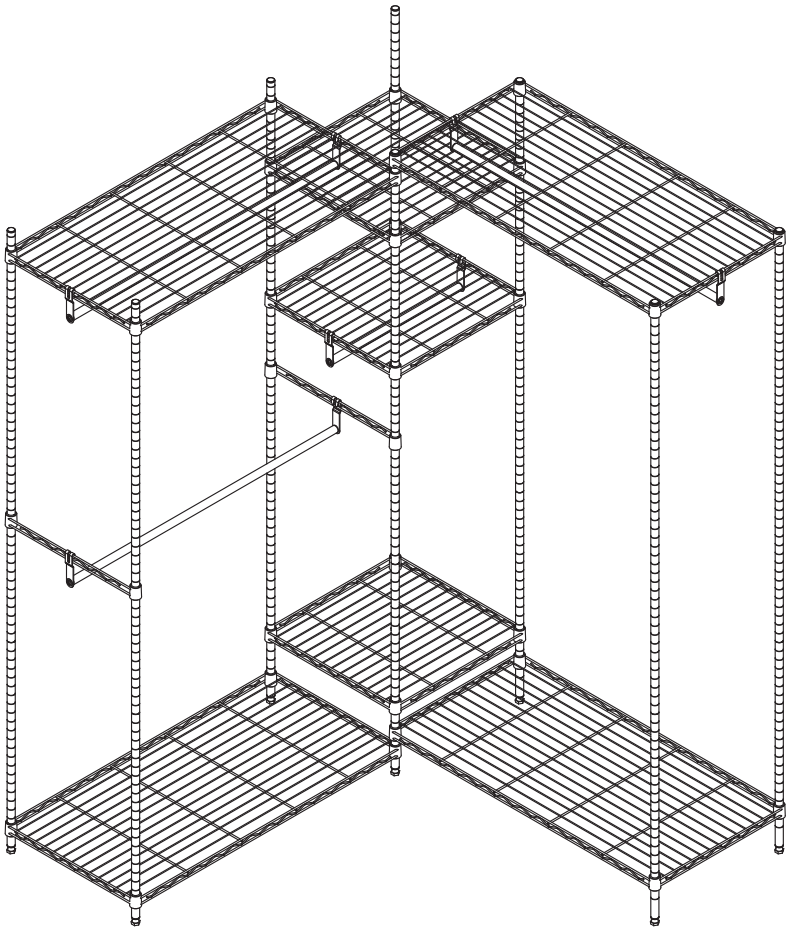


(The picture is for reference only, the product is subject to the actual product.)

IMPORTANT – These instructions are for your safety. Please read through them thoroughly prior to handling the product and retain them for future reference.

WARNING


1. Pay attention to waterproofing and moisture prevention during use.
2. Do not place items on the product that exceed its load-bearing capacity.
3. If you need to place small items, it is recommended to purchase PP boards or wooden boards separately to use together.
4. The small parts and packaging bags of the product are at risk of being ingested and suffocated by children. Please place them out of reach of children.
5. It is recommended to use neutral cleaning agents or metal specific cleaning agents to avoid damaging the paint layer on the metal surface.
6. The circular black hollow gasket is only used for product transportation protection and is not used as an installation accessory.
7. The product style is subject to the actual order, and the illustrations are for reference only.


Parts

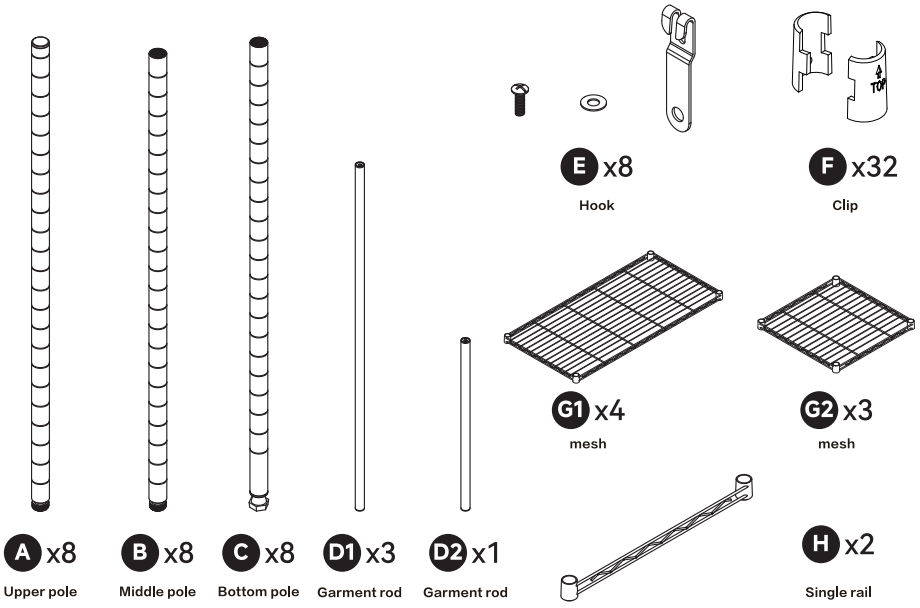


Before you start, Check the pack and make sure that you have all parts listed above.


1. **Install clips at the corresponding position of the bottom poles.**

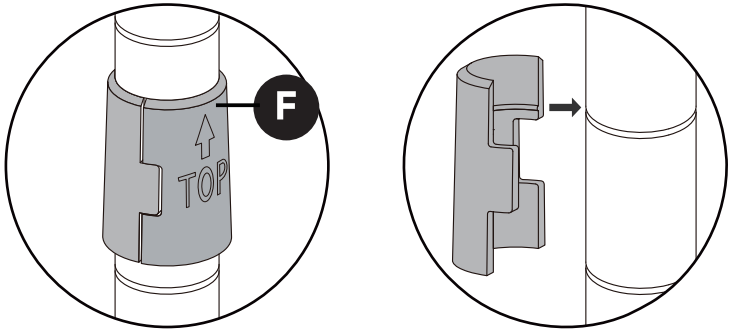

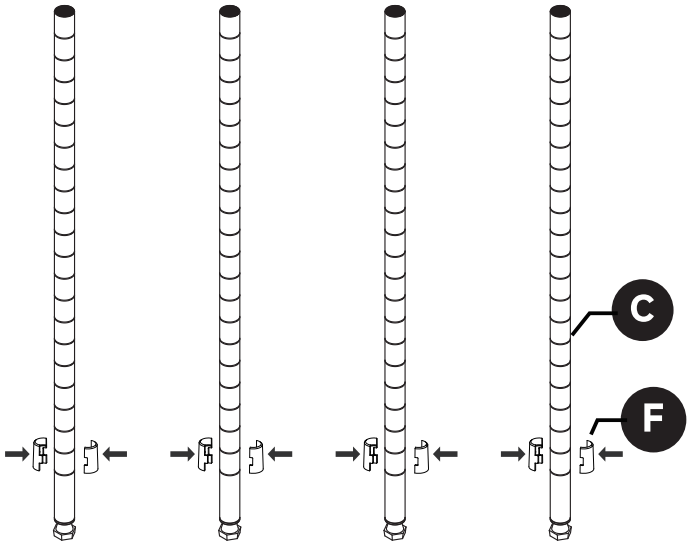



2. Then install one mesh into the bottom poles.

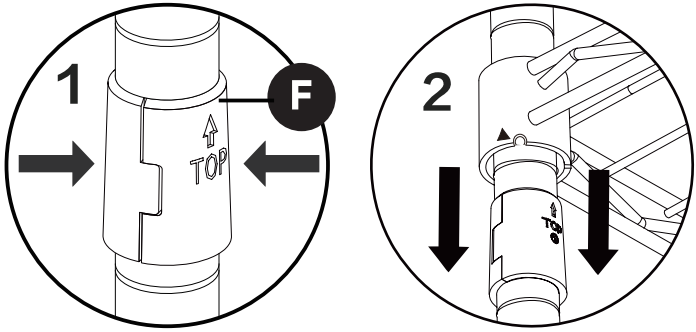

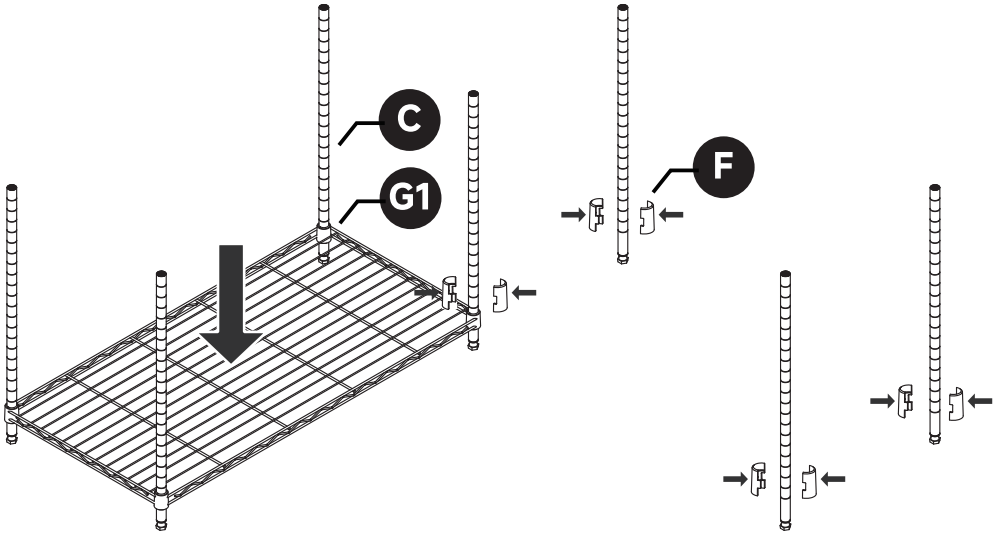


3. Then install another two mesh into the bottom poles.

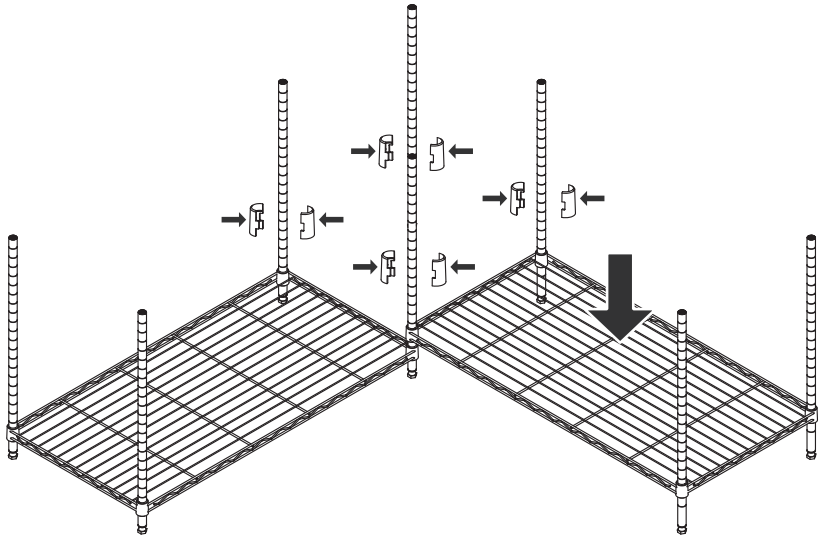


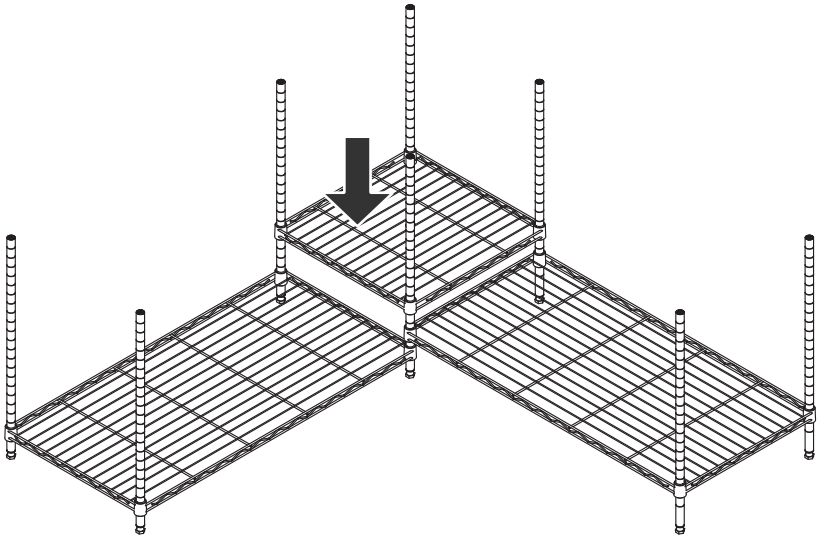


4. Connect the middle poles to the bottom poles.

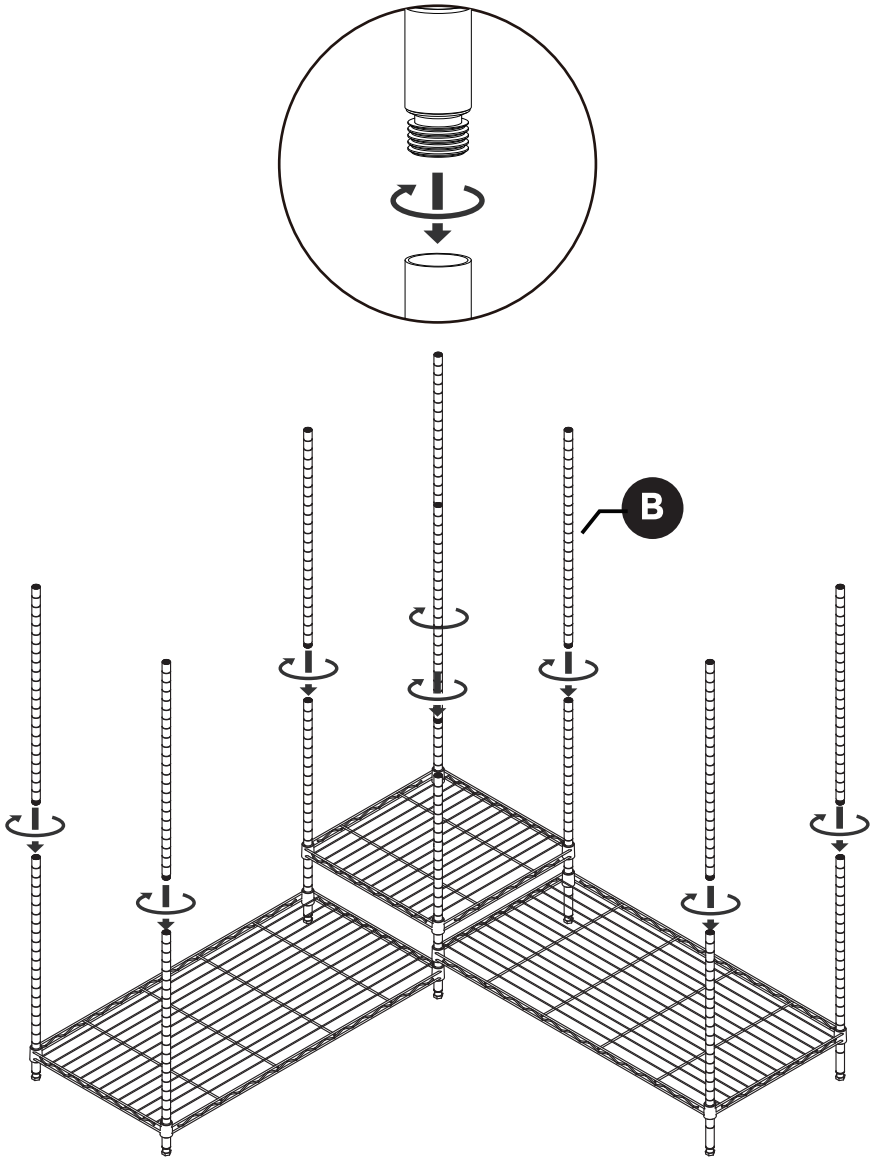



5. Install the single rails.

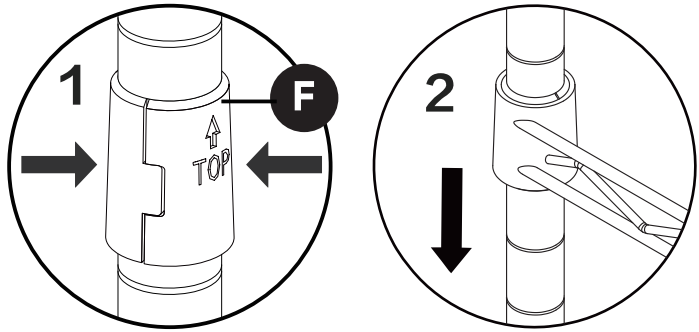

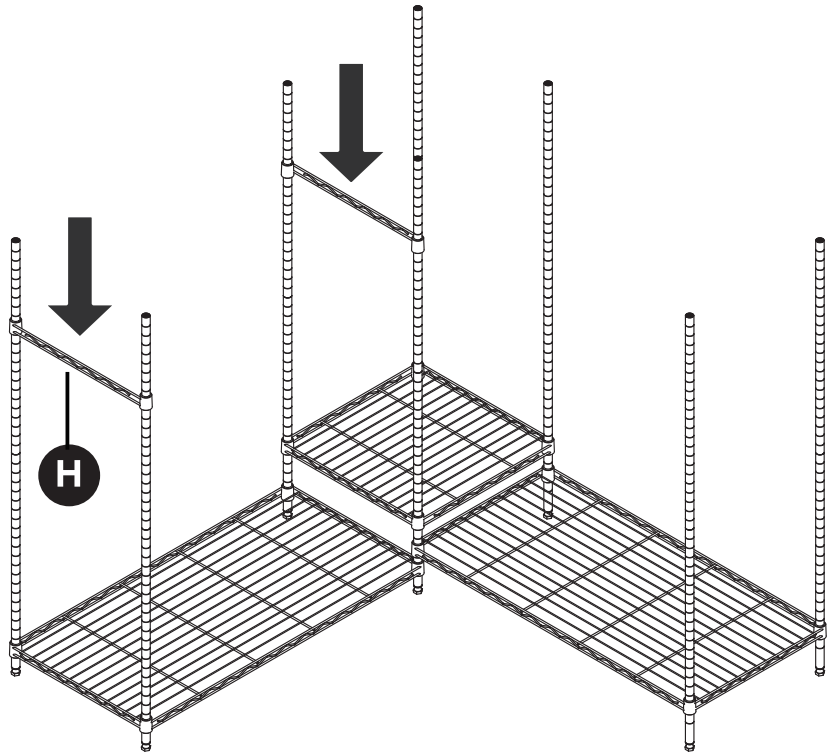


6. Install garment rod between the two single rails .

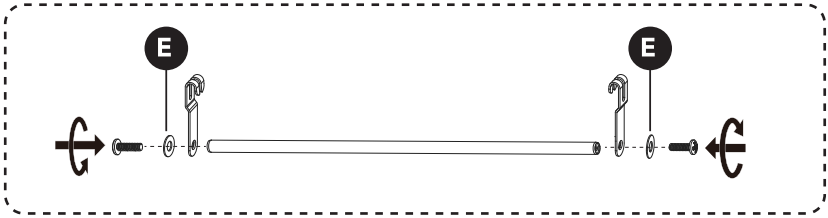


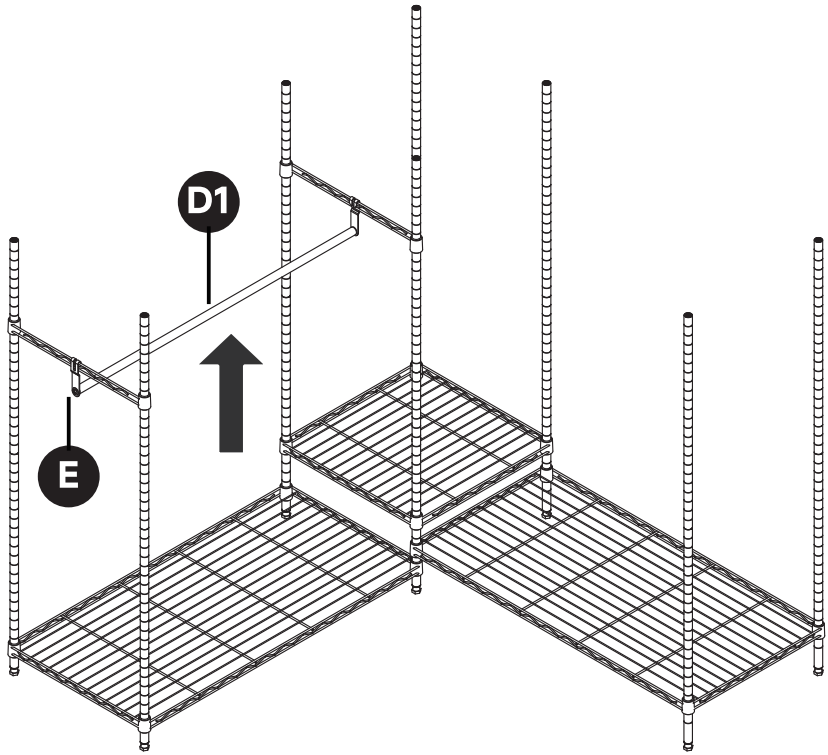


7. Place the second mesh in the middle of long rack poles.

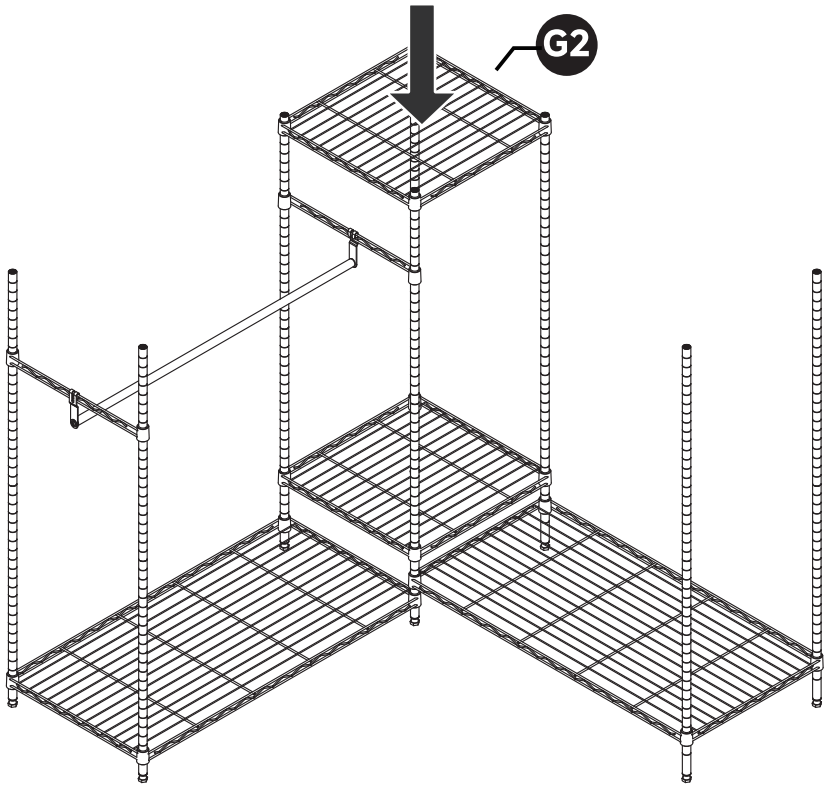


8. Install one garment rod at the corresponding position.

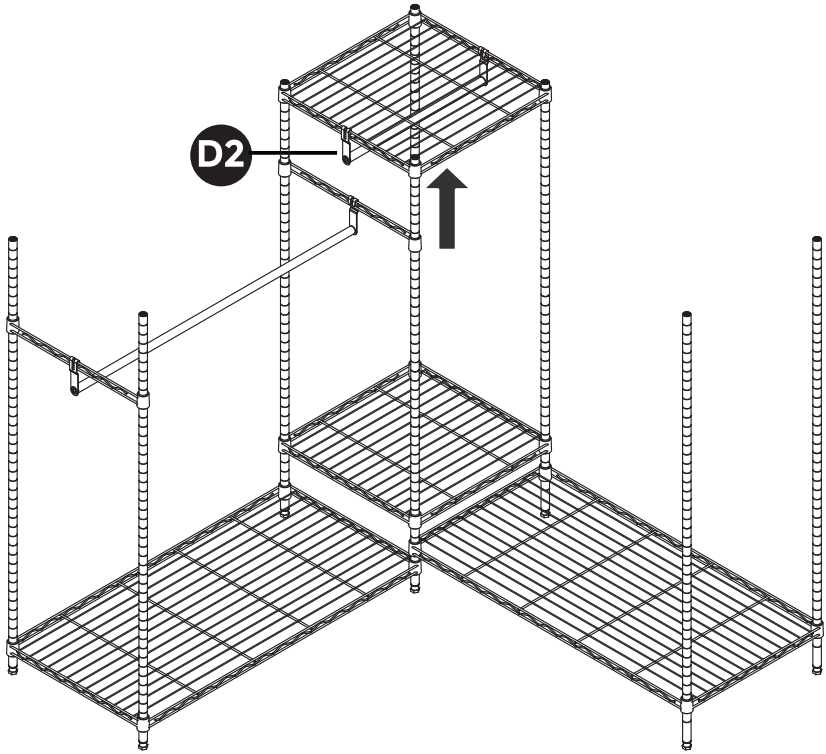


9. Connect the upper poles to the middle poles.

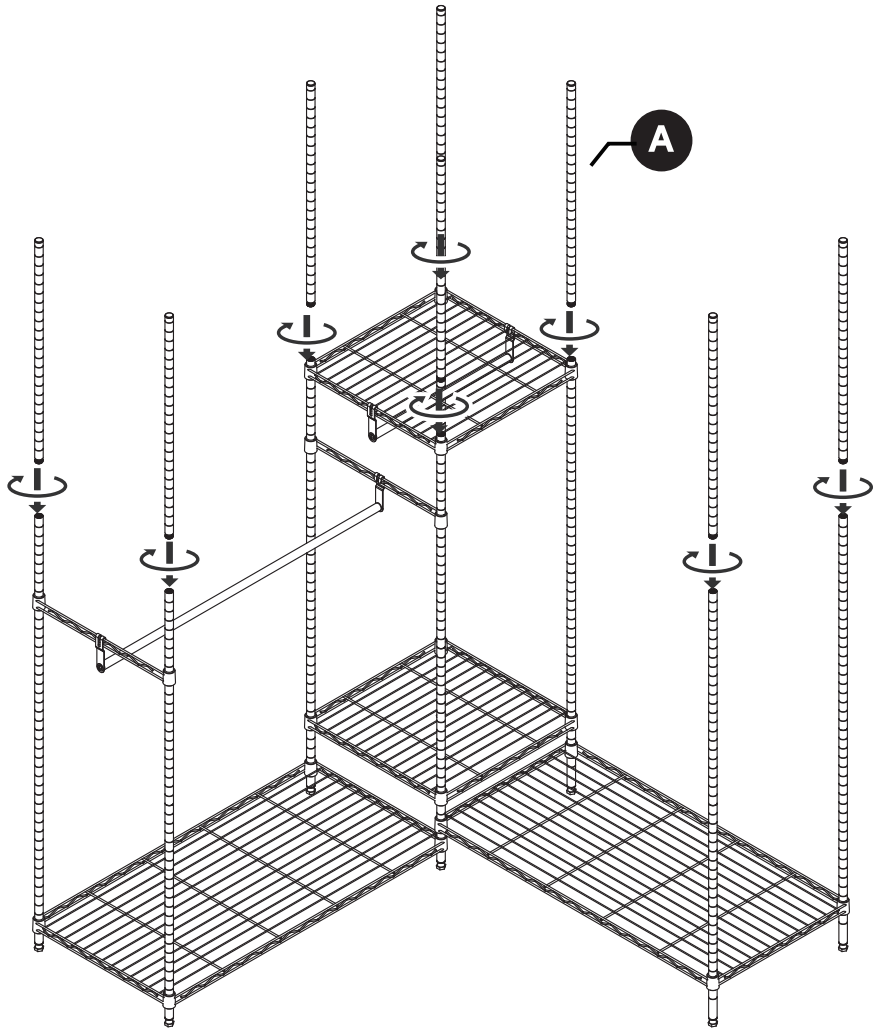


10. Install two more mesh on top of the rack.

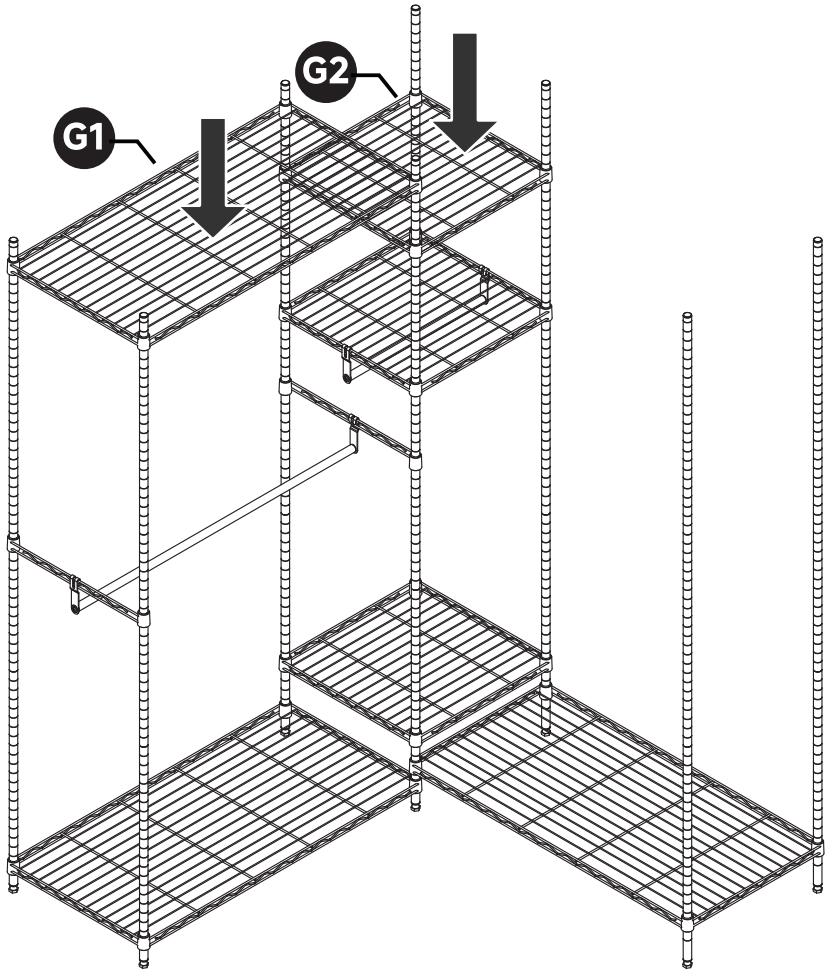


11.Install one more garment rod .

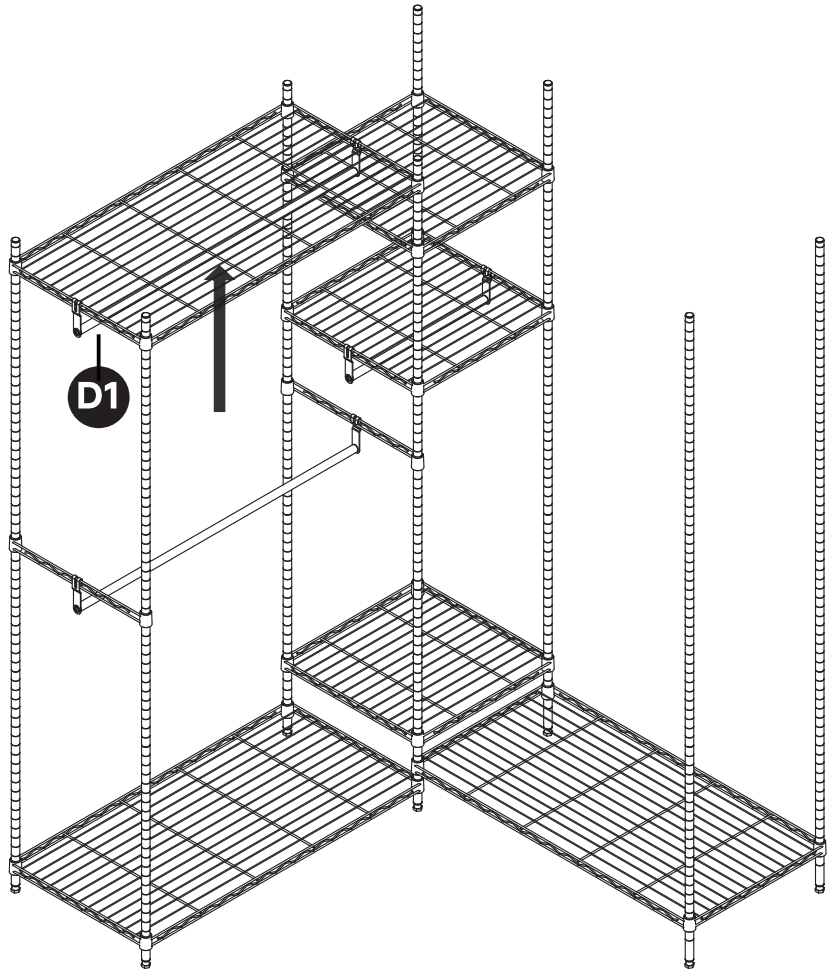

12.Install the final mesh on the top right of the shelf.

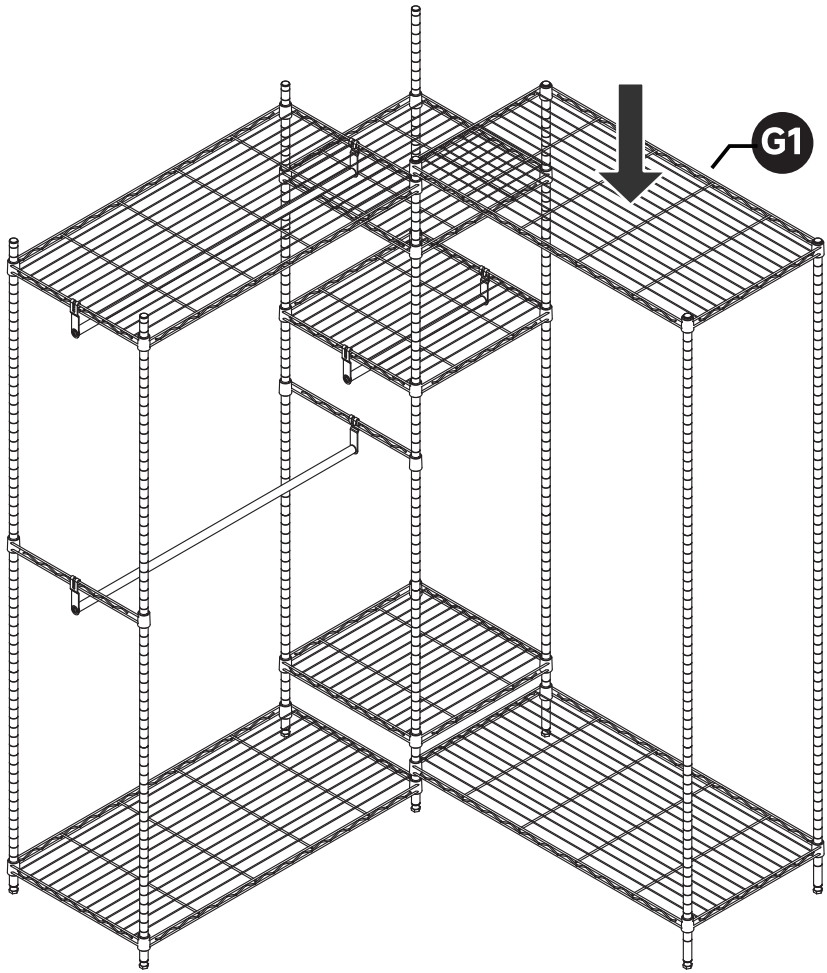

13 Installation completed.


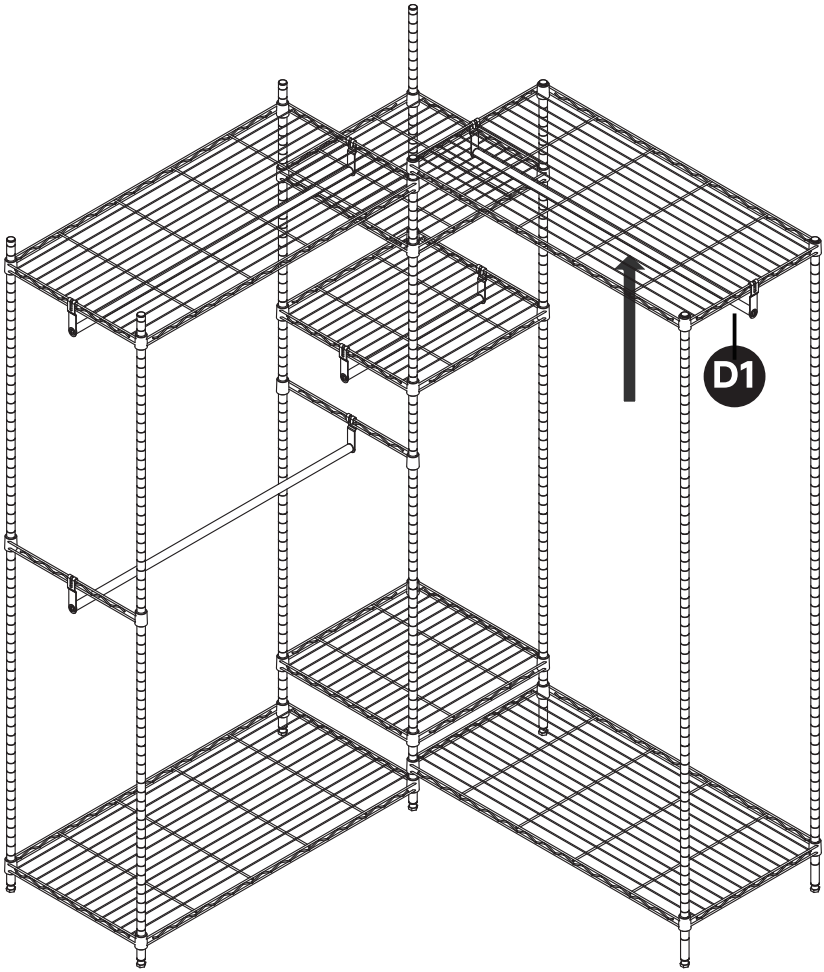



WARNING

If the item is up to 59in high, this step is REQUIRED to ensure the stability of the item.

Using a pencil (not included) through the top shelf(A) mark the screw hole locations, then set the item aside (with the help of another person)
Using a 1/4-in. drill bit (not induded), drill a 1/4-in.pilot hole at marked locations. Insert anchors(BB)into the holes, then move the item back into position.Insert the screws(CC) through washers(AA) and the shelf(A). then into the anchors(BB).

Hardware Used (not shown actual size)

AA	Washer		x 2
BB	Anchor		x 2
CC	Screw		x 2

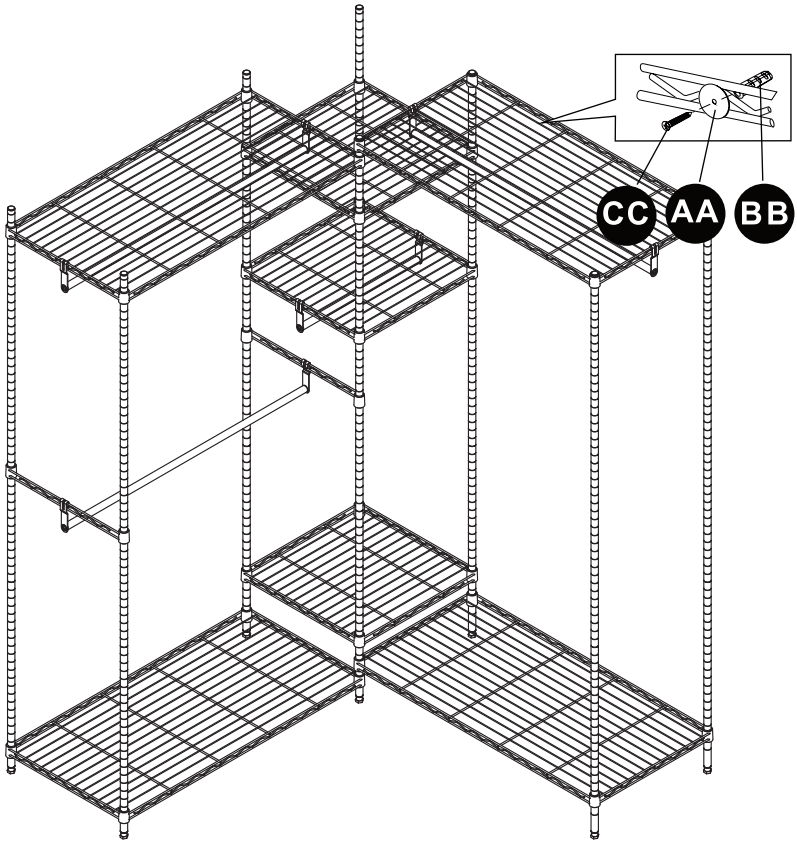

Limited Liability & Warning

No Unauthorized Modifications/Repairs: Do not modify or attempt to repair this product unless you are an authorized technician. Unauthorized actions may create hazards and void all
warranties

Misuse & Non-Compliance: We are not liable for any injury, damage, or loss resulting from:

(a) misuse, abuse, neglect, or improper installation;
(b) failure to follow instructions or safety precautions;
(c) use of unauthorized parts/accessories;
(d) unauthorized modifications/repairs;
(e) accidents, natural disasters, or external causes.

If you doubt any step of installation or operation, stop using the product and contact authorized service or the customer support.

LIMITACIÓN DE RESPONSABILIDAD Y ADVERTENCIA

Modificaciones o Reparaciones No Autorizadas: NO modifique ni intente reparar este producto a menos que sea un técnico autorizado. Las acciones no autorizadas pueden generar riesgos y
anularán todas las garantías.

Uso Indebido e Incumplimiento: No asumimos responsabilidad alguna por lesiones, daños o pérdidas que resulten de:

(a) uso indebido, abuso, negligencia o instalación incorrecta;
(b) incumplimiento de las instrucciones o precauciones de seguridad;
(c) uso de piezas o accesorios no autorizados;
(d) modificaciones o reparaciones no autorizadas;
(e) accidentes, desastres naturales o causas externas.

Si tiene dudas sobre algún paso de la instalación o el funcionamiento, deje de usar el producto y póngase en contacto con el servicio técnico autorizado o con atención al cliente.