Easylife Brand Colour Guidelines:
Easylife *blue* is - **PANTONE 072 C** (C-100, M-90, Y-0, K-0) LAB values: L 25, A 13, B -52
Easylife *yellow* is - **PANTONE 123 C** (C-0, M-24, Y-94, K-0) LAB values: L 83, A 10, B 85 Paper weight 60gsm

⚠ IMPORTANT SAFETY INSTRUCTIONS

When installing the Cavendish Media Cabinet, basic precautions should always be followed, all instructions should be read cafefully and kept for reference.

DISPOSAL

- Please respect the environment!
- Dispose of the packaging according to the local recycling regulations.
- Dispose of paper and cardboard packaging separately from plastic bags into the corresponding containers.
- Dispose of the appliance at the end of its life span according to environmental considerations.

CLEANING

Wipe with a soft, dry cloth and maintain finish with a furniture polish.

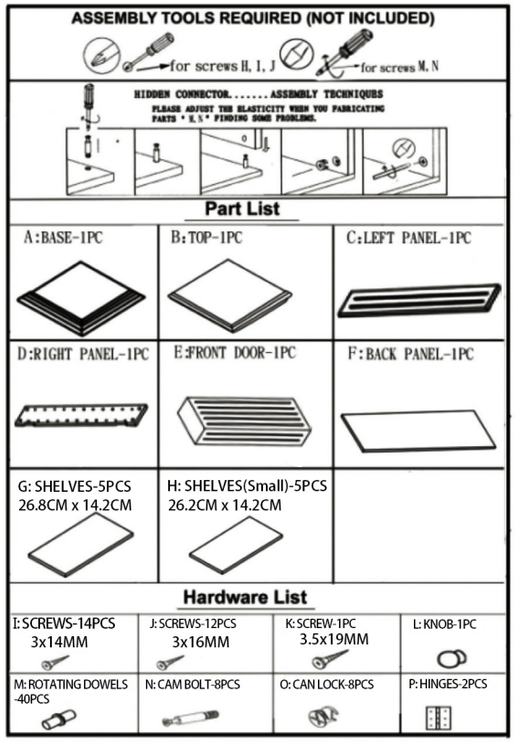

⚠ WARNING

This product is intended for domestic use only.
Always load the cabinet before loading the door, this will prevent the risk of the cabinet becoming unbalanced when in use.

TECHNICAL SPECIFICATION

Maximum load: 5lbs (2.3kg) per shelf Measurements: H97xW30xD30cm

SWING AWAY MEDIA CABINET

INSTRUCTION MANUAL



Model: 41453

Please read carefully before use and keep for future reference

Easylife Brand Colour Guidelines:
Easylife *blue* is - **PANTONE 072 C** (C-100, M-90, Y-0, K-0) LAB values: L 25, A 13, B -52
Easylife *yellow* is - **PANTONE 123 C** (C-0, M-24, Y-94, K-0) LAB values: L 83, A 10, B 85 Paper weight 60gsm

Dear Customer

Thank you for purchasing the Cavendish Media Cabinet.
This beautiful unit makes a useful side table or display shelf and ingeniously stores 325 CDs, 144 DVDs, 64 Videos – or a combination of all three. With an attractive walnut effect finish, the cabinet is complete with shelves that can be height adjusted as required. Requires simple home assembly. Measures H97xW30xD30cm.

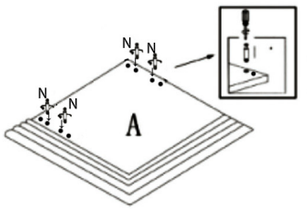

STEP 1

N 4PCS

Position 4 x cam bolts (N) in to the pre-set screw holes in the base panel (A) and secure in place using a Phillips head screwdriver (as shown).

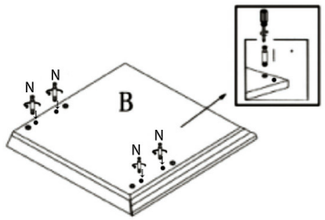

STEP 2

N 4PCS

Position the remaining 4 x cam bolts (N) in to the pre-set screw holes in the top panel (B) and secure in place using a Phillips head screwdriver (as shown).

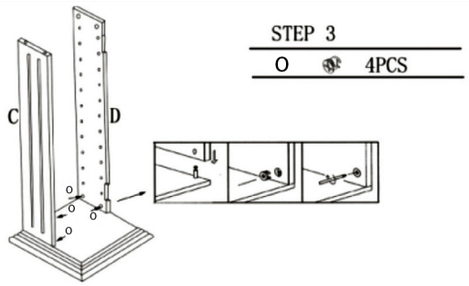

STEP 3

O 4PCS

Position the side panel (C&D) onto the base panel (A). Each side panel is pre-assembled with 4 dowel joints, these will secure in place in the base panel (A). Once in place insert 4 x cam locks (O) as shown and secure by turning each lock 180° with screwdriver.

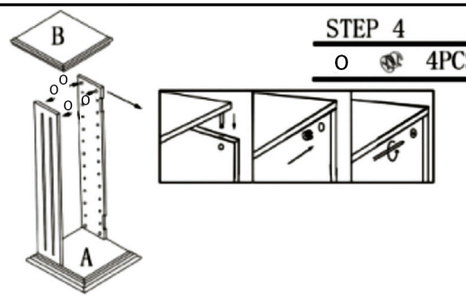

STEP 4

O 4PCS

Position the top panel (B) on to side panels (C&D). Once in place insert 4 x cam locks (O) as shown and secure by turning each lock 180° with screwdriver.

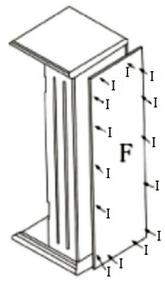

STEP 5

I 14PCS

Attach the back panel (F) with 14 x screws (I) as shown.

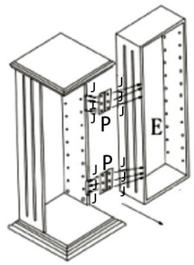



P 2PCS

STEP 6

J 12PCS

Attach 2 x hinges (P) to the side panel (D) using 6 x screws (J) as shown. It is recommended that your carefully position the cabinet on a flat, clean and protective surface when attaching the hinges in this step. Once both hinges have been attached the side panel D carefully place the front door (E) next to the cabinet so the hinge screw holes align. Secure in place 6 x screws (J) to the front door as shown.

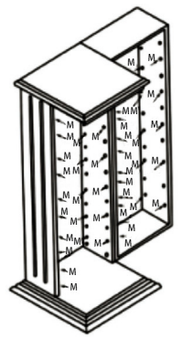

STEP 7

M 40PCS

Insert 40 x dowels (M) into the desired positions (as shown).

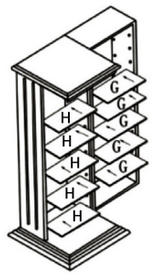

G: 26.8CM x 14.2CM
H: 26.2CM x 14.2CM

STEP 8

Slide 10 x shelves (G & H) on top of the dowels as shown. Each shelf has 4 pre-cut grooves for the shelf to sit securely in place on each dowel.

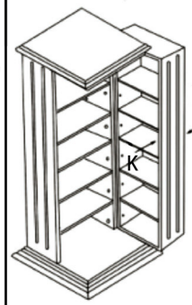

STEP 9

K 1PC
L 1PC

Insert 1 x screw (K) behind the front door (E) and secure in place the wooden knob (L) using a screwdriver as shown. The cabinet is now complete and ready to use.