
Electric Ride On UTV

Owner's Manual

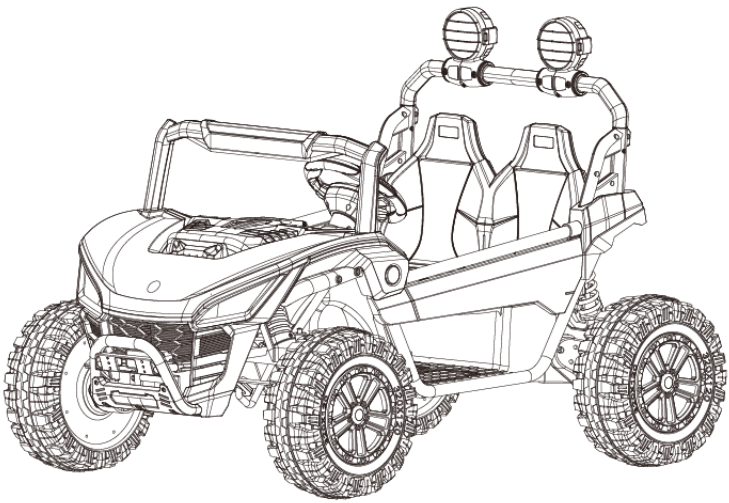

NOTE: Manual illustrations are for demonstration purposes only.
Illustrations may not be the same as the exact appearance of the actual product.
Read and understand this entire manual before allowing children to use this product.
Please keep the 17-character order ID with your side before contacting us.
Order ID: _____ - _____-_____.
Read and understand this entire manual before allowing children to use this product.
For assistance, please send Email to: anpabo.service@gmail.com (24/7)


Disclaimer:
The pictures in this instruction are for assembly reference only. Please refer to the actual product.

Warning:

- It should be used under adult guidance. Parents should ensure that children have taken the safety measures before use.
- The toy should be used with caution since skill is required to avoid falls or collisions, causing injury to the user or a third party.
- Not suitable for children under 36 months.
- This toy has no brakes; release the pedal, and the car will stop.
- Protective equipment should be worn. Not to be used in traffic.


PRODUCT SPECIFICATIONS


Battery	24V7AH*1
Main material	PP
Suitable age	37-95 months
Weight limit	132 lbs
Product size	48.4*31.1*32.5 in
Speed	3.1-5 Mph
Runtime	1-2 hours after charging 8-12 hours, based on ride on conditions
Charger	Input AC 100-120V Output DC 24V1000mA
Fuse	Auto-reset fuse

No	Parts Name	Pictures	QTY	No	Parts Name	Pictures	QTY
❶	Car body		1	❷	Steering wheel		1
❸	Front axle		1	❹	Rear axle		1
❺	Steering rod		1	❻	Footrest cover		4
❼	Wheel		4	❽	Wheel cover		4
❾	Windshield		1	❿	Front bumper		1
⓫	Backrest		1	⓬	Searchlight pedestal		2
⓭	Searchlight frame		1	⓮	Drive motor		4
⓯	Screw package		1	⓰	Remote control		1
⓱	Charger		1	⓲	Plastic wrench		2
⓳	L- type Hex wrench		2	⓴	User manual		1

Product Explosion Diagram

Installation
Video Guide

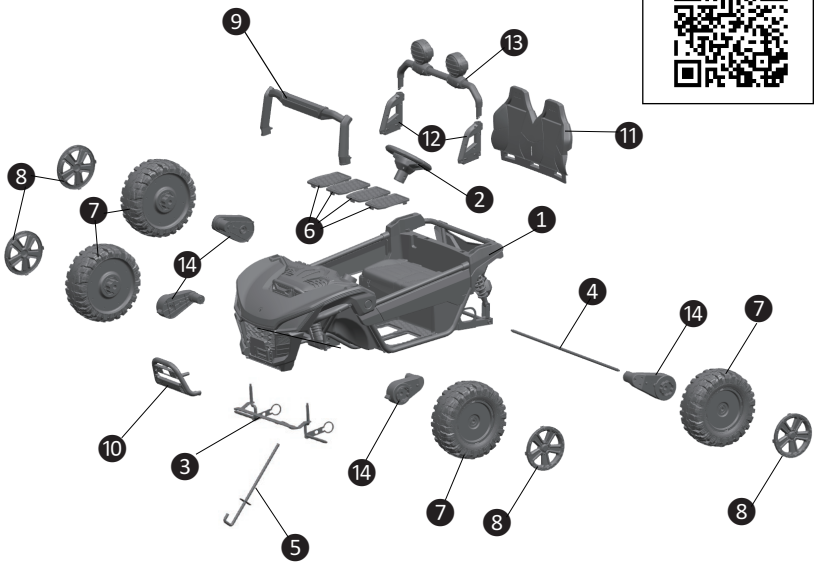

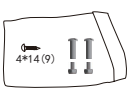

15



16



17



20

Tools:



Screwdriver
(Not Included)



18



19

Assembly instruction

Car assembling should be done by the adults.


Take care of small parts. To avoid choking hazard, keep children away while assembling. Children under 36 months are prohibited to use.

Please count all the parts carefully before assembling and dispose the plastic bag properly. To avoid choking hazard, children are not allowed to play with the bag.

1.Front axle assembly


Flip the car body over, remove the front axle ❸ and steering axle ❺ from the bottom, and set them aside for later use.

Using the plastic wrench ⓲, loosen the two lock nuts from the front axle ❸, then remove the two M10 washers. Insert the front axle ❸ into the round tubes on the car body, paying attention to the position as shown in the picture. Reinstall the M10 washers onto the front axle ❸ and use the plastic wrench ⓲ to secure it with the two lock nuts.

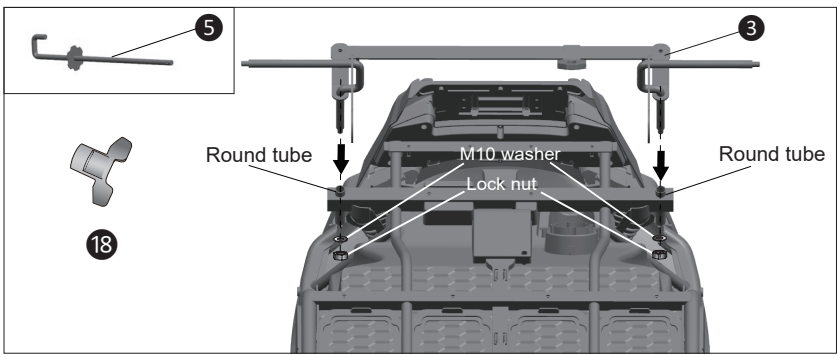


2.Shock absorber assembly

Take the shock absorber screws and nuts from the screw package ⓯. Lift the rear wheel frames, insert the shock absorbers into the U-shaped parts on the rear wheel frames, then insert the shock absorber screws and tighten the nuts with the L- type hex wrenches ⓳.

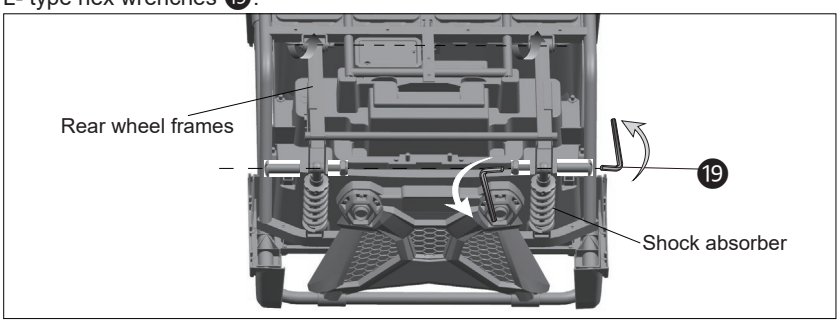


3.Rear axle assembly

Using the plastic wrench ⑱, loosen the two lock nuts from the rear axle ④, then remove the two washers and set them aside for later use. Insert the rear axle ④ into the car body and check if it is positioned at the center of the car, ensuring that the lengths extending out on both sides are equal.

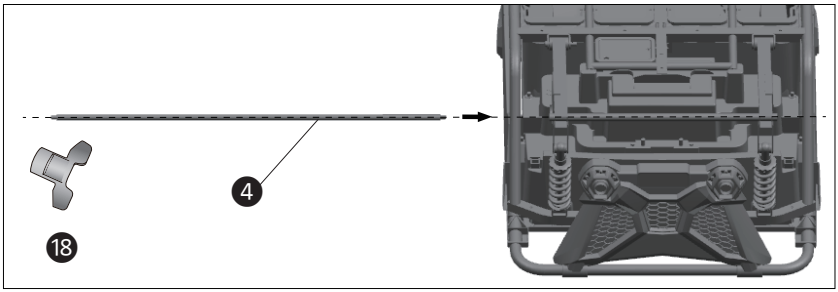

4.Steering rod assembly


Insert the steering rod ❺ into the steering motor from the bottom, making sure that the hook of the steering rod ❺ fits into the hole on the front axle ❸, as shown in picture (a).

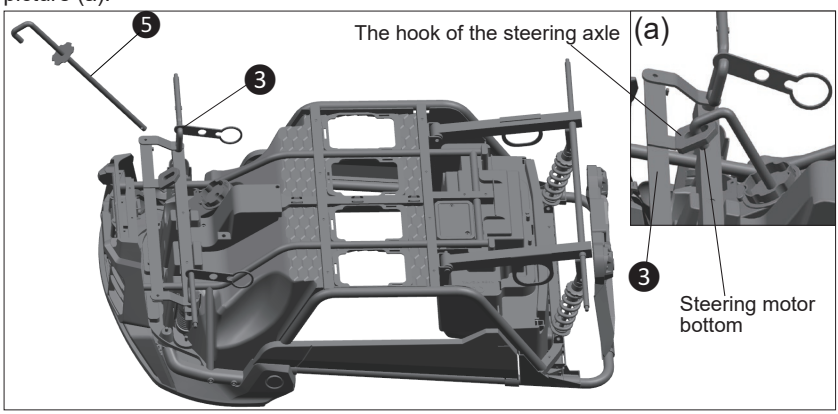

5.Front wheel & rear wheel assembly


Using the plastic wrench ⑱, loosen the two lock nuts from the front axle ❸, then remove the two washers and set them aside for later use.

Insert the motors ⑭ into the front axle ❸ and rear axle ④ and connect the motor plugs. Then insert the wheels ❼ and the M10 washers as shown in the picture, and fasten the nuts with the plastic wrench ⑱. While applying pressure, lock the wheel covers ❽ into the grooves on the wheels ❼.

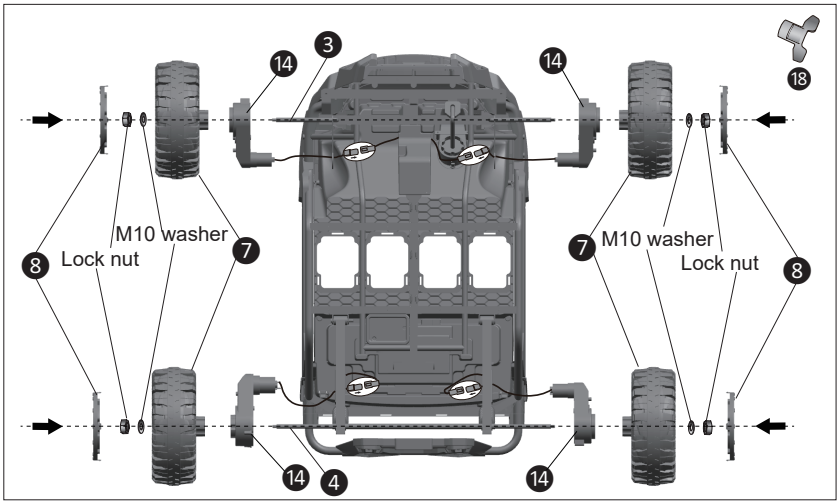


6.Steering wheel assembly

Using a screwdriver, remove a screw and a nut from the steering wheel ❷. Connect the cable plugs from the steering wheel ❷ to the car body. Insert the cables into the dashboard, then insert the steering wheel ❷ into the steering axle, matching the holes and inserting the nut, using the screwdriver, secure it with the screw.

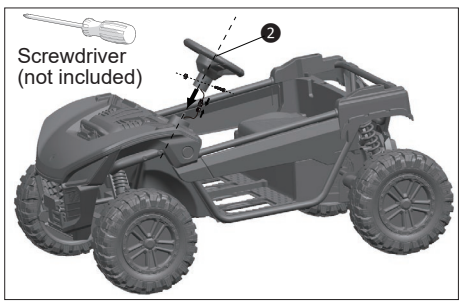


7.Footrest cover assembly


Attach the footrest cover ❻ to the correct position on the car body and firmly push them into place.

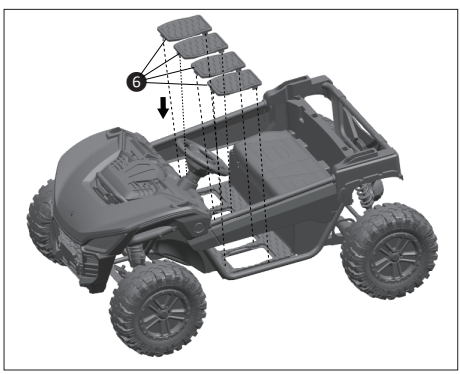

8.Backrest assembly

Using a screwdriver, loosen the two screws from the seat. Match the two red plugs to establish a connection with the battery. Attach the backrest ⓫ to the correct position on the car body, then reinstall the seat and fit it into the hole on the backrest ⓫. Using the screwdriver, secure it with two screws.

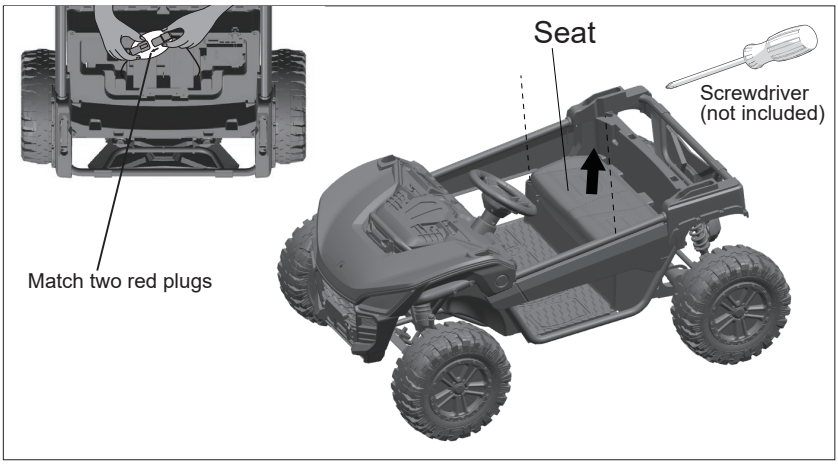


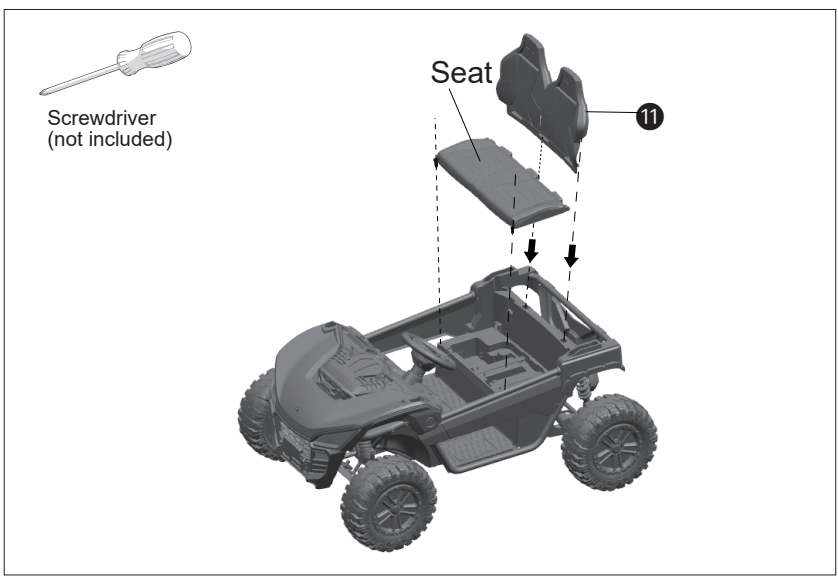

9.Searchlight frame & searchlight pedestal assembly


a: Using the screwdriver, loosen the screw and remove the battery cover. Insert two AA batteries, turn on the searchlight ,and close the battery cover, securing it with the screw.

b: Insert the searchlight frame ⓭ into the searchlight pedestal ⓬.Using the screwdriver, secure them with two M4*14 screws.

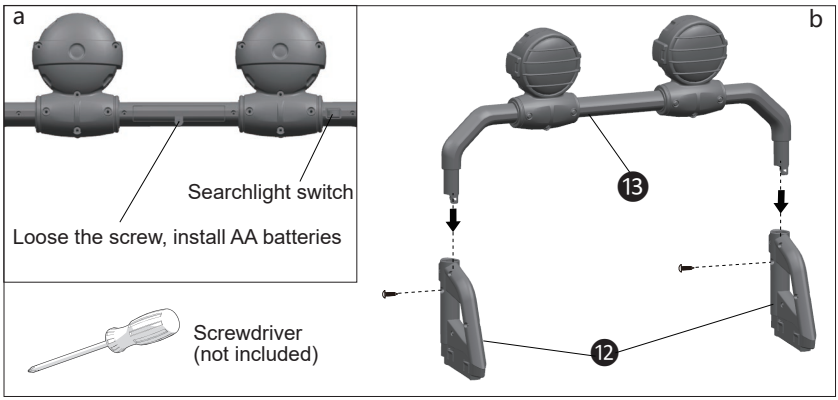


10.Searchlight assembly

Attach the complete searchlight to the correct position on the car body and firmly push it into place.

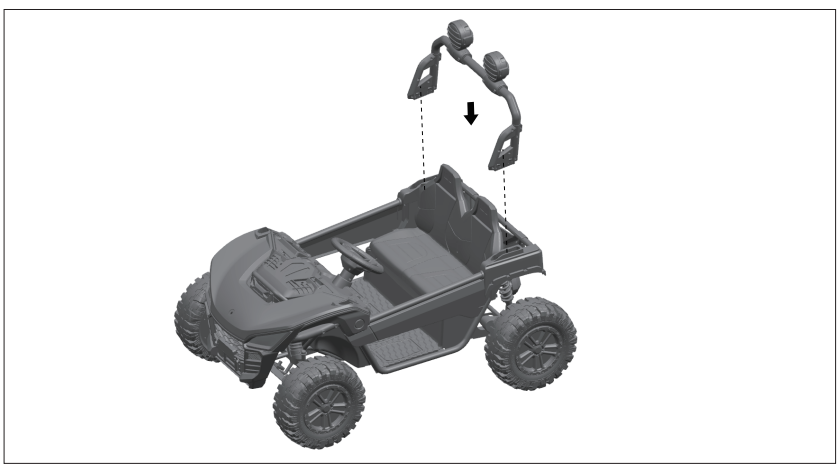


11.Windshield assembly

Insert the windshield ❾ into the correct position on the car body,and secure it using two M4*14 screws and the screwdriver.

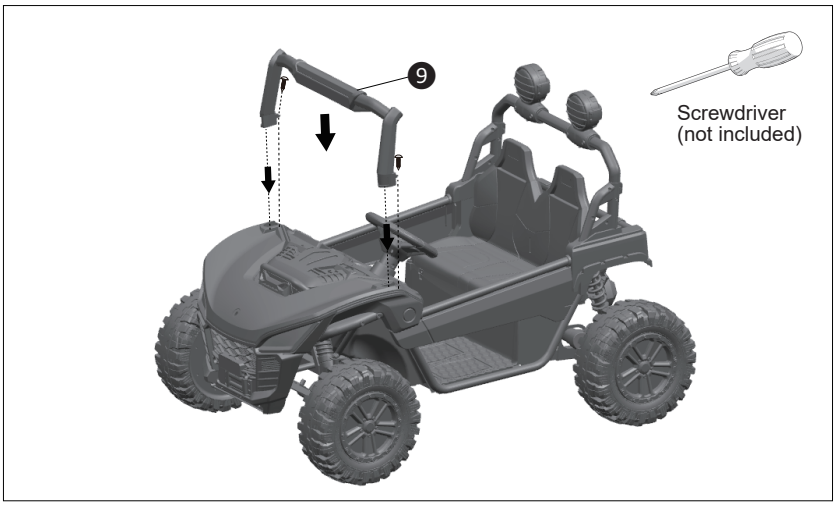

12.Front bumper assembly

Attach the front bumper ❿ to the correct position on the car body, insert the hooks and firmly push them into place. Using the screwdriver, tighten them with five M4*14 screws.

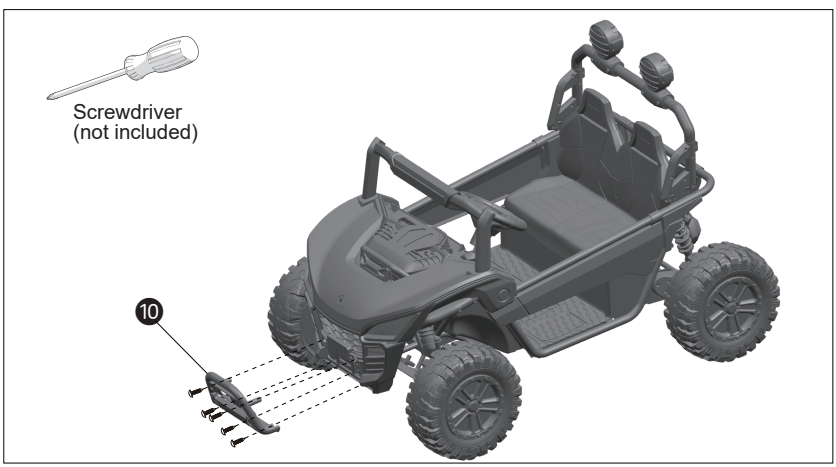

SECURITY WARNING

1. Installation and Charging: The installation and charging of the vehicle should always be under adult supervision.
2. Age Limit: This product is intended for children aged 37 to 95 months, with a weight limit of 132 lbs.
3. Ideal Surface: This product is ideal for driving on hard, flat surfaces.
4. Prohibited Areas: It is strictly prohibited to use this product on streets, roads, potholes, or slopes.
5. Avoid Uneven Ground: Avoid driving on sand, grass, or uneven ground.
6. Operation Instructions: Children should receive full instructions on how to operate the car. Improper operation can cause damage or accidents.
7. Parental Supervision: While children are driving, it is the parents' duty to supervise at all times to avoid accidents.
8. Avoid Rainy Conditions: Avoid driving in the rain or on flooded pathways, as this can damage the motor, circuit, and other electrical components.
9. Charger Inspection: The battery charger should be regularly inspected by parents to ensure that the wires, plugs, casing, and other components are not damaged. Please stop using it if any damage is found until it is completely repaired.
10. Safety Configuration: To ensure the product's lifespan and safety, avoid damaging the charger, battery, or electrical circuit. The car must use the default configuration of a dedicated charger and power supply.
11. Battery Removal: Rechargeable batteries should be removed from the toy before charging.
12. Power Off When Not in Use: When the product is not in use, please turn off the power and set all switches to the "stop" or "off" position.
13. Charger Safety: The provided charger is not a toy and should be kept away from children.
14. No Non-Manufacturer Parts: Strictly prohibit the use of non-manufacturer provided parts.
15. Unsuitable for Young Children: This toy is unsuitable for children under 3 years due to its maximum speed.


USAGE DIRECTION

1. Pre-Use Checklist: Before using the product, ensure that all the following tasks are completed:
a) Follow the steps outlined in the instructions to complete the car's installation. Ensure that the battery is plugged in and the power supply is switched on.
b) Verify that all screws are tightly secured in their respective positions.
c) Parents or guardians should ensure that children have taken appropriate safety measures before use.
2. When driving the car, the child should sit in the car seat.
a) Adults or parents should provide close supervision and guidance while the child is driving and should not leave them unattended.
b) Please make sure to always fasten the seat belt while driving.
3. Be mindful of the driving environment; here are some unsafe areas to avoid:
a) Trenches, riverbanks, and steep hills.
b) Roads or other places meant for driving and walking.
c) Obstacles that could cause injury.
d) Other unsafe zones.
4. Visibility Conditions: To avoid accidents, please use the product only during the daytime or in well-lit areas, and avoid using it in low visibility conditions.


FUSE

This car is equipped with an auto-reset fuse. If the car stops suddenly while driving, it is likely due to an instantaneous current overload, which causes the fuse to trip. To reset the fuse, simply stop operating the car for about 8 seconds, then turn the power switch back on.
To avoid the fuse tripping and cutting off the power supply, please pay attention to the following:
1. Weight Limit: This product cannot be overloaded; the maximum load is 132 lbs.
2. No Towing: Do not drag anything behind the product.
3. Avoid Liquids: Ensure that water or other liquids do not enter the batteries or other electrical components.
4. No Modifications: Do not alter the circuit system or structure of the product.

2. Operating(function reference diagram)

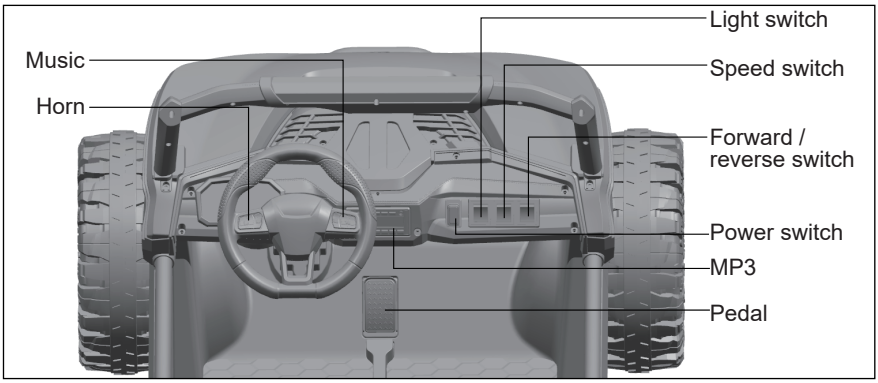


MP3 Player

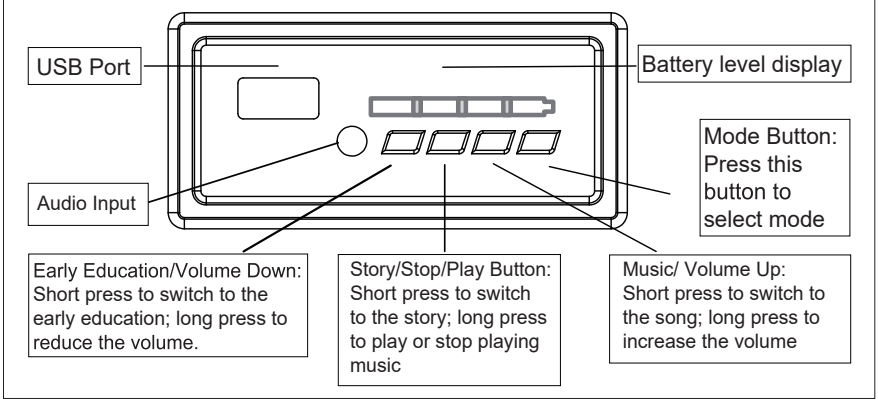

Wireless Connection Setup

1. Press the "Mode" button to switch to Bluetooth mode, and the car will emit a "wireless connection" prompt tone.
2. On your mobile device, enable Bluetooth and select from the list of available devices.
3. A “ding-dong" tone will sound to confirm a successful connection.
4. Once connected, you can stream audio from your mobile device.
Volume can be adjusted via a long press on the multimedia panel's volume or the volume controls on your mobile device.
5. The multimedia panel also supports direct control of track selection (previous/next), as well as play and pause functions.

Remote control instruction

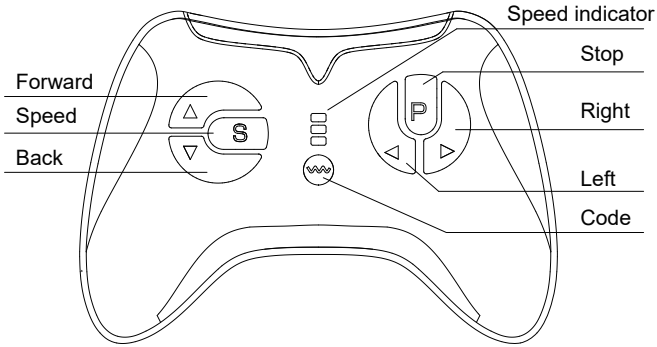

2.4G Remoter Control Instructions


The remote needs to be paired with the vehicle before the first use. Due to the memory function, there is no need to pair the vehicle again next time you use the remote.

How to pair the remote with the vehicle?
Step 1: Open the battery cover of the remote control and put 2 pcs AAA(1.5V) batteries into it. (Note: batteries are not included in the package.)
Step 2:Tum on the power switch on the car;
Step 3: Press and hold the "code" button for more than 15 seconds, or press and hold the Forward and Back buttons at the same time for more than 15 seconds, the speed display light will flash and then tumed to a long bright red light, which means the remote control and the car have been paired successfully.
Speed button: a red light for low speed, two red lights for medium speed, three red lights for high speed.
Brake buton: Press the brake buton (P button) to stop the car,the three red speed display lights on the remote will all flash. Press the brake button once again to release the brake.

Note:
1. When being not operated for more than 10 seconds, the remote will tum to automatic standby state. Press any key to wake it up.
2. When the remote control is paired and in operation, the remote wil override the manual mode, and the pedal switch of the car will be invalid. lf the remote is paired but not in operation, the pedal switch can be used normally.
3. The remote control shall be used by caregivers and not be touched by children.

How to insert batteries:

Use screwdriver to loosen the screw on the back of the remote control, open the battery cover, and install two AAA 1.5V alkaline type batteries according to the diagram (Batteries are self-provided), then close the battery cover,and fix with screw.

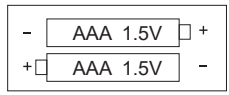


WARNING:

1. When operating the car, the distance between the car (with the child inside) and the remote control (operated by adults) should not exceed 10 meters.
2. The remote control is not a toy and is for adult use only. It should not be used by children. Close adult supervision is always required. The reception range may vary significantly due to weather, battery condition, and other environmental factors. Keep the remote control away from children.
3. Before using the remote, please read the instruction manual carefully. Practice operating the empty car first. Only after you are familiar with the operation should you use the remote with a child in the car.
4. This product should not be used on traffic roads or in areas with water and obstacles.
5. To avoid damaging the circuit, keep the remote control dry and protected from rain.
6. Do not mix old and new batteries or use different brands of dry batteries together.
7. To avoid damaging the remote control, remove the batteries if the remote will not be used for an extended period. This prevents battery leakage and circuit corrosion.
8. Take care to avoid dropping the remote control during use.
9. Install batteries with the correct polarity to prevent short circuits.
10. Charging must be done by adults. Non-rechargeable batteries cannot be charged.
11. Exhausted batteries should be removed from the toy properly and kept out of reach of children.
12. If not using the remote for a long time, remove the batteries and handle them properly to prevent children from playing with them.
13. If the remote control distance is less than 3 meters, the batteries may be depleted. Please replace with 2 AAA batteries.

CHARGING WAY

NOTE: The charging process must be done by adults.
● Before first use, remove the seat and connect the battery by pairing the two red plugs. The battery should be charged for 8–12 hours before initial use.
● The charging port is located near the seat—follow the instructions to charge the battery.
● If the vehicle slows down, it requires charging for 8–12 hours (maximum 20 hours, please don't overcharge).

Charging Steps:
First, insert the charger plug into the charging port. (The vehicle will not start during charging.)
Then, plug the charger into a power outlet.

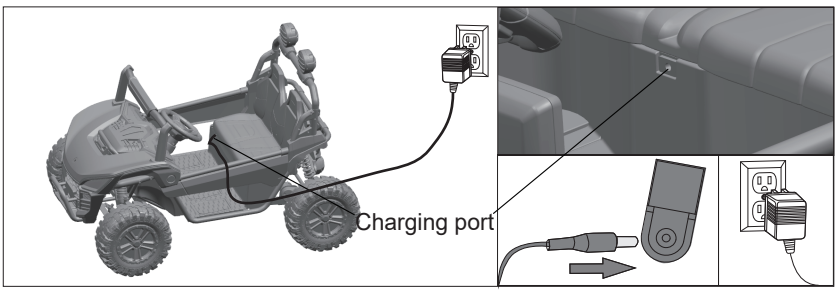

⚠ WARNING:

1. The toy is to be assembled by an adult. In unassembled state, it contains potentially hazardous sharp points & small parts, so please keep out of baby's reach.
2. CHOCING HAZARD – Small parts.
3. Not for children under 3 yrs.
4. Always wear shoes.
5. RISK OF FIRE. Do not bypass. Replace only with circuit protection device.
6. Protective equipment should be worn. Not to be used in traffic.

Attention:

● Can only use the charger and battery specified by the manufacturer.
● Do not mix old and new batteries or different battery types.
● Avoid short-circuiting the battery terminals.
● Do not disassemble the battery or charger.
● Insert the battery correctly (do not reverse polarity).
● Before charging, inspect the charger, battery, and plug for damage. If any part is broken, stop use immediately and repair before further operation.
● The battery may become slightly warm during charging—this is normal. If no warmth occurs, check for charger or circuit board short circuits.
● Secure the battery with the provided pressing plate.
● Dead batteries must be handled by adults: Remove exhausted batteries from toys and recycle properly. Do not dispose of them carelessly.
● For long-term storage:
Fully charge the battery before storing.
Recharge every 3 months to maintain battery health.
Warning: Chargers and batteries are not toys. Keep them away from children.

MAINTENANCE AND SERVICE

1. Before use, parents should check whether all parts including batteries, charger, wires, plug, outer body and other components are in good condition. Verify whether the screws are loose and whether there are potential safety hazards. Any damaged parts found should be repaired before use.
2. After using the product for a period of time, apply a small amount of lubricating oil to the moving parts to prevent rust and wear.
3. Keep the car away from fire and direct sunlight. Store it stably in an upright position. The car shall be stored in indoor or under covered outdoor areas.
4. The car should be kept away from heat sources such as stoves or heaters, as plastic parts may melt. During charging, keep the car away from flammable materials to prevent fire hazards.
5. Recharge promptly after use. Charging should always be done by adults. If the product will remain unused for a long time, ensure it is fully charged and recharge it periodically every month to extend battery life.

6. A soft cloth must be used to clean the car. Do not use chemical solvents to clean the plastic parts. Do not use soap or water to clean the car. Driving in rainy or snowy weather, water can damage the motor, battery and circuit system.
7. When stopping or storing the car, please cut off the power and make sure all switches are in the "STOP" or "OFF" position.
8. Do not use fuses different from the specifications of this product.
9. Do not change the product structure and circuit system. Maintenance and repair work must be done under the guidance of the professional or technical personnel in place.
10. Do not use the product for other purposes. Put the battery in the right polarity.
11. Battery negative short circuit is prohibited. Non-rechargeable batteries cannot be charged.
12. Rechargeable batteries can only be charged under the supervision of an adult.
13. Do not mix old and new batteries or different types of batteries.
14. The battery running out of power should be removed from the car properly and not allowed to be played by children.
15. Disconnect the batteries completely when not in use and do not allow children to play with them.

Fault and Solutions:

Type of fault	Analysis of causes	Solutions
Can not move	1. Voltage is below normal level	Charge the battery
	2. Safety wire protects	Wait for a while
	3. The screw on the wheels have fell off	Tight the screw again
	4. The battery connector has fallen off	Come on again
	5. Battery is damaged	Change the battery
	6. Electrical equipment is damaged	Contact the seller or Customer Service
	7. The motor is damaged	Contact the seller or Customer Service
The battery cannot be charged	1. The battery connector has fallen off	Plug into again
	2. The charger is broken	If the indicator light of the charger keeps showing red and never turns green, please contact customer service to get a new charger.
	3. The battery charger is damaged	Change the battery charger
	4. The charging port is broken	When the charger is plugged into the wall plug or socket, but the green light of the charger is always on (the battery has run out of power at this time), please contact customer service to get a new charging port.
Short run time	1.Battery is not full	Charge the battery again
	2.Battery is old	Change the battery
Some noise and heat, when charge the battery	1.Chemical reaction	Normal
Low speed	1. Battery is old	Change the battery
	2. Battery is out of power	Charge the battery again
	3. Overweight	Lighten the weight to less than66 lbs
	4. Driving conditions are stressful	Use only on general-level ground
Gear case with noise	1. Gear is broken	Contact the seller or Customer Service
The car shakes when it goes forward	1. Bad connection of the motor connector wires	Please reconnect all connector wires
	2. Something wrong with the motor	Contact the seller or Customer Service
Drive without music	1. Electrical equipment is damaged	Contact the seller or Customer Service
For assistance, please send an Email to: anpabo.service@gmail.com.		

⚠ WARNING:
This toy contains batteries that are non-replaceable.
A recommendation for adult supervision of young children.

⚠ WARNING:
To reduce risk of injury, adult supervision is required.
Never use in roadways, near motor vehicles, on or near steep inclines of steps, swimming pools or other bodies of water, always wear shoes, and never allow more 2 riders.
Only use the specified by the manufacturer battery.
Only use the charger specified by the manufacturer.

Battery Disposal



The battery will eventually lose the ability to hold a charge. Depending on the count of use and varying conditions, the battery should operate for one to thrgee years.

Important! Recycle the dead battery responsibly. The battery contains lead (electrolyte) and must be disposed of properly and legally, It is illegal in most areas to incinerate lead acid batteries or dispose of them in landfils, Please take it to your local approved recyeling centre or a battery retailer for safe disposal.

Do not throw the battery away with your regular household waste!

⚠ WARNING:

Assembly by an adult
Maximum capacity: 60kgs (132 lbs)

- This toy contains batteries that are non-replaceable.
- Rechargeable batteries are only to be charged by adult.
- Instructions to be given to the child in the proper use of the toy, particularly in the use of any braking system
- A reminder that the toy should be used with caution since skill is required avoid falls or collisions causing injury to the user or third parties.
- Exhausted batteries are to be removed from the toy.

EXECUTION STANDARD:
EN 71 EN62115 ASTM F963 CPSIA