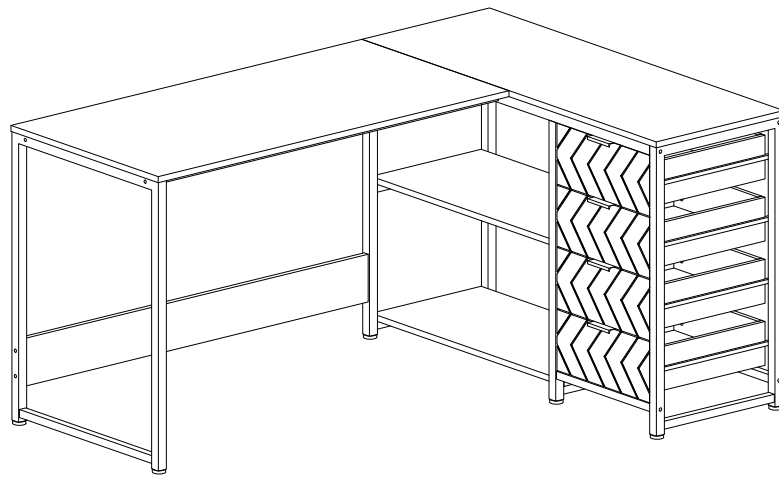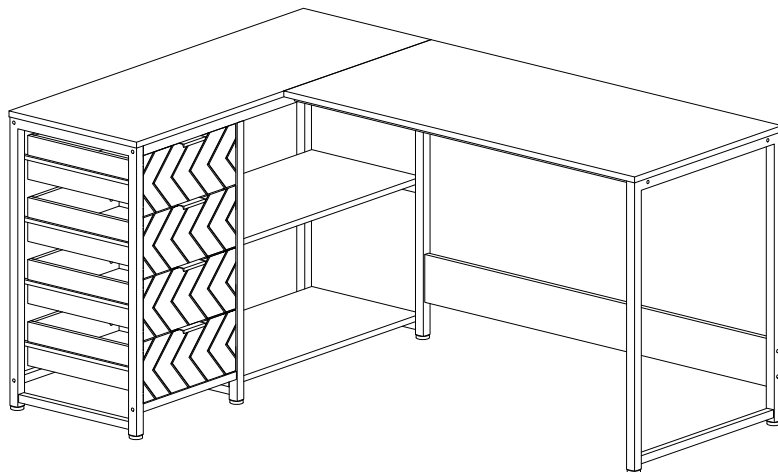# Assembly Instructions

## L-Shaped Desk

STYLE 1

STYLE 2

Contact Us
We're here to help you.

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
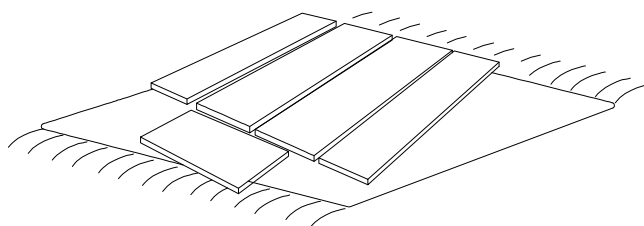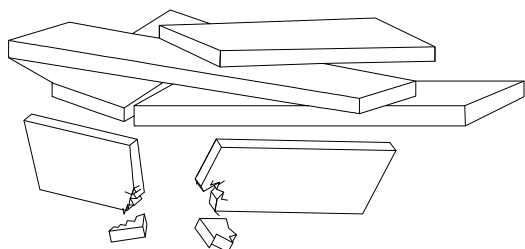4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

X2
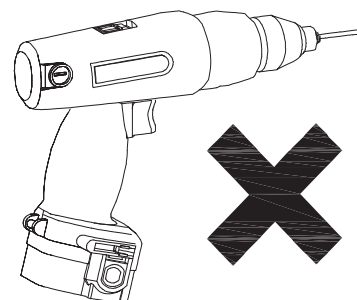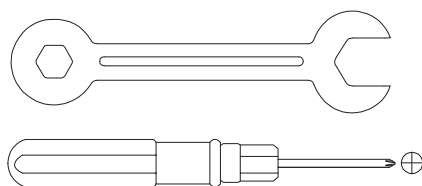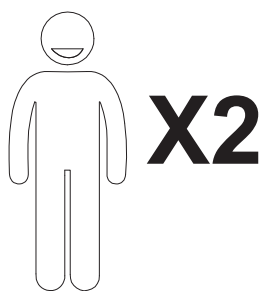
We recommend using hand tools for assembly.

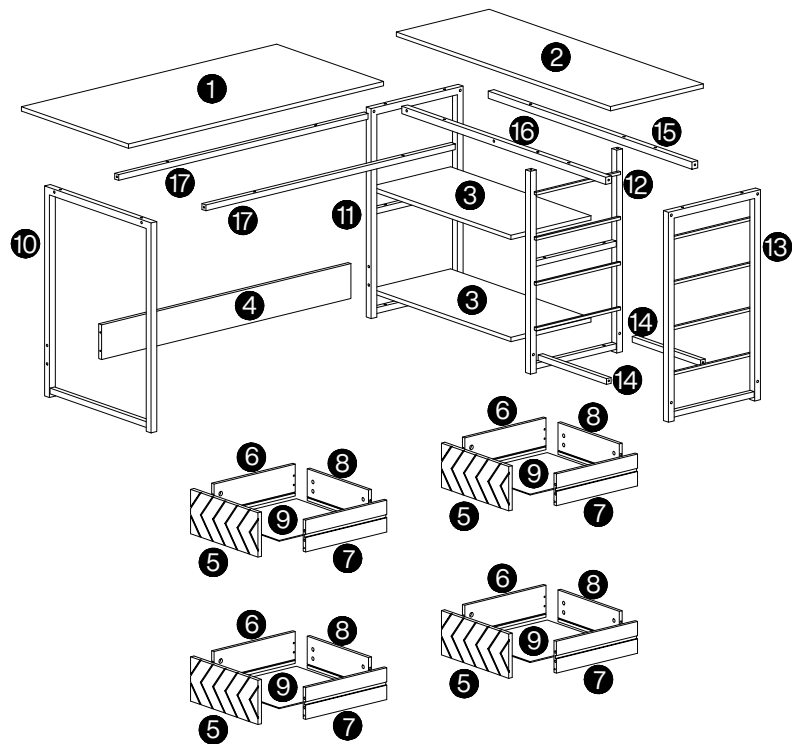If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

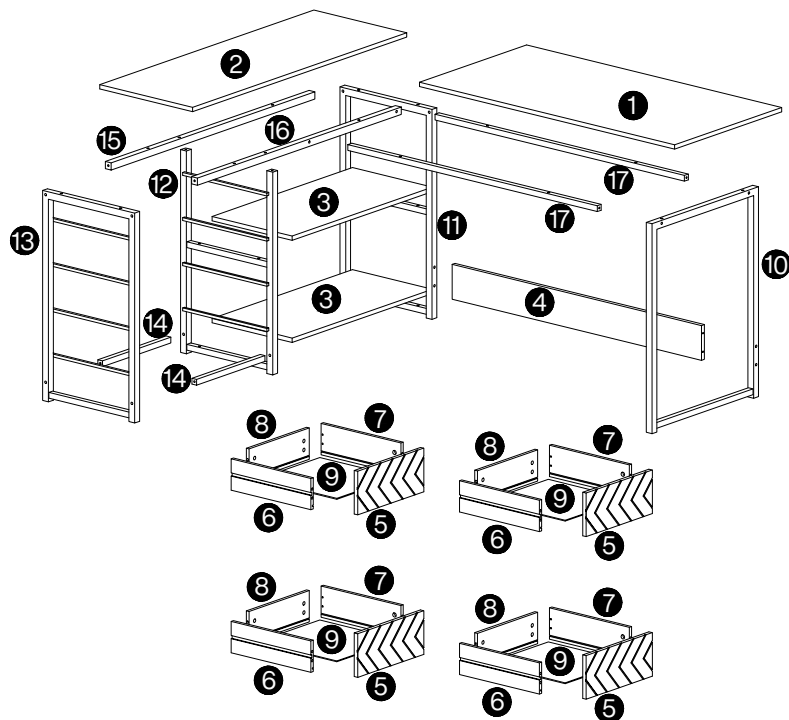**?**
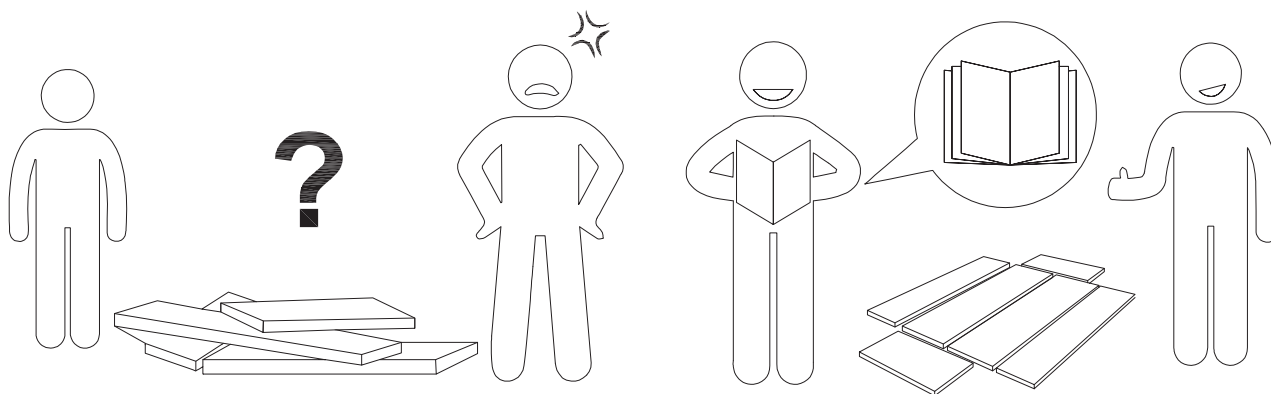
AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.
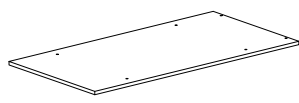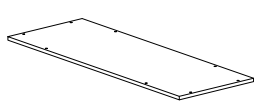
STYLE 1

STYLE 2

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.

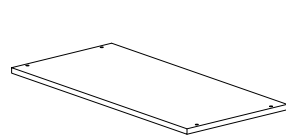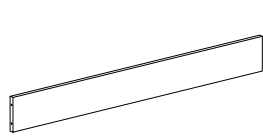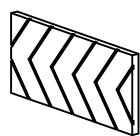Contact us for a free replacement if you encounter any damaged or missing parts.
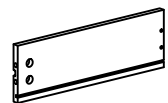
Parts List
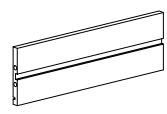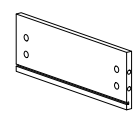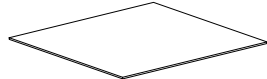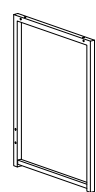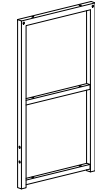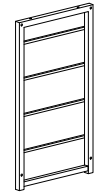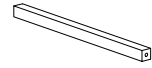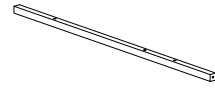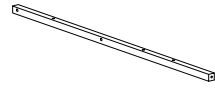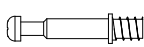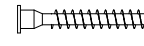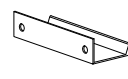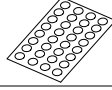
1 1 pc	**2** 1 pc	**3** 2 pcs	**4** 1 pc
5 4 pcs	**6** 4 pcs	**7** 4 pcs	**8** 4 pcs
9 4 pcs	**10** 1 pc	**11** 1 pc	**12** 1 pc
13 1 pc	**14** 2 pcs	**15** 1 pc	**16** 1 pc	**17** 2 pcs

Hardware List
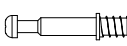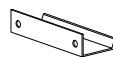
A	X32+1	B	X32+1	C	X12+1	D	X10+1	E	X12+1	F	X2+1
Ø6X35 mm		Ø15X10 mm		M6X30 mm		M6X35 mm		M6X45 mm		M6X45 mm	

G	X4+1	H	X1	I	X8+1	J	X4	K	X8	L	X32
Ø7X57 mm		M4X55 mm		3.5X14 mm		80X32X17 mm		M6XØ32 mm		Ø20 mm	

1

A

A A A

A A A A

A A

⑤ ⑥ ⑦

B
B
⑧ ⑦
B
⑥ ⑨

⑤
B
B
B
J
I I

X4

A	X32	B	X32	I	X8	J	X4
Ø6X35 mm		Ø15X10 mm		3.5X14 mm		80X32X17 mm	

2

⑩ K K

⑪ K K

K

⑫ K K

⑬ K K

K	X8
M6XØ32 mm	

3

STYLE 1

E
E
E
⑪
⑯ F
F
⑮
F
H
Concave hole
facing up
⑫
E
E
⑭
⑭
E
⑬
⑭
E

STYLE 2

F
H
Concave hole
facing up
⑮
F
F
⑯
E
E
E
E
⑪
⑫
⑬
E
⑭
⑭
E
E
⑭
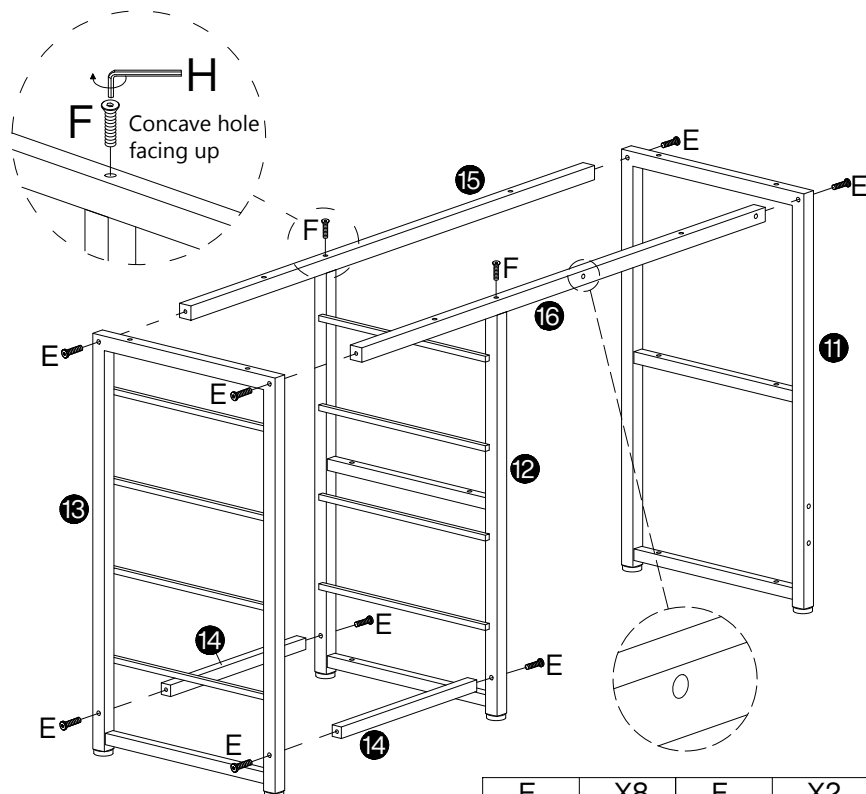
E	X8	F	X2	H	X1
M6X45 mm		M6X45 mm		M4X55 mm	

4

STYLE 1
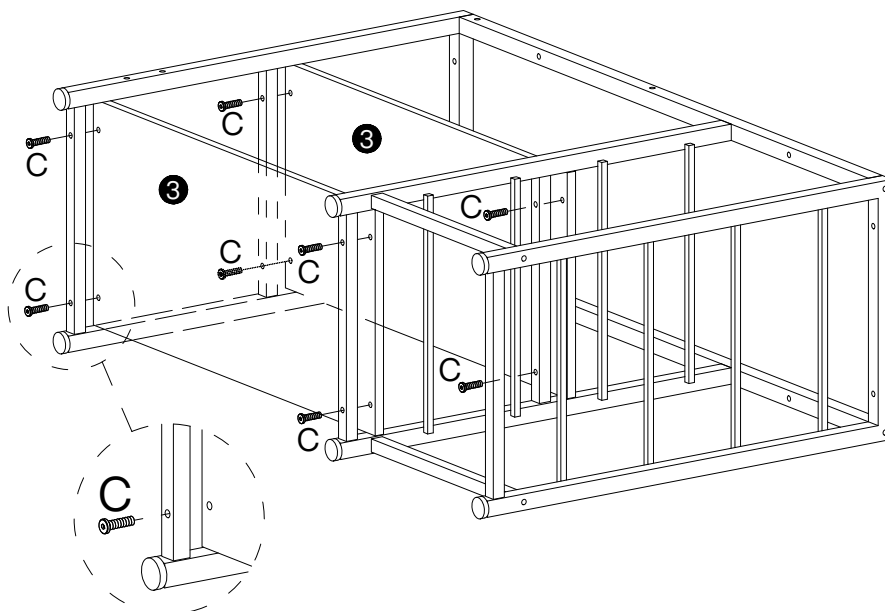
STYLE 2
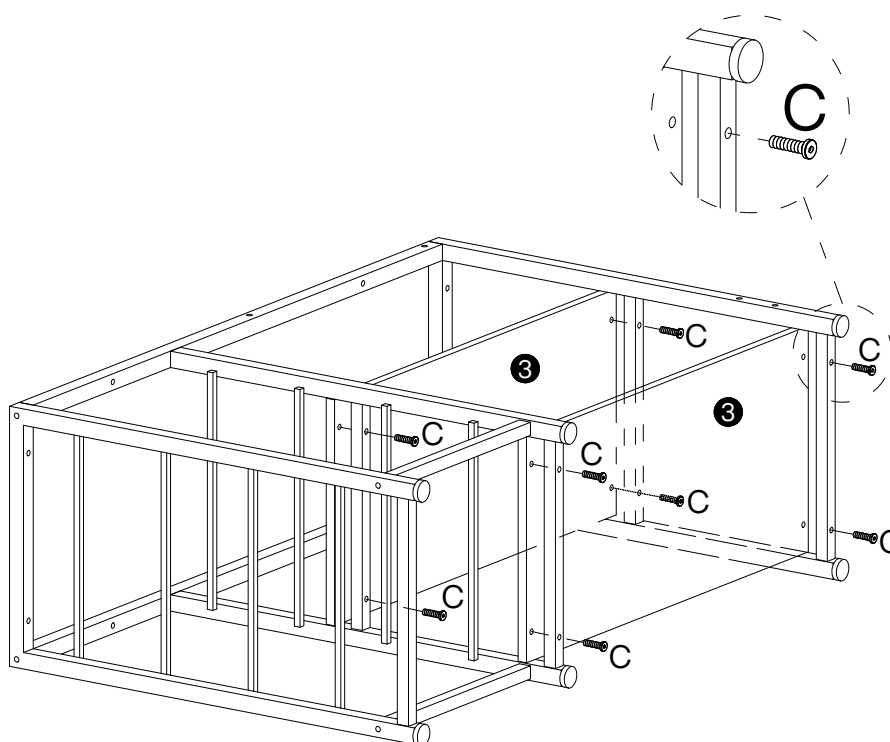
C	X8
M6X30 mm	
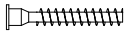
5

STYLE 1
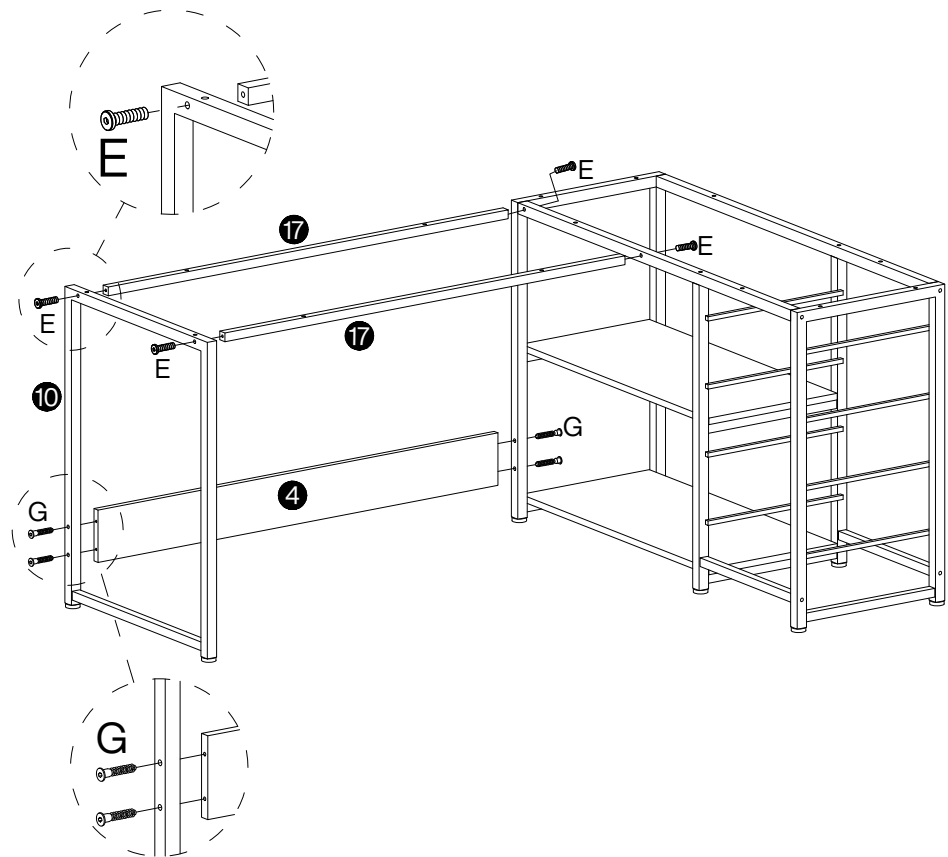
STYLE 2
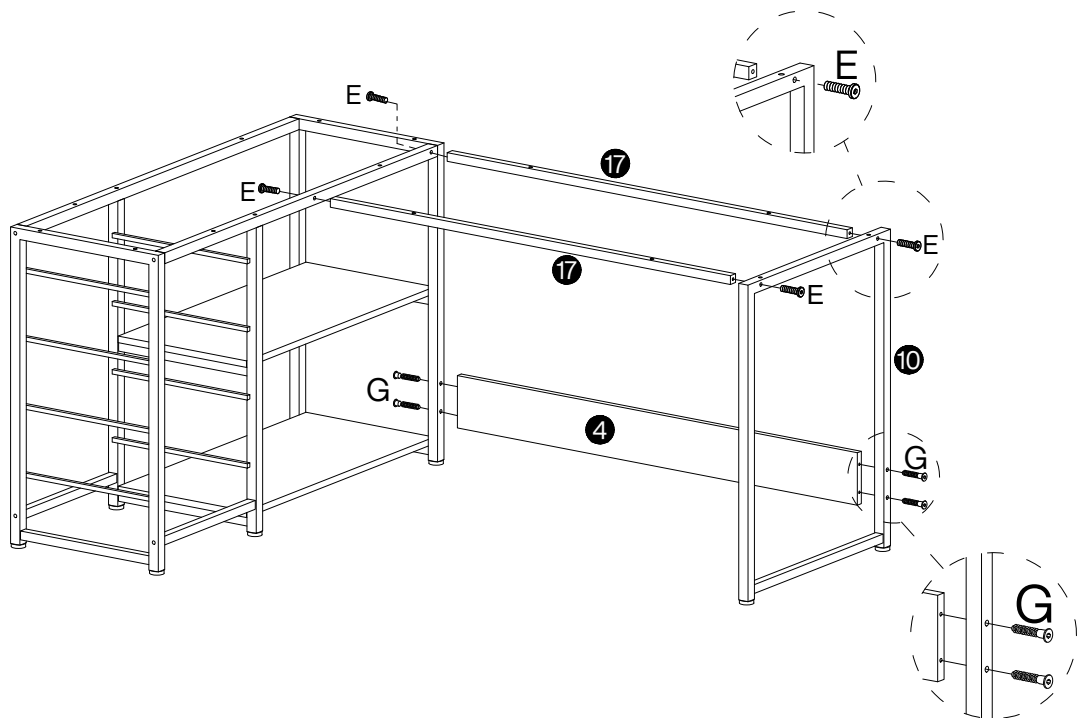
E	X4	G	X4
M6X45 mm		Ø7X57 mm	

6

STYLE 1
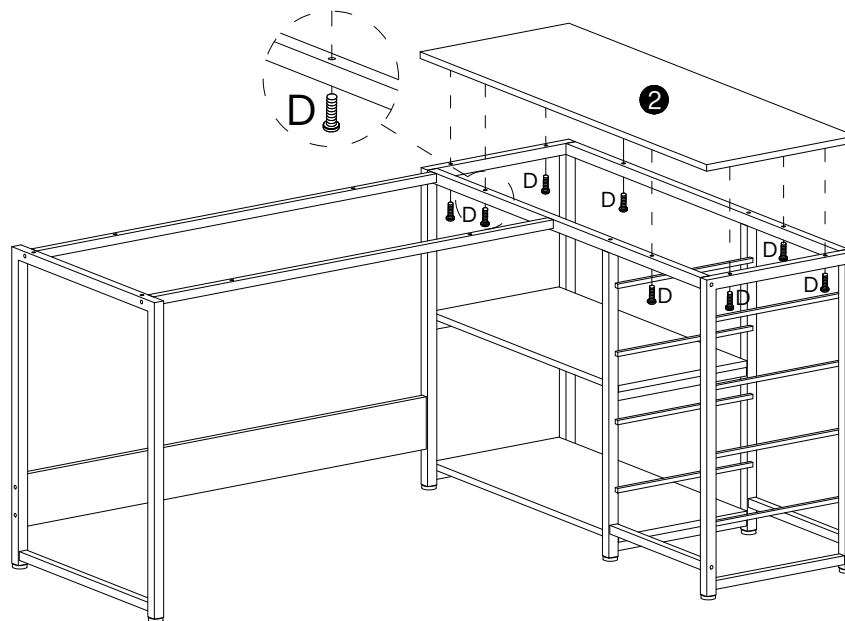
STYLE 2
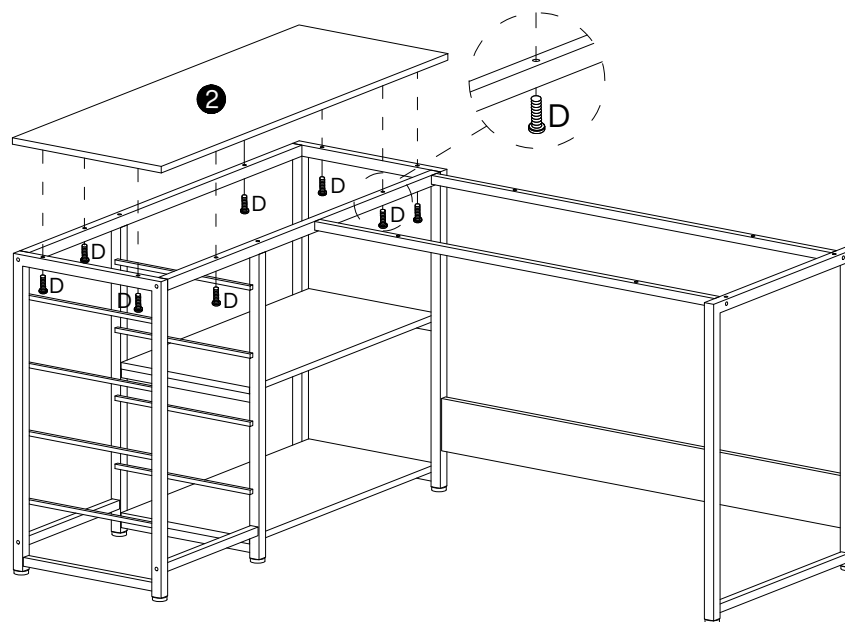
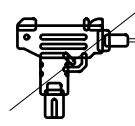| D	X8
M6X35 mm	

7

STYLE 1

Do not use electric screwdriver
Avoid screws punching through the board

①

C
C
D
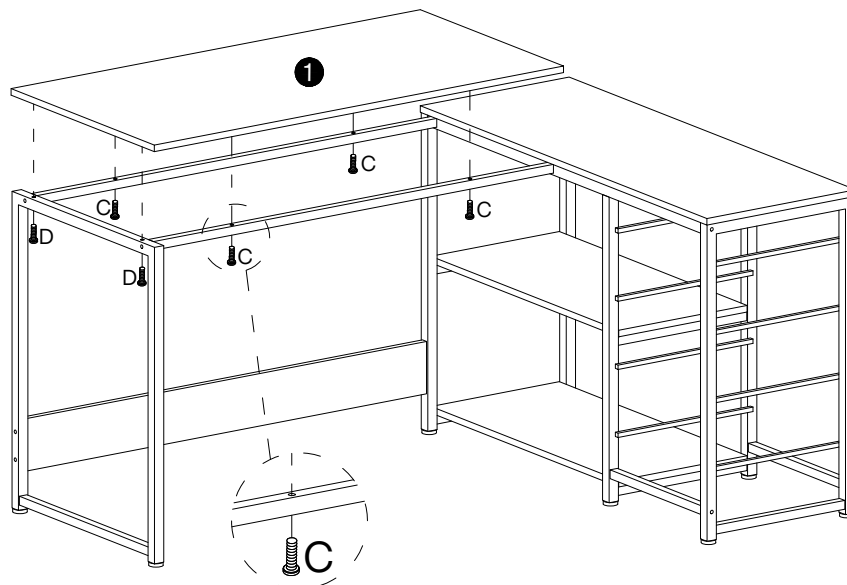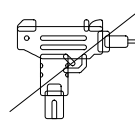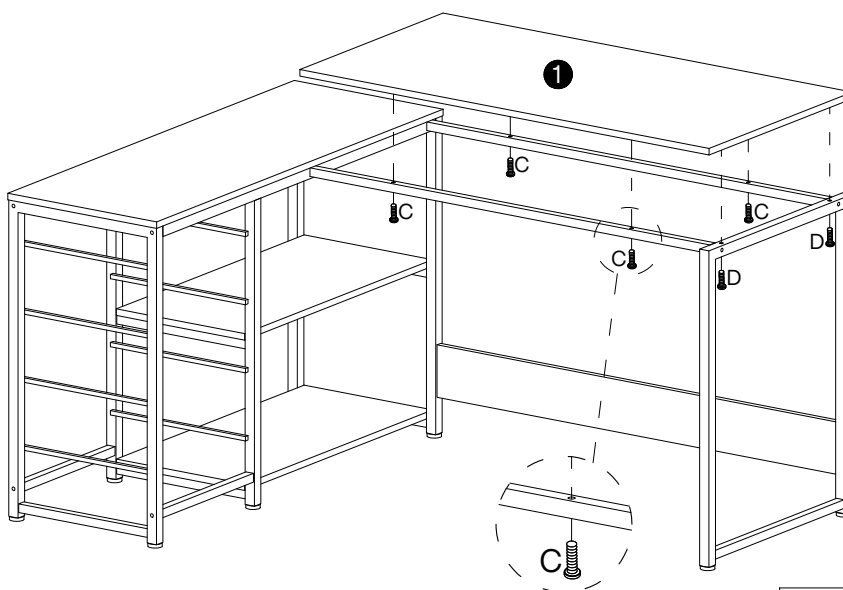D
C
C

C

STYLE 2

Do not use electric screwdriver
Avoid screws punching through the board

①

C
C
C
C
D
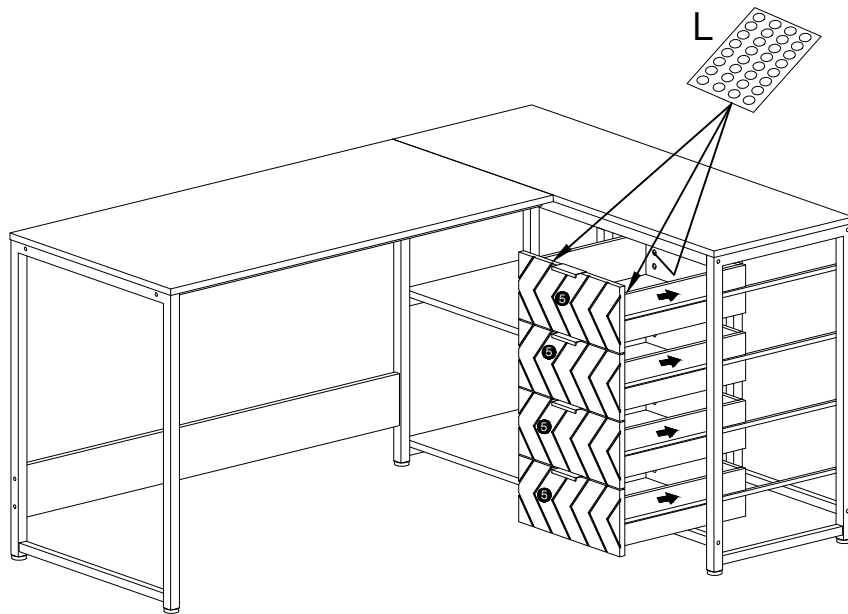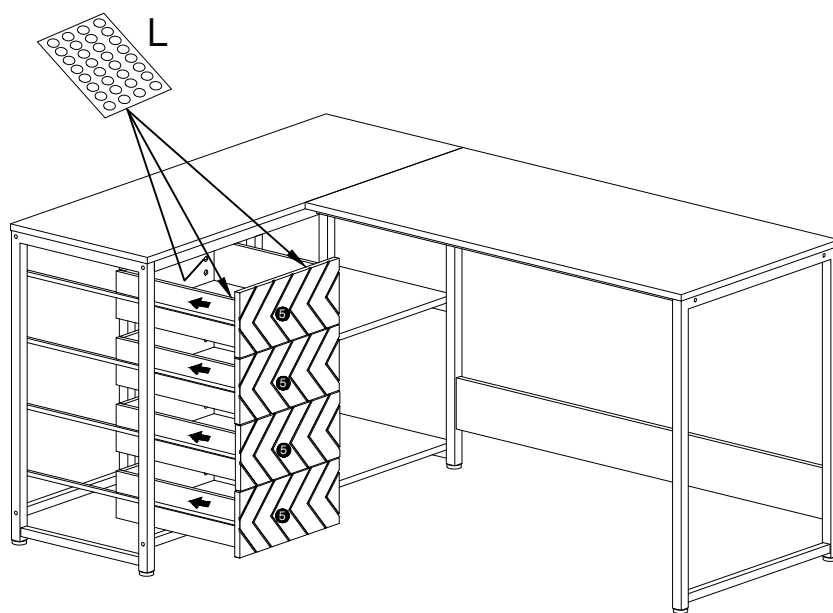C
D

C

C	X4	D	X2
	M6X30 mm		M6X35 mm

8

STYLE 1

L

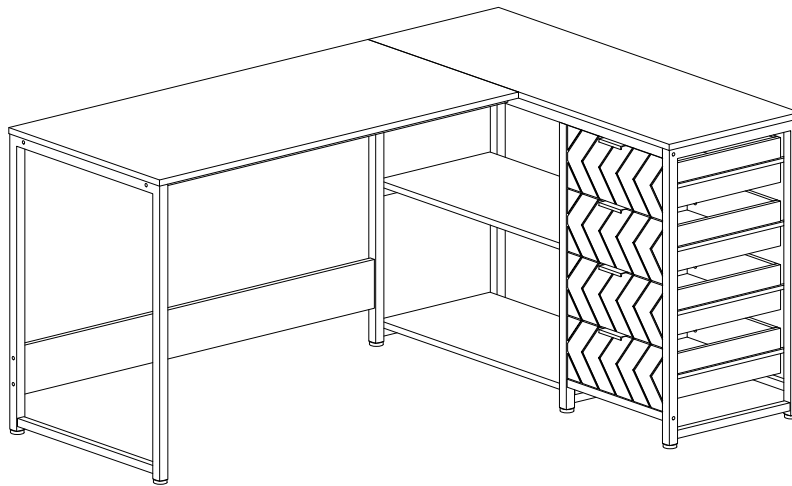⑤ ⑤ ⑤ ⑤

STYLE 2

L

⑤ ⑤ ⑤ ⑤

L	X32
Ø20 mm	

Thank you for your support!

STYLE 1

STYLE 2