Massage Chair

Product Parameters.

Product Name: Massage Chair

Power:110V-240V~
Frequency:50Hz/60Hz
Power:120W

User Manual

Wake words	Hi Massage chair		Wake up Basket		Thank you for using
1	Start Massage	10	Release Air	19	Last Song
2	End Massage	11	Start Foot	20	Next Song
3	Increase Massage	12	End Foot	21	Pause Playback
4	Reduce Massage	13	Back Up	22	Continue Playback
5	Increase Time	14	Back Down	23	Pause Massage
6	Reduce Time	15	Back End	24	Continue Massage
7	Start Heat	16	Stand Up	25	Continue Music
8	End Heat	17	End Air	26	Good Bye
9	Increase Air	18	Sleep Mode	27	Wake Zero

WARNING

1. Be sure to disconnect the power cord from the electrical outlet before cleaning.
2. When cleaning the remote control or power switch, use a dry cloth only. Never use a damp cloth to clean any electrical components.

Caution

1. Be careful not to damage or scratch any small, inconspicuous part of the product when cleaning. Handle other delicate fabric prior to using the solution on the entire product surface.
2. Do not use benzene, thinner or any other solvent on your product.
3. Cleaning Code Standard for Soft Hide or Cloth: W
4. To maintain your product in optimum condition, dust it frequently and/or vacuum it with a soft brush vacuum attachment. If your product becomes dirty, use a commercial upholstery cleaner only. To lift stains, spot clean with an upholstery shampoo or a mild detergent foam.

Analysis and elimination of common faults

Problem	Causes	Solutions
Massage product doesn't operate	Circuit breaker (Power) Button is not turned on	Circuit breaker (Power) Button is not turned on
	Power cord is not properly plugged in	Properly plug power cord into outlet
	Dirty connections	Please contact Customer Support
	Burnt fuse	Please contact Customer Support
	Non-electrical problem	Please contact Customer Support
Massage product turns off in use	Due to overheat issue of appliance	Wait for three minutes and then turn on again
	After prolonged hours of use	Wait for 30 minutes and then turn on again
	Circuit breaker tripped	Please contact Customer Support
Machine suddenly stops during massage.	Accidently pressed the OFF button.	Press the (Power) button to restart the machine.
	Massage time has finished.	Restart the massage after 30 minutes.

Warning

Please follow the following instructions:

Sit Up

Press the Back-Up button to let the machine stand up.

Back Up

Press the Back-Down button to let the machine lean down.

Stand Down

Press the Back-Down button both and the machine will lean down to the massage chair.

Airbag Massage

Press the Airbag Massage button to use the airbag massage.

Start

Press the start button to start or pause massage.

Zero Gravity

Press the Zero Gravity button to enter the zero gravity mode.

Timing

Press the timing button to set the massage time for 30 minutes.

Roller Massage

Press the roller massage button to choose roller massage function.

- Turn the switch on the back of the chair.
- Before use, please carefully read the safety instructions in the user manual. In the unlikely event of a fire, please disconnect the power plug immediately.
- Keep Owner's Manual for future reference.

Contents

- Notice Reading Warnings 1-3
- Name of Each Part 4-5
- Product Parameters 6-7
- Installation Method 8
- Massage Procedure 9-10
- Care and Maintenance 11
- Troubleshooting 12

- The power outlet must be installed before functions can be selected.
- Carefully read the massage instructions before attempting to use the massage chair and follow the safety instructions.
- Please don't let children ride the massage chair unattended.
- When using the massage chair, you should adjust the strength of the chair massage to suitable intensity. Too much or too little strength will cause injury. Strength should be adjusted according to gender, age, and weight. Generally, the massage strength and frequency should be from low to high, from light to heavy.
- When a child is in the chair, it should not be just left alone. In addition to massaging, you should be careful and attentive.
- Patients with heart disease, hypertension, osteoporosis, cold skin, damaged skin, bleeding, hernia, nodules and tumor. People who are the happy drunk, too anxious or too tired or are taking medicine.
- In order to avoid injury, do not shake and/or twisting during use. Do not use the massage chair as other effects. Do not use the chair to do other things.
- Do not use the massage chair in bathroom or other damp environments. Do not expose the chair under the sun.
- Please do not insert any article into the chair. Do not use the chair to carry other things, or injury may occur.
- If you feel any discomfort during massage, please stop immediately.
- This product is not used for medical treatment. Though it has the function of massage, it should be used under the professional medical treatment.
- Do not use this product if you have had medical treatment for less than 1 year.
- Use the massage chair to massage the massage time. Each massage should be 15 minutes, and each action should not exceed 5 minutes. Don't let the chair continuously for long time, it may cause overheating and damage the chair.
- Do not use the chair to do other things.
- Do not massage elbow, knee, chest, abdomen directly.

Power On

Press the power button to turn on the massage chair.

Power Off

Press the power off button of the massage chair.

Manual Mode

Press the manual mode button to select massage technique settings.

Auto Mode

Press the automode button to select the auto program massage.

Airbag intensity

Press the airbag intensity button to adjust the airbag intensity.

Footroller

Press the footroller button to adjust the foot massager unit.

Roller Up

Press the up button to select the massage roller up adjustment.

Roller Down

Press the down button to select the massage roller down adjustment.

Spot Massage

Press the spot massage button to select fixed massage part adjustment.

Width

Press the width button to select width adjustment.

Massage Intensity

Press the massage intensity button to select the massage intensity.

AI

Press the AI button to select AI massage mode.

Step 1:

Open the package and remove the base and the chair.

Step 2:

Use zipper ties to secure the pillow pad to the headrest.

Step 3:

Insert the handle bar (wire) power cord into the connector on the basket then turn on the power. Turn on the power switch and the chair is ready.

① Disassemble in reverse order.
Integrated packaging, first construction, and then put down the leg rest to use.

2. Turn off and unplug the power.
Wait until the leg rest is in the back and both hands are in the armrest and roller set into the back.

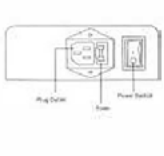

Recommended Installation Steps

Step 1: Insert the power cord into the outlet and the socket.
Step 2: Turn on the power switch and the chair will be ready.
Step 3: Insert the remote control into the socket.