


ASSEMBLY INSTRUCTIONS
36 INCH MIRROR CABINET

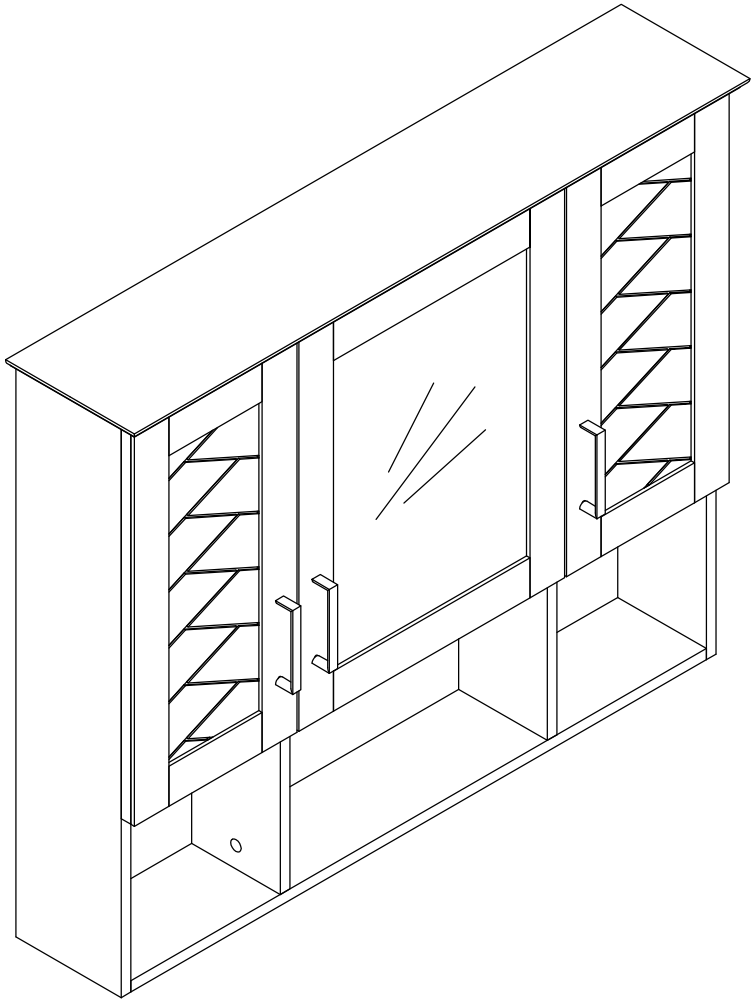


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.
"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

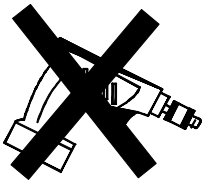

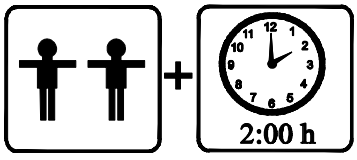

Tools Required


(Not included)


(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!!
We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation

Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

. We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.


. Please do not over tighten screws or bolts until the assembly is completed.

. Keep children and animal away from the work area, small parts could choke if swallowed.


. Please put all parts on a non-abrasive floor before assembly,and follow the assembly steps to assemble your newly purchased product correctly and efficently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions















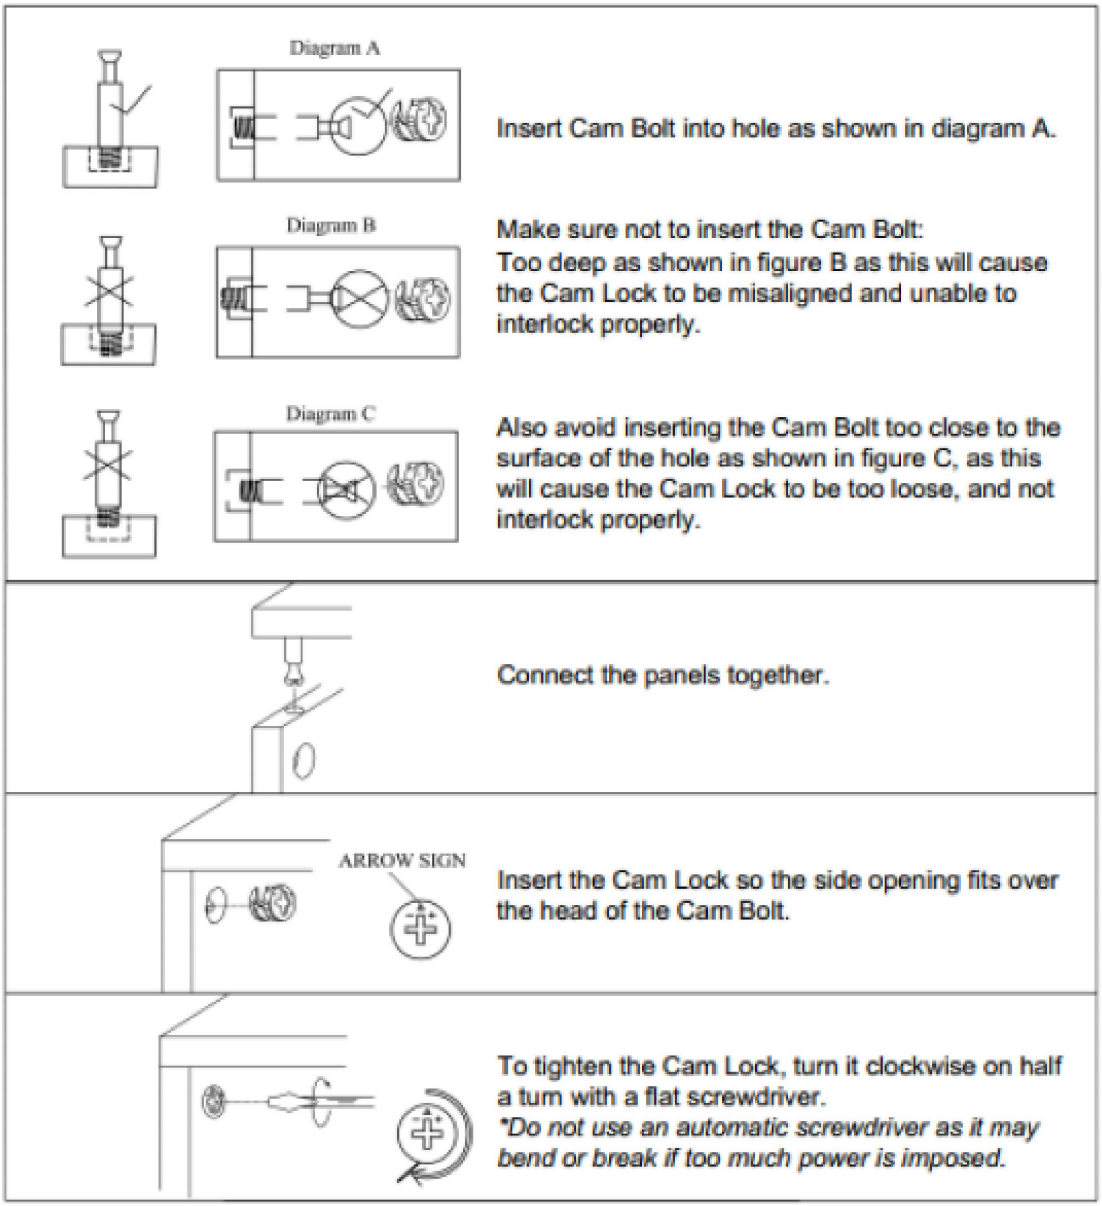


Detail View - CABINET









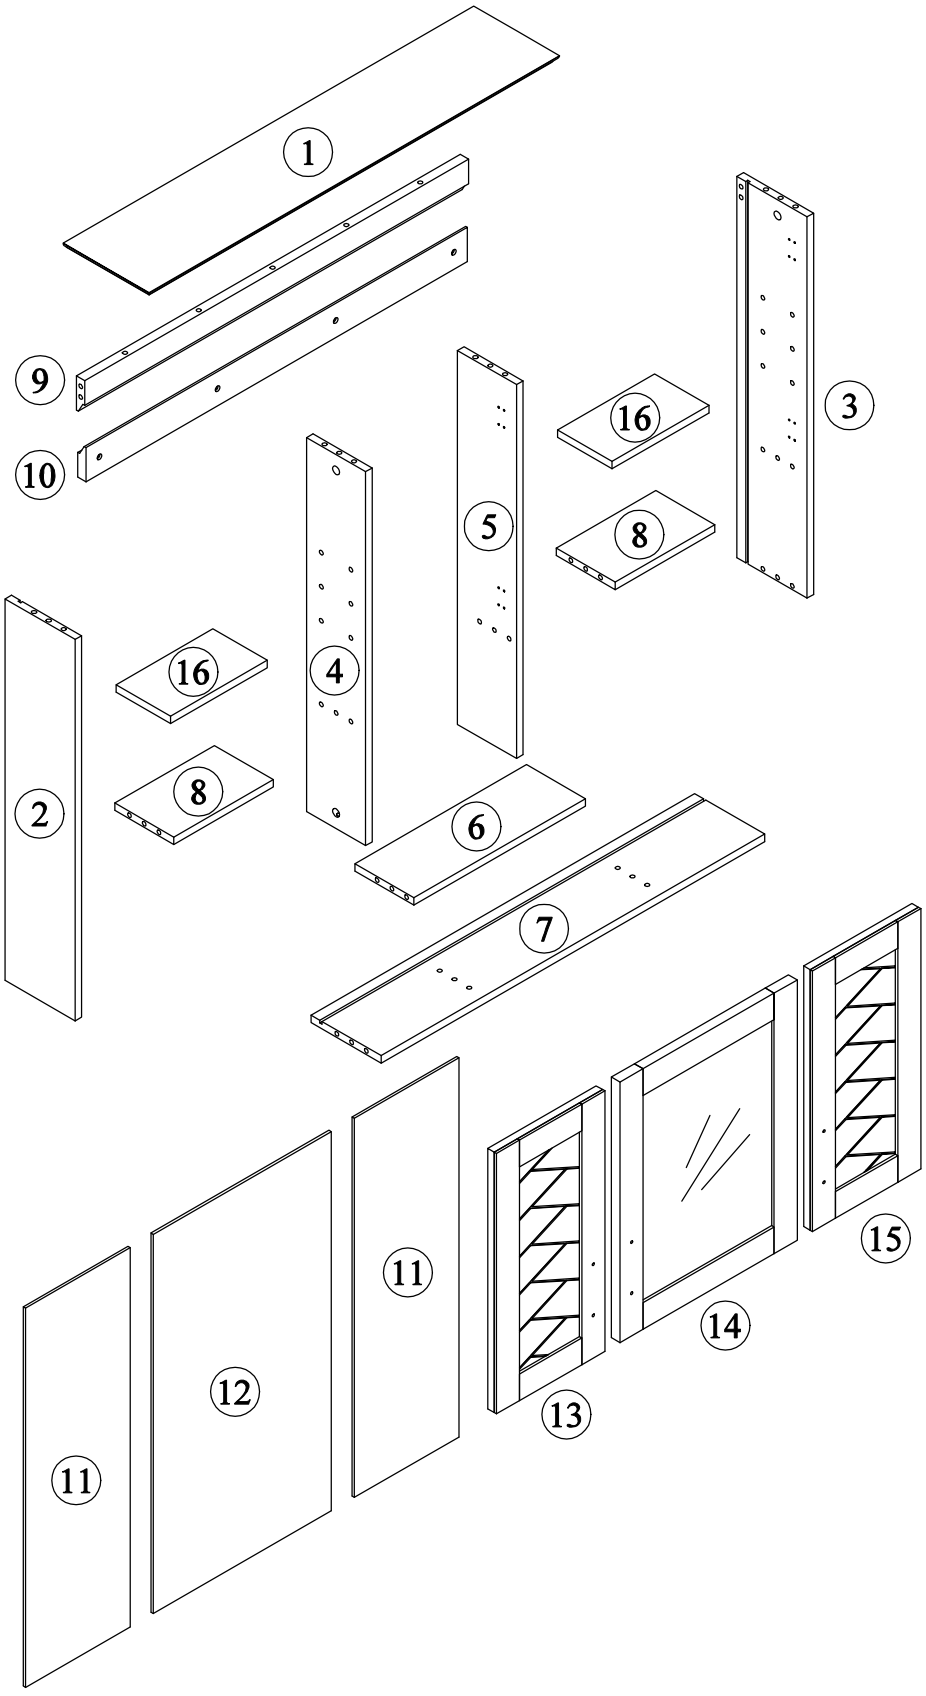


Identifying the Hardware-Identify the hardware using the illustrations below.


Part List

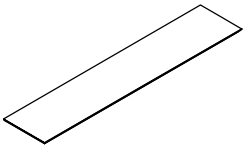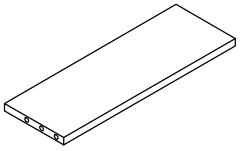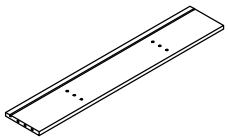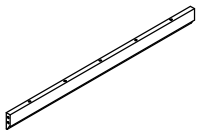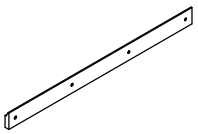
1  Top Panel - 1pc	2  Side Panel Left - 1pc
3  Side Panel Right - 1pc	4  Mid Panel Left - 1pc
5  Mid Panel Right - 1pc	6  Mid Panel - 1pc
7  Bottom Panel - 1pc	8  Mid Panel Leff +Right - 2pcs
9  Rear Top Bar - 1pc	10  Connect Bar - 1pc
11  Back Panel Left+Right - 2pcs	12  Back Panel Mid - 1pc
13  Door Cabinet Left - 1pc	14  Door Cabinet Mid - 1pc
15  Door Cabinet Right - 1pc	16  Adjustable Shelf Left - 2pcs


Hardware List

A  ø6x35mm	B  ø14.5x12mm	C  ø10xø5x60mm
Three in one bolts (19pcs)	Three in one lock (19pcs)	Flat head screw (4pcs)
D  ø12x55mm	E 	F  ø5/32"x25mm
Plastic stopper (4pcs)	Handle (3pcs)	Handle screw (6pcs)
G 	H 	I  ø7xø3.5x12mm
Damping hinge (4pcs)	Damping hinge (2pcs)	Flat head screw (36pcs)
J 	K  ø8x30mm	L  ø7xø3.5x15mm
Laminate pad(8pcs)	Wood dowel (32pcs)	Round head screw(4pcs)


STEP: 1

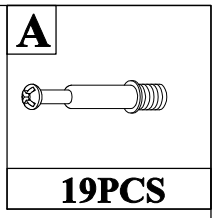


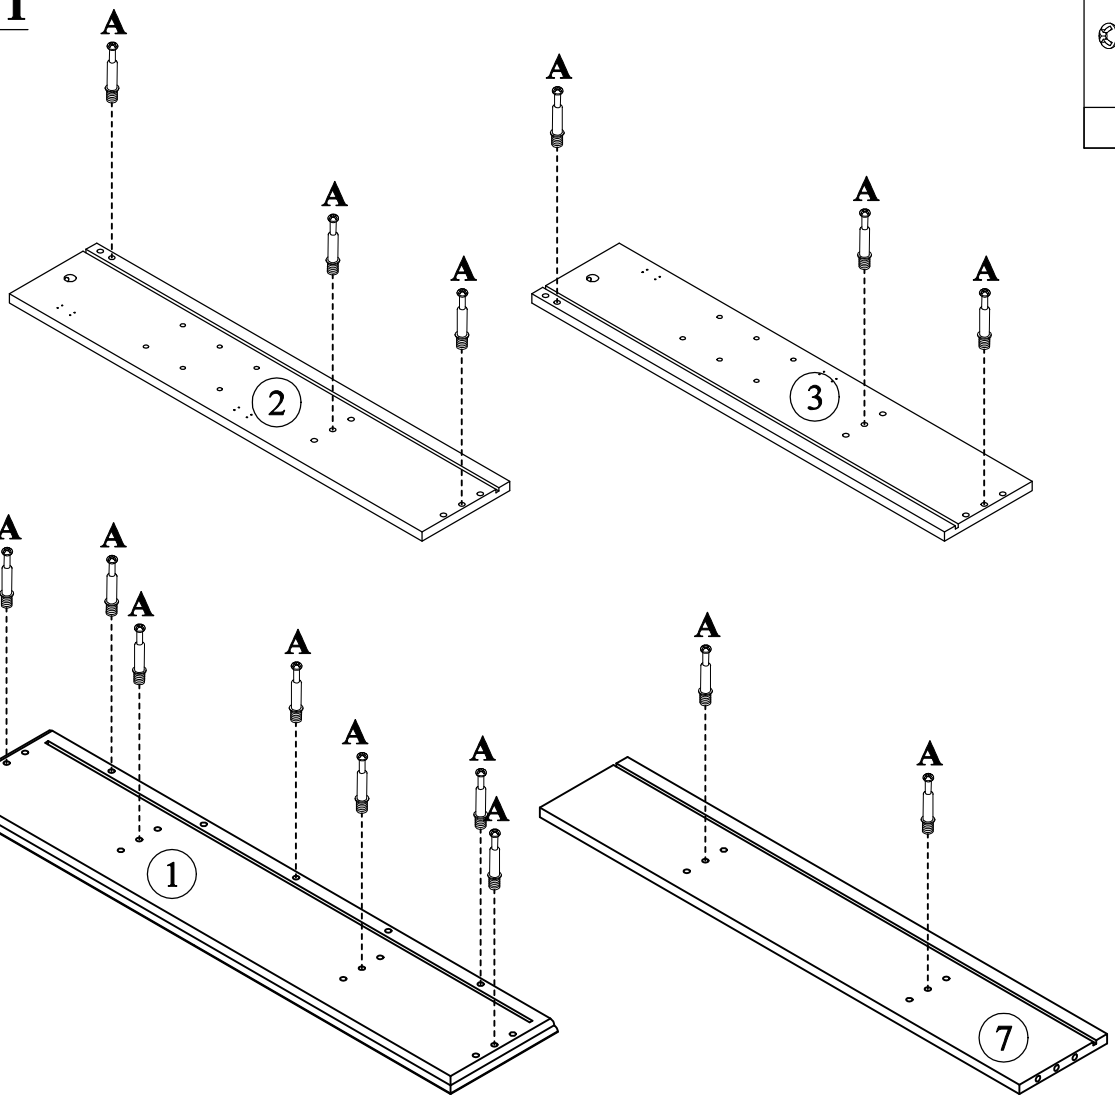

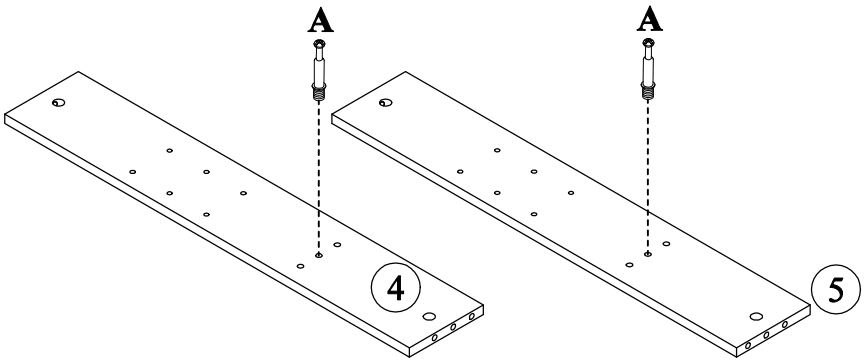



Turn over and install screw (A)

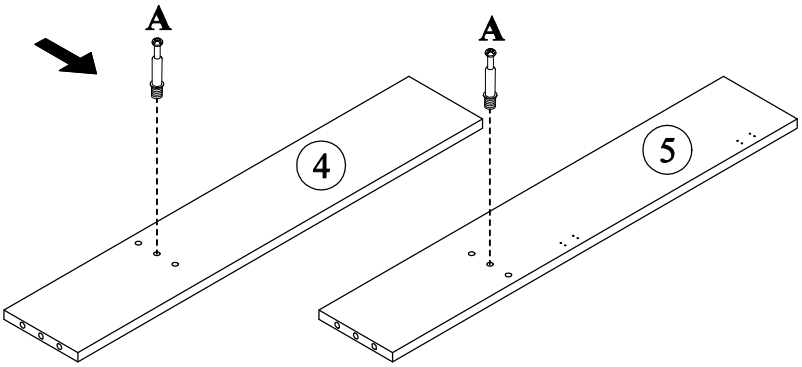


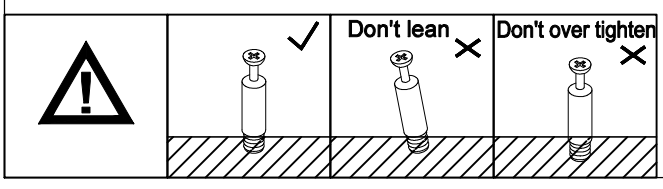

STEP: 2


B	K
	
2PCS	4PCS

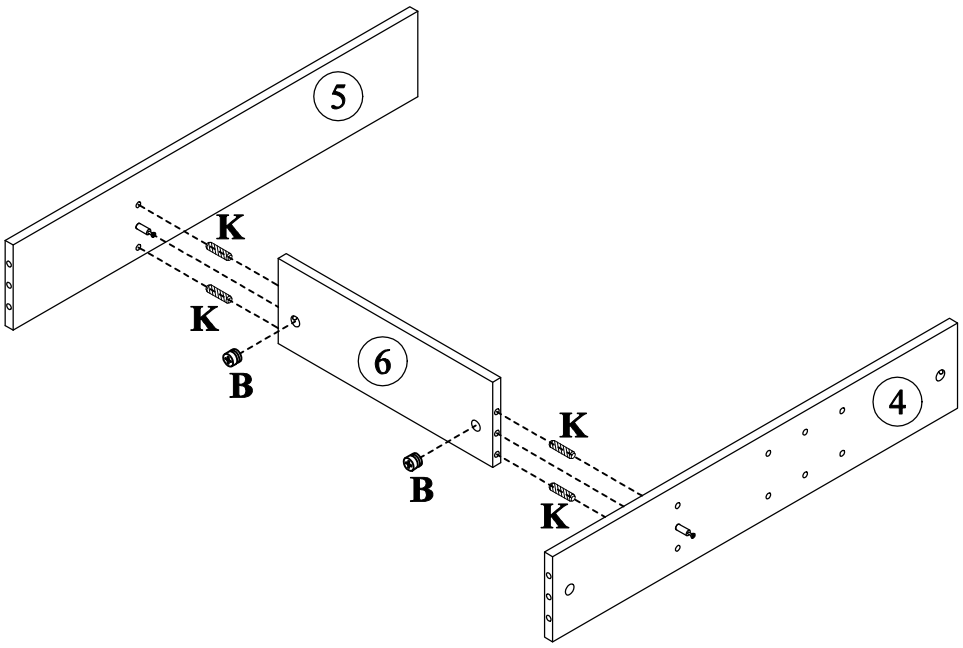

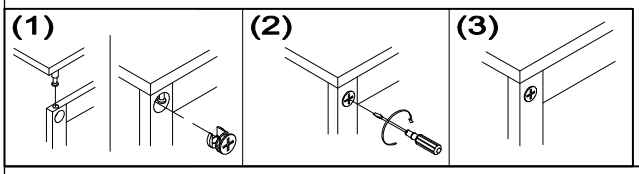


STEP: 3

B	K
	
2PCS	4PCS

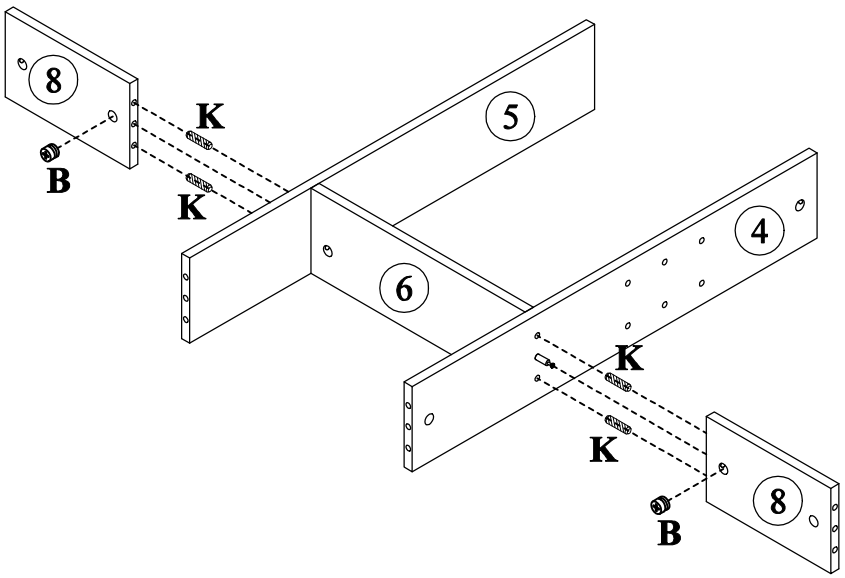


STEP: 4

B	K
2PCS	4PCS

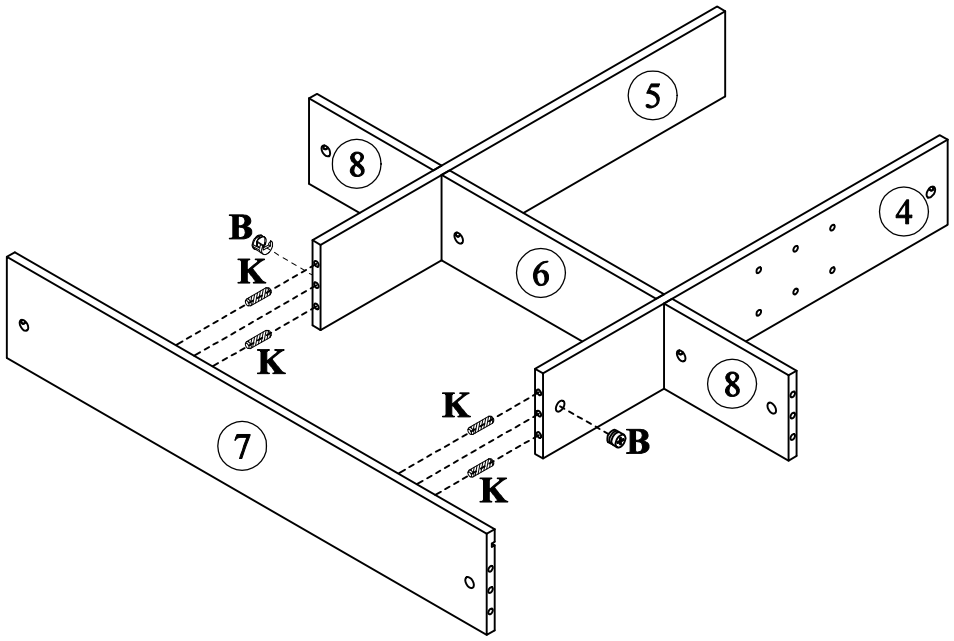


STEP: 5

B	K
6PCS	10PCS

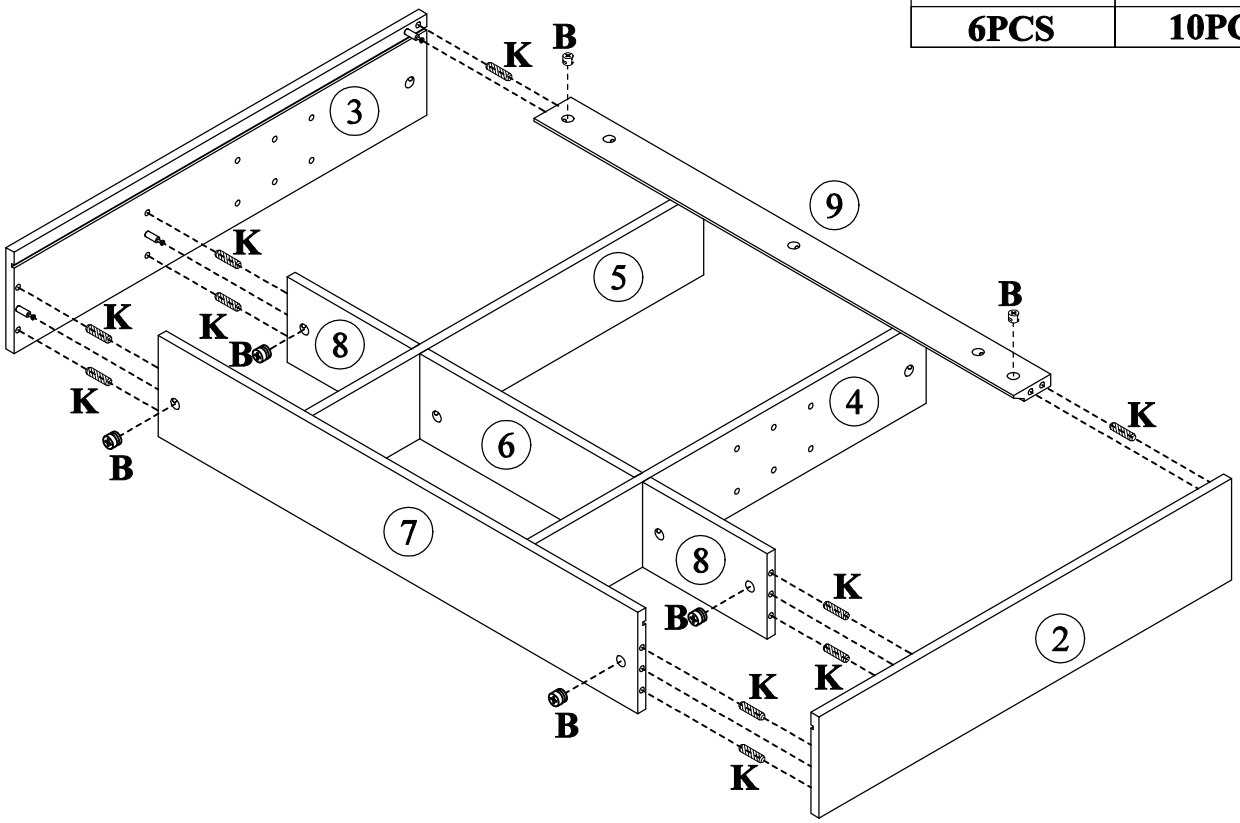


STEP: 6

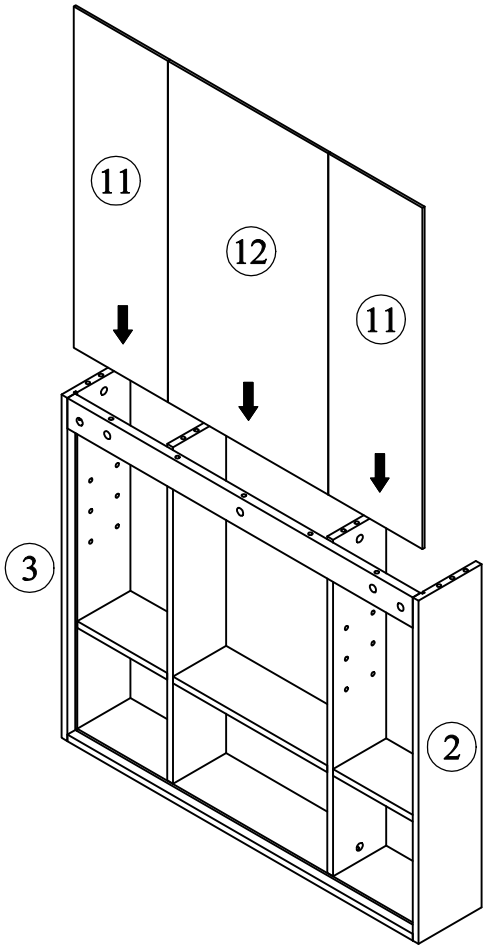



STEP: 7

B	K
7PCS	10PCS

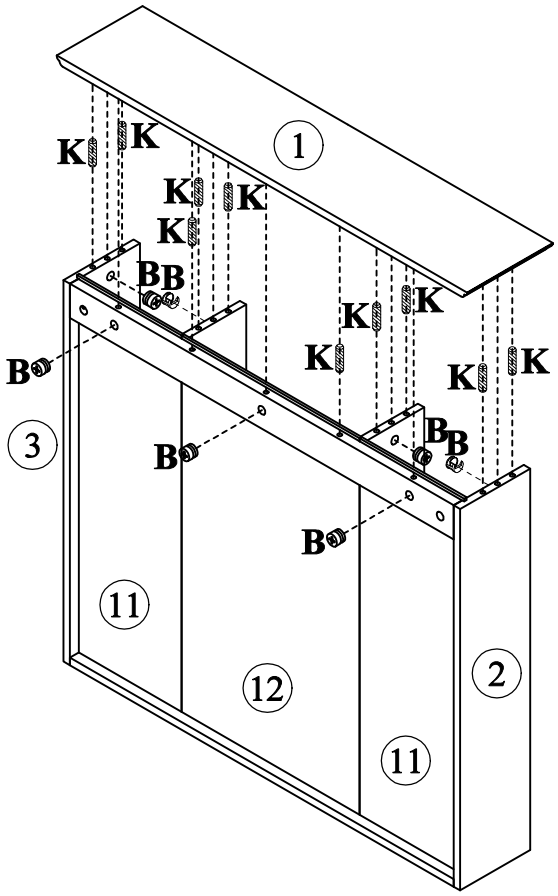


STEP: 8


L

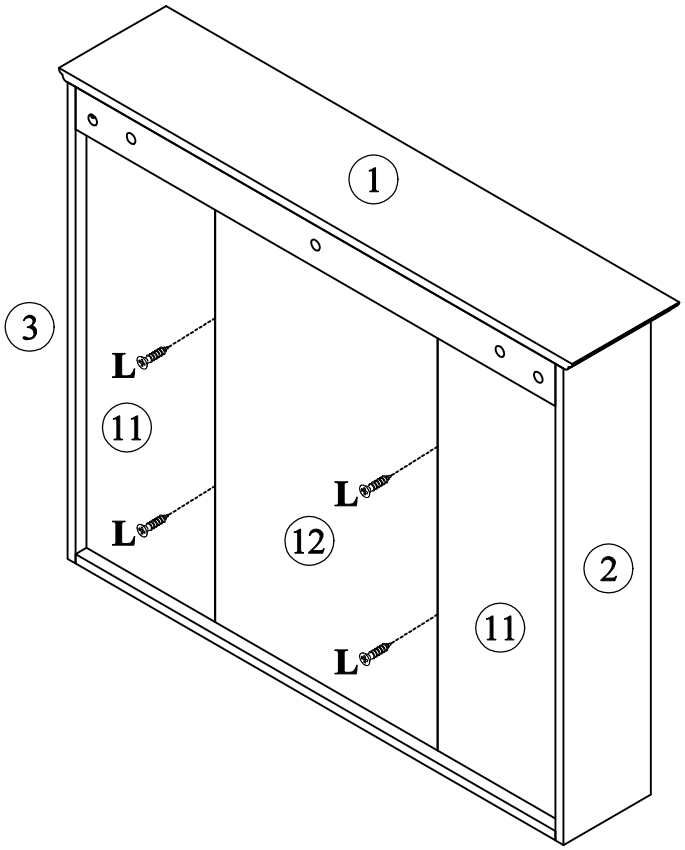4PCS





STEP: 9

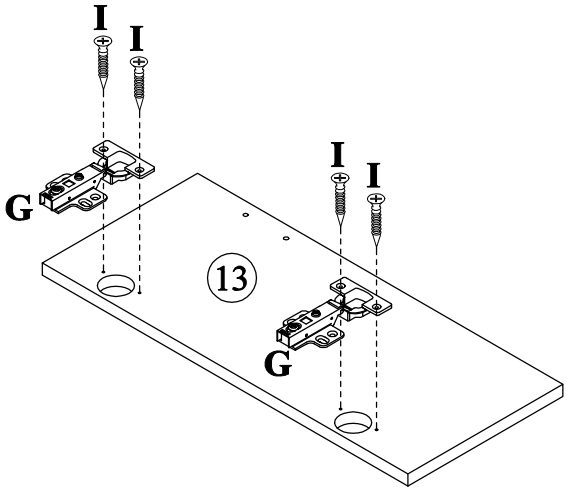
G	I
	
4PCS	8PCS

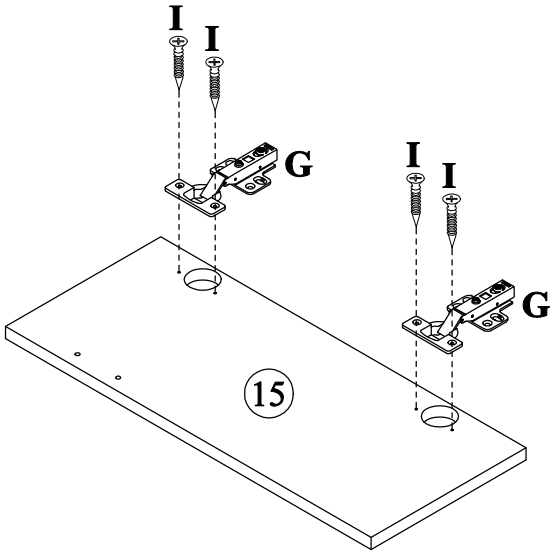





STEP: 10

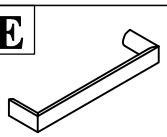E	F	I
		
2PCS	4PCS	16PCS

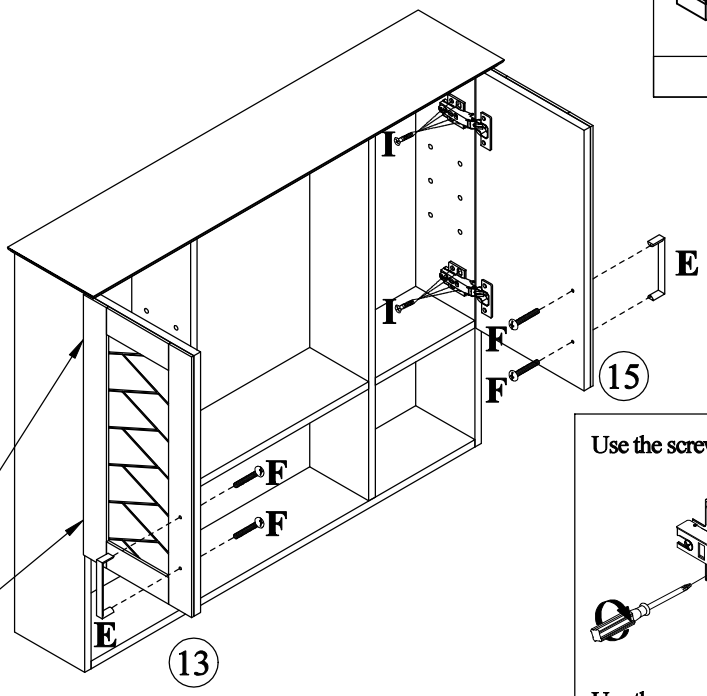


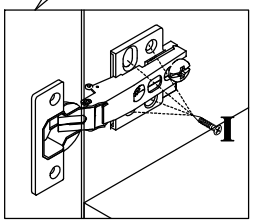


Use the screws to adjust up or down

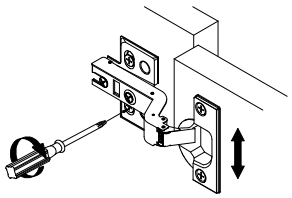


Use the screws to permanent

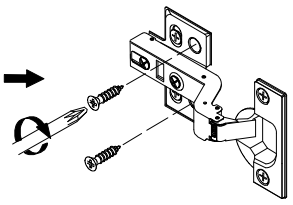


Use the screws to adjust left or right

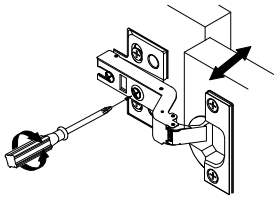



Use the screws to adjust in or out

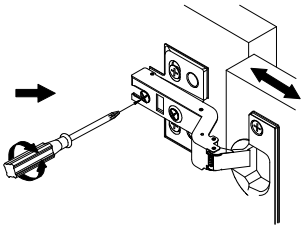



STEP: 11


J

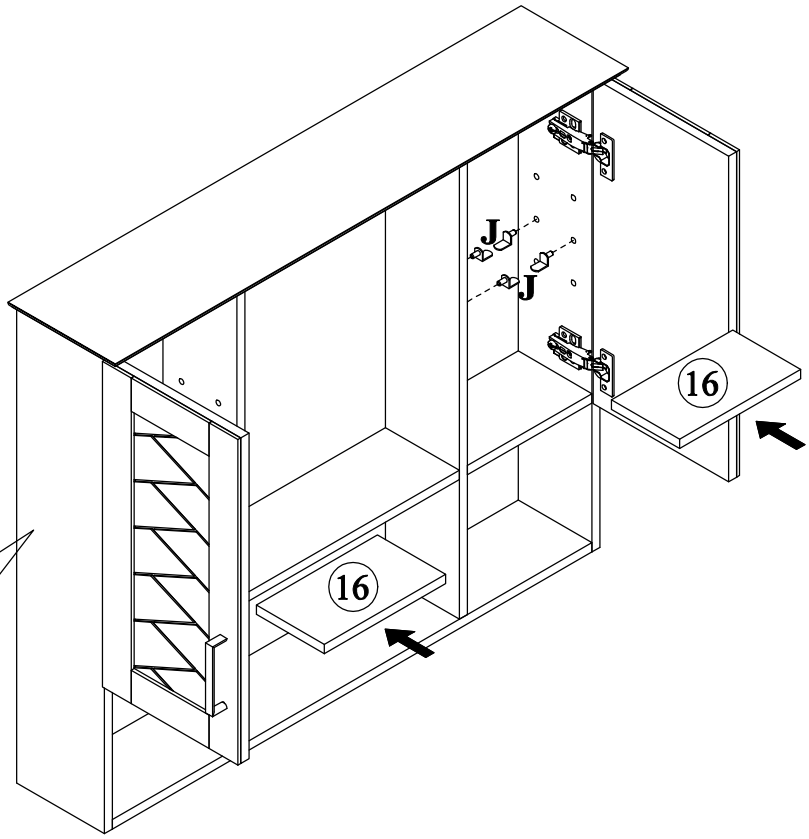8PCS

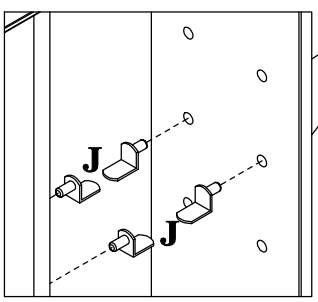






STEP: 12

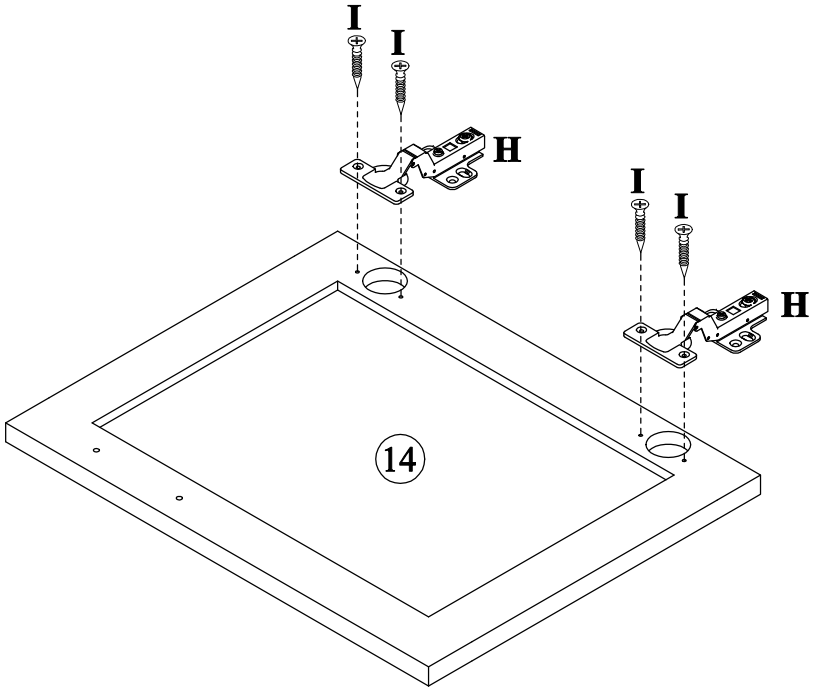H	I
	
2PCS	4PCS




STEP: 13

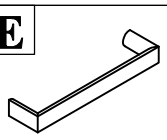
E	F	I
		
1PC	2PCS	8PCS

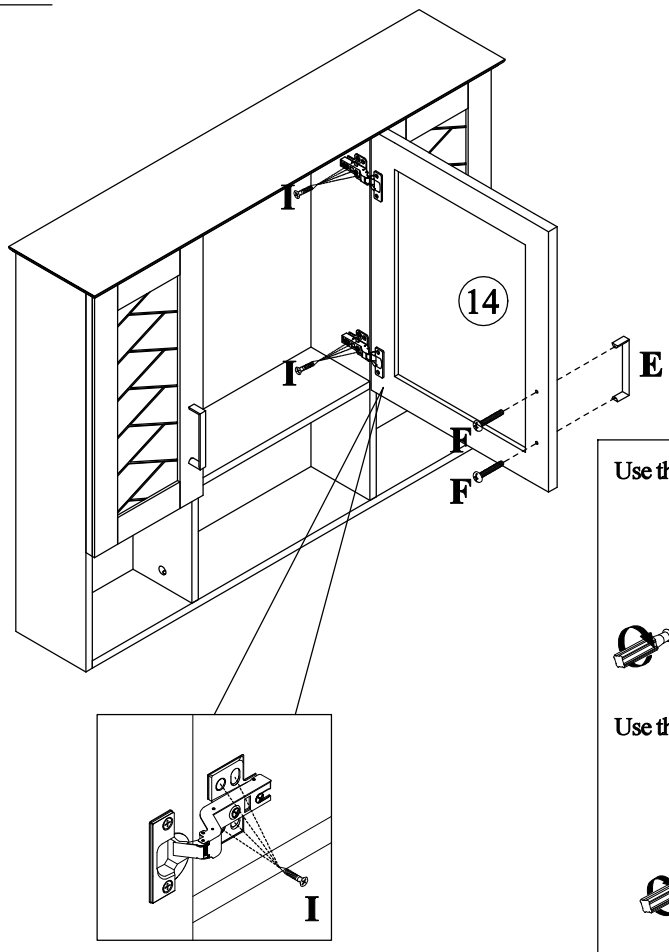


Use the screws to adjust up or down

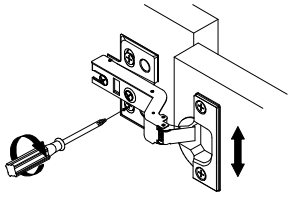


Use the screws to permanent

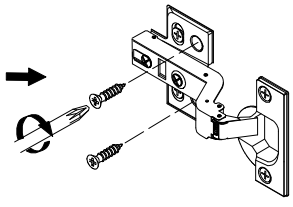


Use the screws to adjust left or right

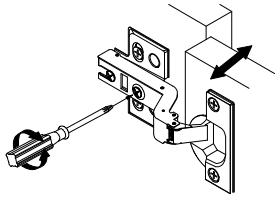


Use the screws to adjust in or out

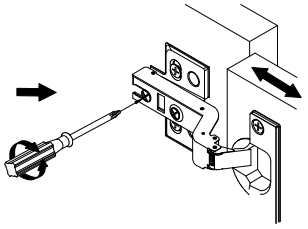

STEP: 14

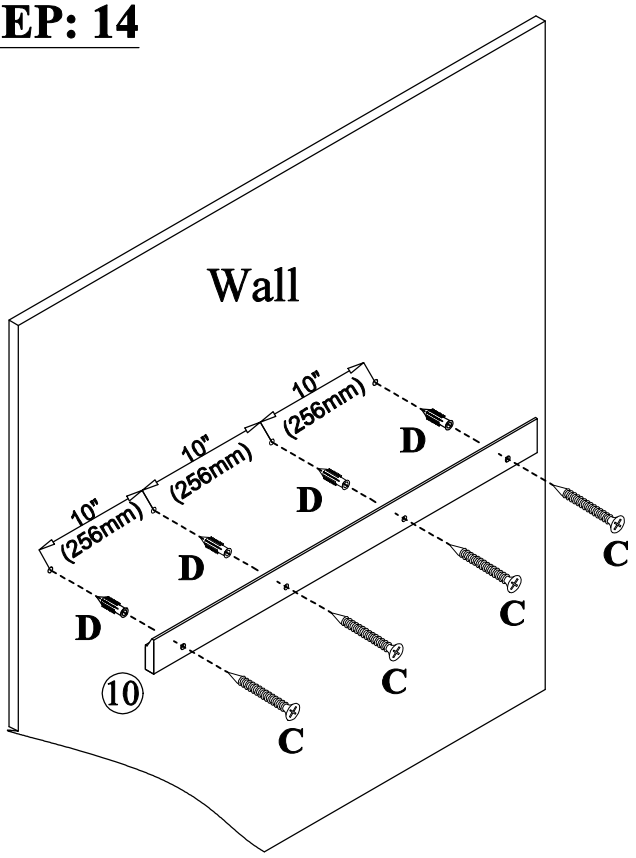


C	D
4PCS	4PCS

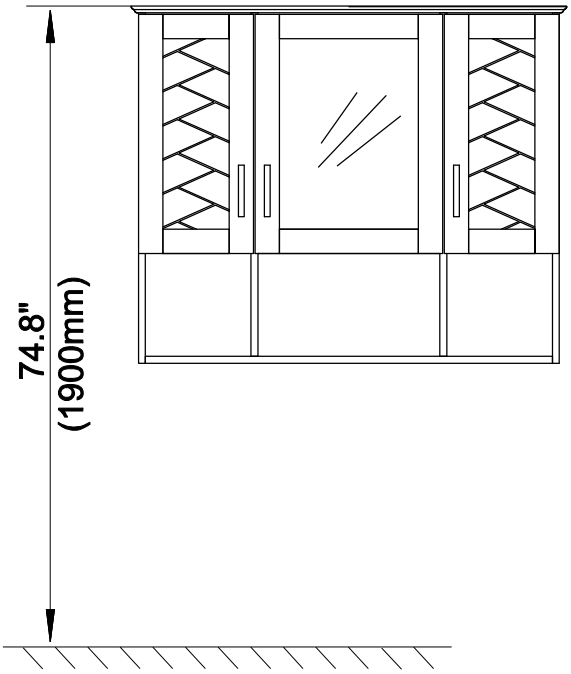


Draw the spacing between the walls and the No.10, punch holes in the wall, and fix the No.10 to the wall with screws.
Note: Appropriate distance from the top of cabinet to the ground is 74.8".

STEP: 15

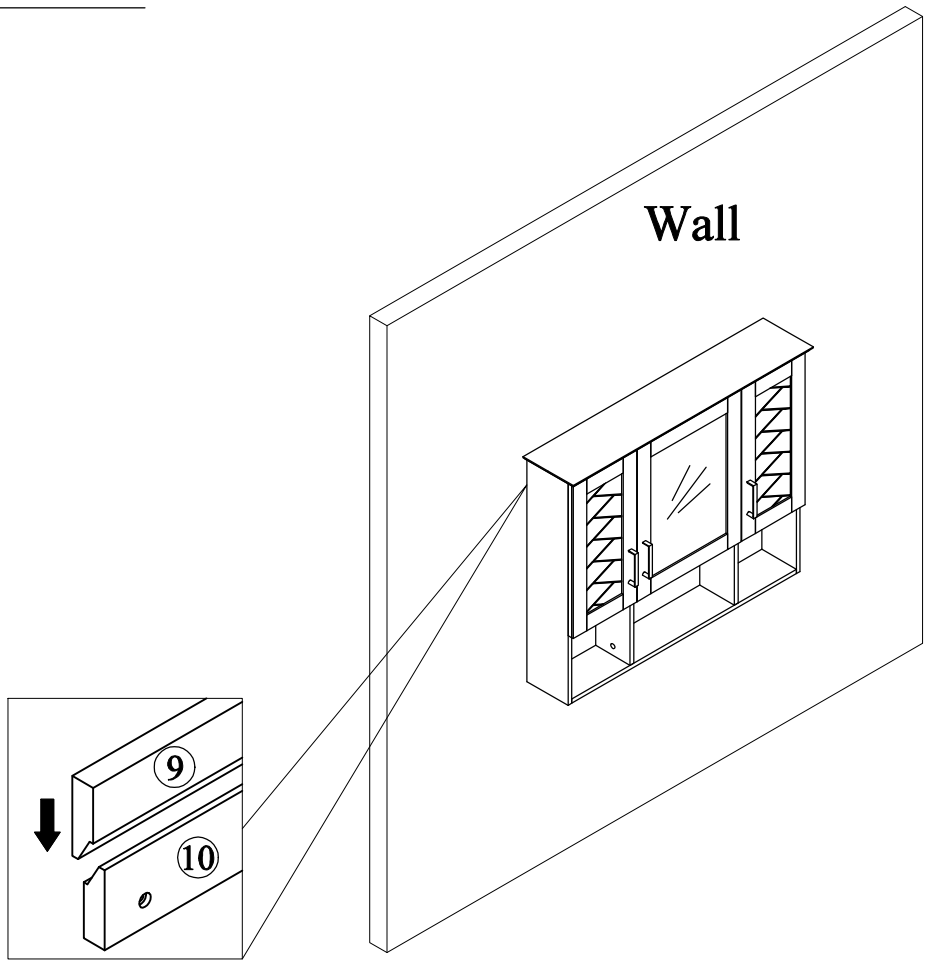


STEP: 16

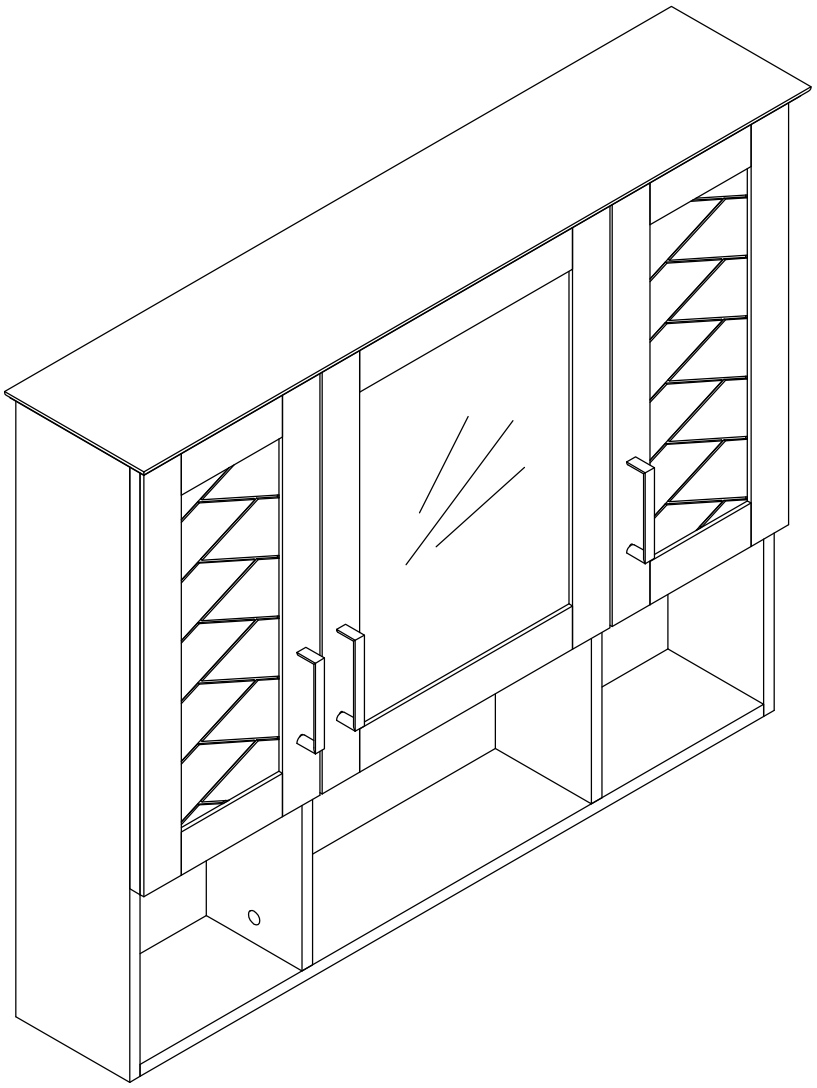




HINGE ADJUSTMENTS

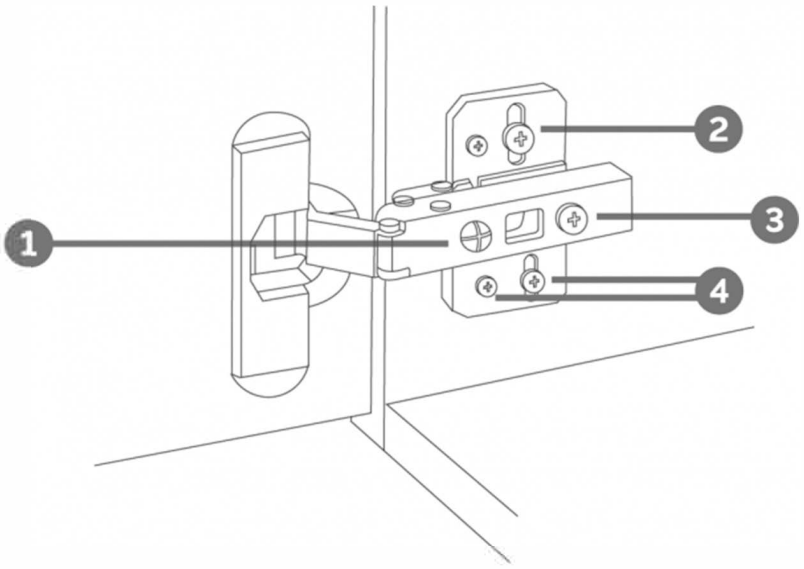


1 Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

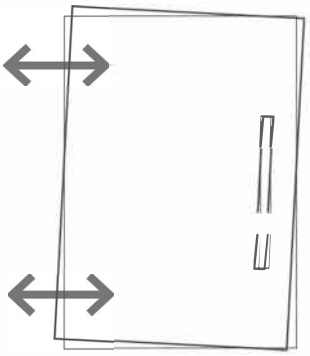

2 4 Height adjustment

While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down

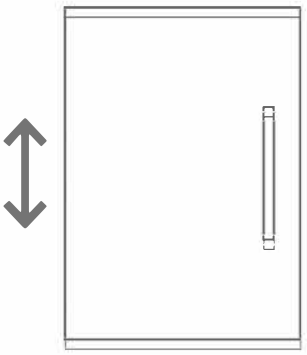

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw
clockwise to decrease the gap between the door and the cabinet
anticlockwise to increase the gap between the door and the cabinet

