ASSEMBLY INSTRUCTIONS

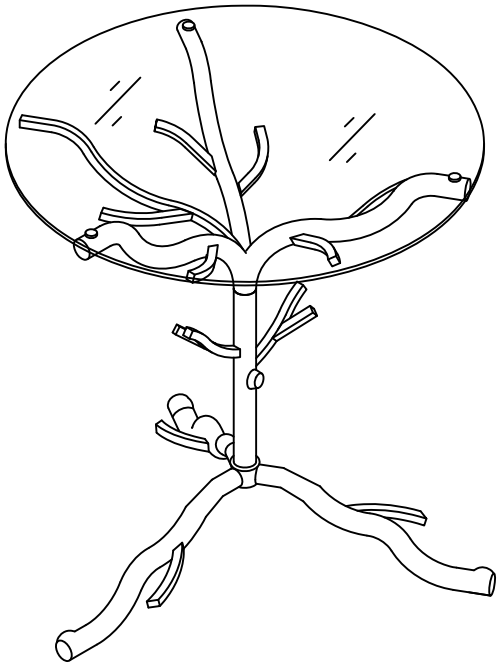

TOOLS REQUIRED



Allen Wrench
(Included)



Phillips Screwdriver
(Not Included)



2 - Persons

ASSEMBLY RATING



EASY ——————— DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

CHECK BEFORE STARTING

- [ ] **Are you missing anything?**

  Double-check all parts,hardware and accessories listed are all acccounted for.

- [ ] **Check out our Quick Tips!**

  We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

- [ ] **Should we send any replacements?**

  Are there any irregularities or flaws in the parts? We can send replacements!

- [ ] **Prep Time!**

  Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

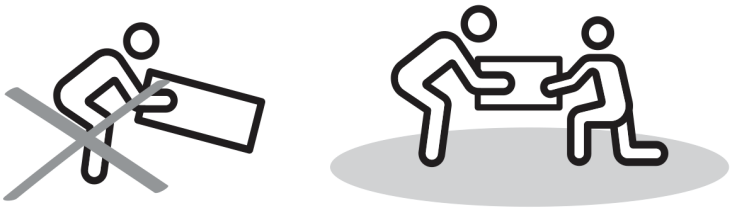

Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

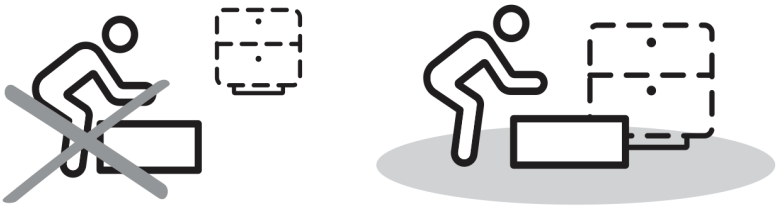

Suitable Location

Assembling near the area of the intended location is highly recommended.



Sufficient Space

Make sure you have enough space to move around during the assembly.

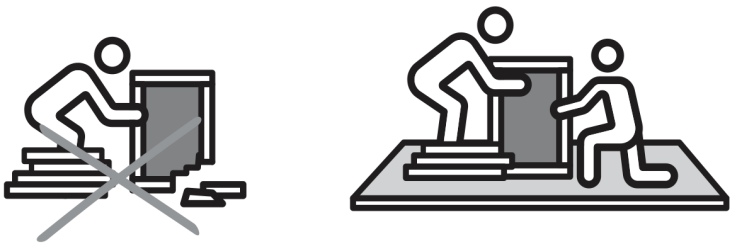

Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.

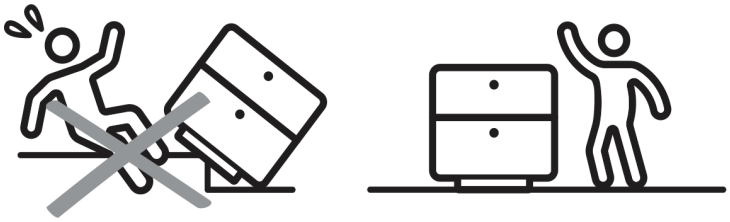

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE

FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

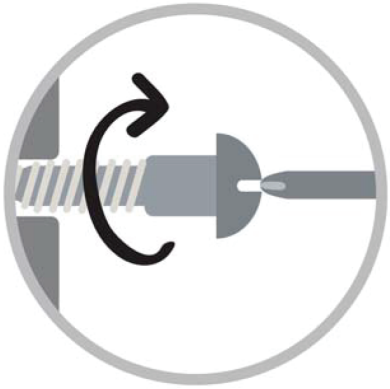

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

SIDE TABLE

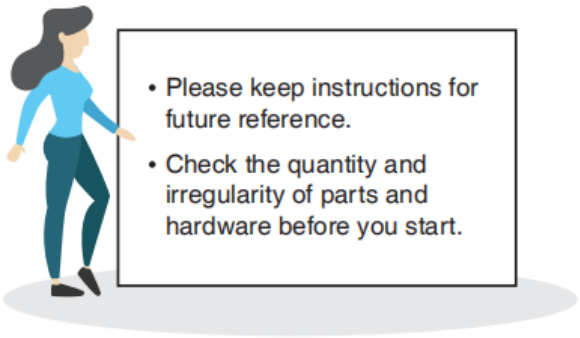

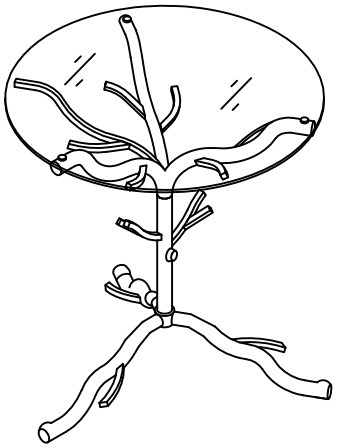

PARTS

1



Upper Frame
1 pc

2



Lower Frame
1 pc

3



Glass Top
1 pc

HARDWARE

A



Bolt 1/4" x 1/2"
1 pc

B



Bolt 3/16" x 1/2"
1 pc

C



Flat Washer Ø16mm
1 pc

D



Flat Washer Ø32mm
1 pc

E



Allen Wrench
4 x 22 x 60 mm
1 pc

ASSEMBLY INSTRUCTIONS

1

Part #1 x1pc
Part #2 x1pc
Hardware #A x1pc
Hardware #B x1pc
Hardware #C x1pc
Hardware #D x1pc
Hardware #E x1pc

Put the Flat Washer (#D) into Upper Frame (#1).

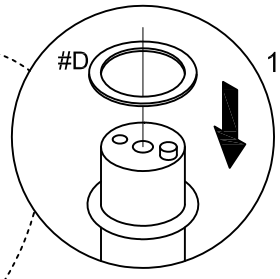

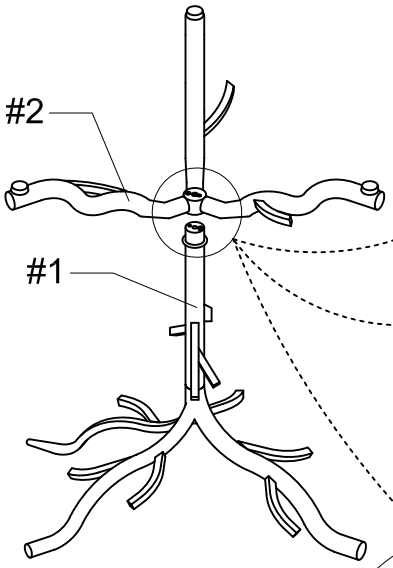

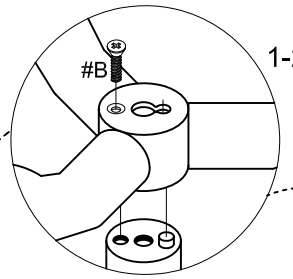

Align the Lower Frame (#2) to the holes along of the Upper Frame (#1), tighten secure by using bolts (#B).

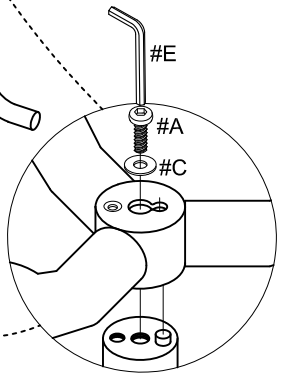

tighten secure by using bolts (#A) Flat Washer (#C) Allen Wrench (#E).

2

Please turn over the base, and place the glass top on the upper frame.

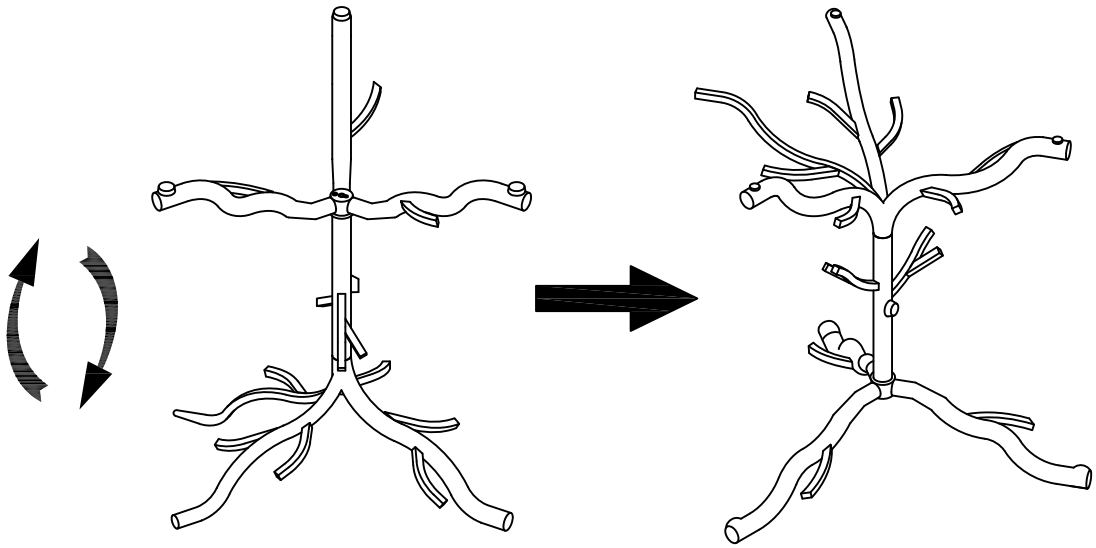

ASSEMBLY INSTRUCTIONS

3

Part #3 x1pc

when placing the glass top (#3), please press it down firmly with your hand.

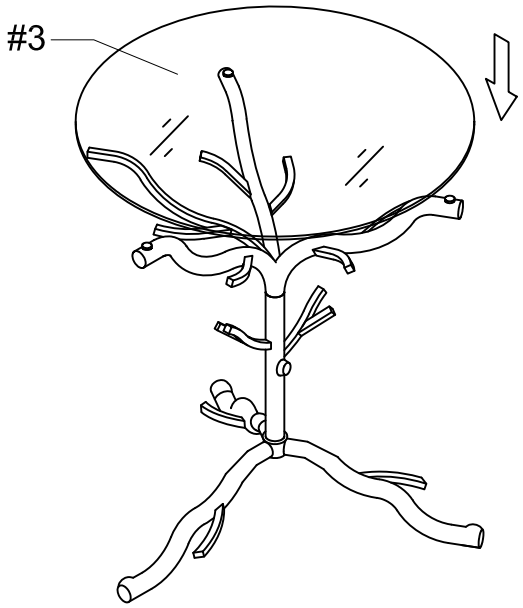

4

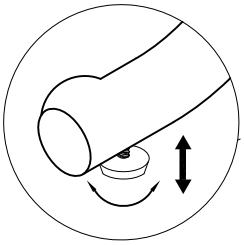

Remark: If there is any gap between the legs and ground, please adjust the levelers until it reaches the ground.

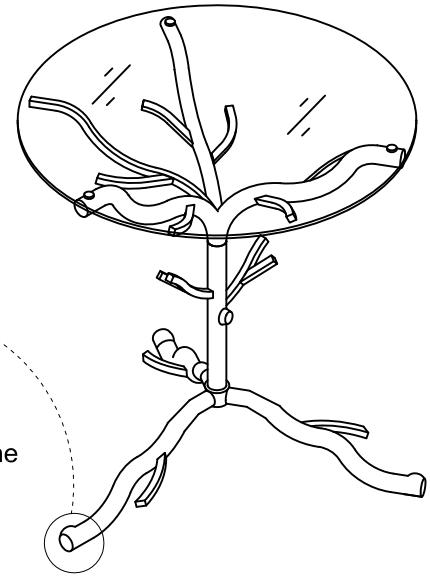

ASSEMBLY COMPLETED

Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

Keep this handy !

Please retain this instruction manual and any order-related information for future refernce.

Lift don't drag !

To avoid damage to product please always LIFT the product when transporting of adjusting the placemet.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.