
ASSEMBLY INSTRUCTIONS

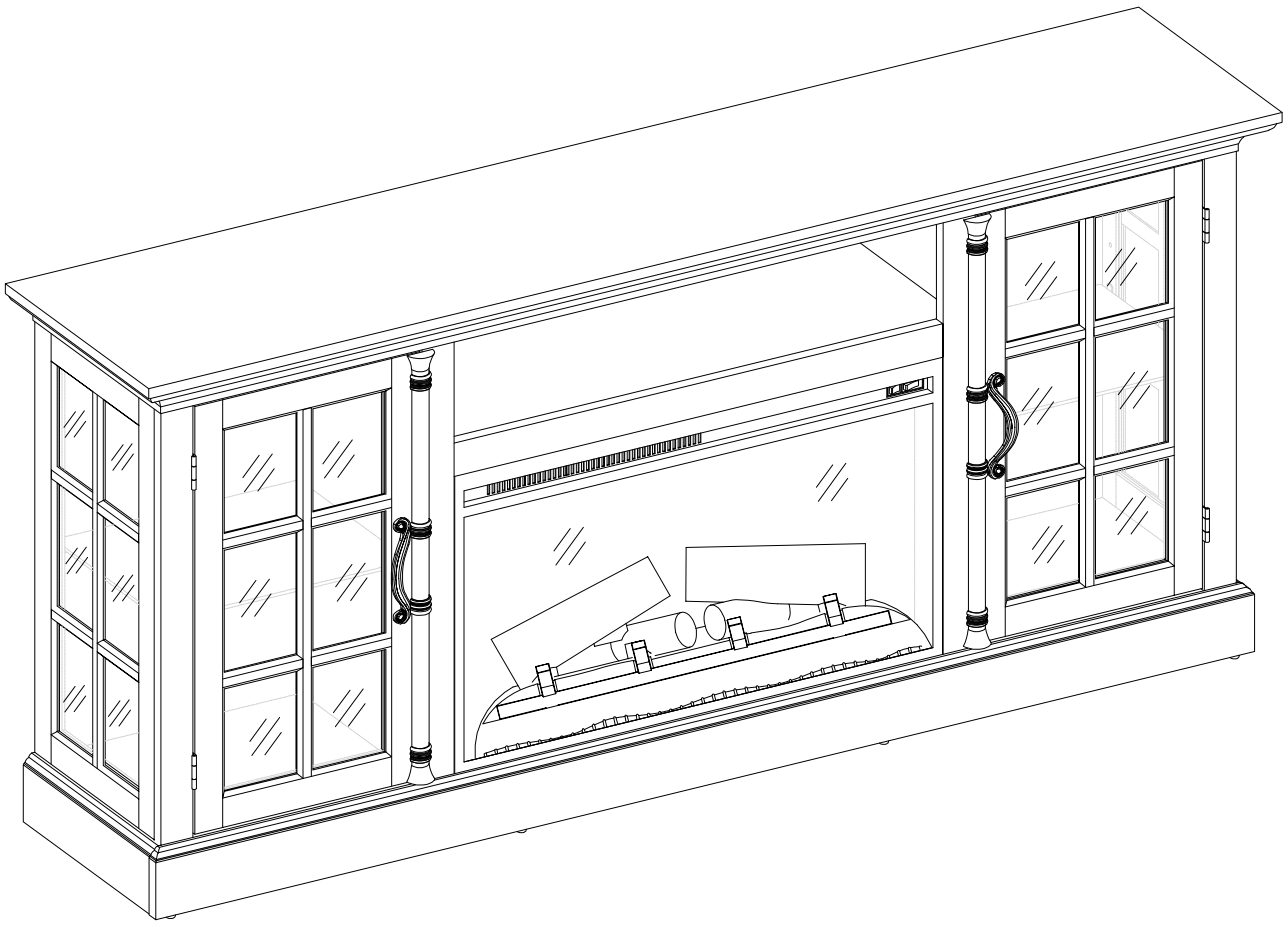

SAFETY TIPS:Static charge may cause dust on foam – clean with a dry or damp cloth.Small foam strands may be present – handle gently and dispose of properly.Do not burn or incinerate. Check local recycling guidelines.

Lot Code:

Update 26 Mar. 2026 Revison #:01

Before You Start

1.Read through each step carefully and follow the proper order.

2.Separate and count all your parts and hardware.




3.Give yourself enough room for the assembly process.

4.Assembly this product on the empty carton or carpet to avoid scratching.

5.Two people are recommended for ease in the assembly of this product.

6.Keep all small parts of this product away from children. They may cause serious injury.

7.Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer.

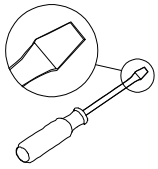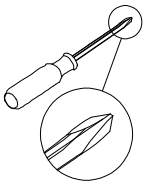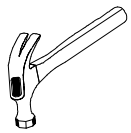8.Note:Power tools should not recommended to assemble this product, If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.


HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.


2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.

3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.

4.Use the sticker to conceal the Cam.

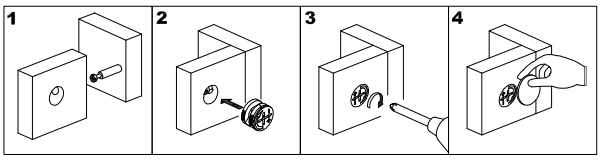


The provided glue is to secure wood dowels in place. When first inserting dowels,locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.


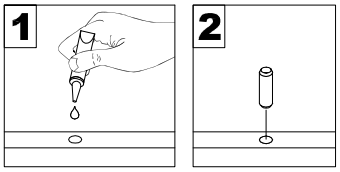


In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.


PARTS LIST

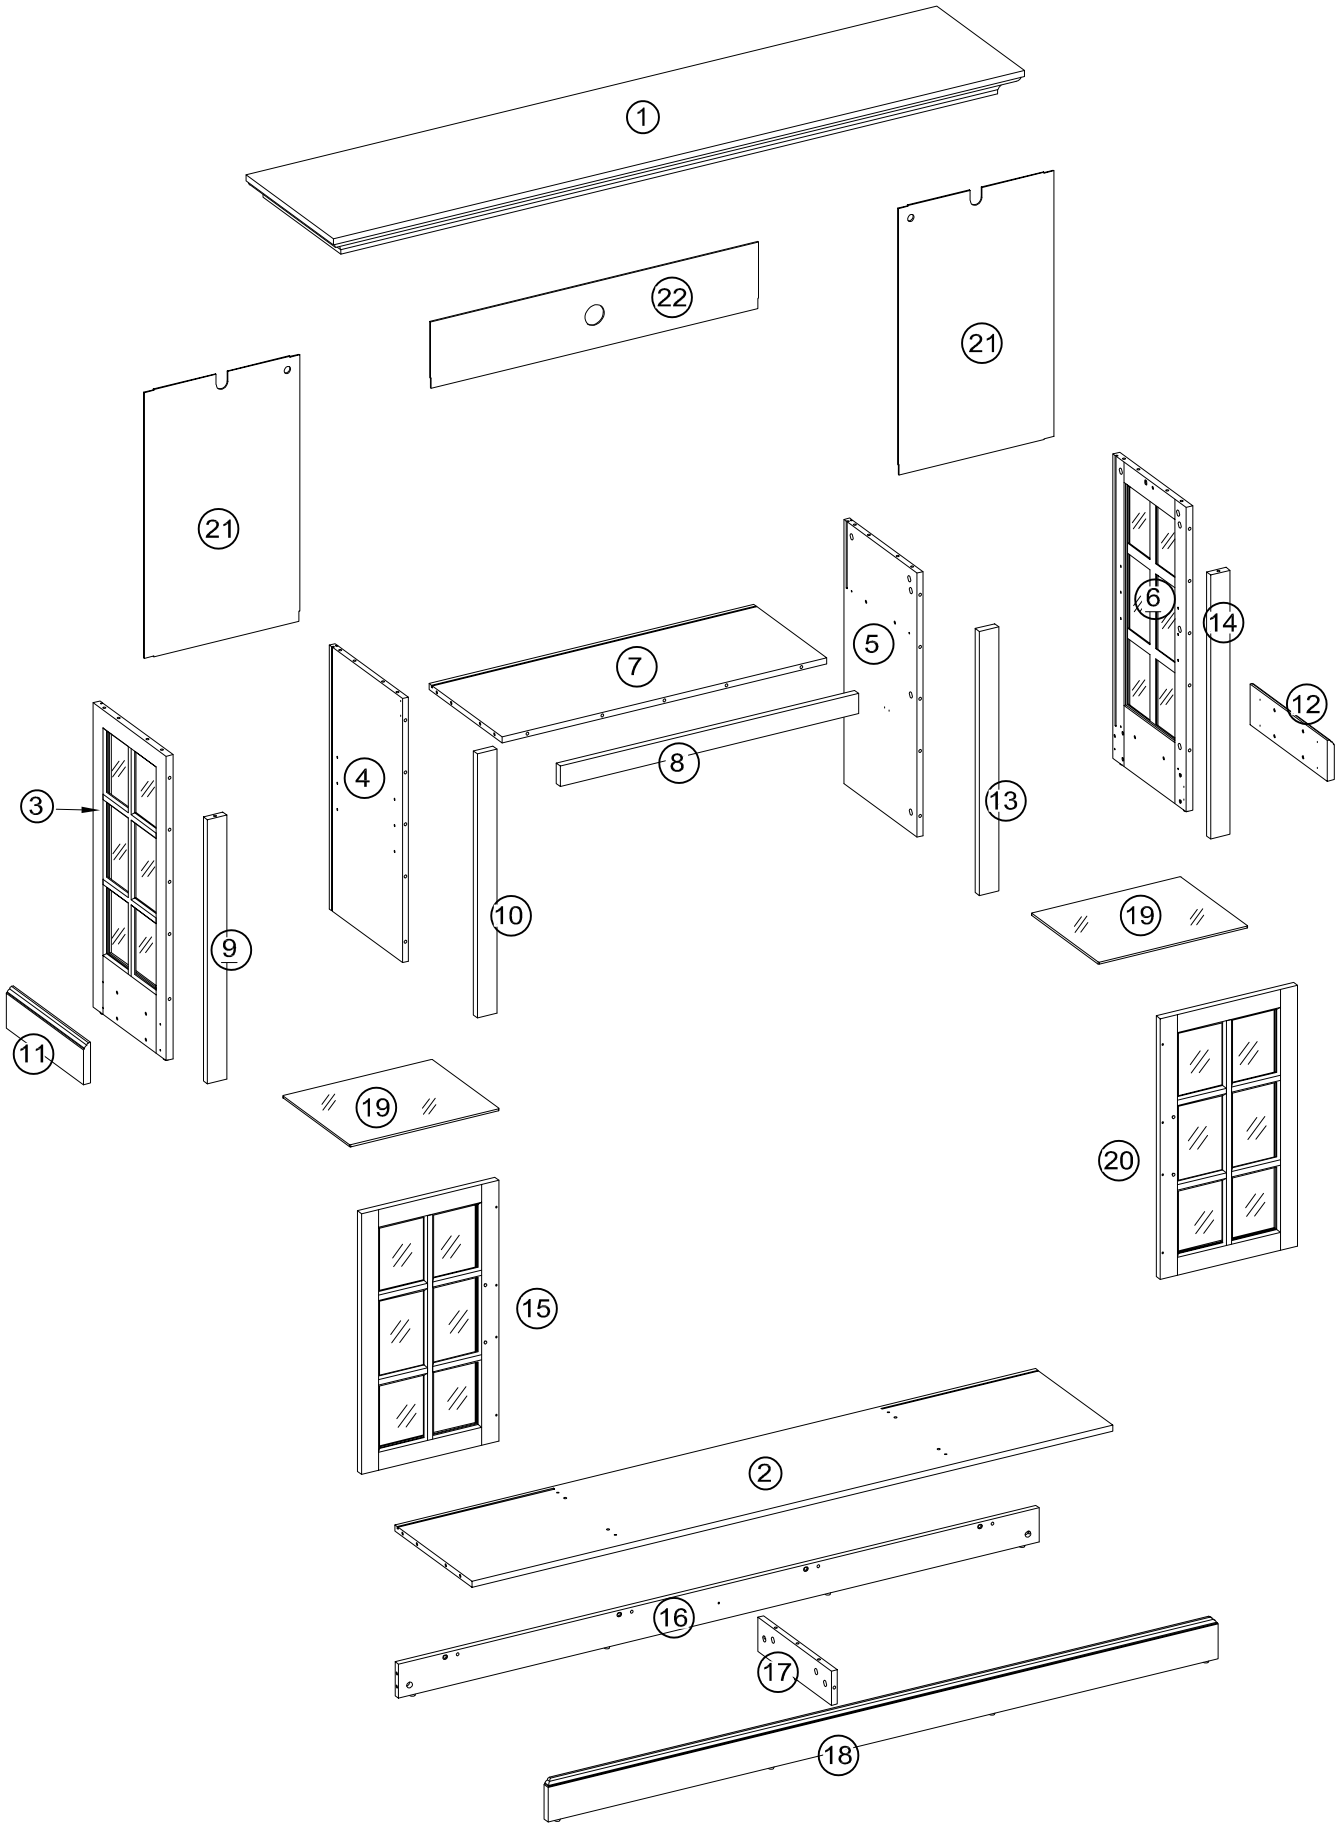


HARDWARE LIST


A		Ø6x35mm	Cam bolt	37	pcs
B		Ø15x11mm	Cam lock	37	pcs
C		Ø20mm	Cam cover	37	pcs
D		Ø8x30mm	Long wooden dowel	35	pcs
E		Ø8x20mm	Short wooden dowel	8	pcs
F		Ø4x16mm	Handle bolt	4	pcs
G		Ø4x25mm	Screw	8	pcs
H			Hinge	4	pcs
I		Ø3.5x15mm	Screw	32	pcs
J		Ø4x19mm	Handle bolt	8	pcs
K		Ø6x12mm	Bolt	20	pcs
L		30x20mm	Metal plate	2	pcs
M			Magnetic catch	2	pcs
N		57x20x20mm	Connector	10	pcs
O			Plastic wedge	16	pcs
P		Ø3x17mm	Flat-head screw	16	pcs
Q			Shelf support	8	pcs
R			Handle	2	pcs
S			Tipping restraint	2	set
T			Glue tube	1	pc
U			L shape bracket	2	pcs
V		Ø4x14mm	Screw	4	pcs


HARDWARE LIST

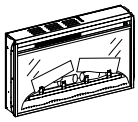
W		Ø3x12mm	Screw	12	pcs
X		639mm		2	pcs
Y		Ø6.7x48mm	Screw	4	pcs
Z			Clip	6	pcs
AA		ZHX-30-113	Fireplace Insert	1	pc
BB			Led strip light	2	pcs
CC		Ø3x15mm	Screw	6	pcs
DD		35x35x16mm	Connecting iron sheet	4	pcs
EE			Metal plate	2	pcs


STEP 1

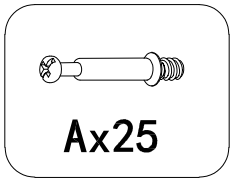


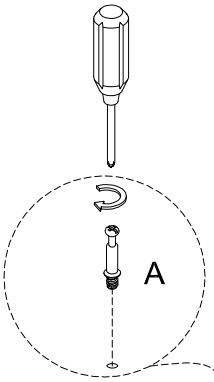


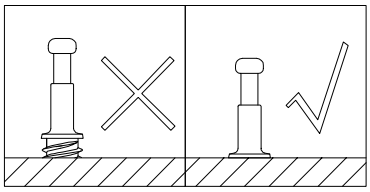


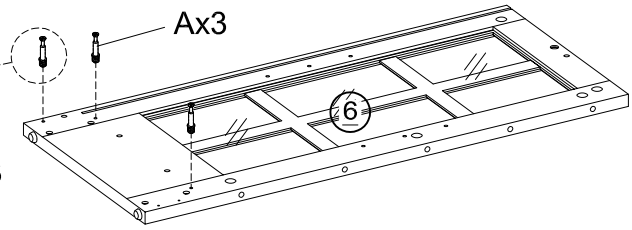


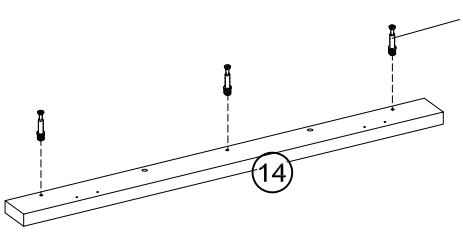


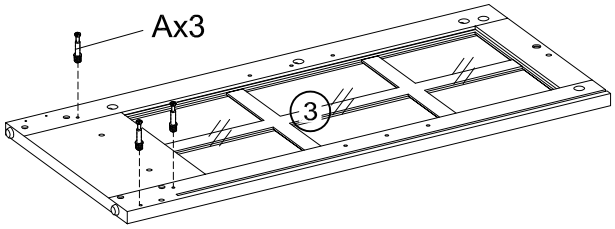


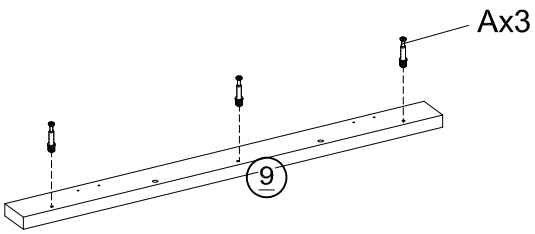


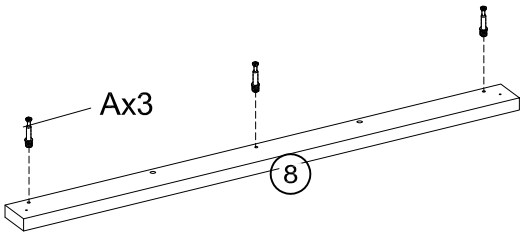

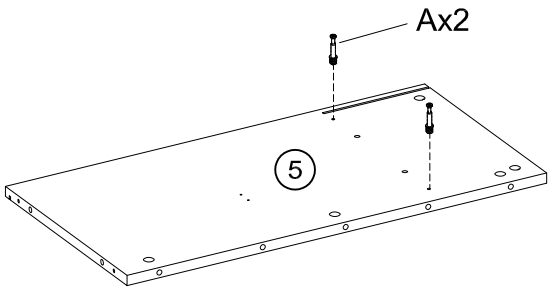


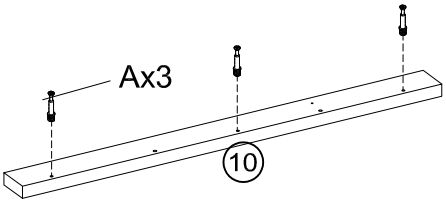


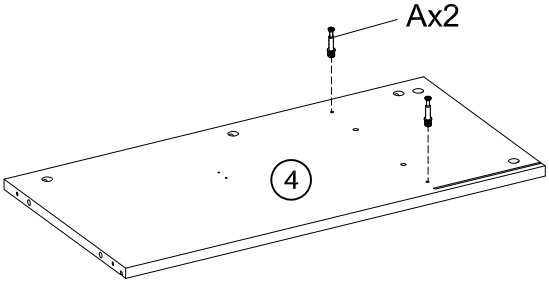


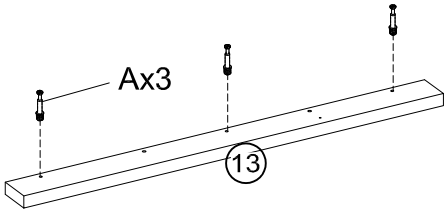


STEP 2

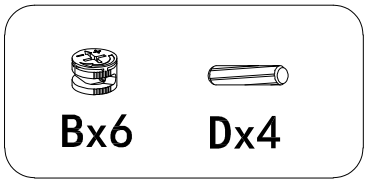


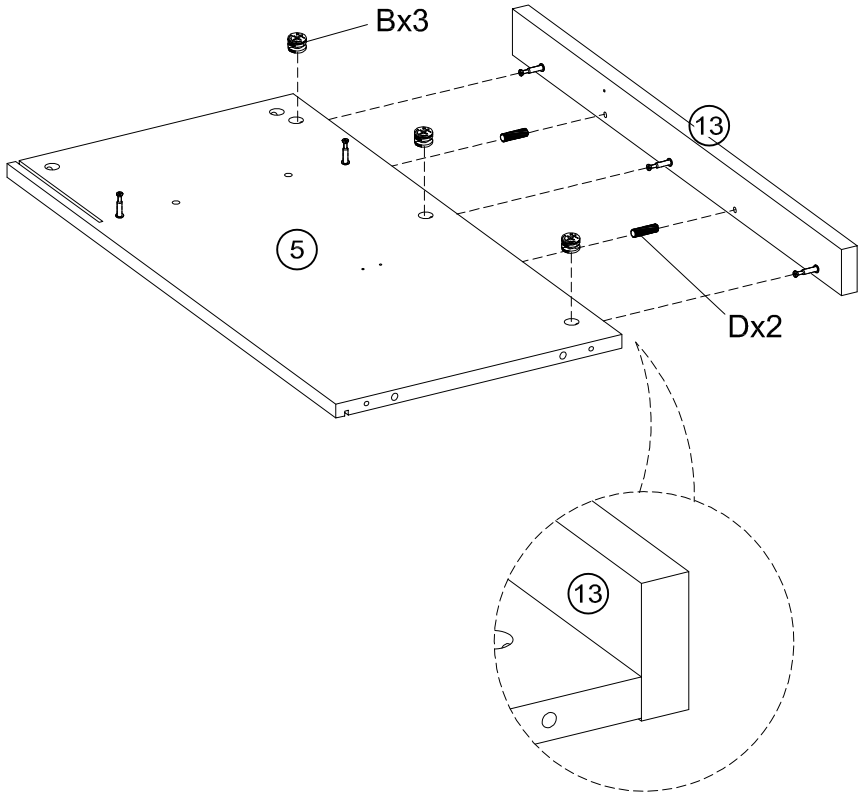


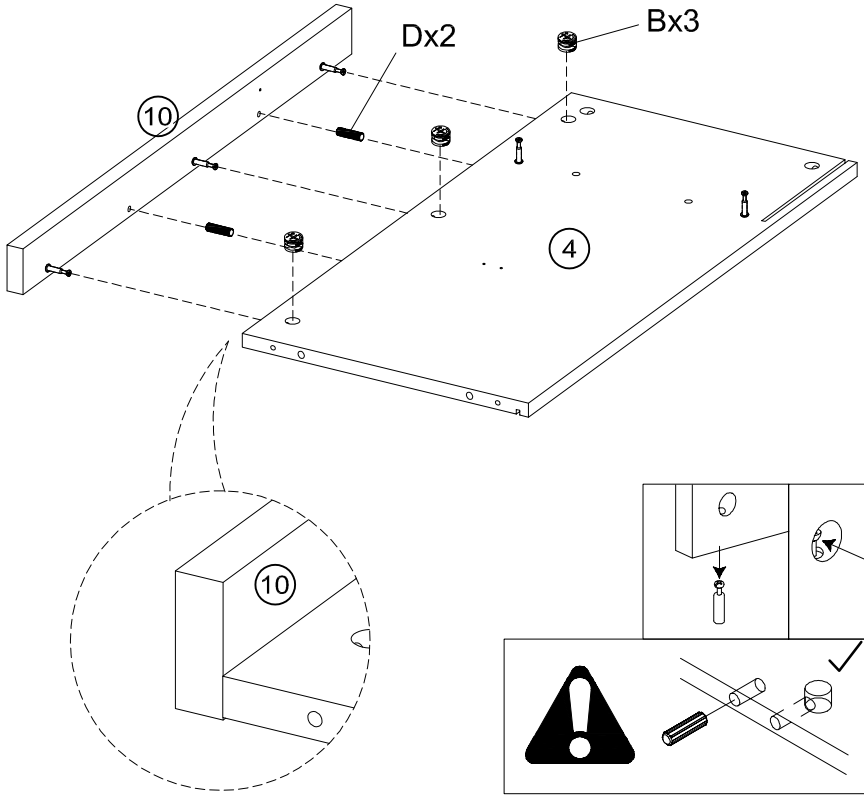


STEP 3

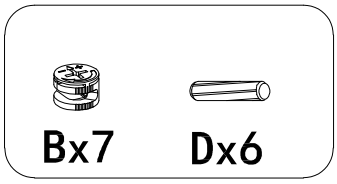

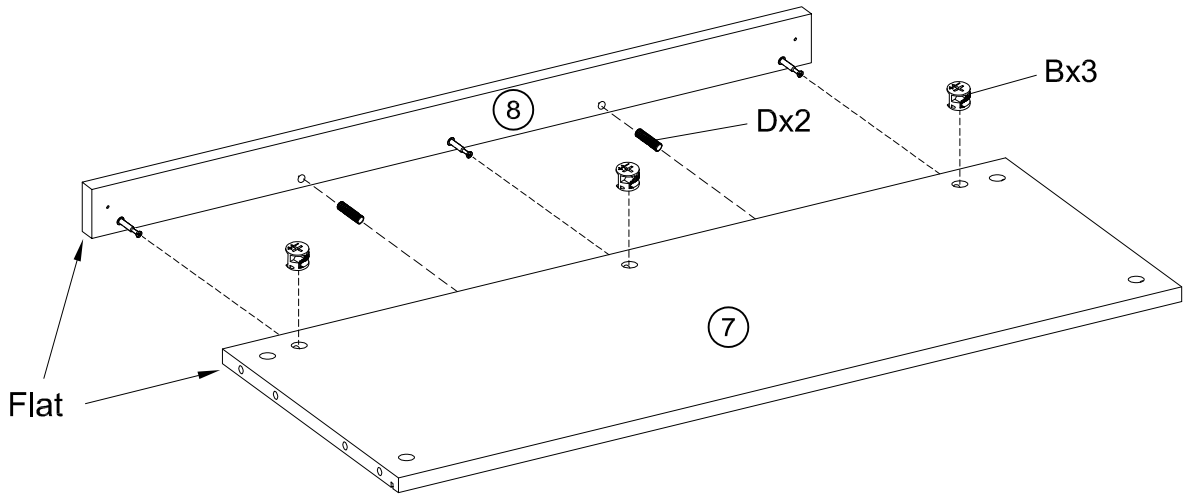


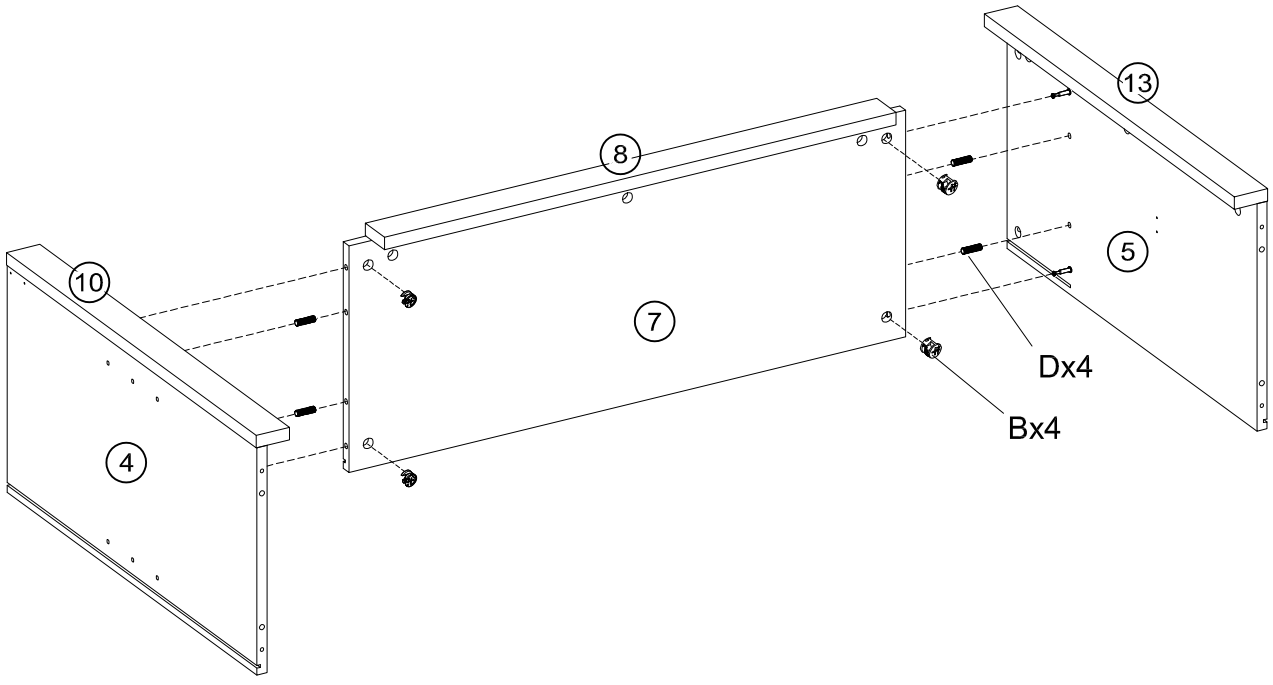


STEP 4

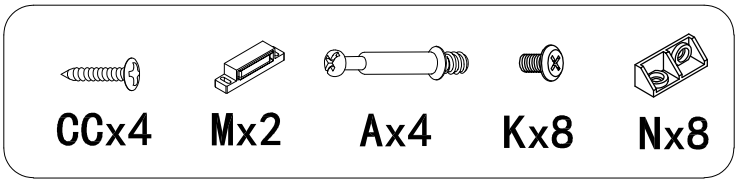



Note the magnet facing upward.

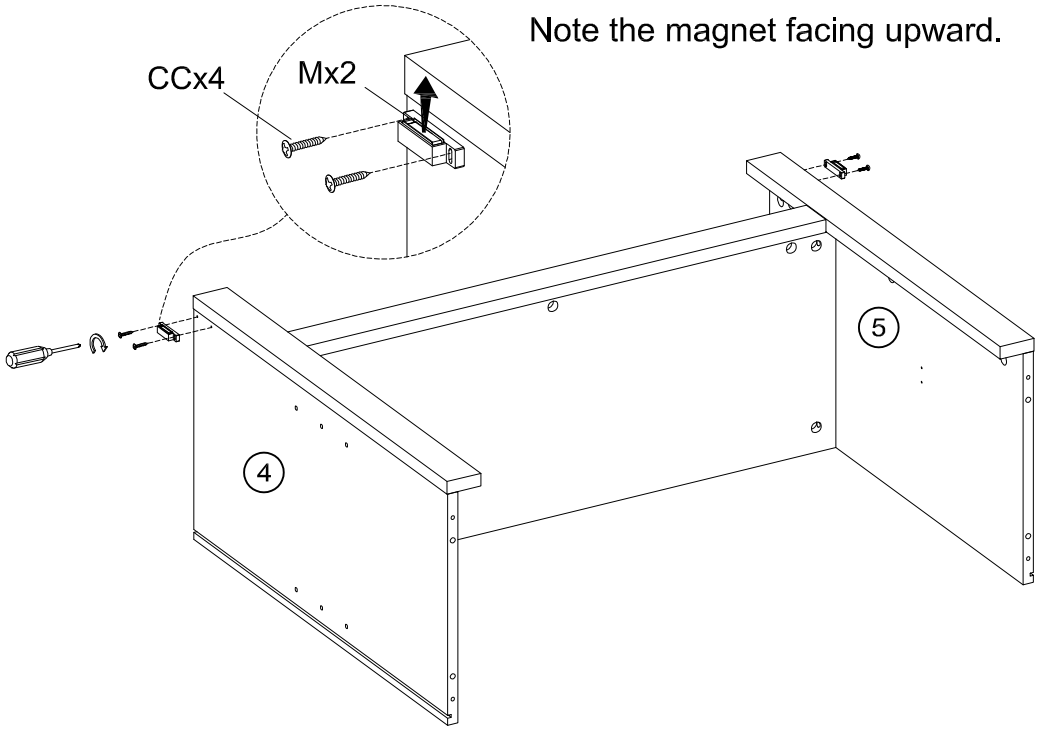

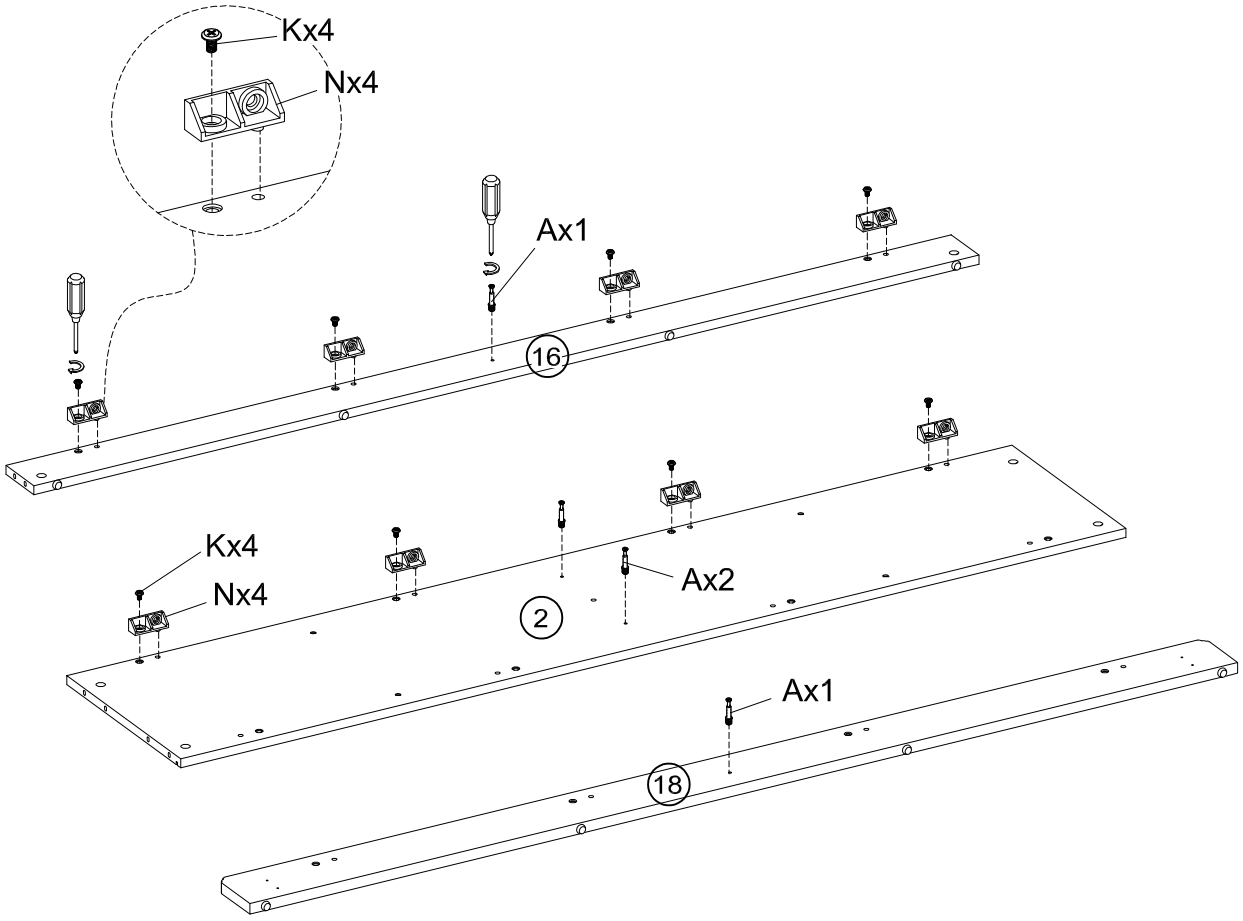


STEP 5

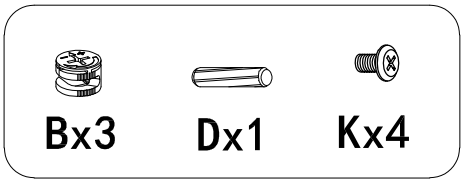


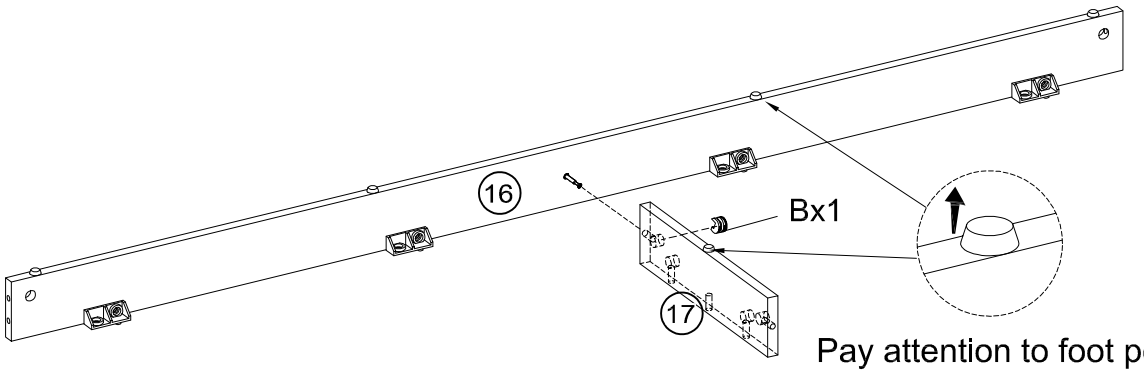


Pay attention to foot peg orientation.

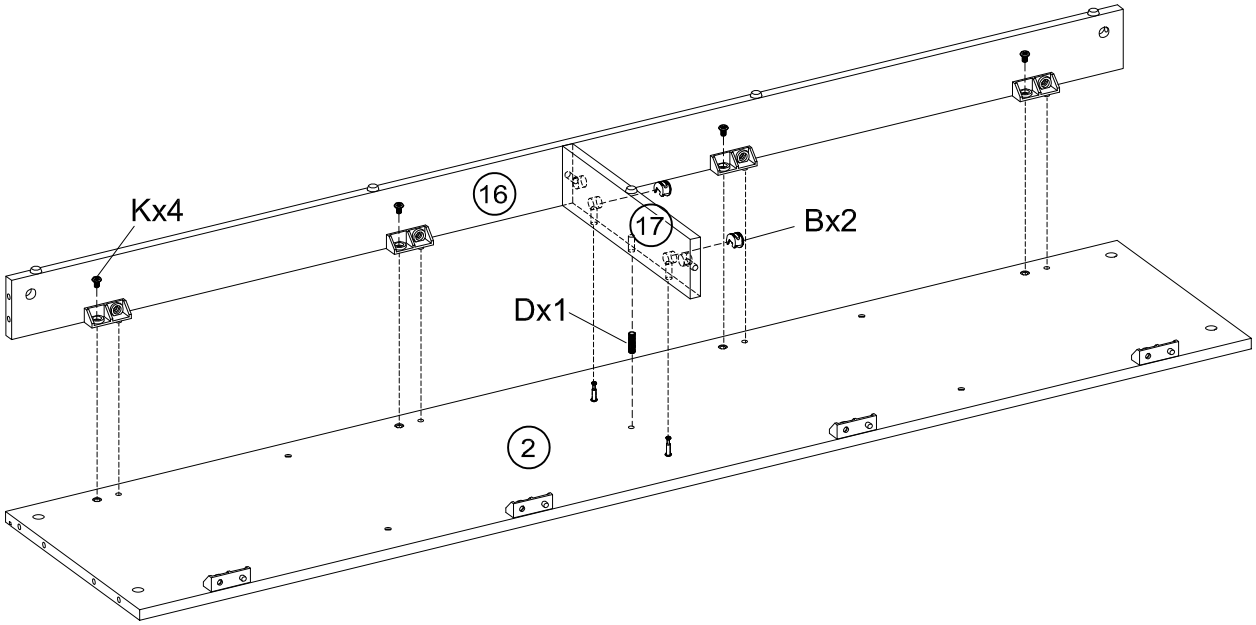



STEP 6

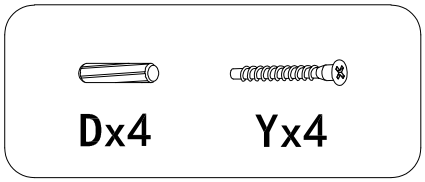


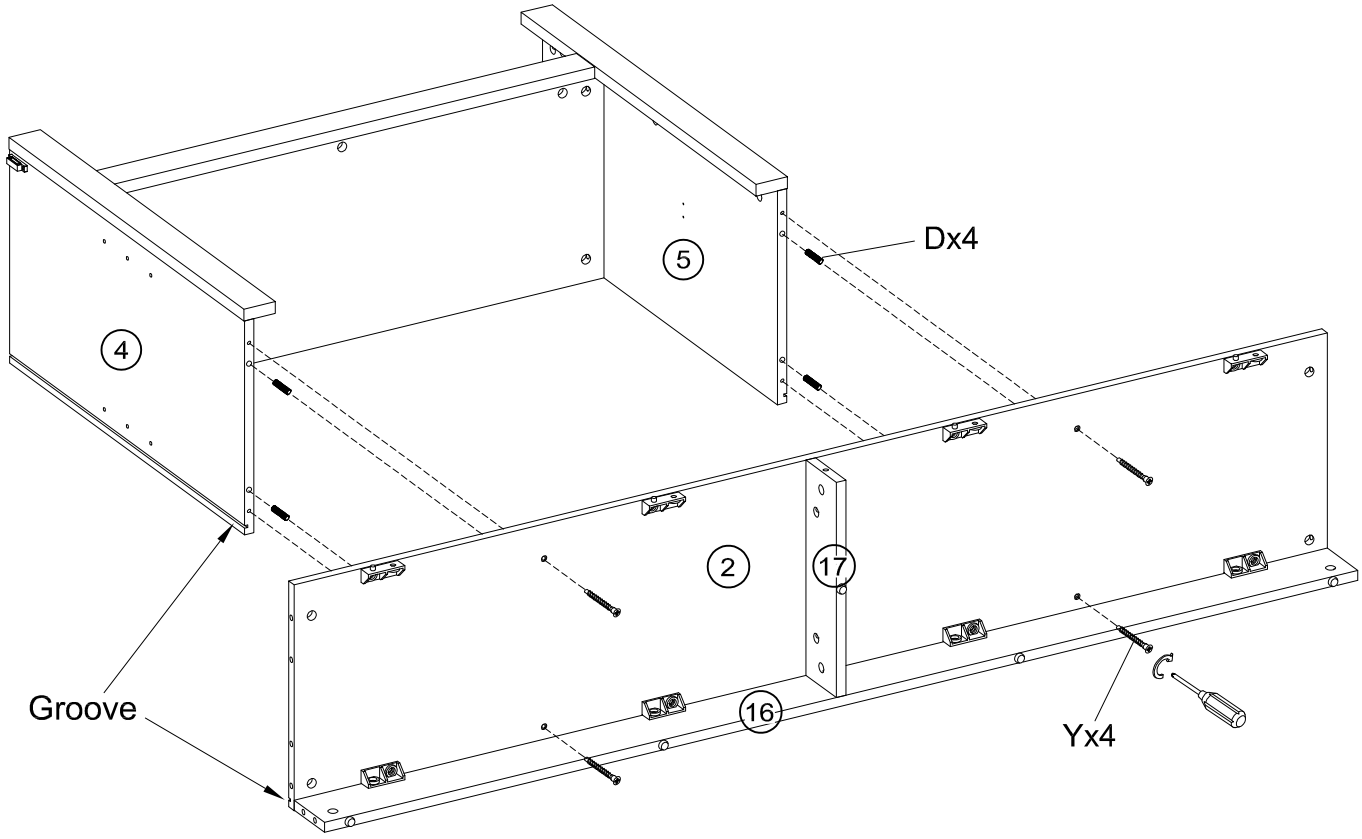


STEP 7

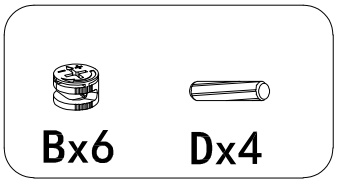


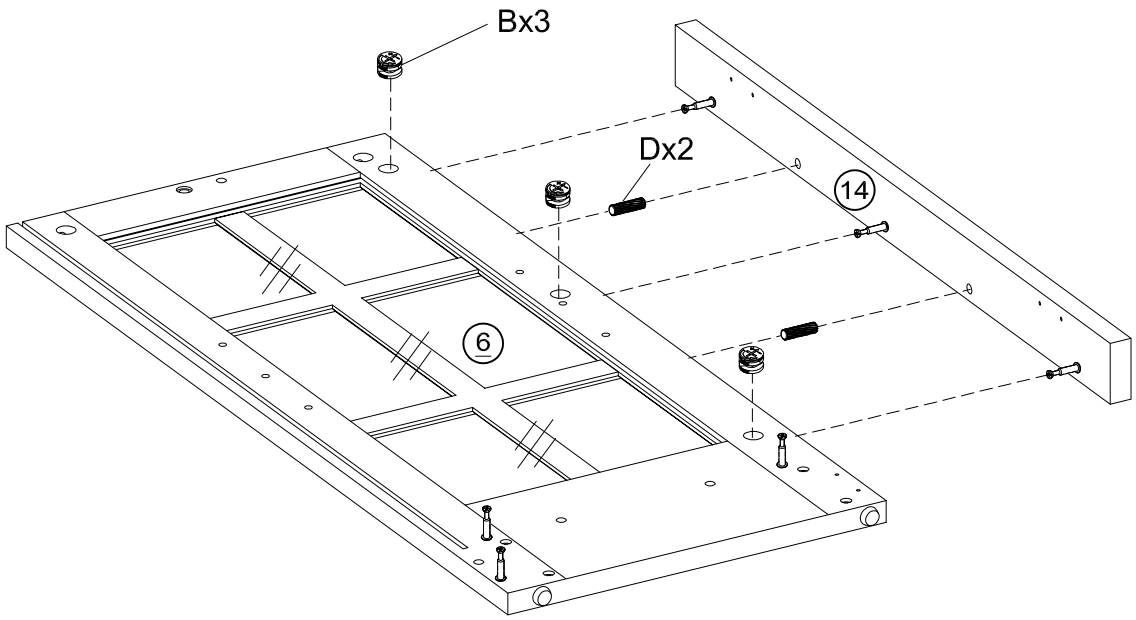


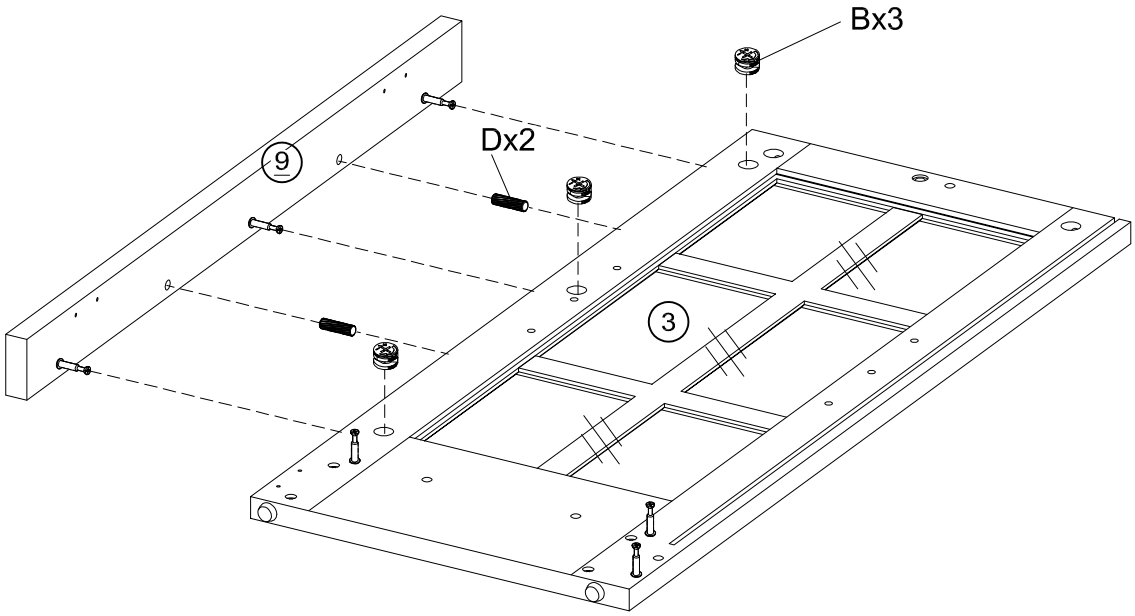


STEP 8

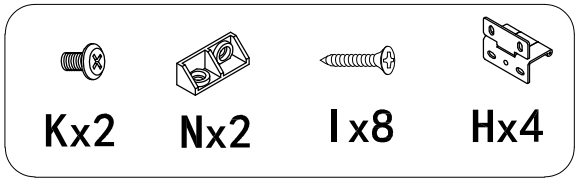


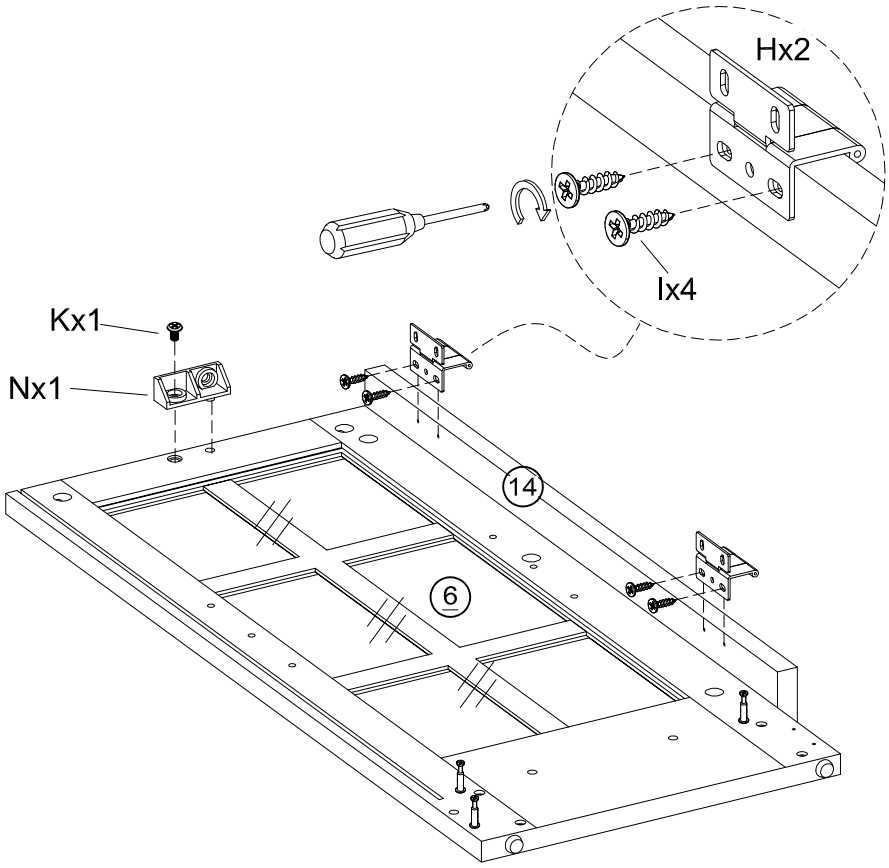


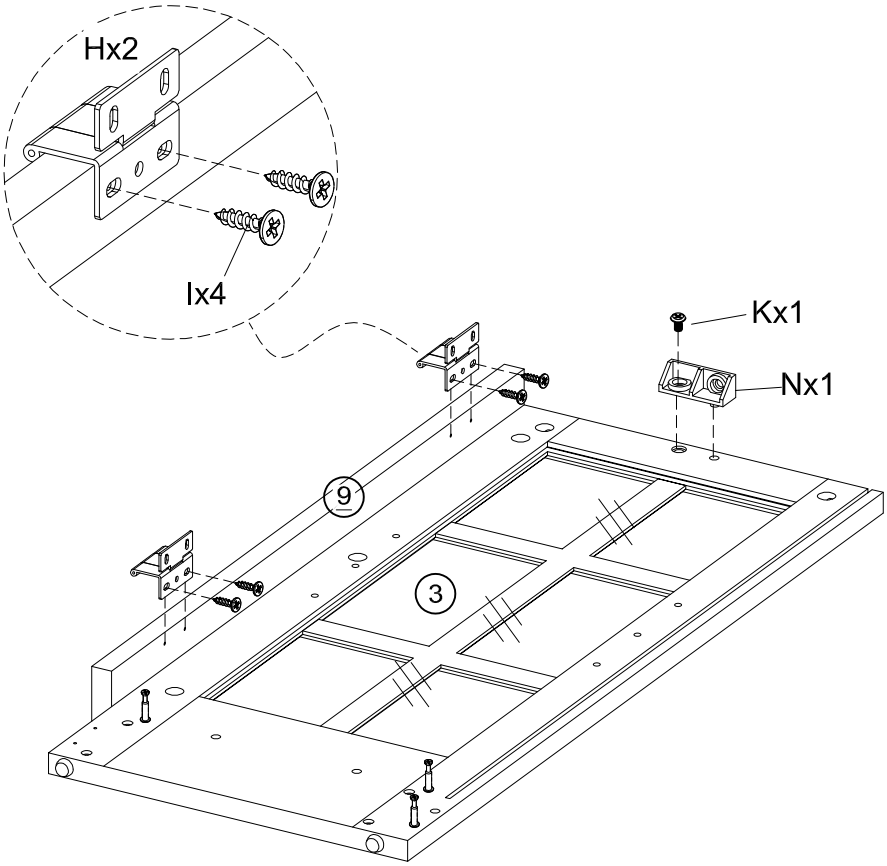


STEP 9

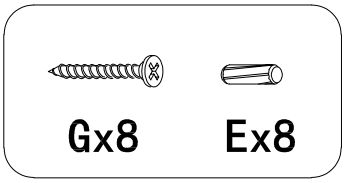

Gx8
Ex8

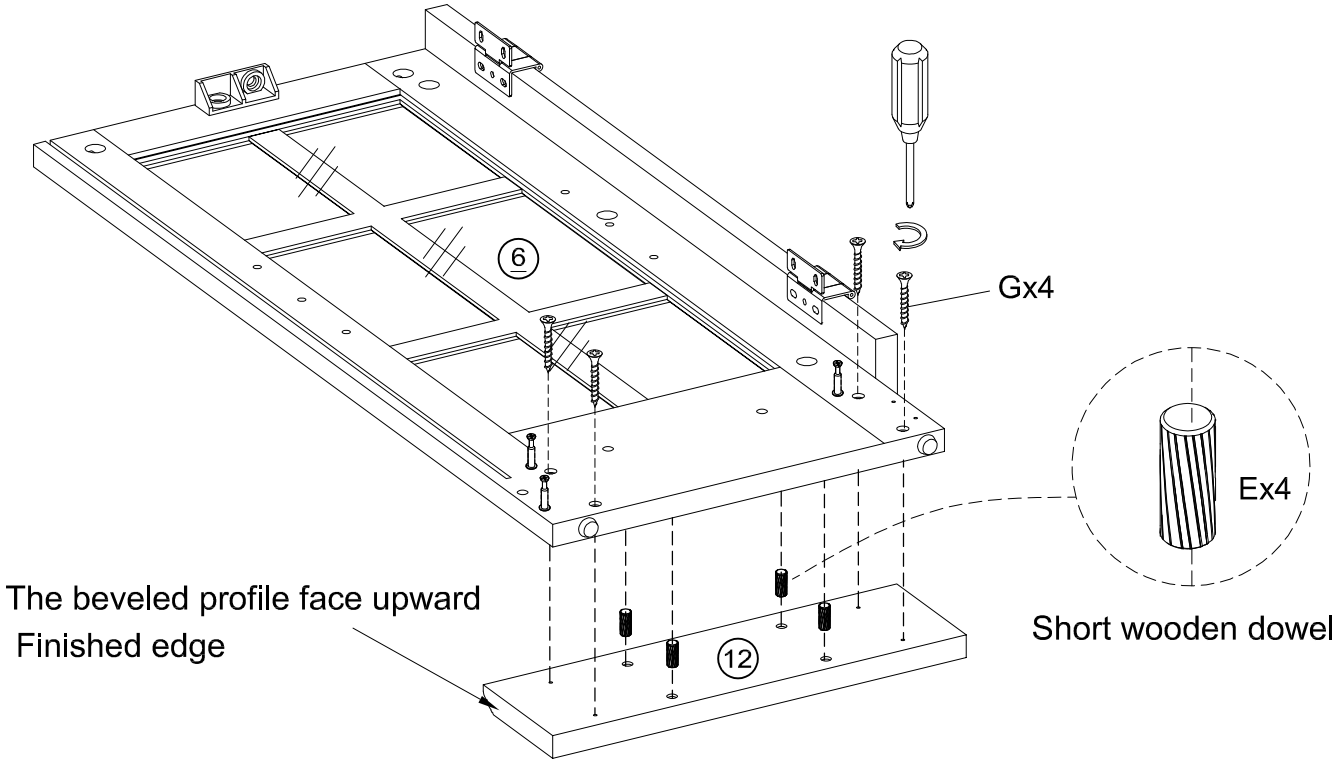

6
Gx4
Ex4
The beveled profile face upward
Finished edge
12
Short wooden dowel

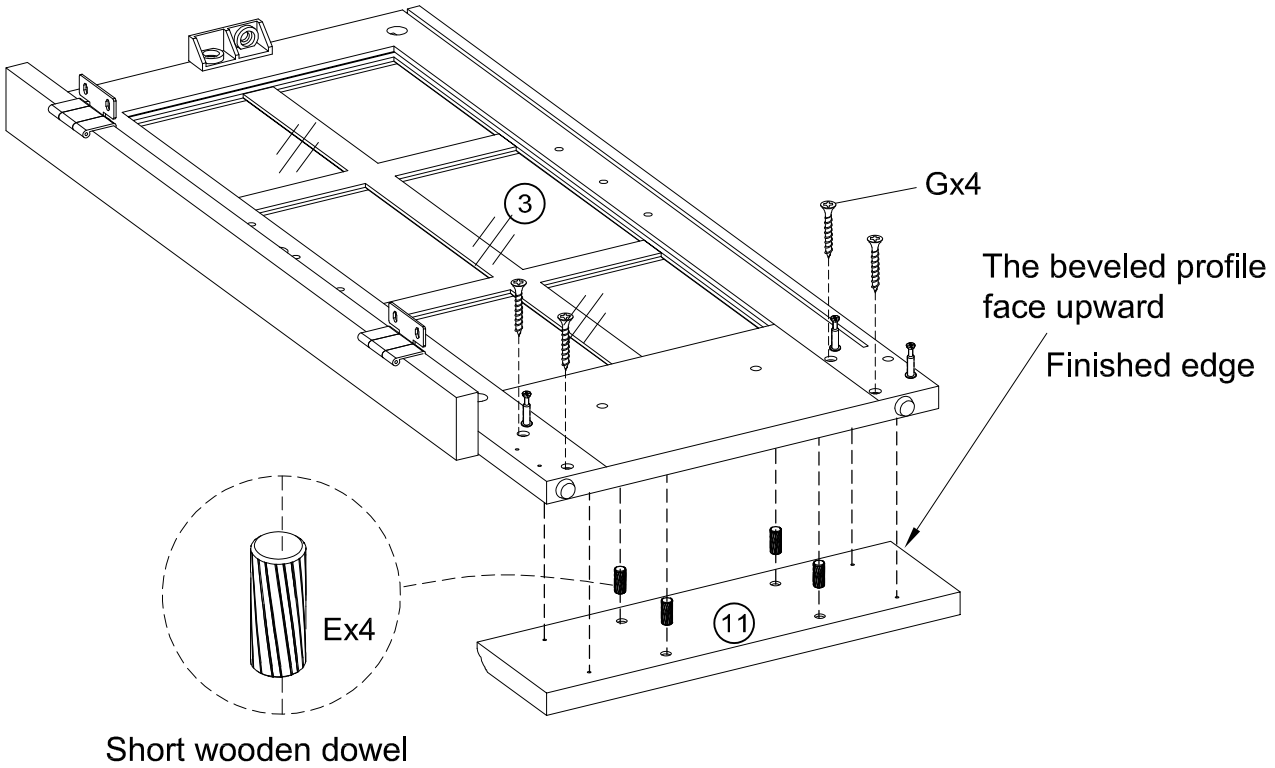
3
Gx4
The beveled profile face upward
Finished edge
Ex4
11
Short wooden dowel


STEP 10

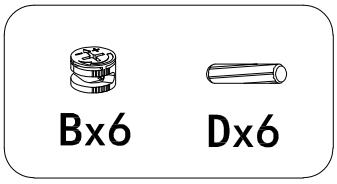


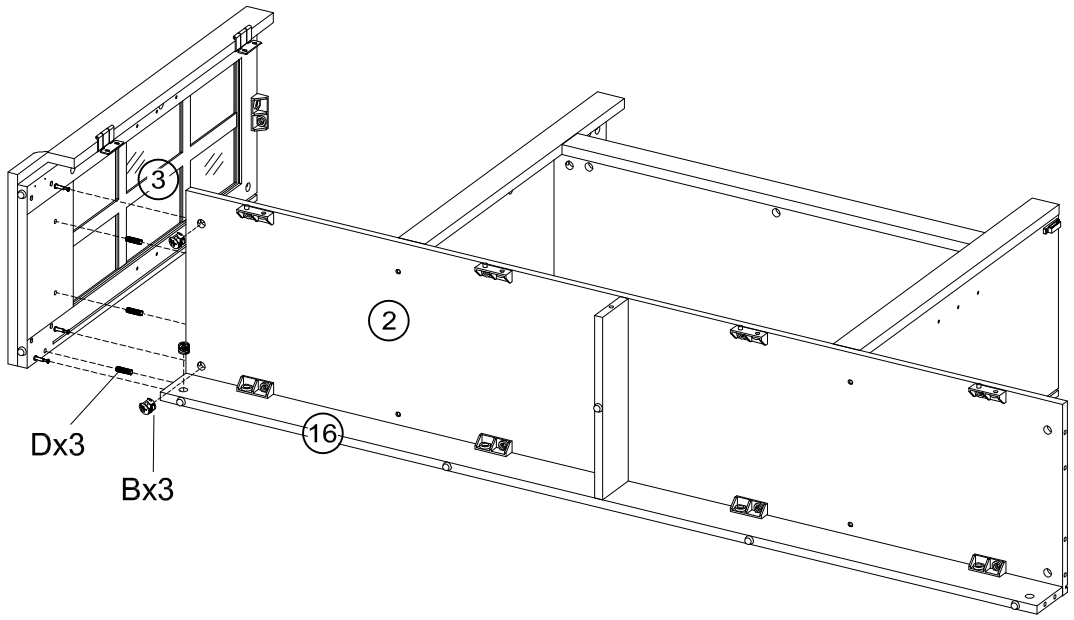


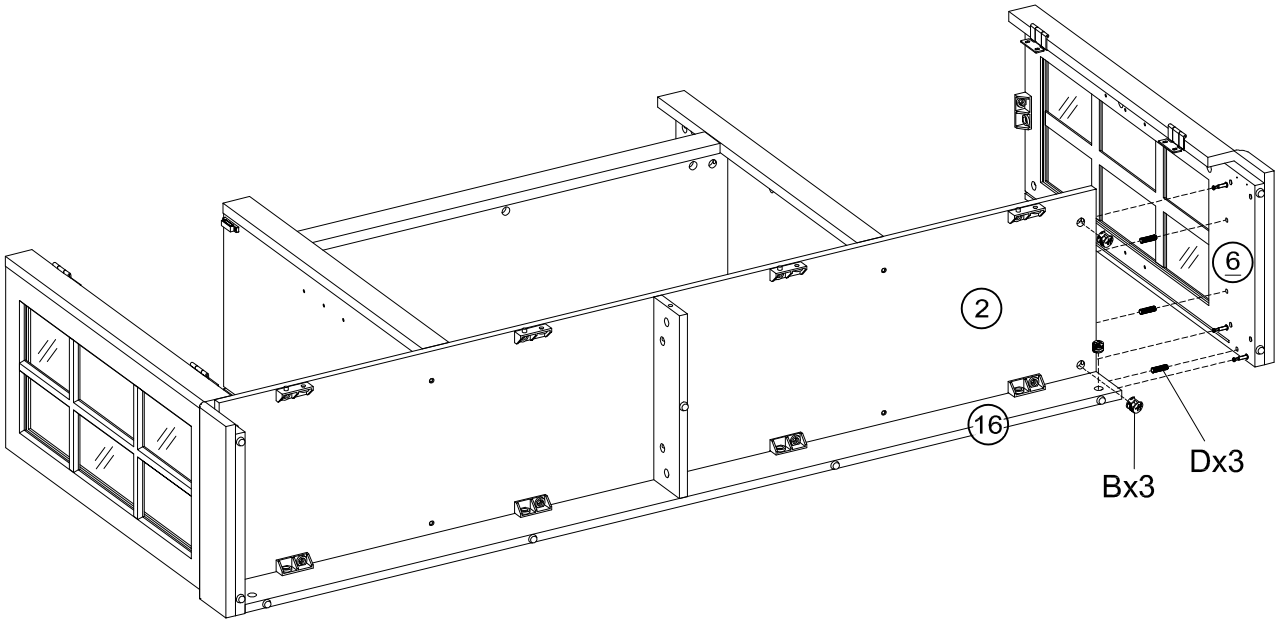

STEP 11

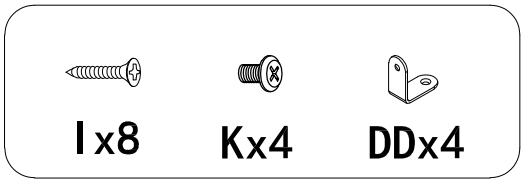


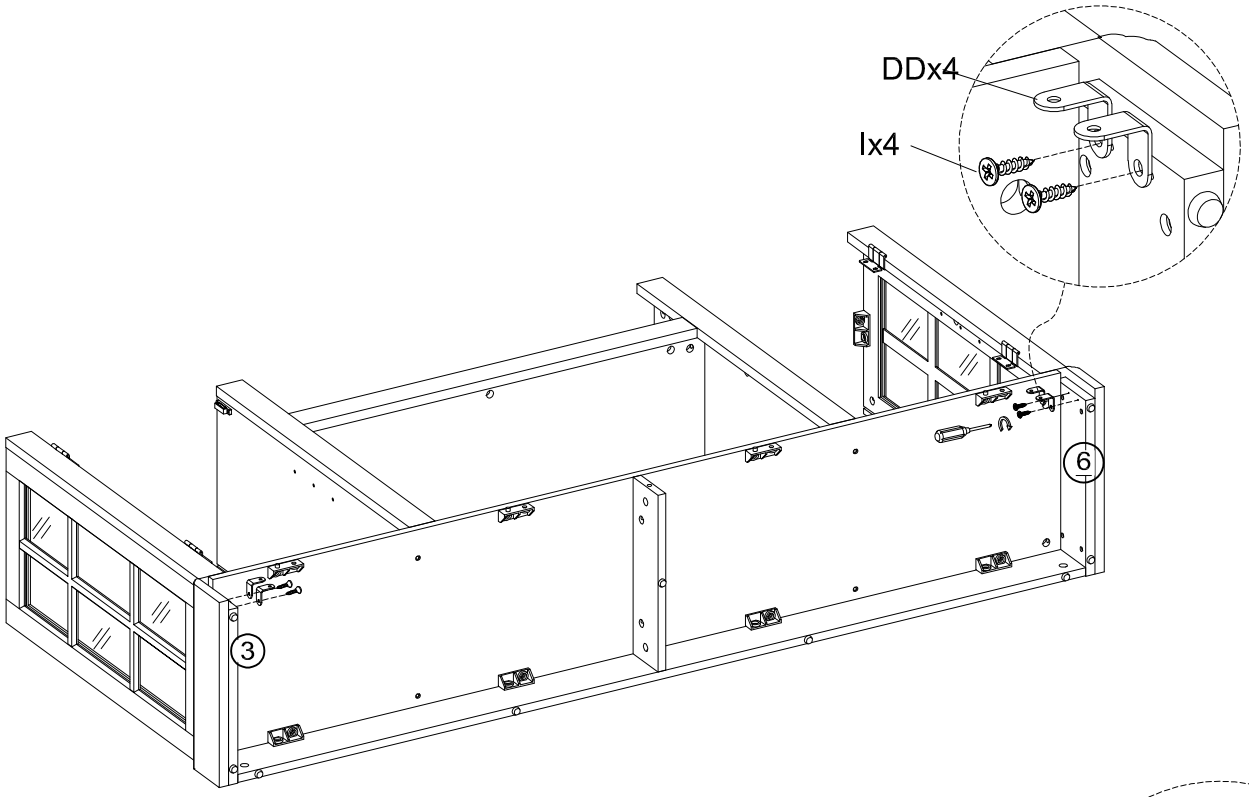

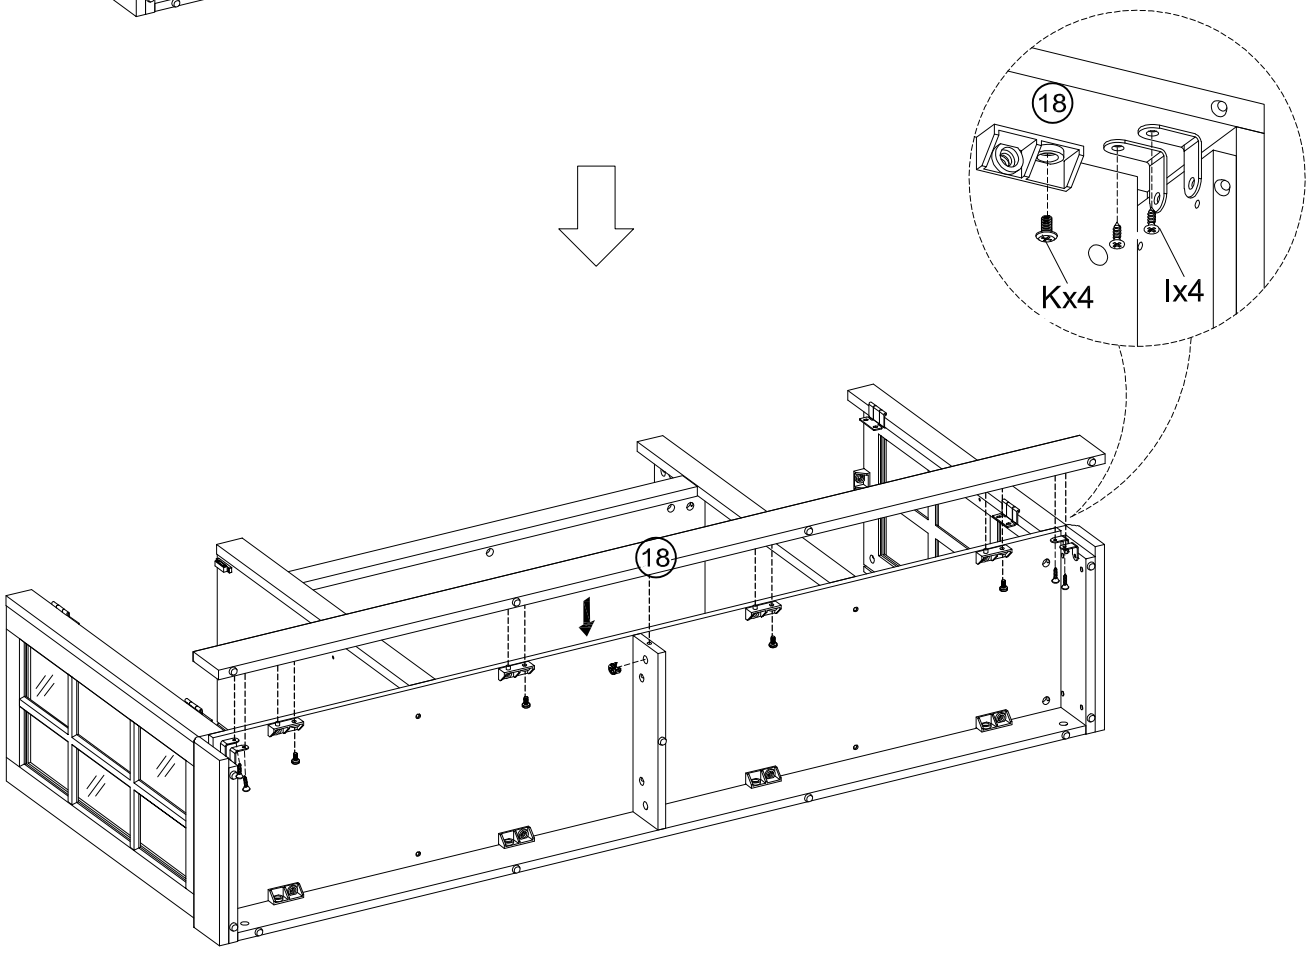



STEP 12

Note the holes direction.

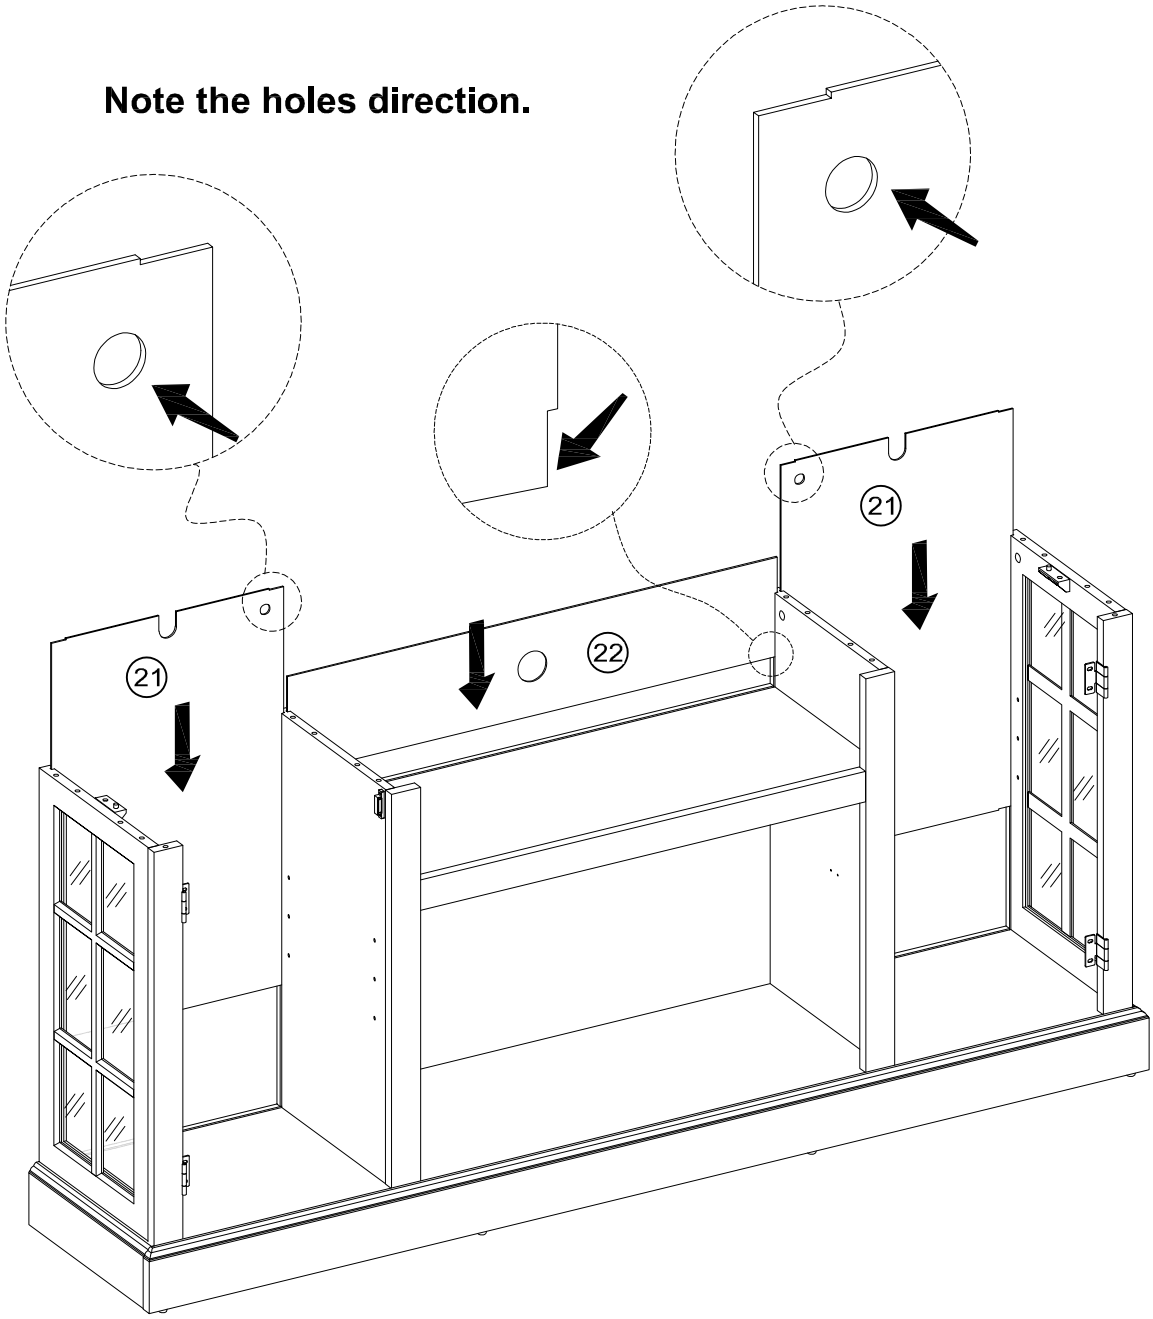

STEP 13



Sx2



Ax8


Zx6


Wx12


BBx2

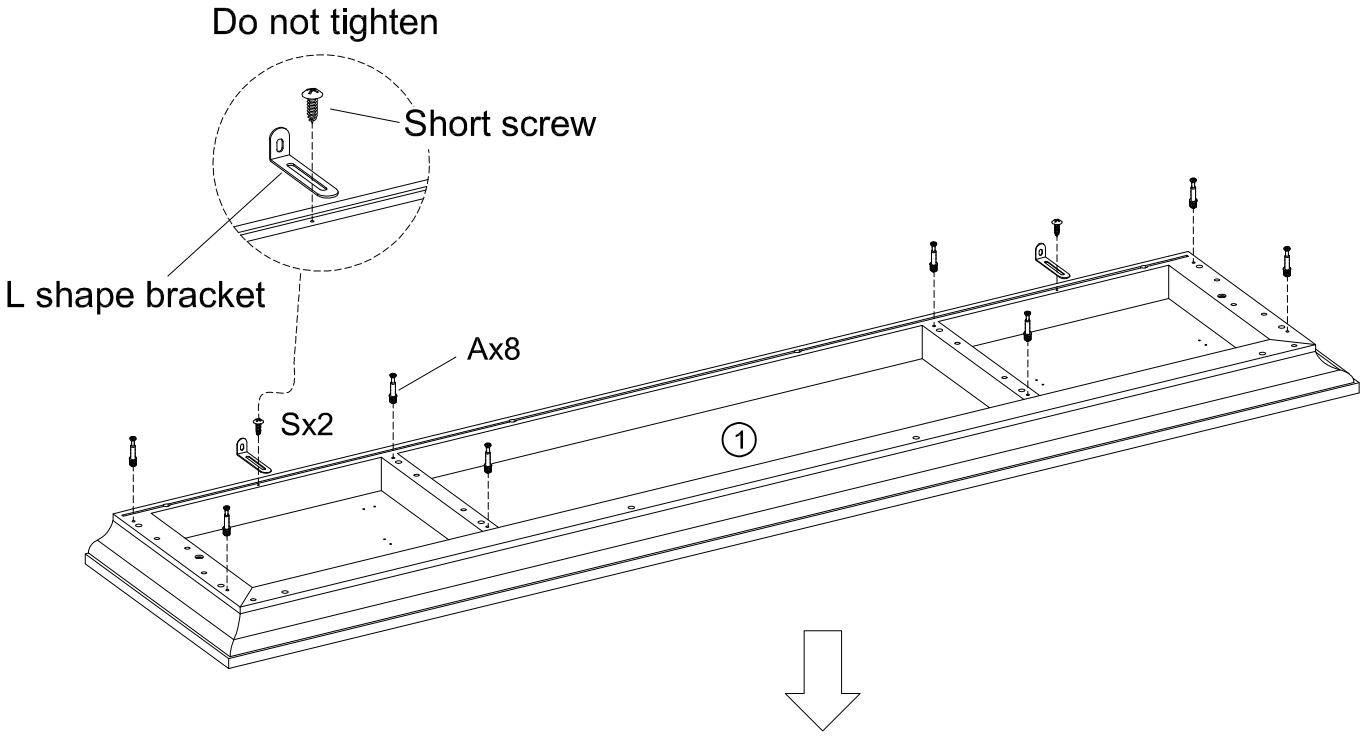

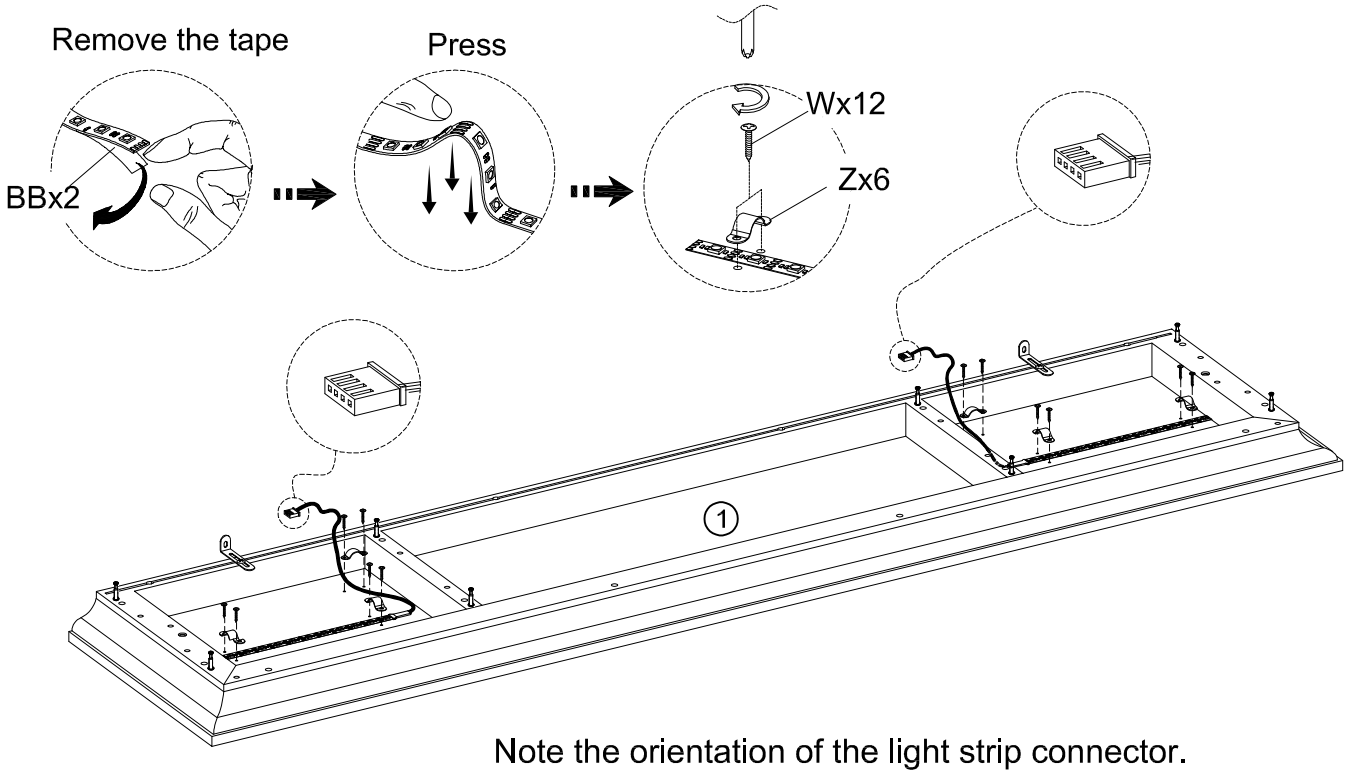



Note the orientation of the light strip connector.

STEP 14


Dx10 Bx8 Kx2

An assistance is required with this step.

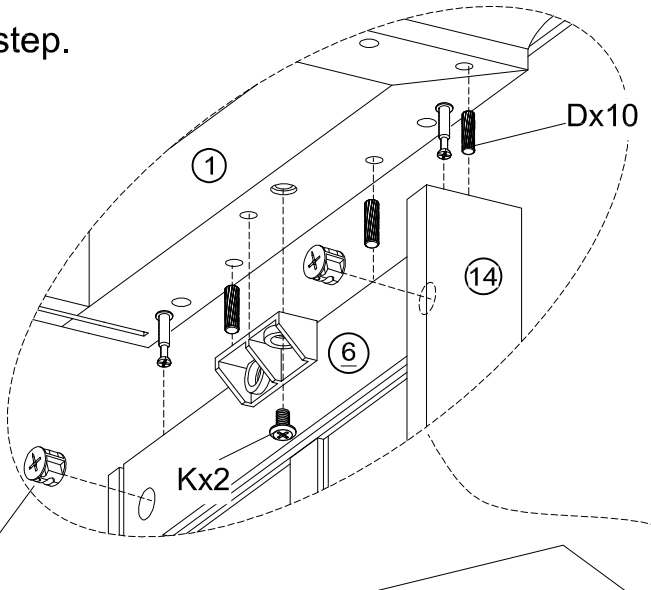


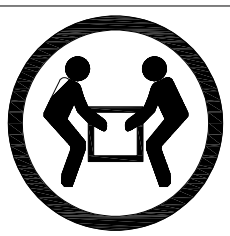



CAUTION: Heavy! You may need assistance with this step.

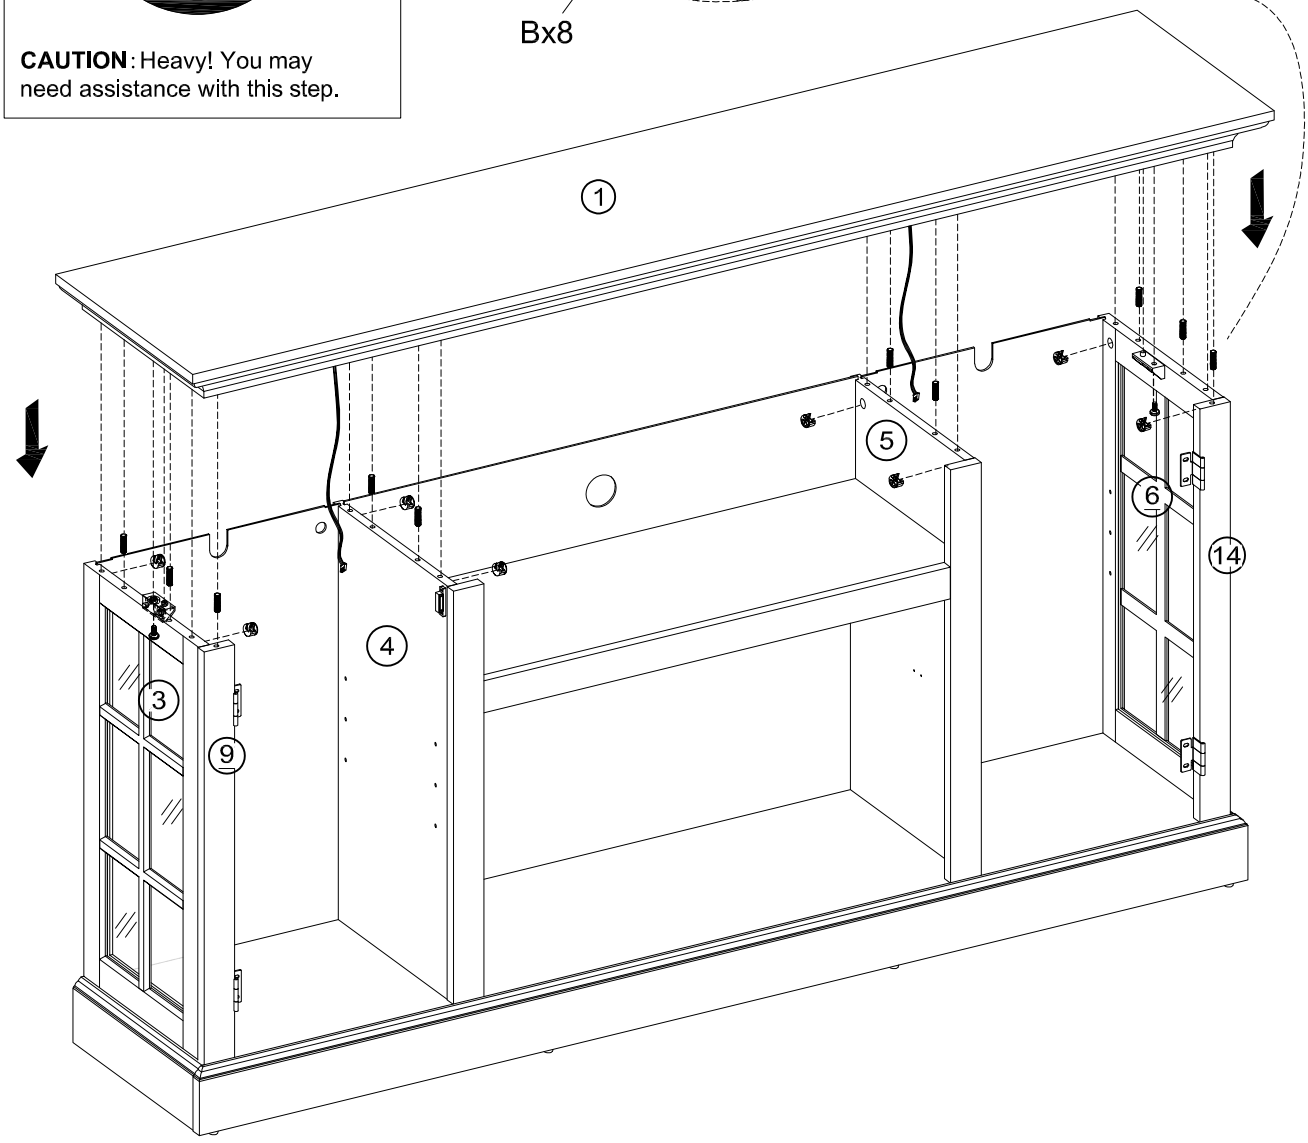


STEP 15

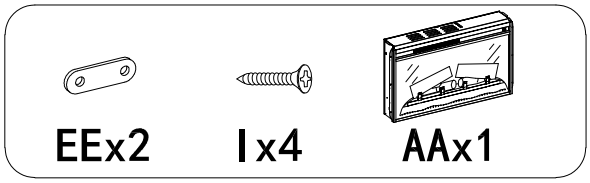


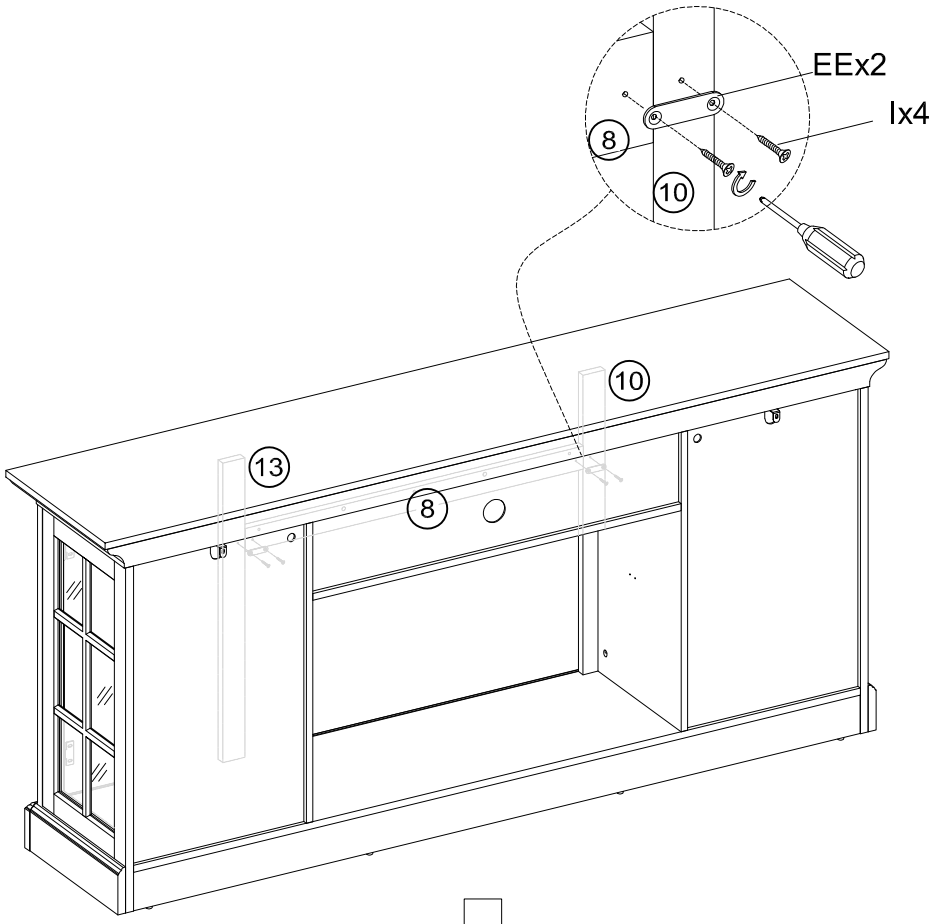

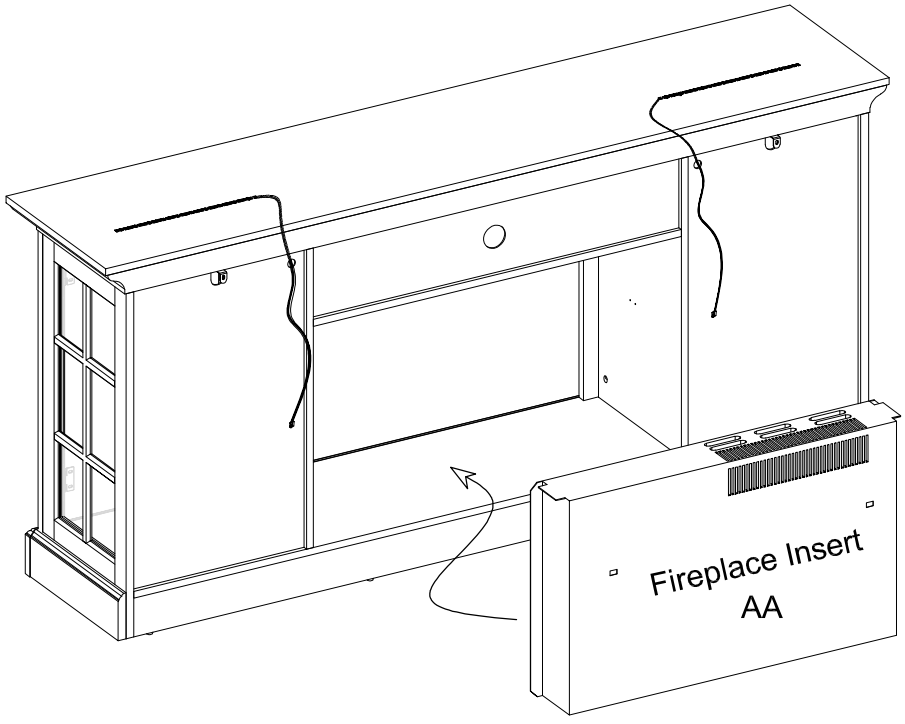


STEP 16

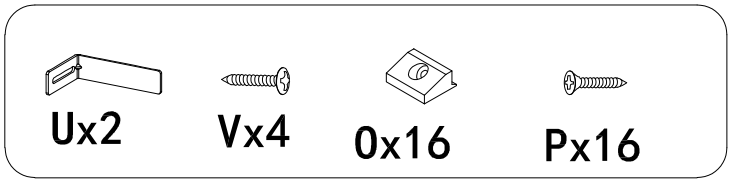

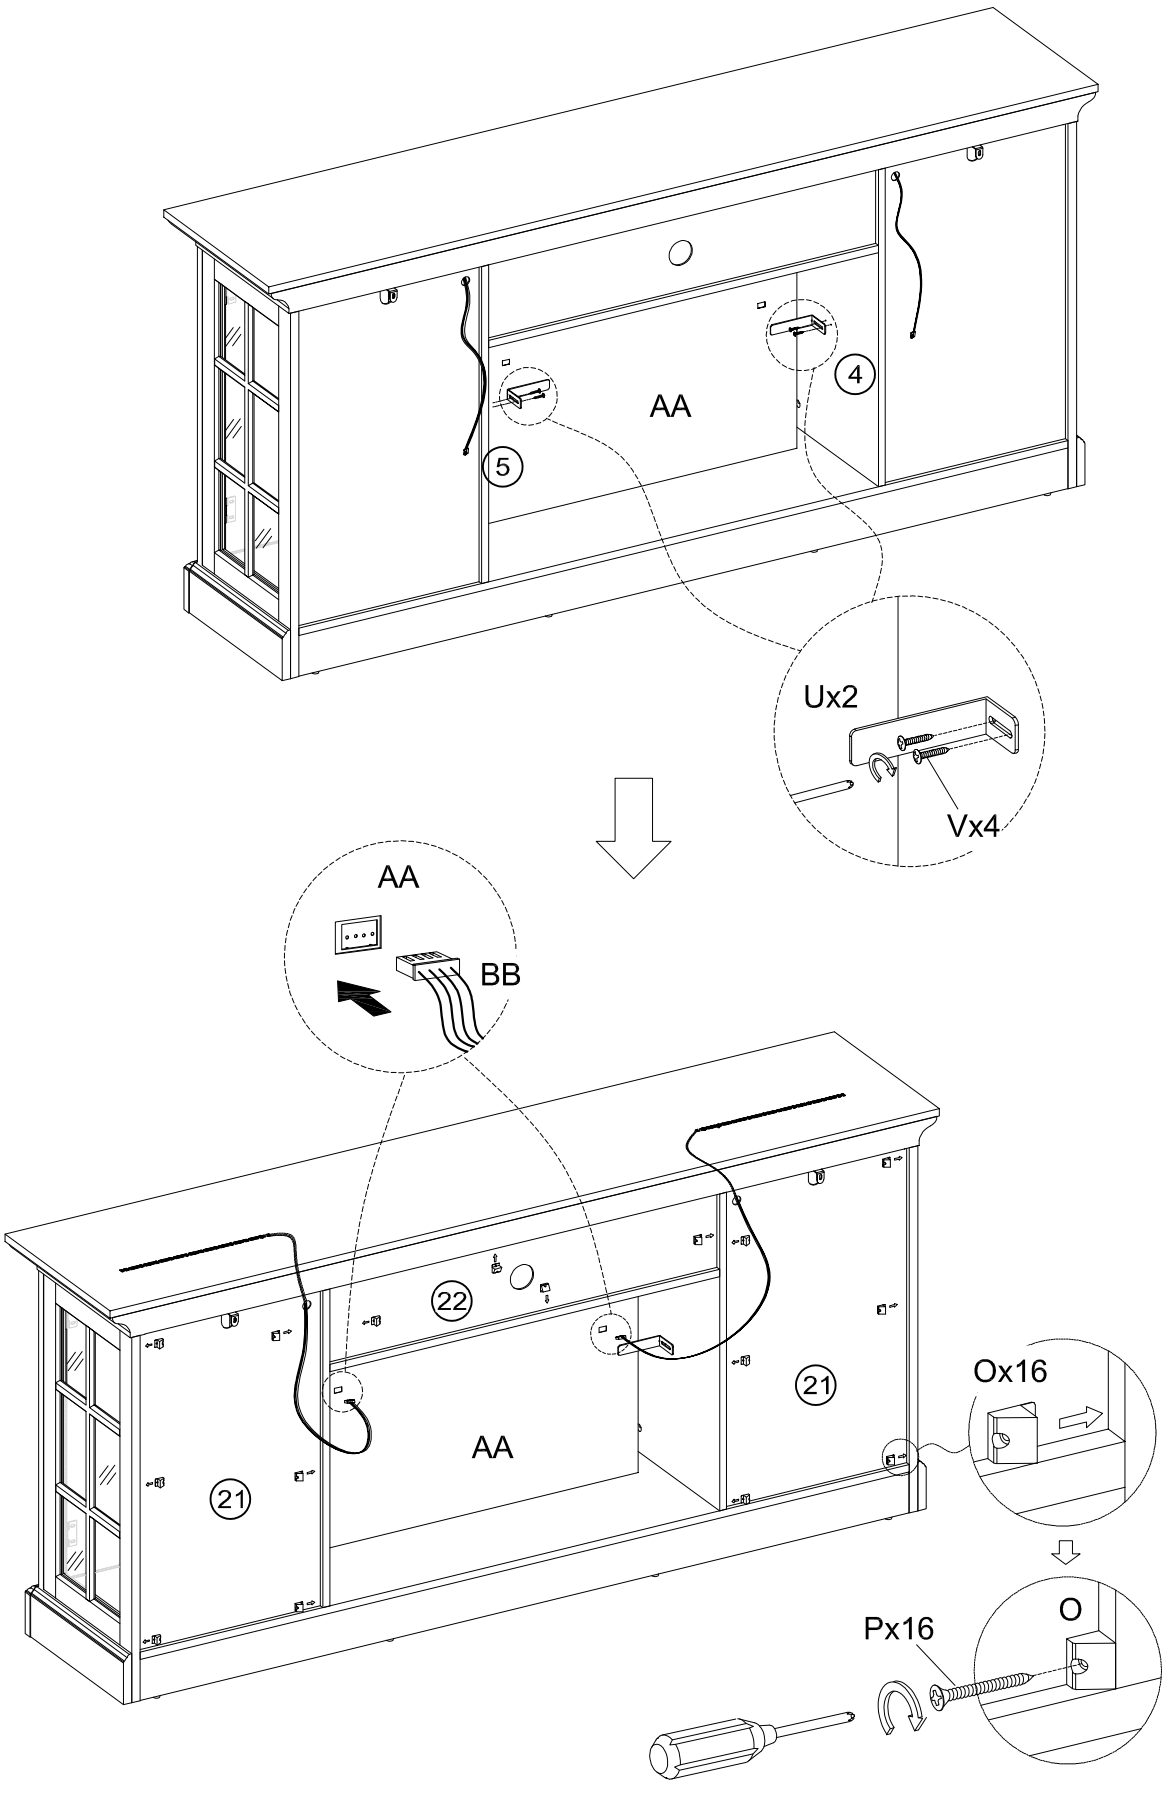


STEP 17




Sx2


WARNING


Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over, we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

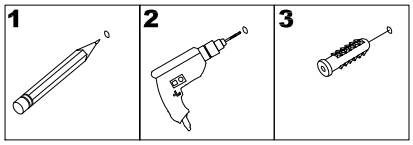


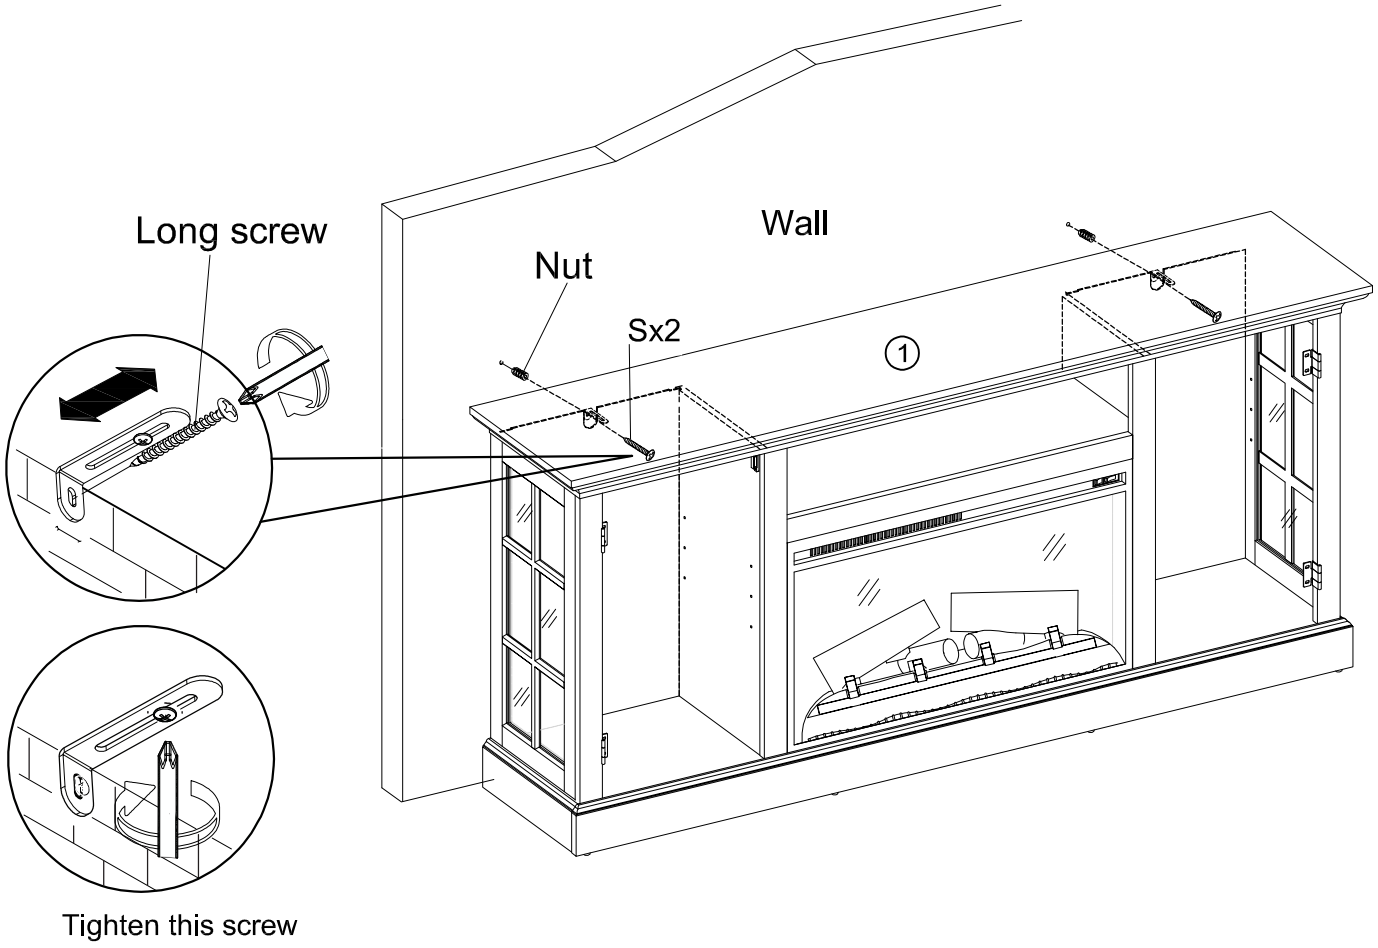


STEP 18

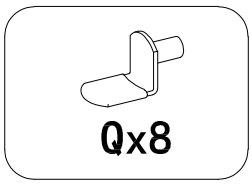


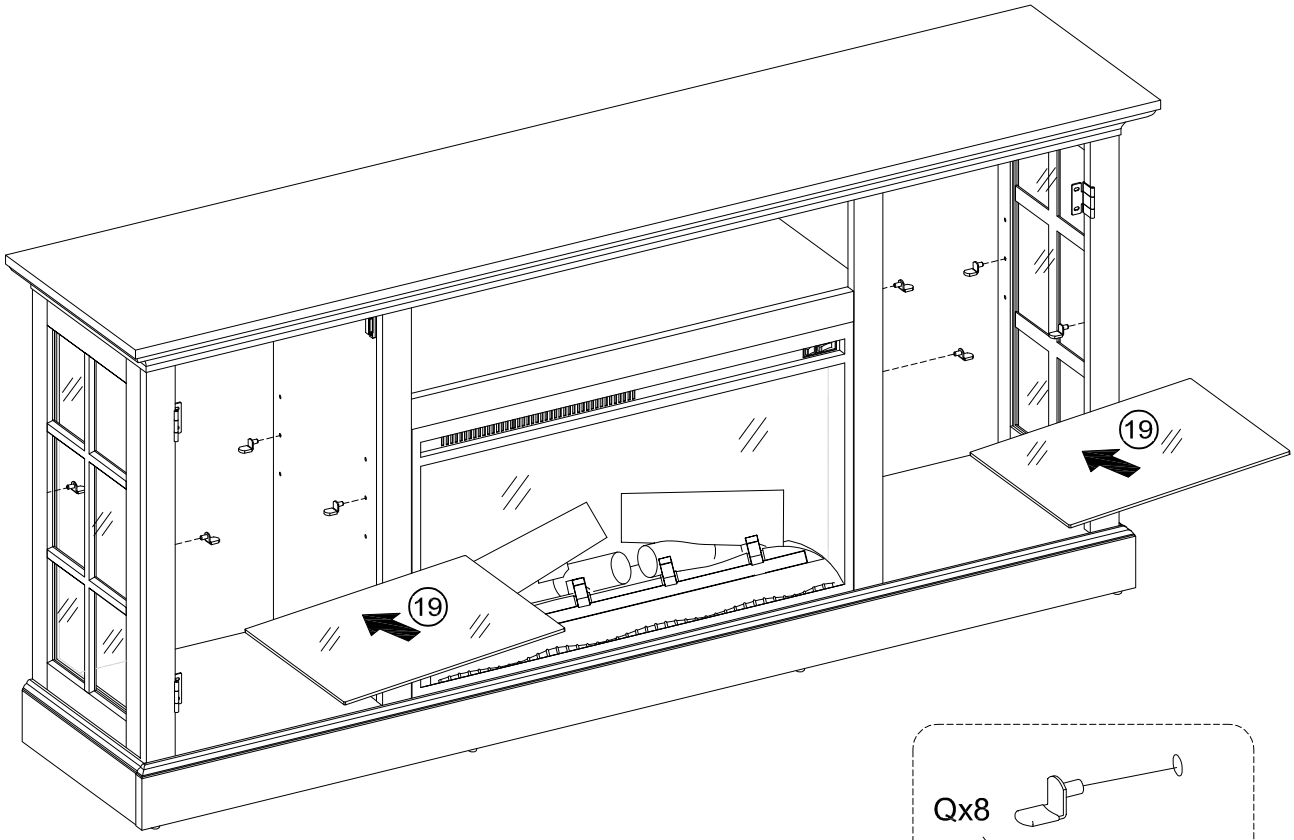


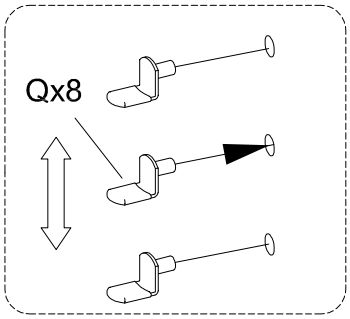

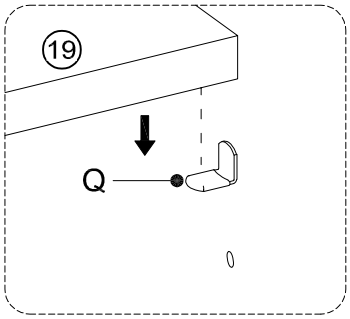



STEP 19

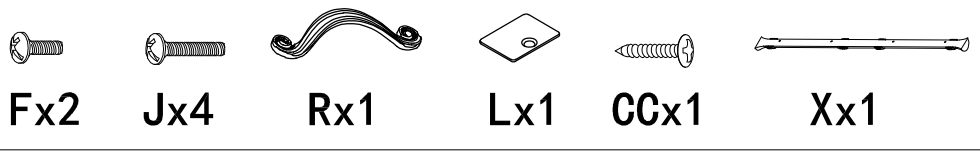

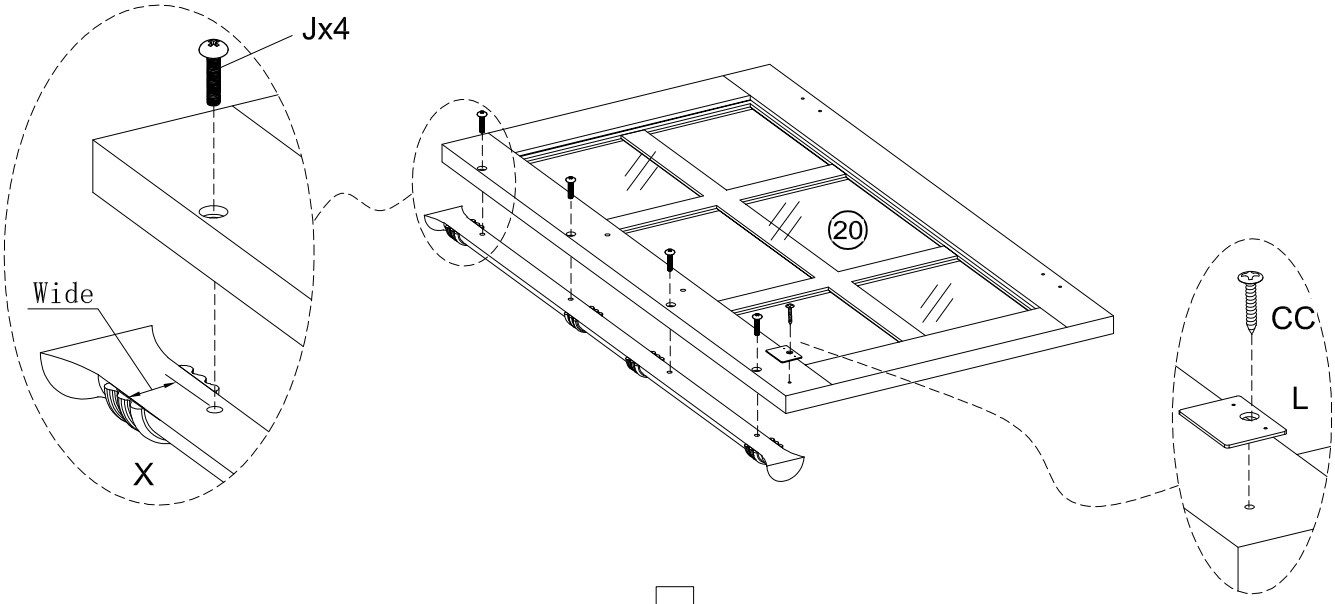



Pay attention to the direction of the S-handle.

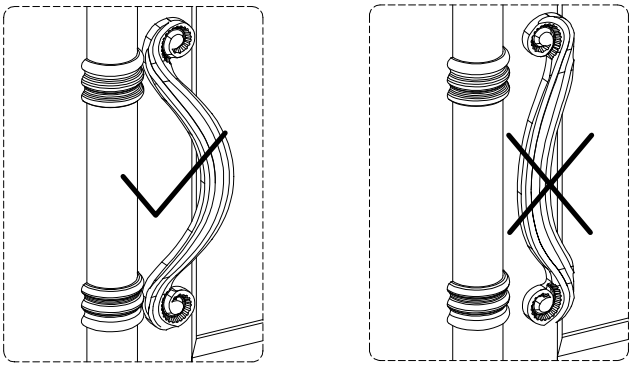


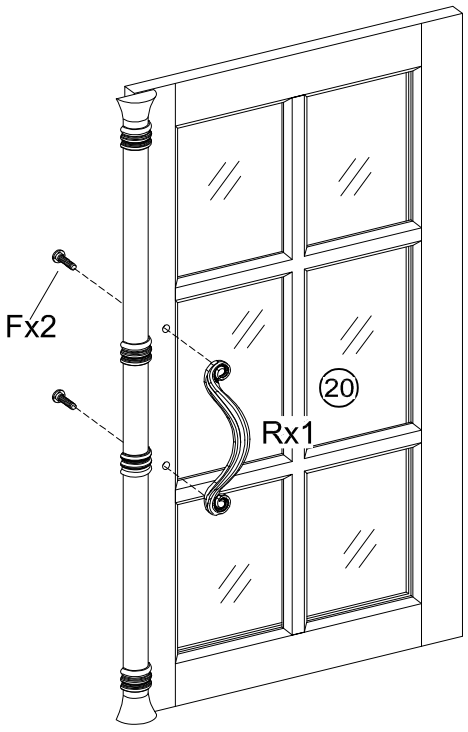


STEP 20

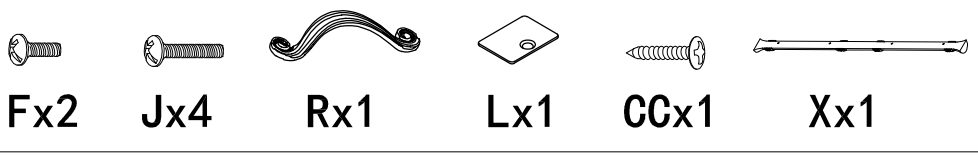

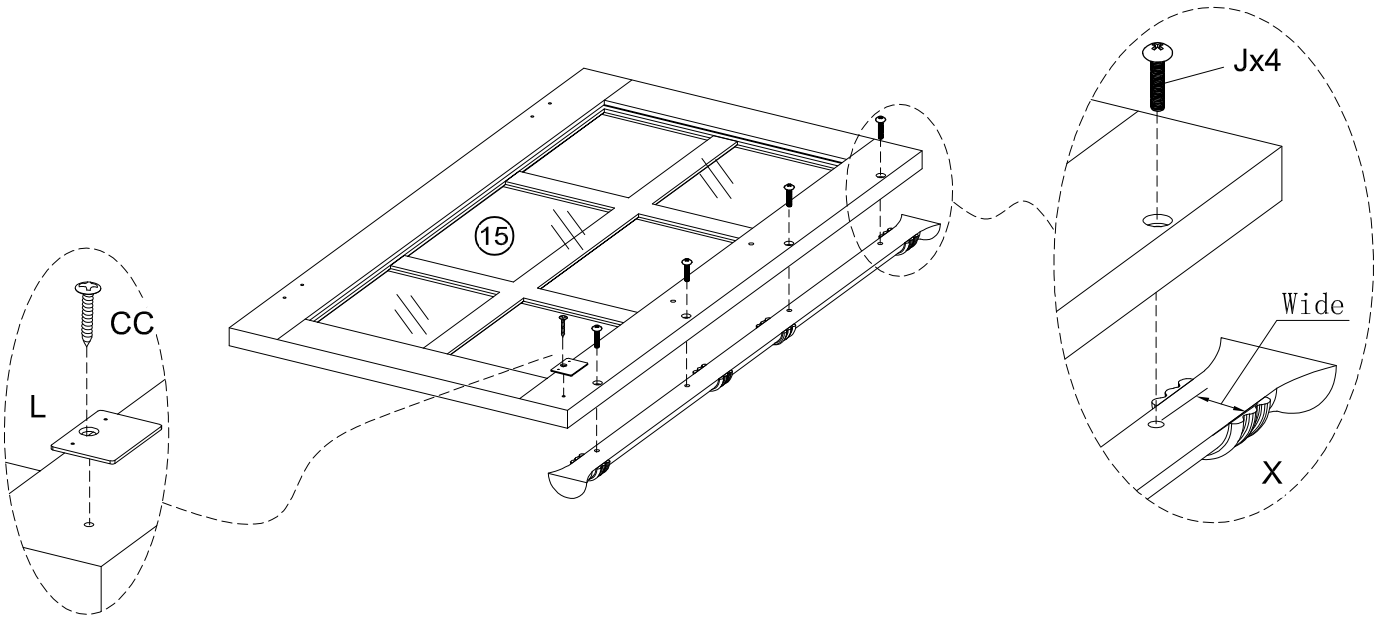

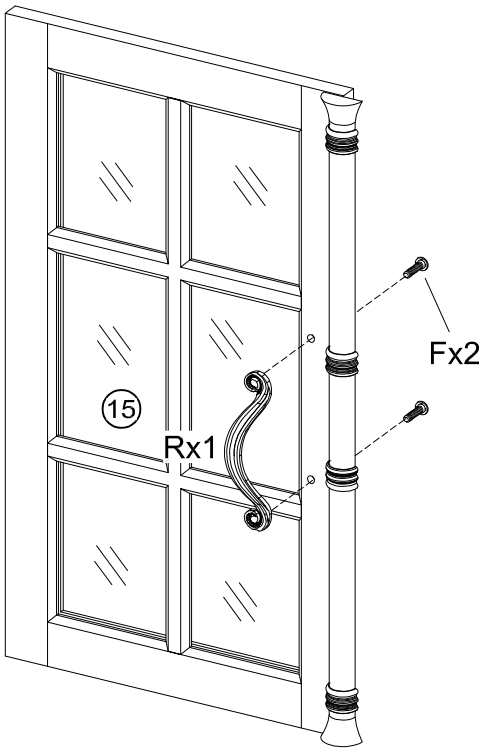


Pay attention to the direction of the S-handle.

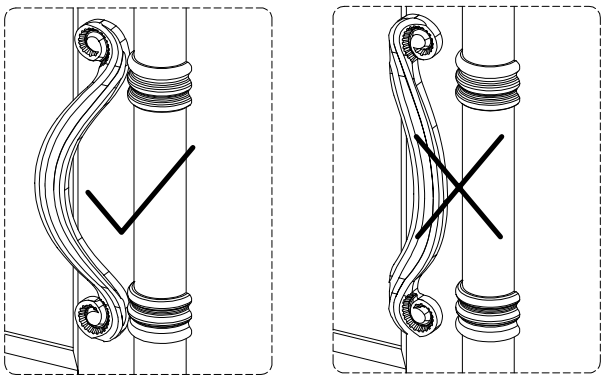


STEP 21

Ix12

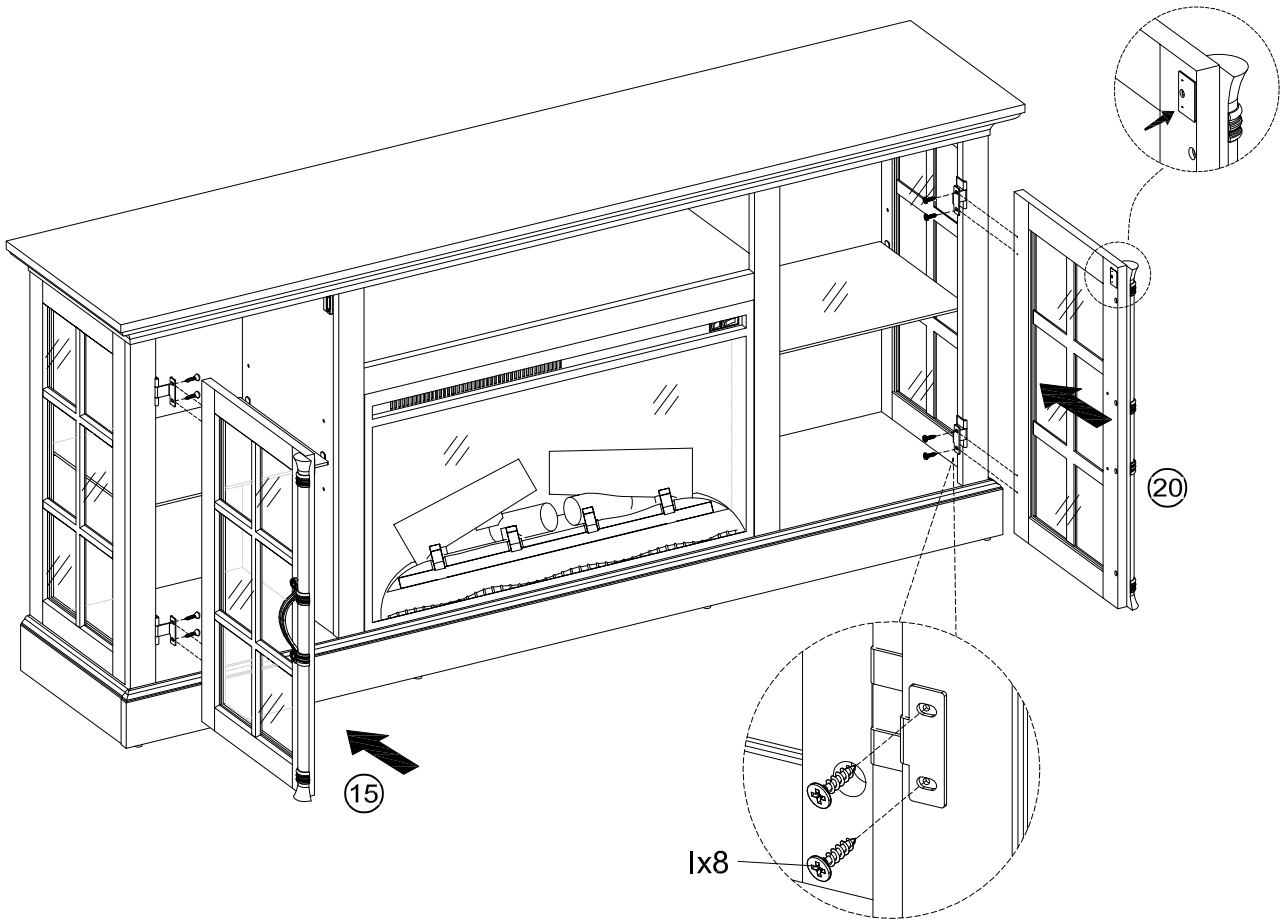


Tip

Adjusting The Cabinet Doors

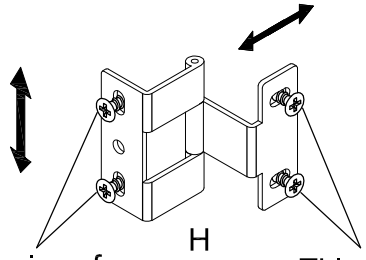

The side screw can adjust the size of the upper and lower gaps of the door.


This side screw can adjust the size of the left and right gaps of the door.

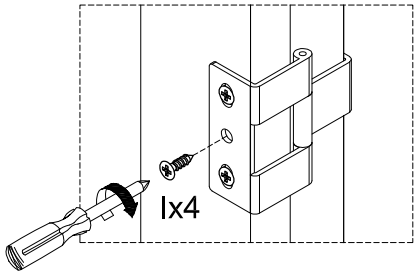


After adjusting the door gaps evenly as shown in the diagram above, finally tighten the round hole screw to secure and reinforce it, preventing the door panel from sagging later.

STEP 22

Cx37

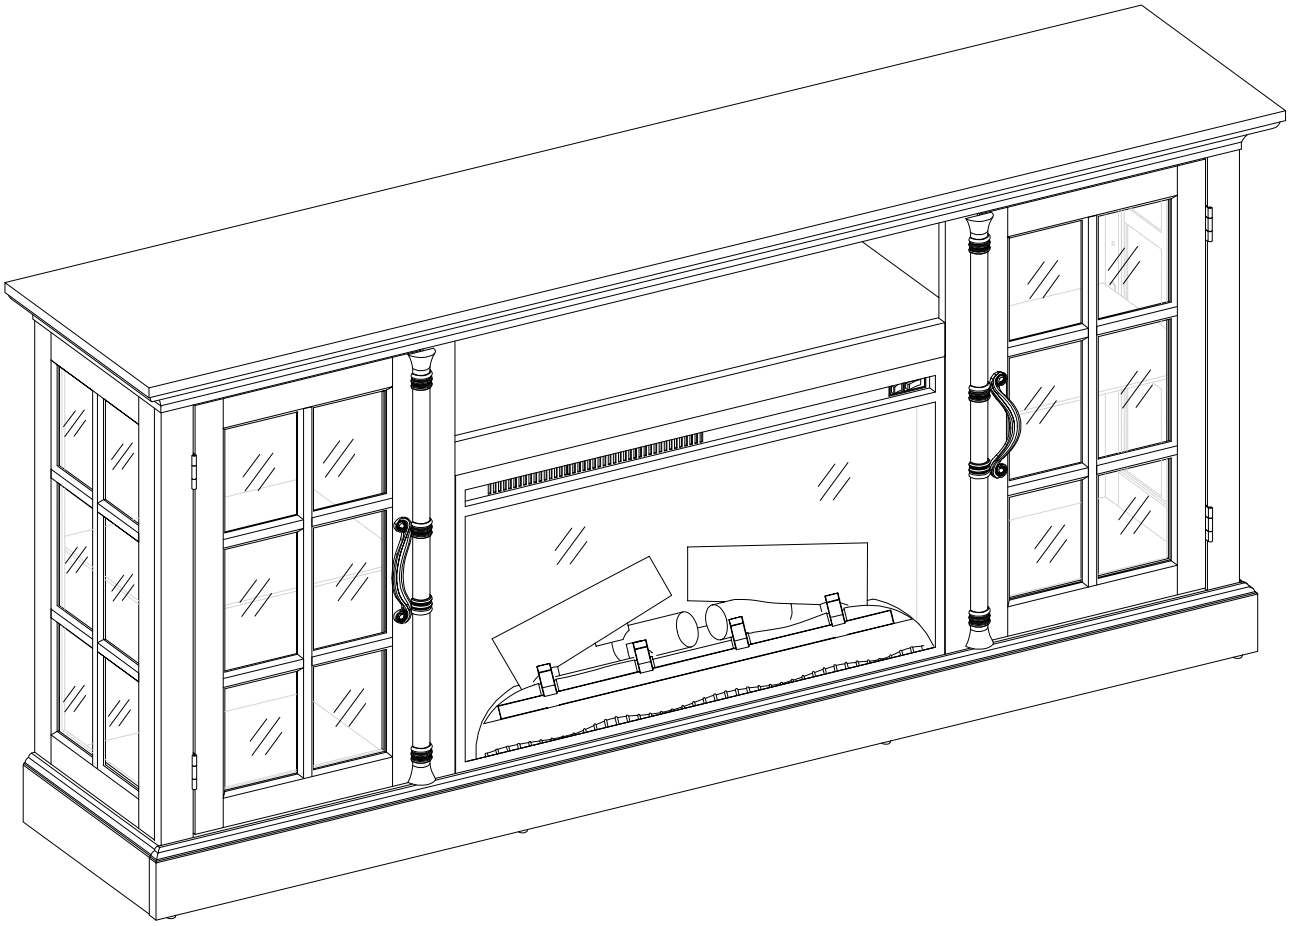

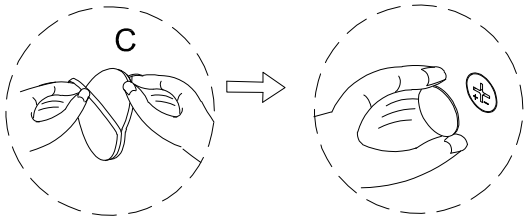

· Stick stickers (C) on cam locks (B).

Final Assembly