
INSTALLATION


Product Manual


Version: KF510083US-00-26A-YSJ

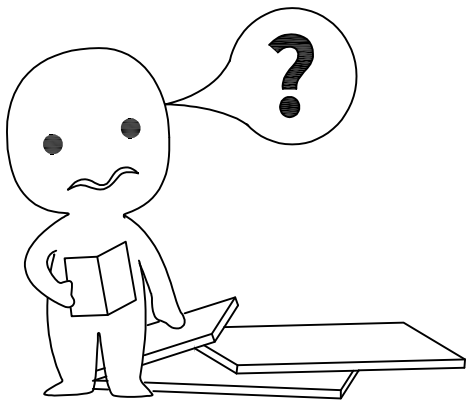

IMPORTANT INFORMATION!


please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

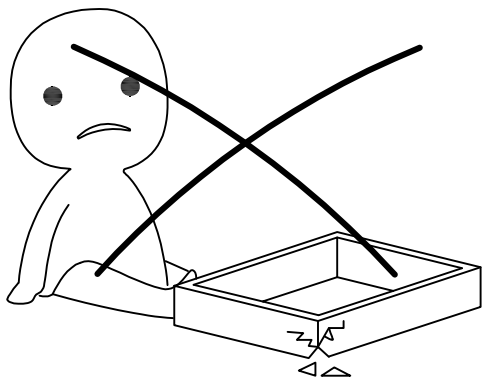


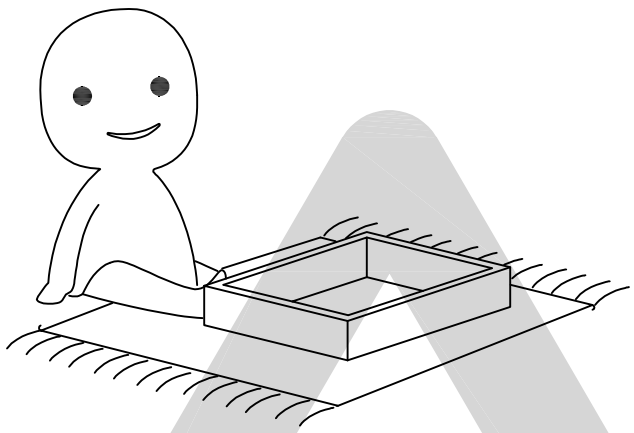

AVOID SCRATCHES!


In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.

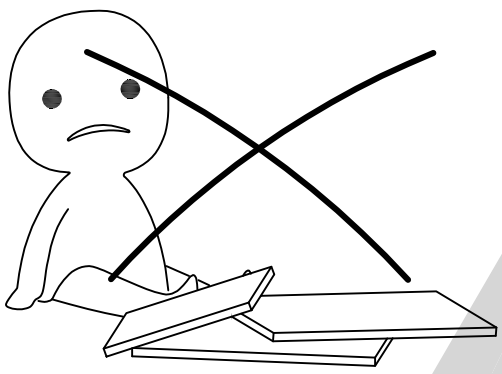

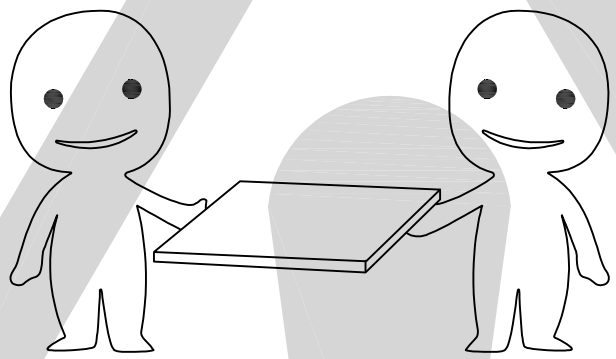

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

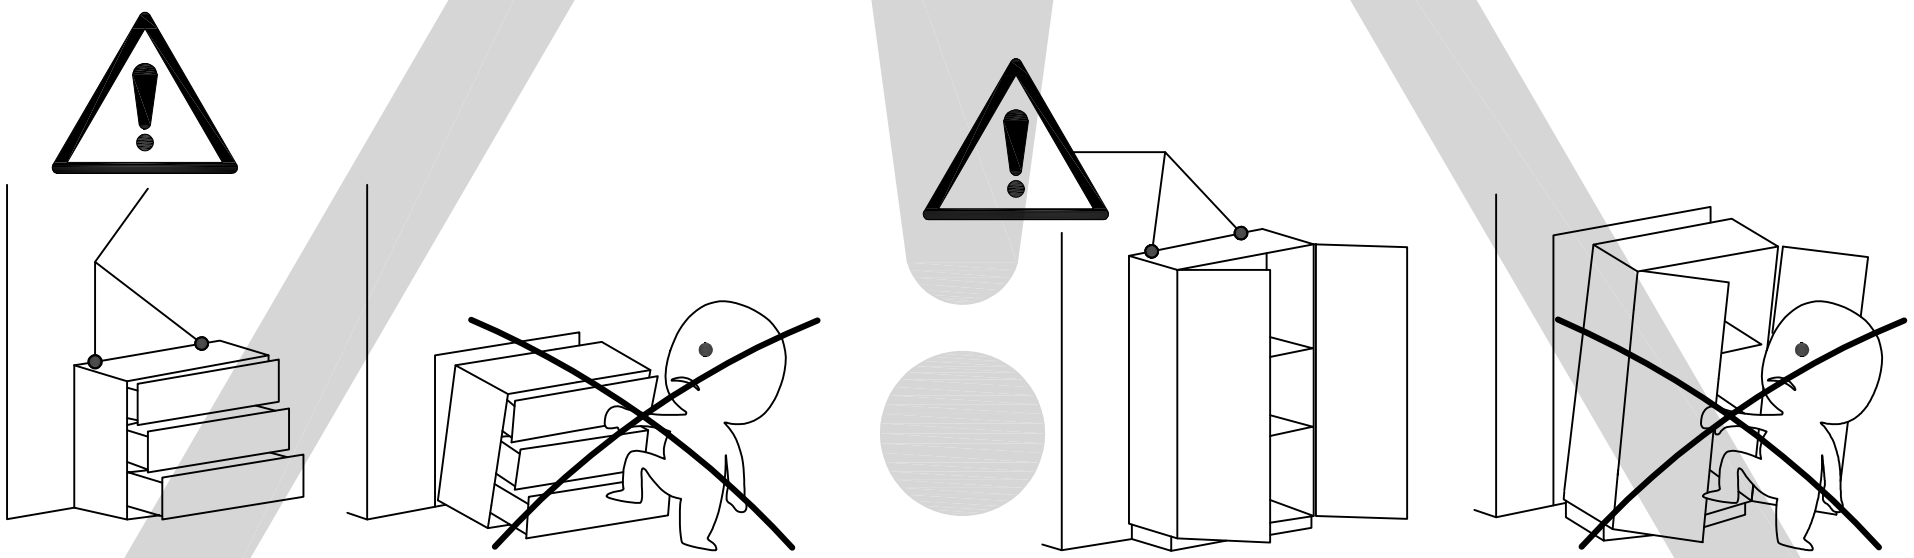

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.


For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.





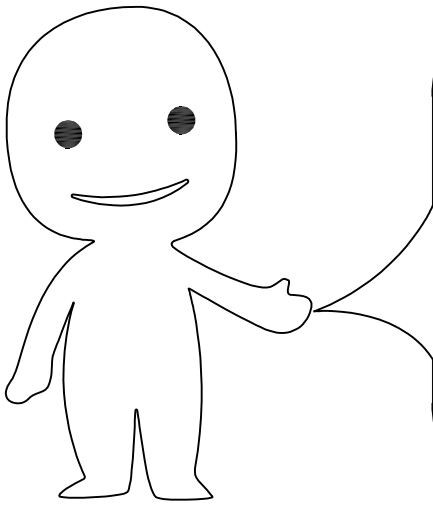







Please prepare the following tools





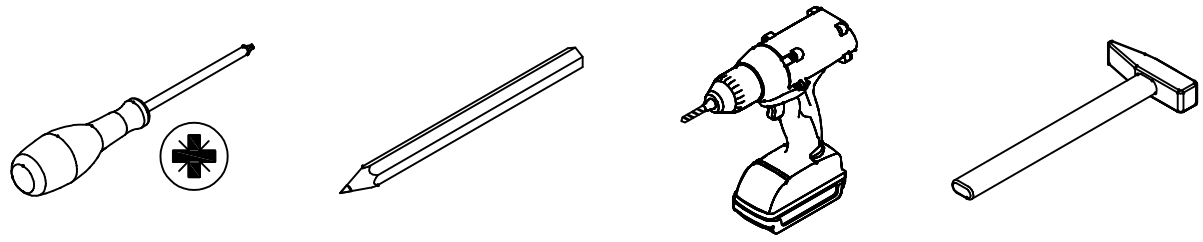






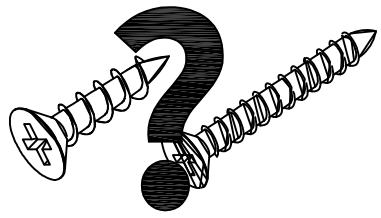





When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

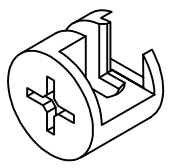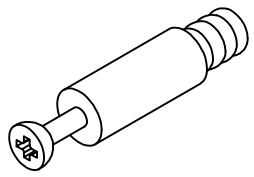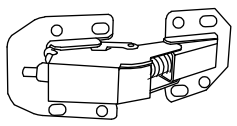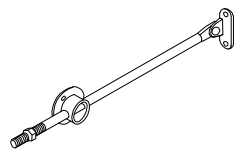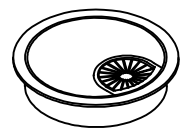
A x 52	B x 52	C x 4	D x 2	E x 2
				
∅15 x 10 mm	∅6 x 35 mm			∅60

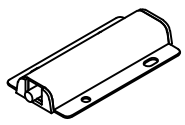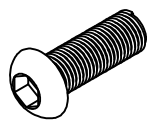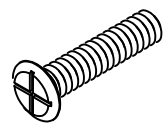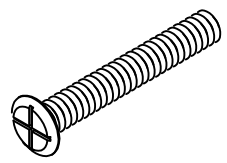
F x 2	G x 4	H x 22	J x 24	K x 4
				
		M6*16mm	M6*25mm	M6*65mm

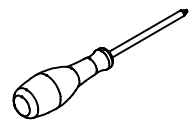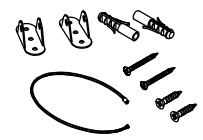
L x 4	M x 4	N x 66	P x 1	Q x 2
				
M8	M6	M3.5*14		

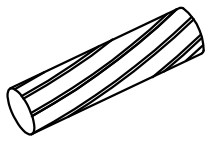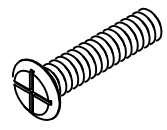
R x 1	S x 4	T x 20	U x 4	V x 4
				
M8	∅8 x 30mm	∅15mm	M6*40mm	∅15 x 10mm

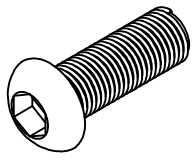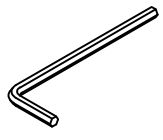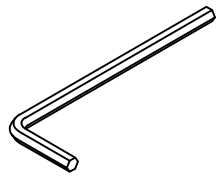
W x 4	Y x 1	Z x 1
		
M8*18mm	M4	M5

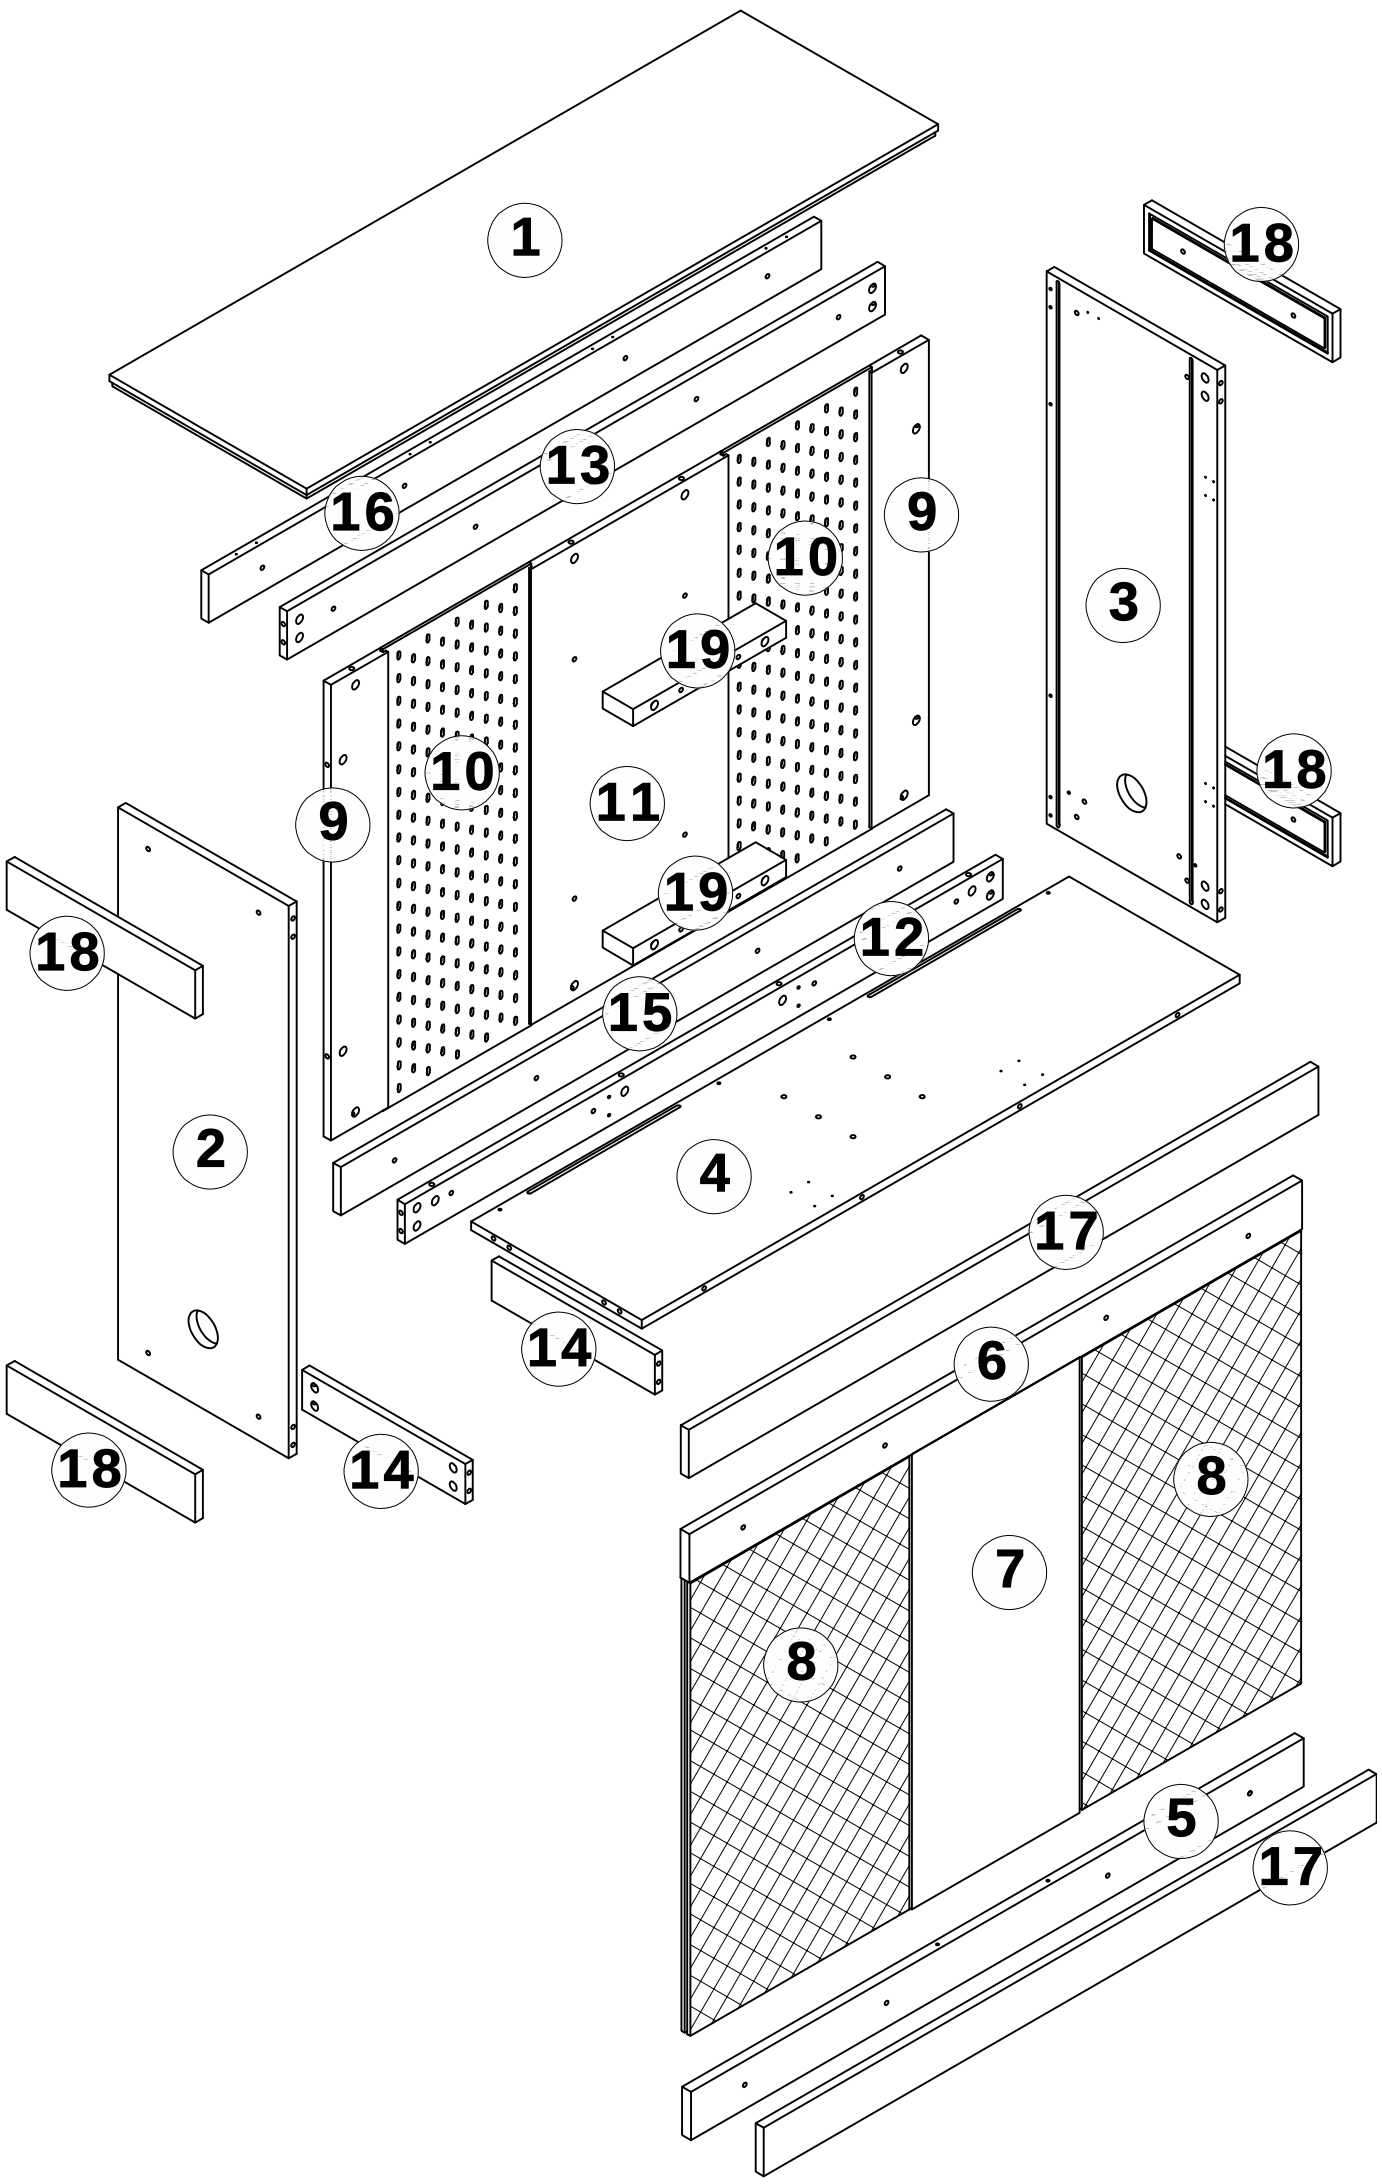
1
18
13
16
9
10
3
19
10
18
9
11
19
12
18
15
2
4
17
14
6
18
14
8
7
8
5
17

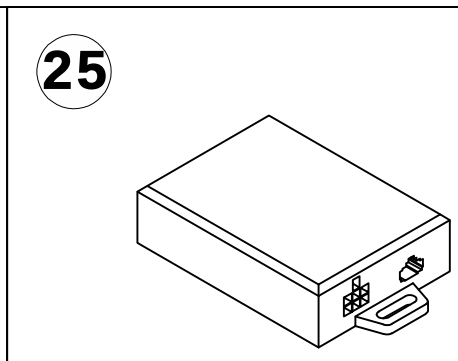

25

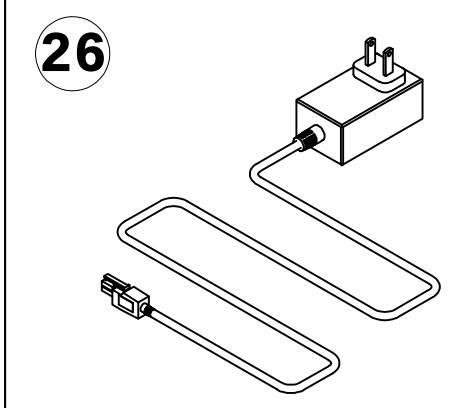
26

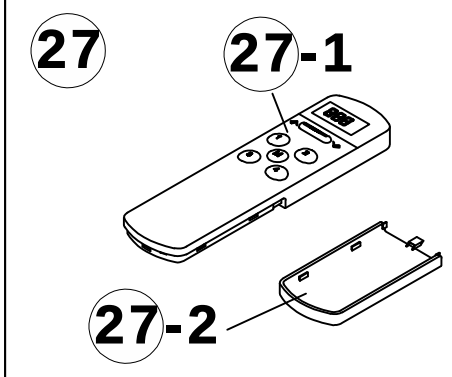

27
27-1
27-2

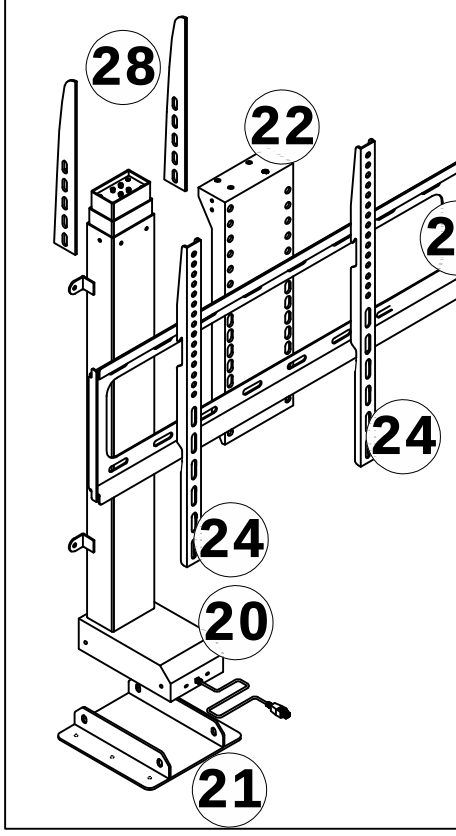
28
22
23
24
24
20
21


⚠WARNING
Children have died from furniture tipover.To reduce the risk of furniture tipover:
• ALWAYS install Anti-tip device provided.
• NEVER put a TV on this product.
• NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
• NEVER open more than one drawer at a time.
• Place heaviest items in the lowest drawers.
This is a permanent label.
Do not remove!
TV

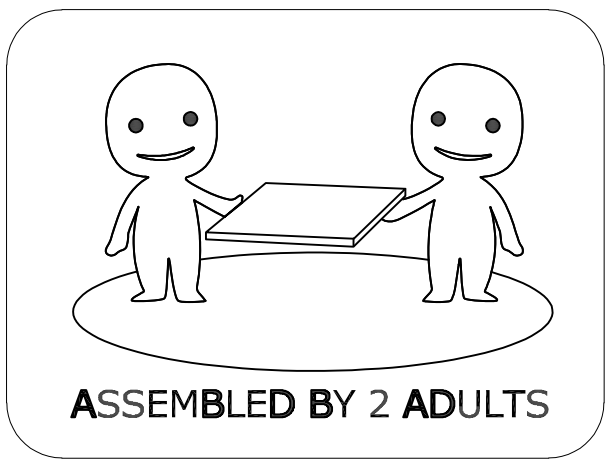

ASSEMBLED BY 2 ADULTS

2-1

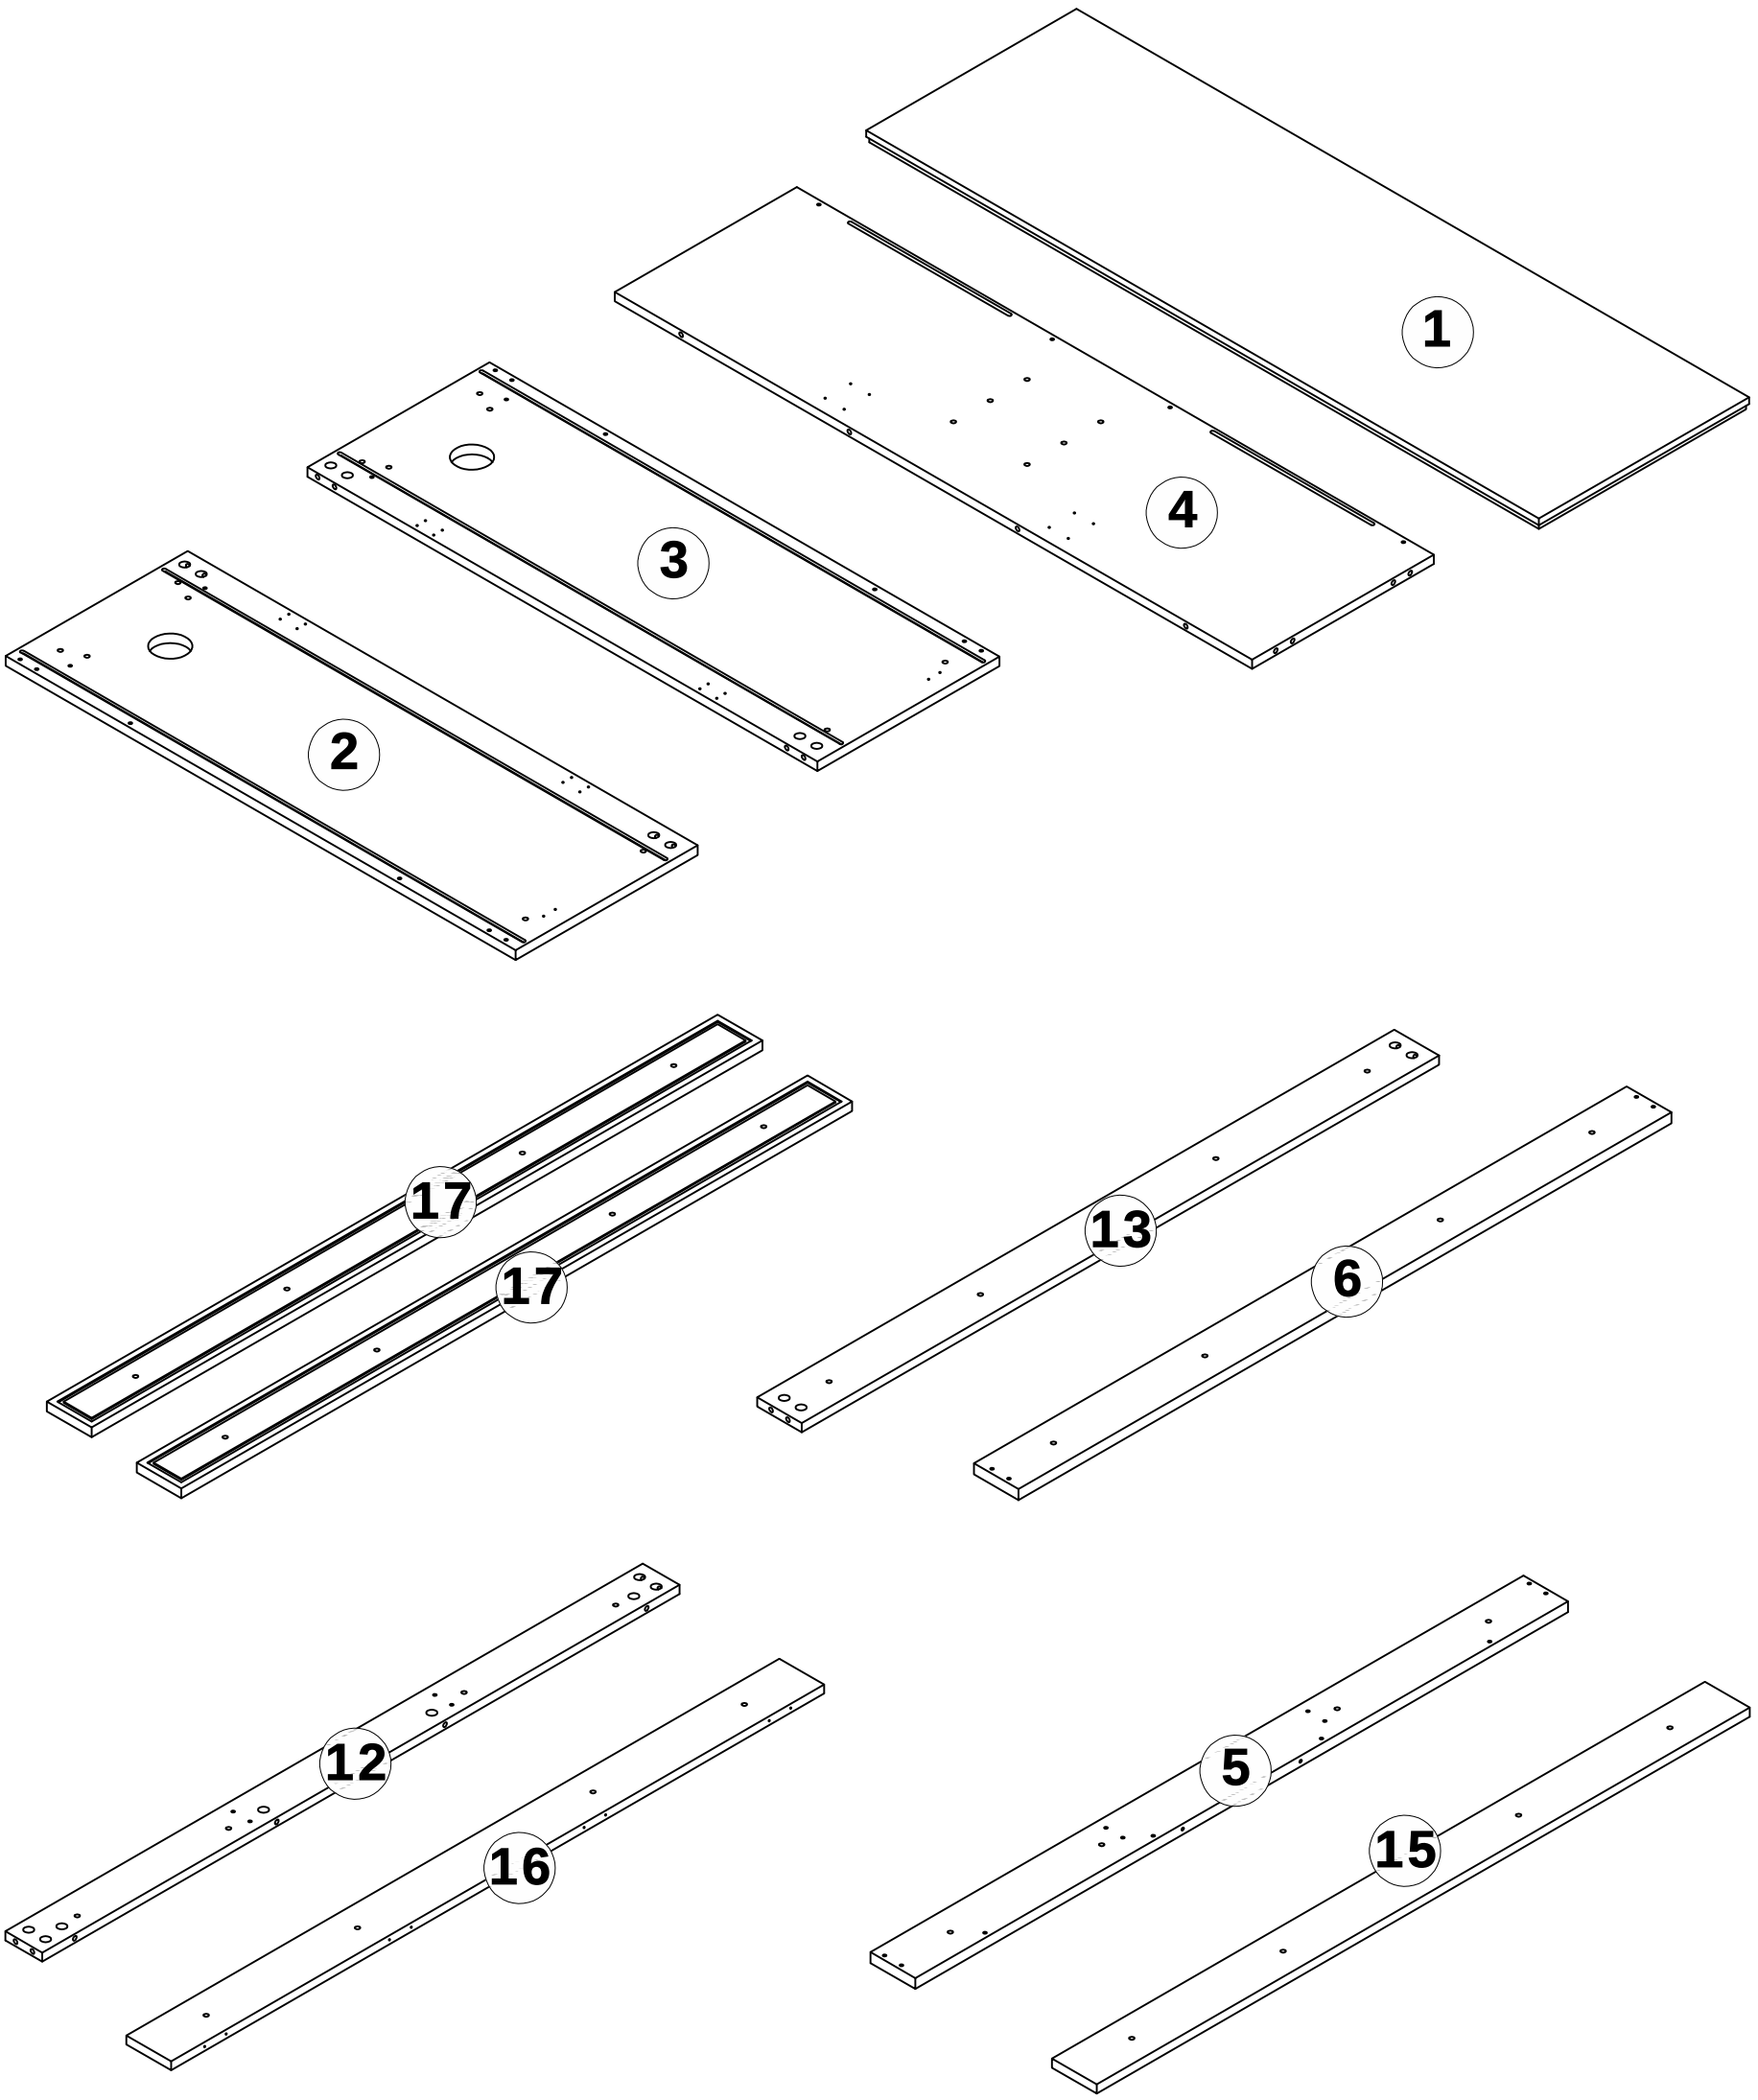


2-2

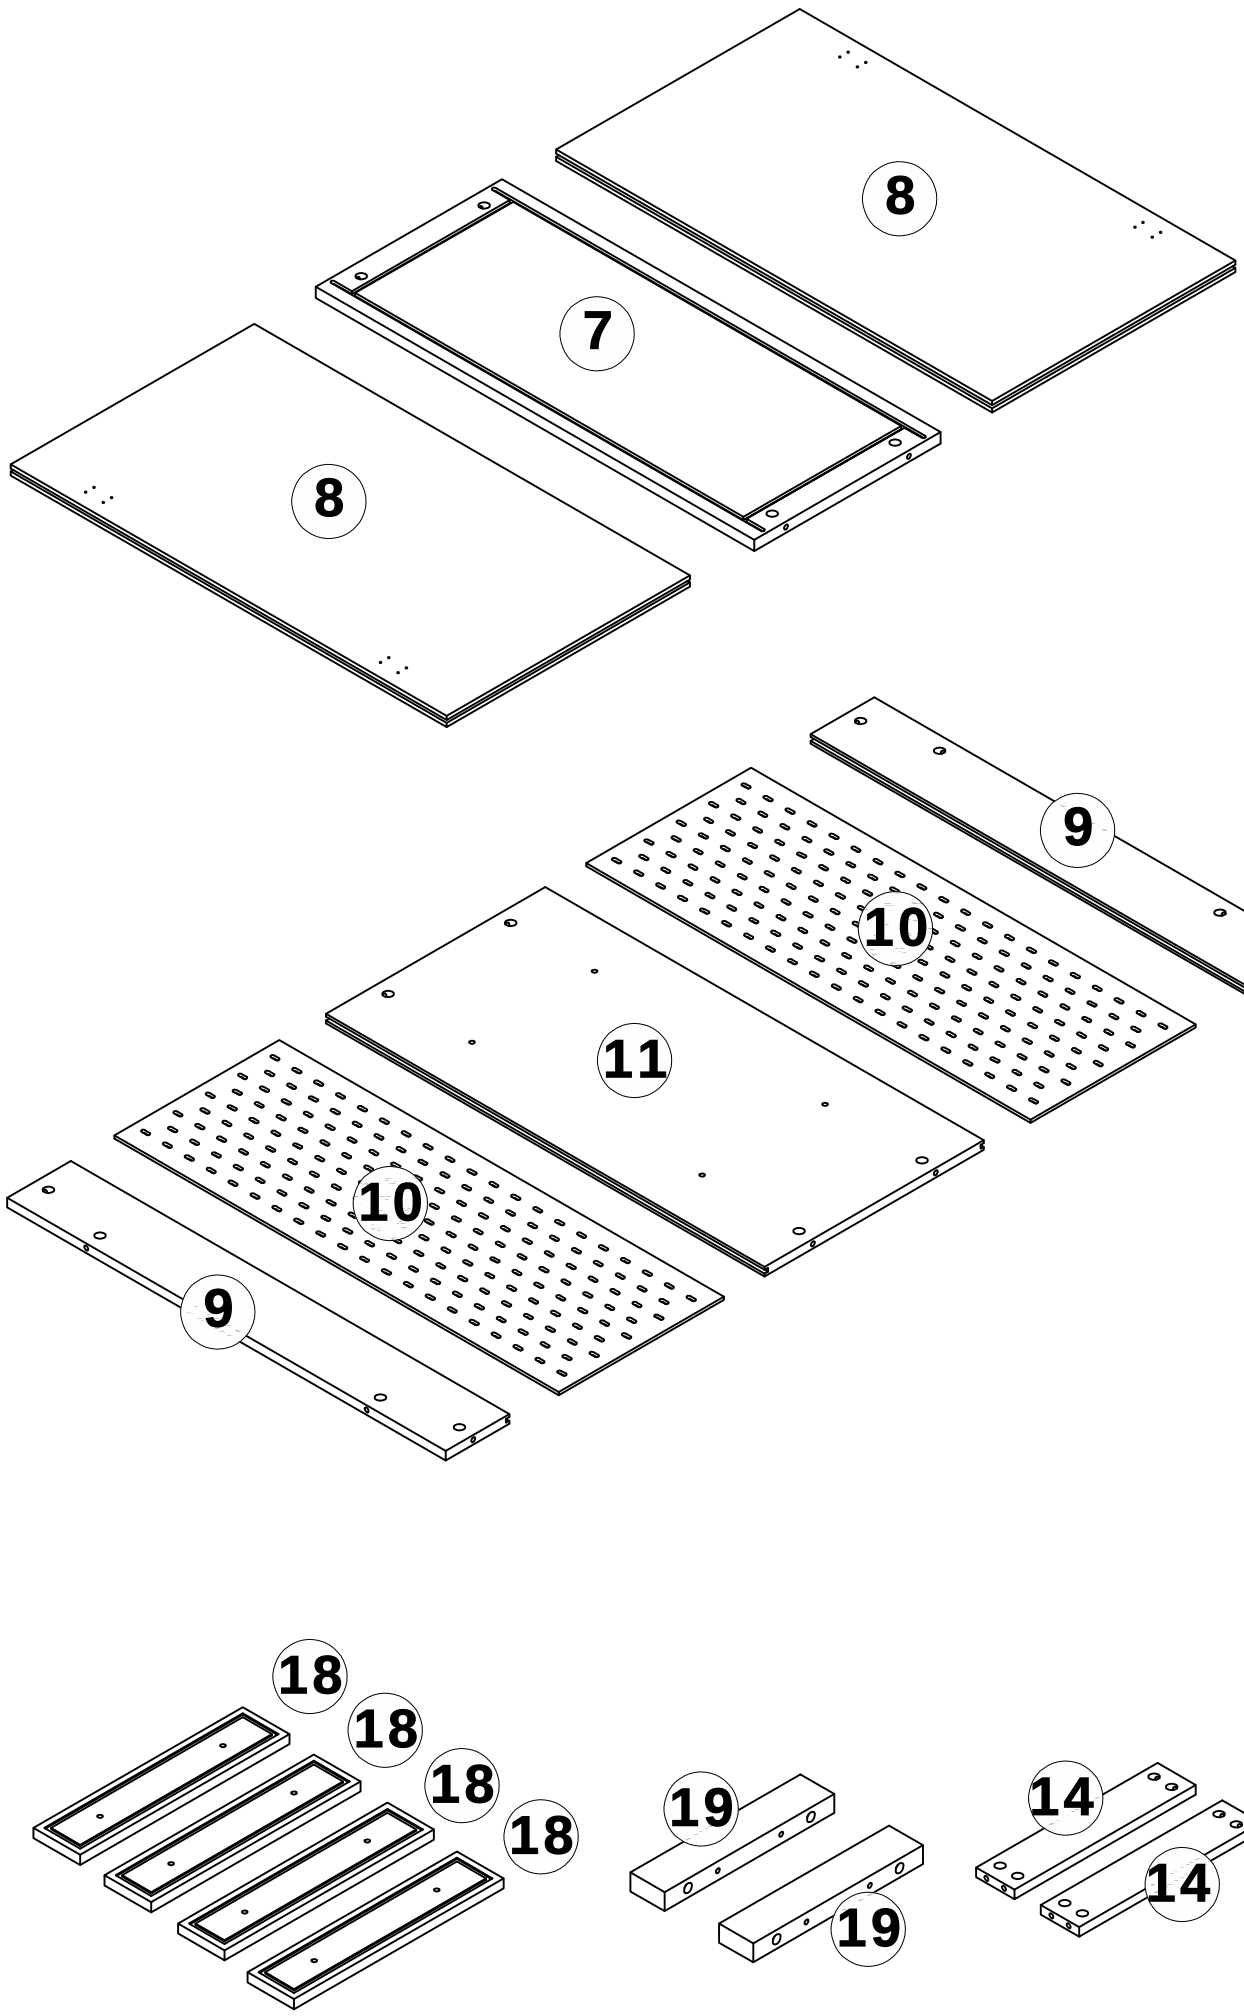

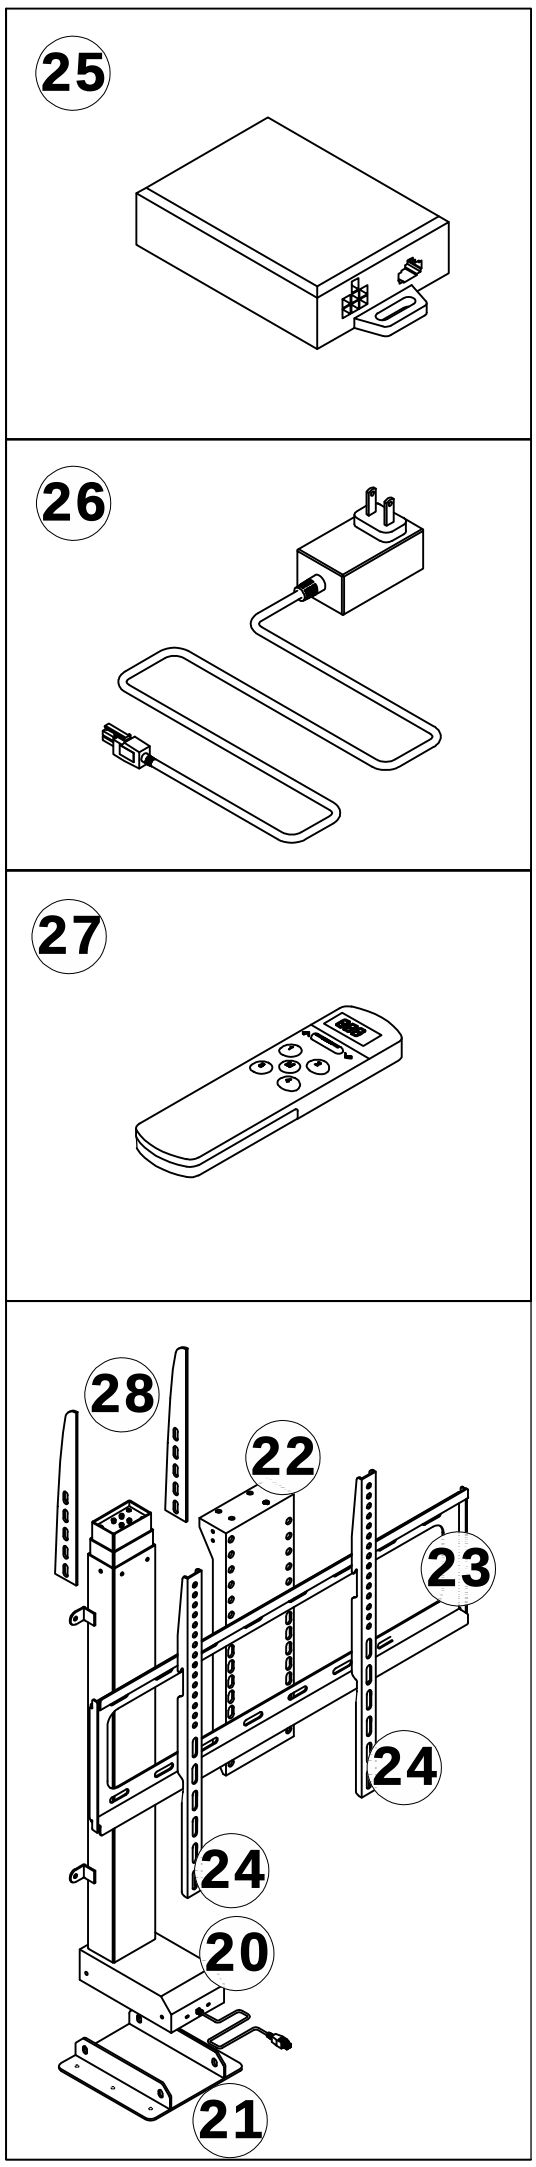



1

B x 4




∅6 x 35mm

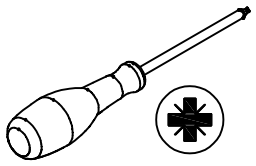

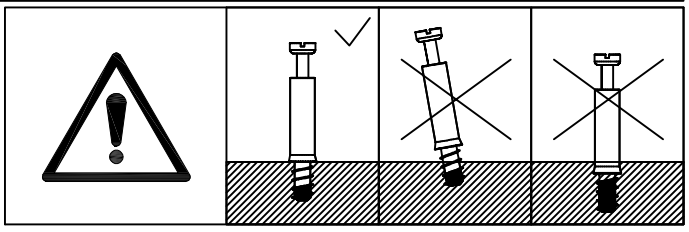


Install (B) onto part (13), align the holes and secure it with a screwdriver.

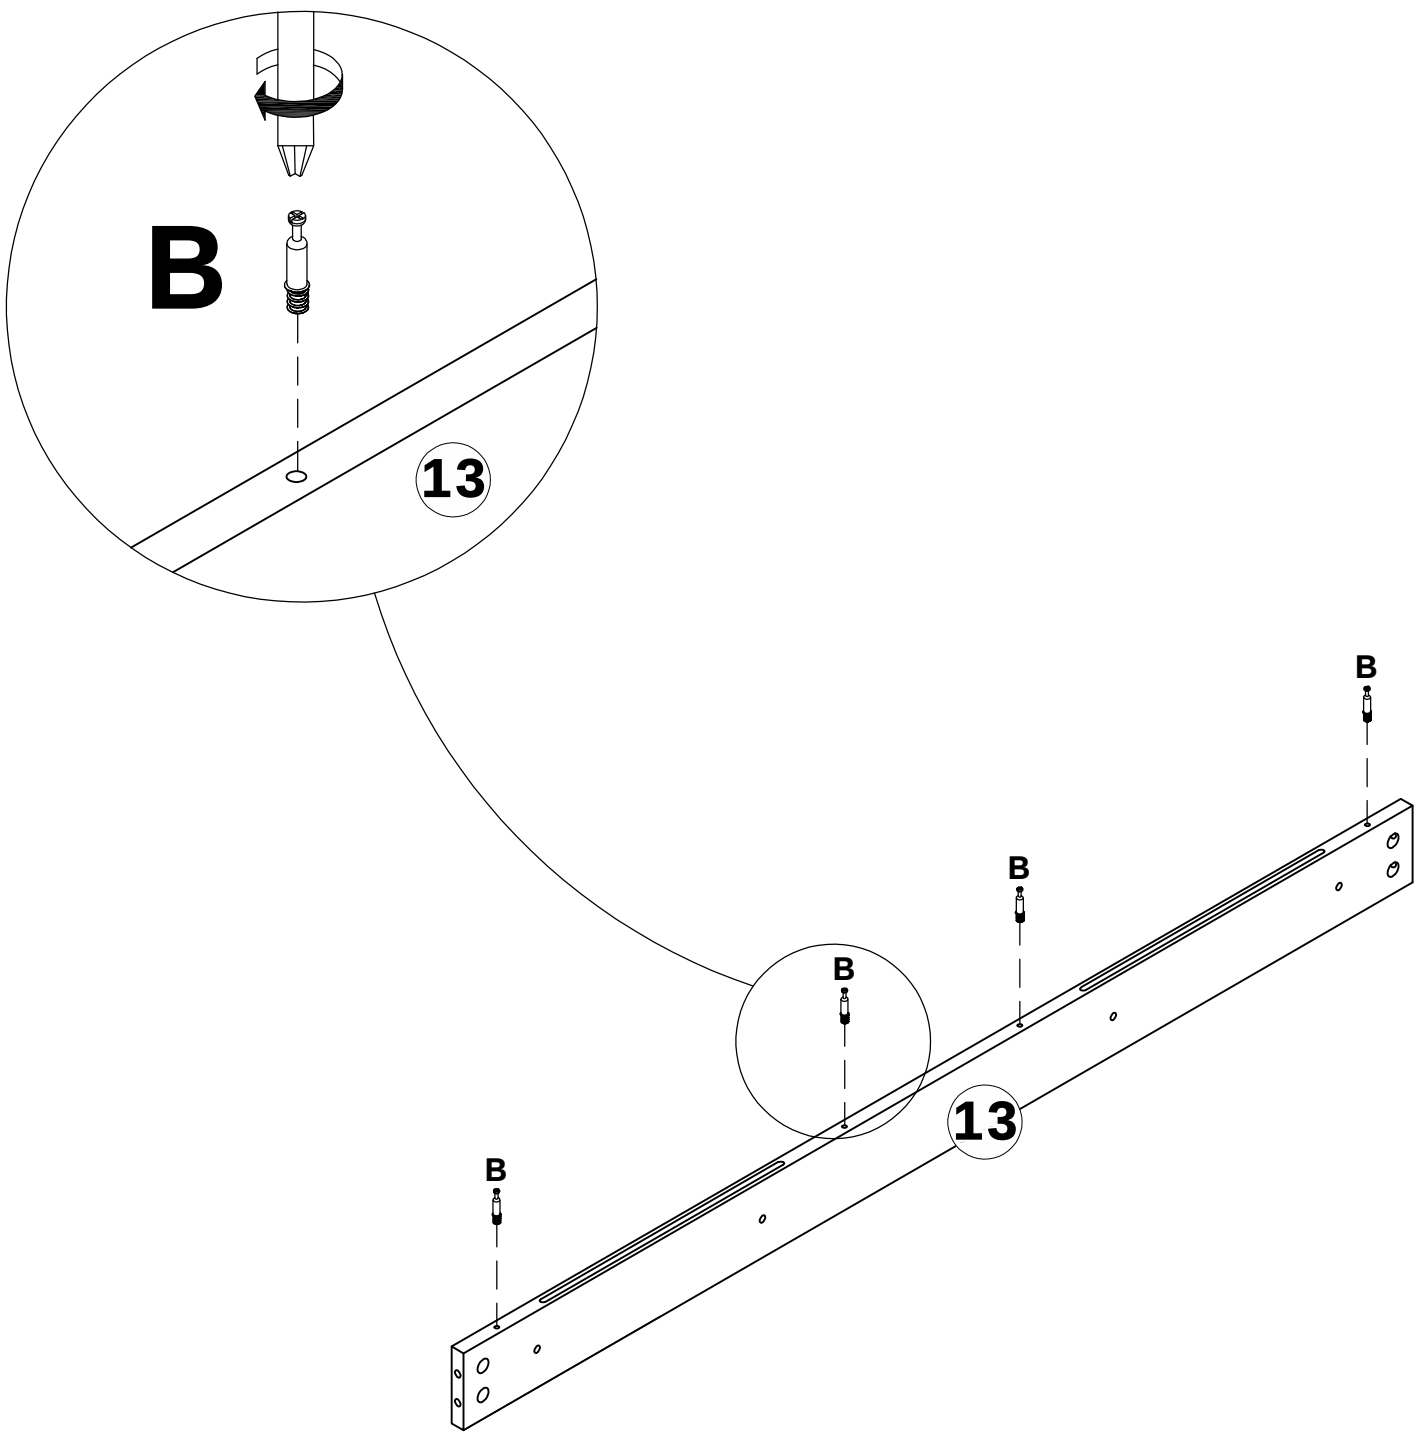



2

A x 4

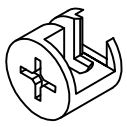


∅15 x 10 mm

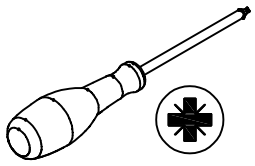

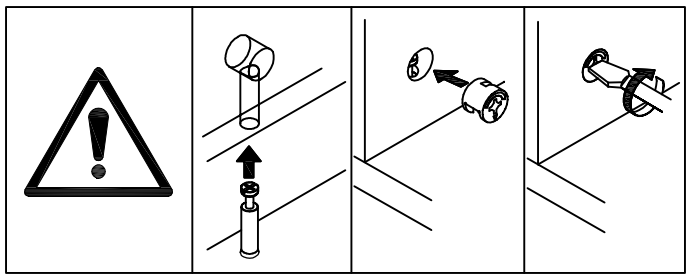


Connect part (13) with part (9) and (11), then secure with hardware (A).


Note: The side with the longer spacing (202 mm) should be installed facing upward.

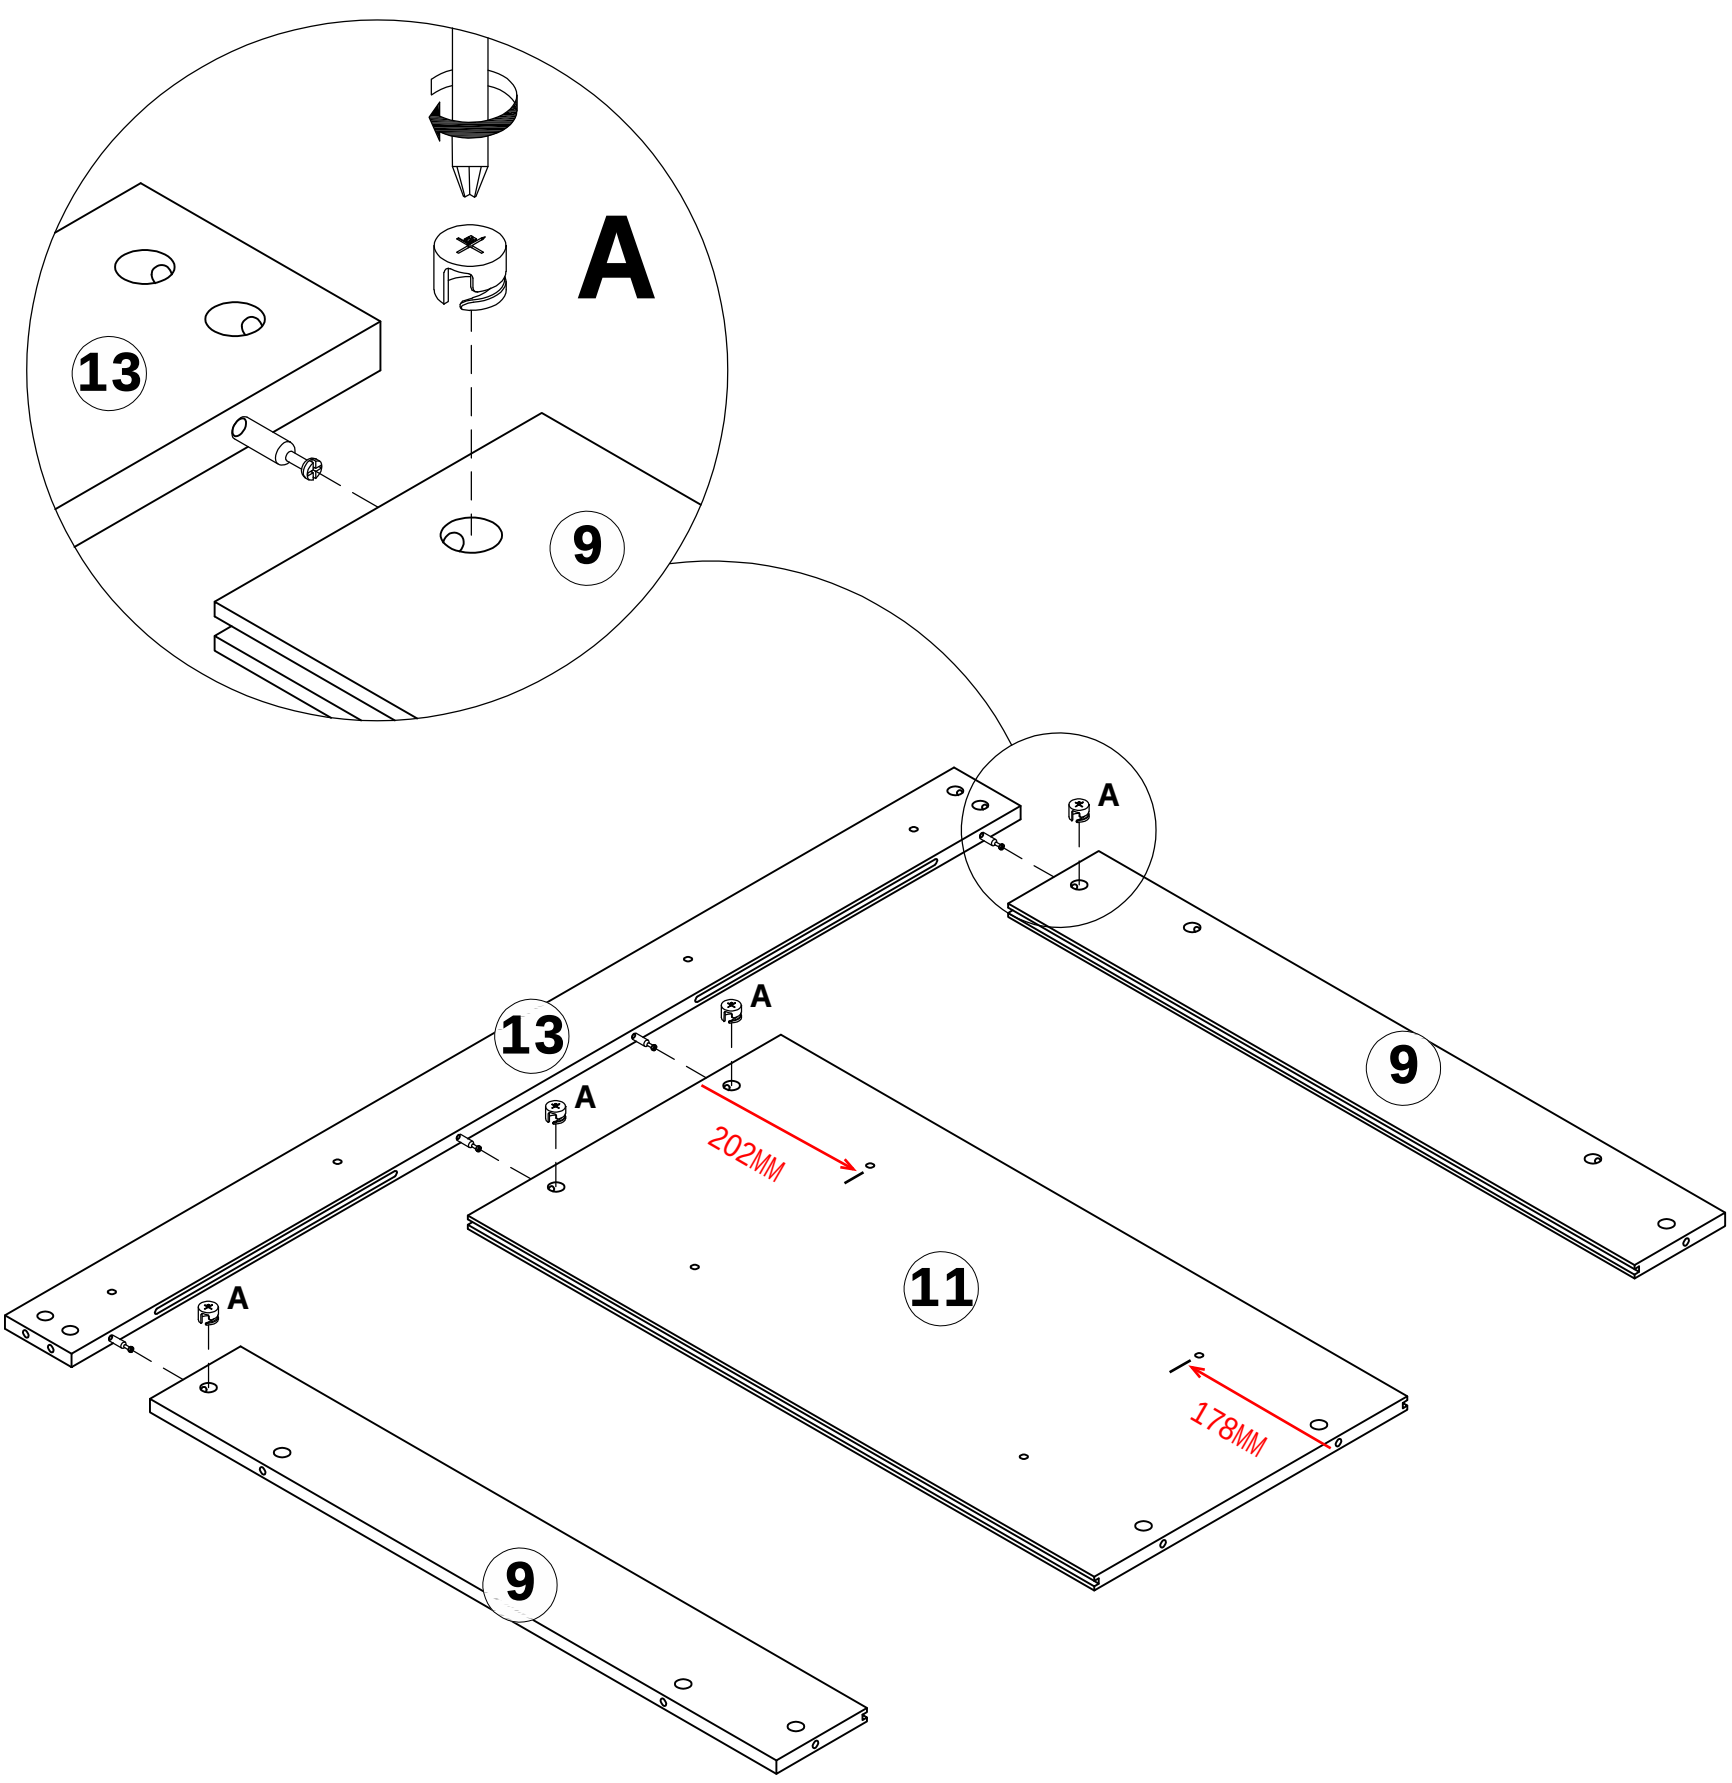

3

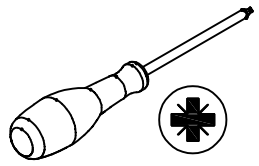


Insert part (10) into the grooves of part (9) and (11) as shown.

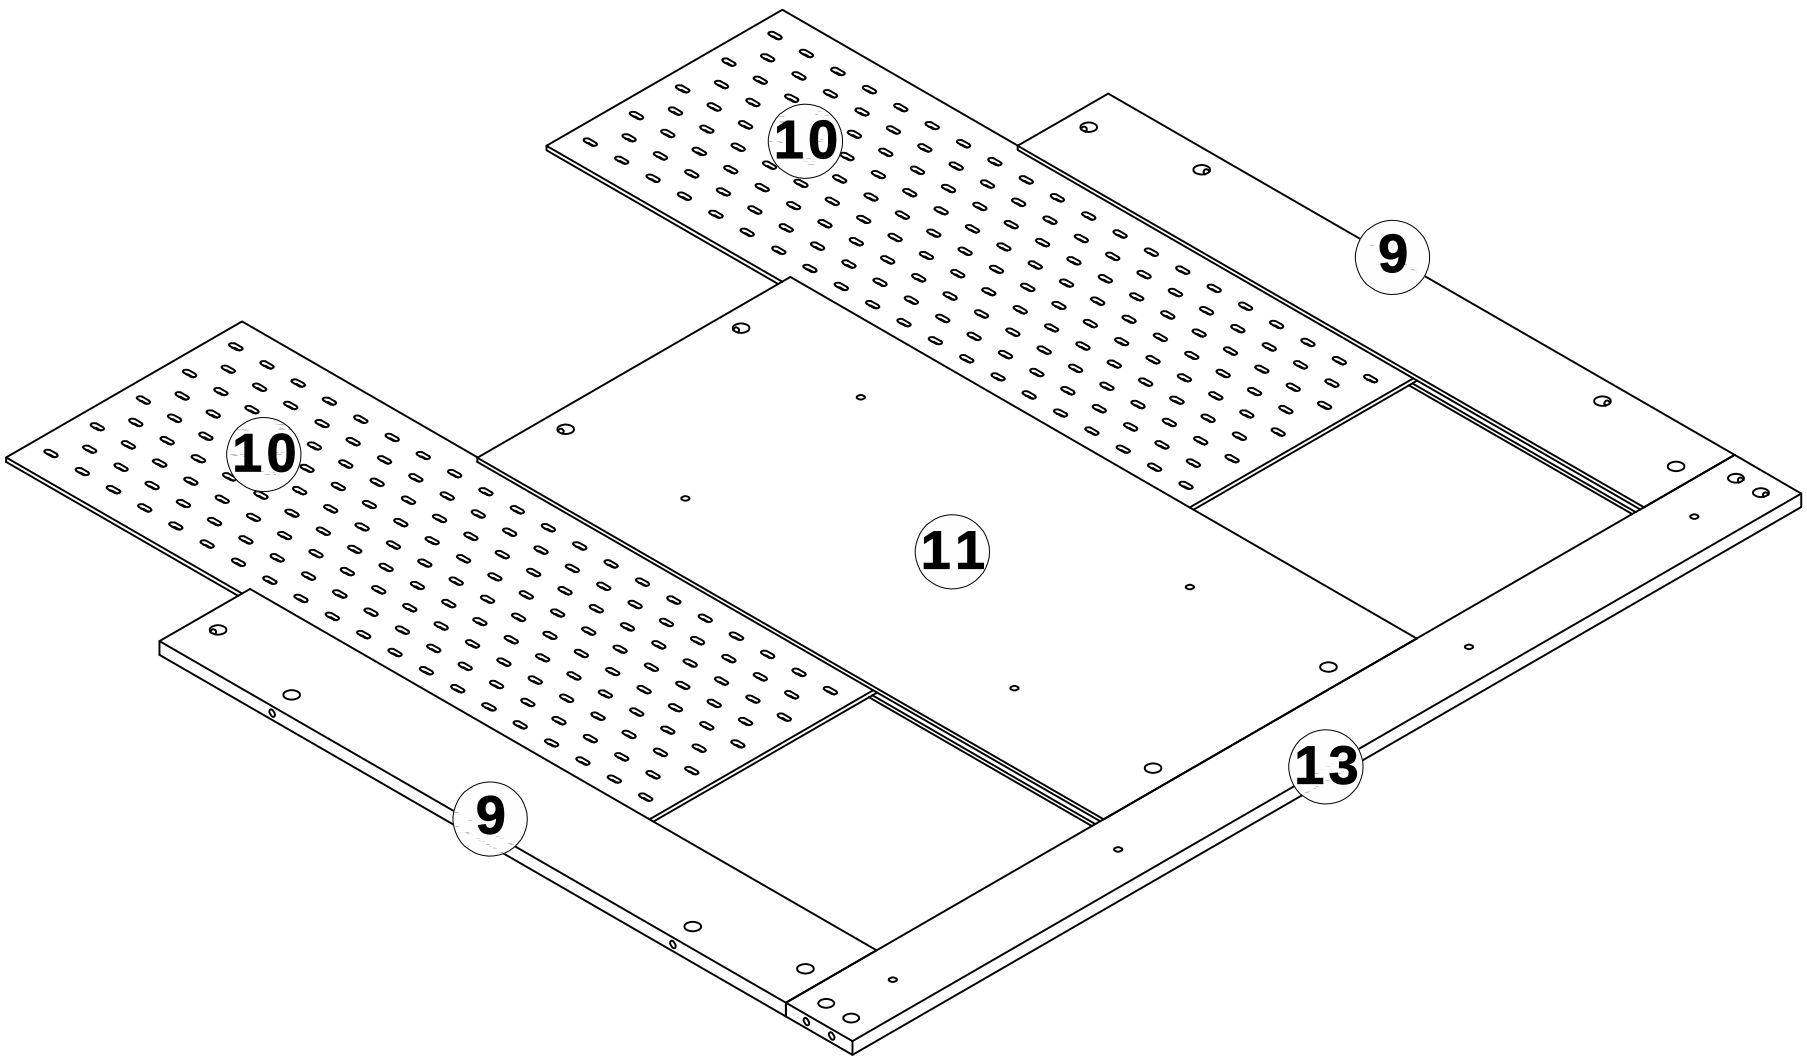


4


K x 4

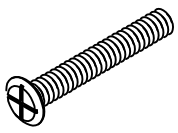

M6*65

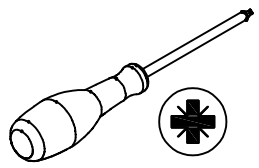


Connect part (19) with part (11), then secure withhard (K).

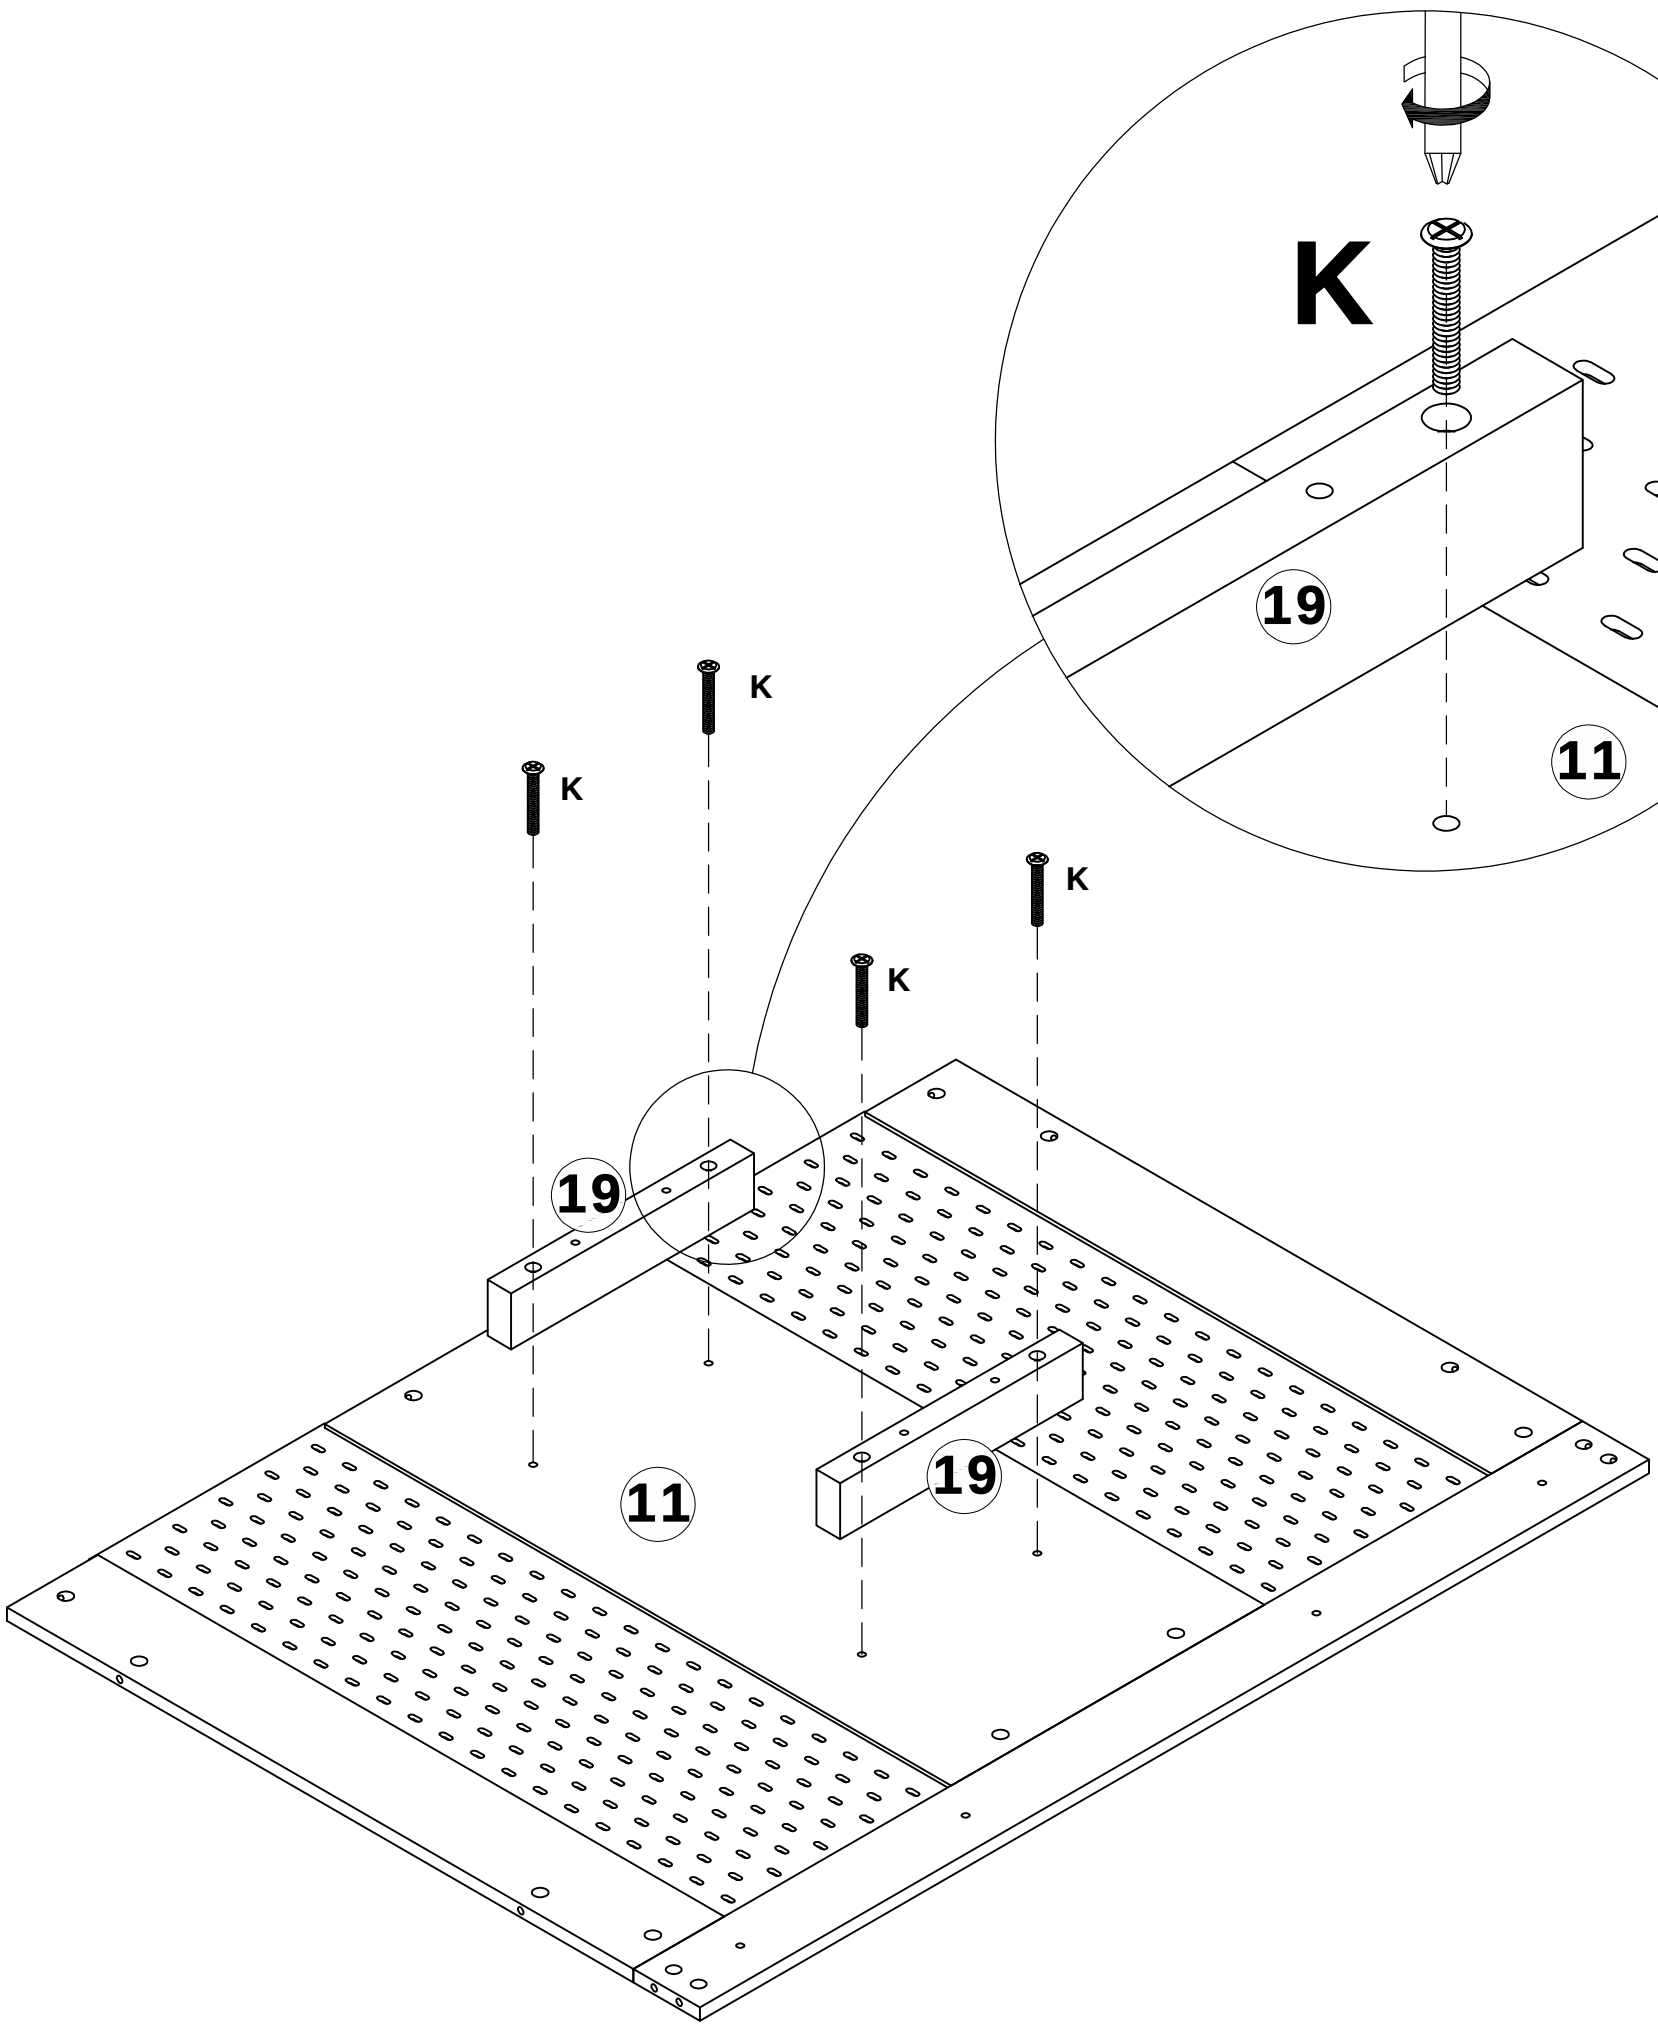



5

B x 12




∅6 x 35mm

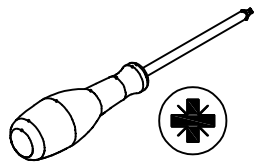

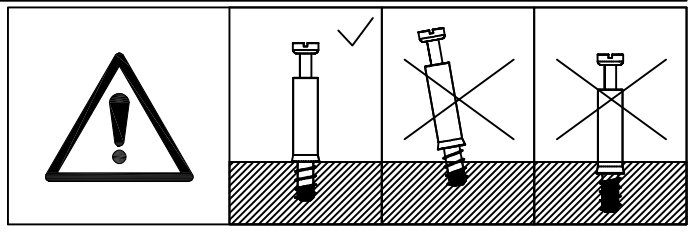


Install (B) onto part (12) align the holes and secure with a screwdriver.

Install (B) onto part (4), align the holes and secure with a screwdriver.

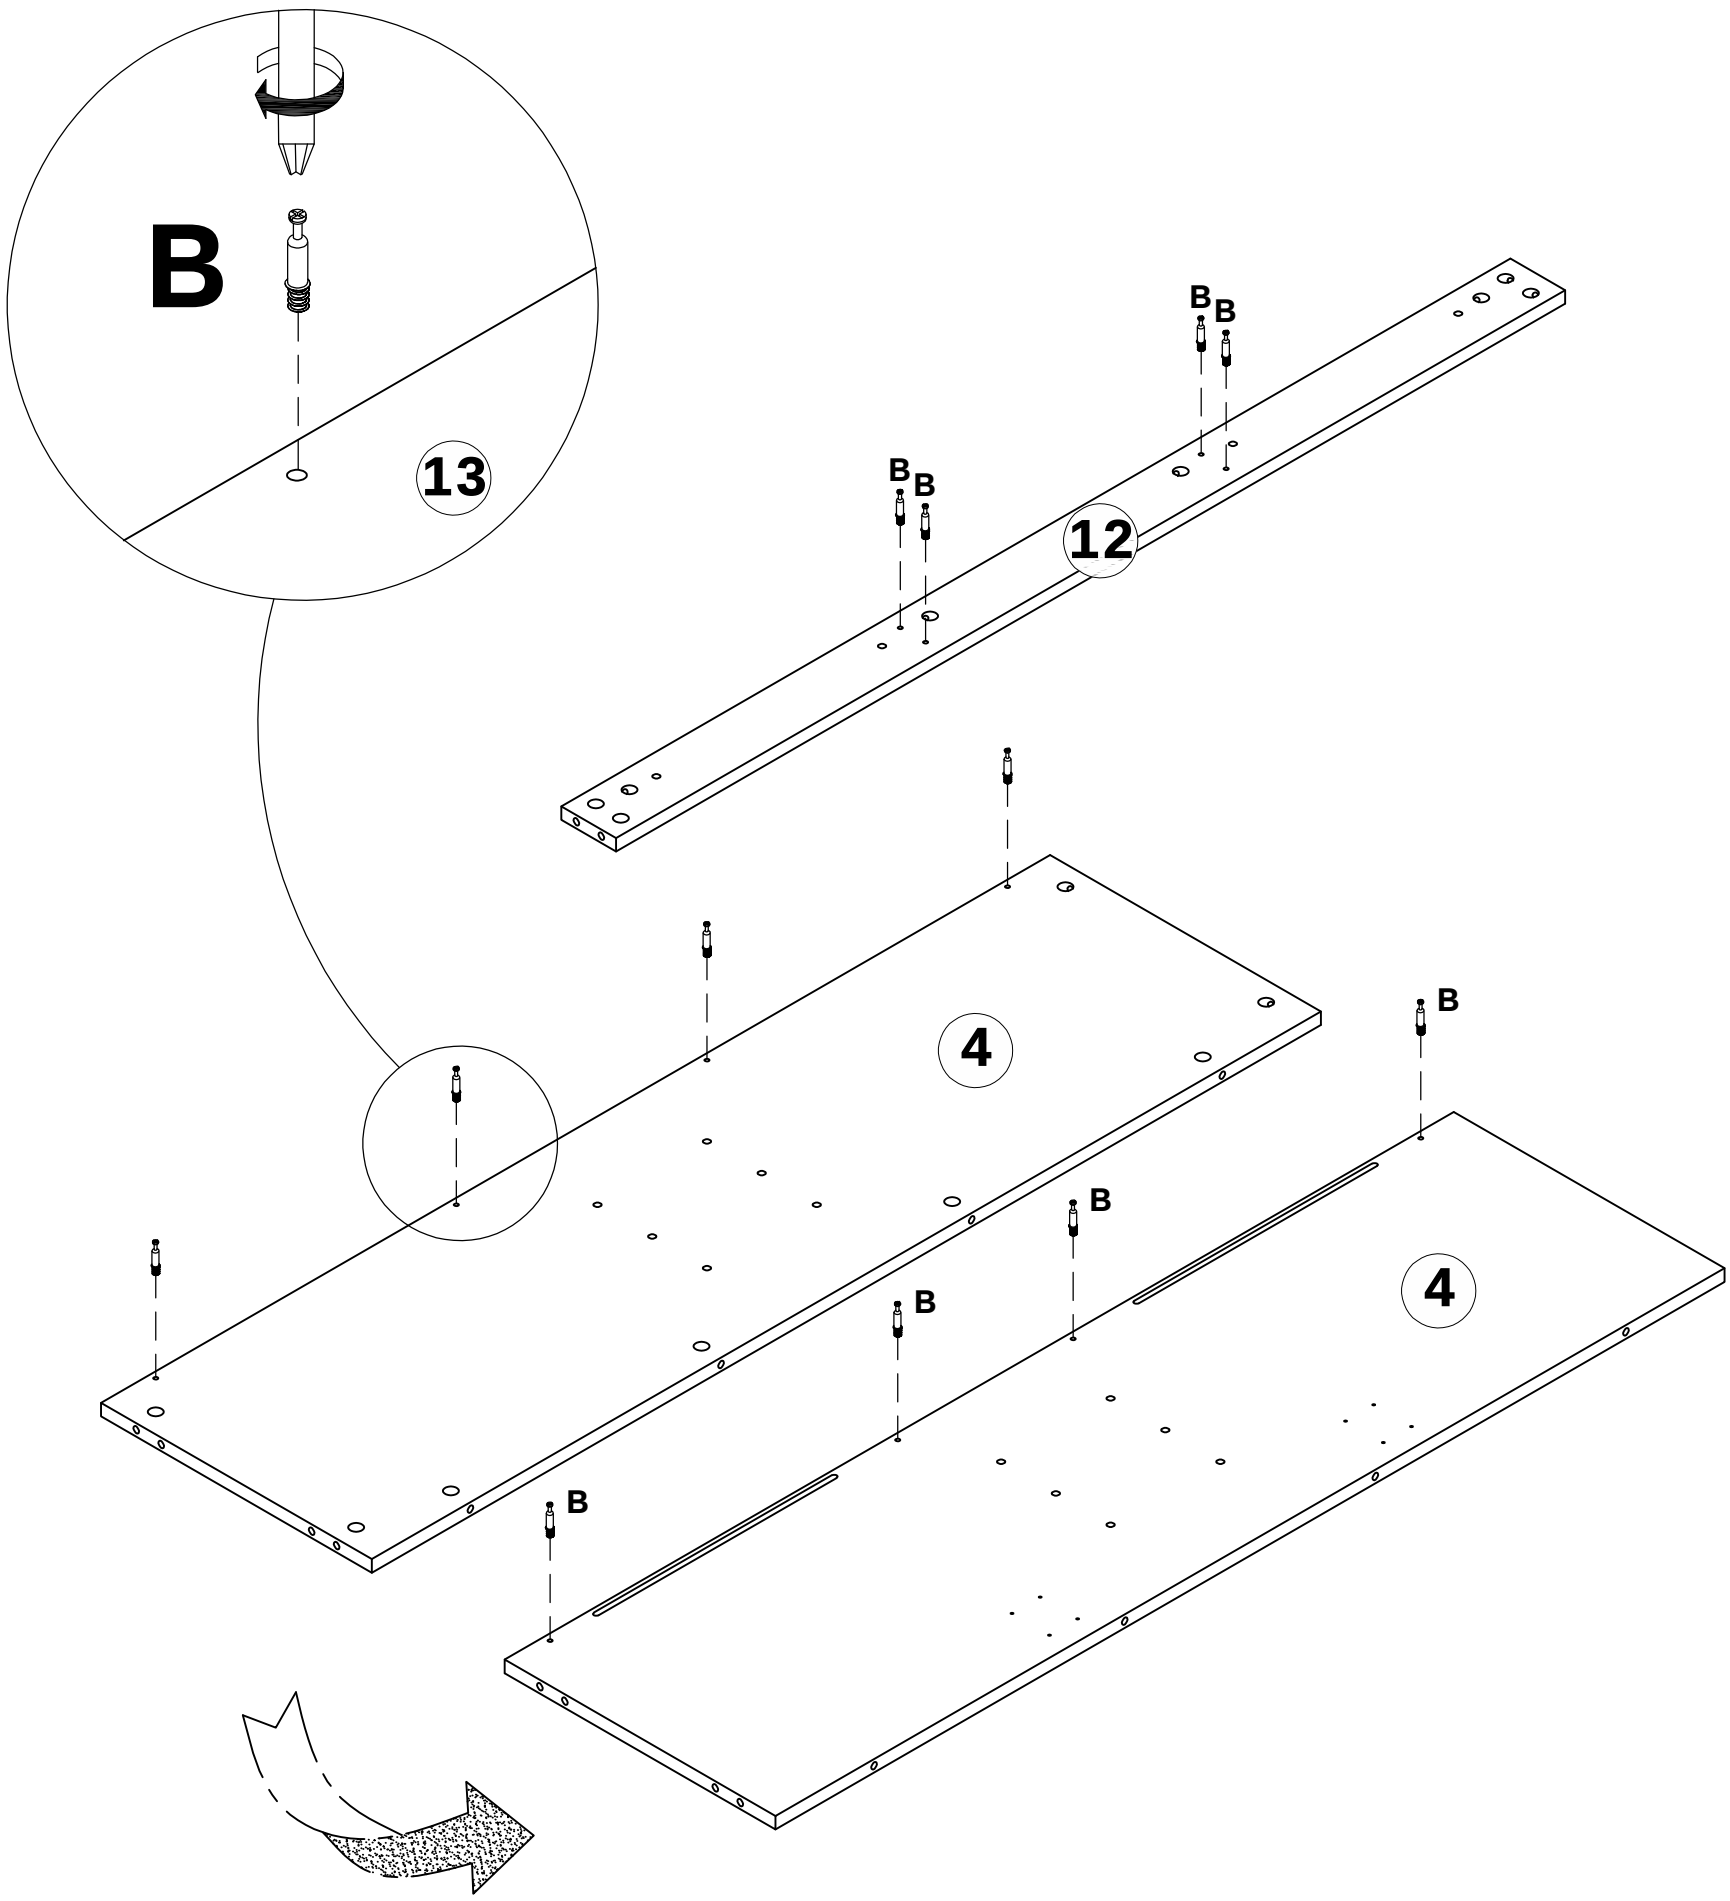


6


A x 4

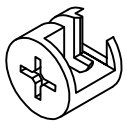


∅15 x 10 mm

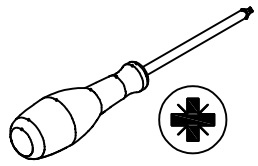


Connect part (13) with part (9) and (11), then secure with (A).

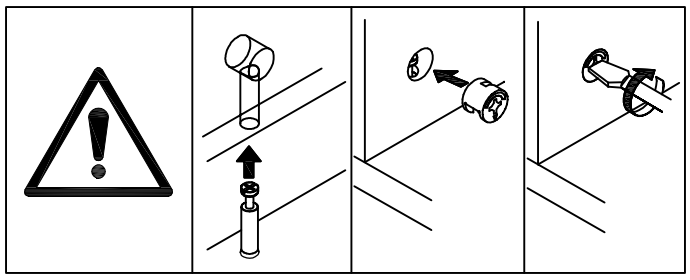

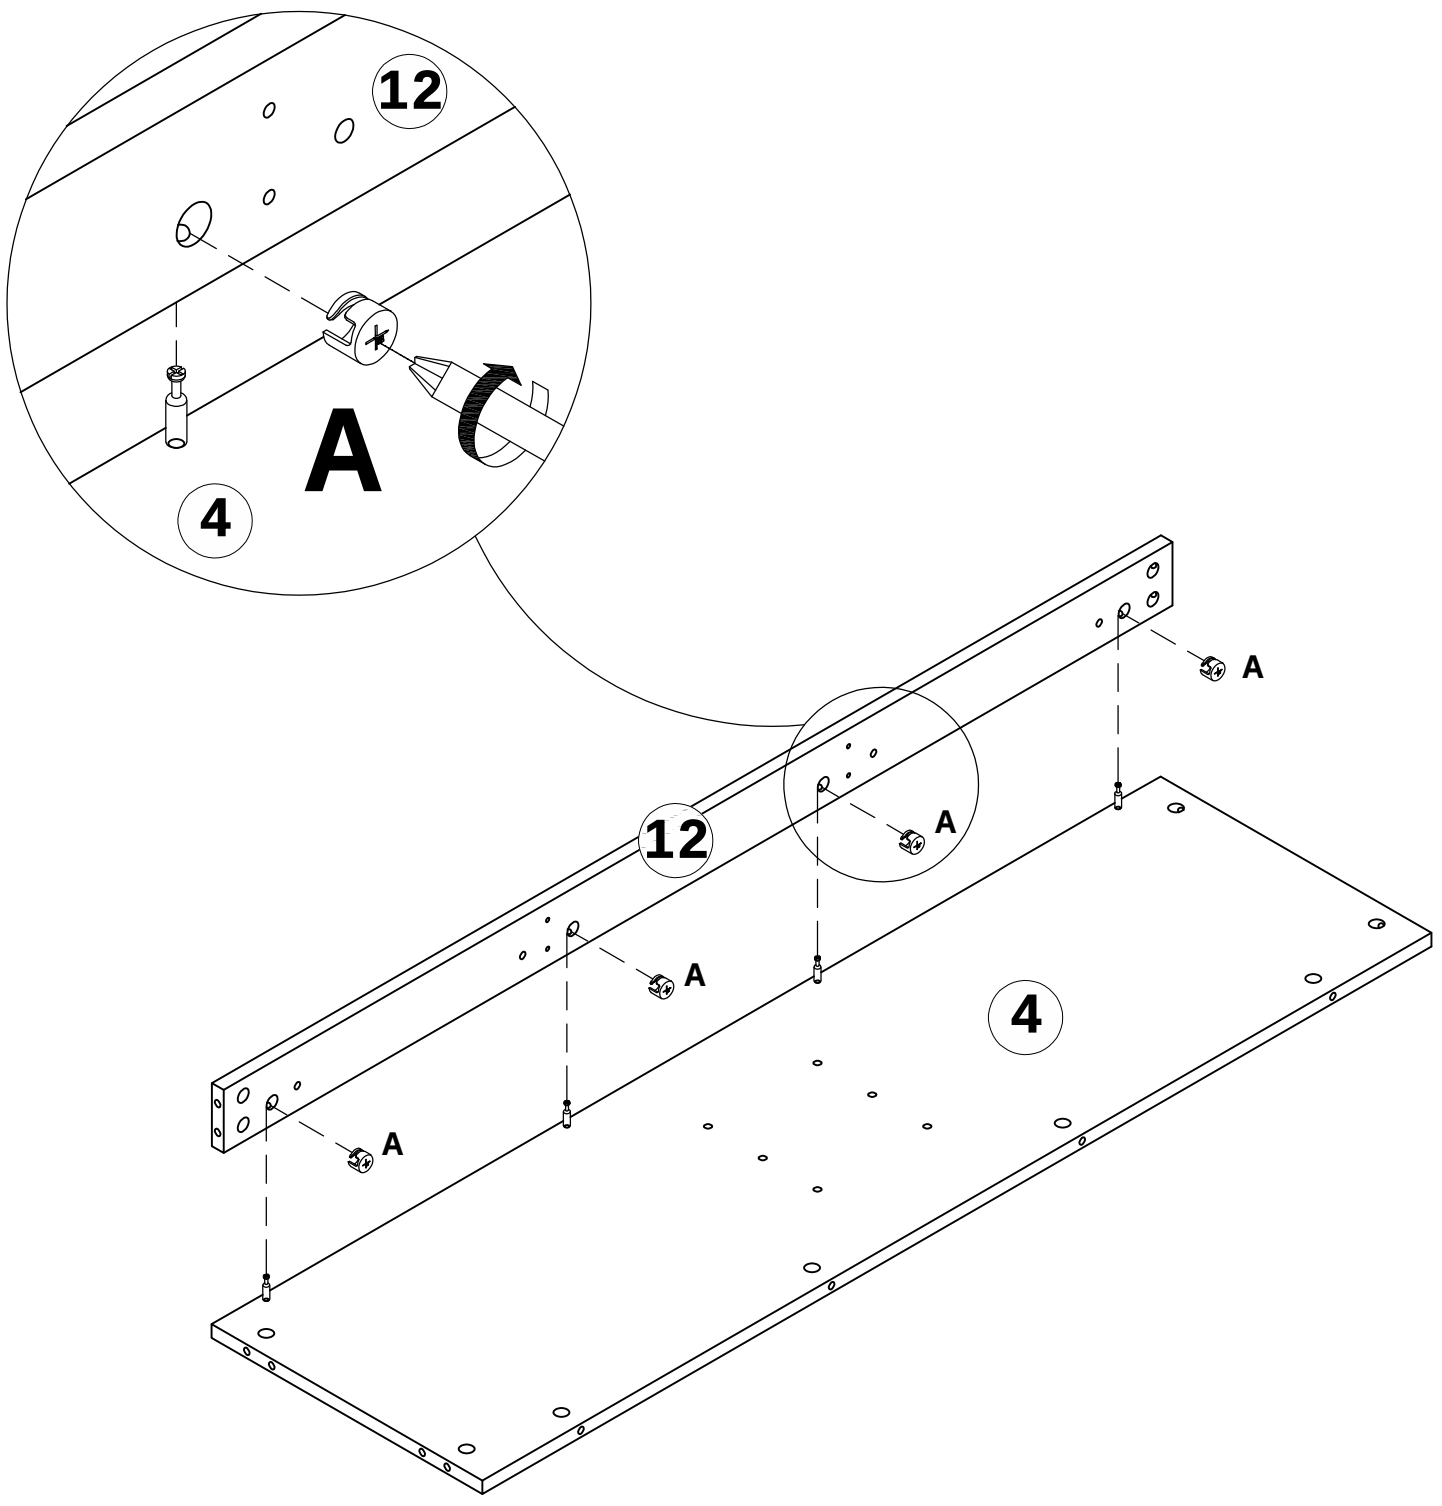



7

A x 4

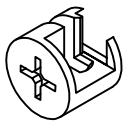


∅15 x 10 mm

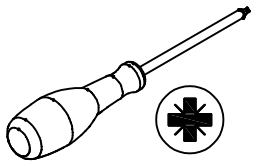

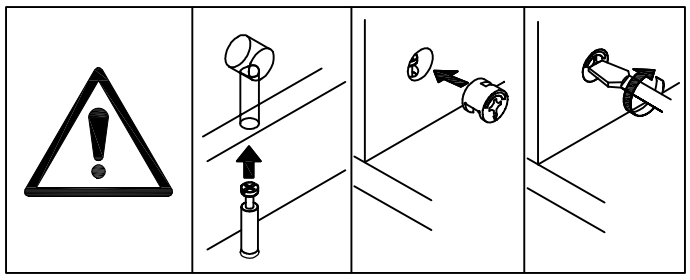


Connect part (14) with part (12), then secure with (A).

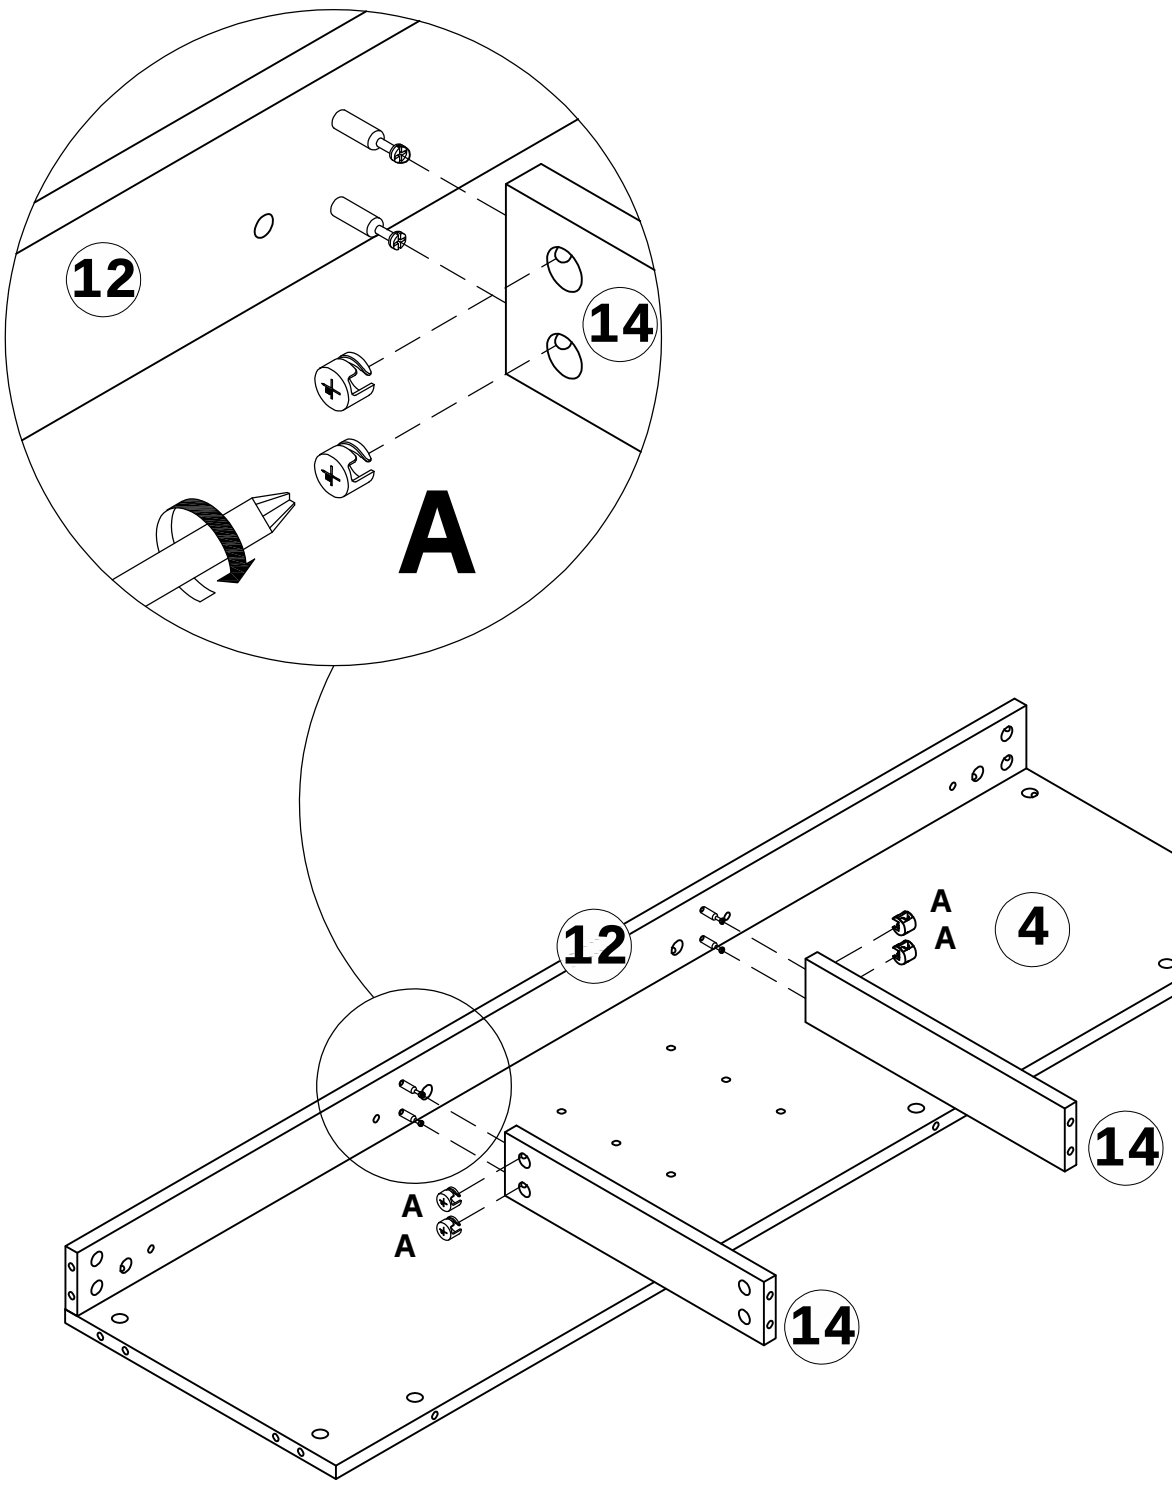



8

A x 4

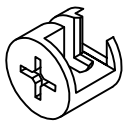


∅15 x 10 mm

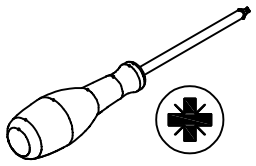

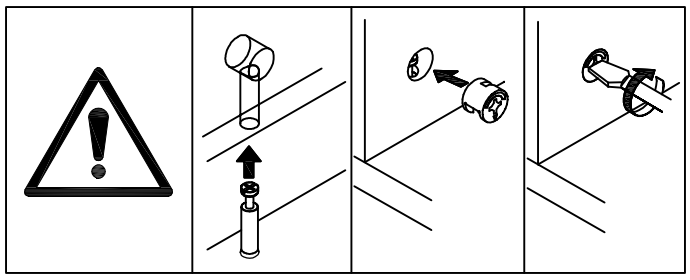


Connect part (4) with part (9) and (11), then secure with (A).

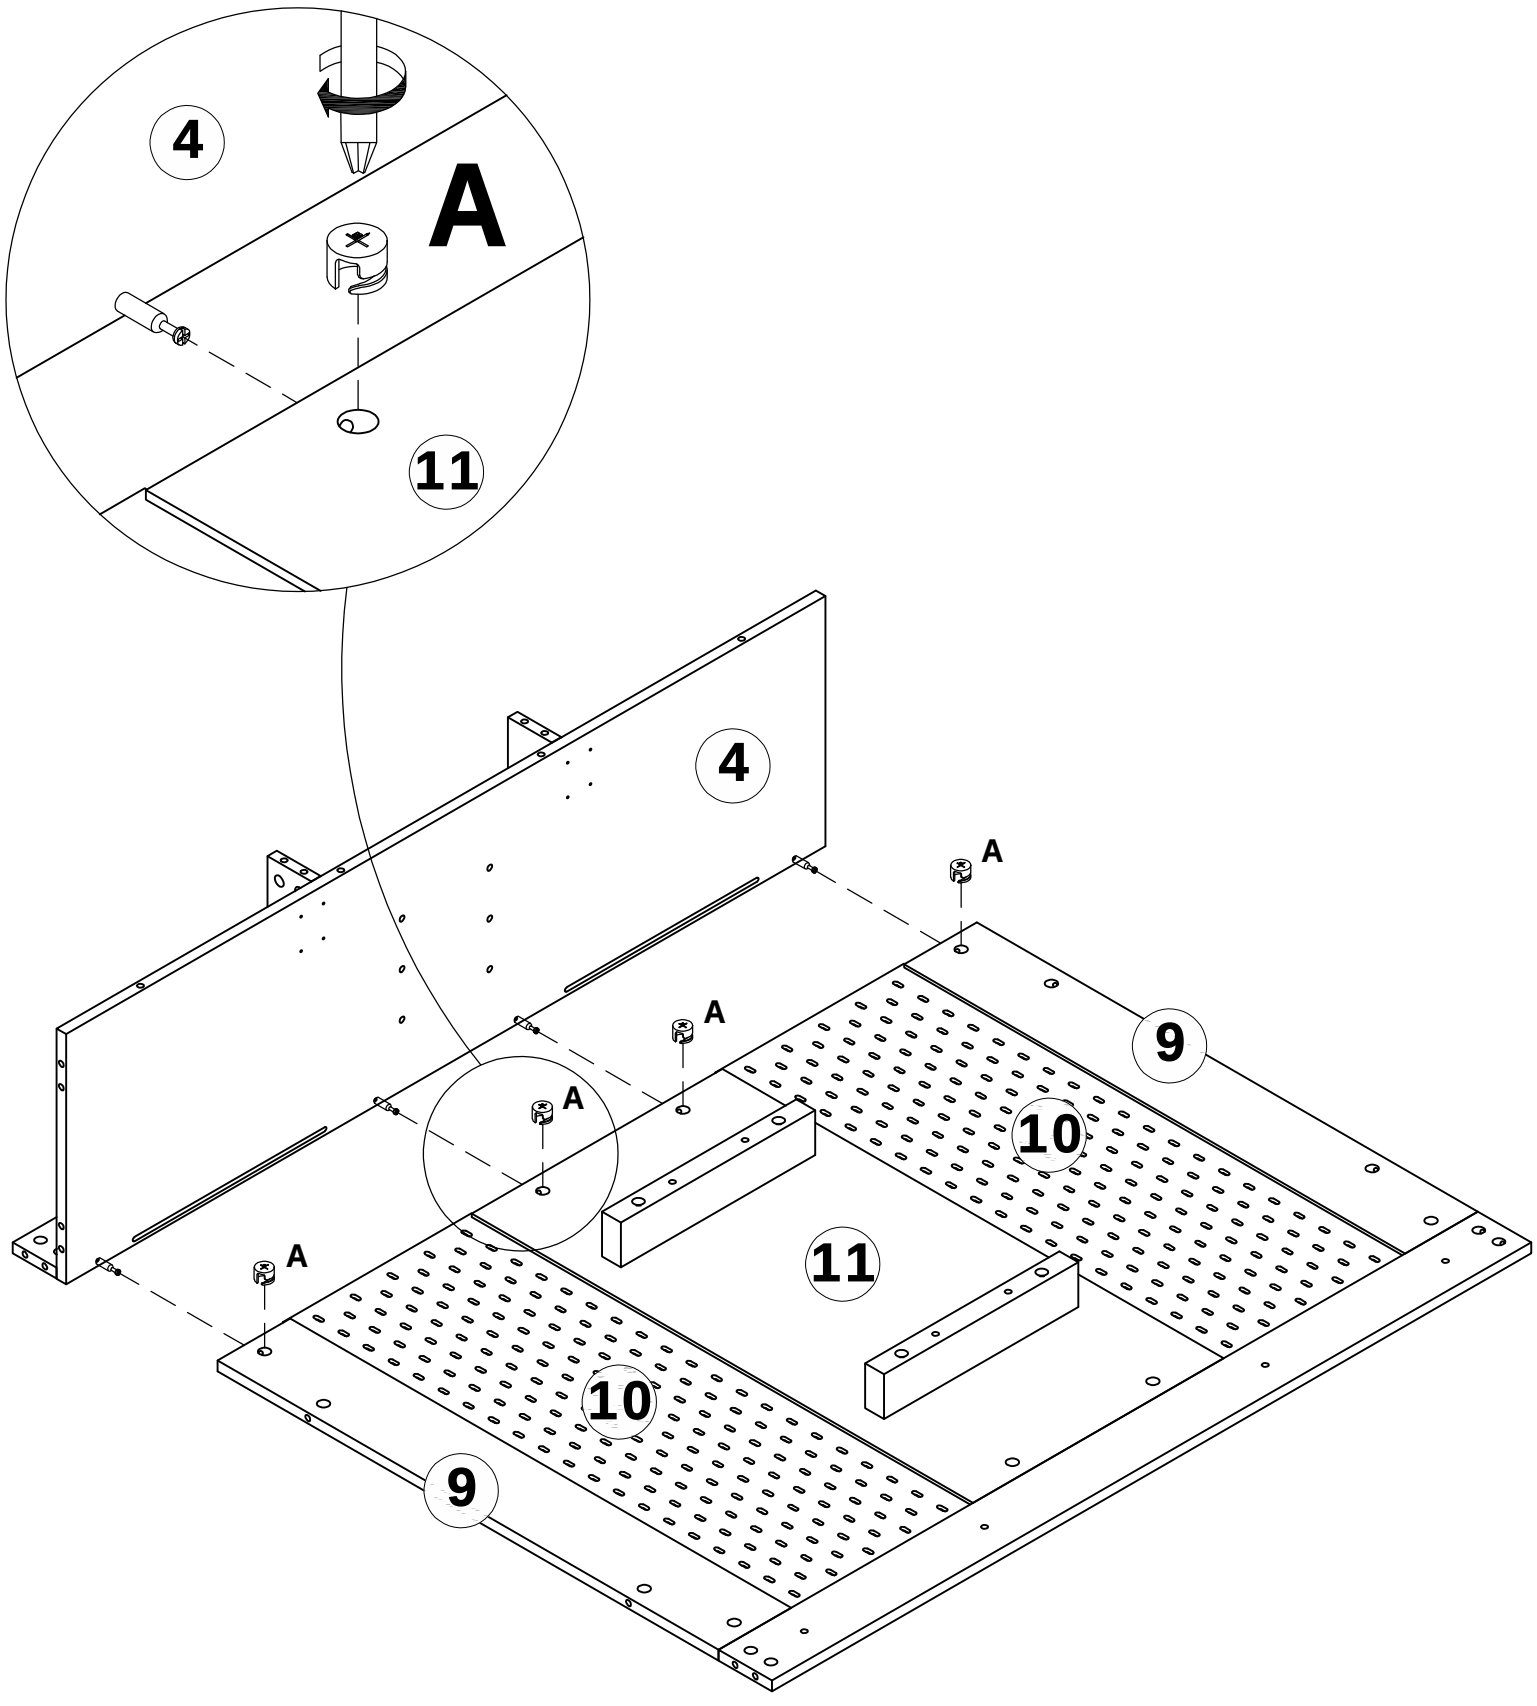



9

B x 16




∅6 x 35mm

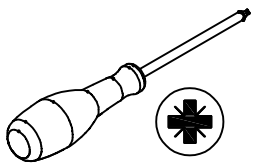



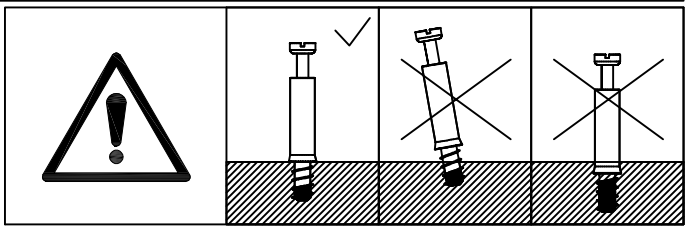



Install (B) onto part (2), align the holes and secure with a screwdriver.

Install (B) onto part (3), align the holes and secure with a screwdriver.

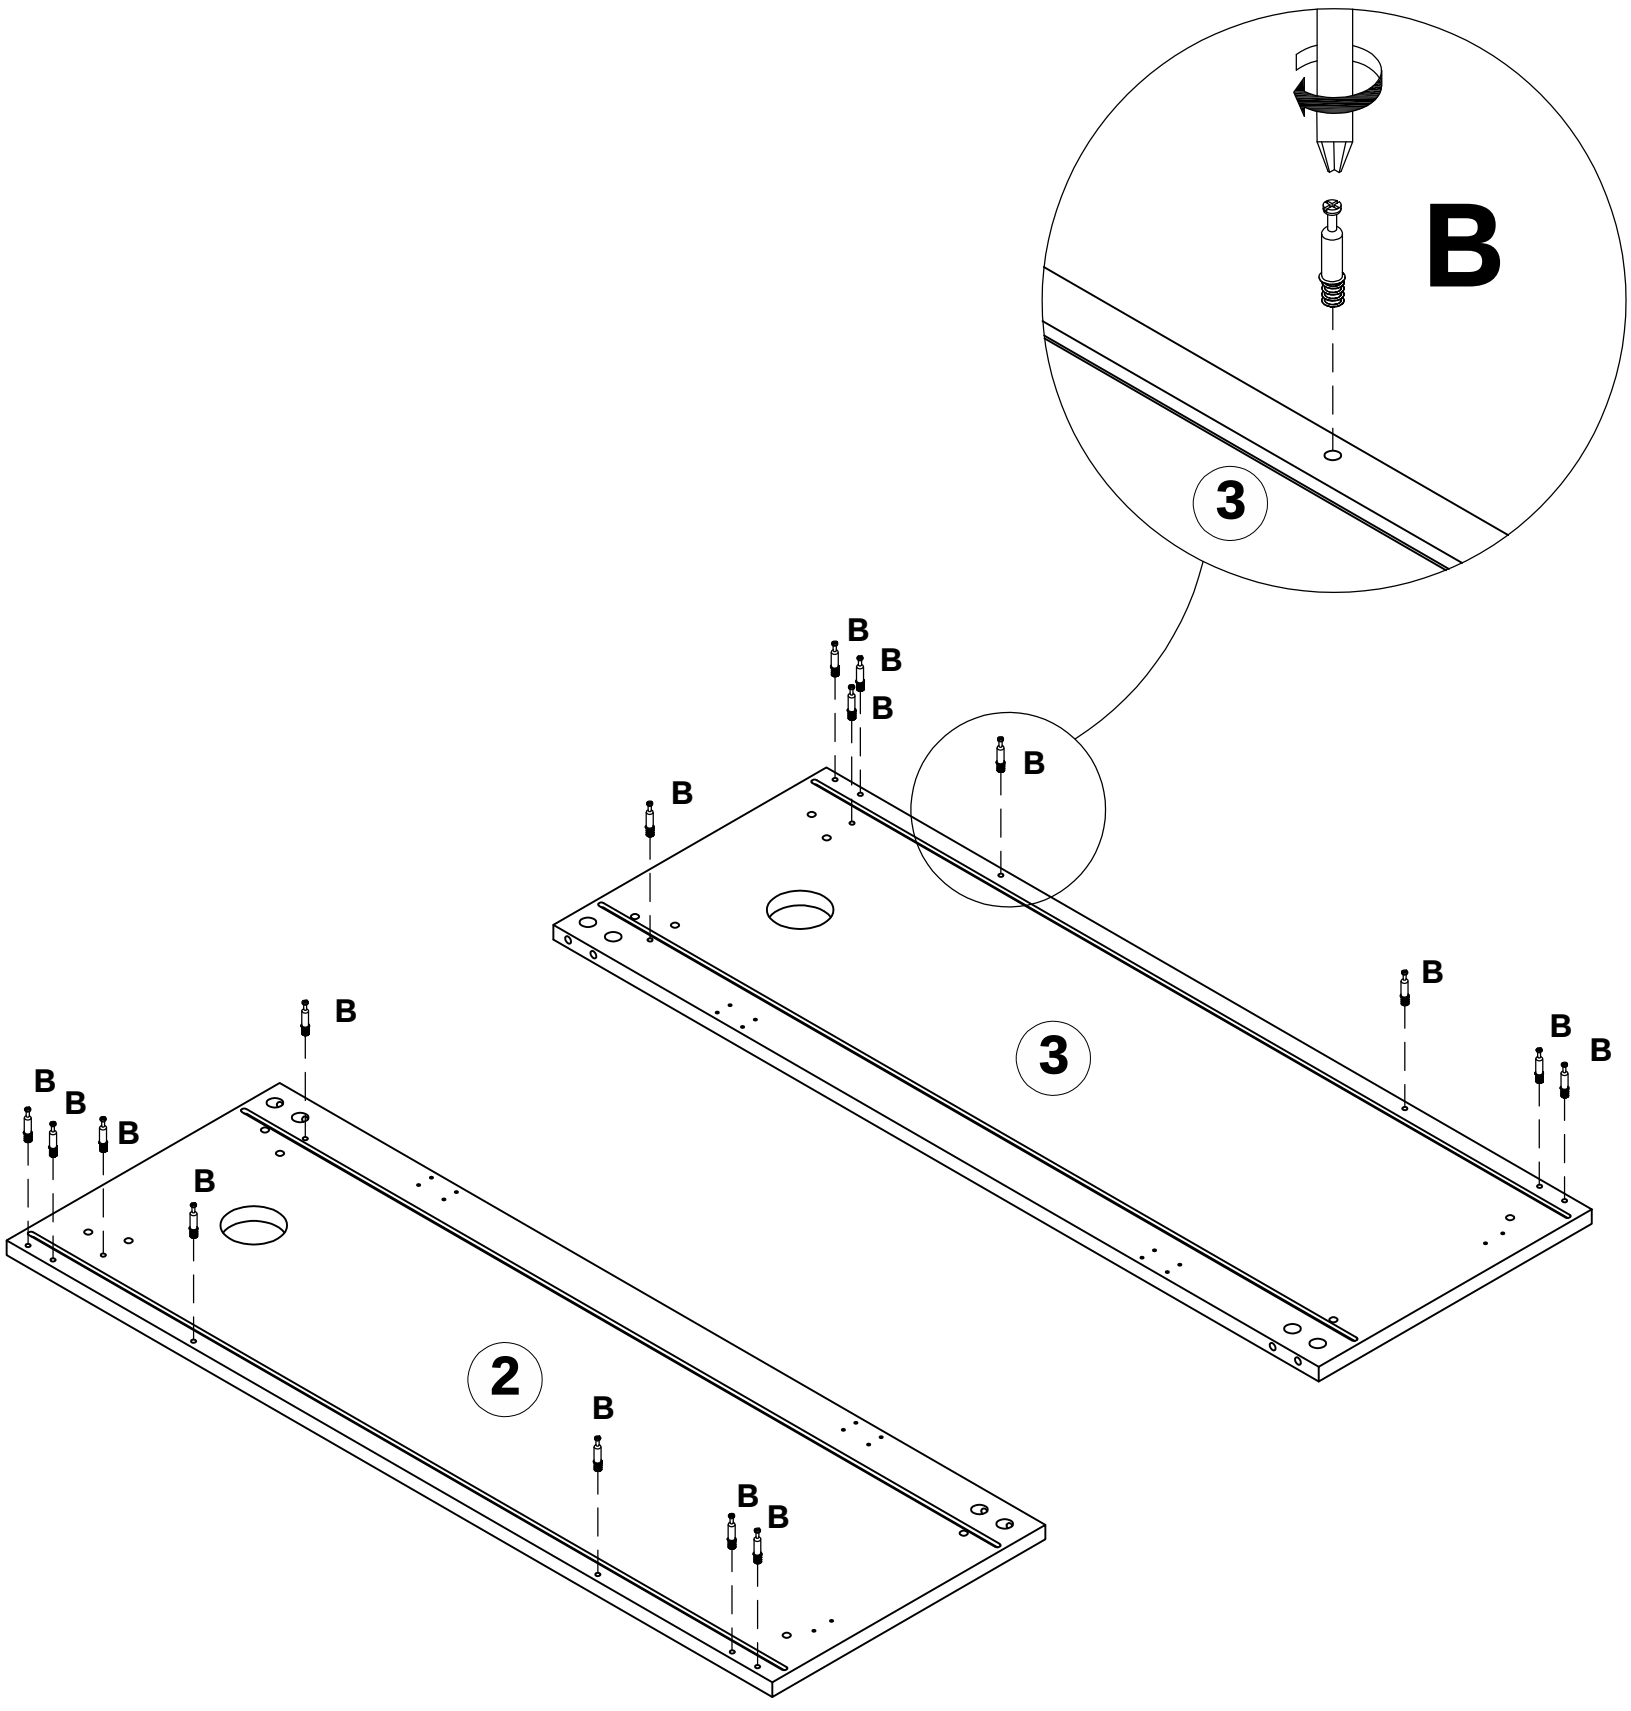

10

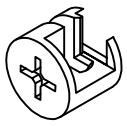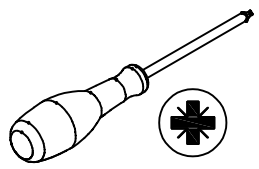
A x 16	S x 4	
		
∅15 x 10 mm	∅8 x 30 mm	

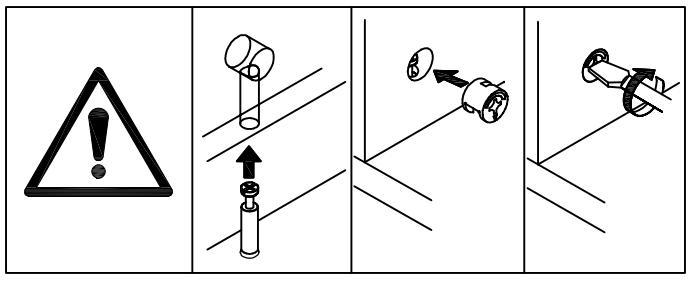

Install (S) onto part (4) and secure it.


Connect part (2), (4) and (9), then secure with (A).

Connect part (3), (4) and (9), then secure with (A).

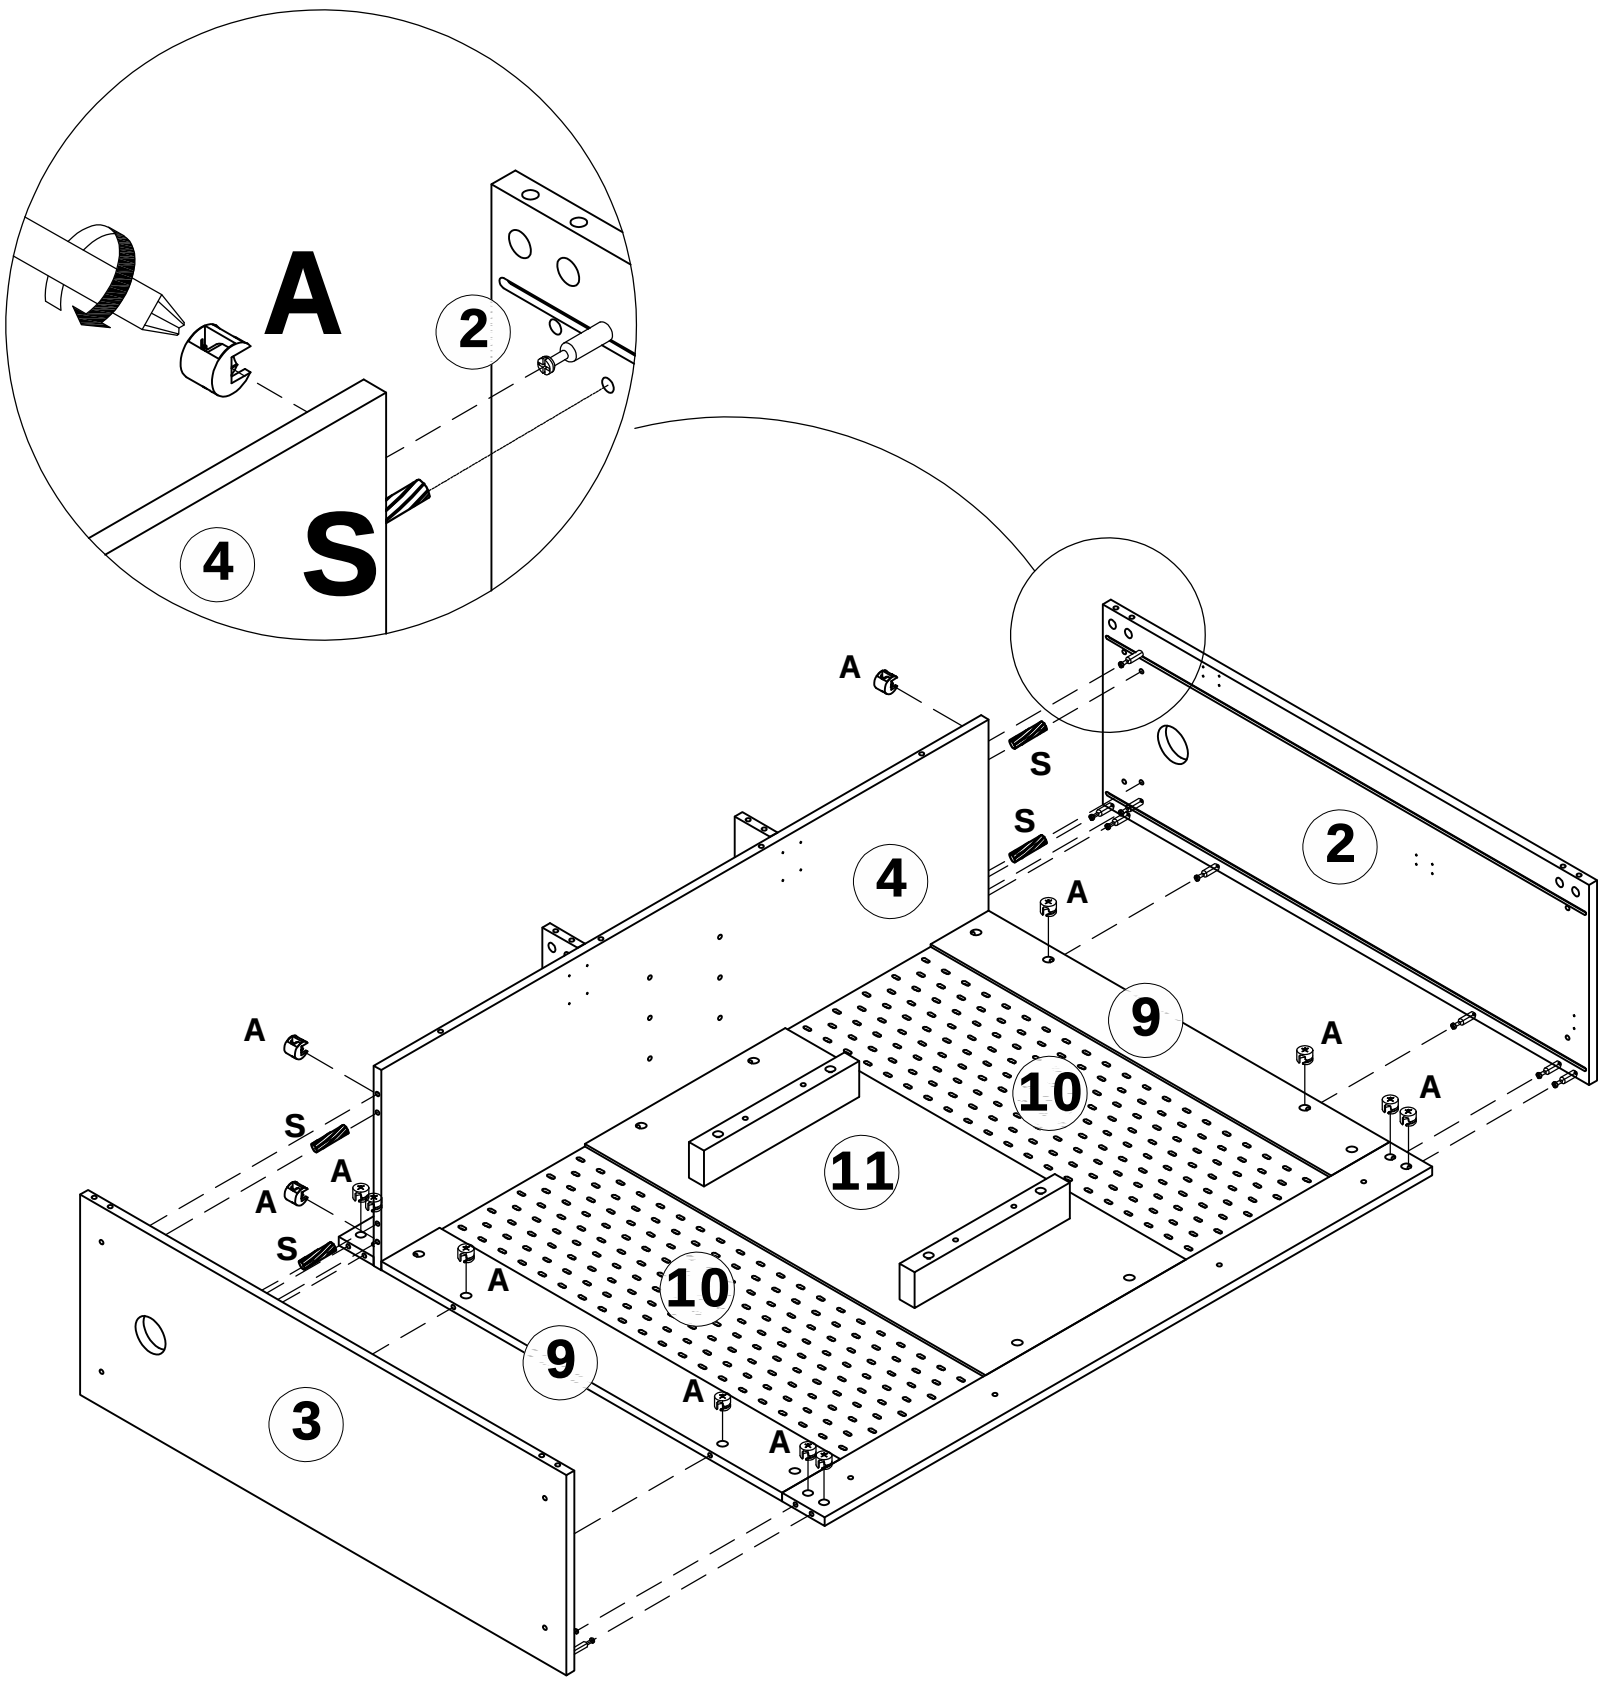



11

B x 20




∅6 x 35mm

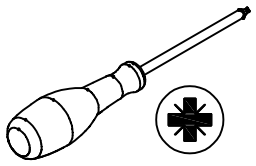

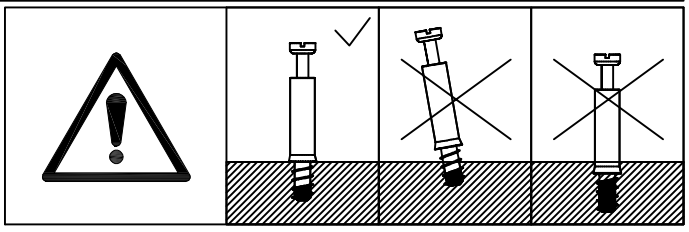


Install (B) onto part (5), align the holes and secure with a screwdriver.

Install (B) onto part (6), align the holes and secure with a screwdriver.

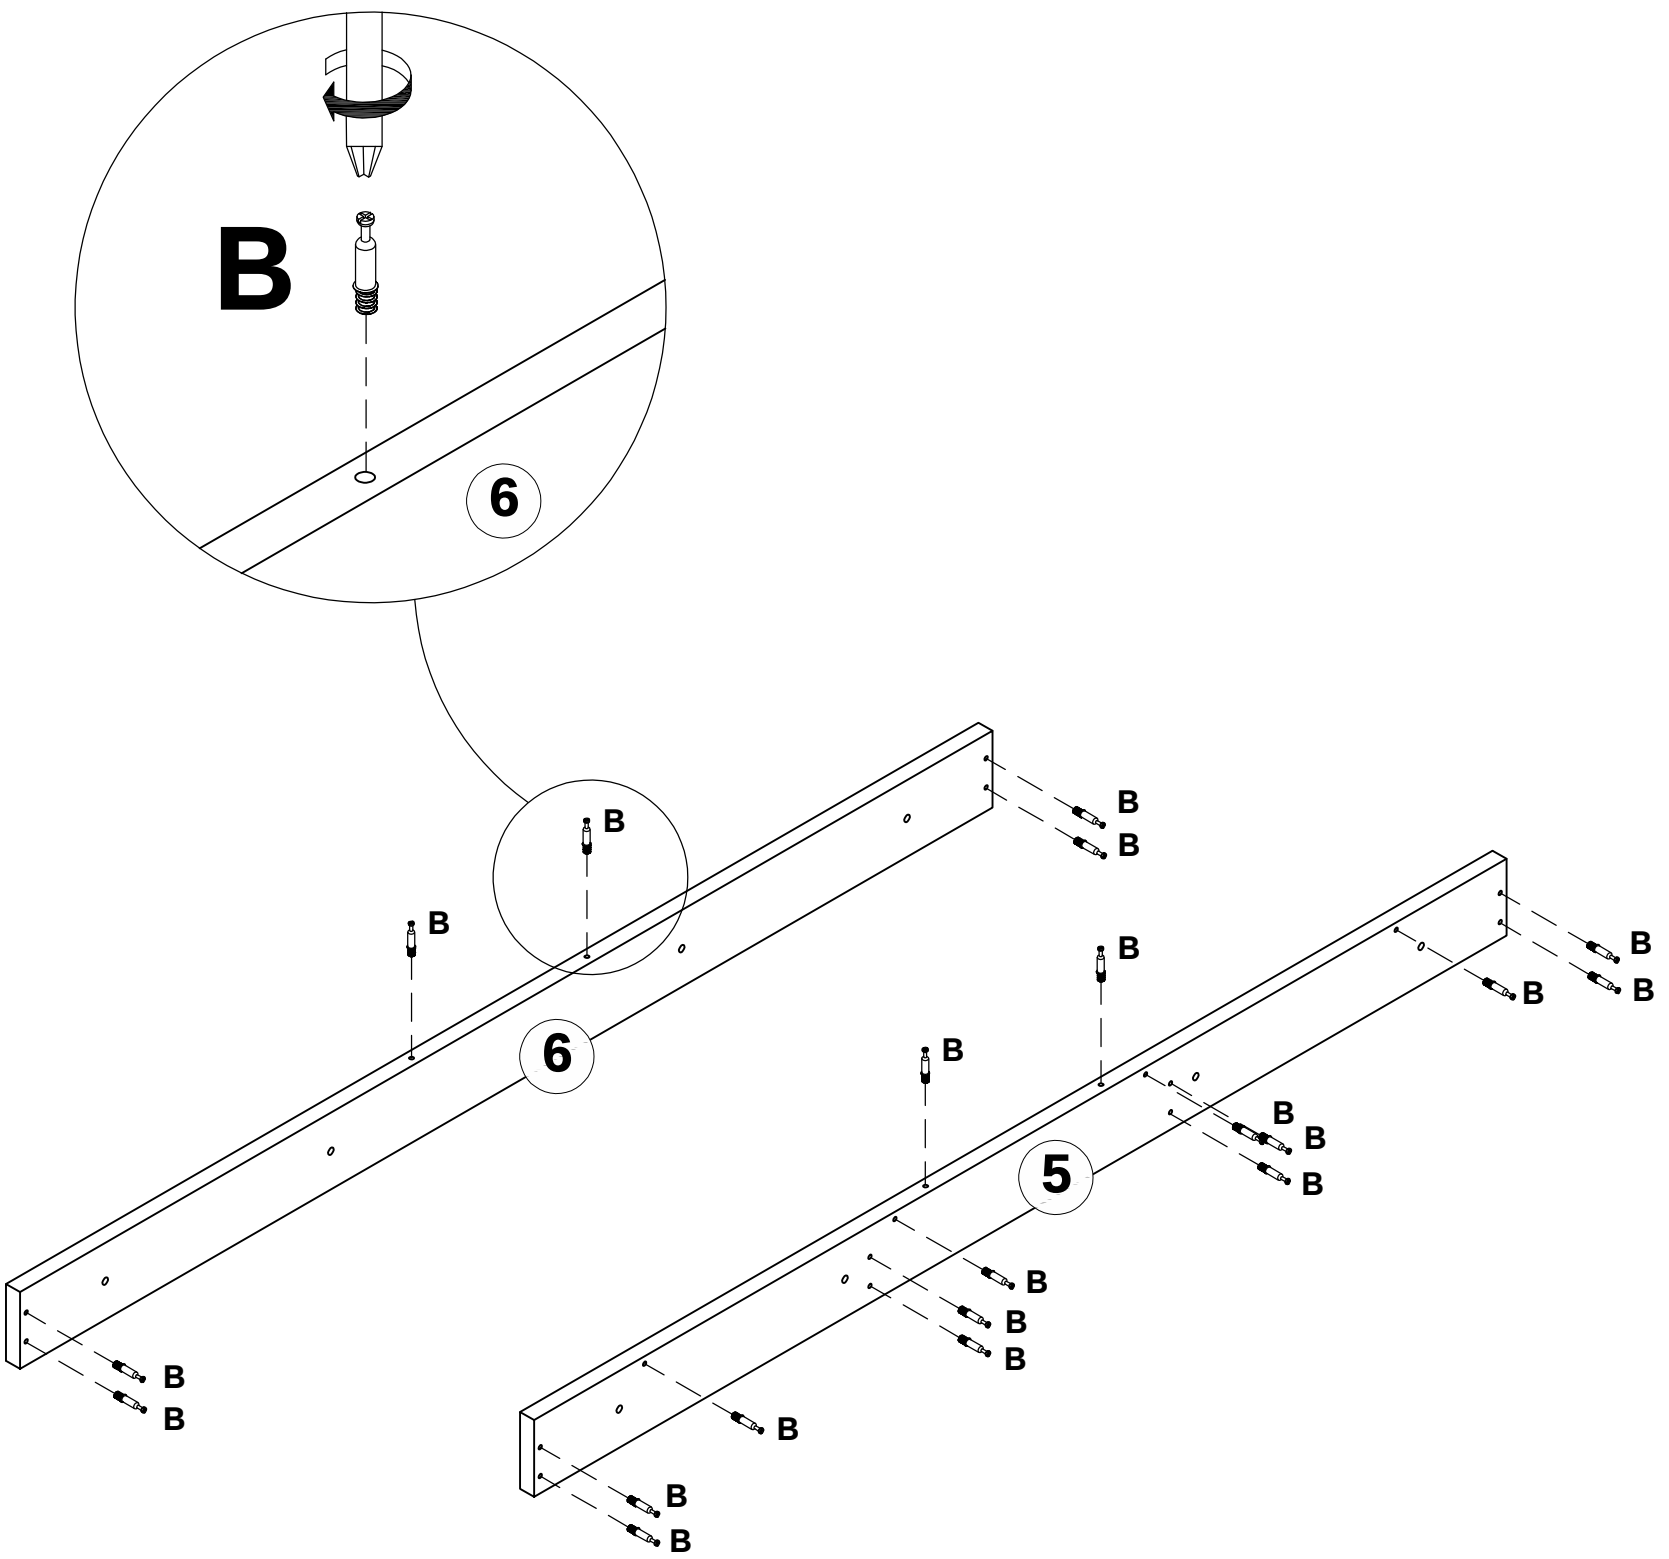



12

A x 4

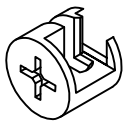


∅15 x 10 mm

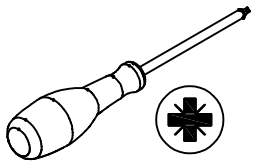

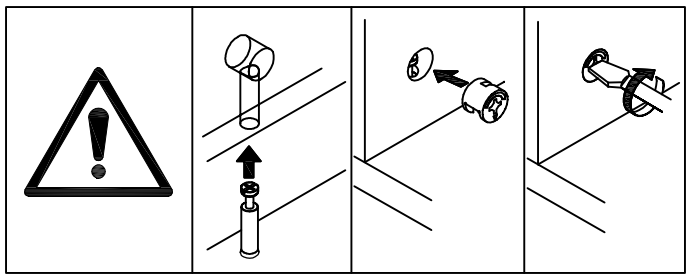


Connect part (5) with part (7), then secure with (A).

Connect part (6) with part (7), then secure with (A).

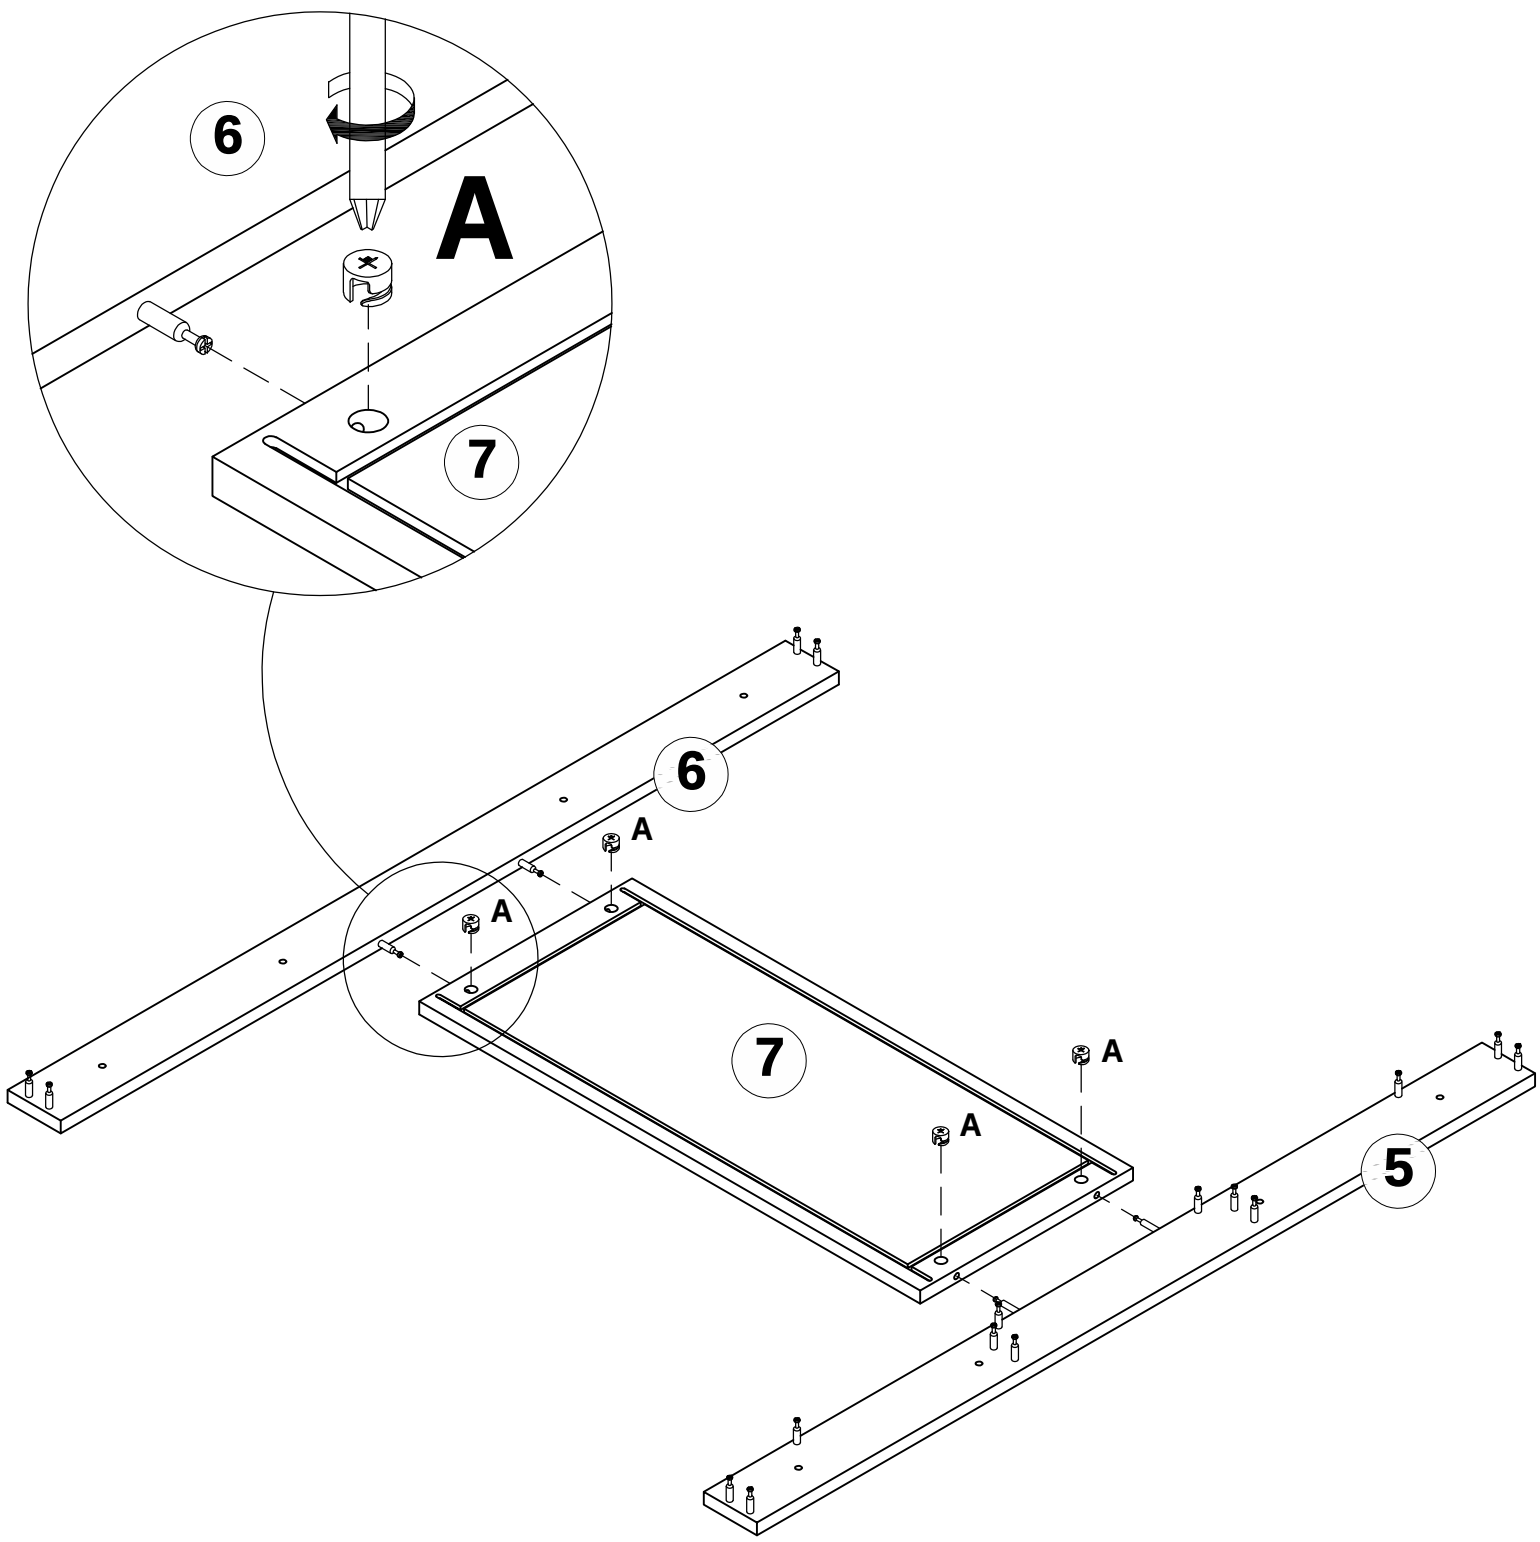



13

A x 16

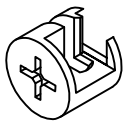


∅15 x 10 mm

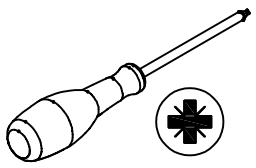

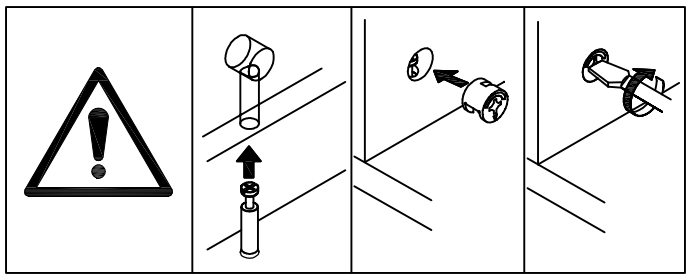


Connect part (5) and (6) with parts (2), (3), (4) and (14), then secure with (A).

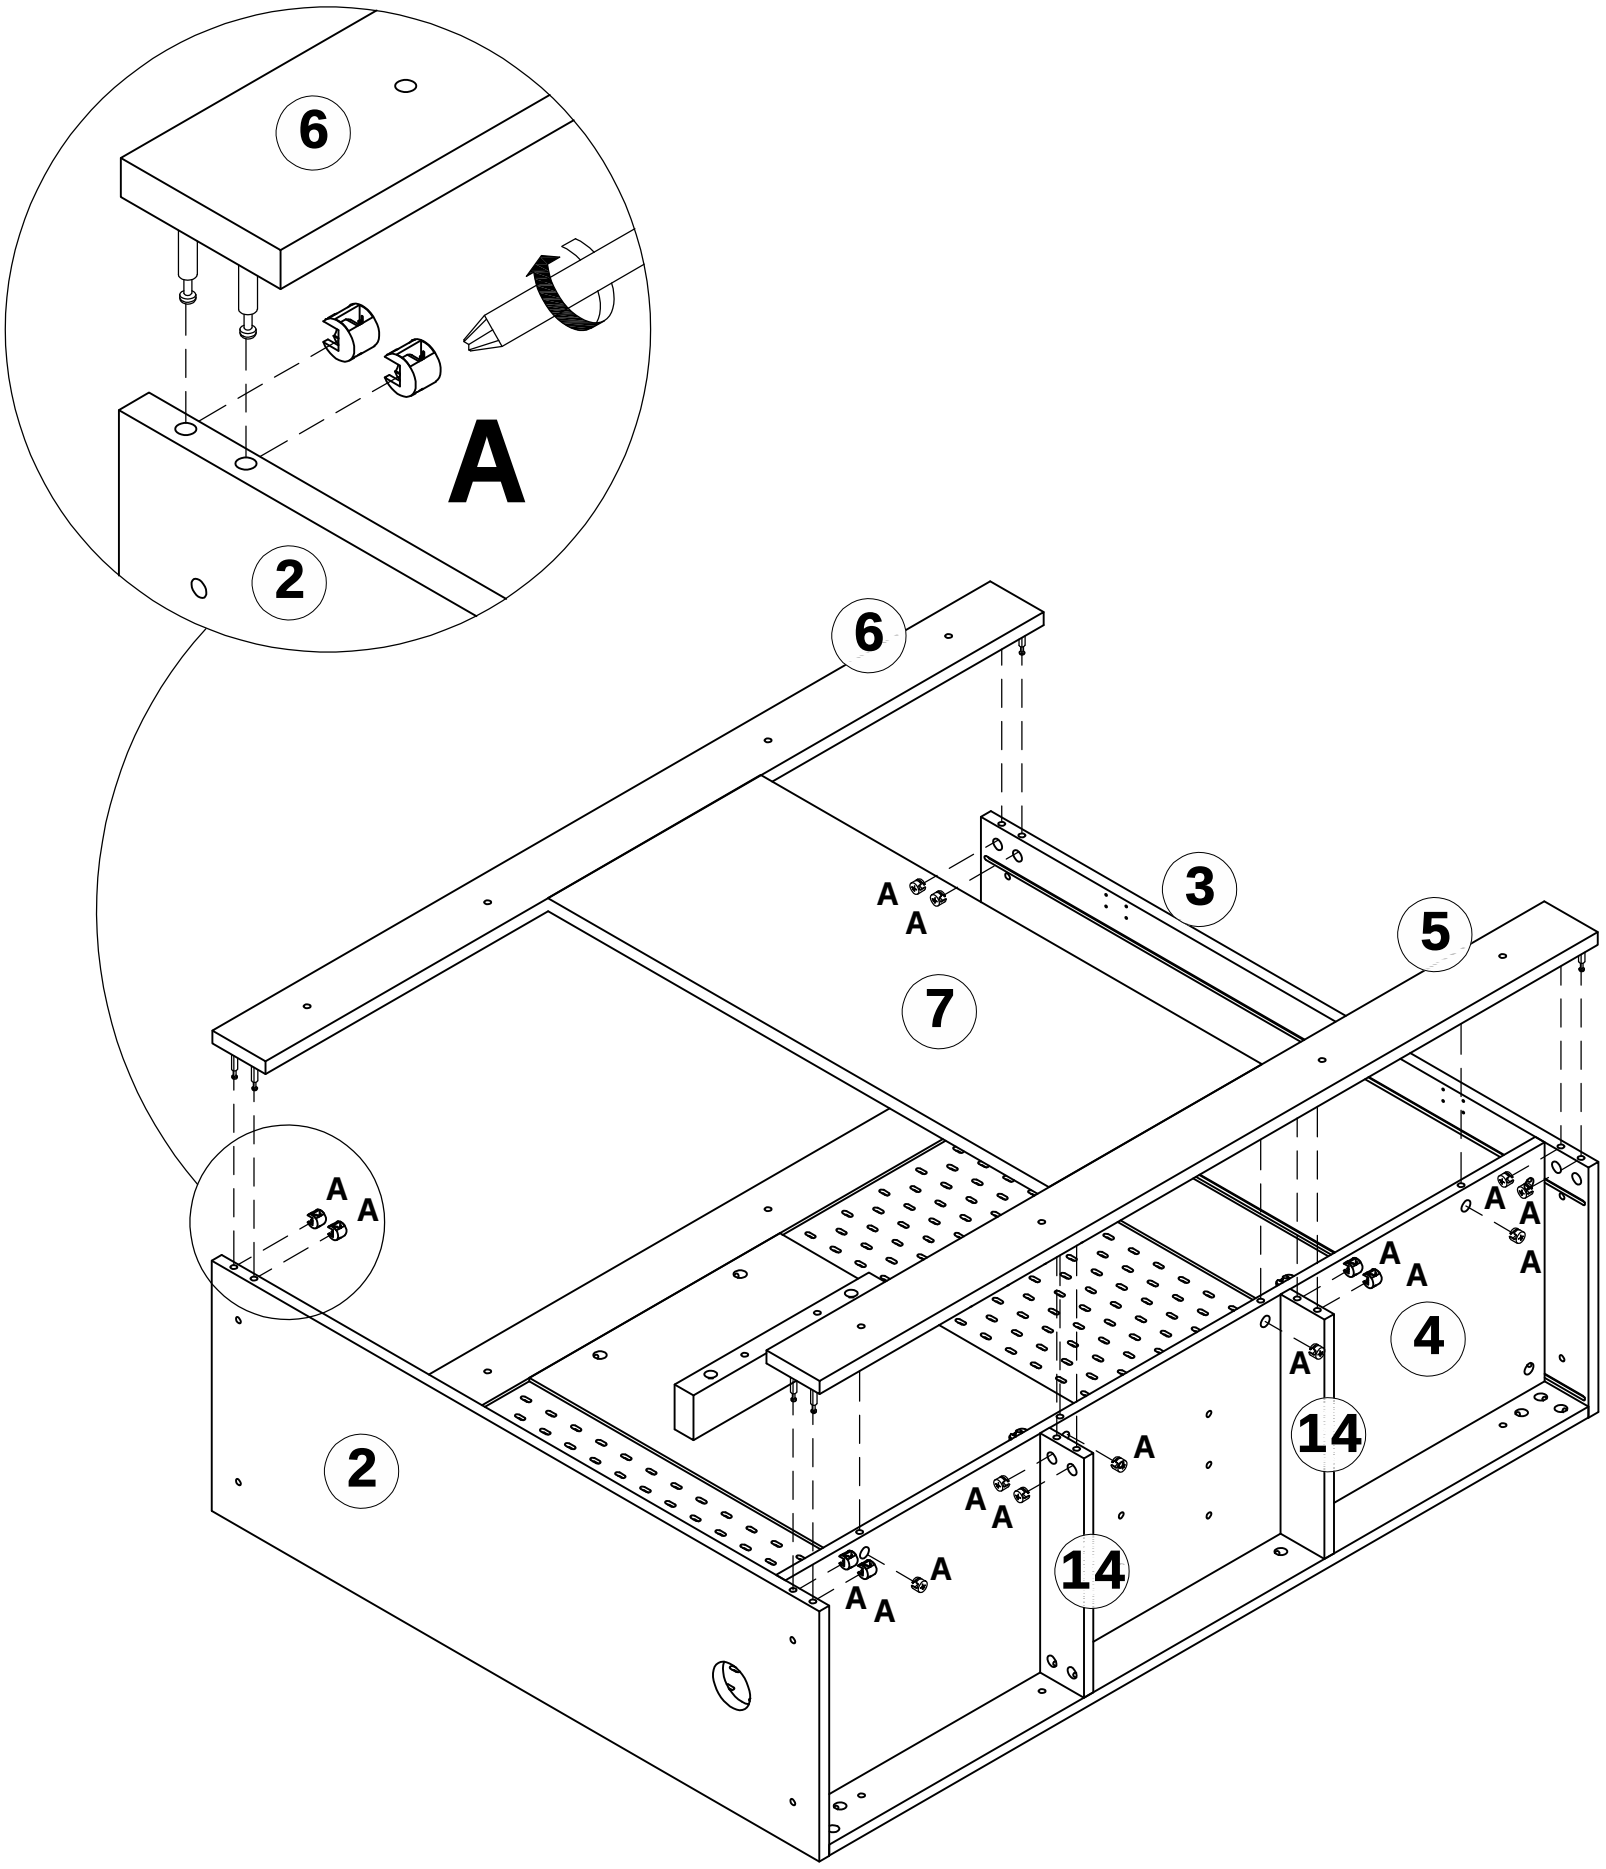


14

J x 8




M6*25

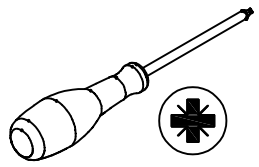


Connect part (15) with part (12), then secure with (J).

Connect part (17) with part (5), then secure with (J).

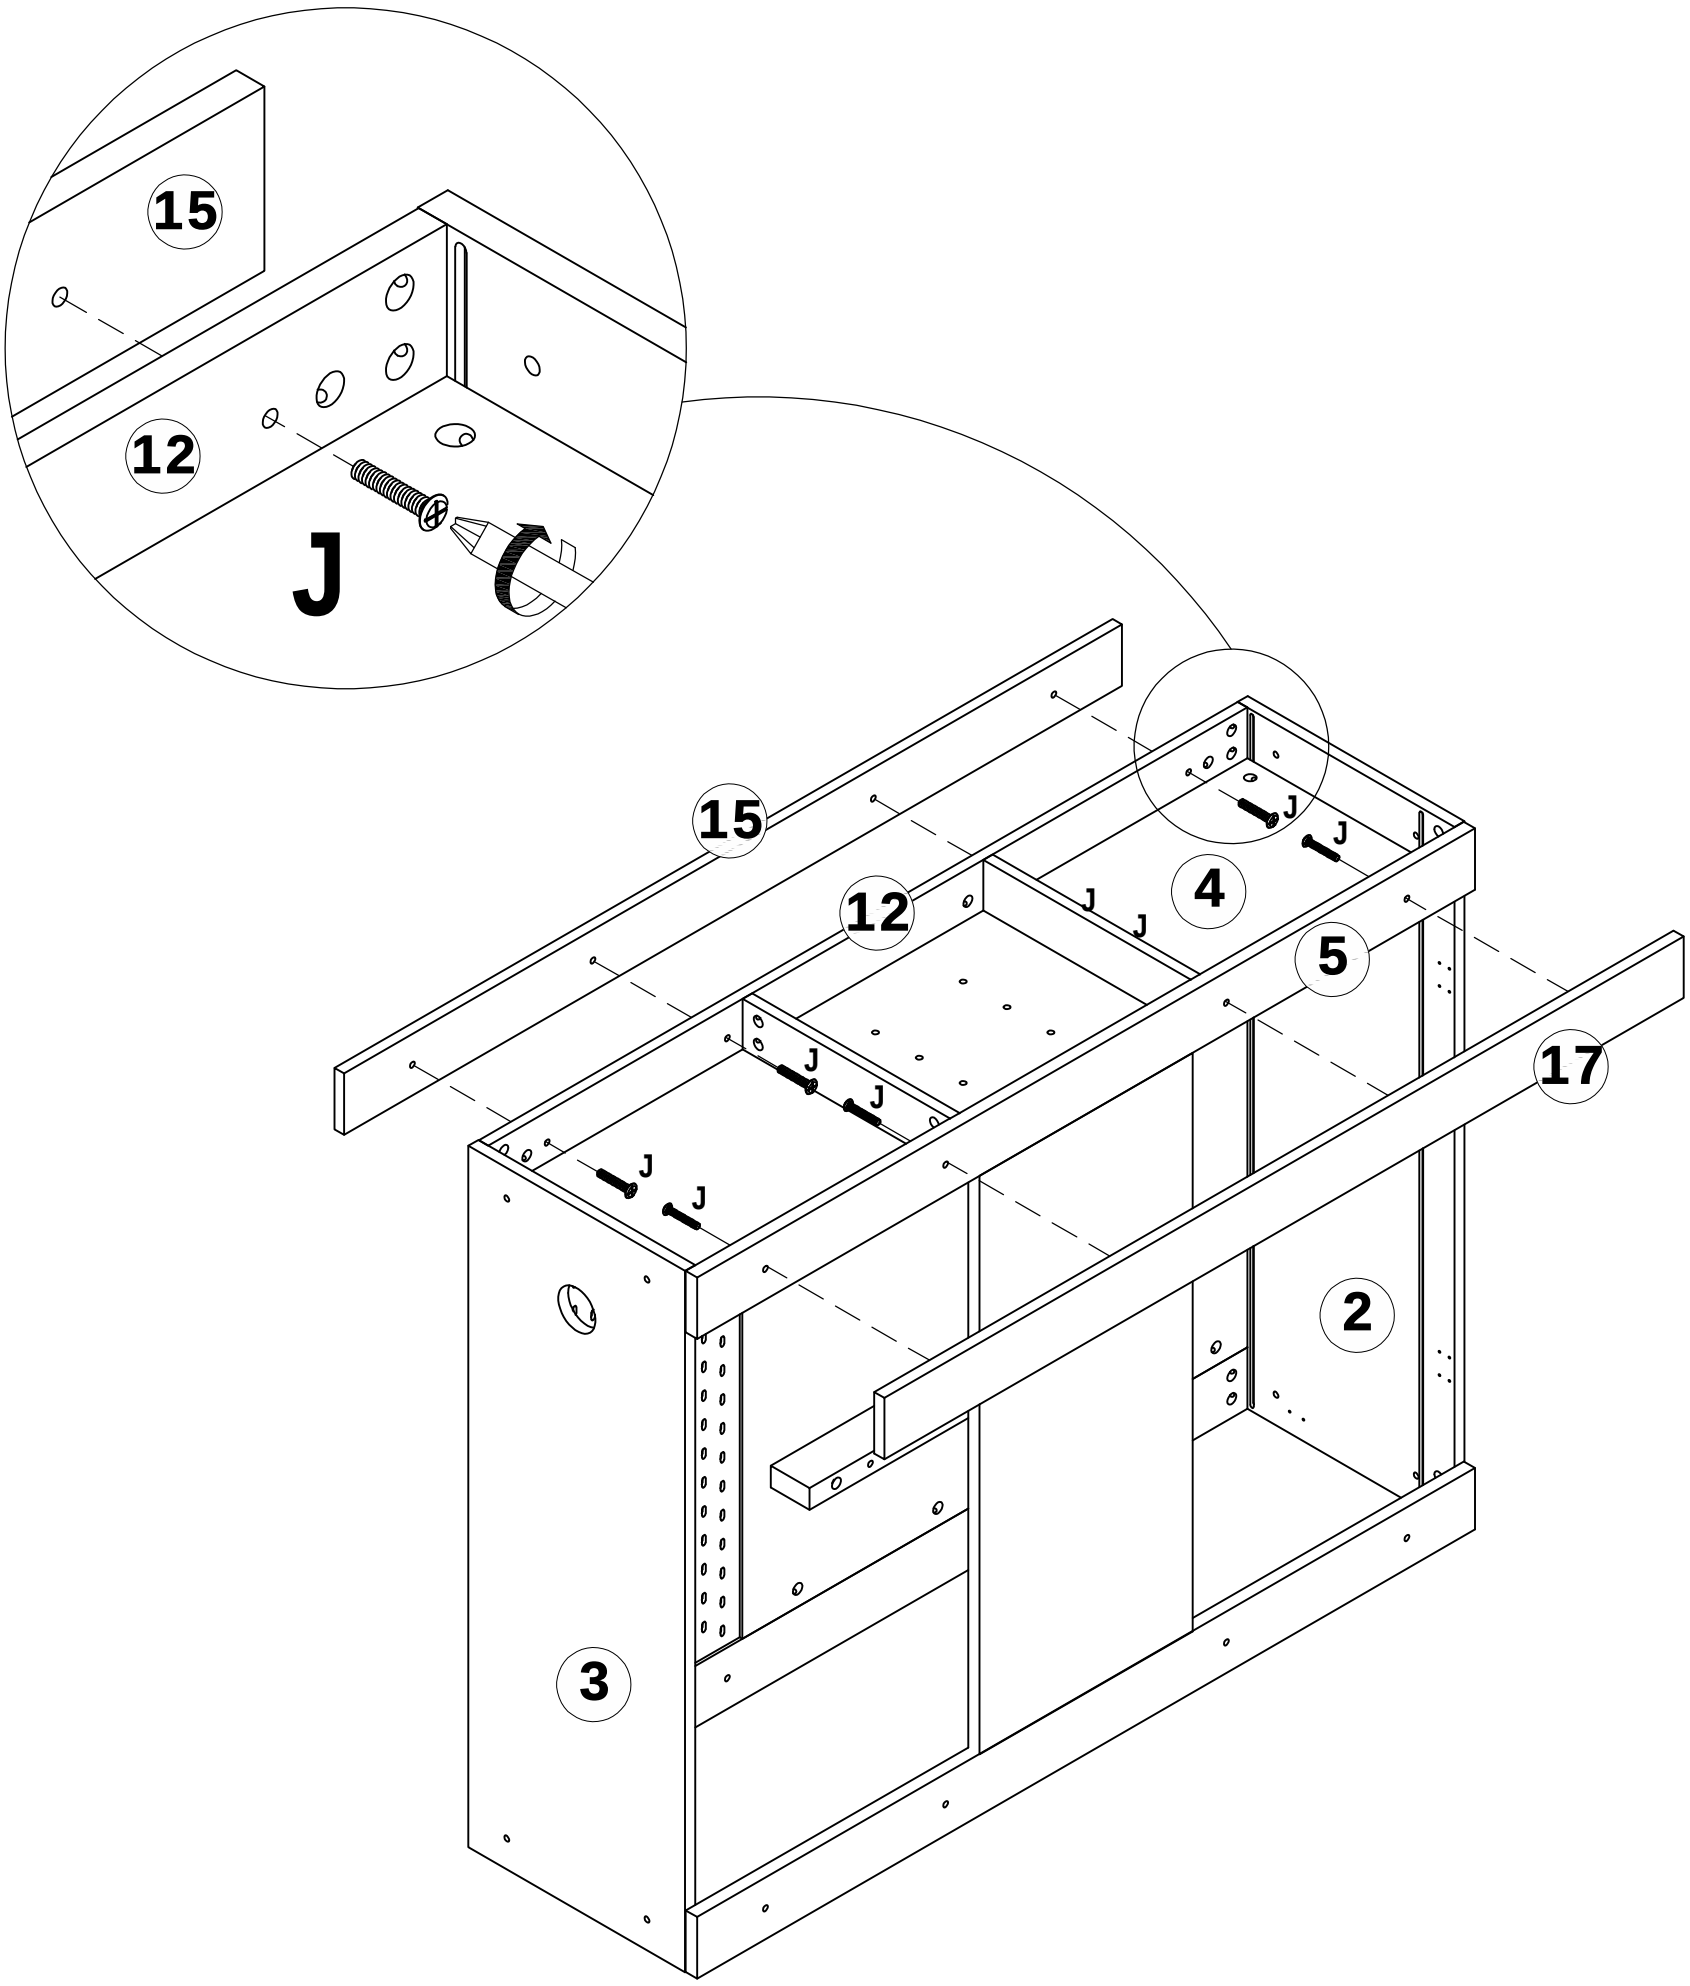


15

J x 4




M6*25

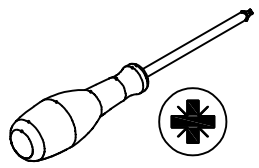


Connect part (18) with part (2), then secure with (J).

Connect part (18) with part (3), then secure with (J).

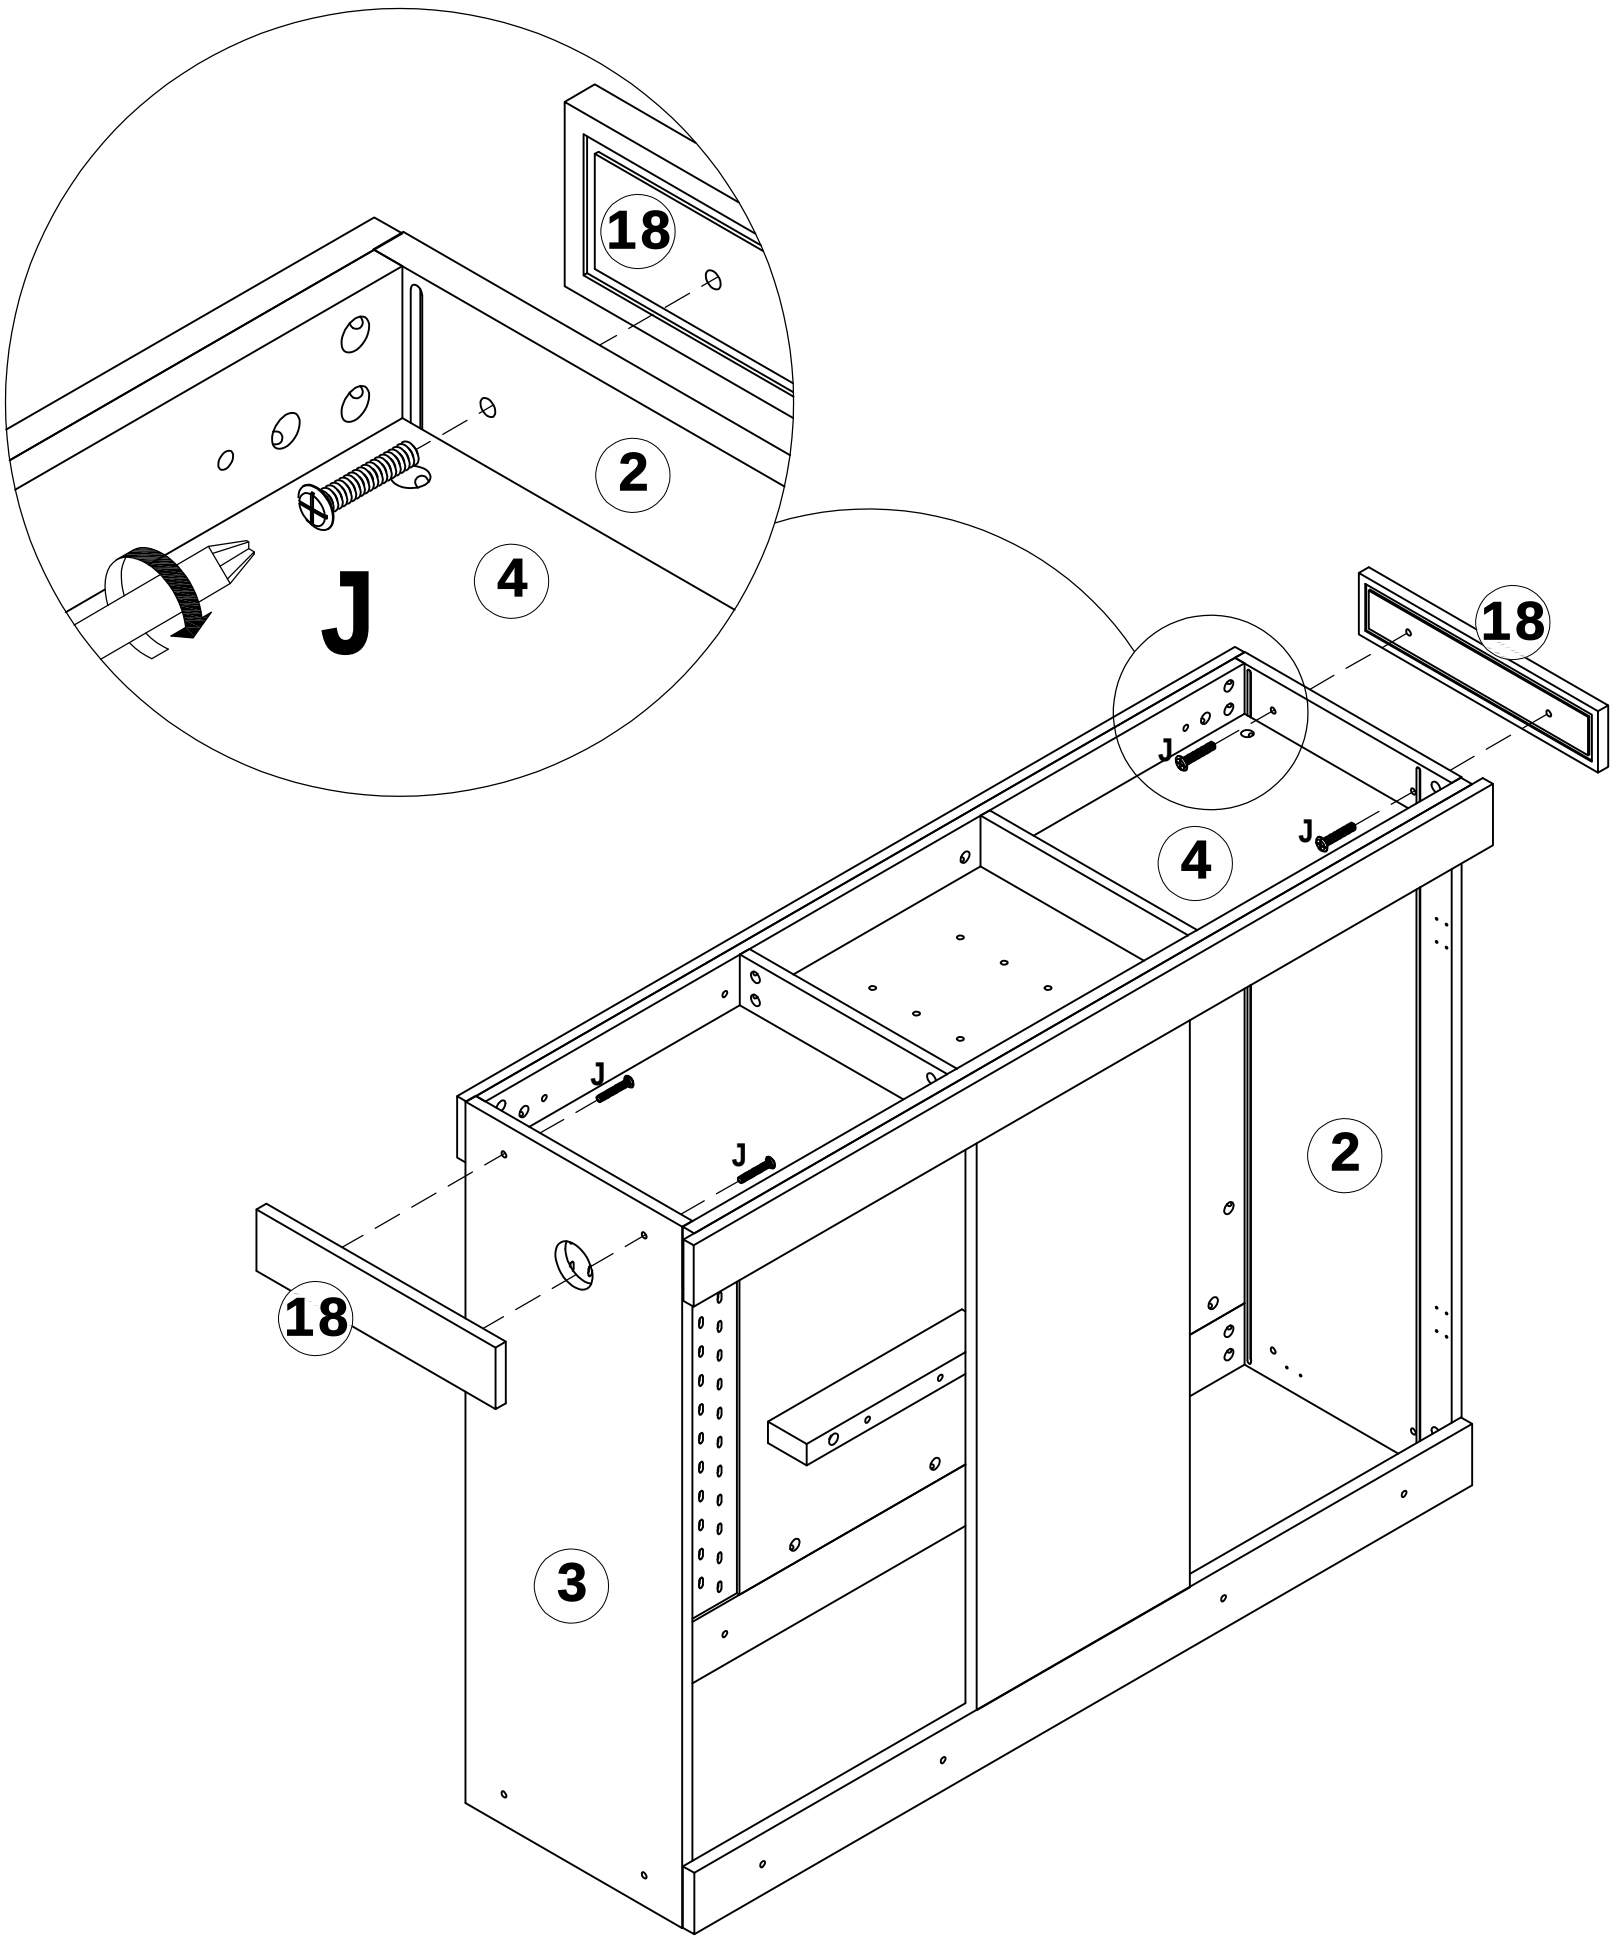


16

J x 8




M6*25

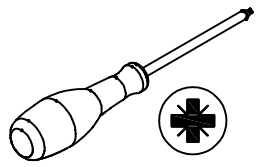


Connect part (16) with part (13), then secure with (J).

Connect part (17) with part (6), then secure with (J).

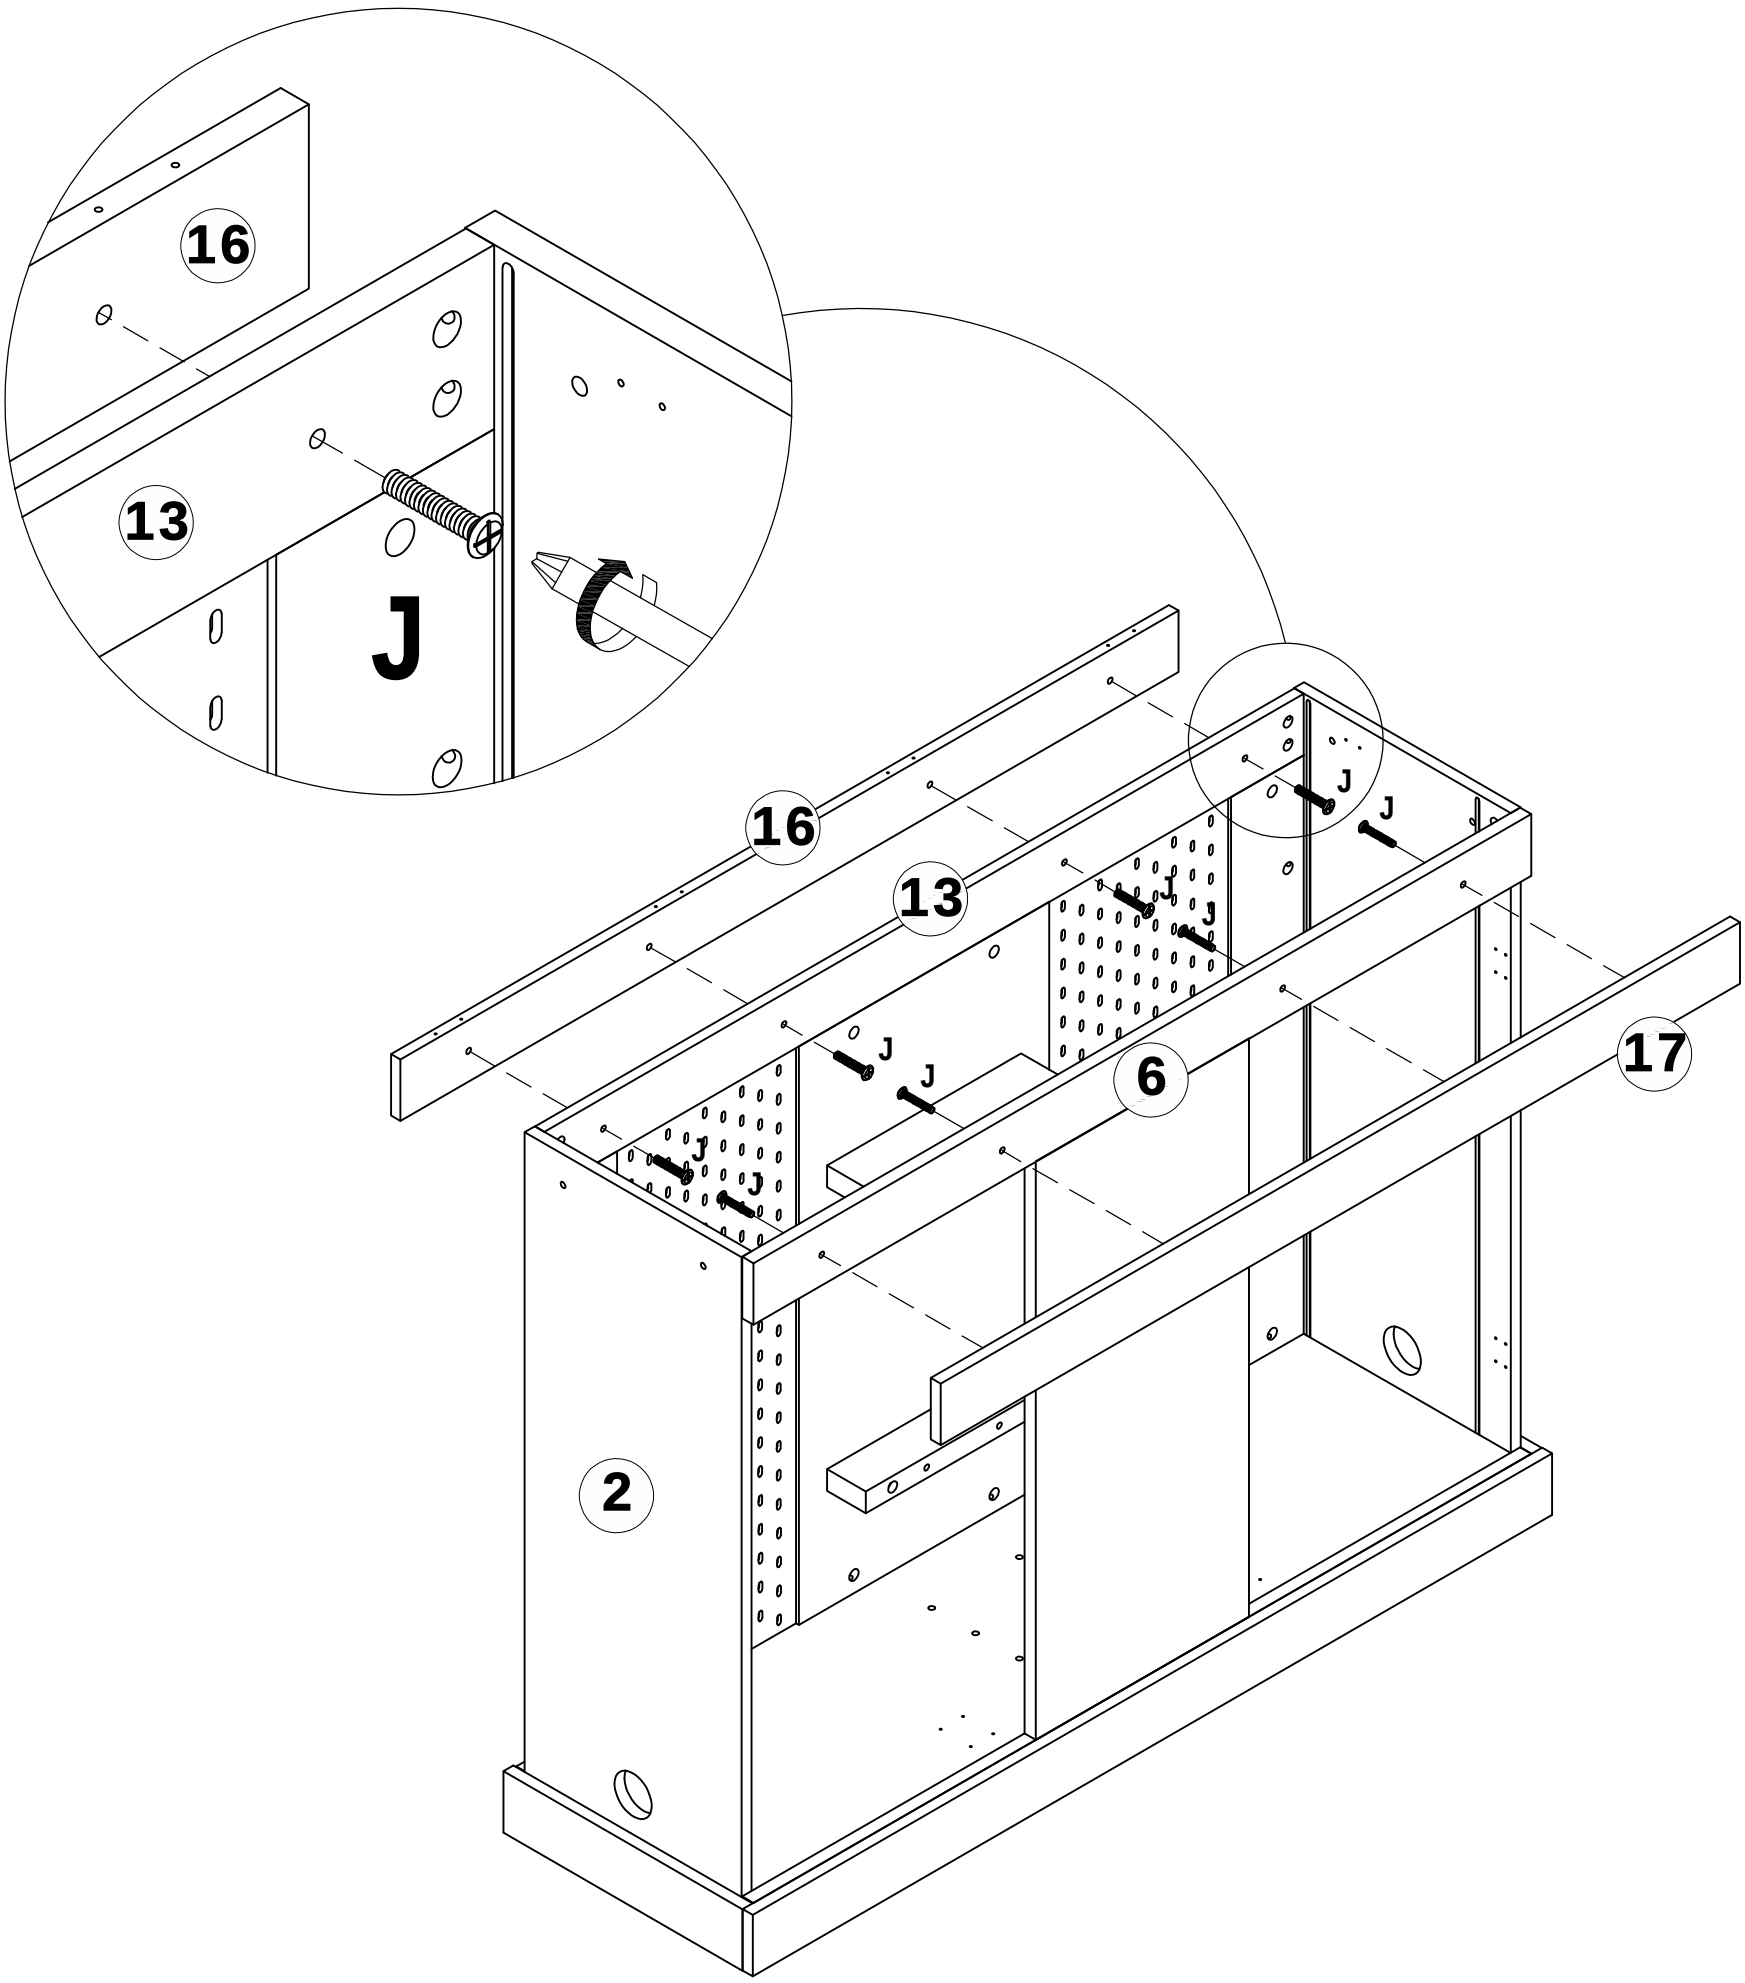


17

J x 4




M6*25

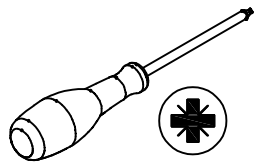

Connect part (18) with part (2), then secure with (J).

Connect part (18) with part (3), then secure with (J).

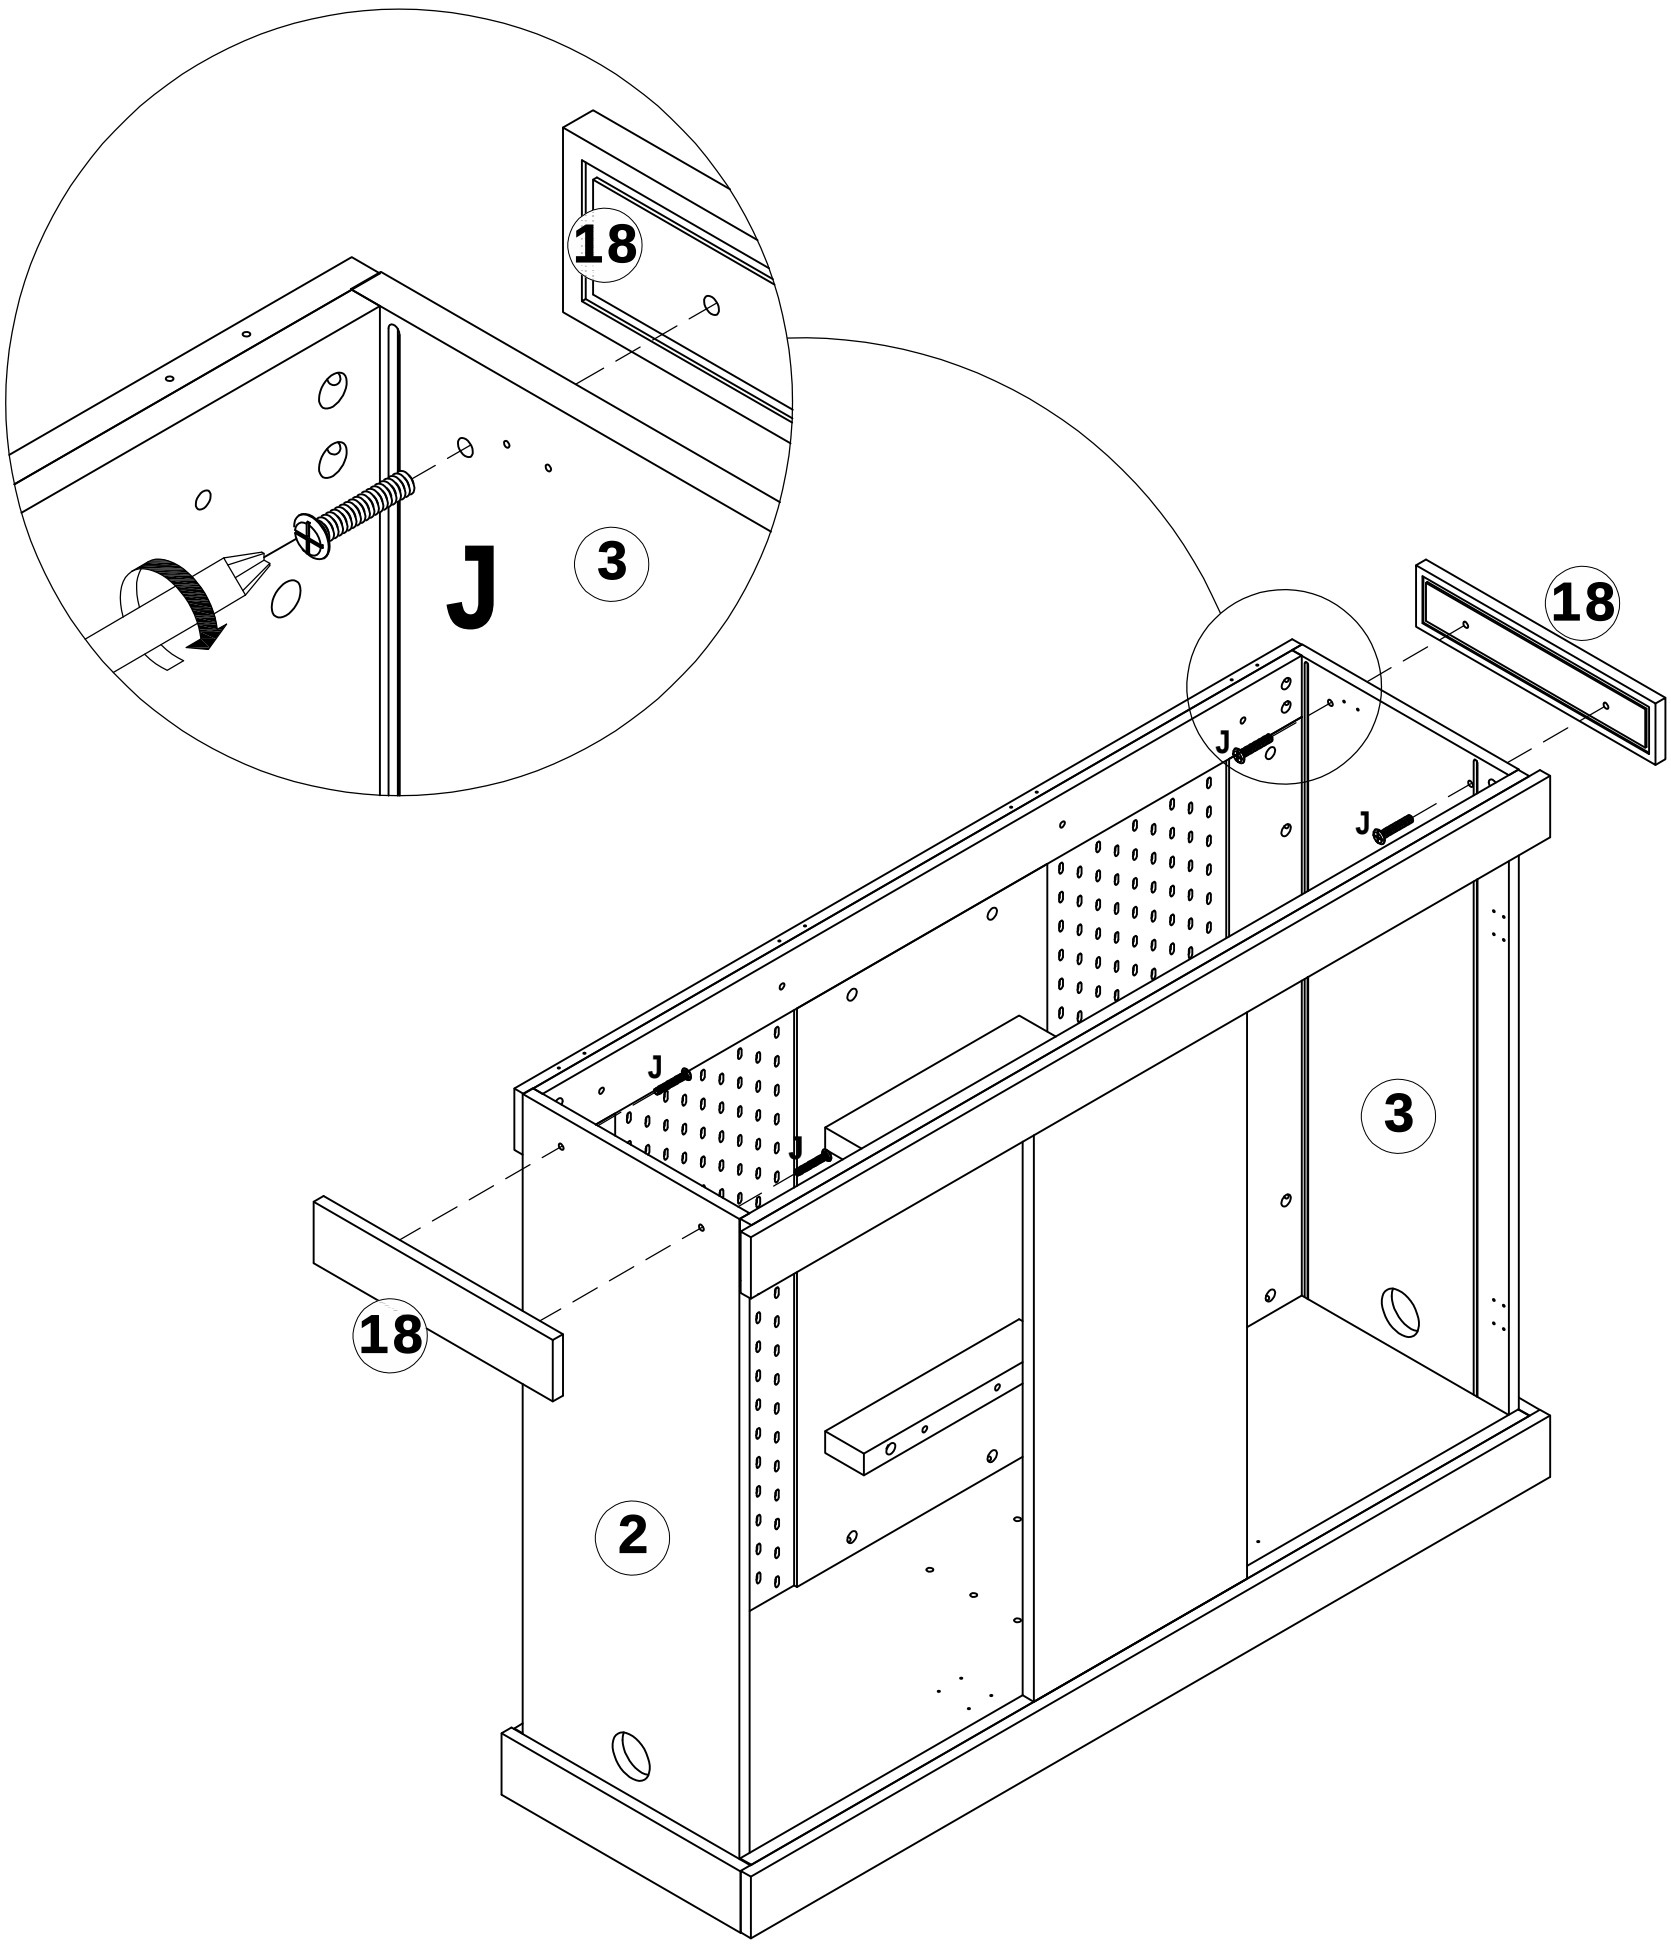


18


T x 20





∅15mm

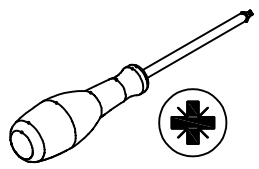


Install (T) onto (A), align the holes and secure it.

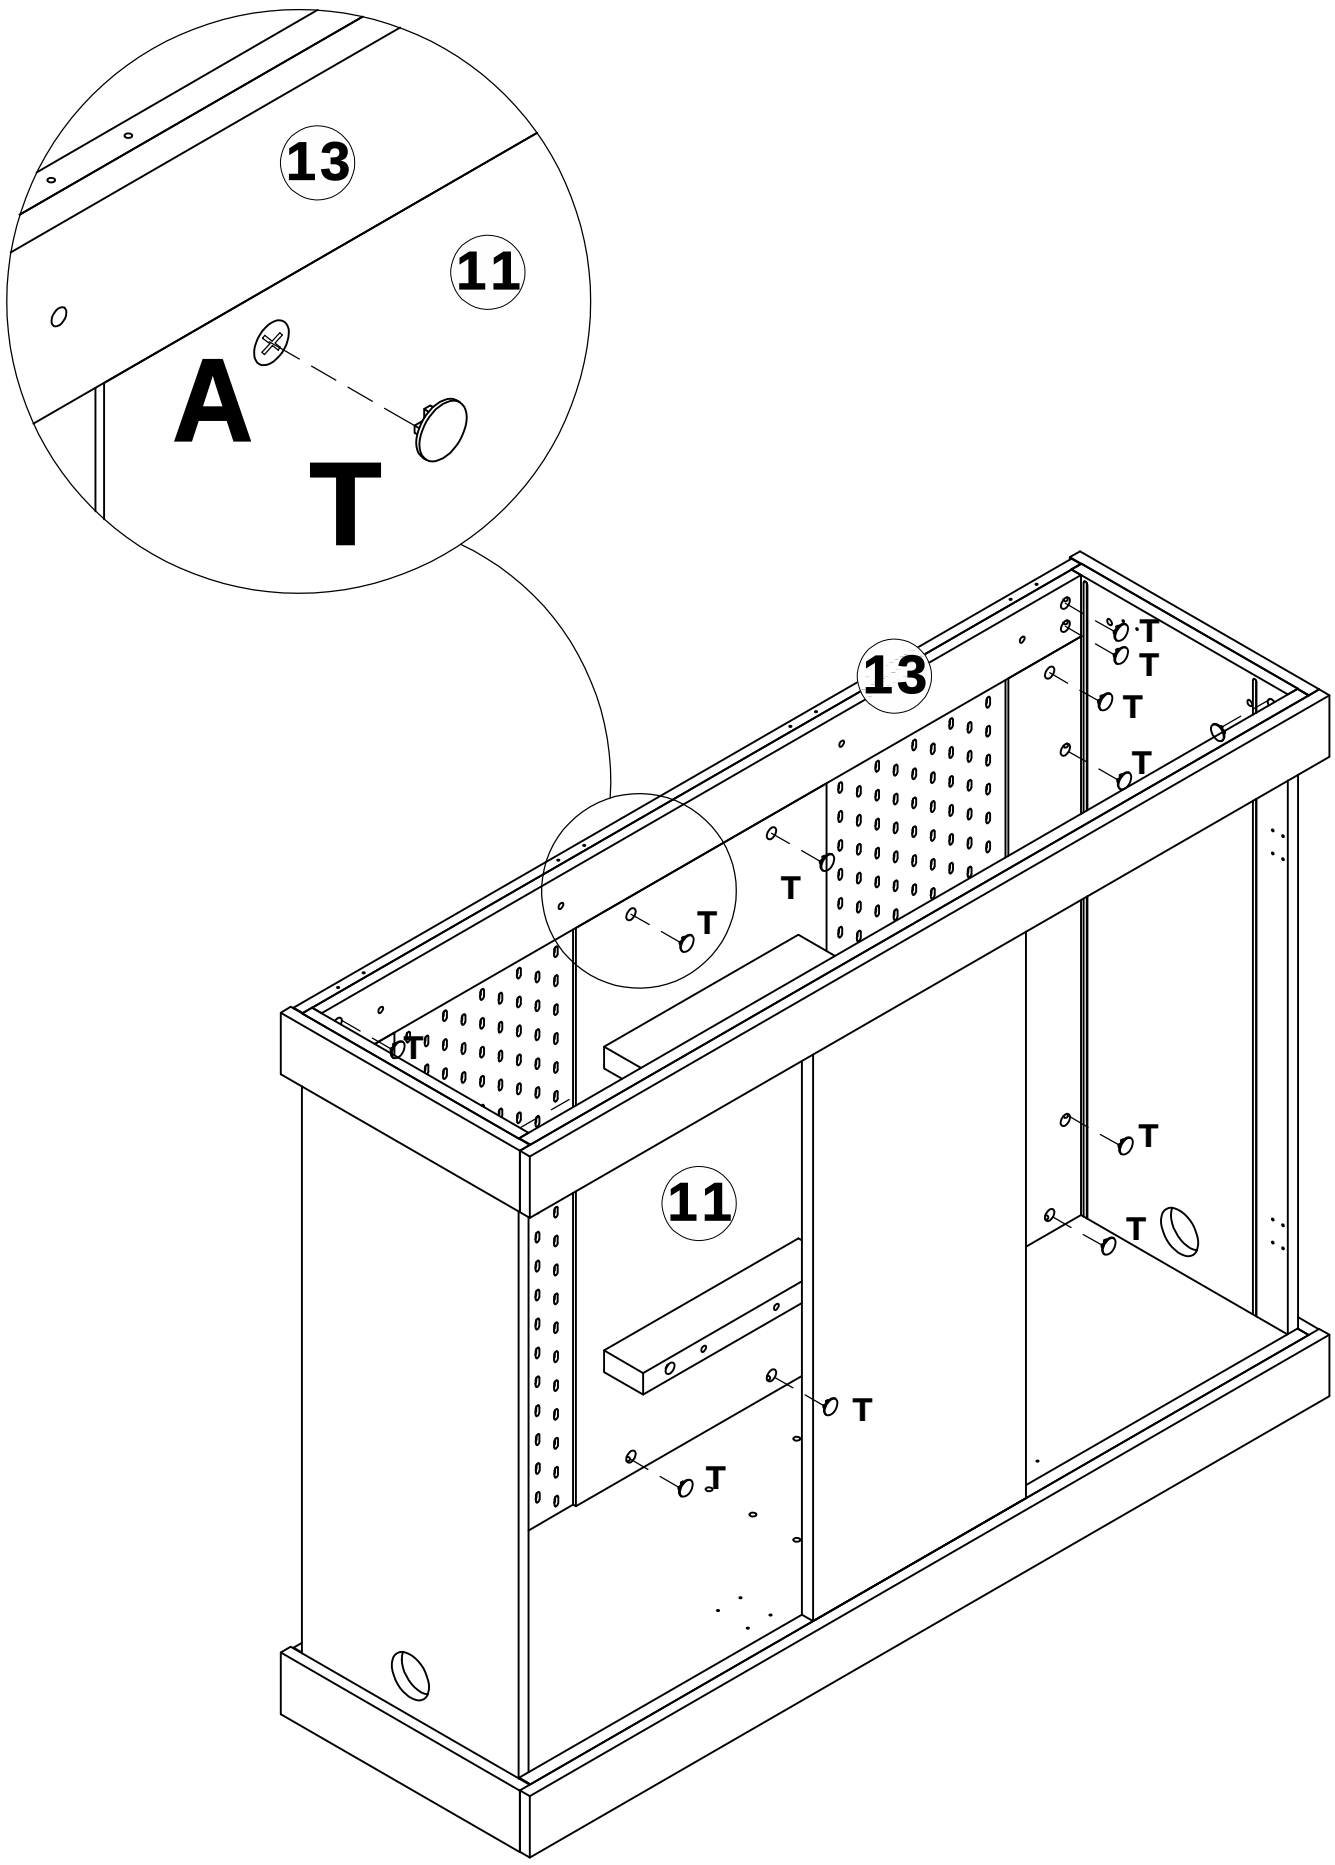



19

H x 4	Y x 1	
		
M6*16	M4	


Attach part (21) to part (20) using (H) as shown.

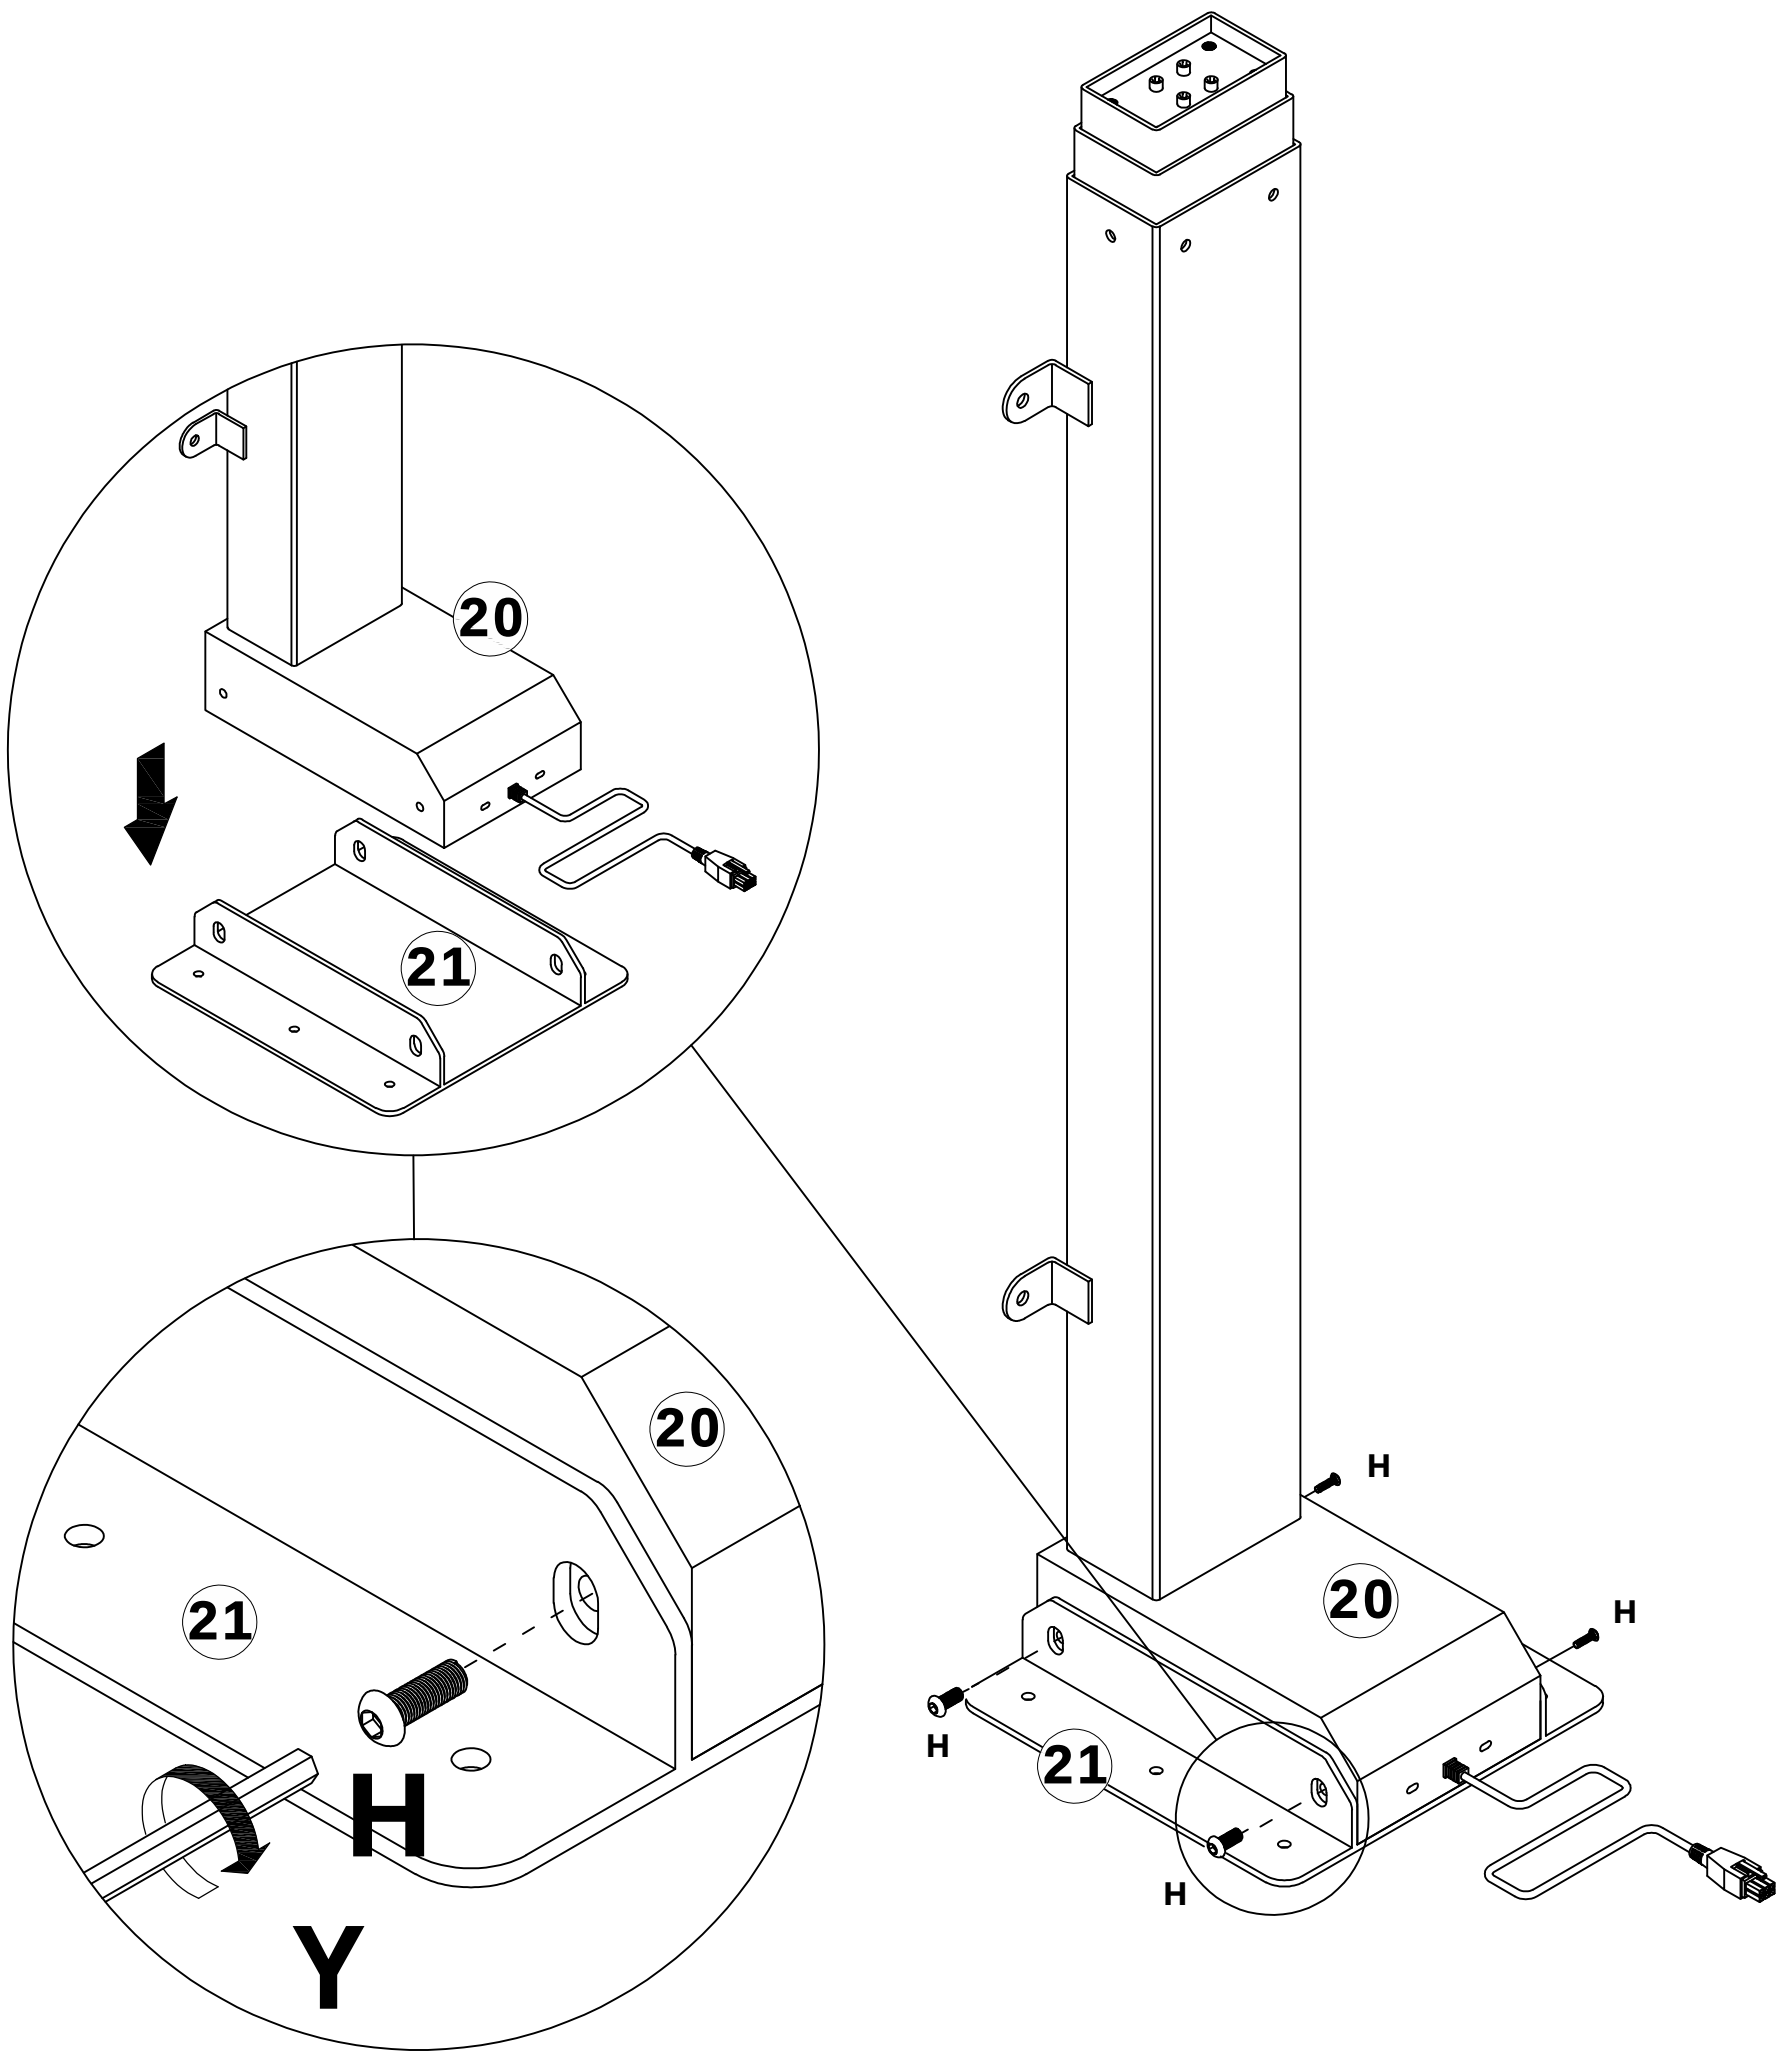




20

H x 6	Y x 1	
		
M6*16	M4	


Attach part (21) to part (4) using (H) as shown.

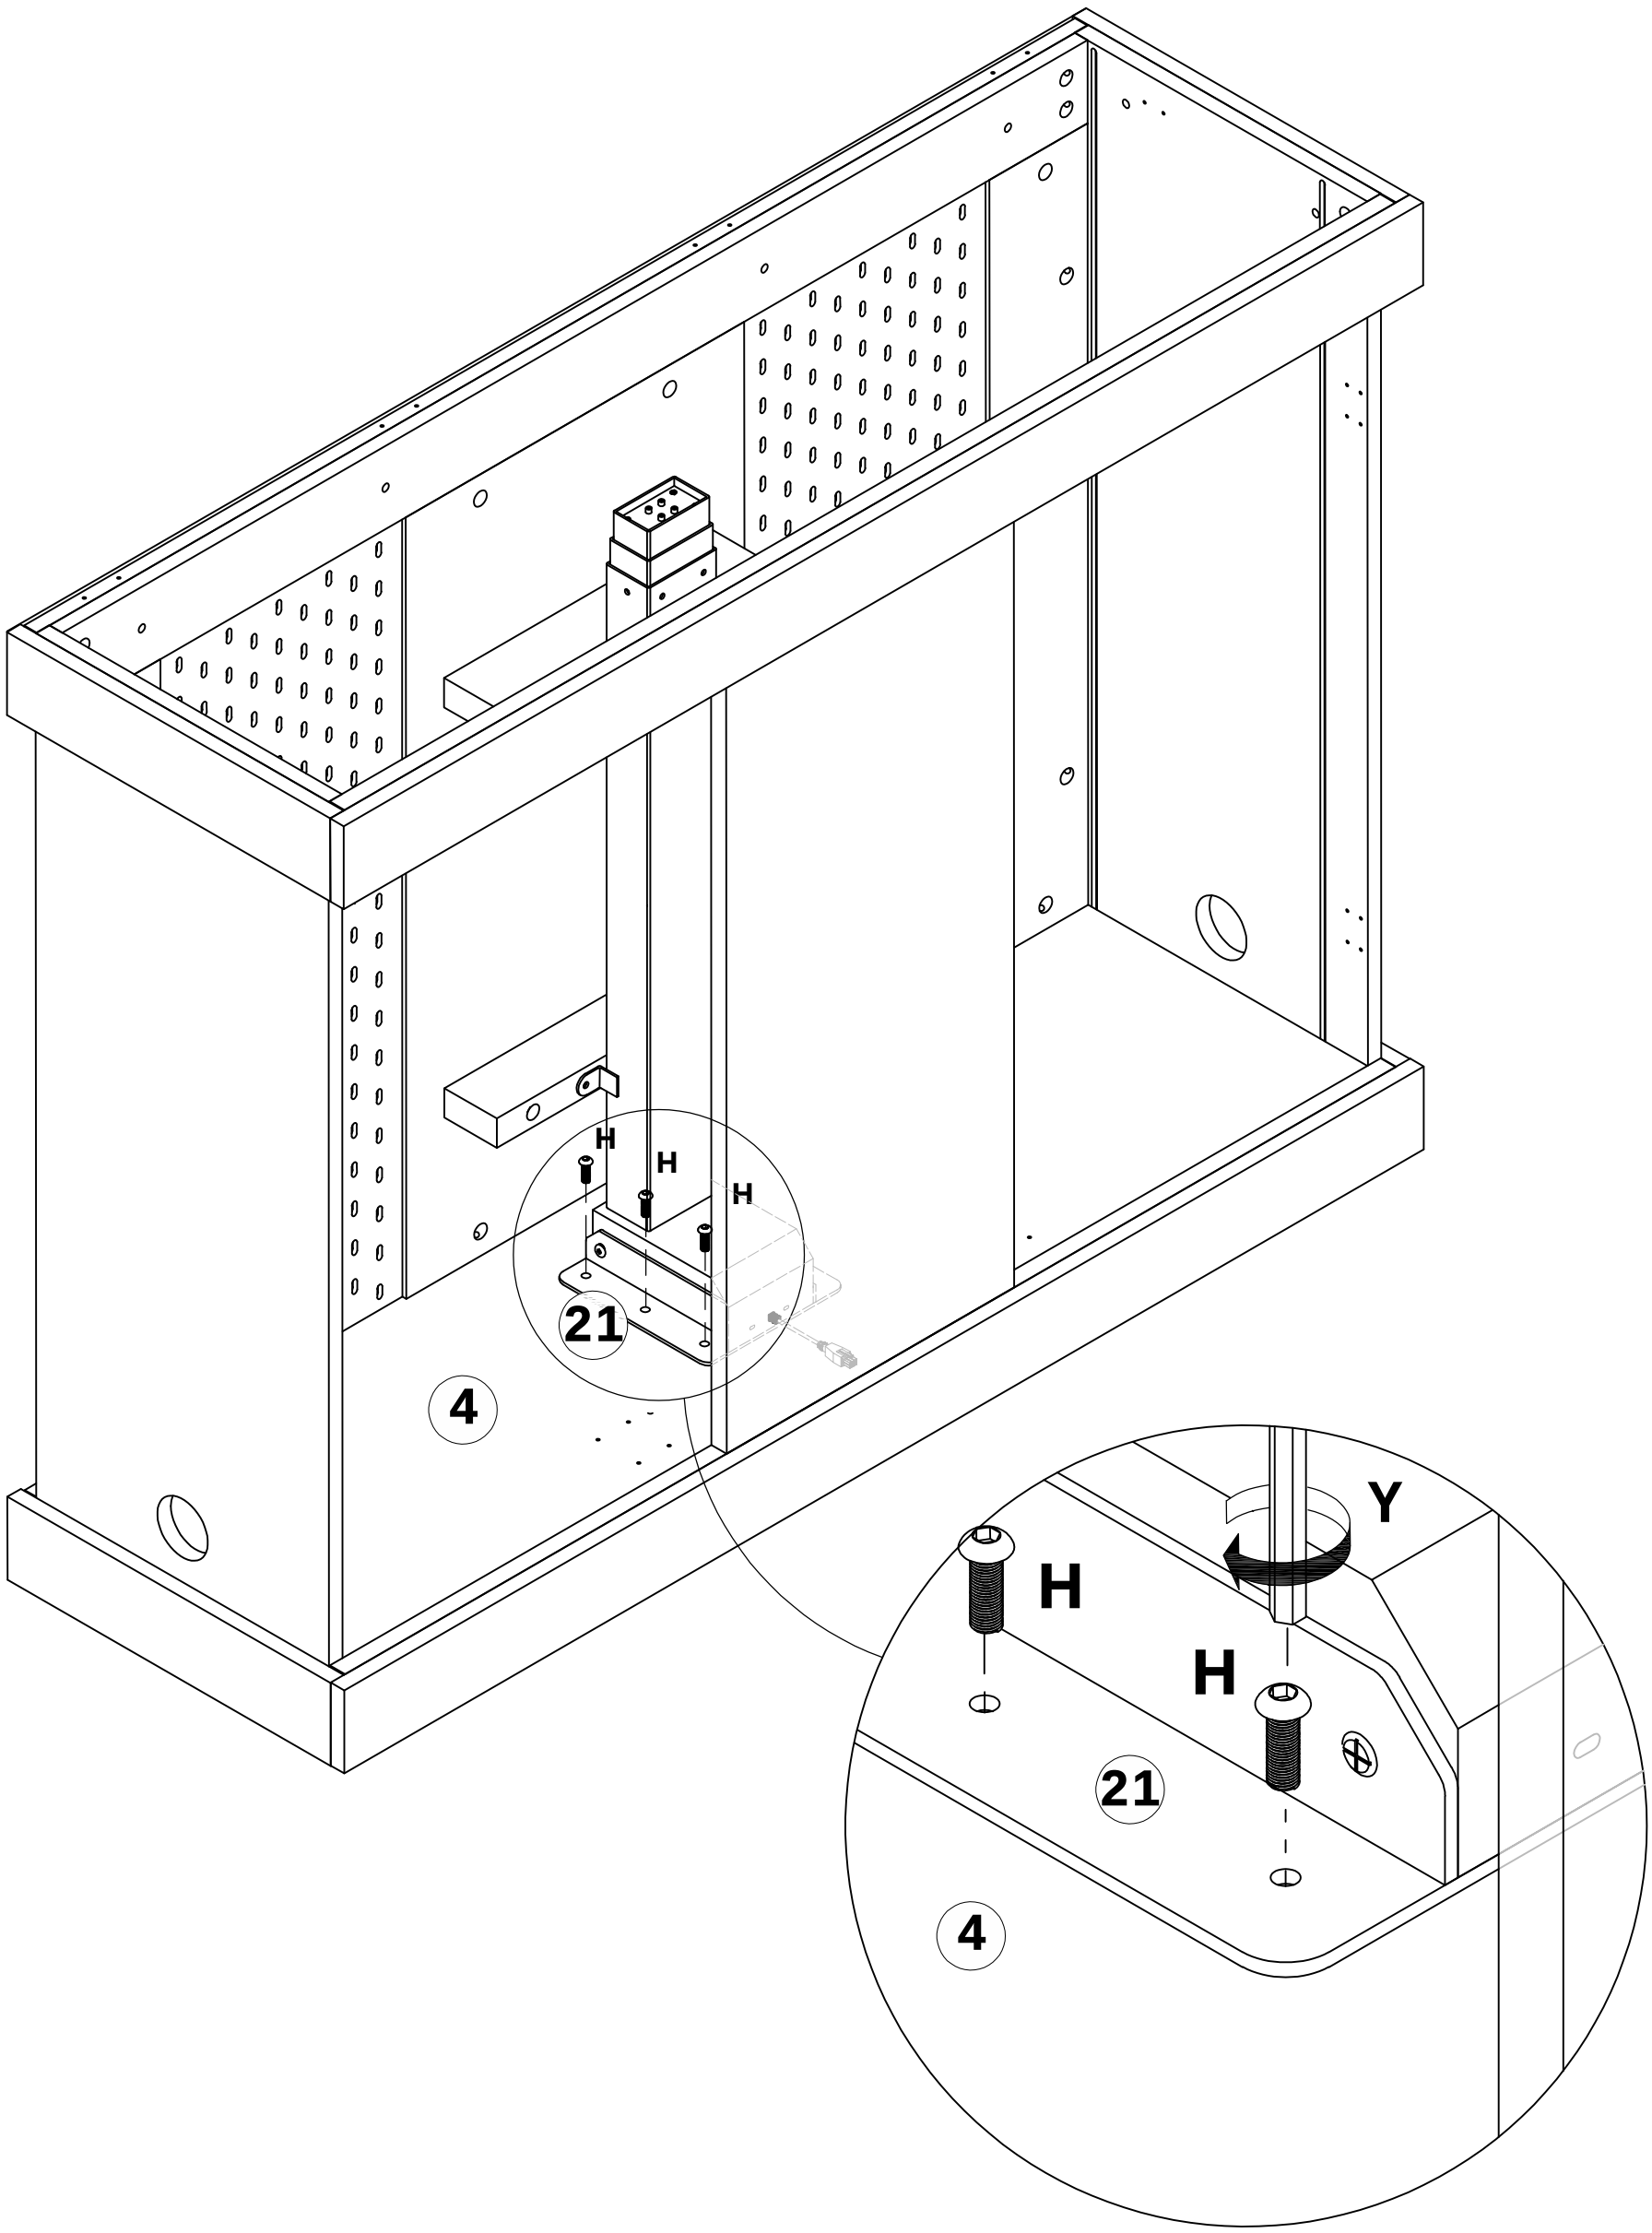

21

H x 4	M x 4	Y x 1	
			
M6*16	M6	M4	

As shown in the figure, install part (20) onto part (19) using (H,M), then tighten by turning clockwise with component (Y).

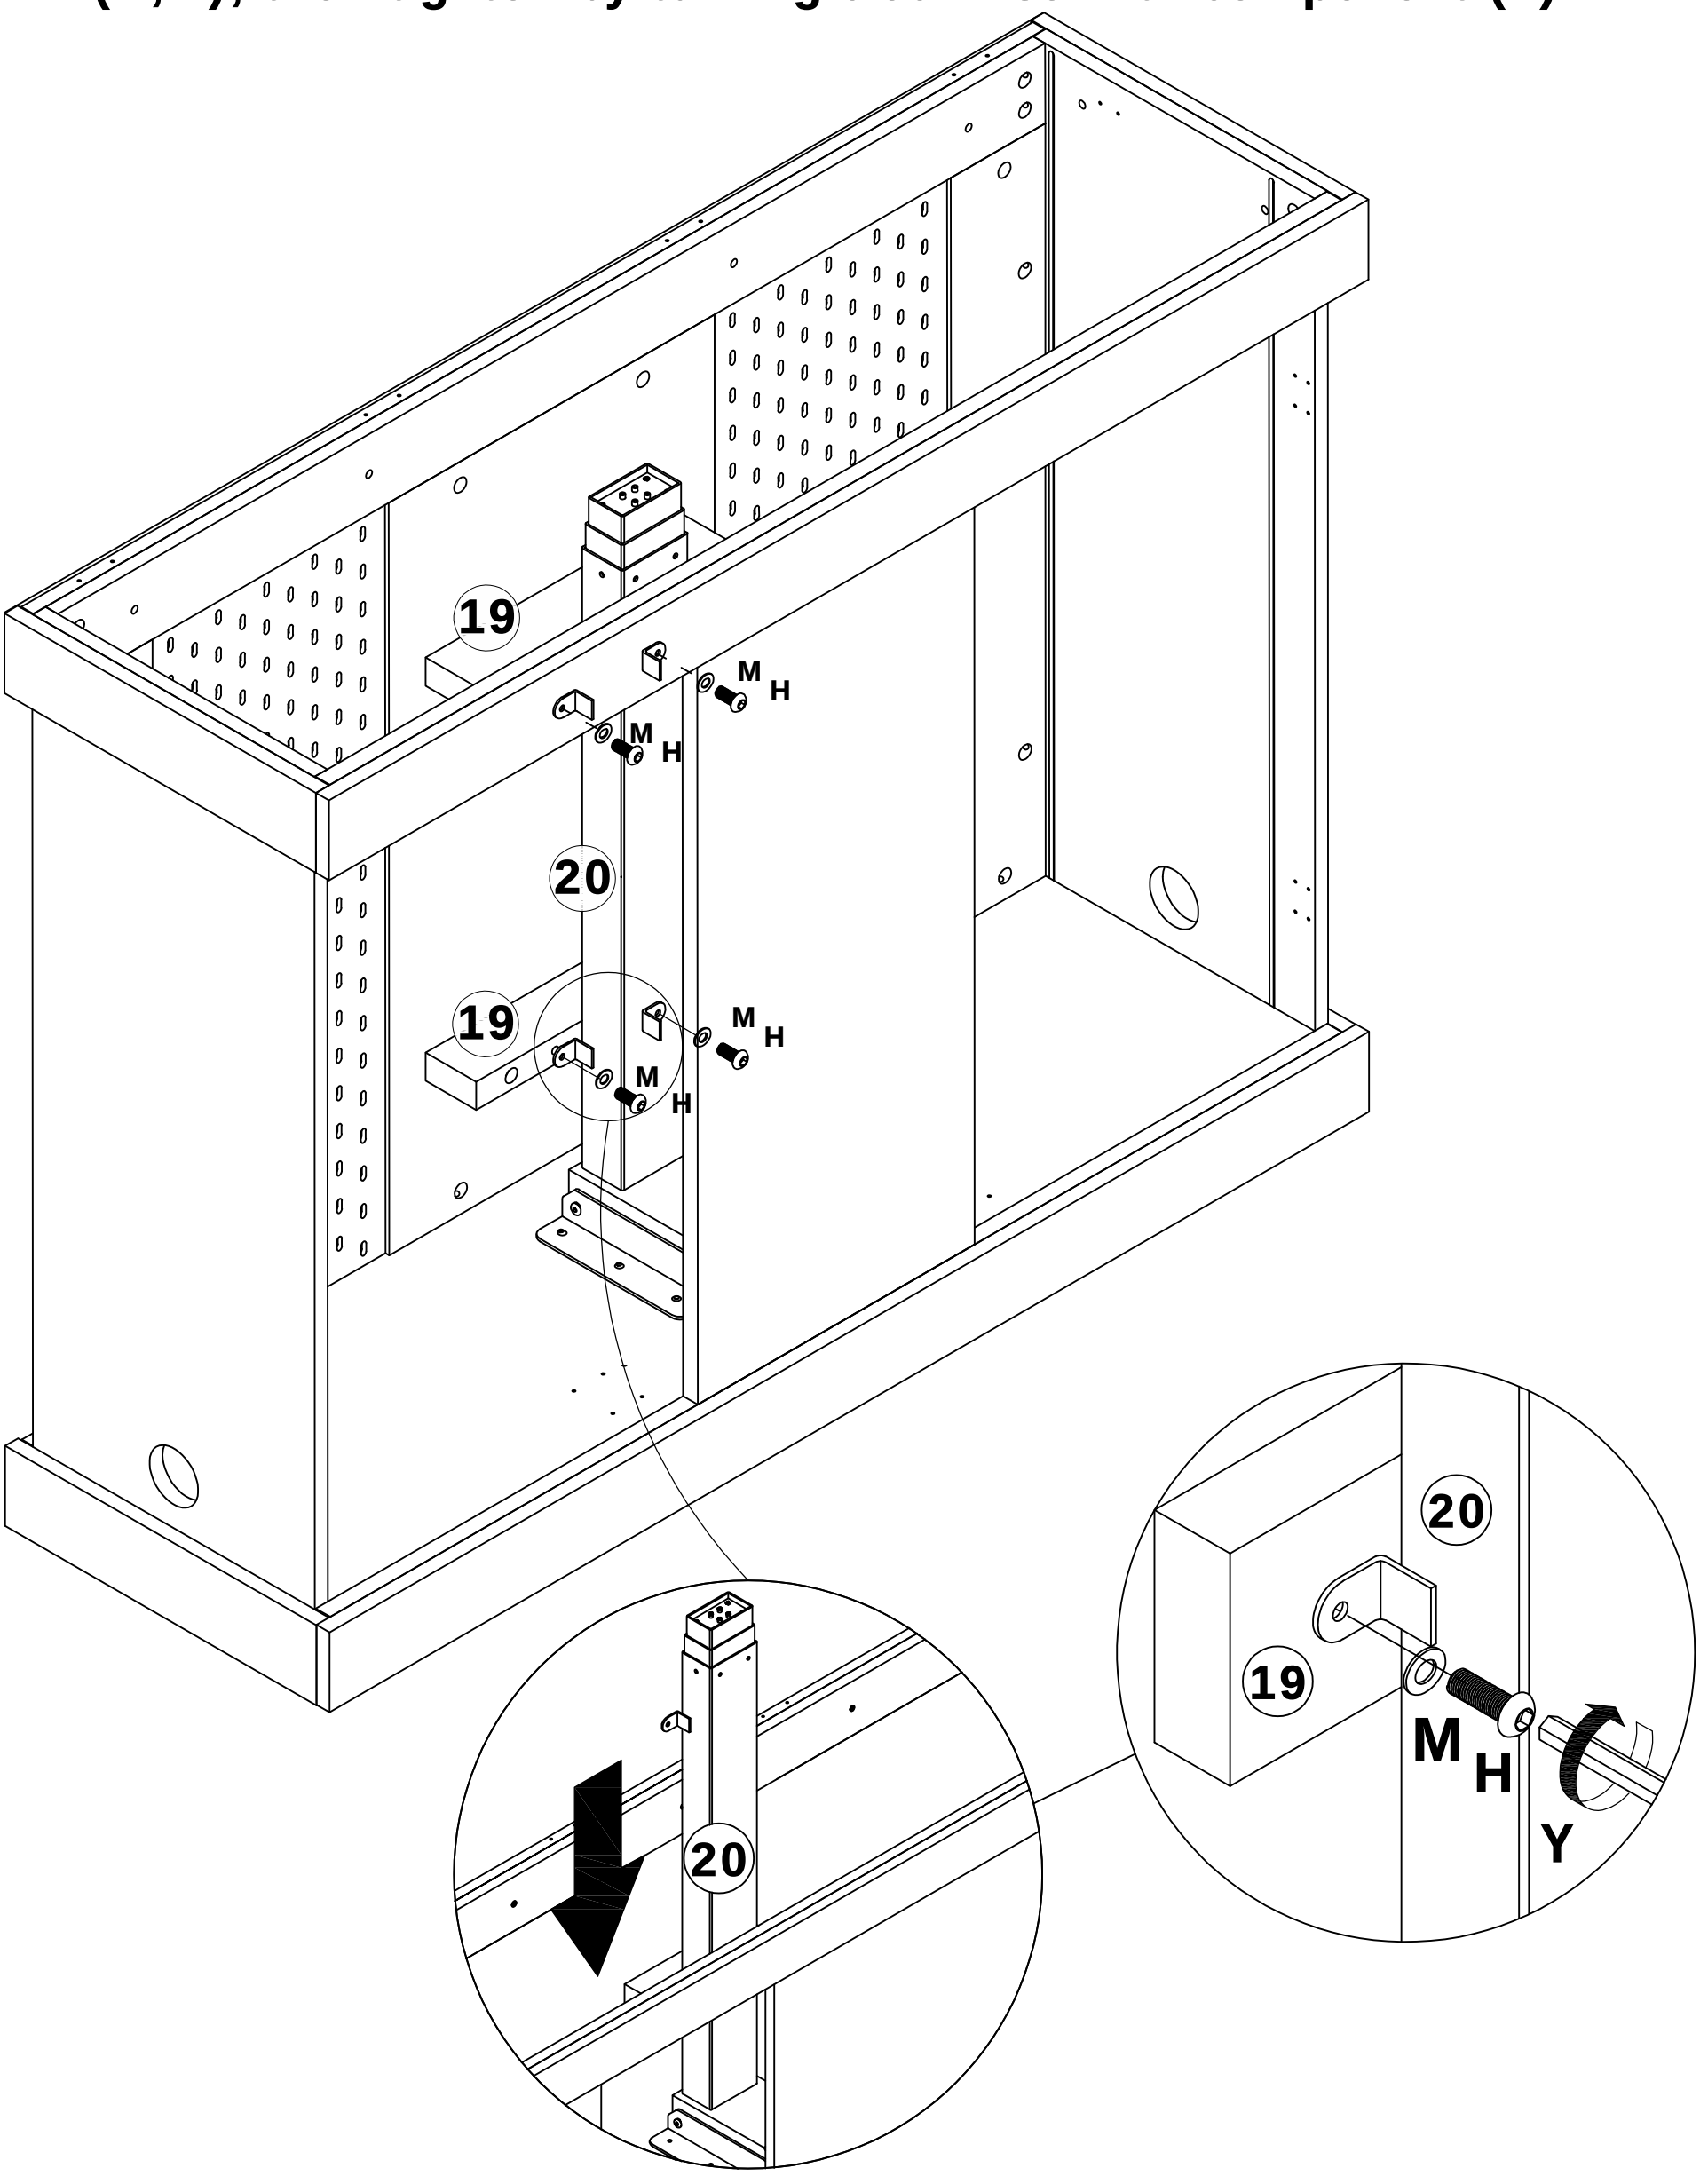


22

E x 2




∅60

Attach (E) to part (2) and (3) as shown.

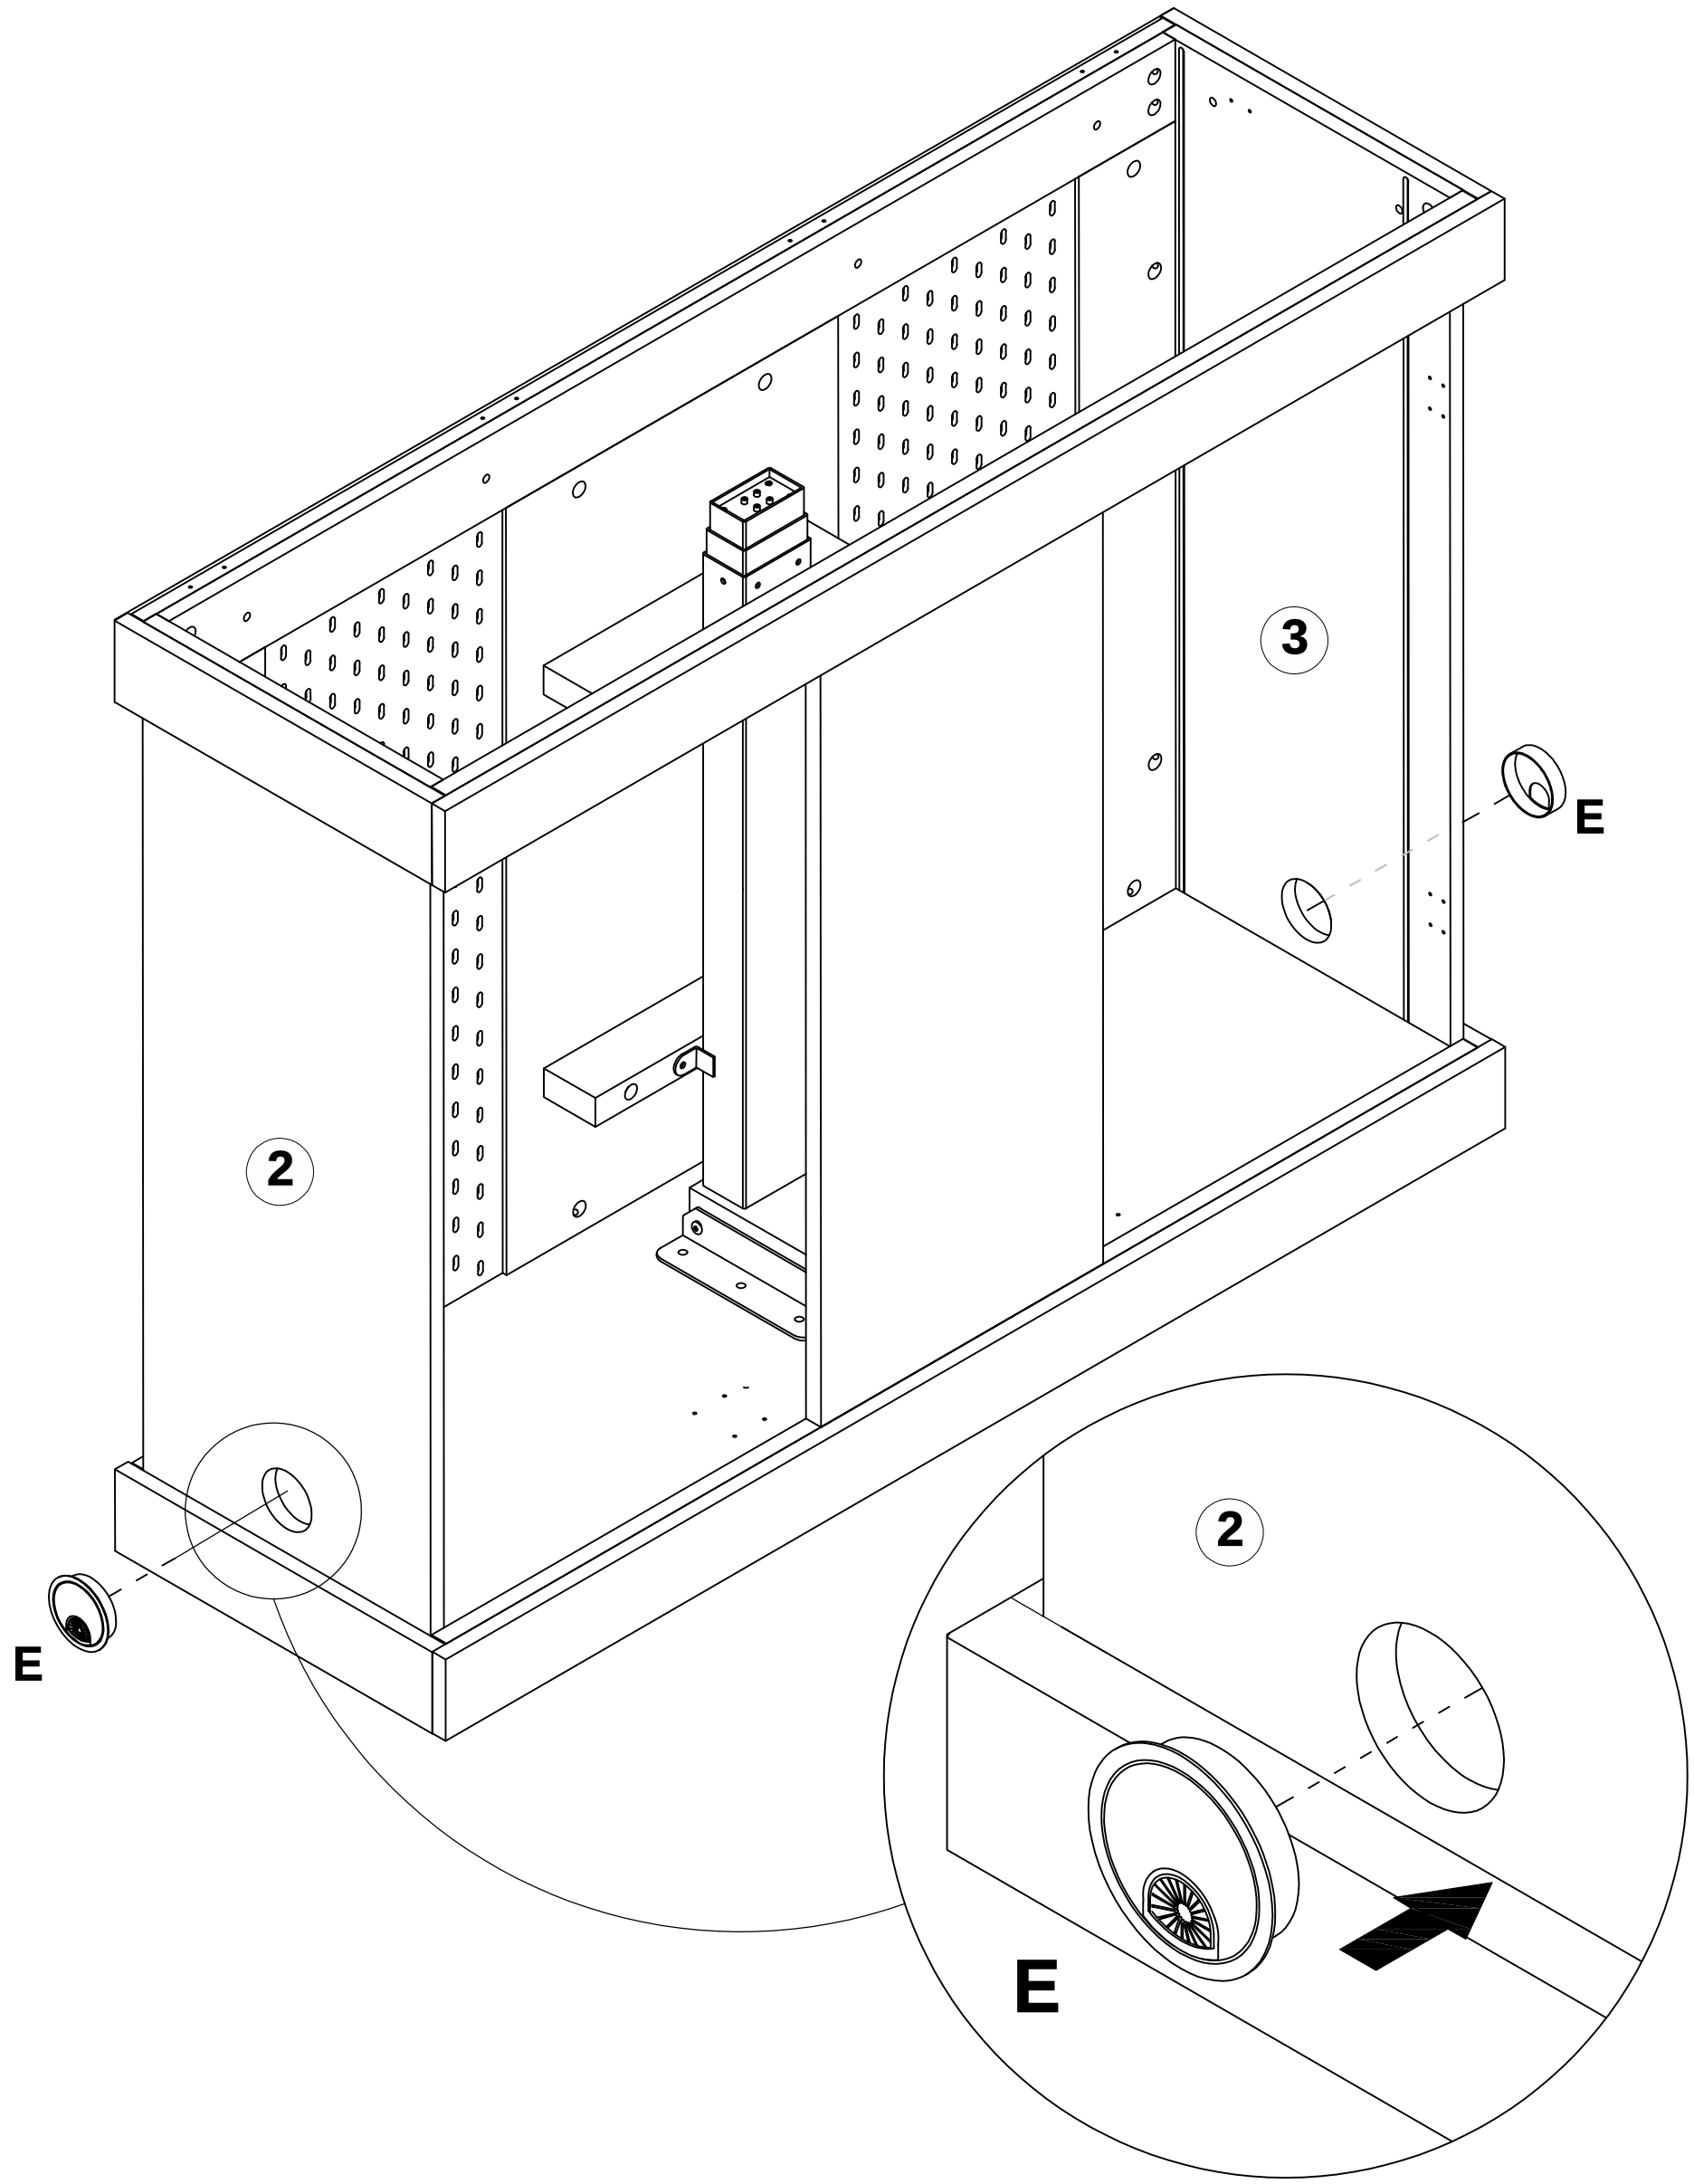


23

Option A

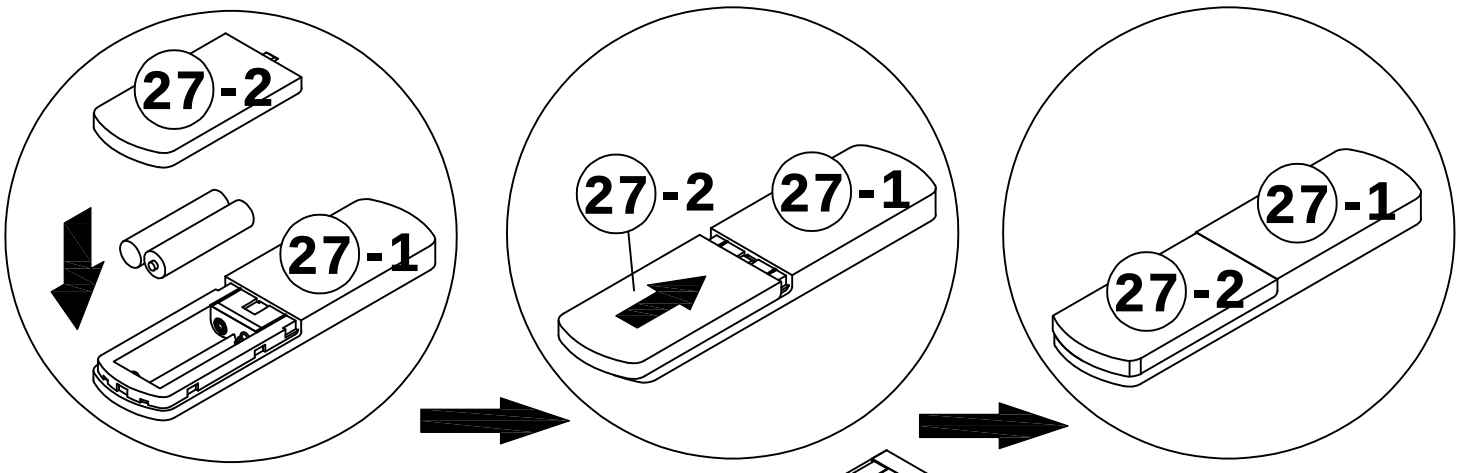


Attach part (20), part (26) to part (25) as shown and turn on the power.

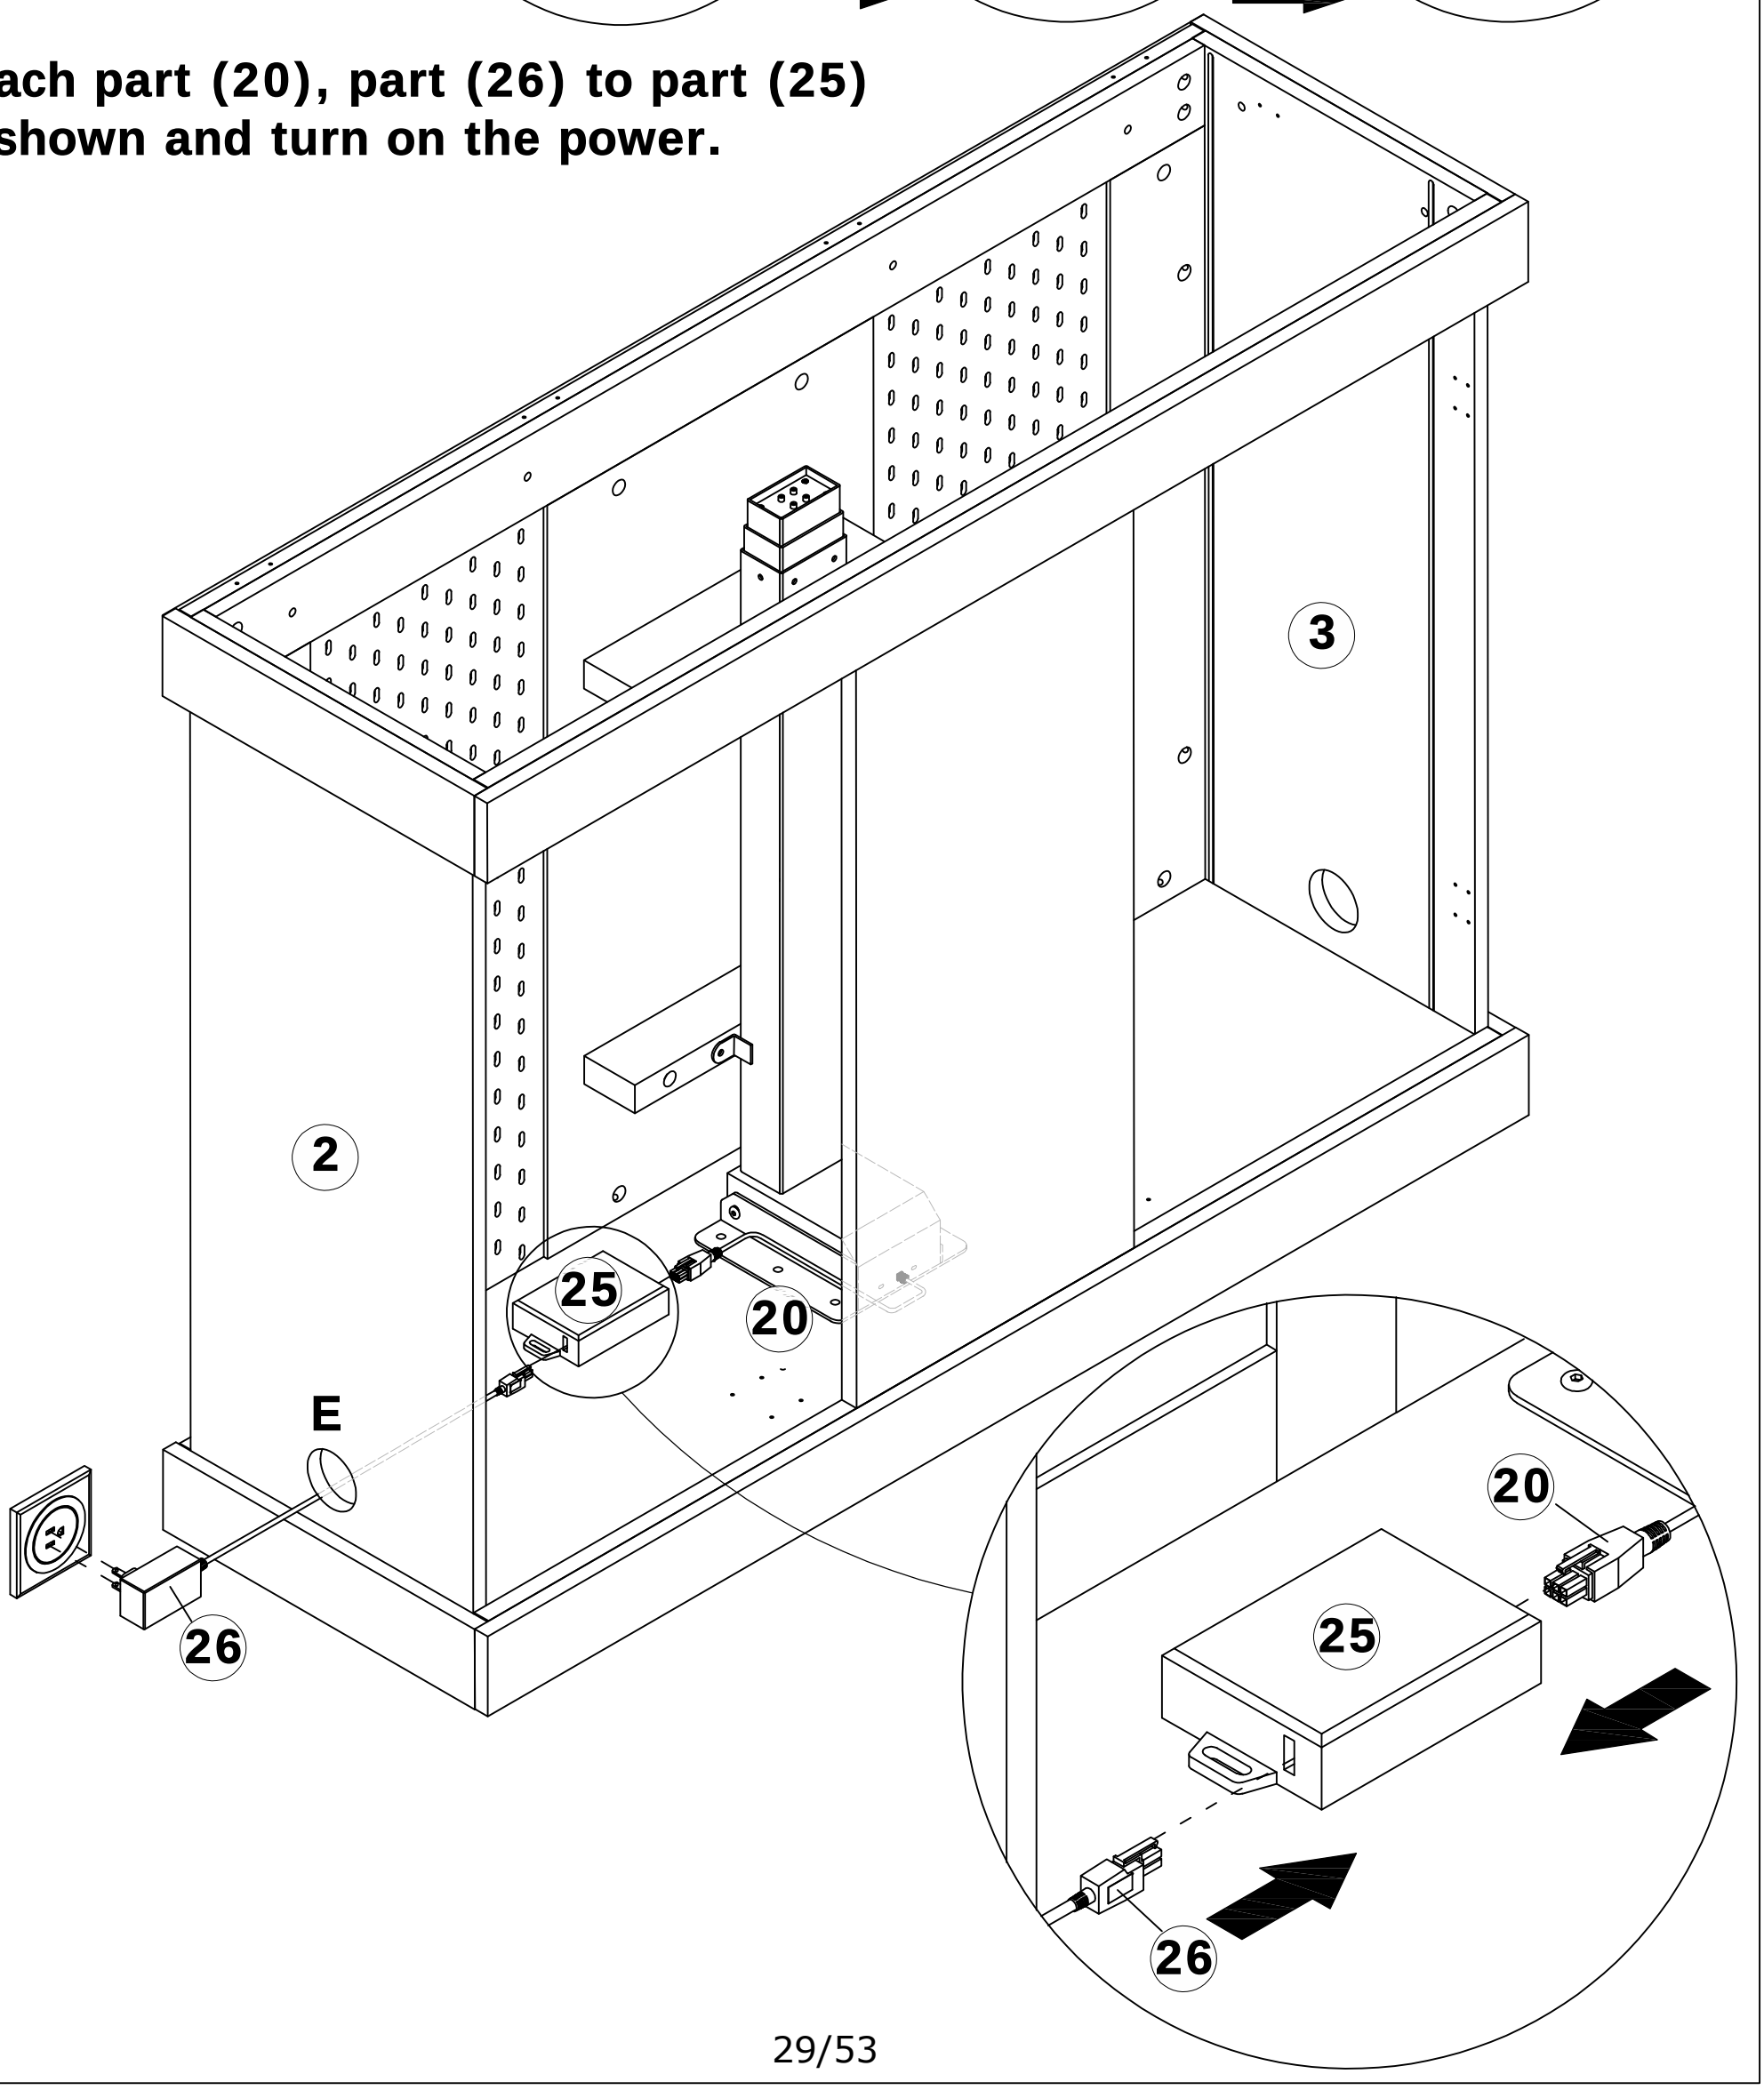


24

Option B

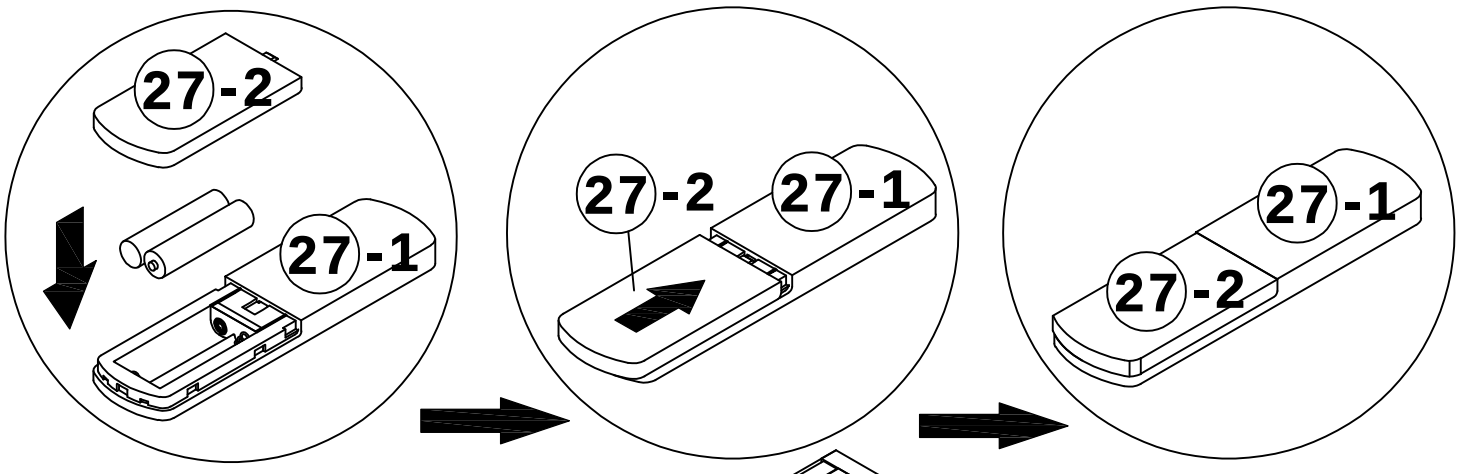


Attach part (20), part (26) to part (25) as shown and turn on the power.

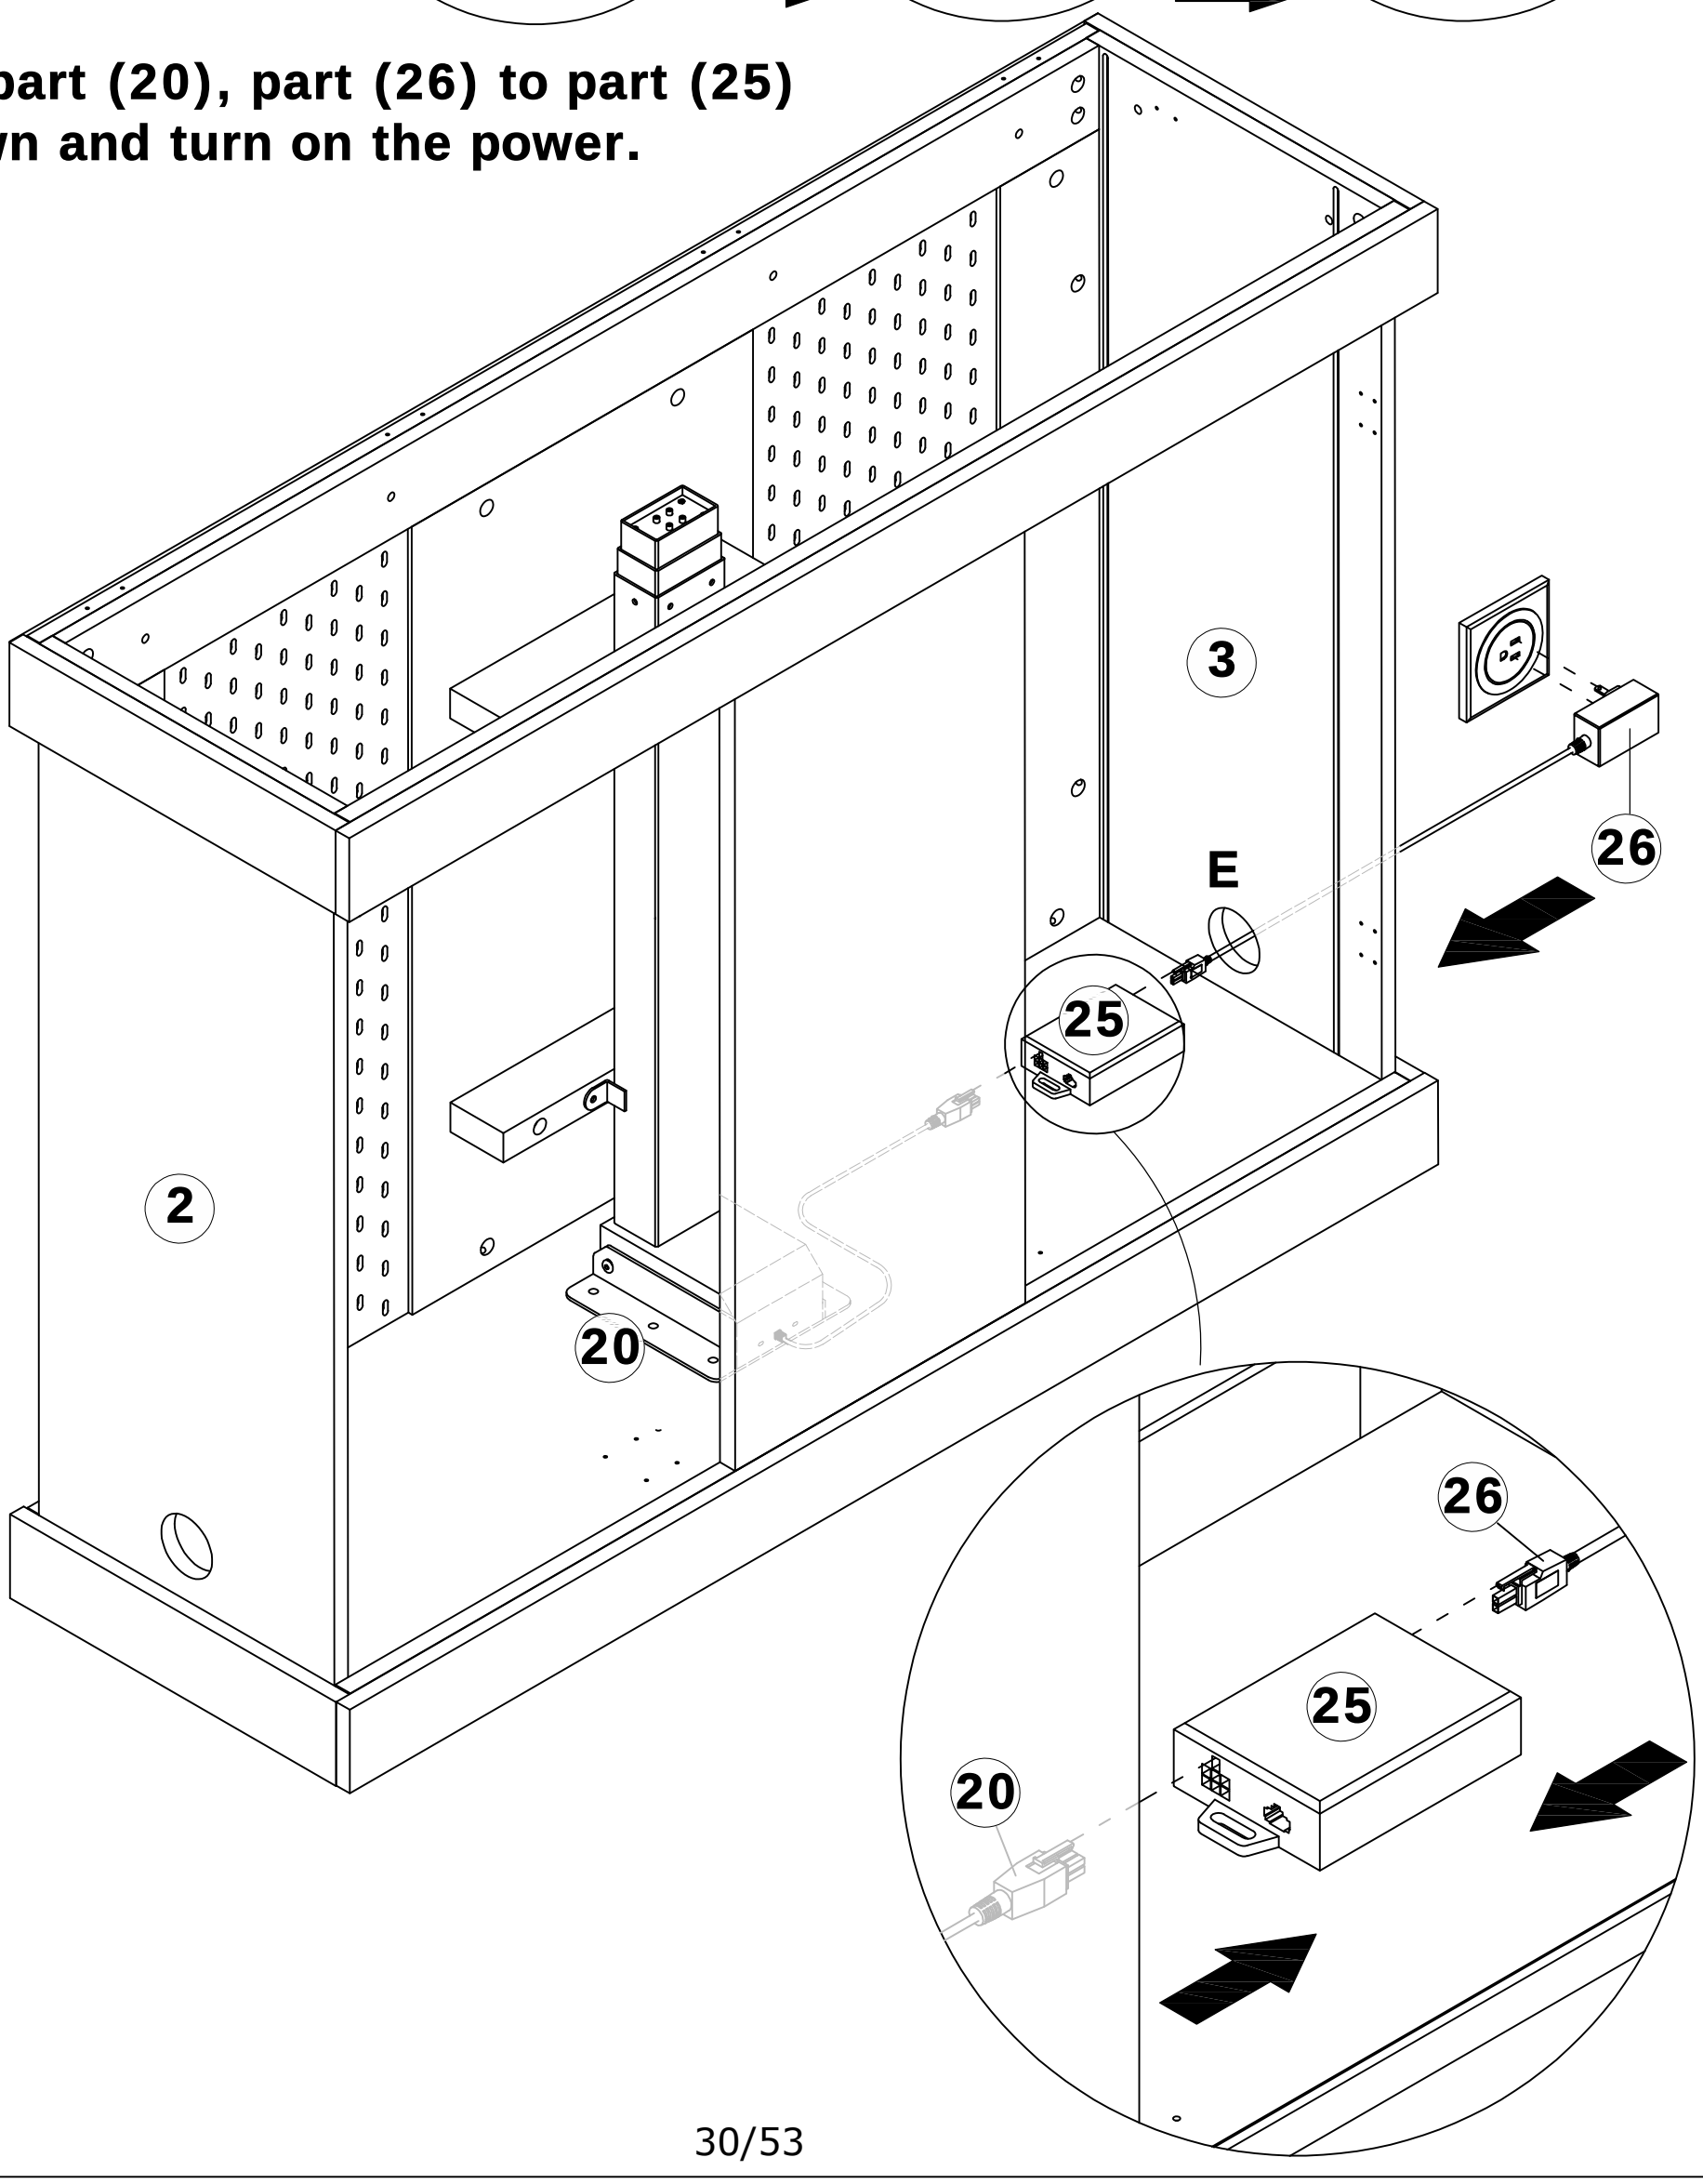


25

Pairing Instructions:


This product is pre-paired at the factory.

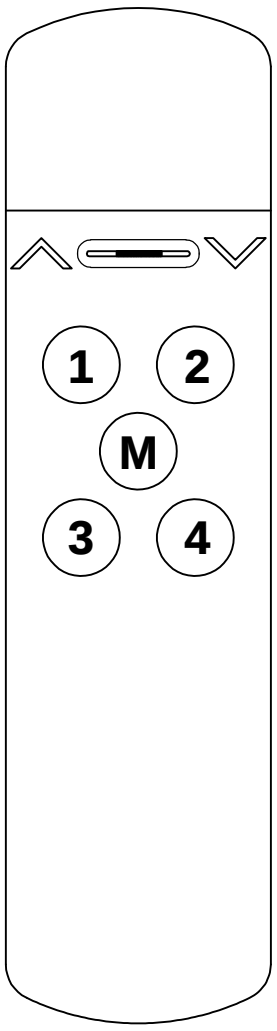


Press and hold button (M) and button (4) simultaneously for 5 seconds.

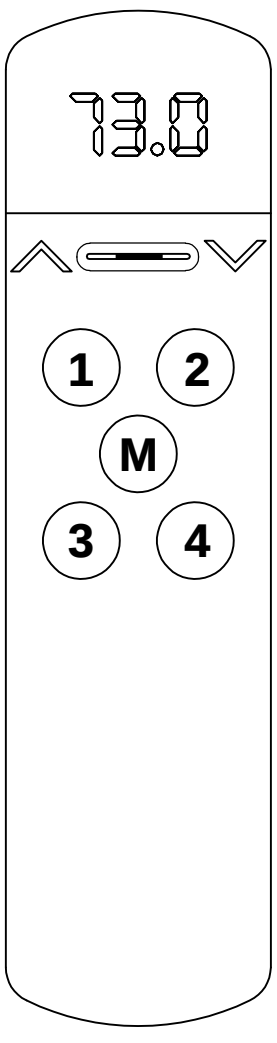

When the display shows "73.0", it is ready for use.

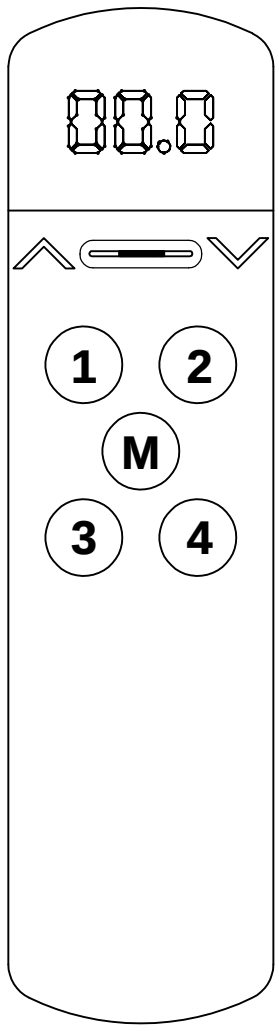


After the display screen flashes, release it and connect component (26)to power supply .

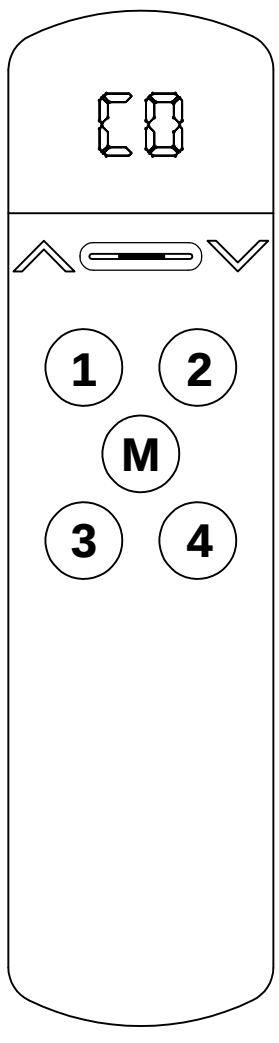



Display showing "CO" indicates pairing is successful.

26


Use the remote control (27) to raise part (20) to a height of 47 (INCH) as shown.

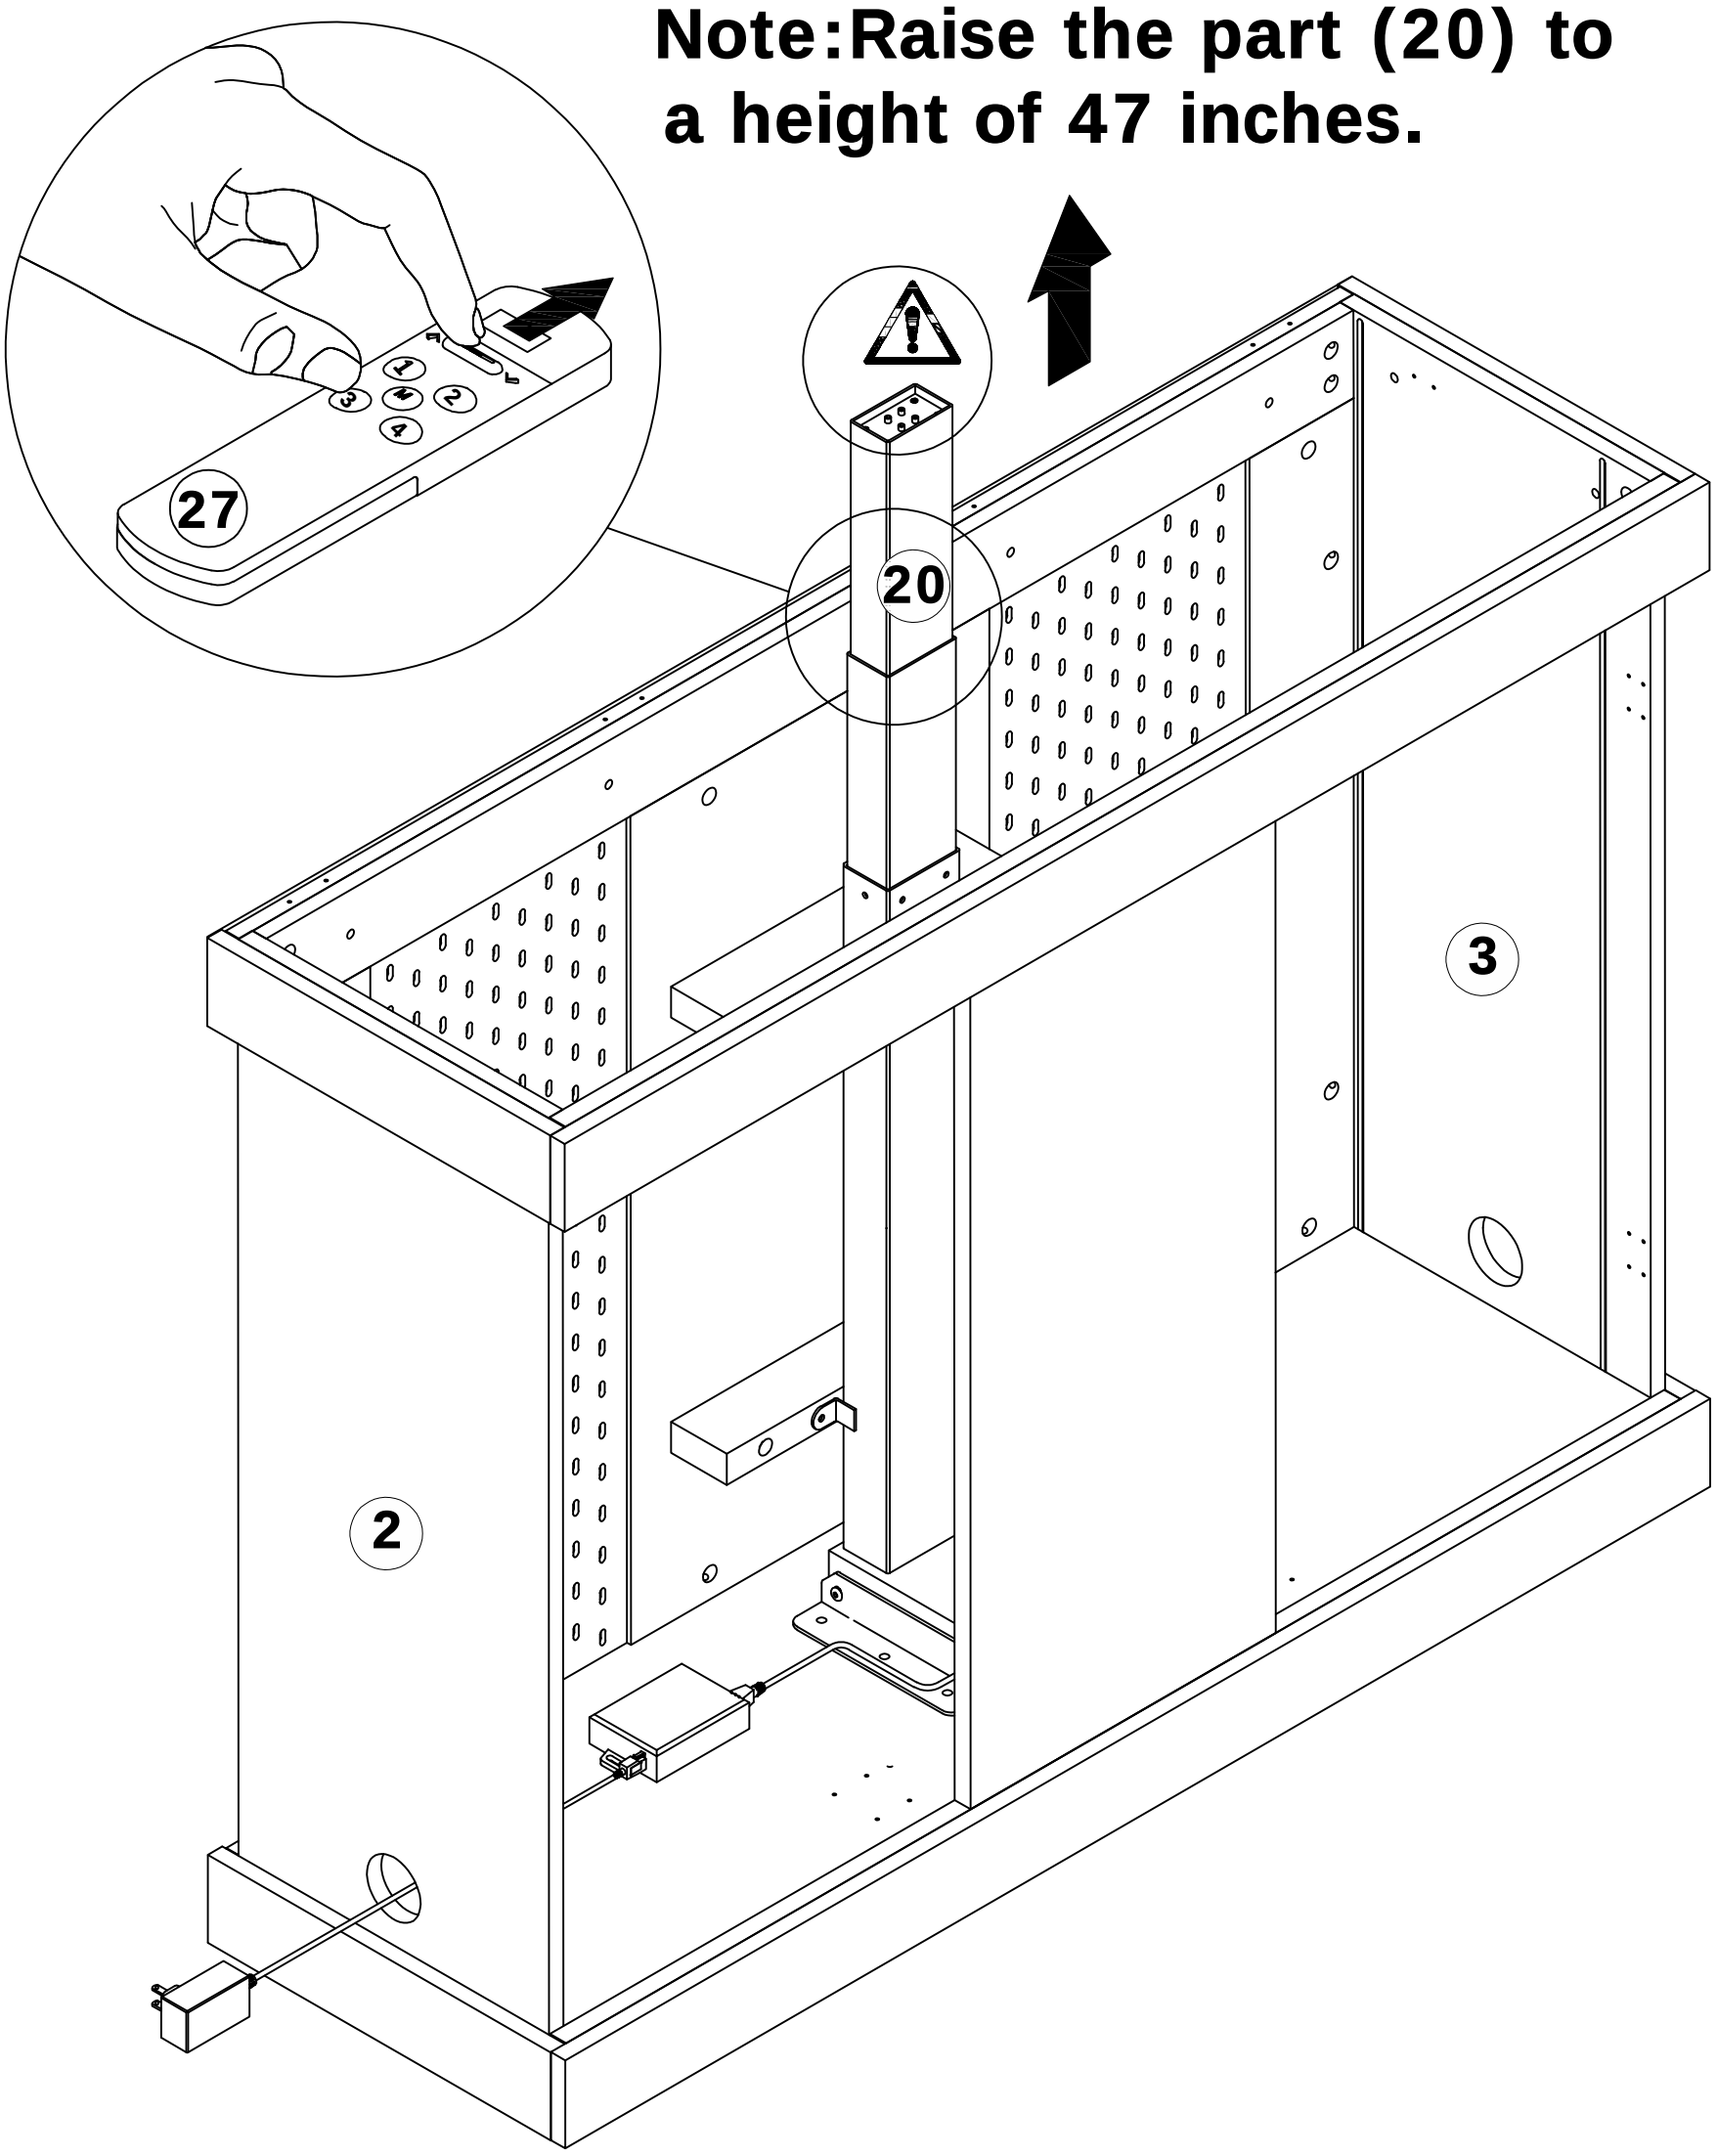



27

H x 4	Y x 1	
		
M6*16	M4	


Attach part (22) to part (20) using (H) as shown.

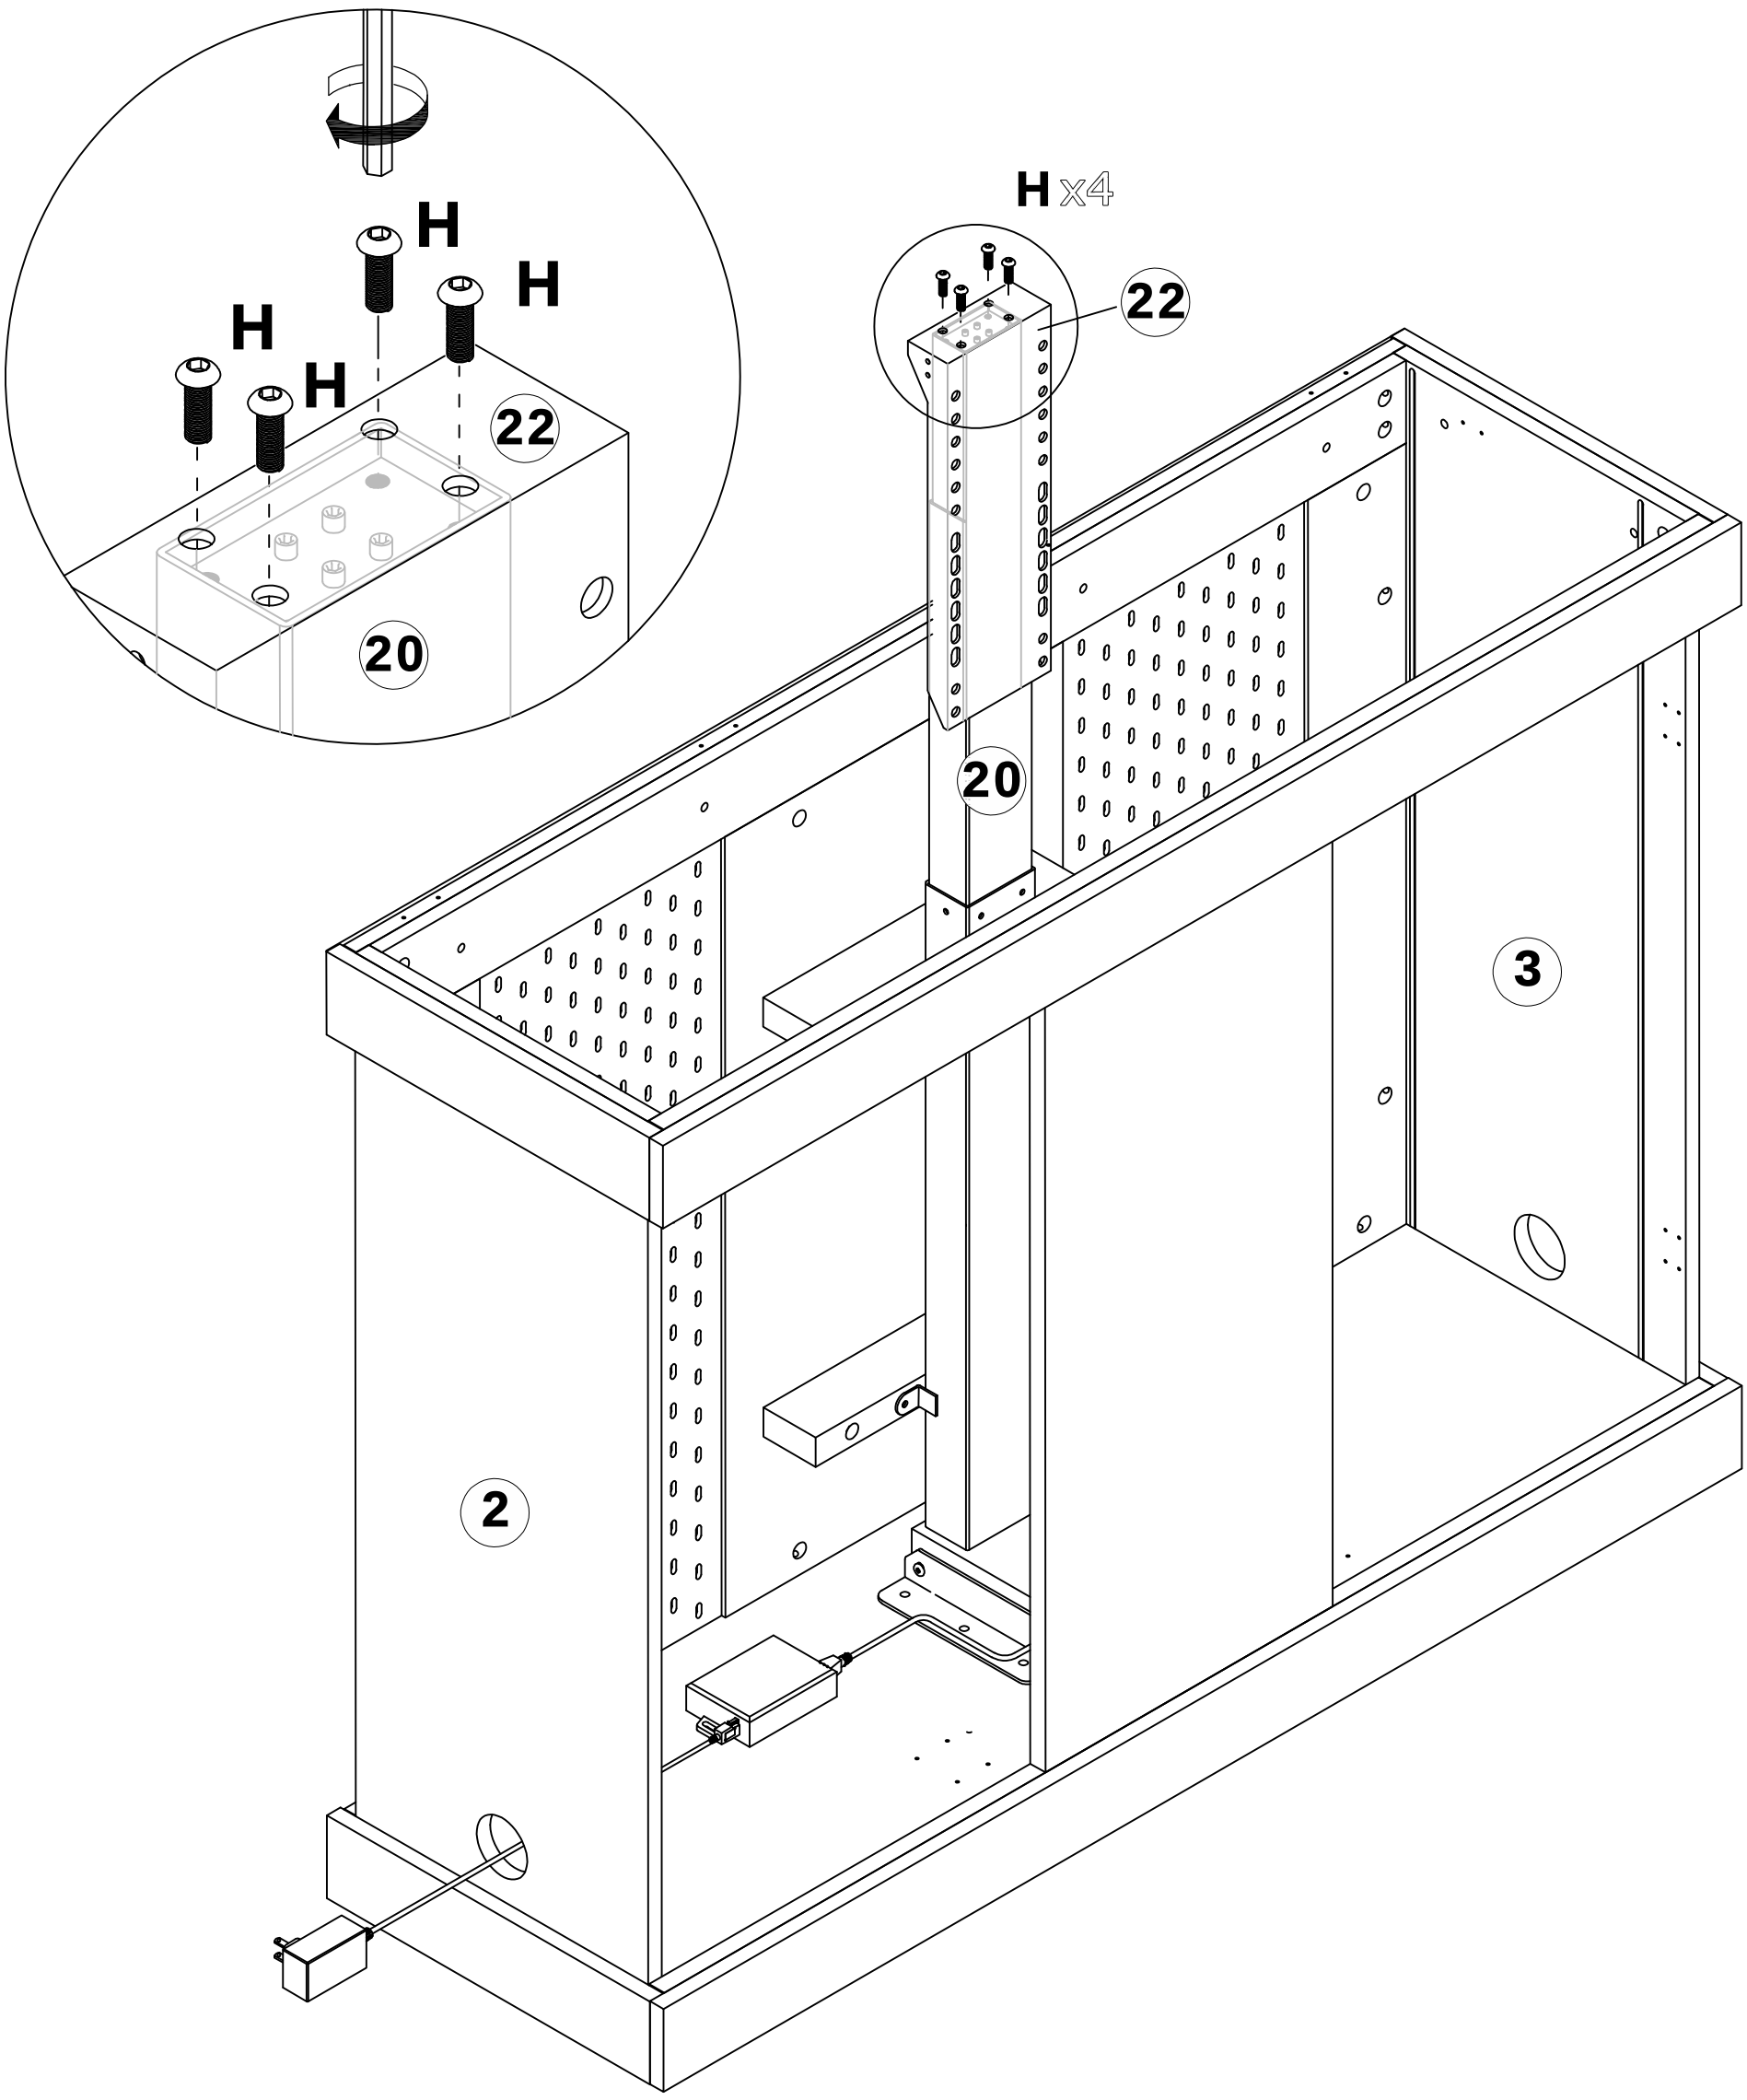

28

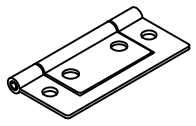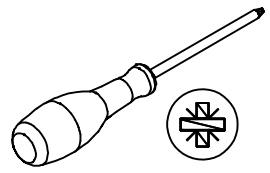G x 4	N x 8	
	 M3.5 x 14mm	

Attach (G) to part (1) using (N) as shown.

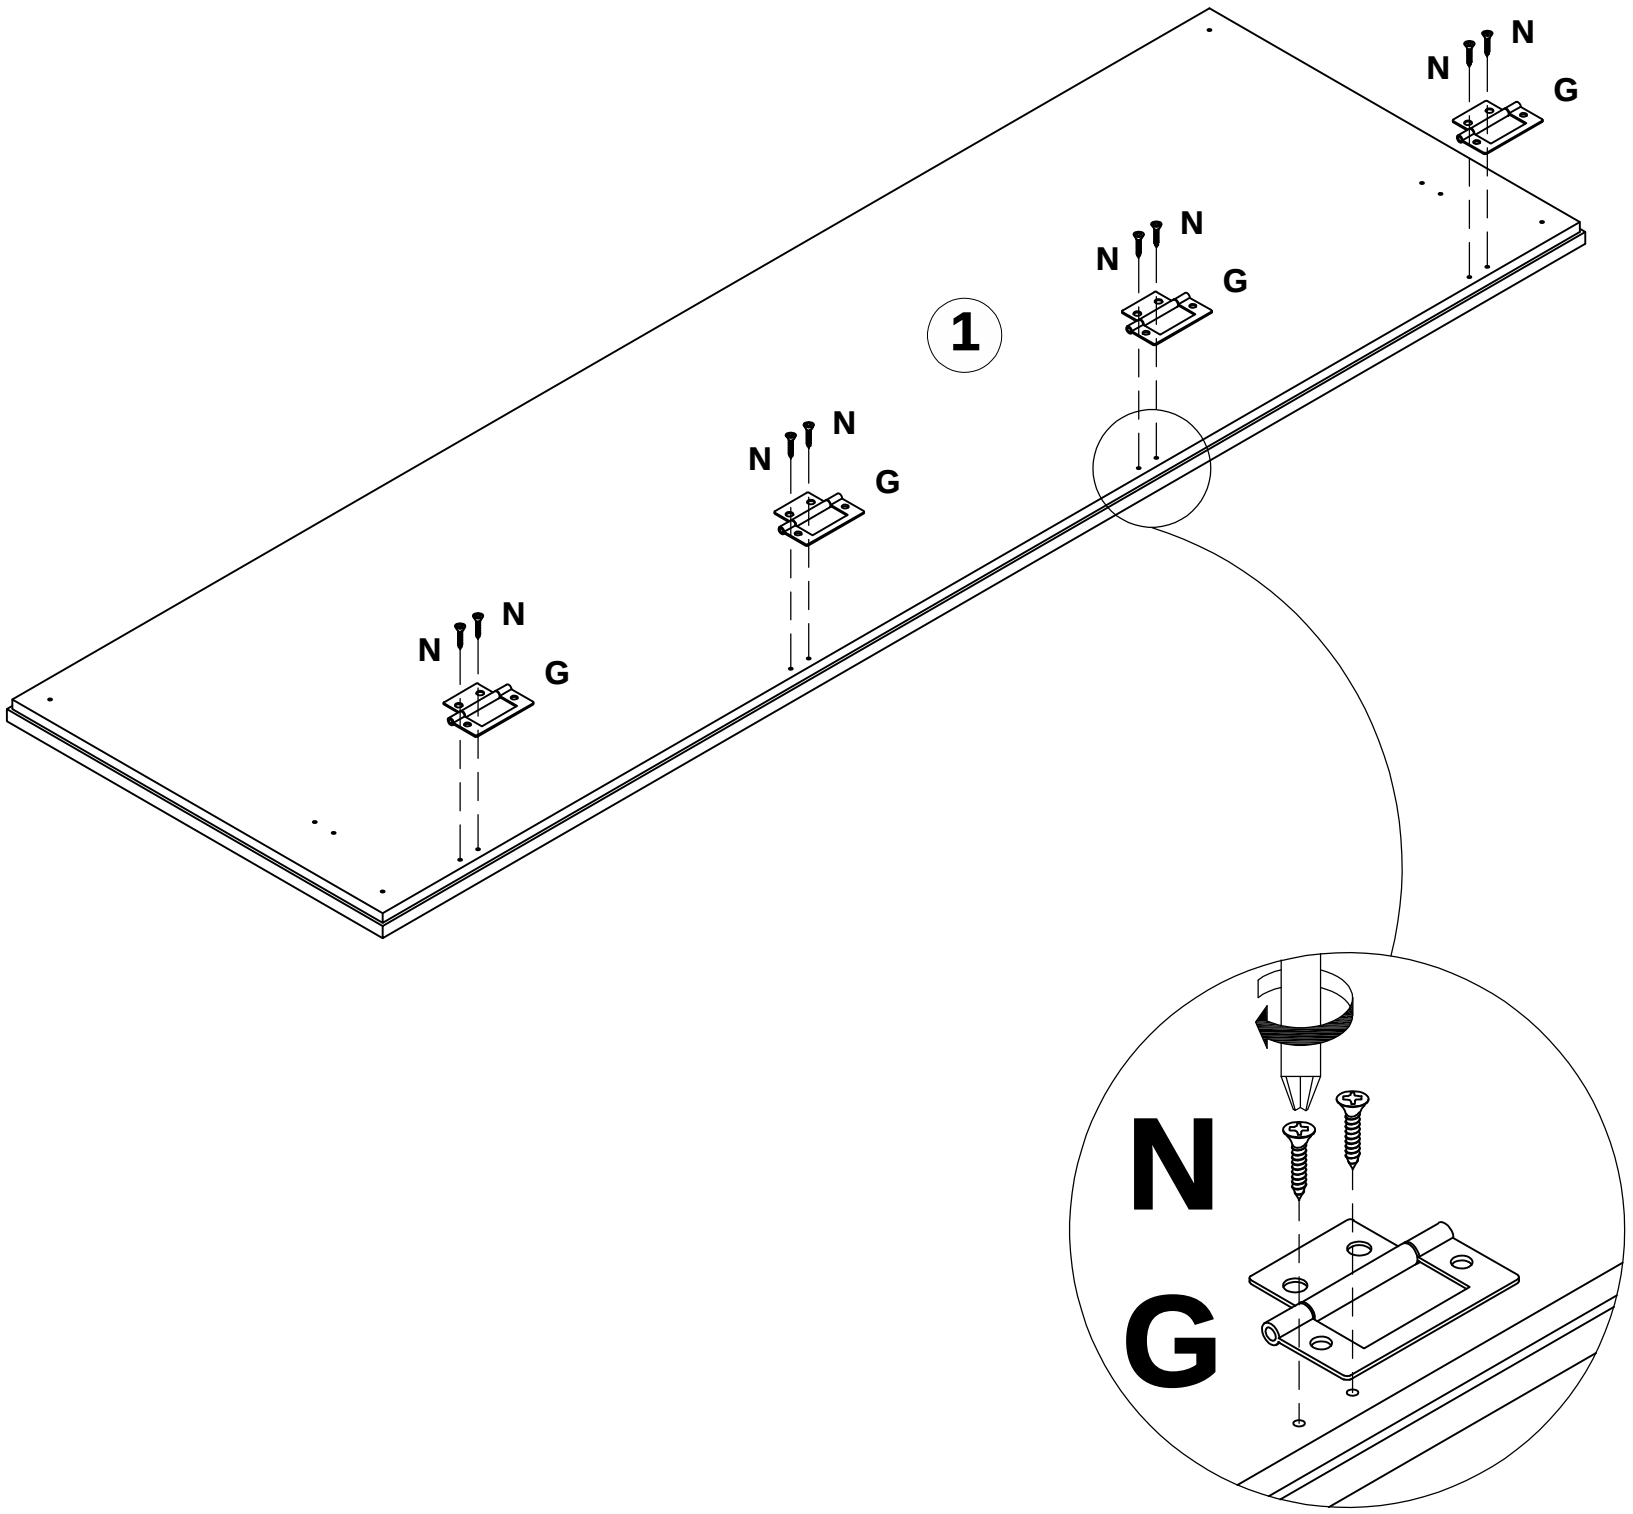


29


N x 8




M3.5 x 14mm


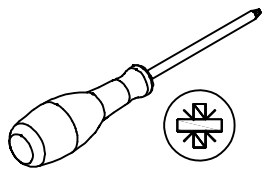


Attach (G) to part (16) using (N) as shown.

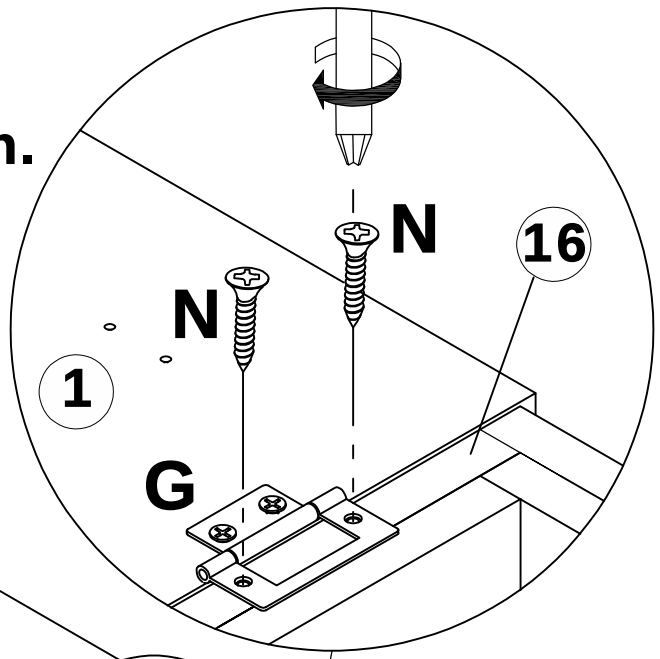


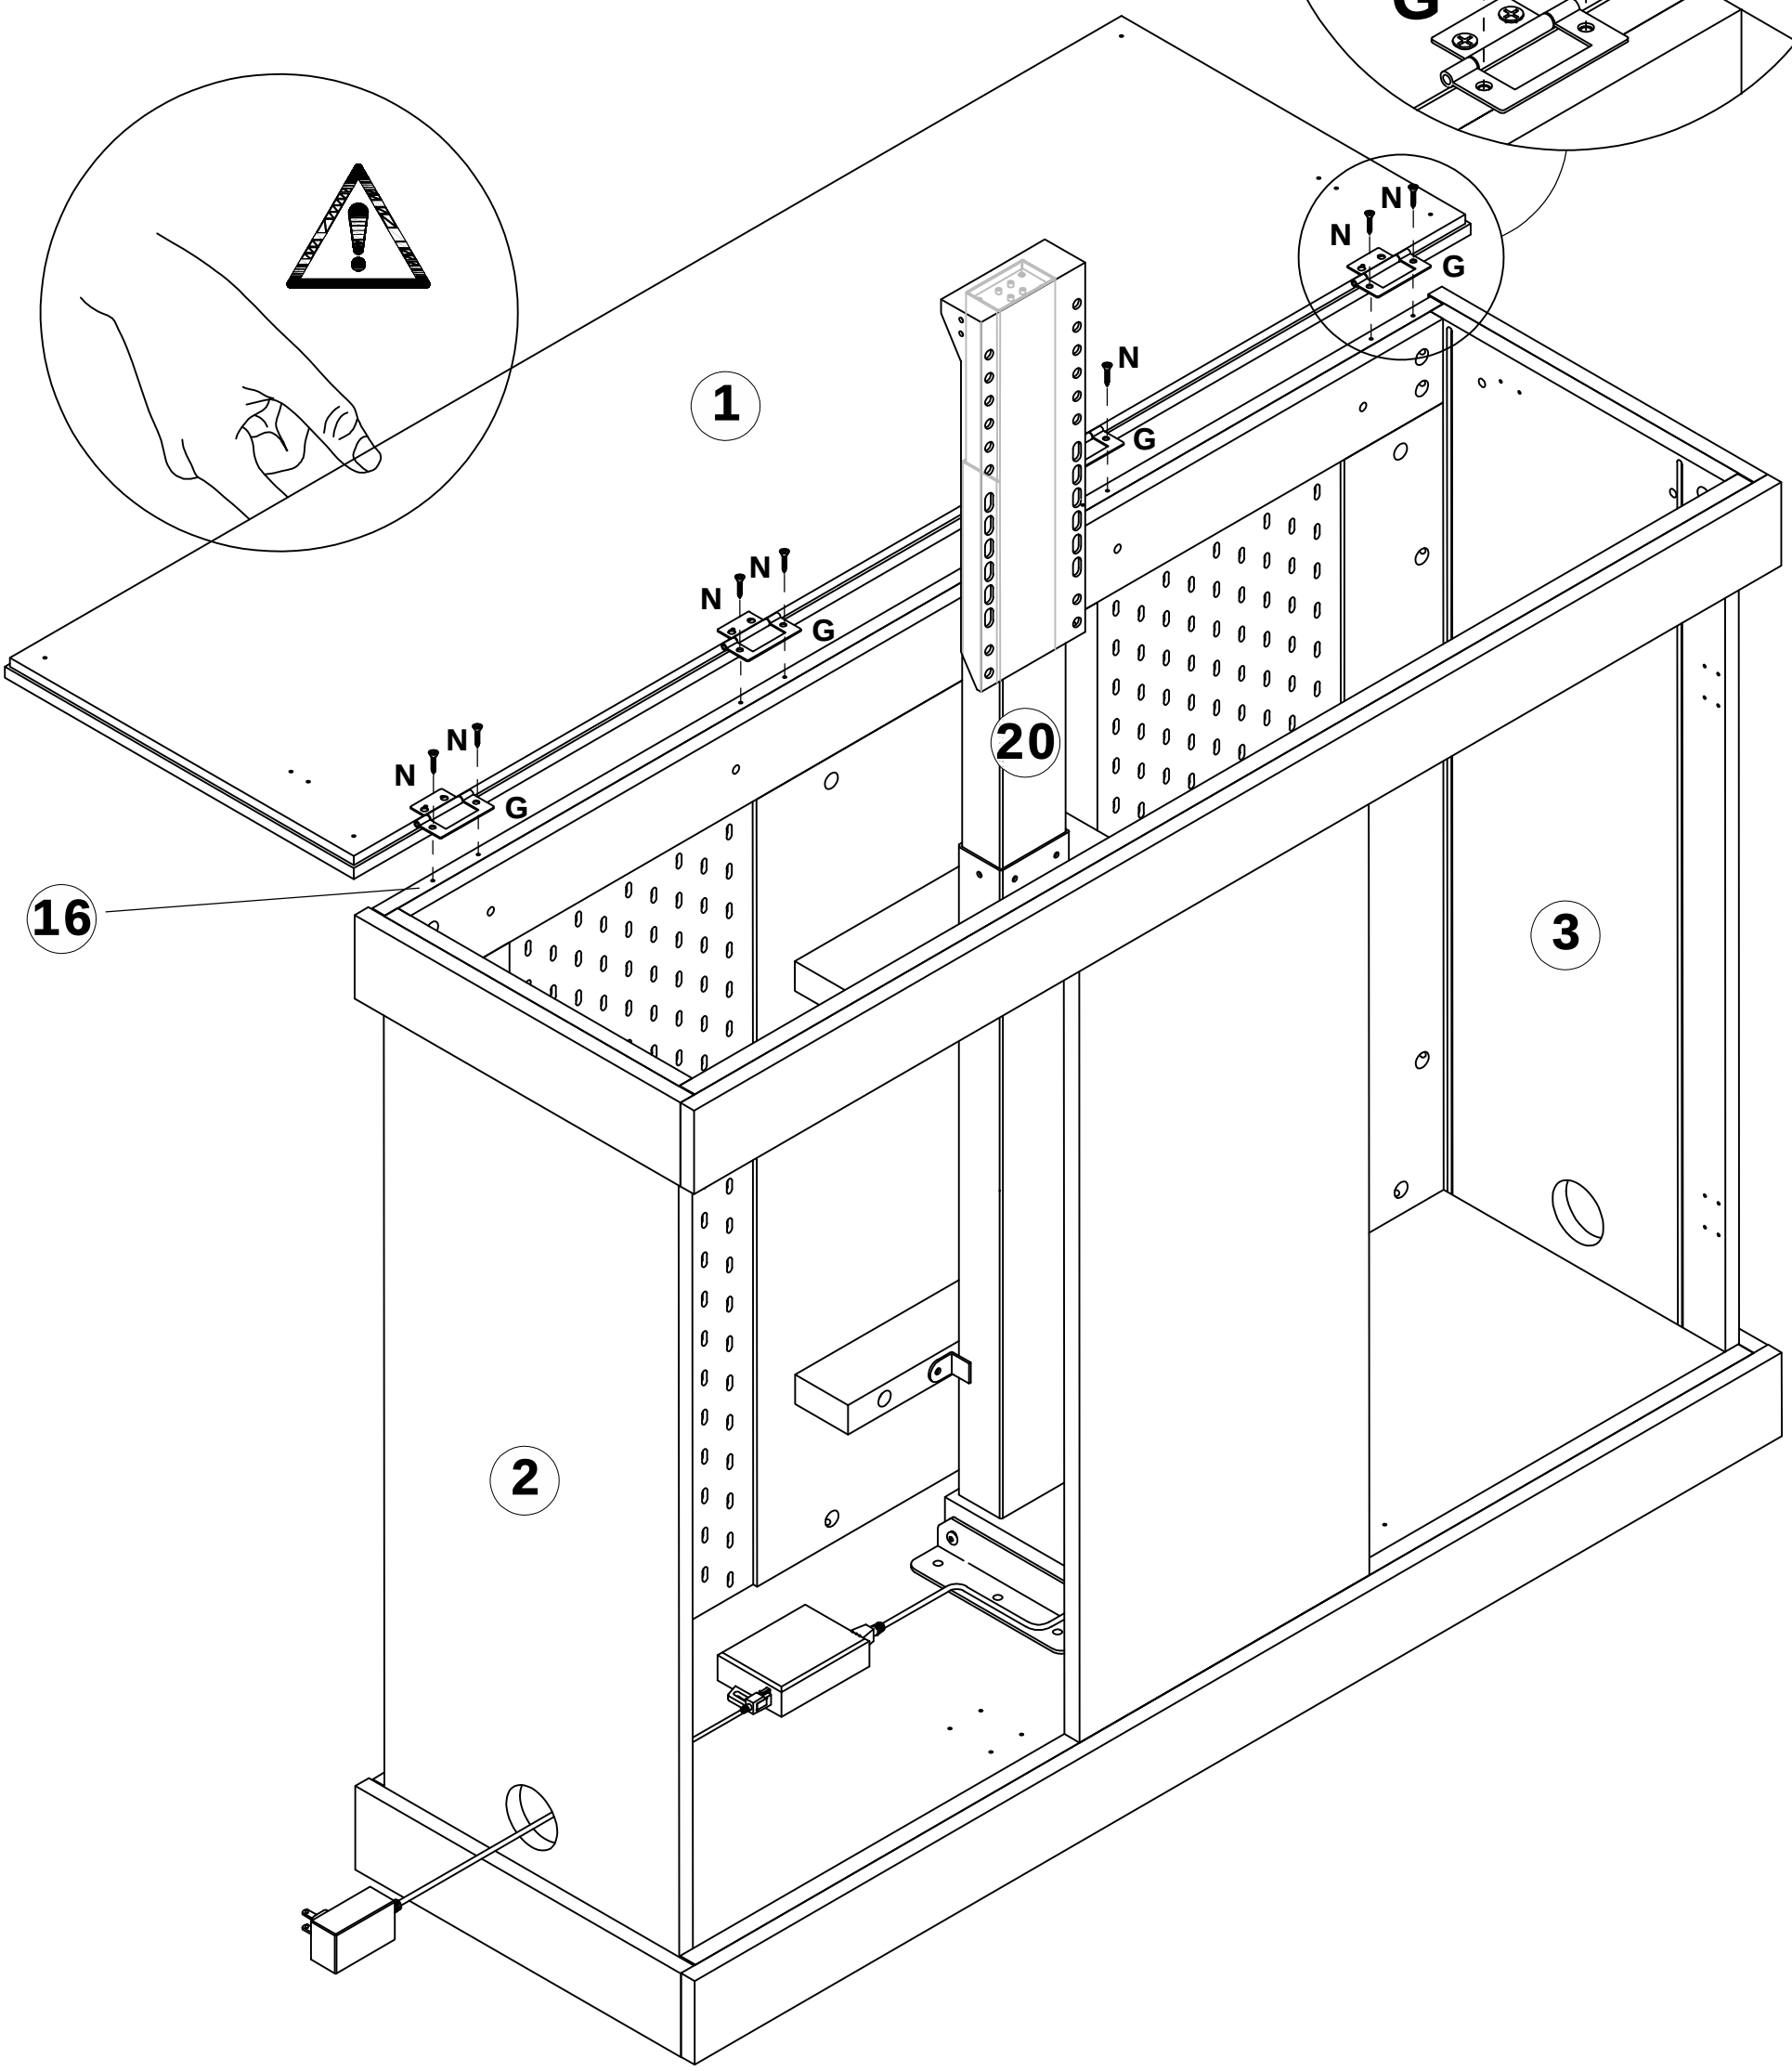

30

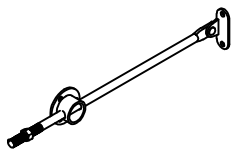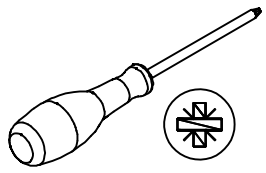
D x 2	N x 8	
	 M3.5 x 14mm	

Attach (D) to part (2) and part (3) using (N) as shown.

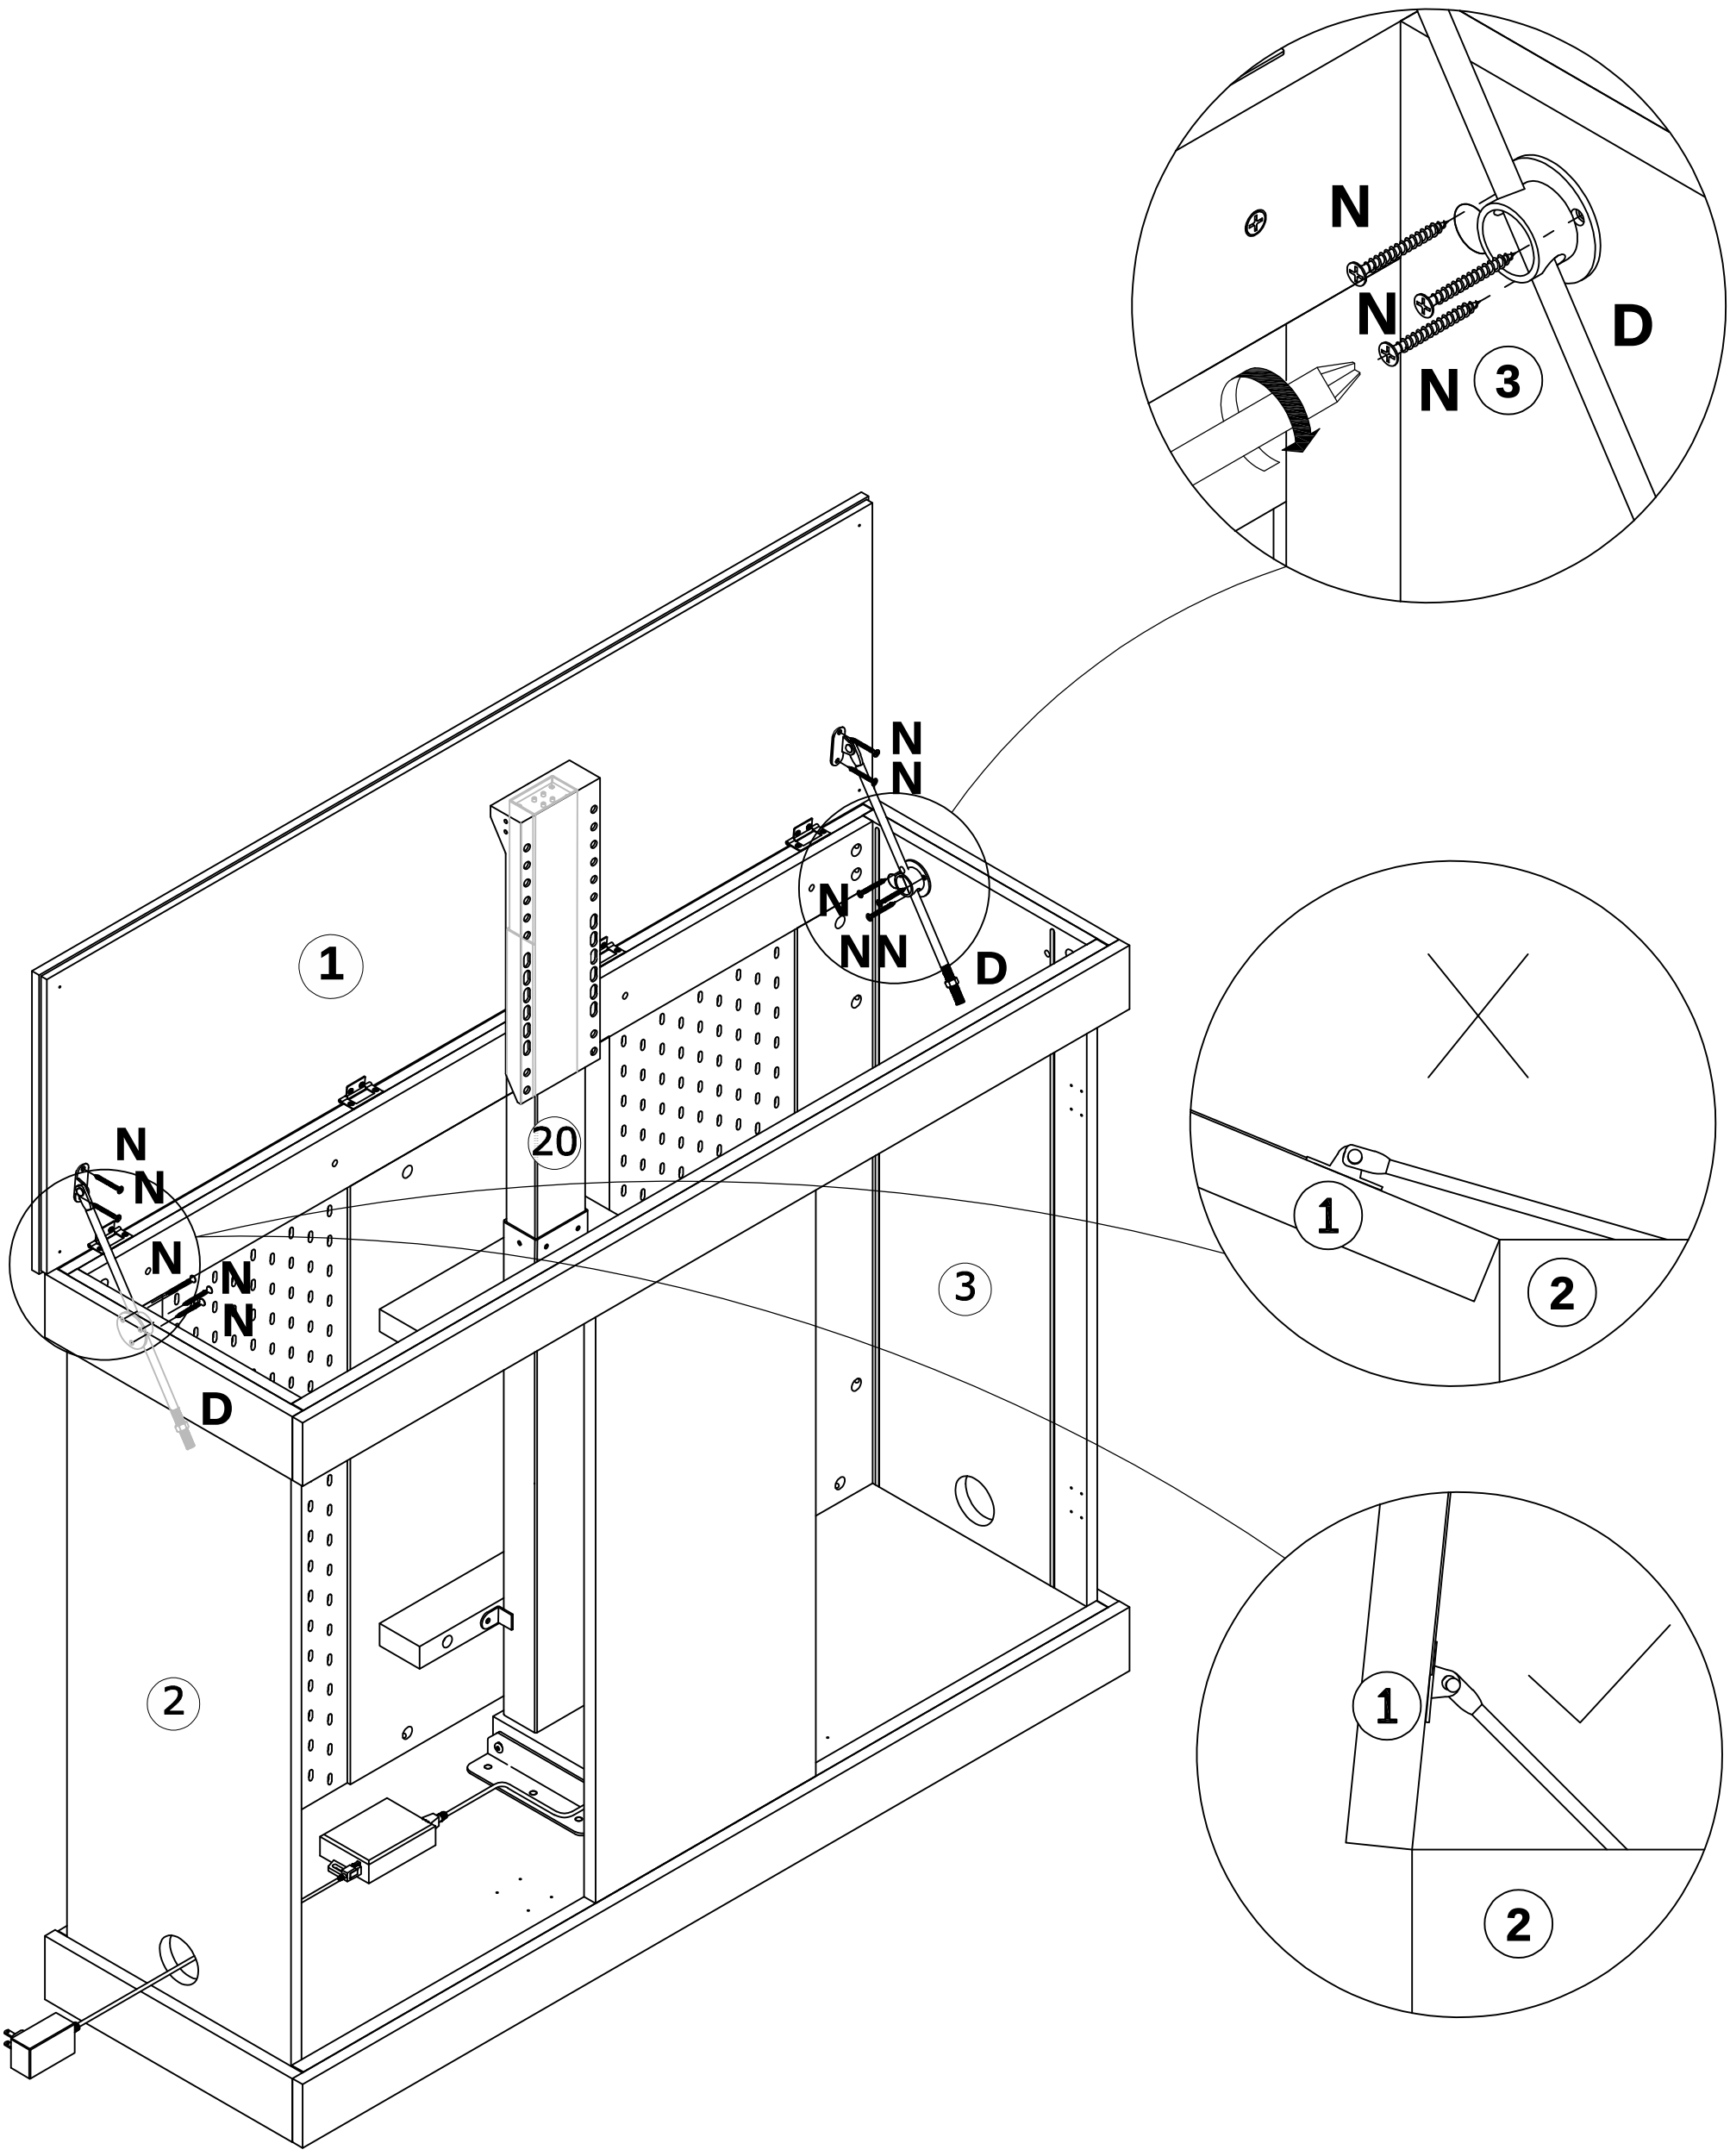

31


Use the remote control (27) to raise part (20) to the highest height as shown.

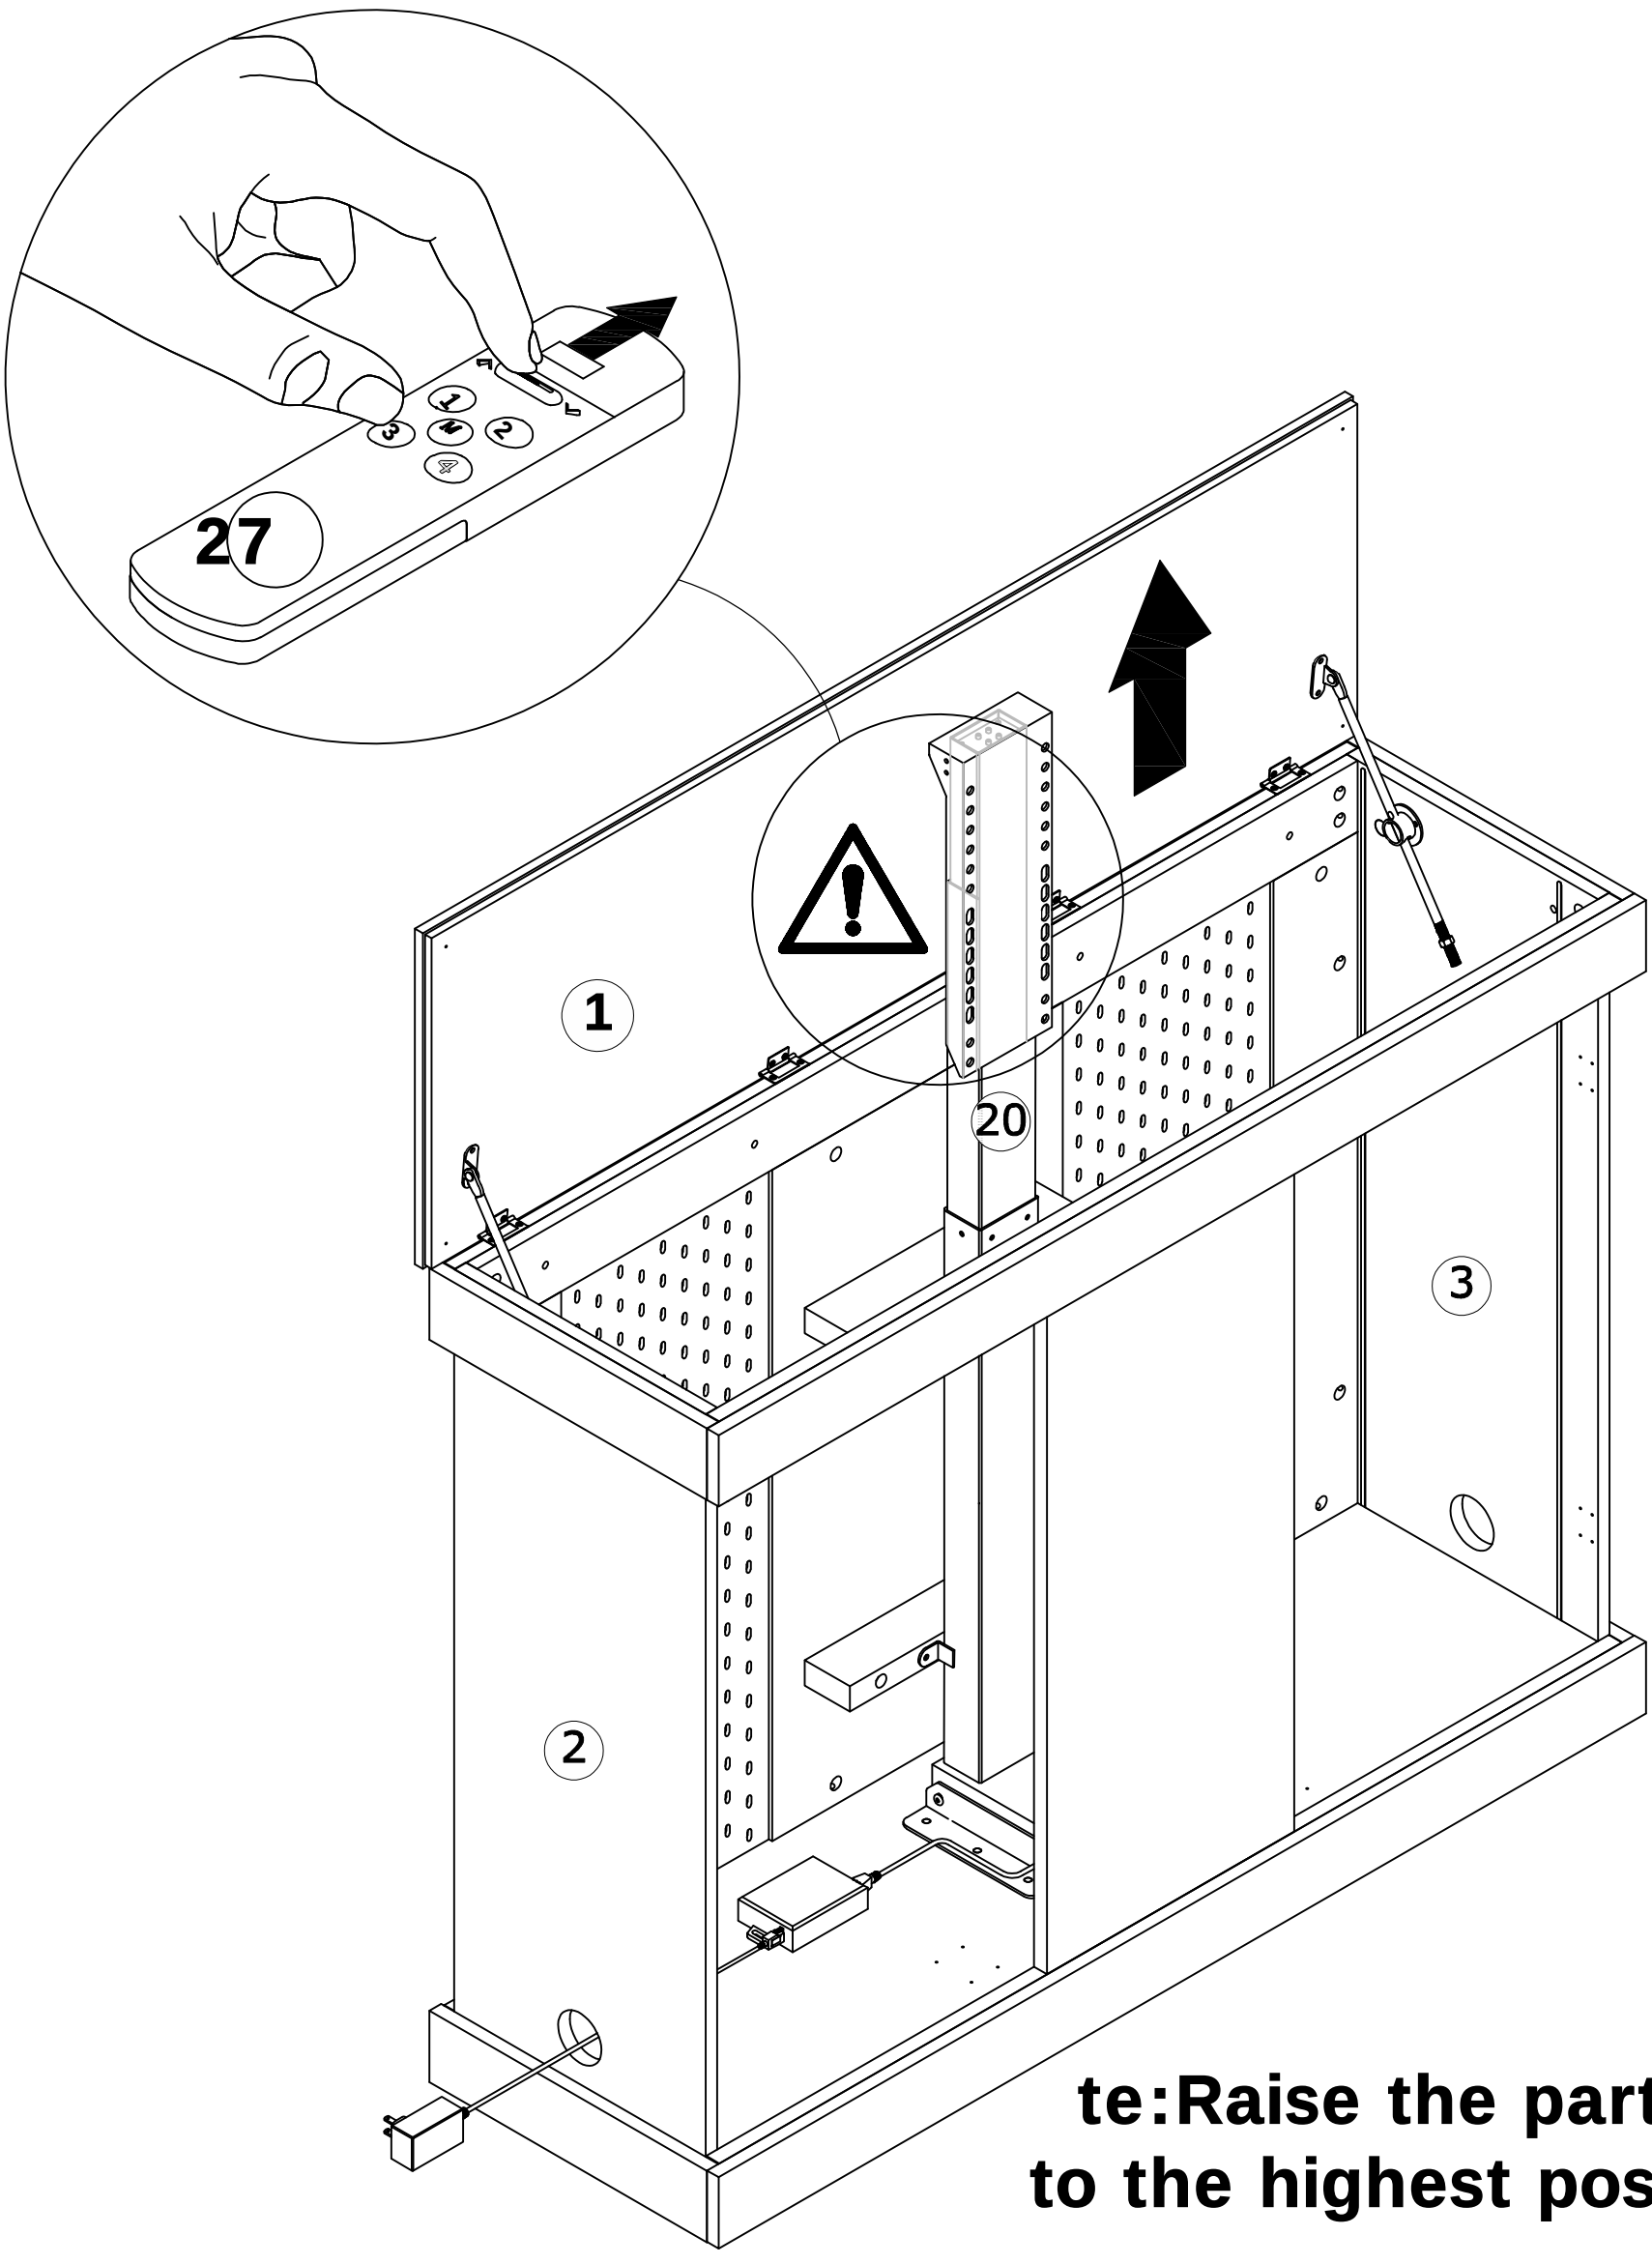

te:Raise the part (20) to the highest position.


32

"D" is the distance from your TV's mounting holes to the bottom edge of the TV.



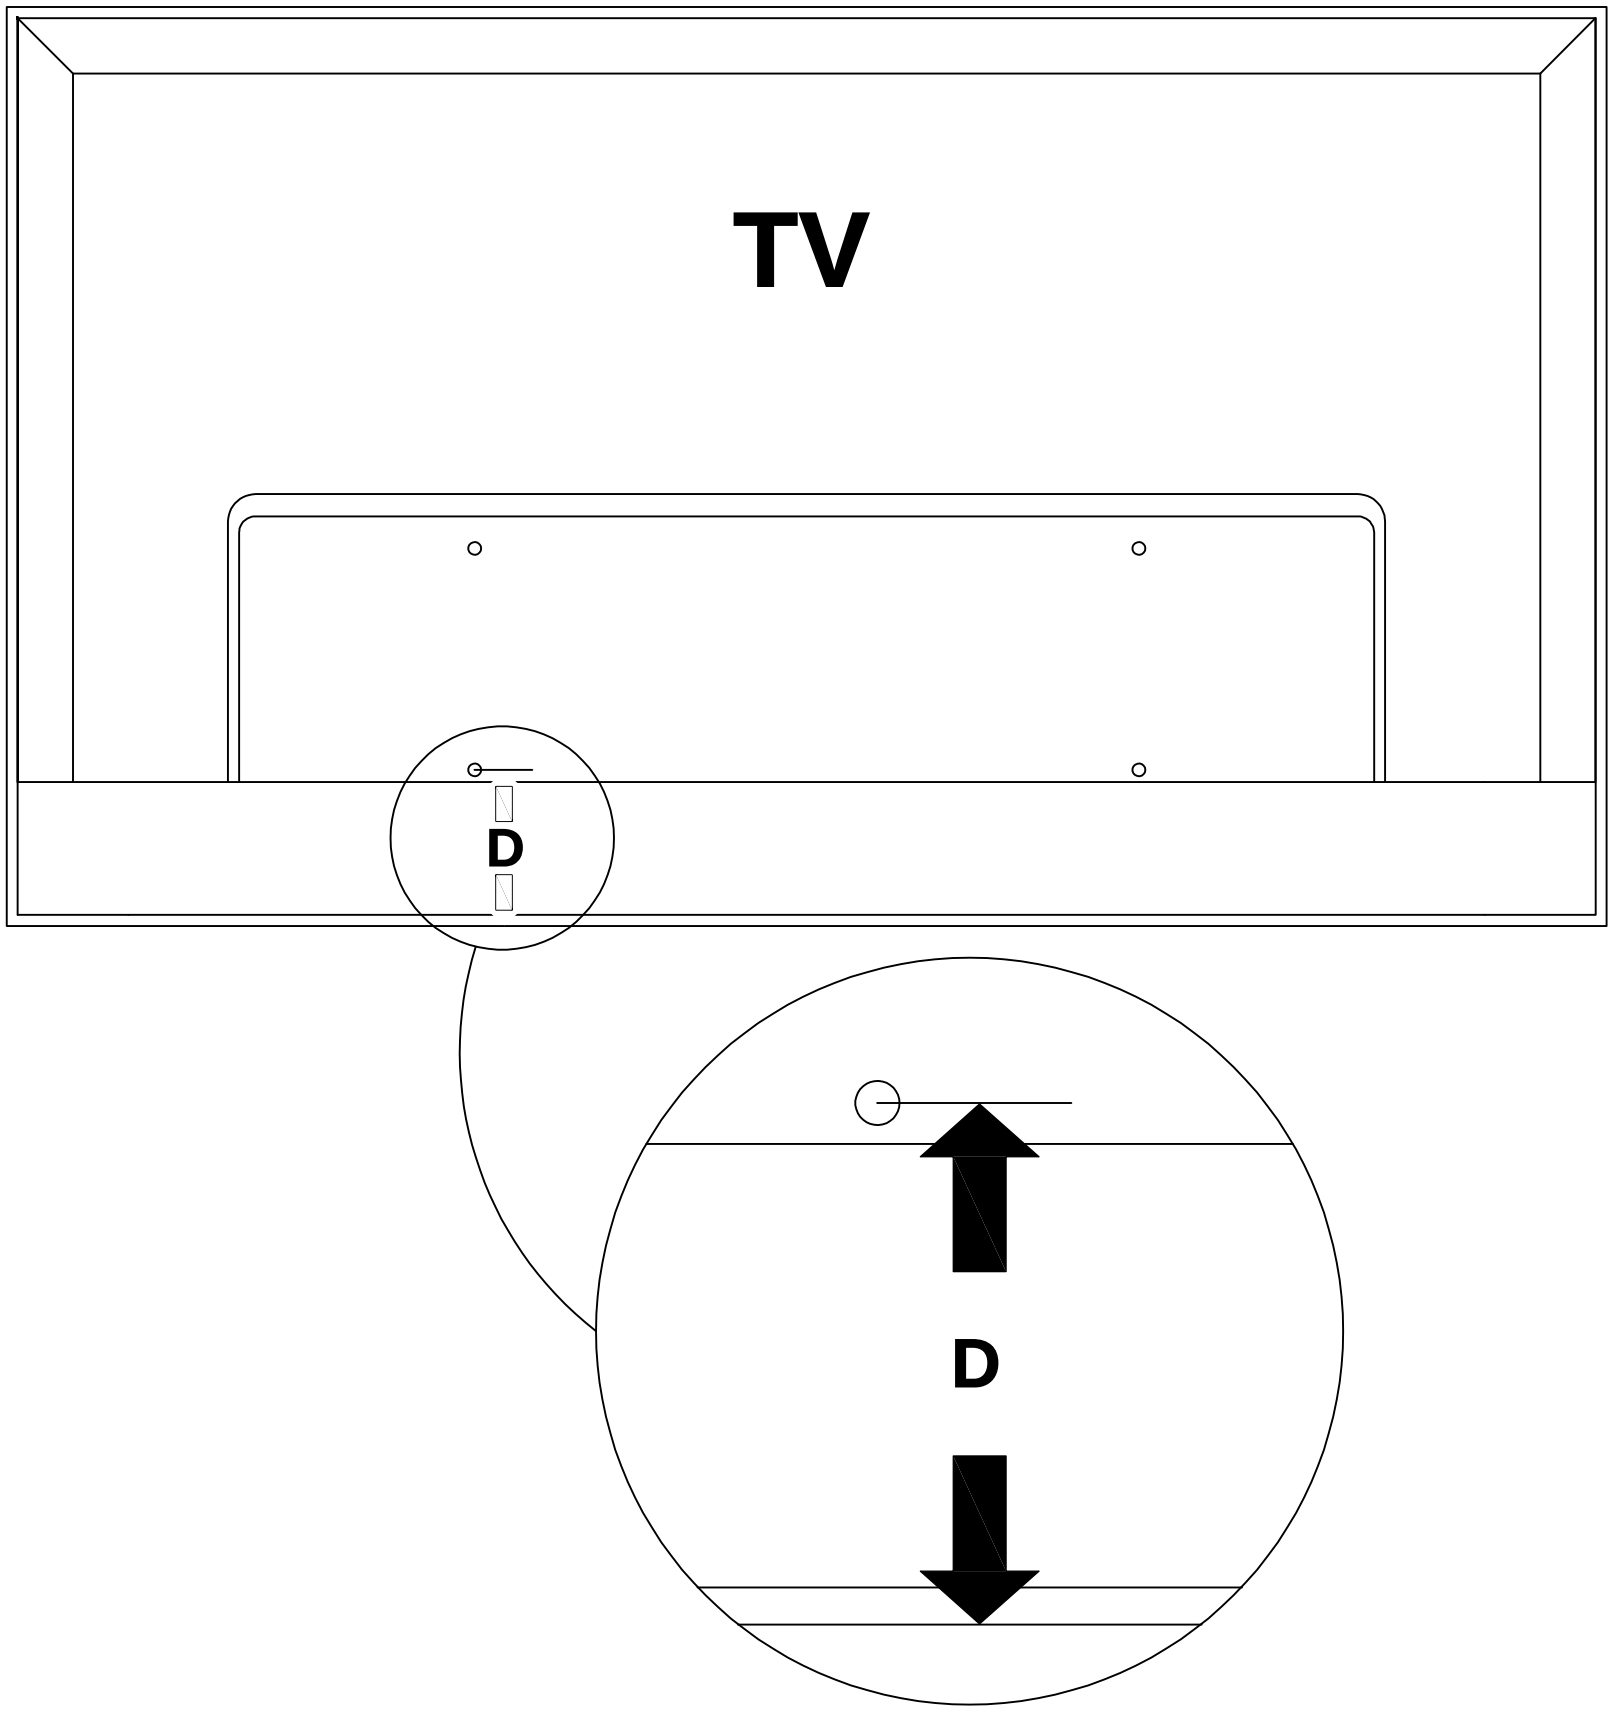


33


Attach part (22) to the designated holes according to the distance from your TV "D".

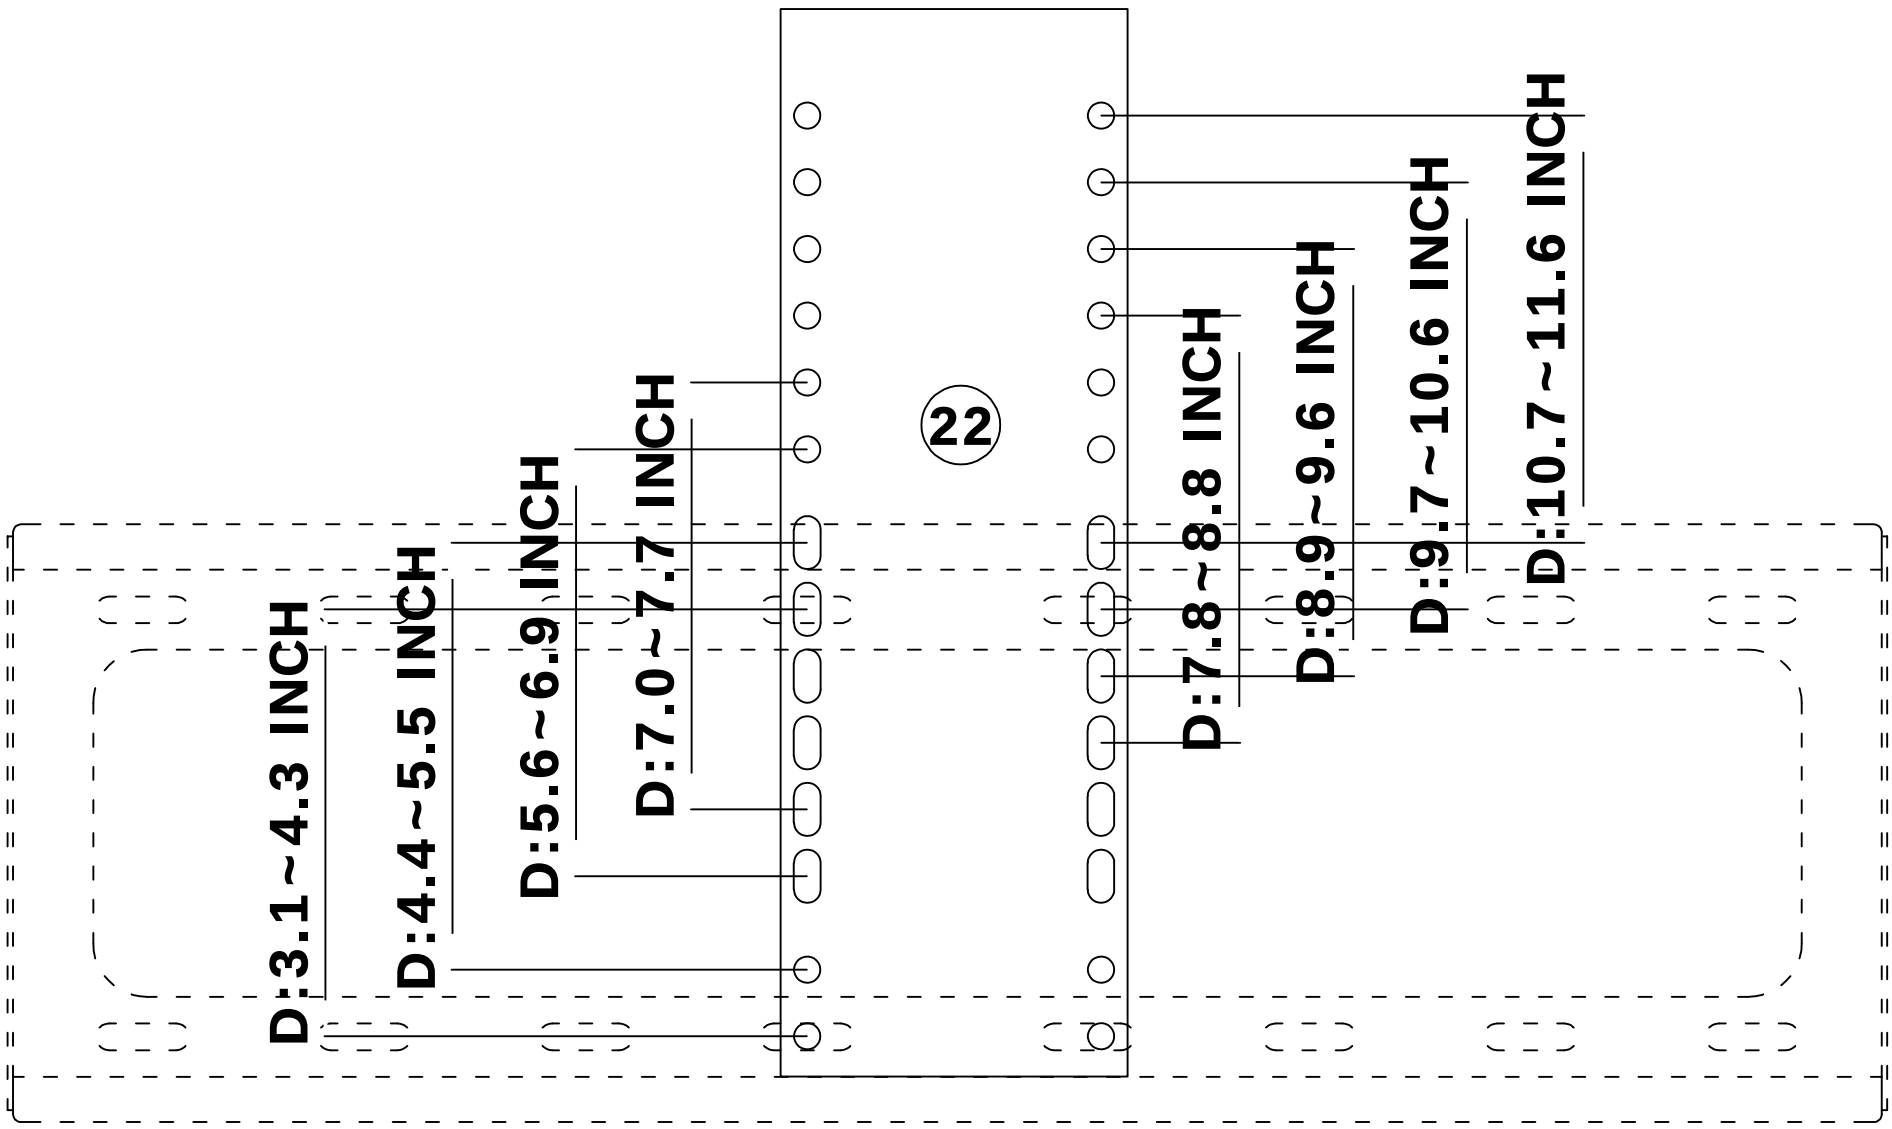



34

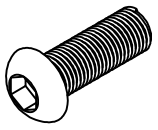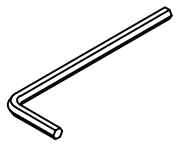W x 4	L x 4	R x 1	Z x 1	
				
M8*18	M8	M8	M5	


Attach part (23) to part (22) using (W)and (L) and tighten using (R) and (Z) in clockwise rotation as shown.

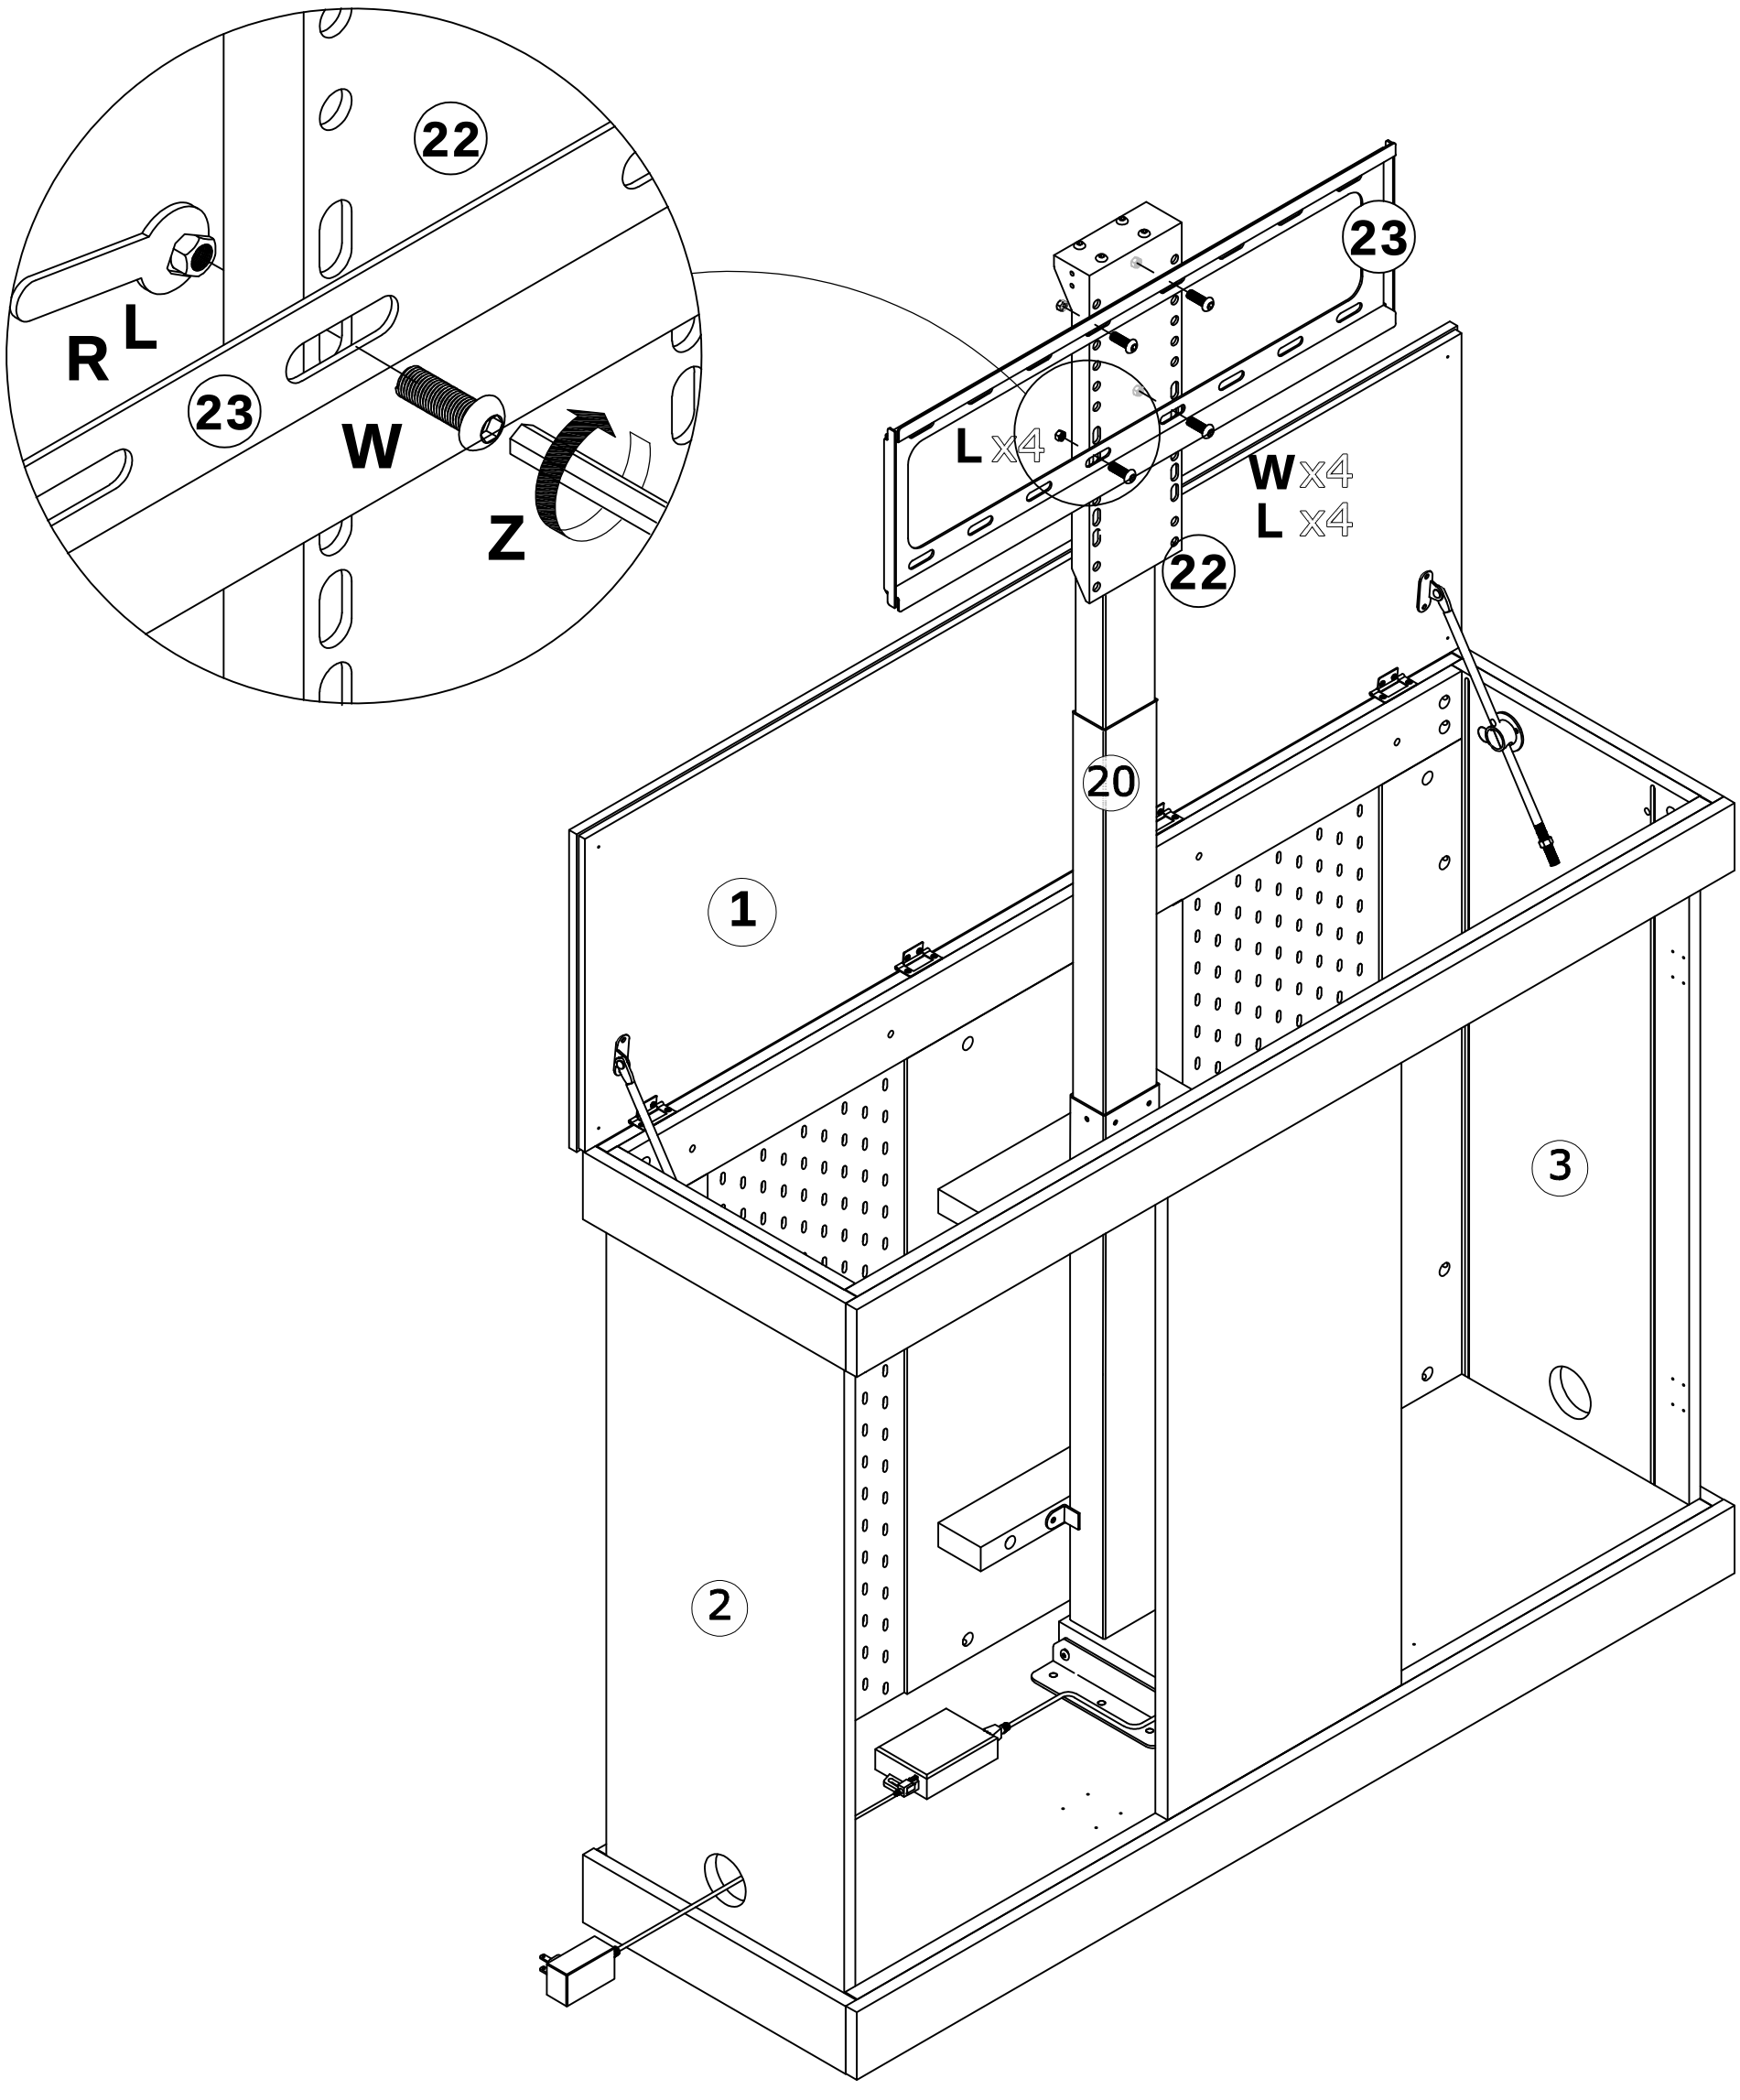



35

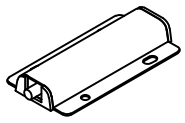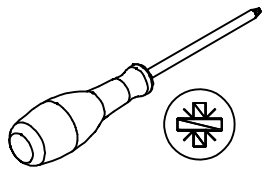
N x 8	F x 2	
 M3.5 x 14mm		

Attach (F) to part (4) using (N) as shown.

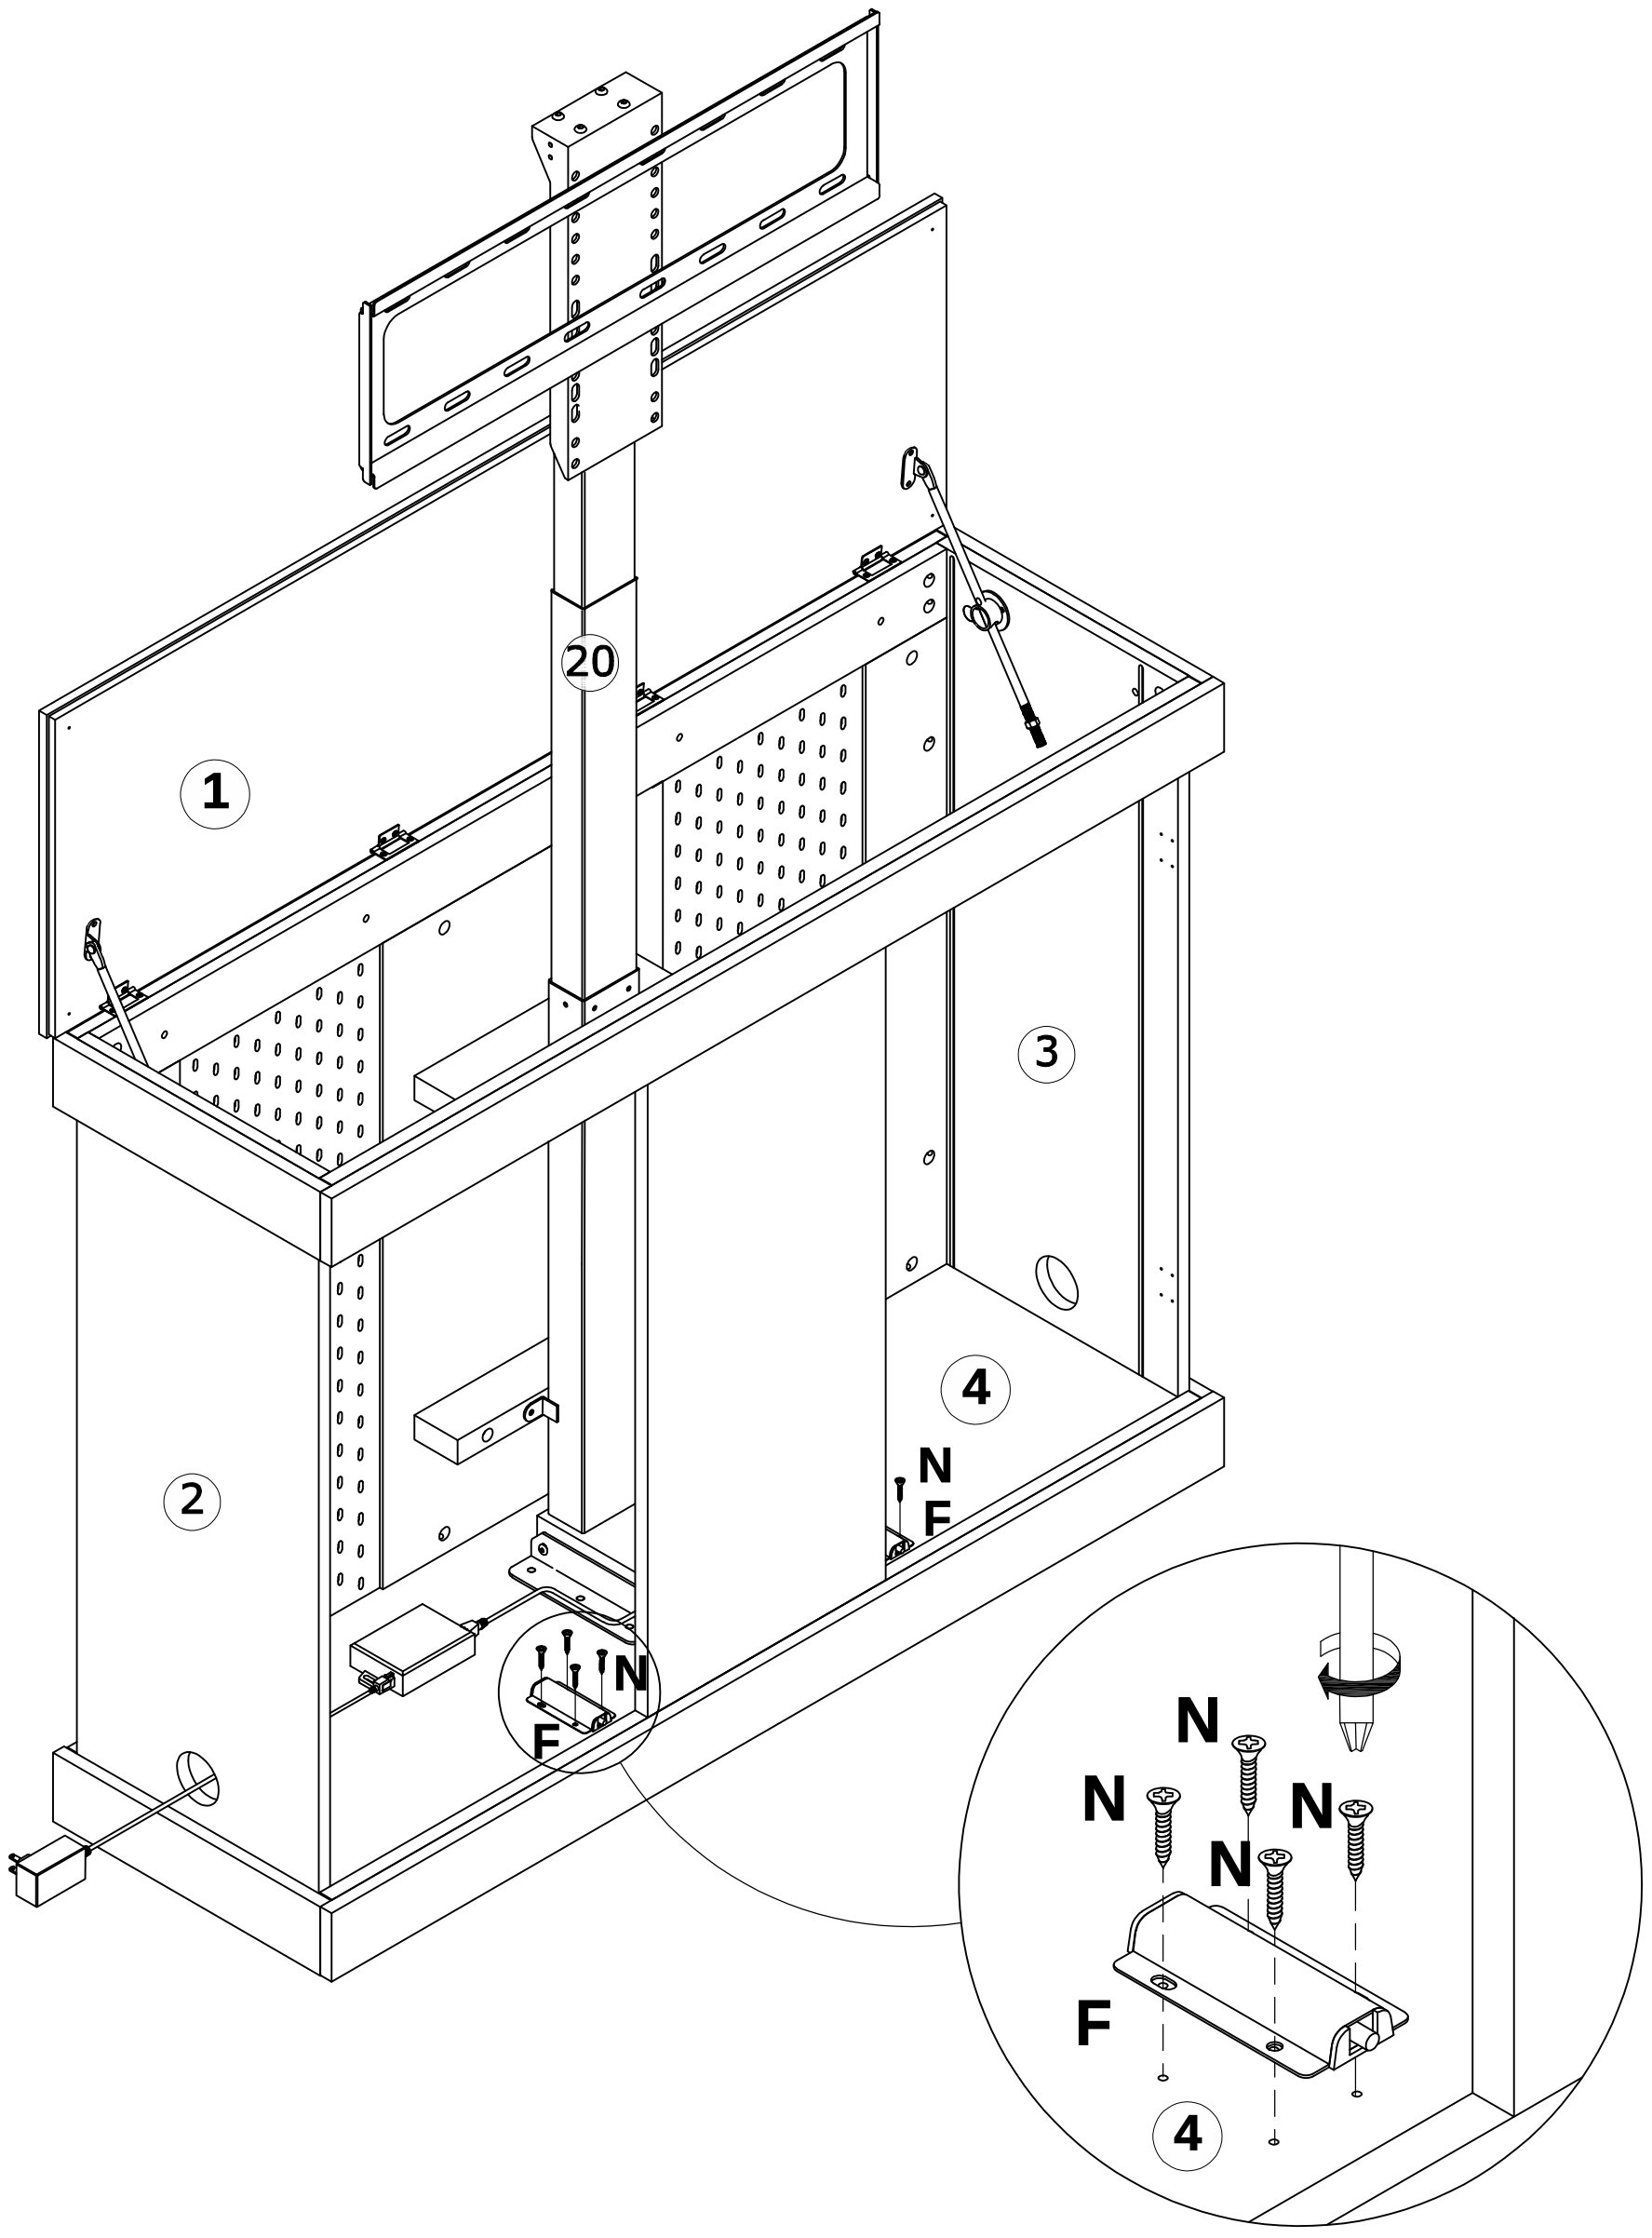


36

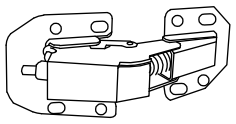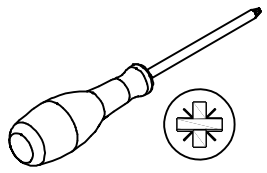C x 4	N x 8	
	 M3.5 x 14mm	

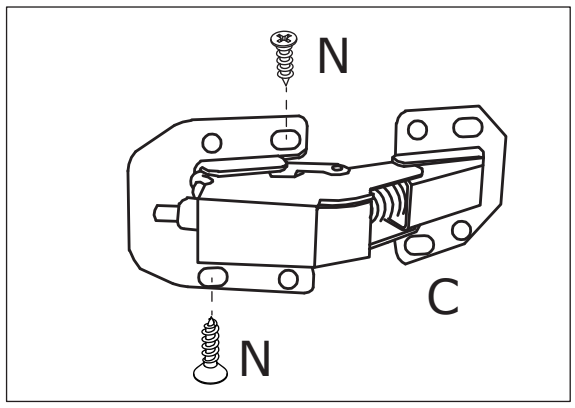

Use screws (N) to secure the component (C) to plate (8) as shown. **Note: Pay attention to the hole positions during this step.**

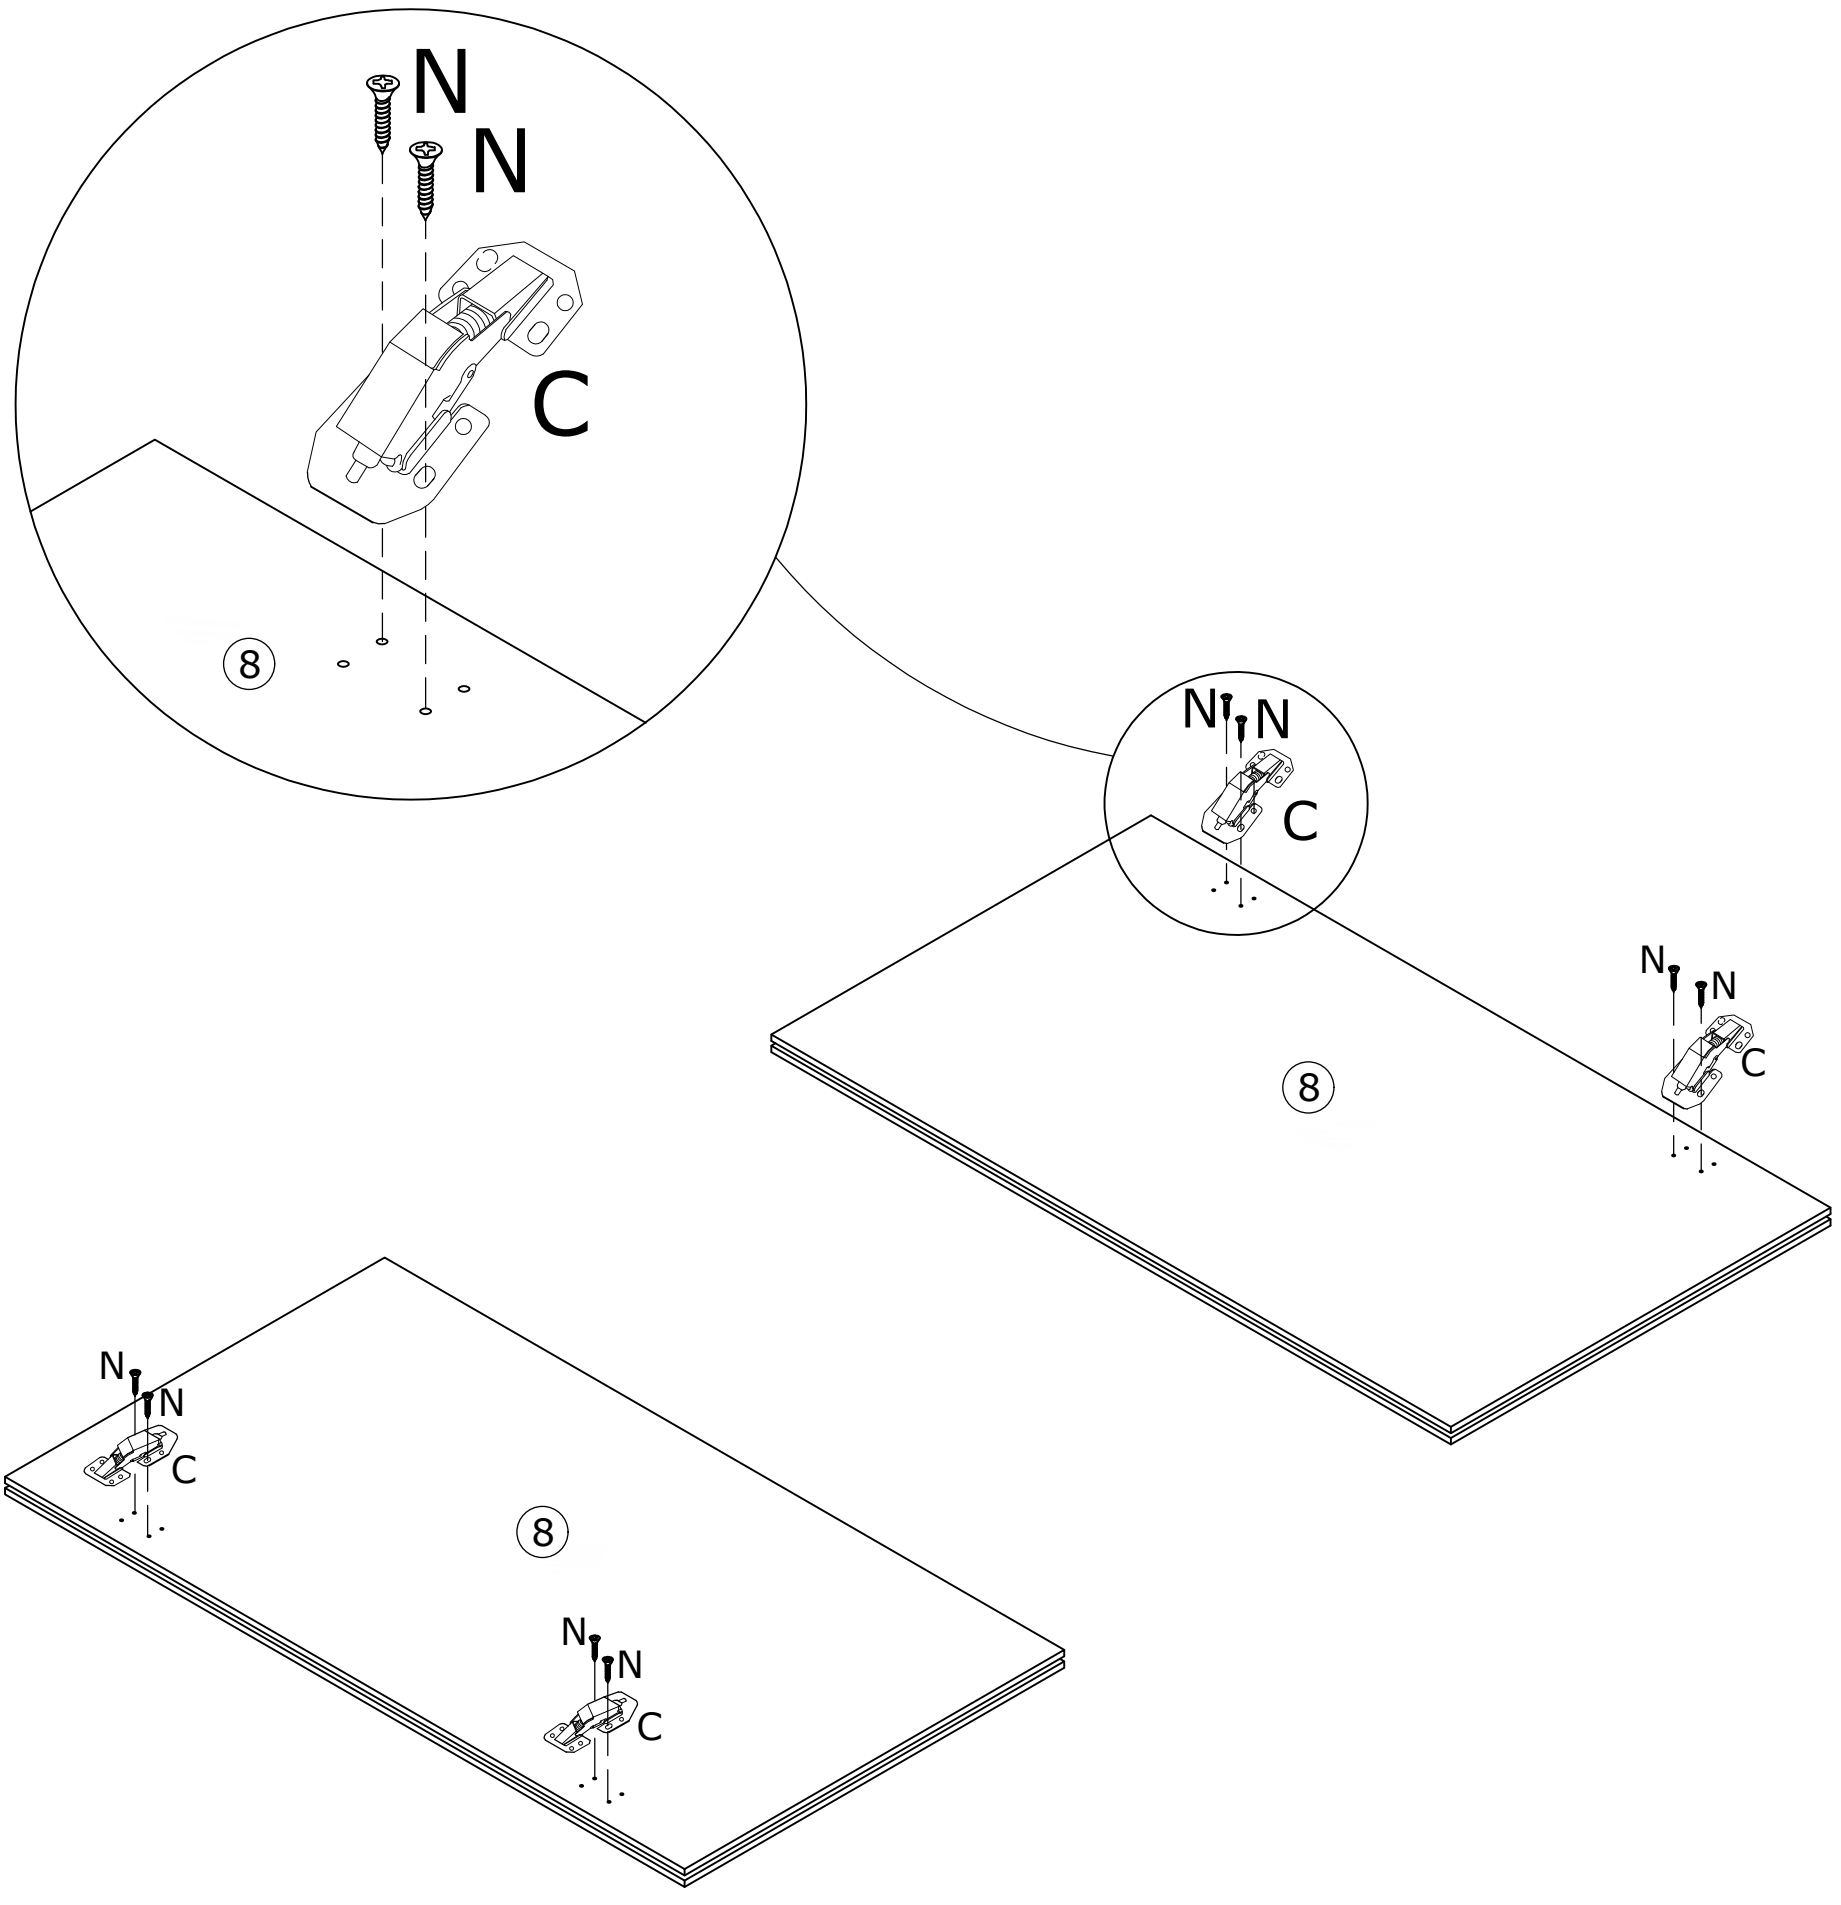



37

N x 8




M3.5 x 14mm

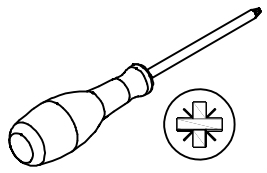

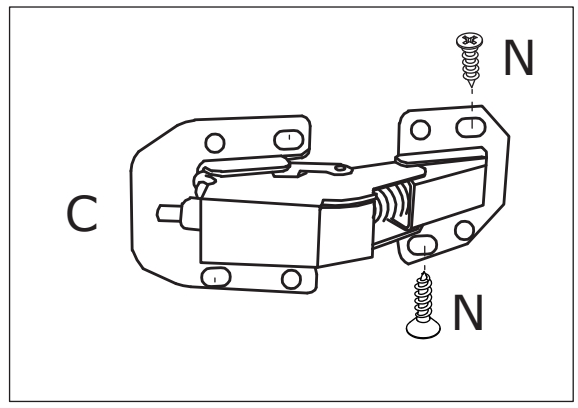

As shown in the figure, use screws (N) to secure plate (8) to plates (2) and (3) using the fastener (C).

Note: Pay attention to the hole positions during this step.

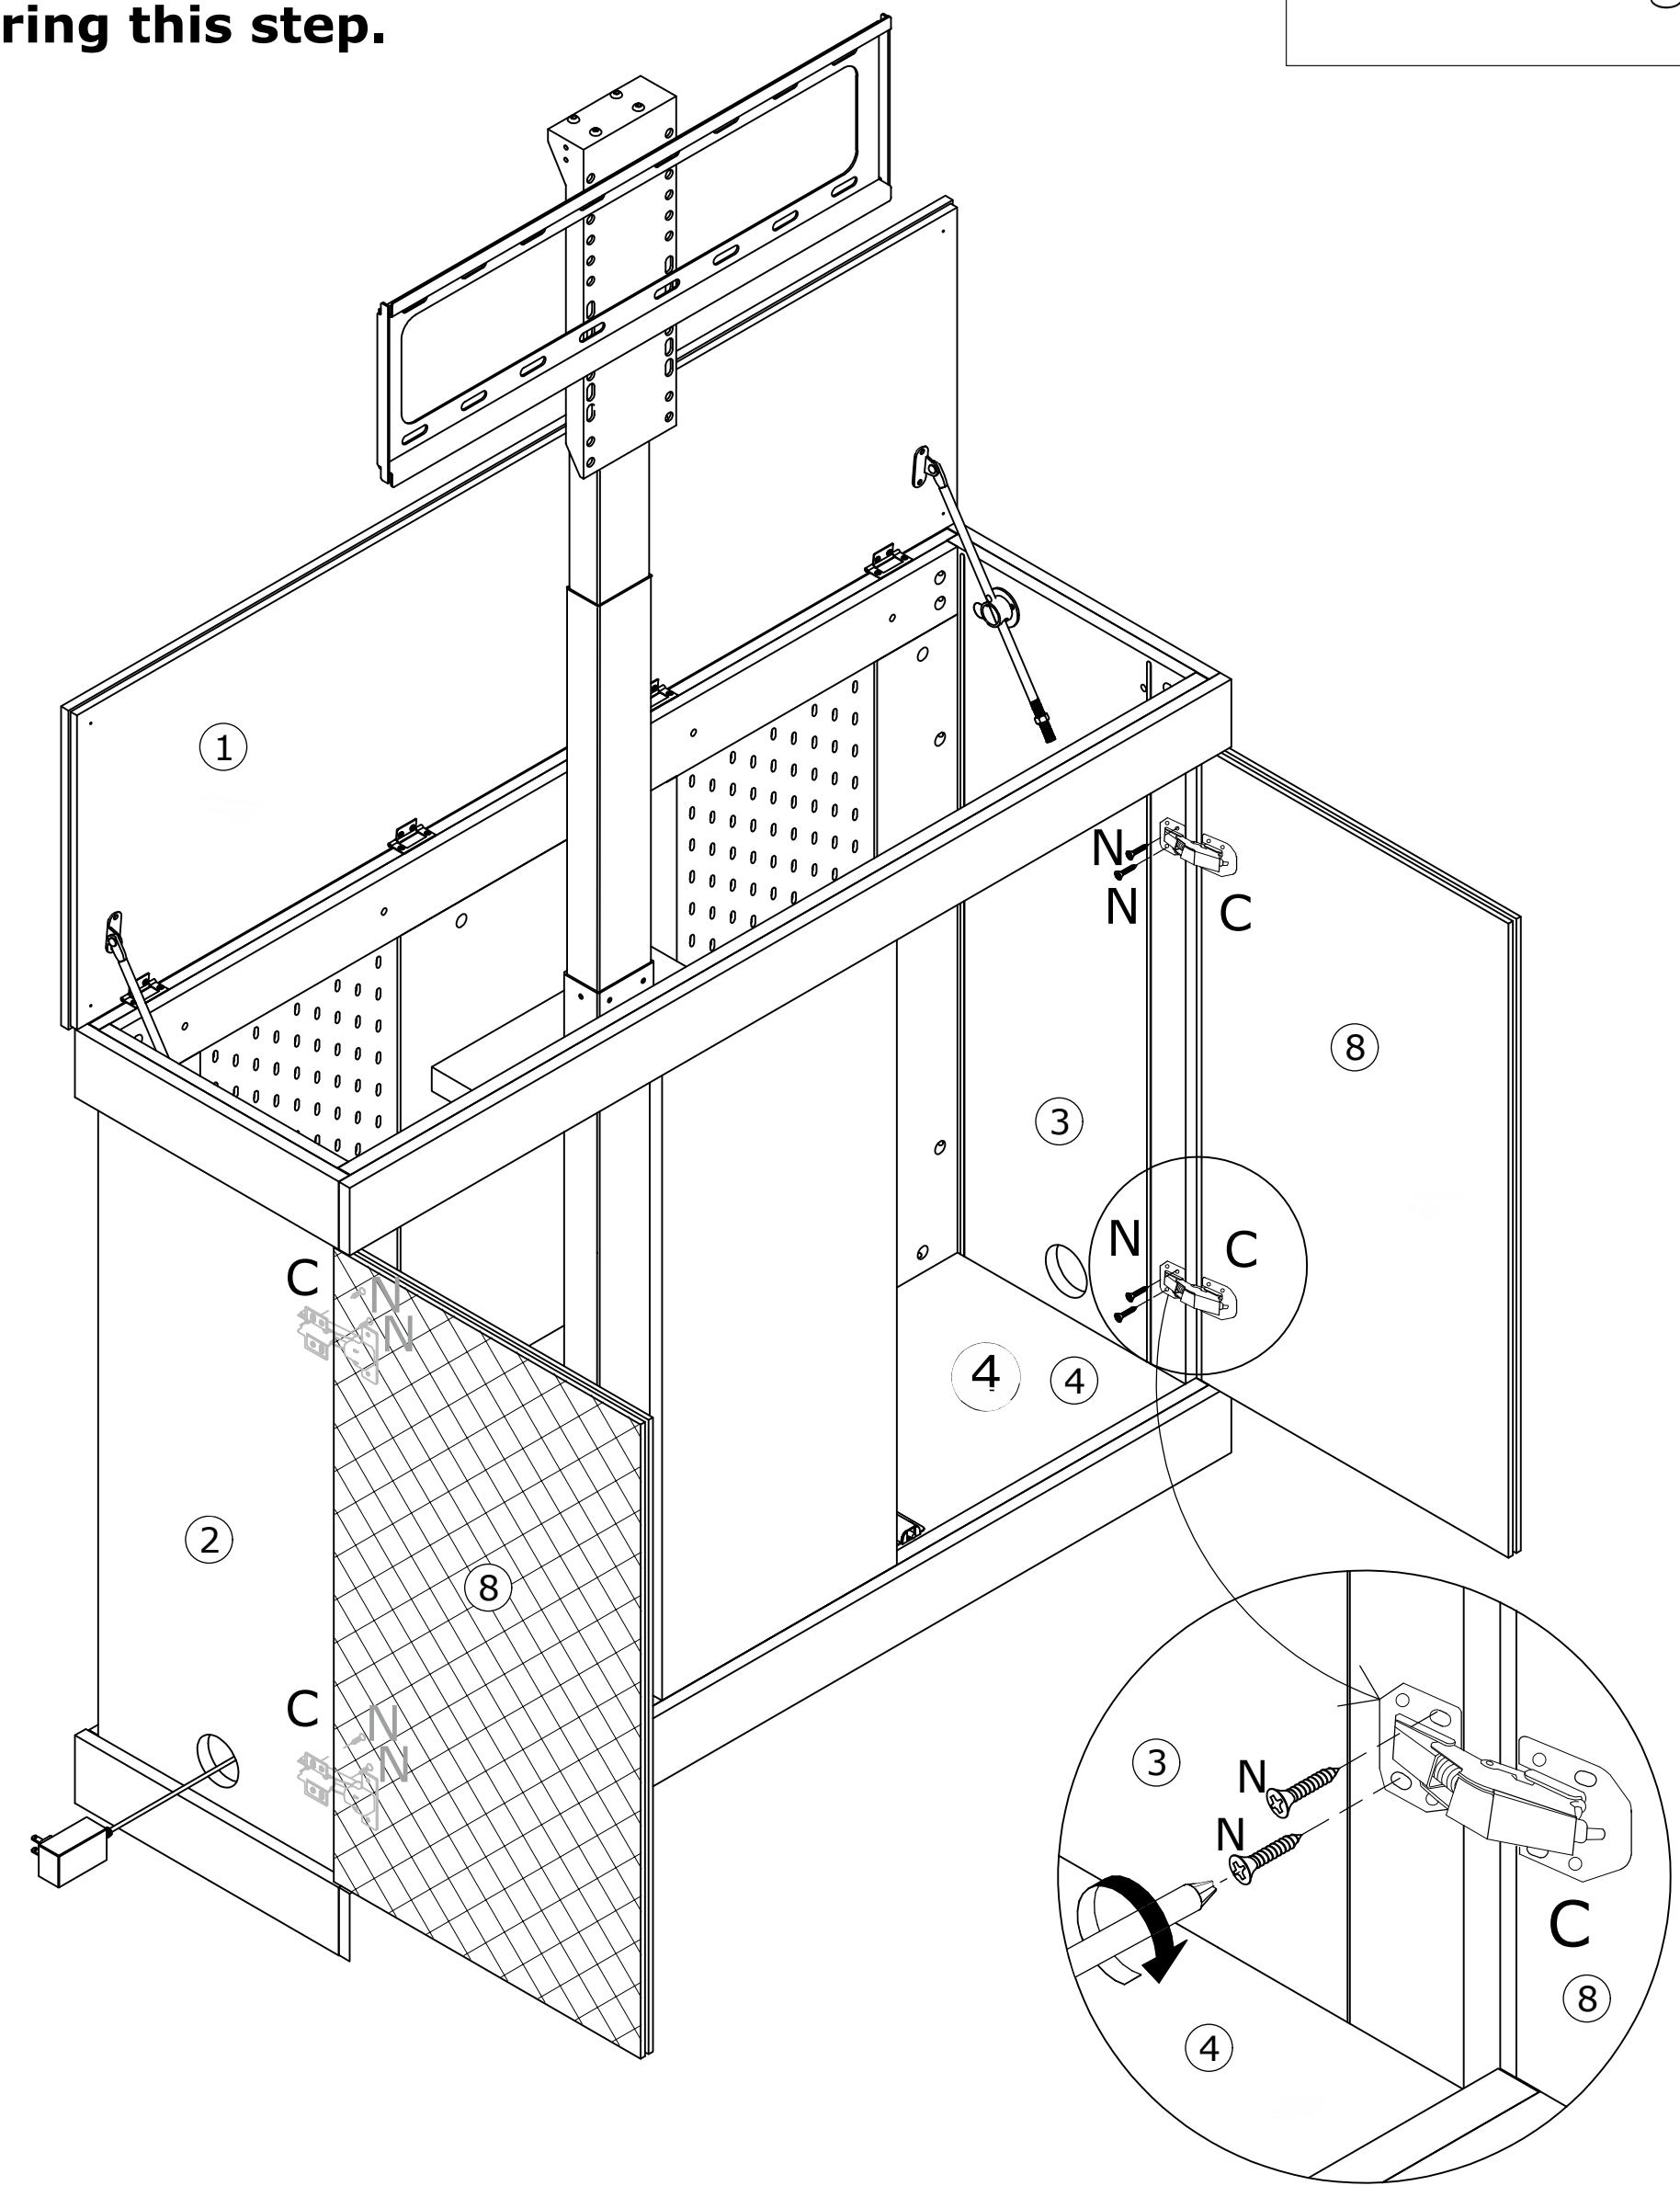



38

N x 16




M3.5 x 14mm


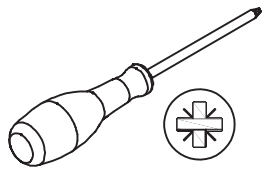


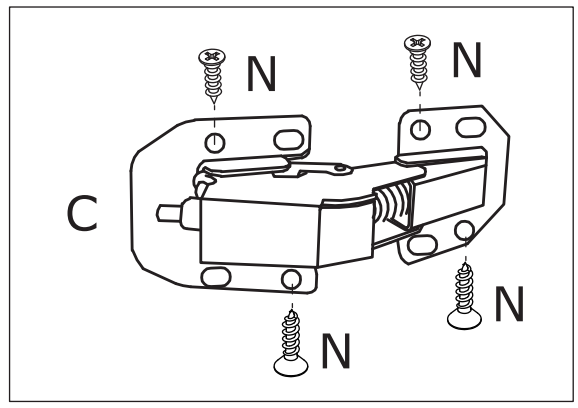


After adjusting the door panel, use screws (N) to secure the remaining holes on the accessory (C).

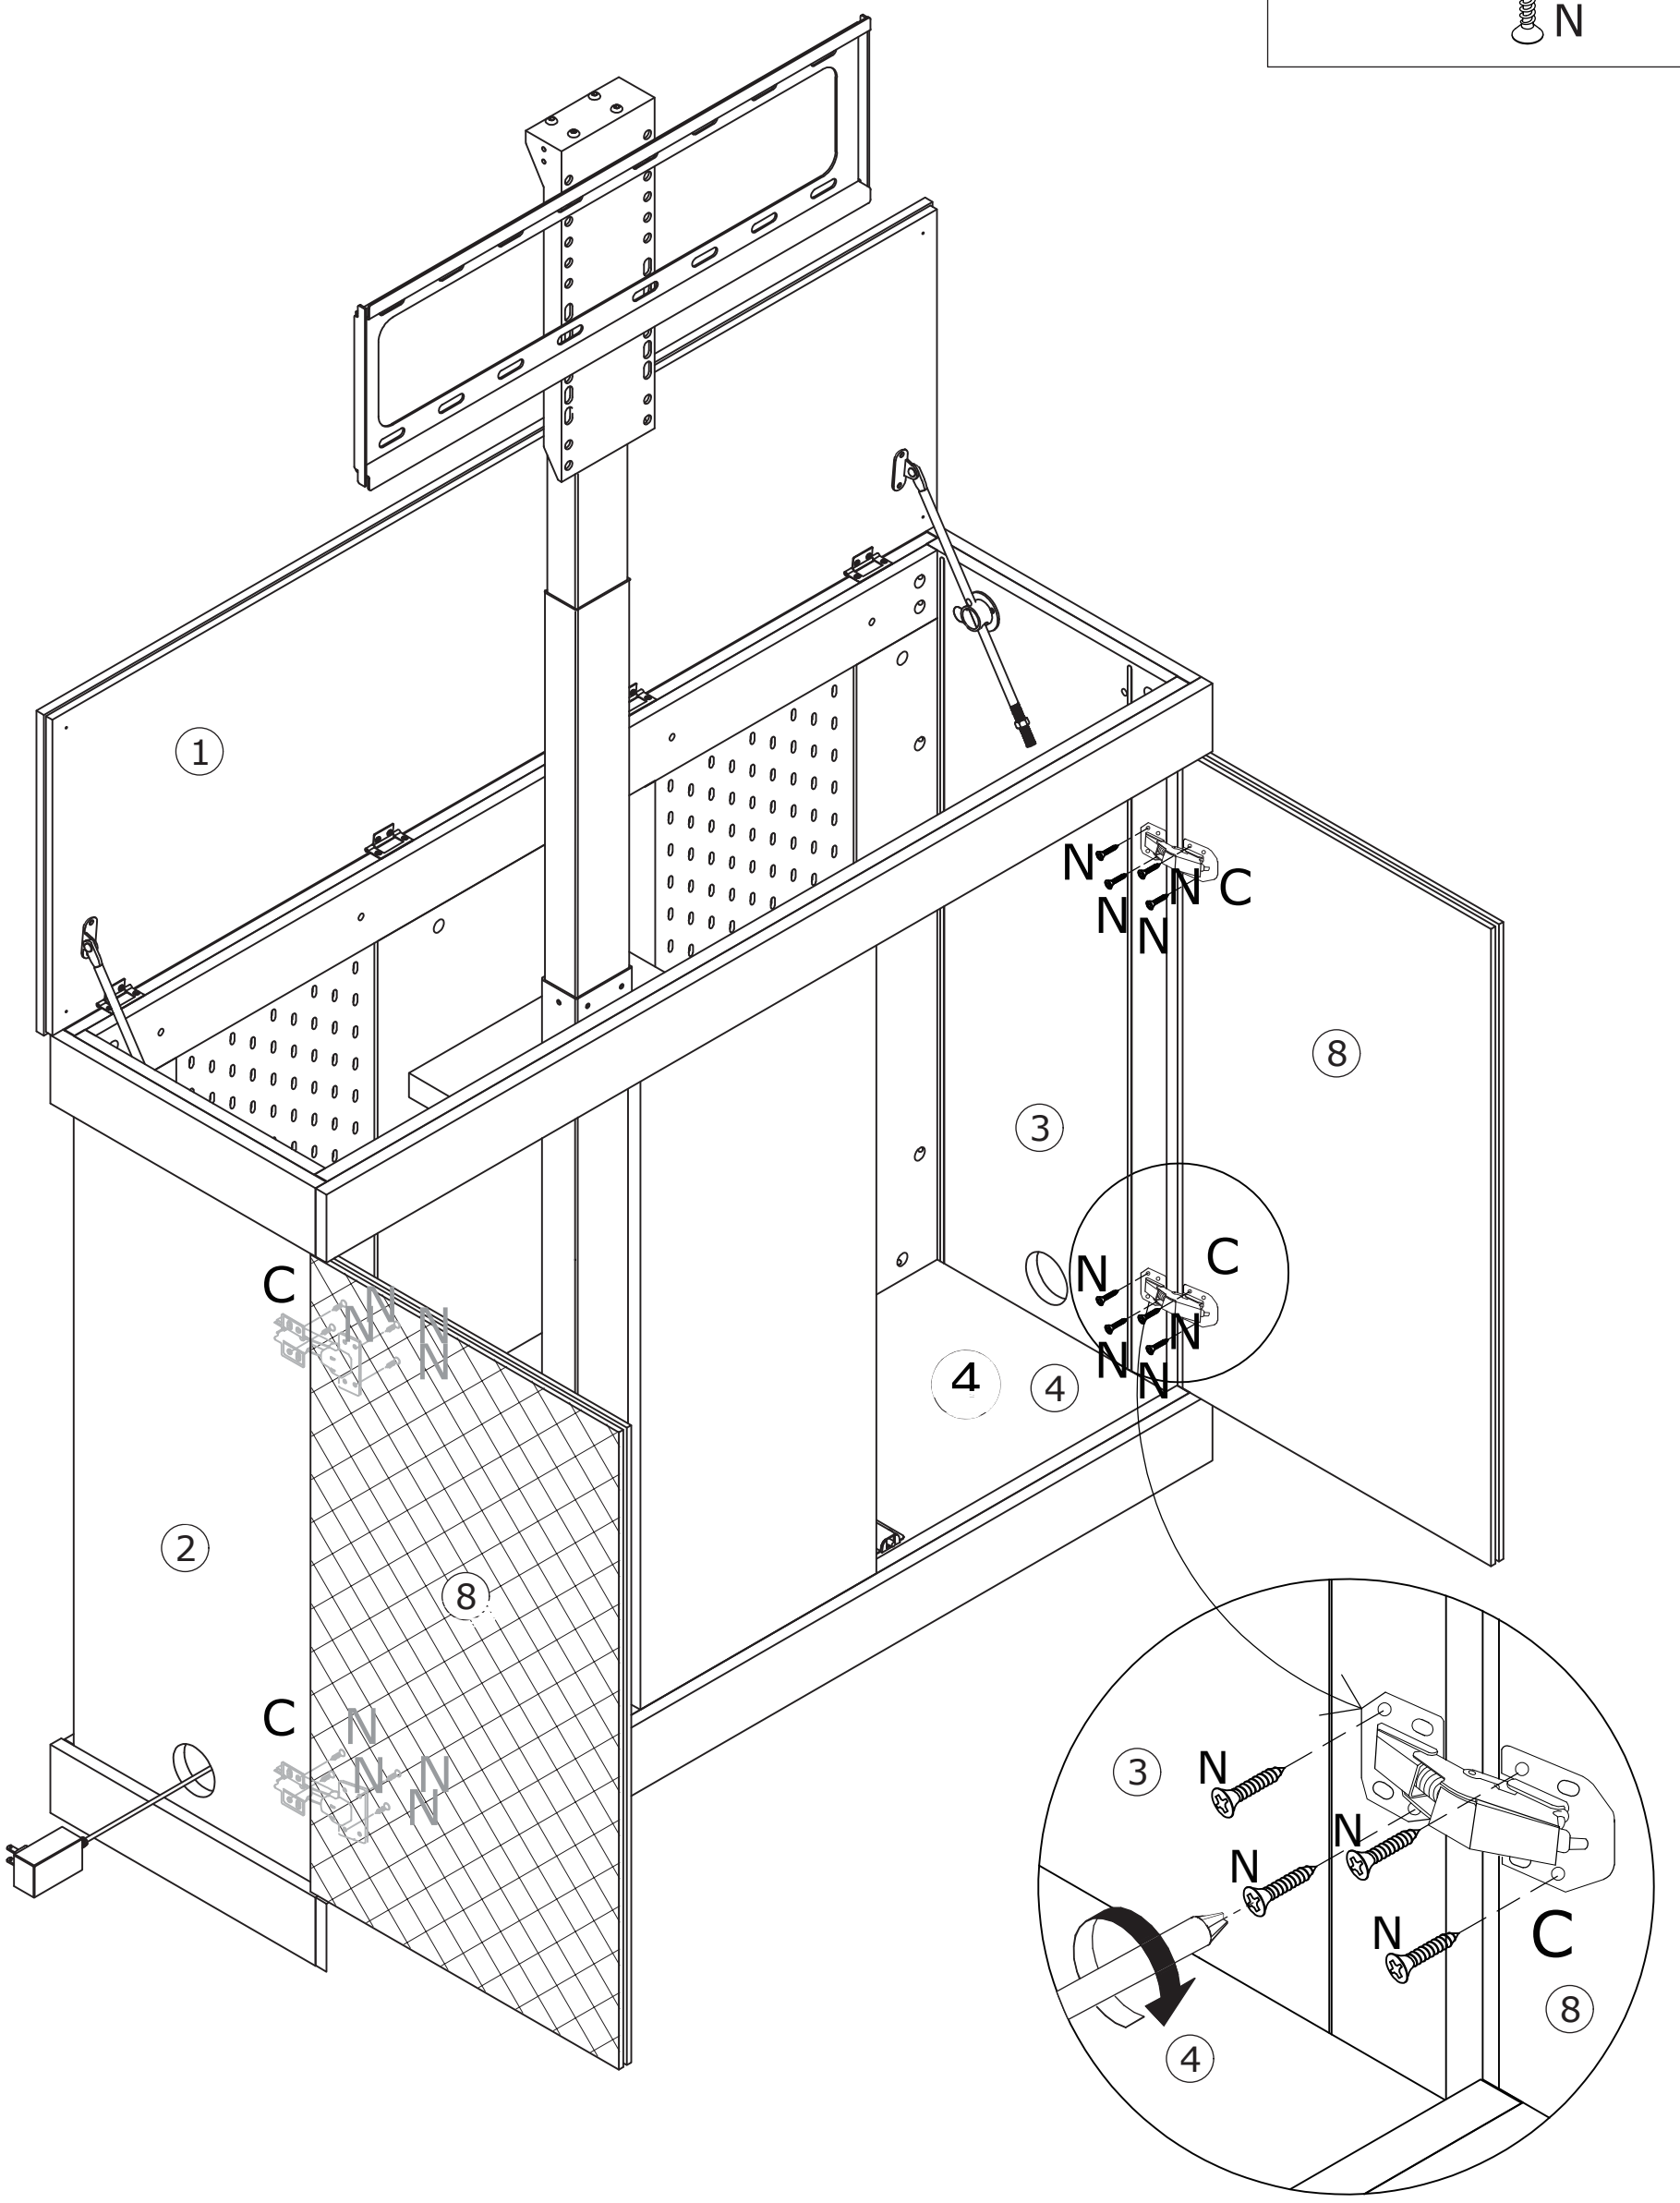

39


H x 4	Y x 1	
		
M6*16	M4	

Attach part (28) to part (22) using (H) as shown.



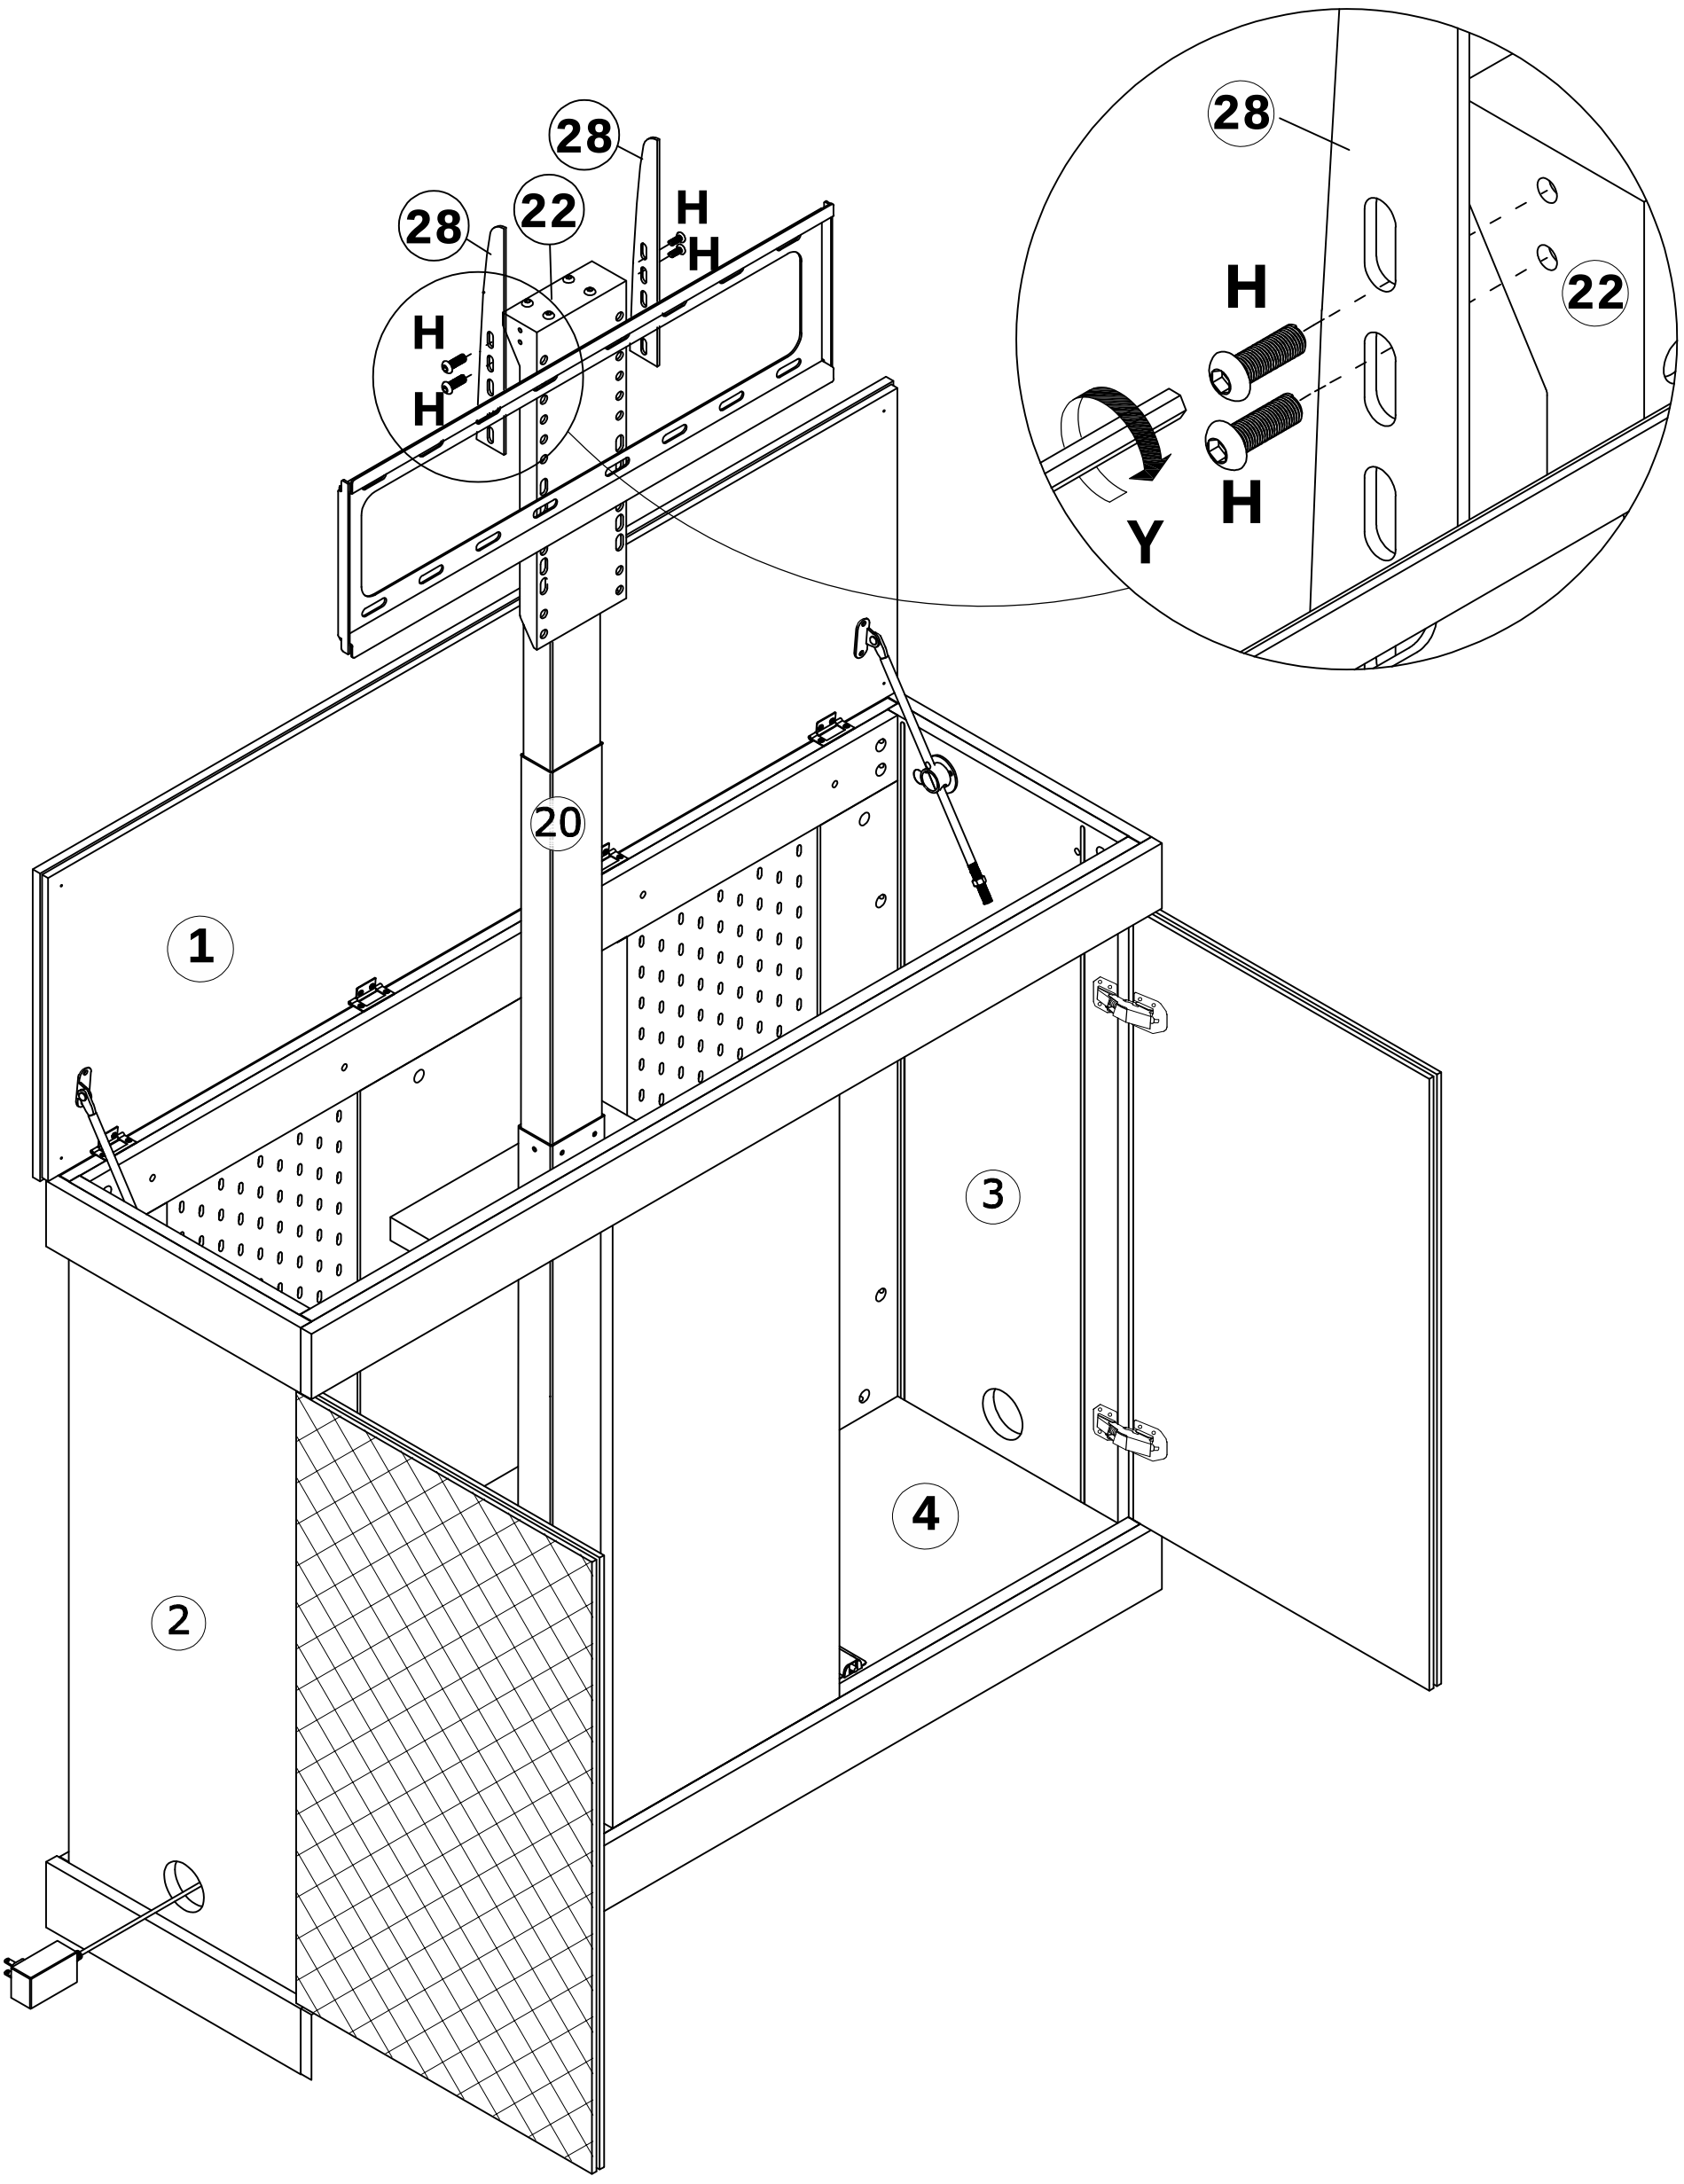


40


Pull down and move the strap inside part (24).

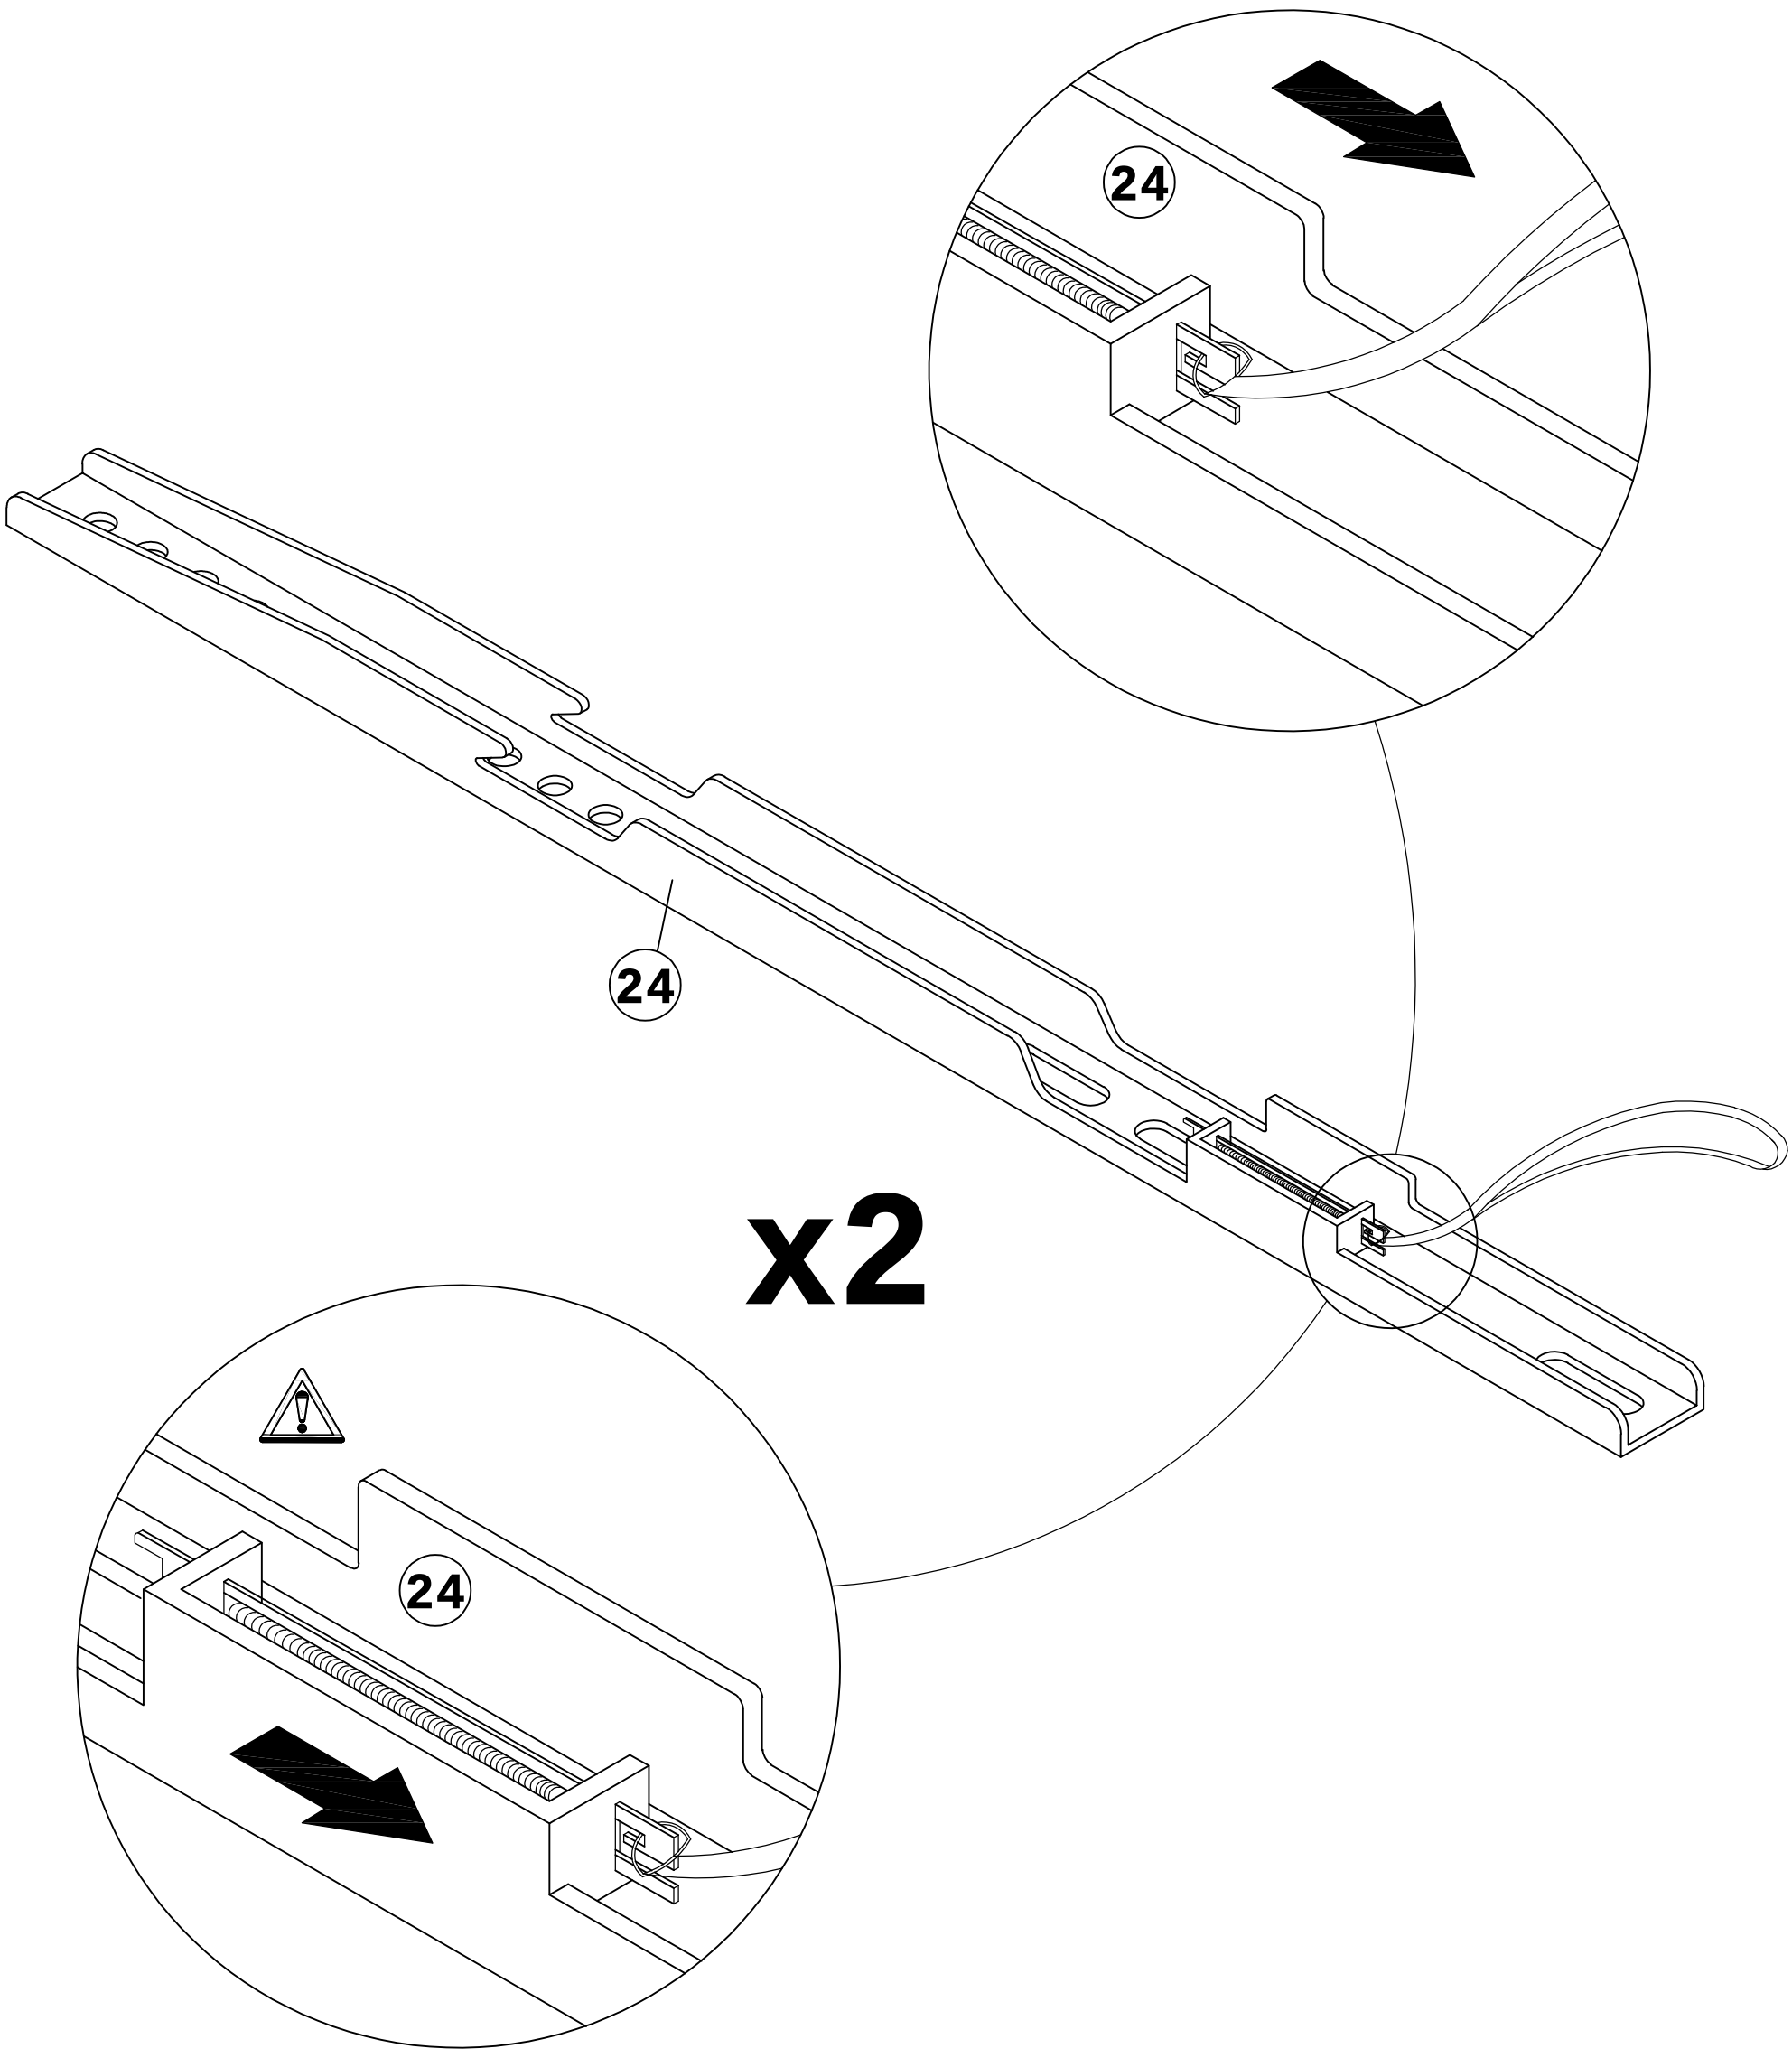

41

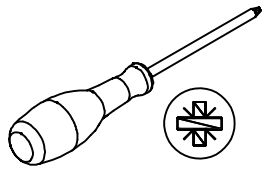
U x 4	V x 4	
		
M6*40	∅15 x 10mm	

Attach part (24) to the TV using (U) and (V) as shown and tighten with (P) by turning clockwise.

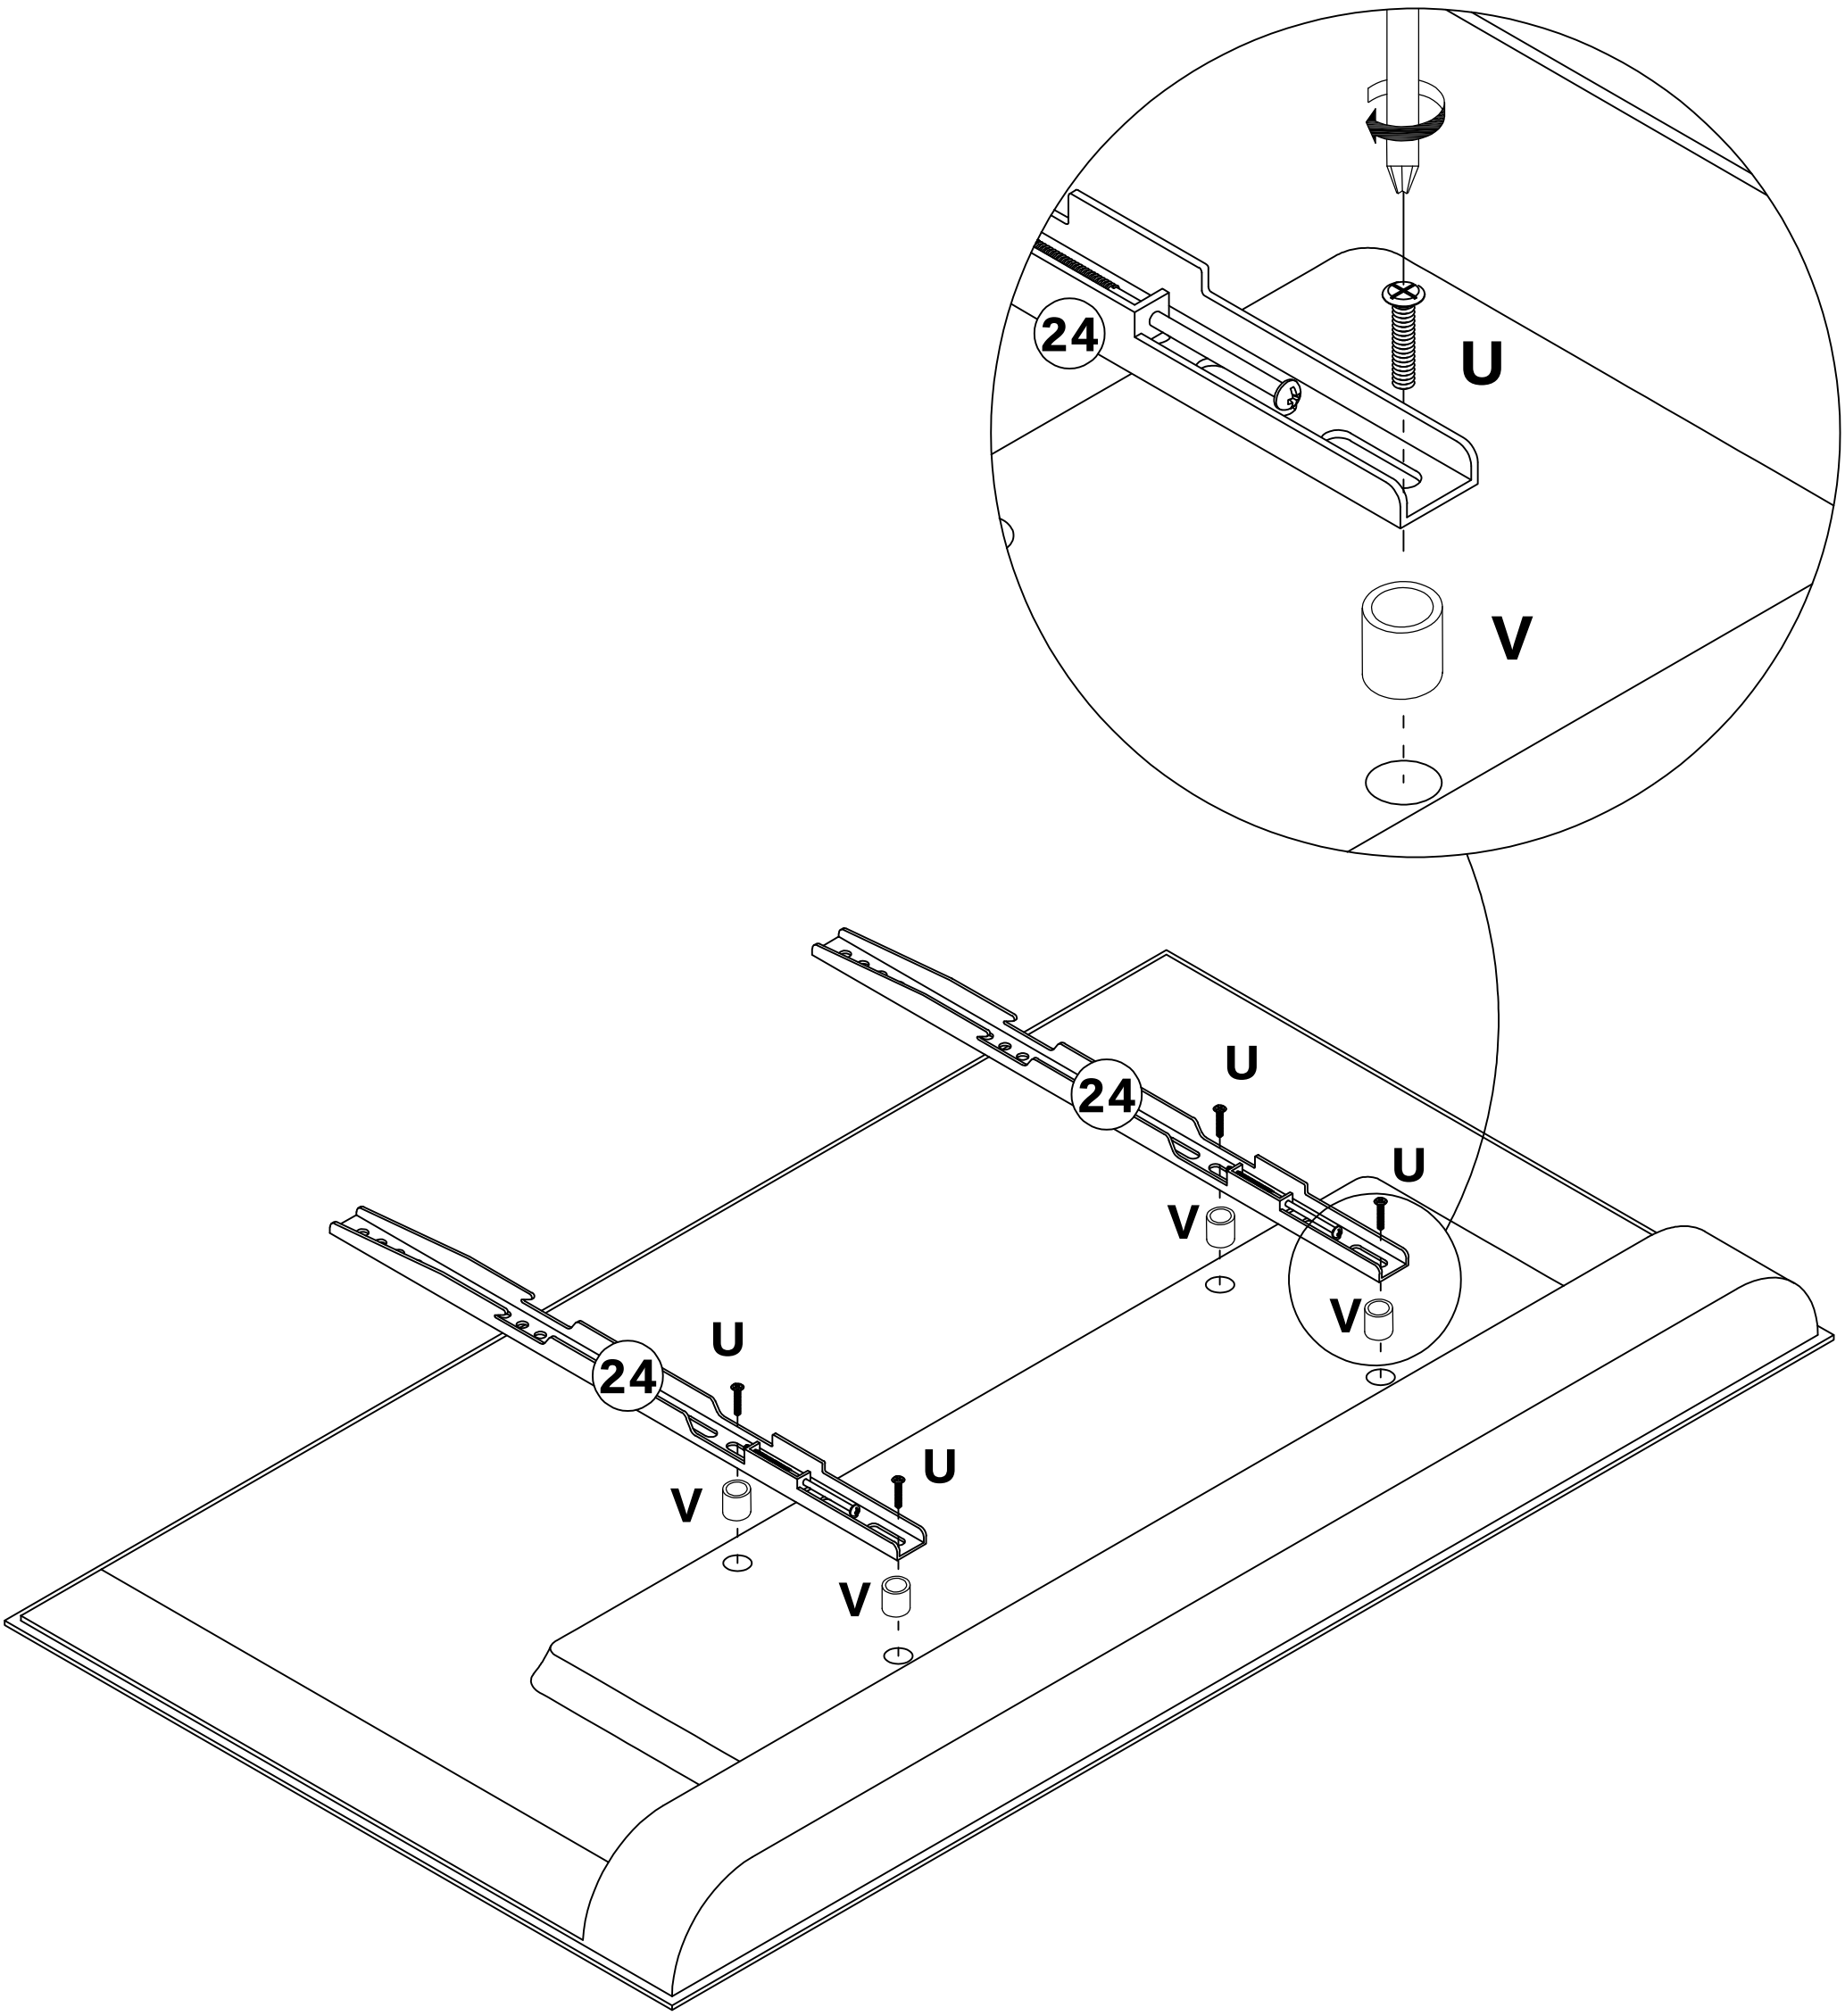


42

Note: This step requires two people to perform, andthe TV shouldbe placedin the center forinstallation.

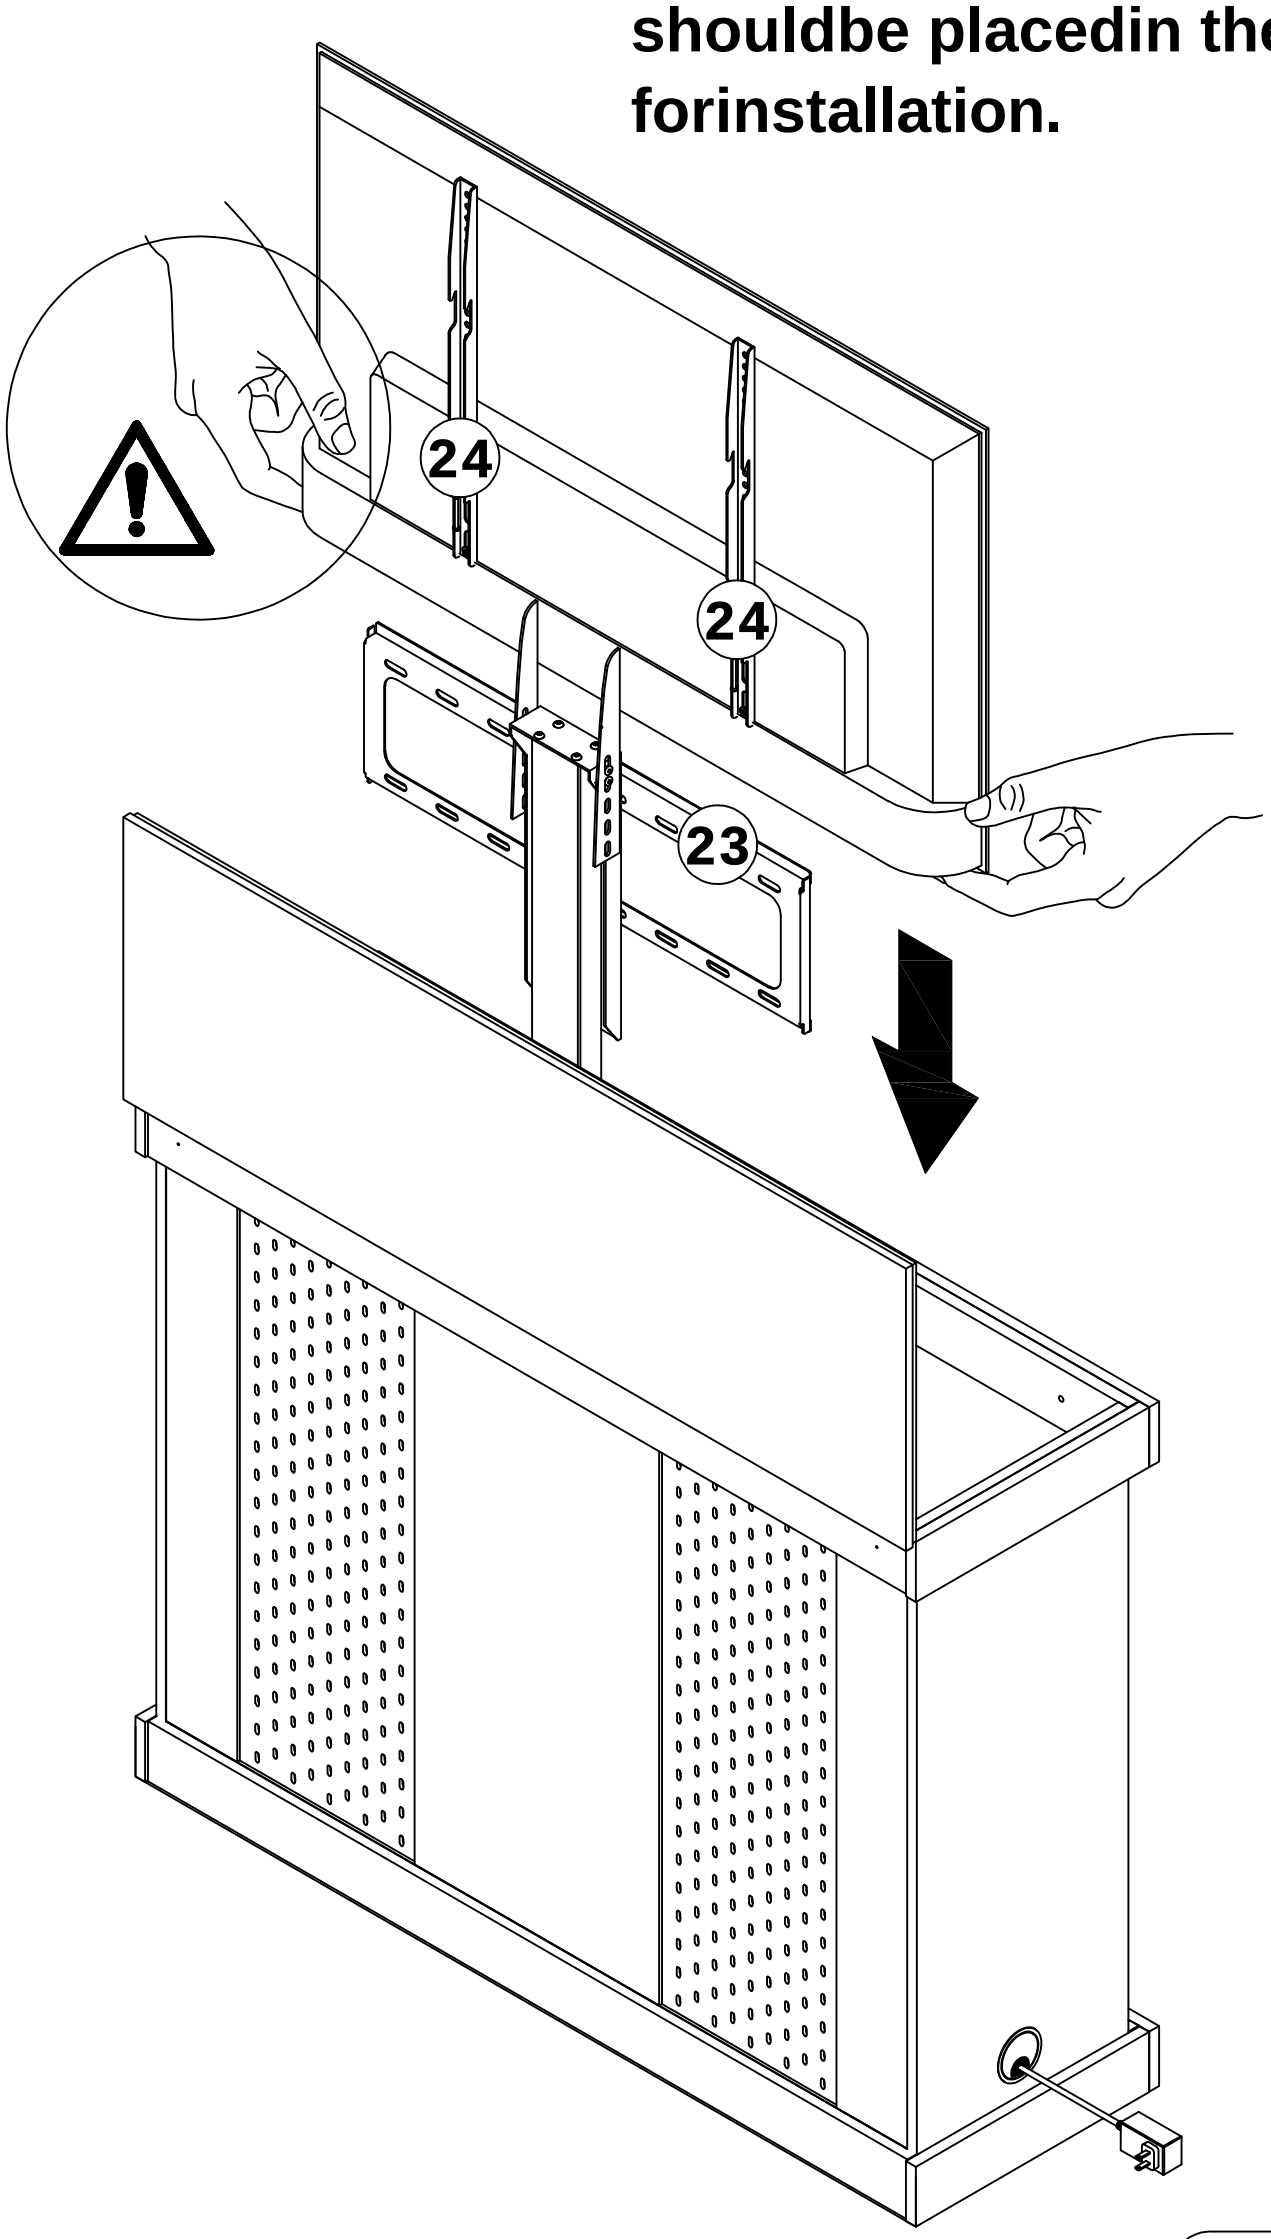


Place the TV on part (23) as shown.
NOTE: It takes two people to operate and center the TV set.

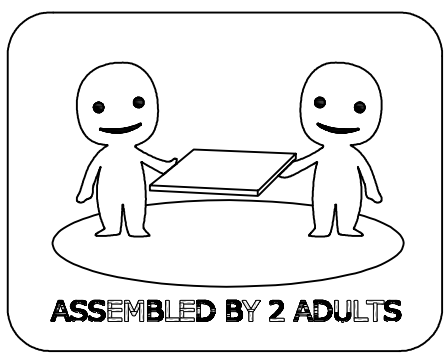


43

Pull down the strap inside Part (24) to open it, then insert Part (23).

Engage the upper latch, then release the strap at the bottom.

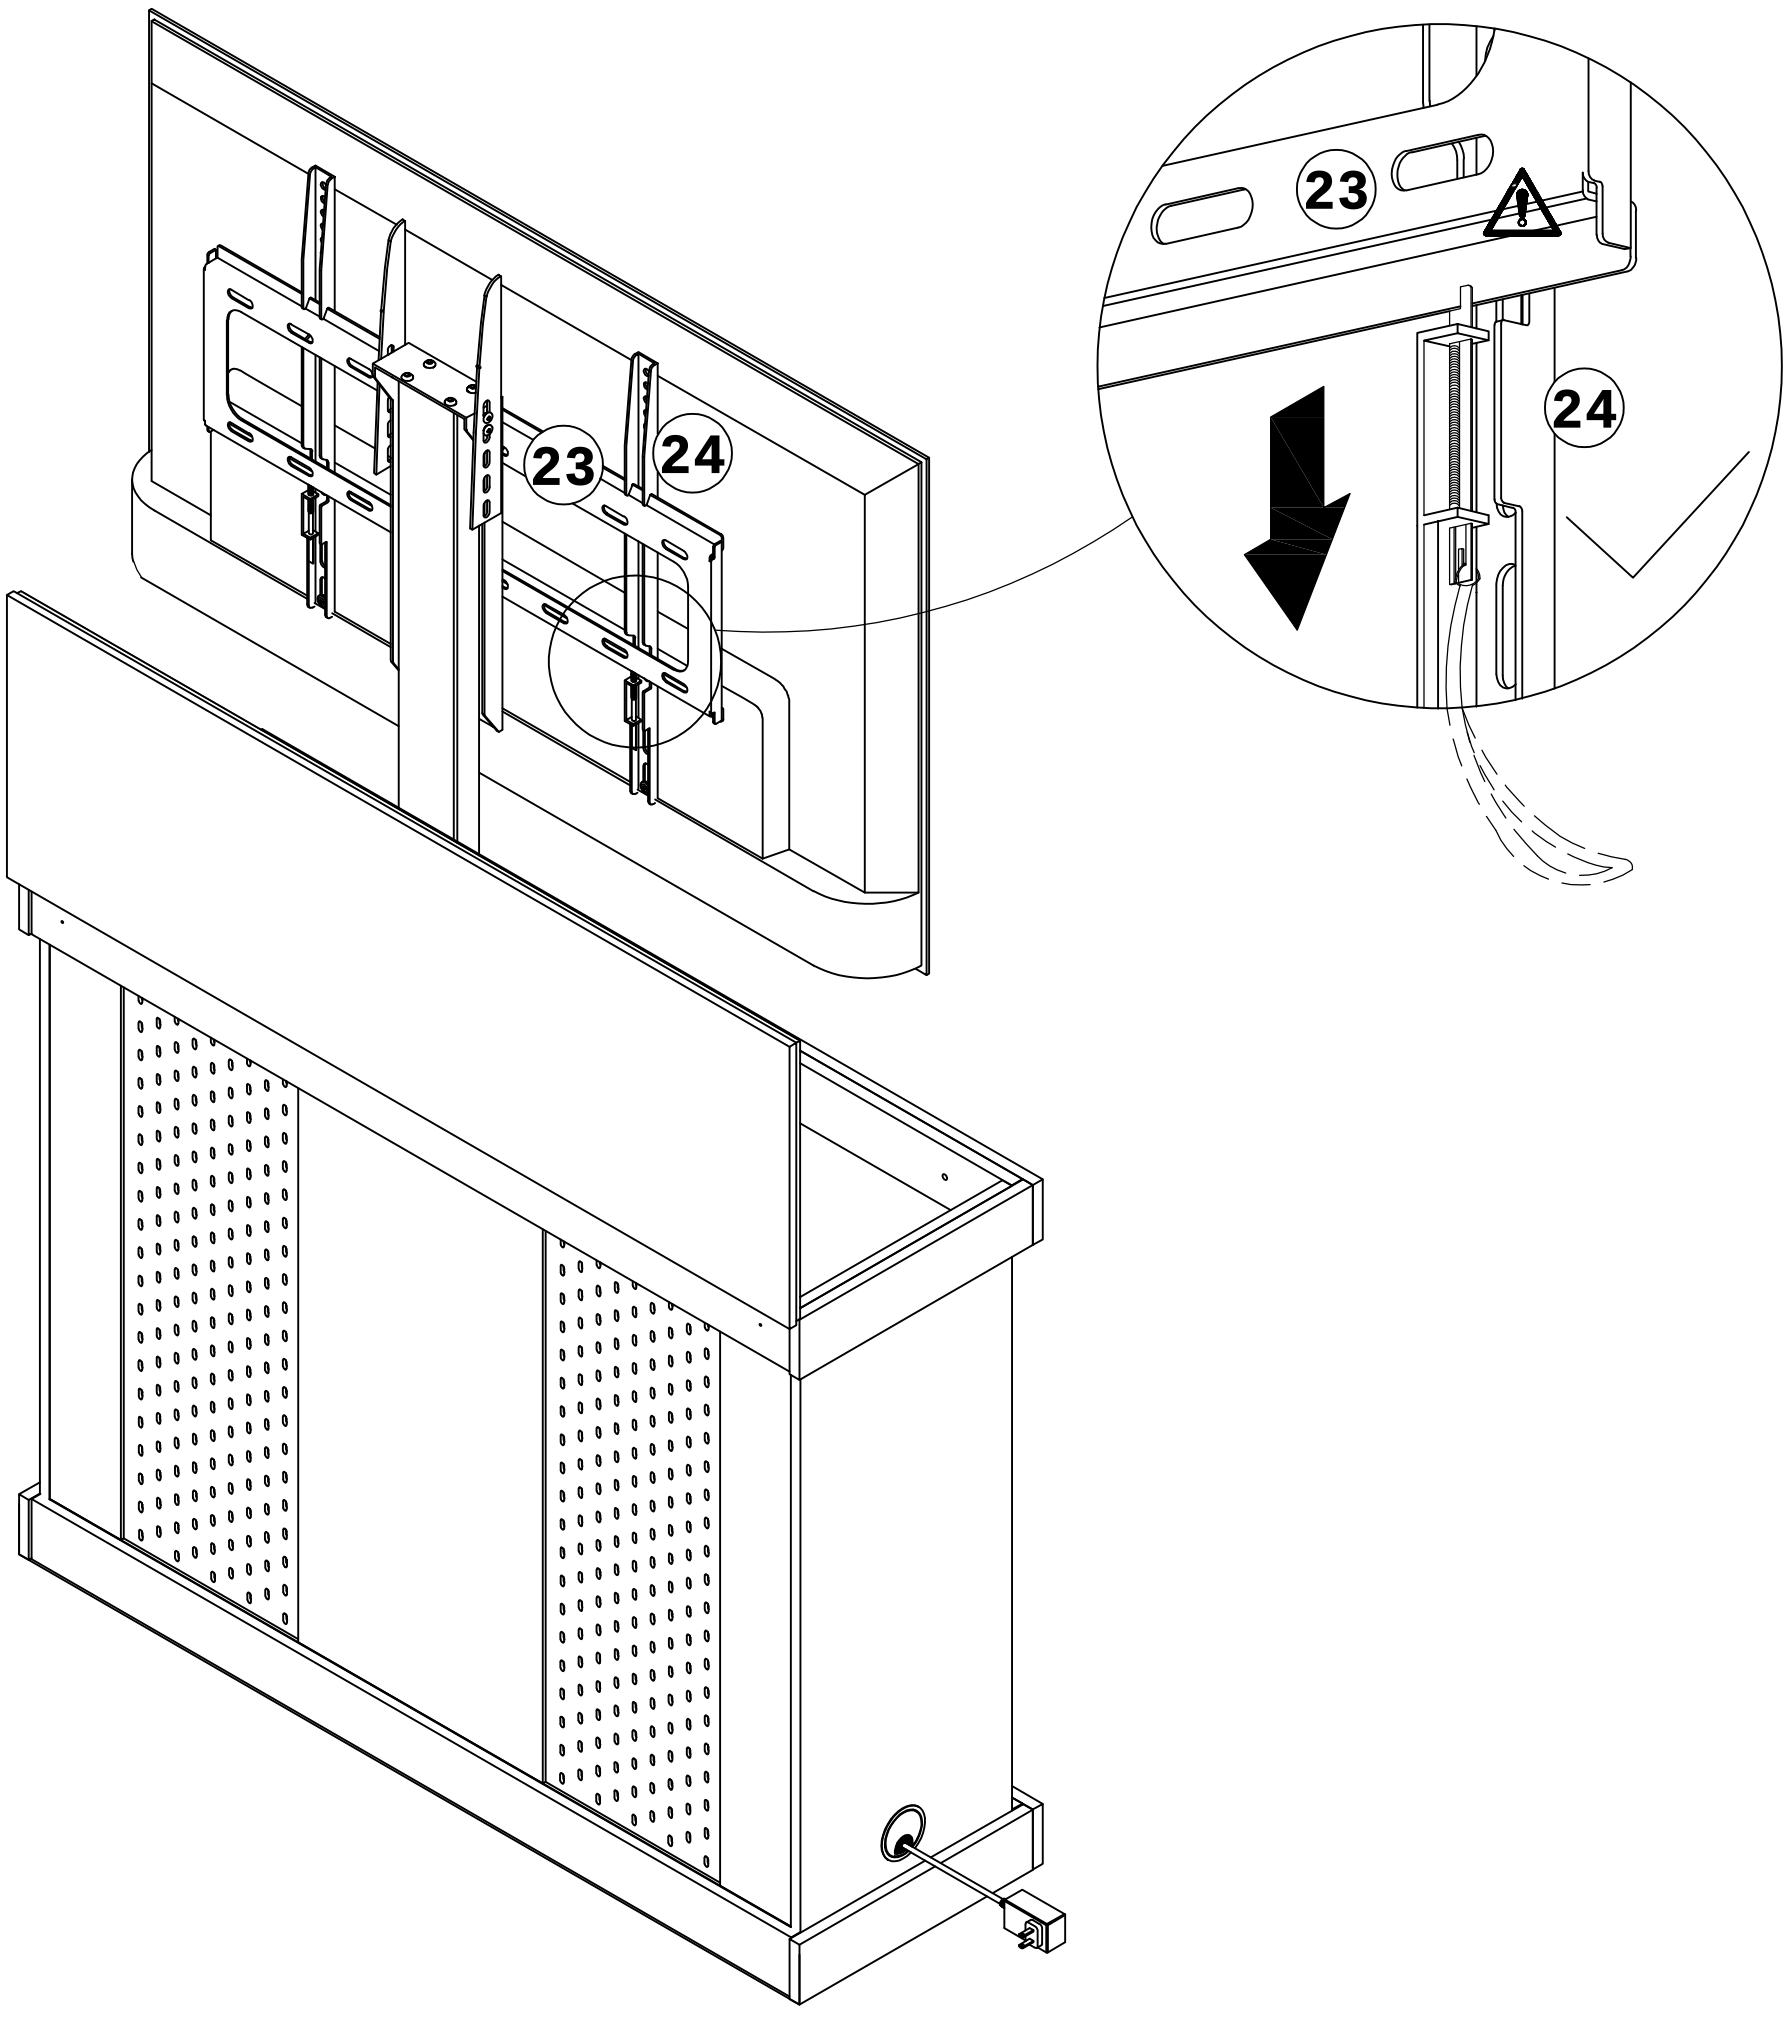


Note: The top height of the bracket needs to be higher than the TV.

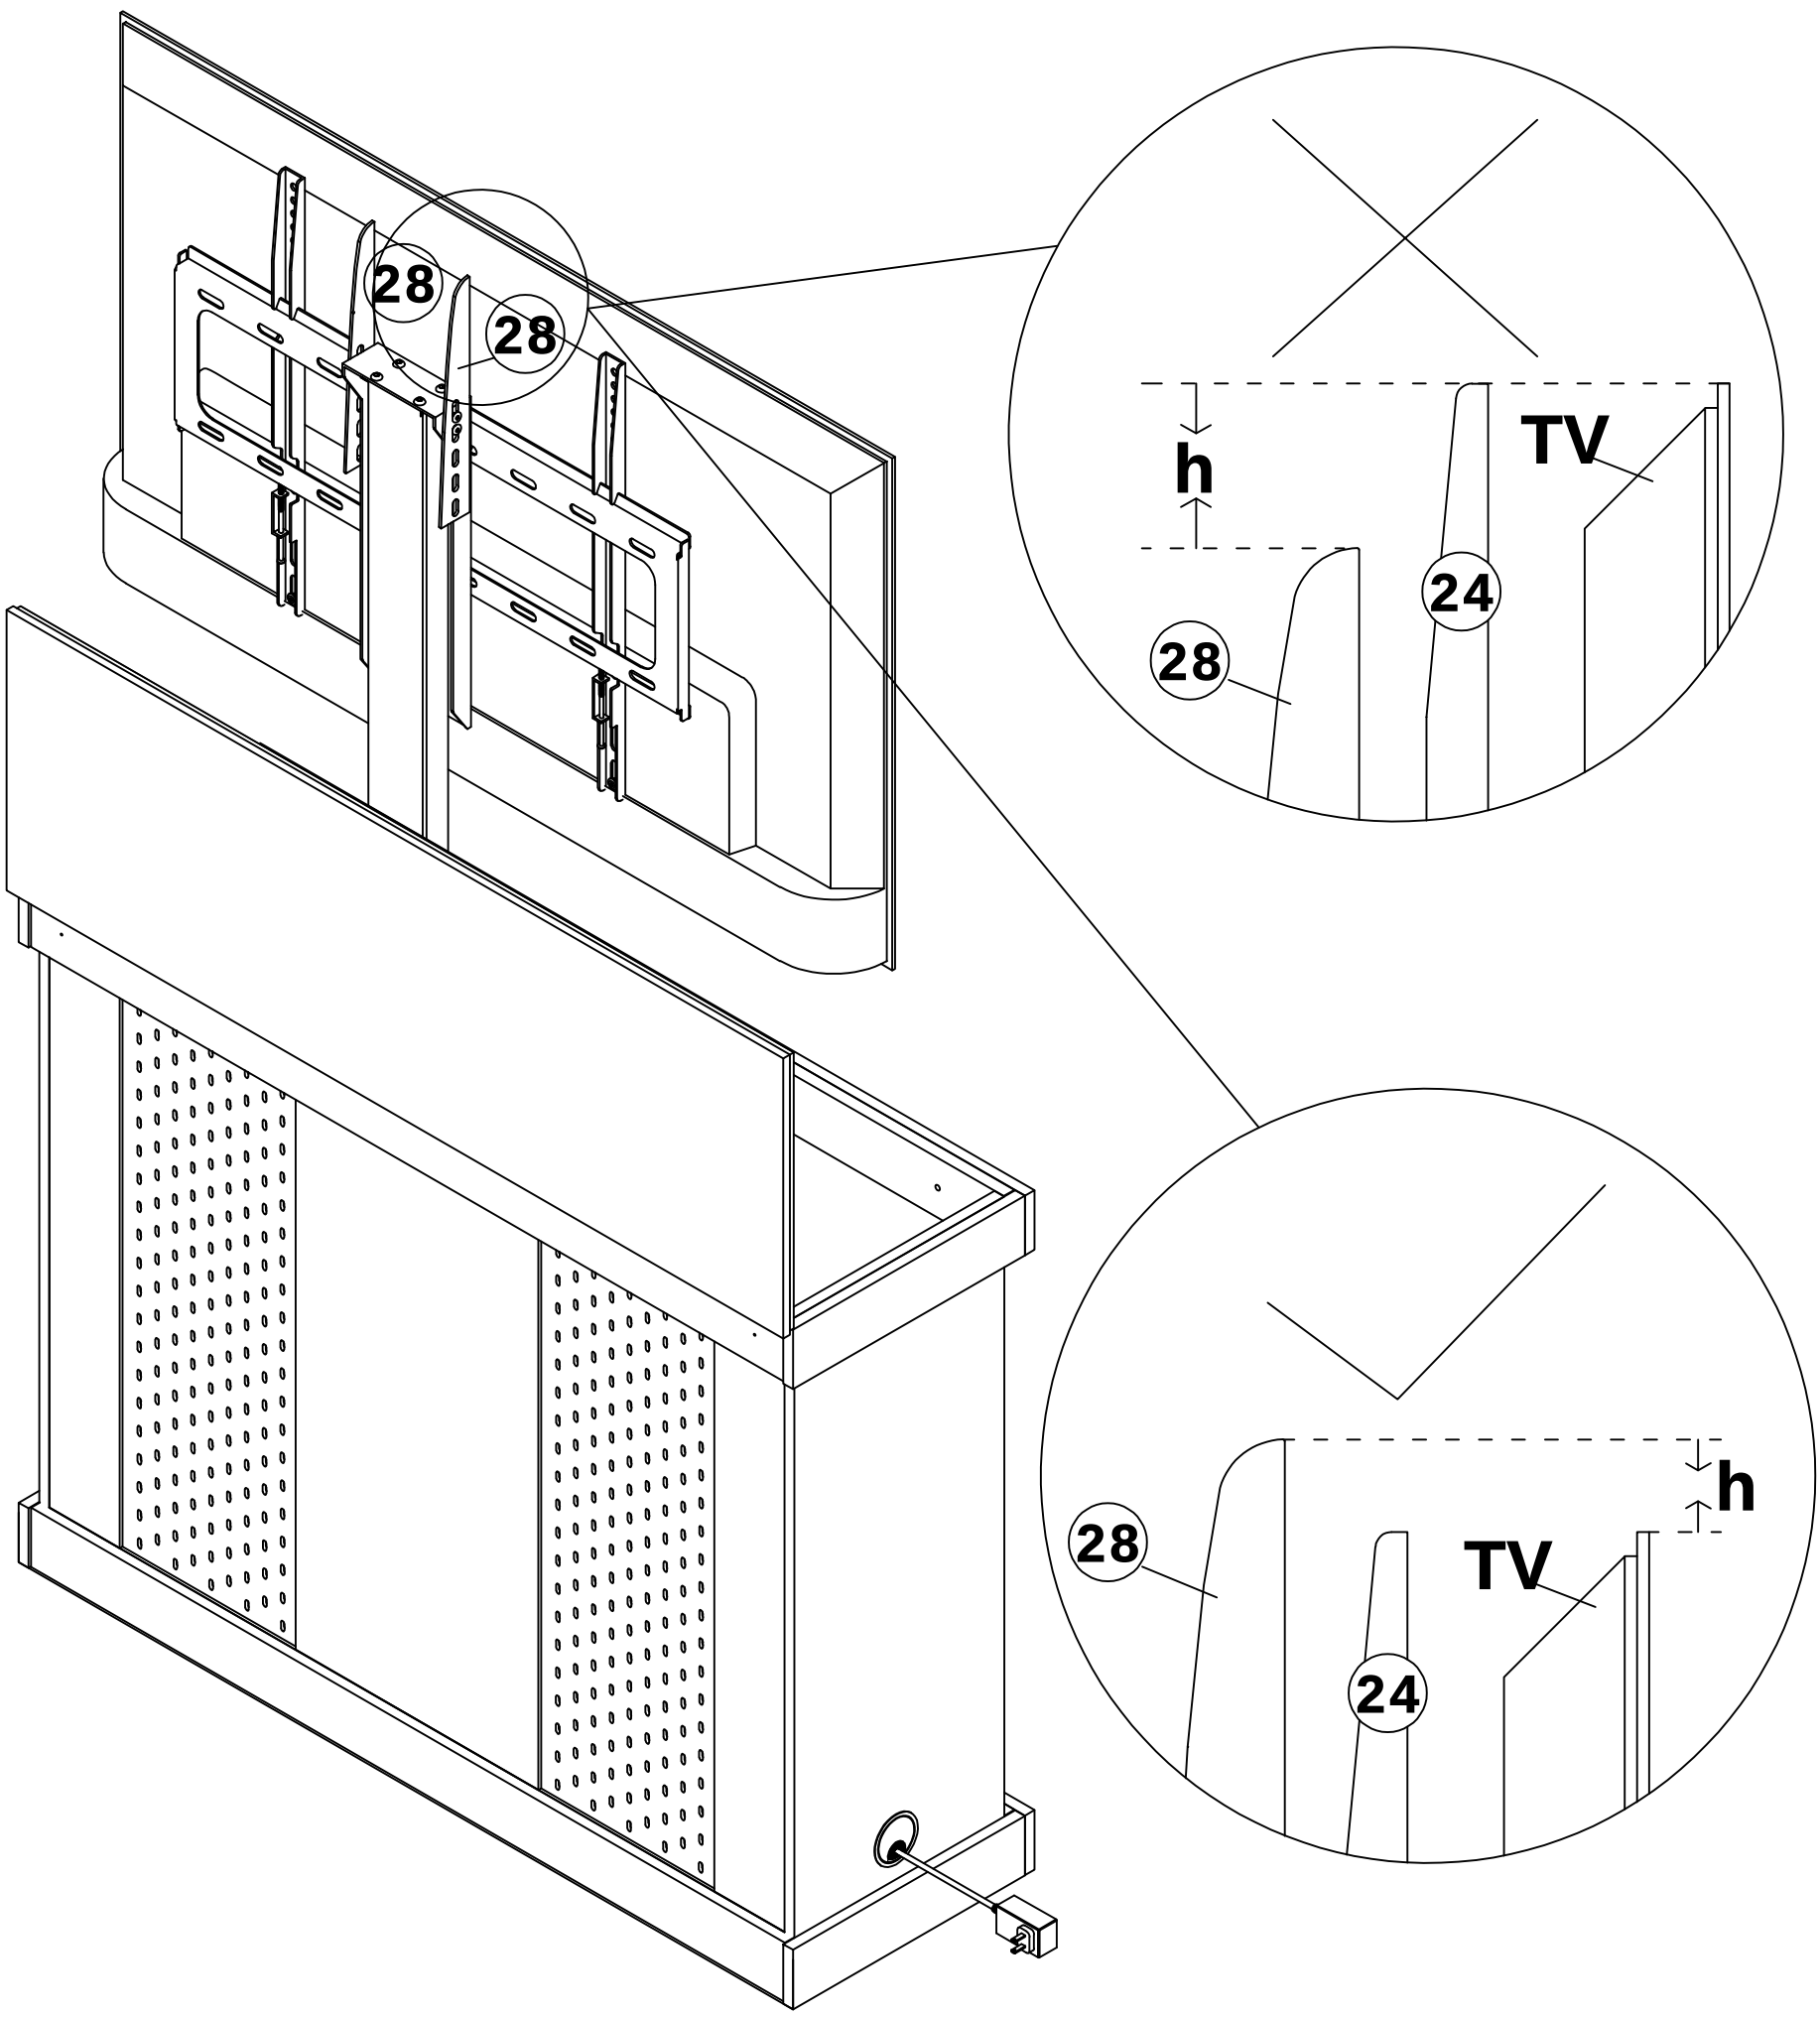

45


Use the remote control (27) to lower part (20) to the lowest height as shown.

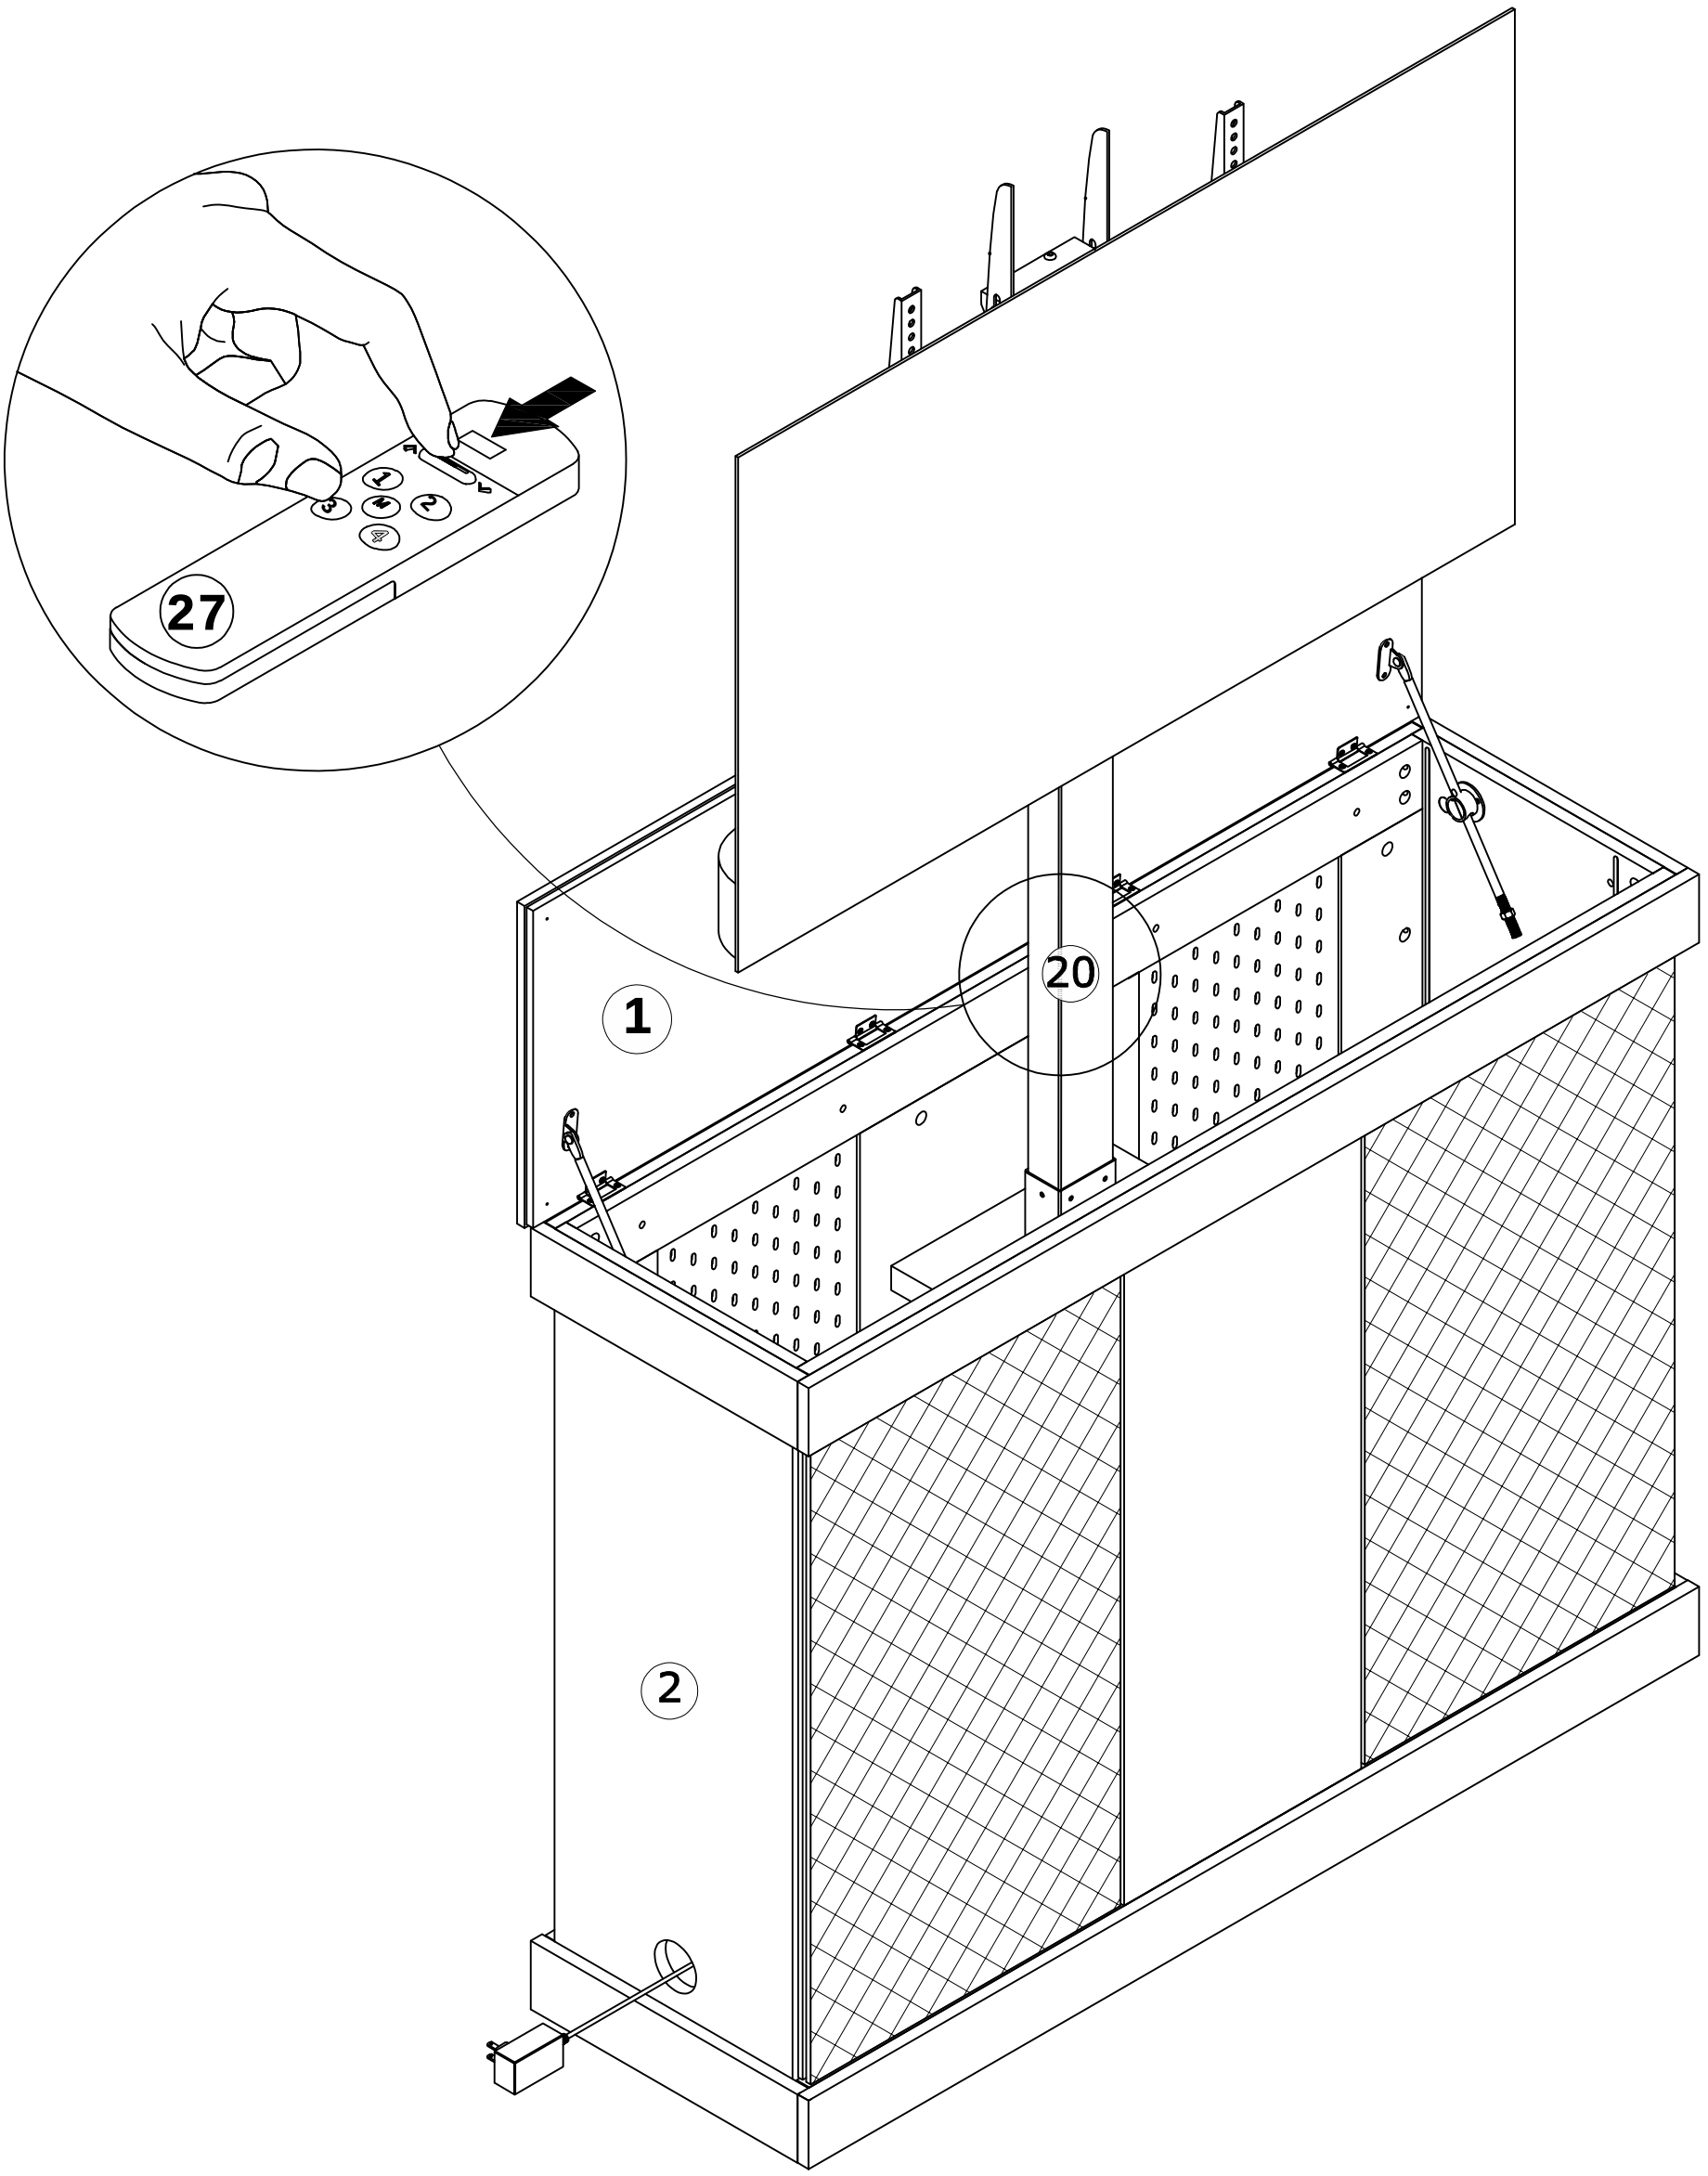

46


Q x 2



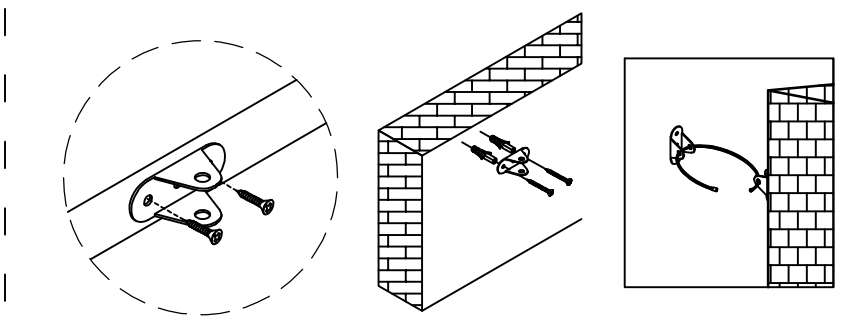


Anti-fall device installation process


Install the anti-fall device on the back of the cabinet.See the picure for installationmethod.

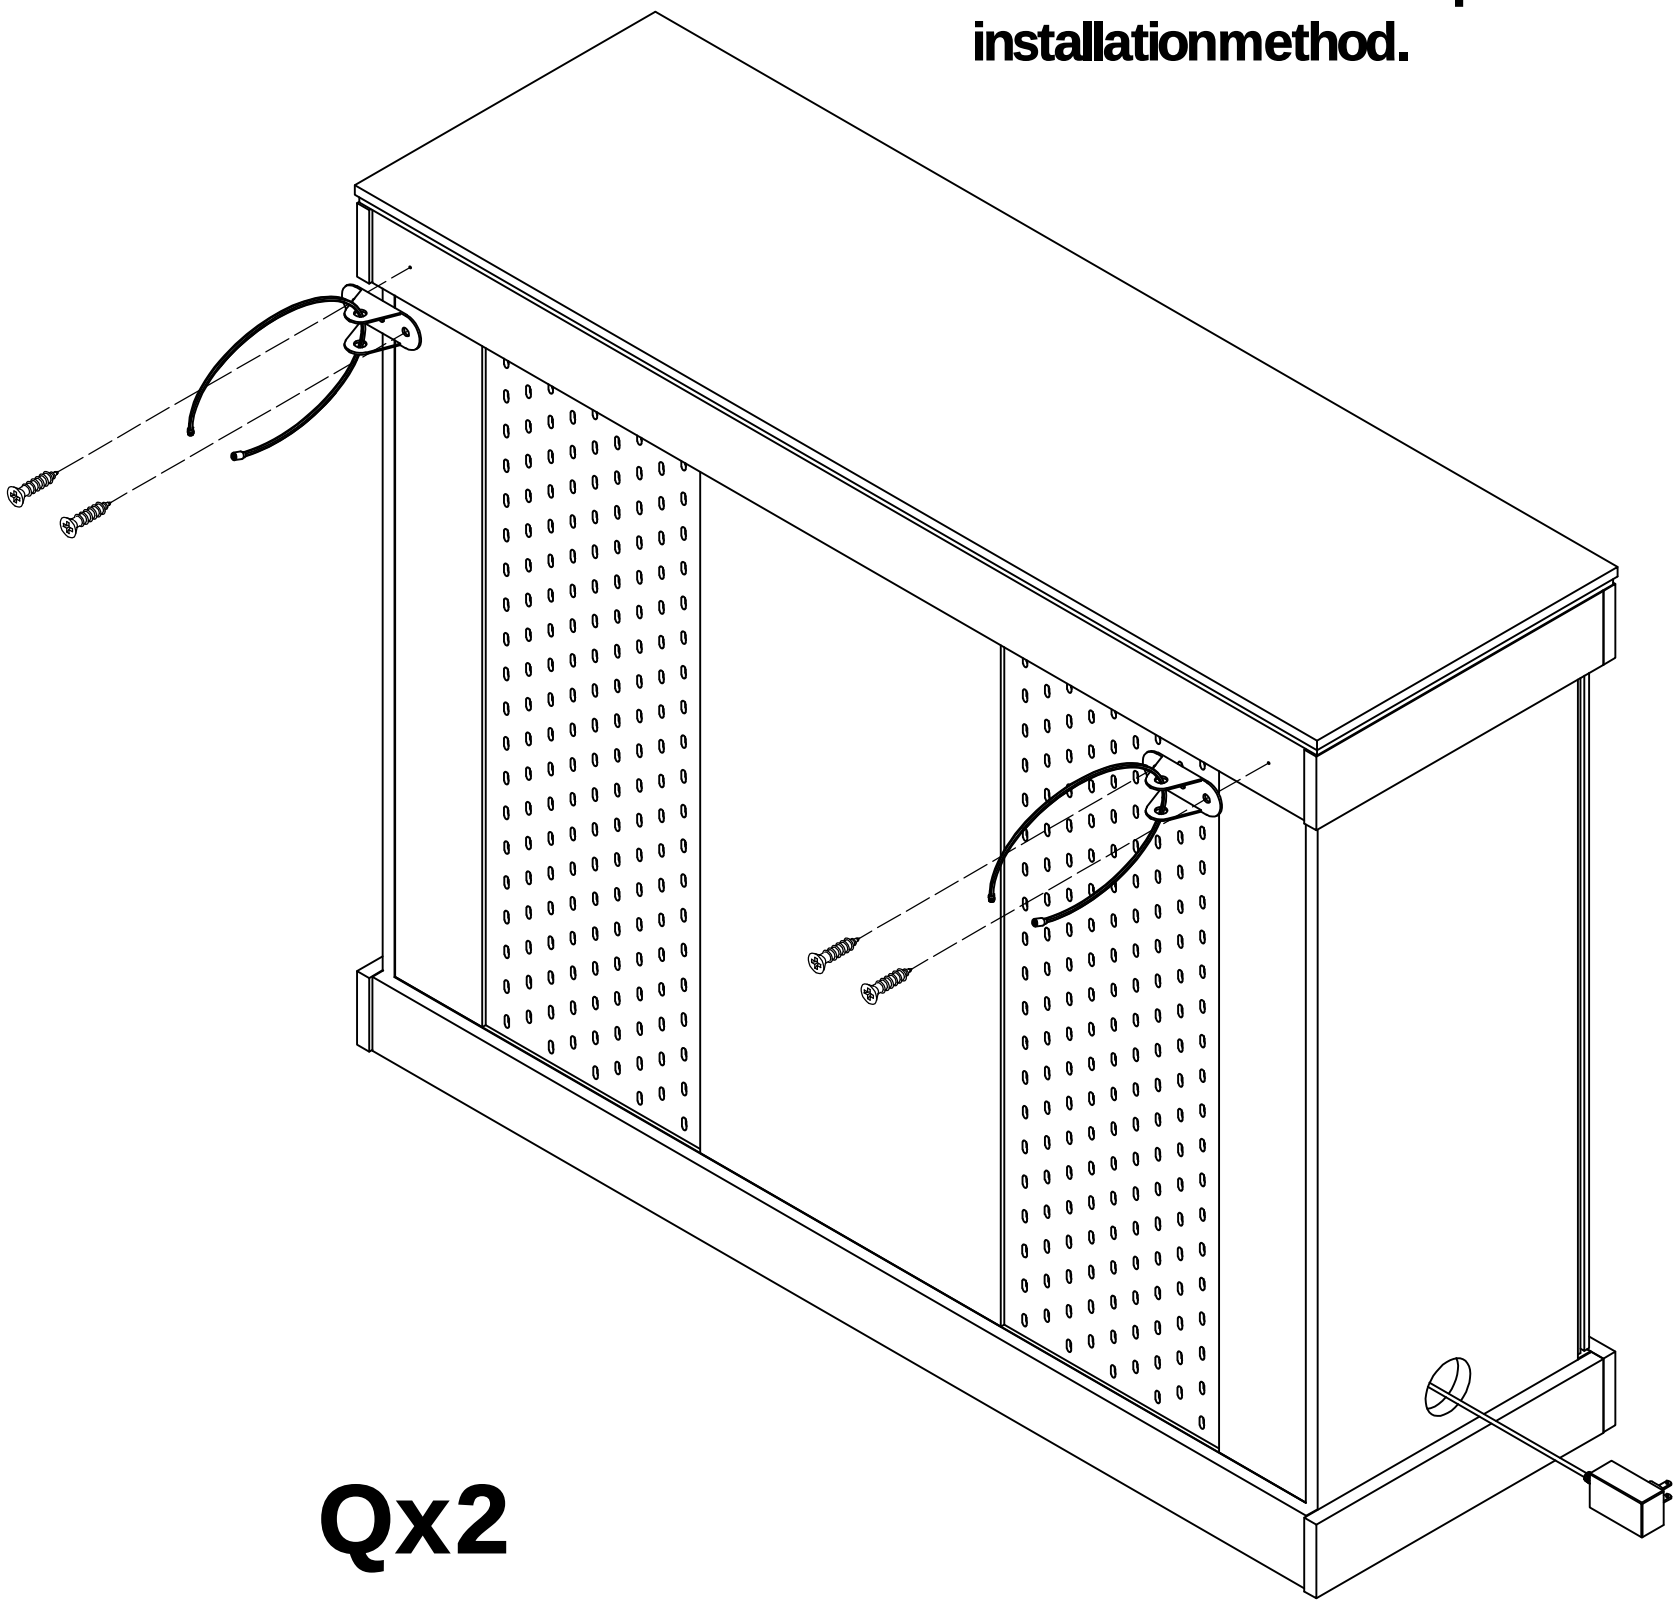

Qx2

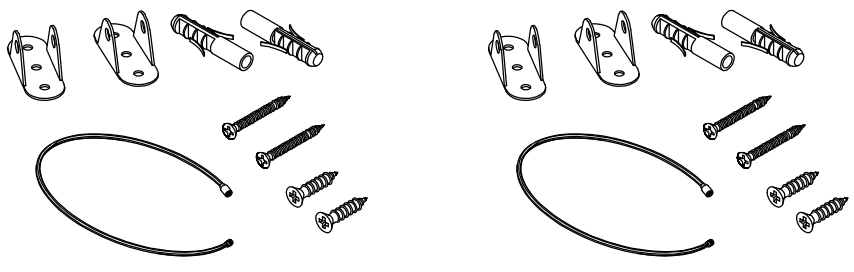

47

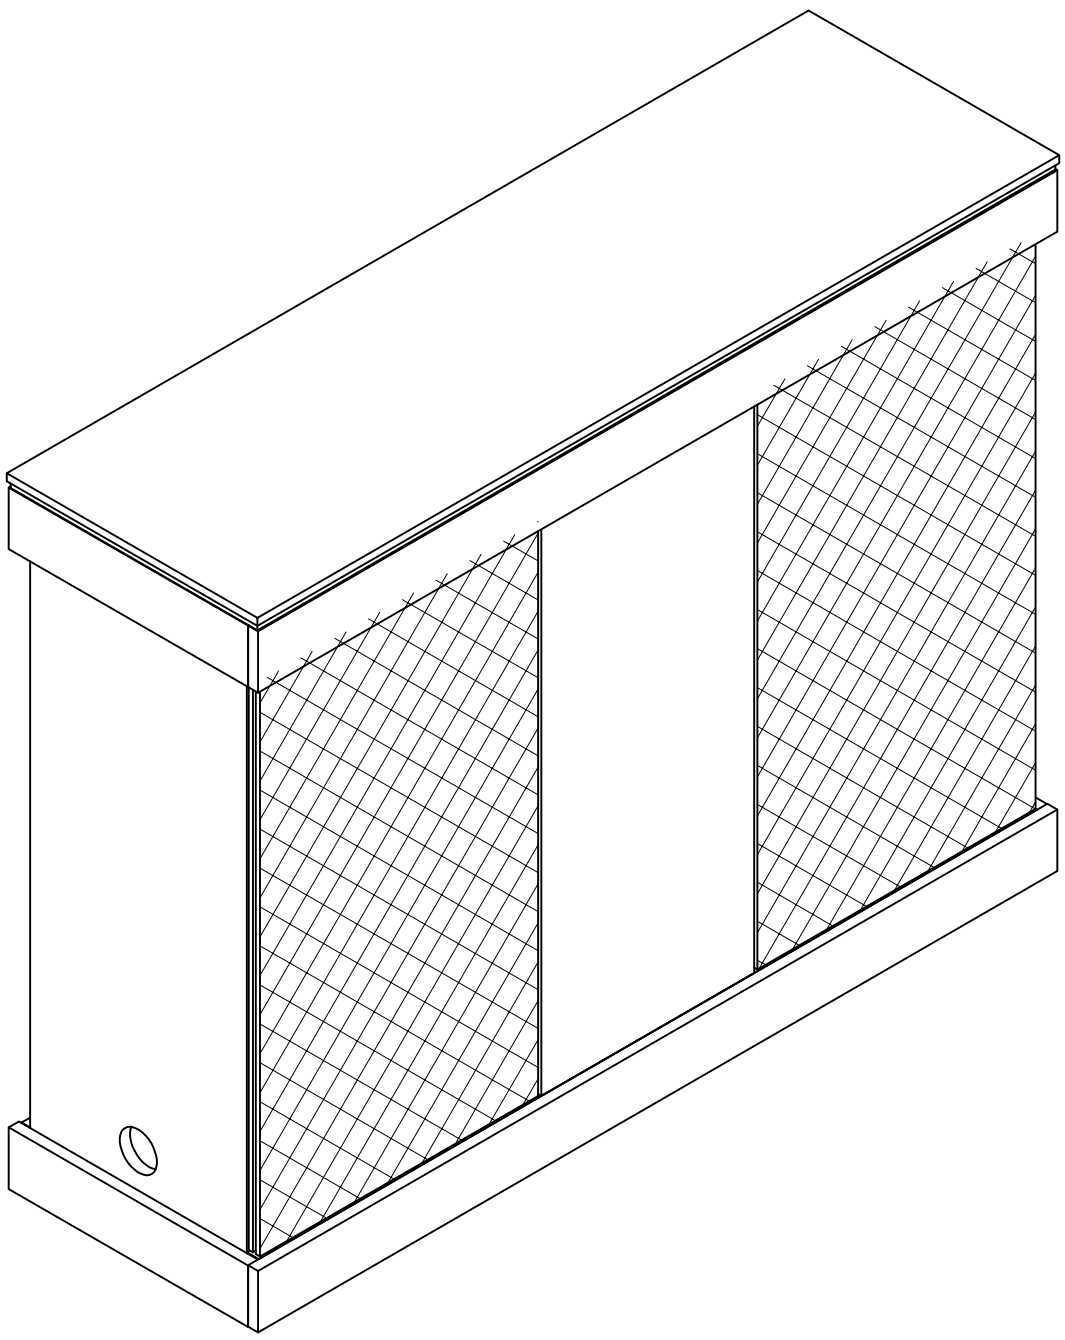

OK

WARRANTY

WARRANTY CLAIMS

.There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.

.Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.

.The product must be used in accordance with the instructions provided. For health reasons.

.For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

.Failure to follow the furniture instructions will invalidate the warranty. Attention please.

.Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

.Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.

.After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

.Sheet parts: 1 month from the date of purchase.

.Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

.If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

.If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

.If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order.
Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068
208-820-0799