INSTRUCTION MANUAL

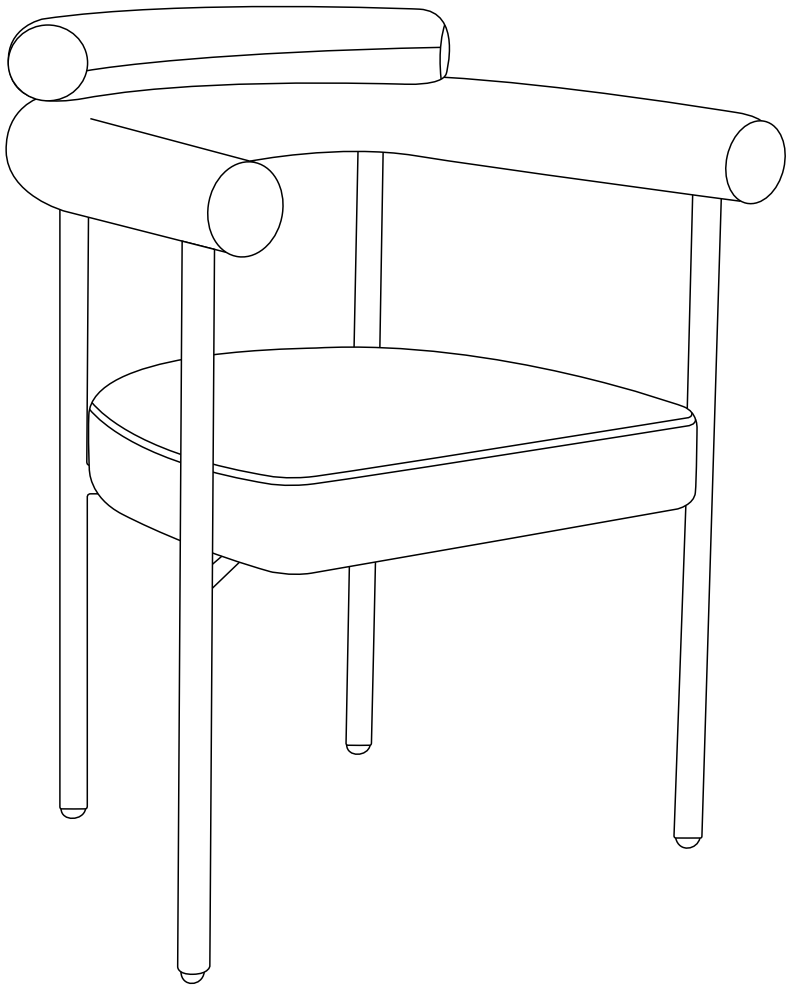

PARTS LIST

1 Back Foot



×1

2 Back Foot

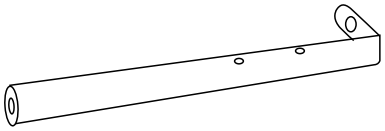

×1

3 Front Foot

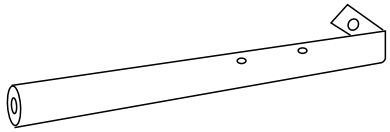

×1

4 Front Foot



×1

5 Metal Frame

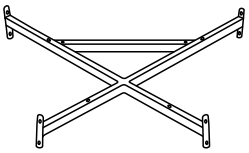

×1

6 Seat cushion



×1

7 Big backrest



×1

8 Small backrest



×1

A Screw



M6x13mm

×8

B Screw



M6x40mm

×4

C Screw



M8x18mm

×4

D Screw Rod



M8x100mm

×2

E Gasket



×8

F Gasket



×4

G Gasket



×6

H Screw Cap



×2

I Allen key



×1

J Leveling foot



×4

ATTENTION:
If there are missing parts please contact us asap.(The last page of the manual has our after-sales email address)

Back Foot

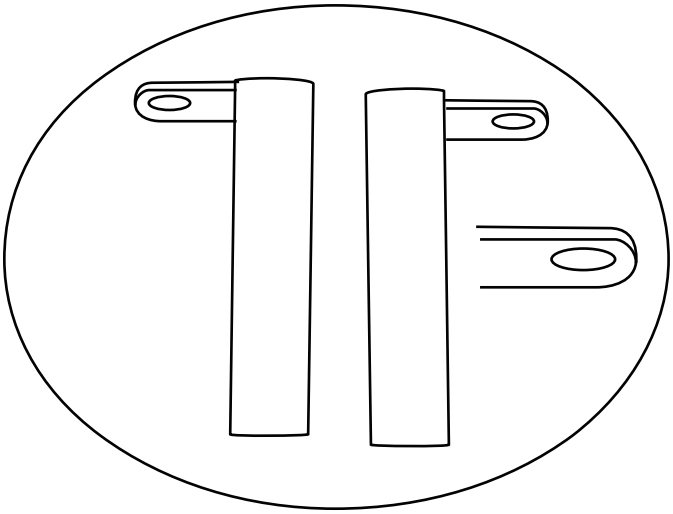

Front Foot

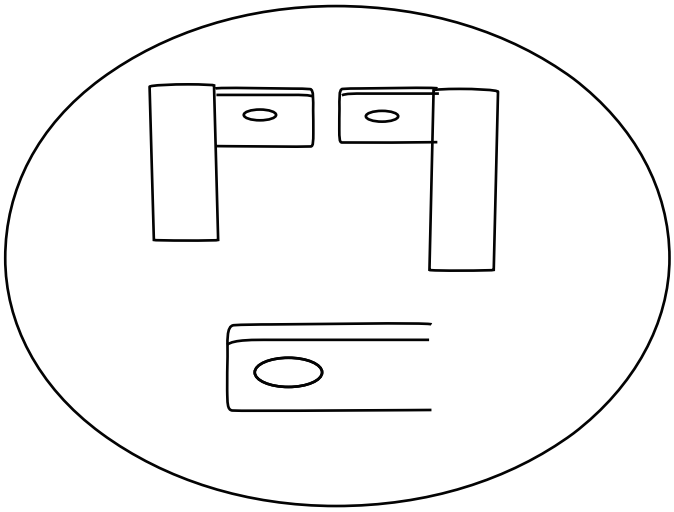

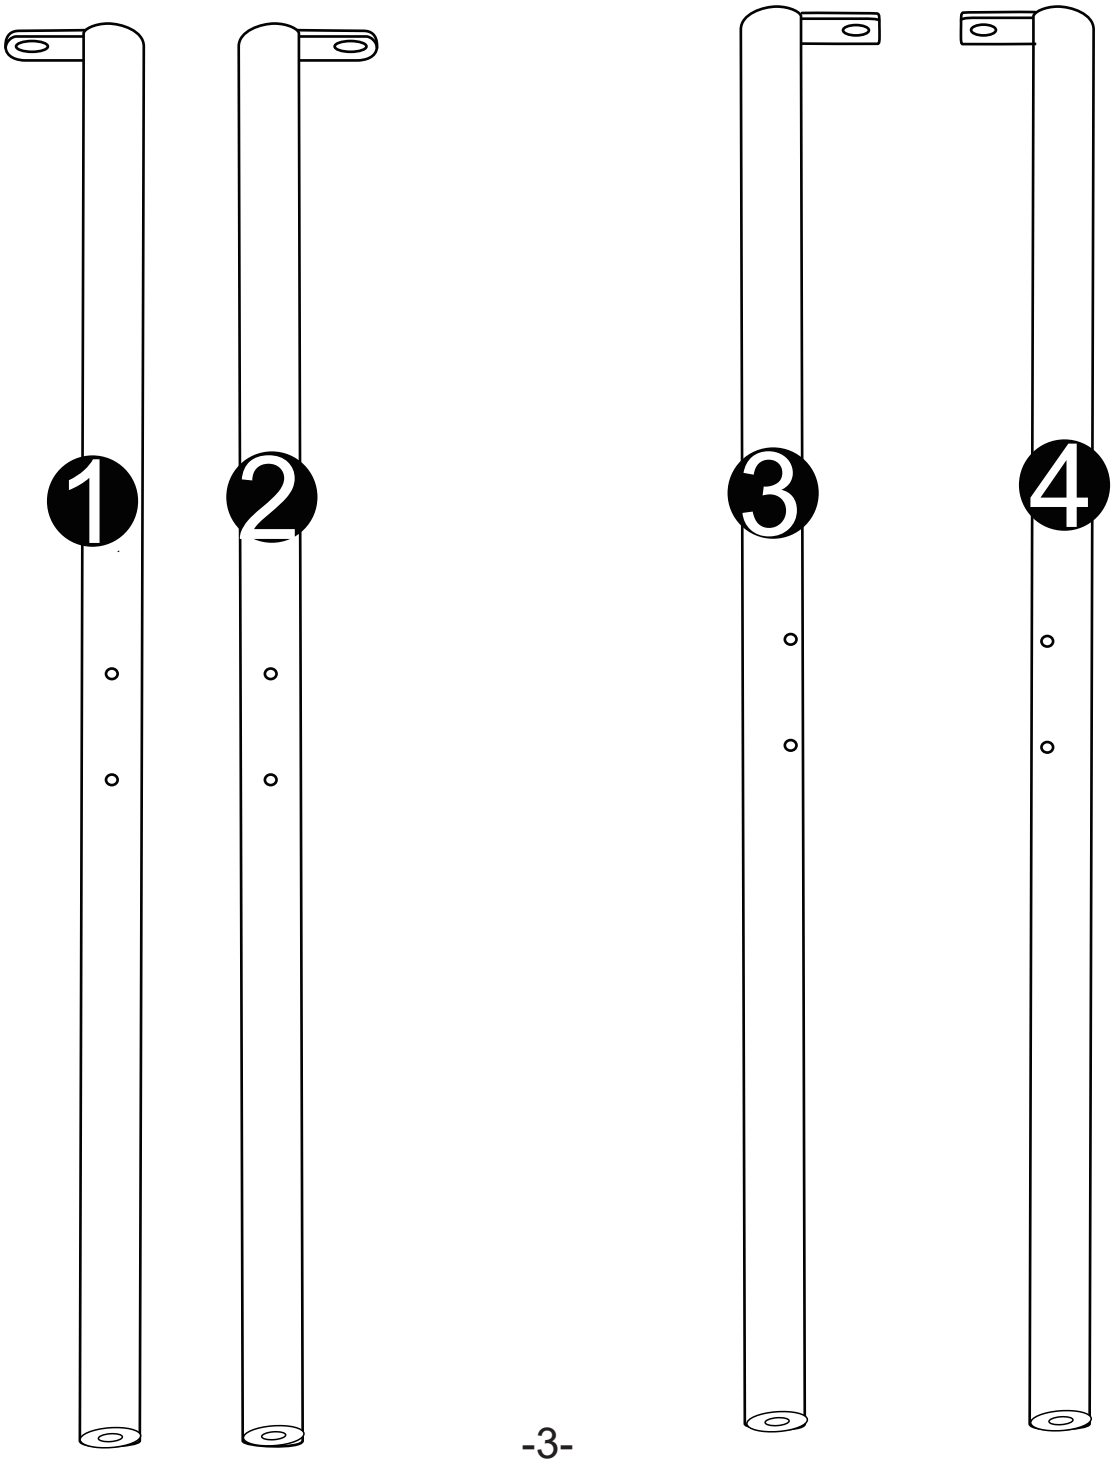

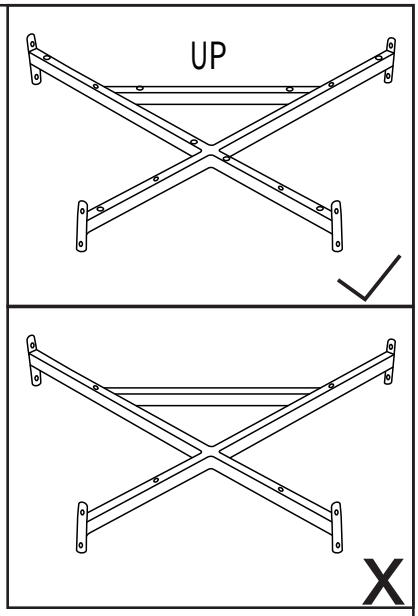

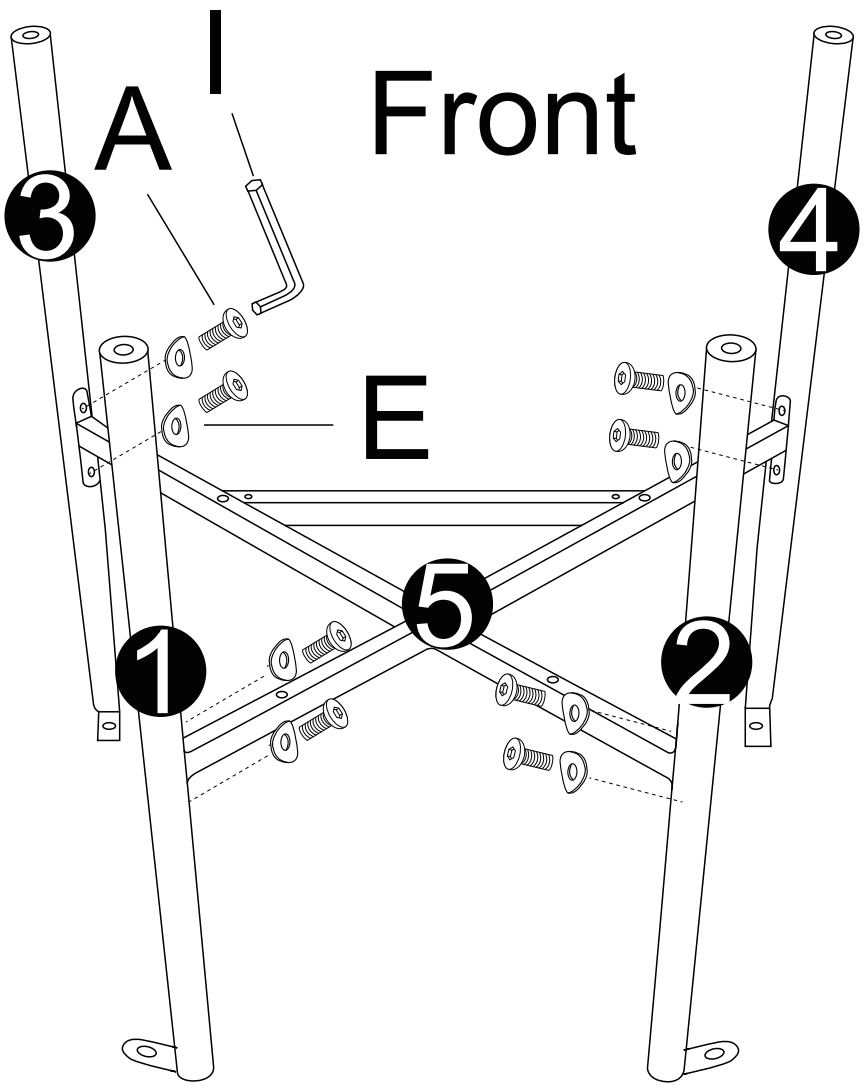

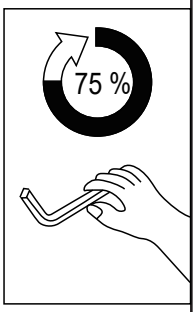

A	×8
E	×8
①	×1
②	×1
③	×1
④	×1
⑤	×1

Step 1: Insert part 5 into Leg 1,2,3,4 and secure them by means of the A screws, spacers E.
(Note: leg 3, 4 is the front leg and leg 1,2 is the back leg).
(All screws in this step need to be 75% tightened).

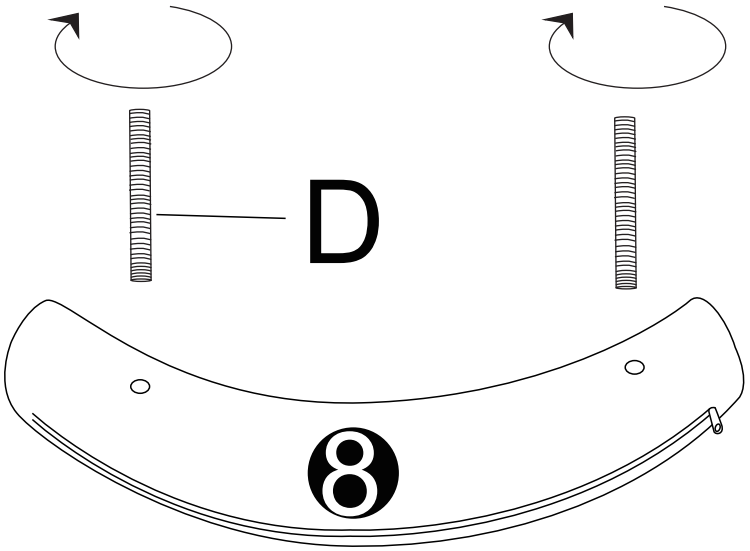

Small backrest

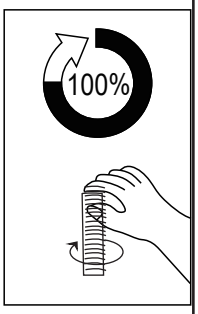

Step 2: Secure the part D into the hole of part 8 by rotating
(All screws in this step need to be 100% tightened) .

D	×2
⑧	×1

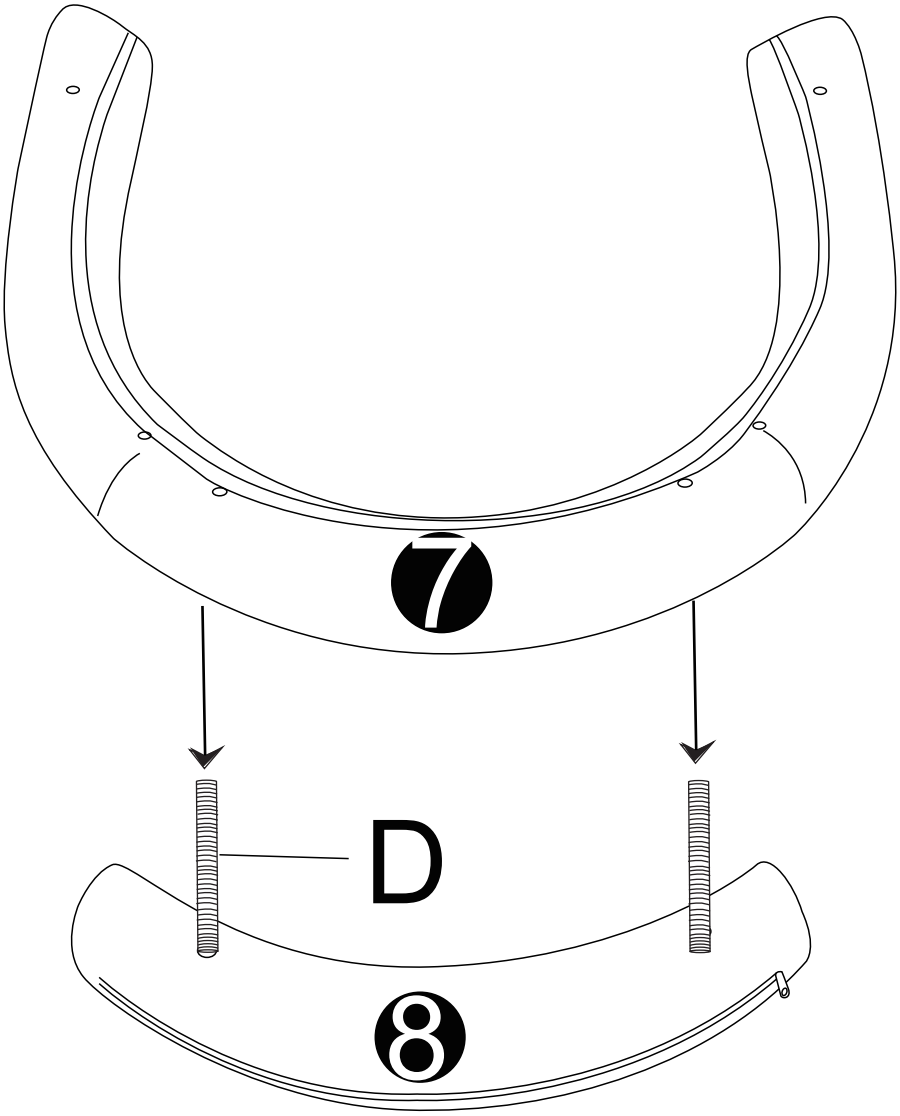

Small backrest

Step 3: Insert part 7 into part D

⑦	×1

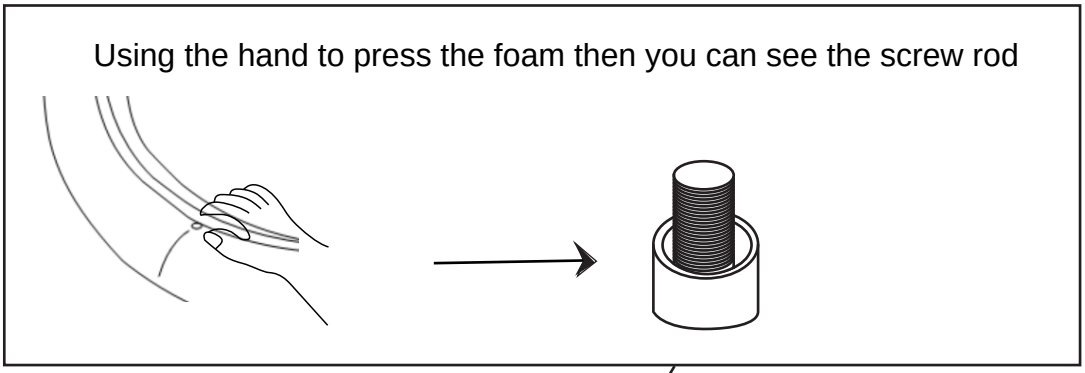

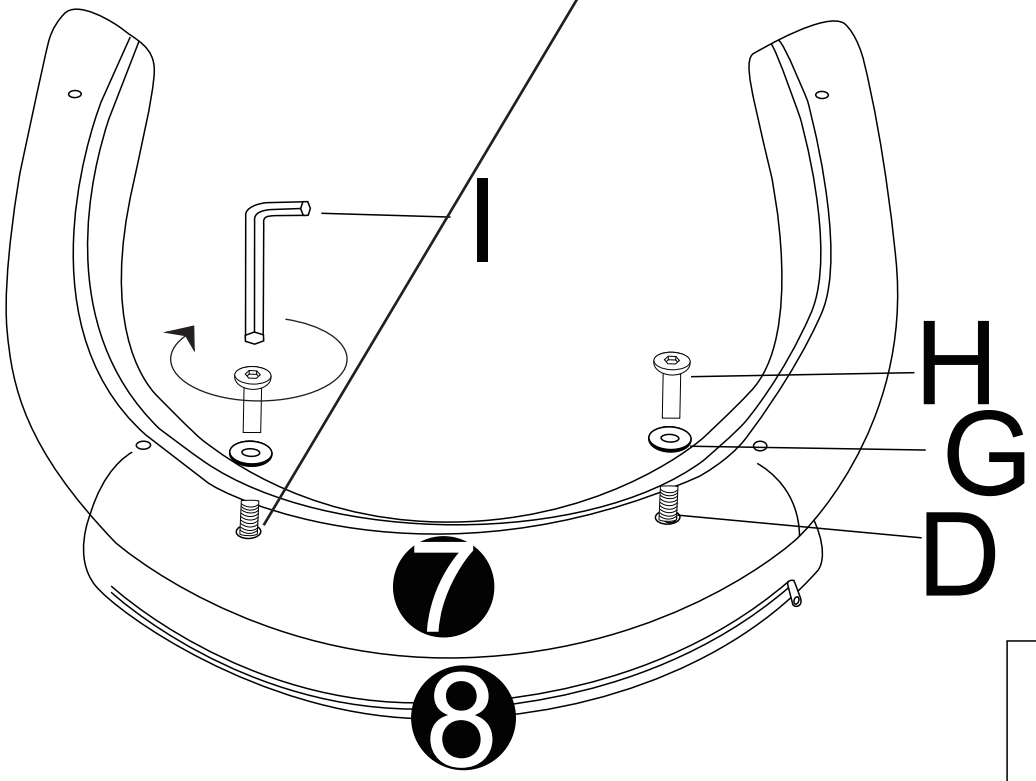

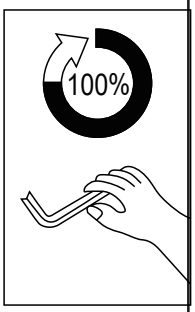

Step 4: Secure the part 7 and part 8 by means of screws H, spacers G
(All screws in this step need to be100% tightened).

H	×2
G	×2

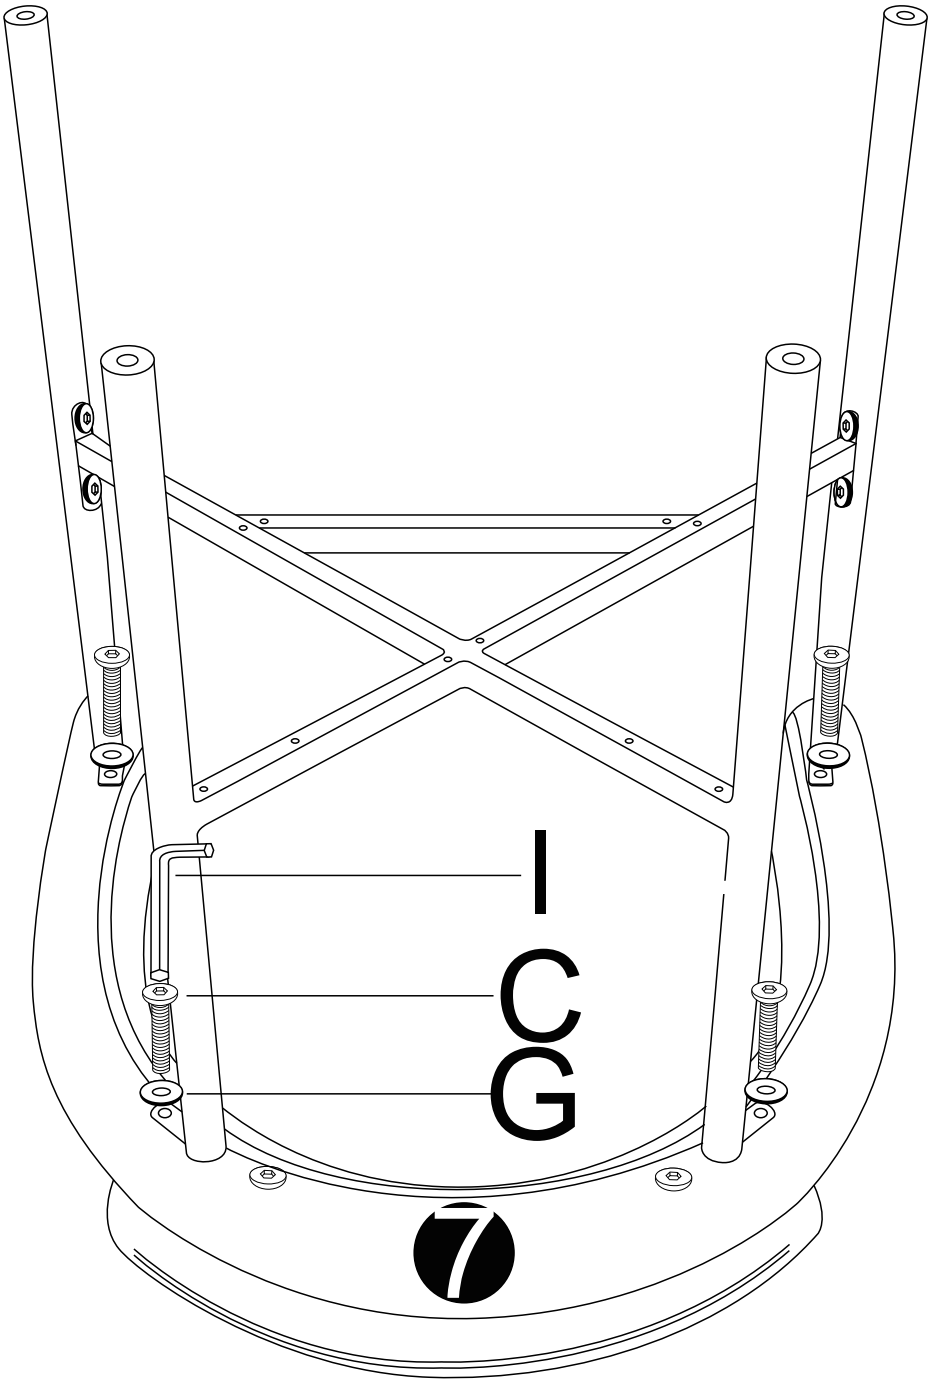

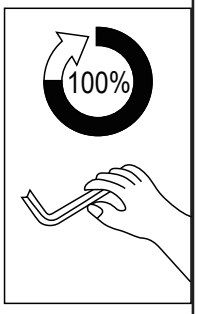

Step 5: Secure the metal frame to the part 7 by means of screws C, spacers G
(All screws in this step need to be100% tightened).

C	×4
G	×4

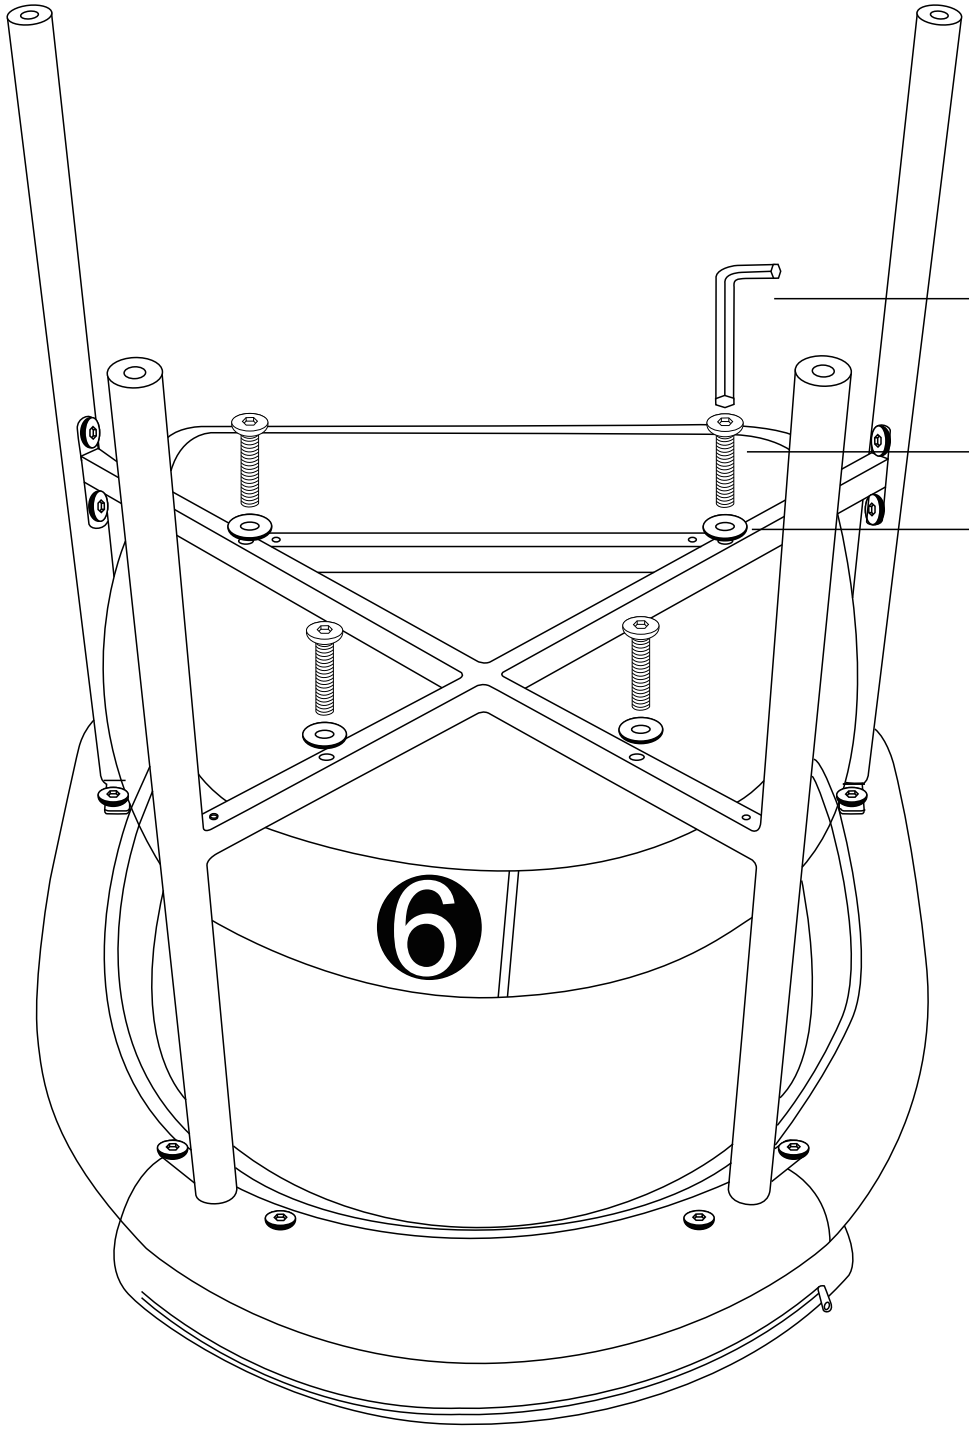

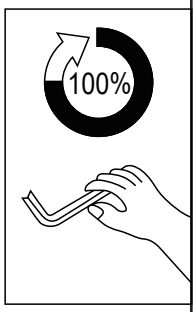

Step 6: Secure the part 6 to the middle of the leg by means of screw B,spacers F.
(All screws in this step need to be 100% tightened).

B	×4
F	×4
⑥	×1

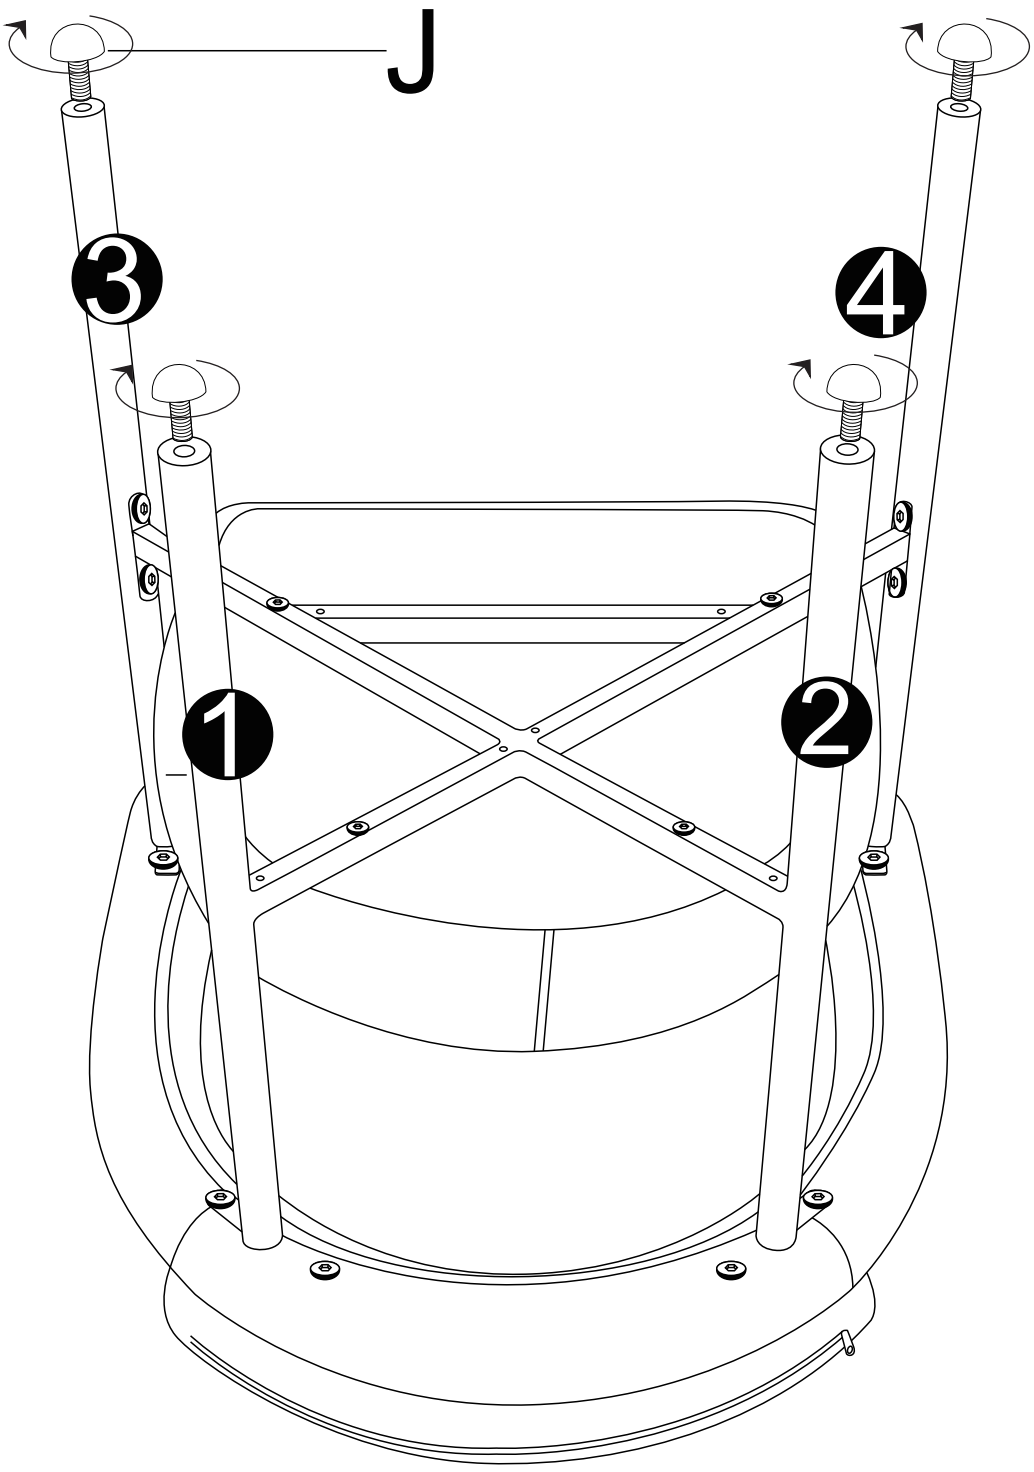

Step 7: Secure the part J to the leg 1,2,3,4

J	×4

