
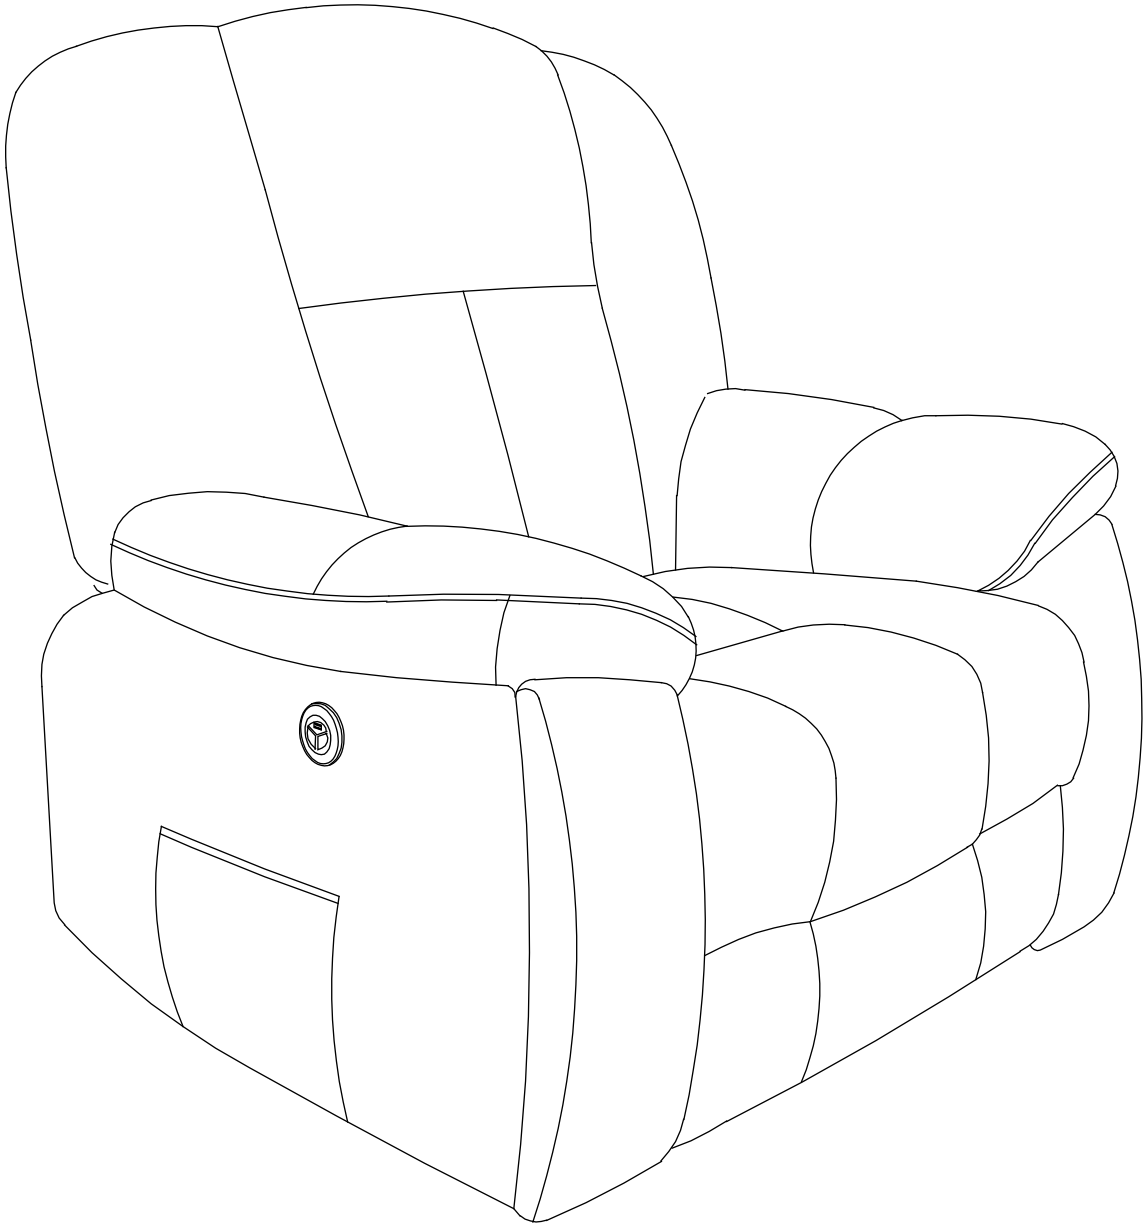


INSTRUCTION MANUAL


Assembly Instruction

Ax1

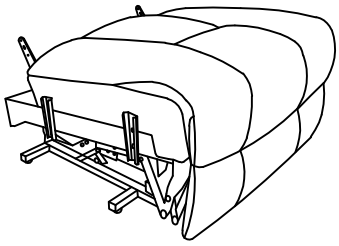


Seat

Gx1

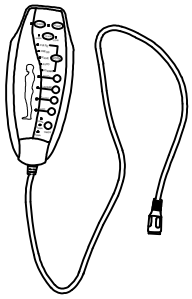


Massager remote control board

Ix1

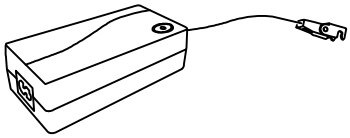


Power supply

Jx2

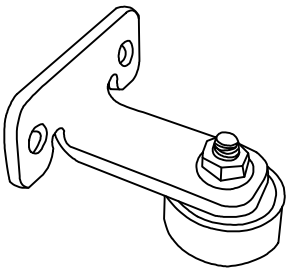


Foot support frame

Kx4

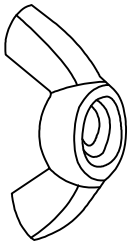


M6 claw nut

Lx5

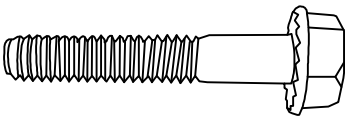


screw M6 * 40mm

Xx1



Power line

Bx1

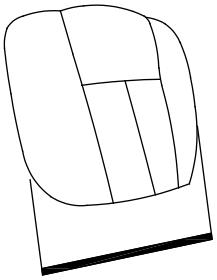

Back

F(L)x1



(L)

handrail


F(R)x1




(R)

handrail


Step 1 urn the screw L through the support frame J and seat cushion frame in succession,then secure it with the nut K and the screw L.

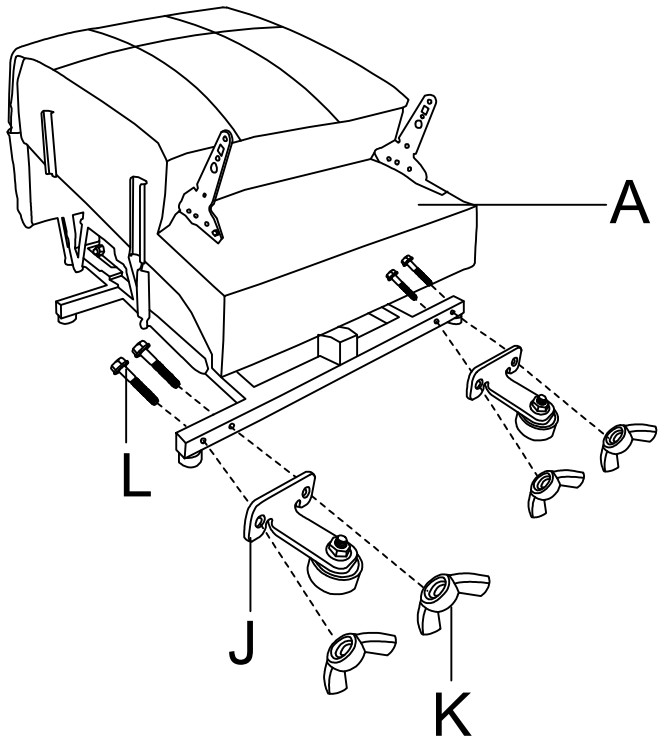


Step 2 Insert the arms into the seat in a way that they fit properly .
You will hear a click when they are securely engaged.

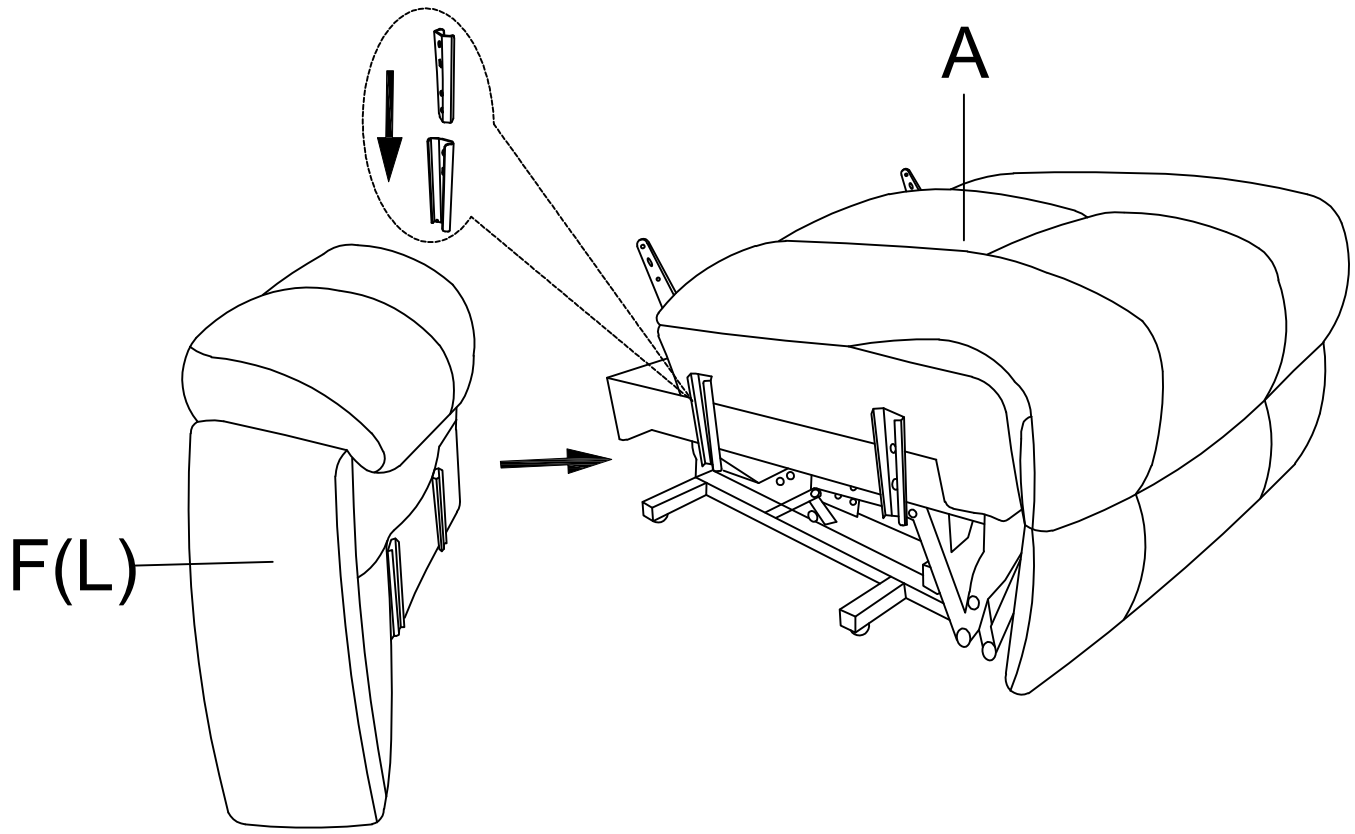


Step 3 Repeat Step 2.

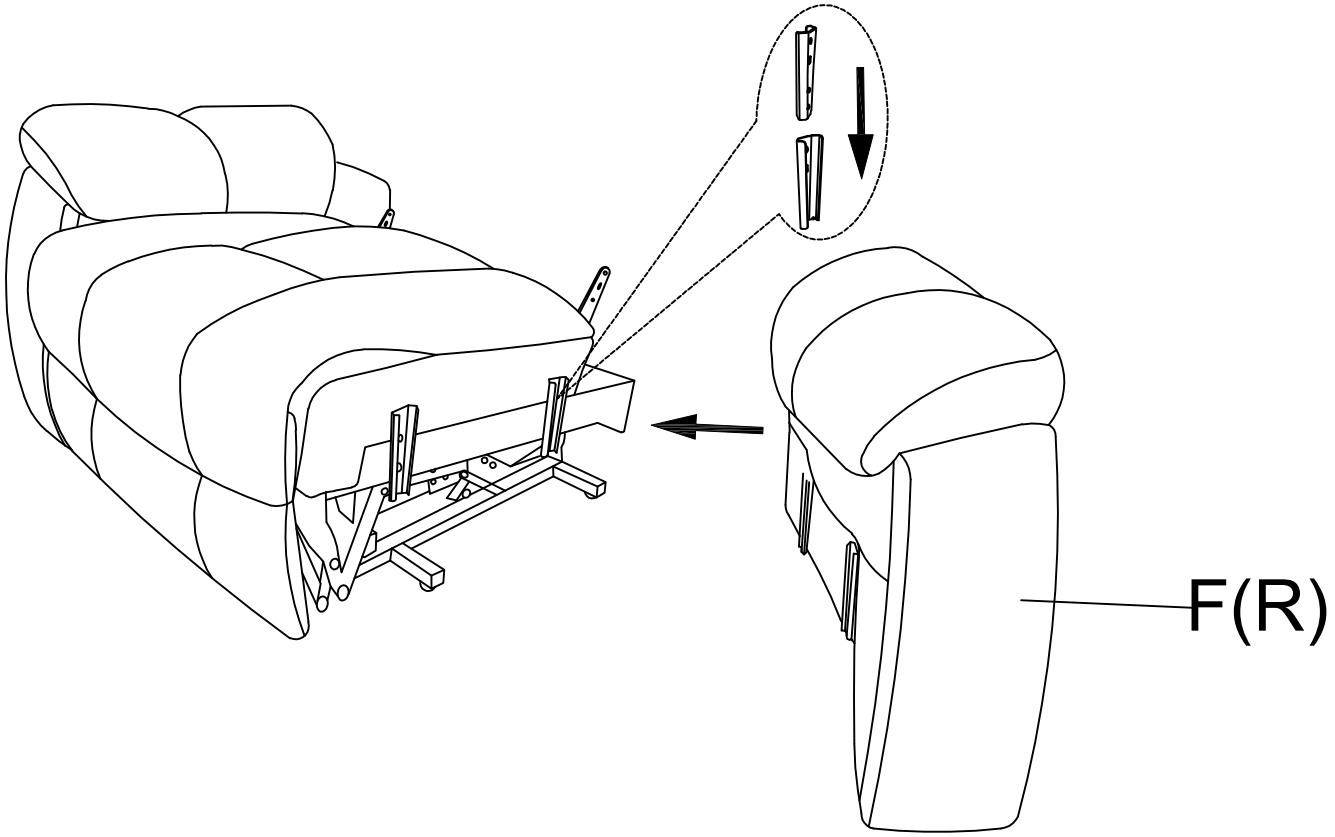


Step 4 Plug the back pad into the seat frame , then connect the massager lines: white with white , red with red , black with the power lines , connect the massage line with the hand controller.

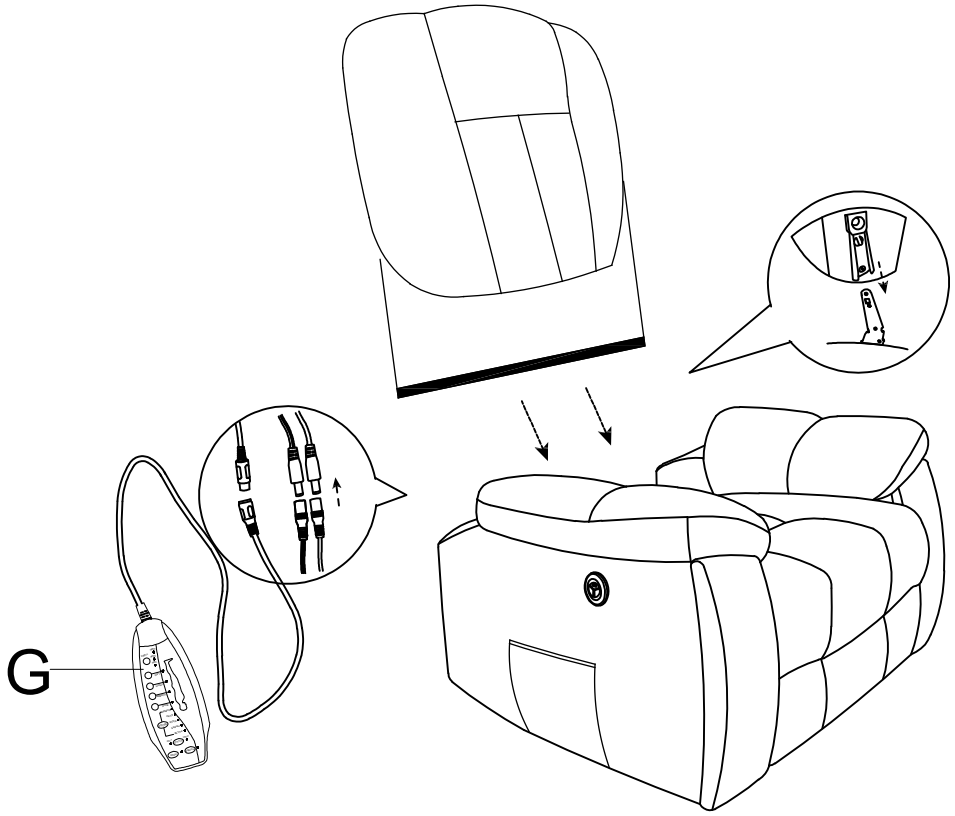


Step 5 Connect the power adapter to the motor cable, connect the cable on the armrest side to a suitable plug, connect the backrest power cable to the remaining plug, and lock all locking cables. Finally, connect the power cord to the power adapter.

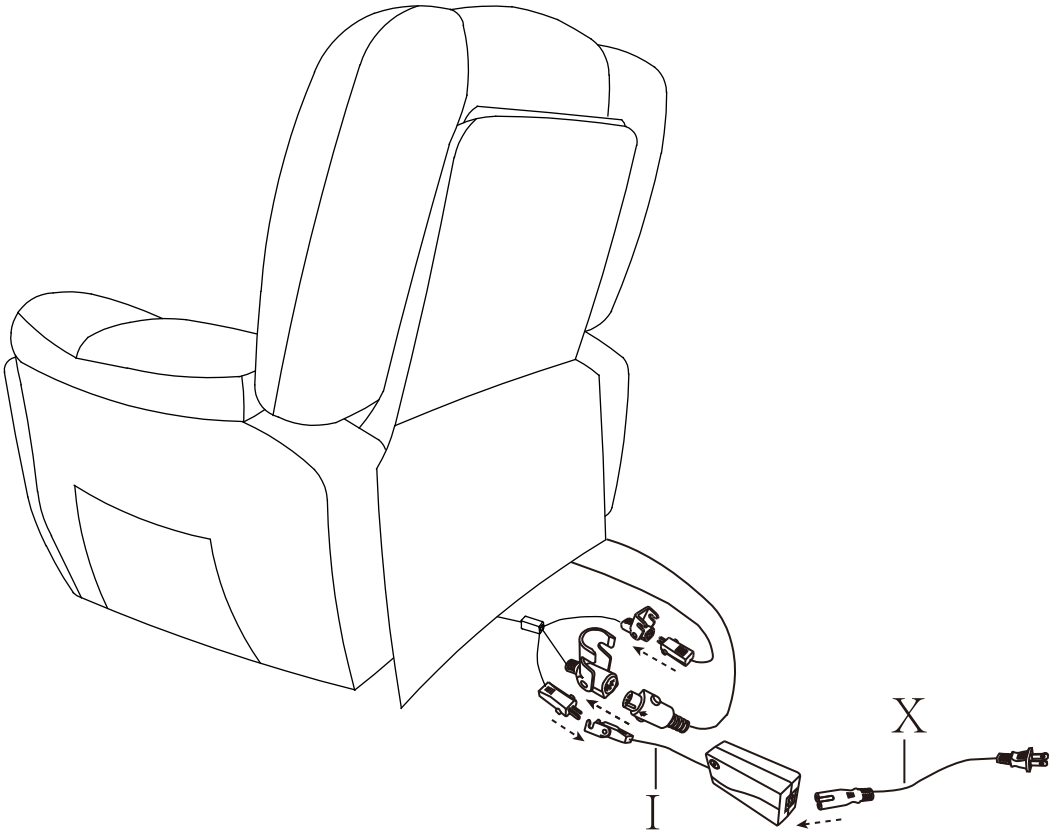


Step 6 Stick the Velcro on the back tightly under the seat.

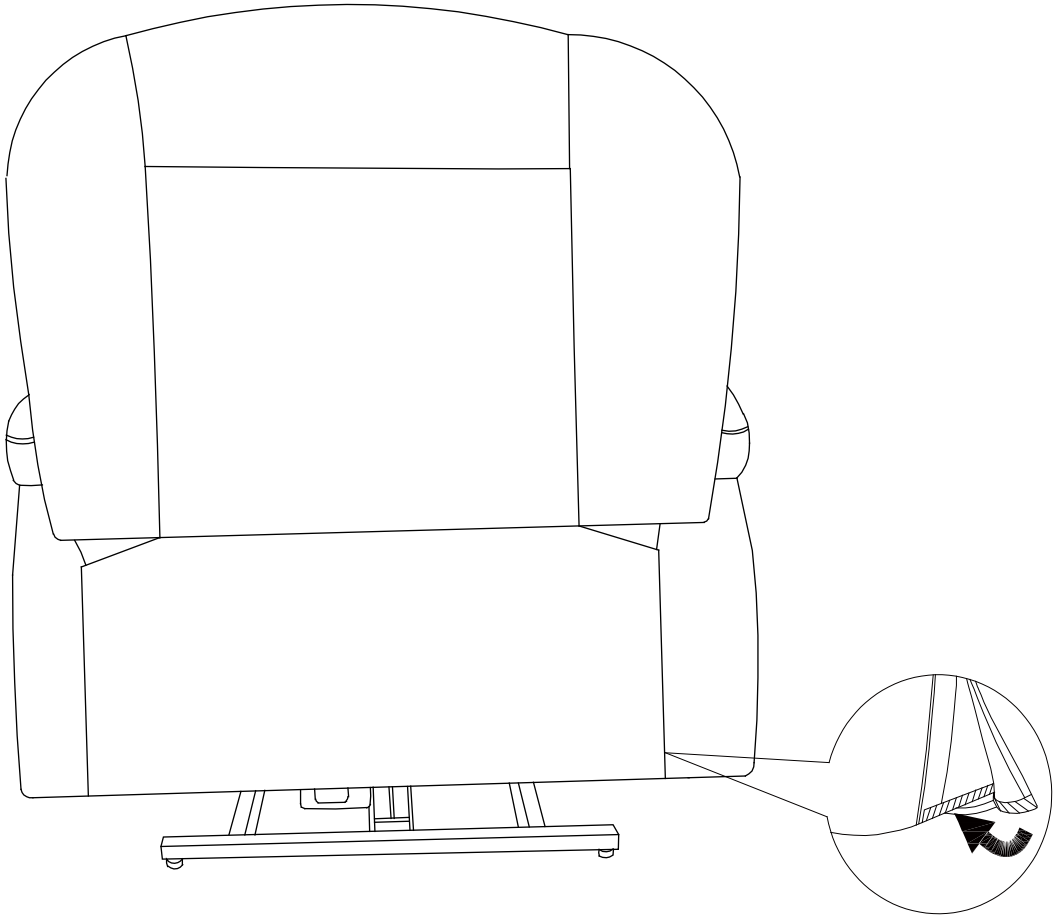


Step 7 Recline the chair.

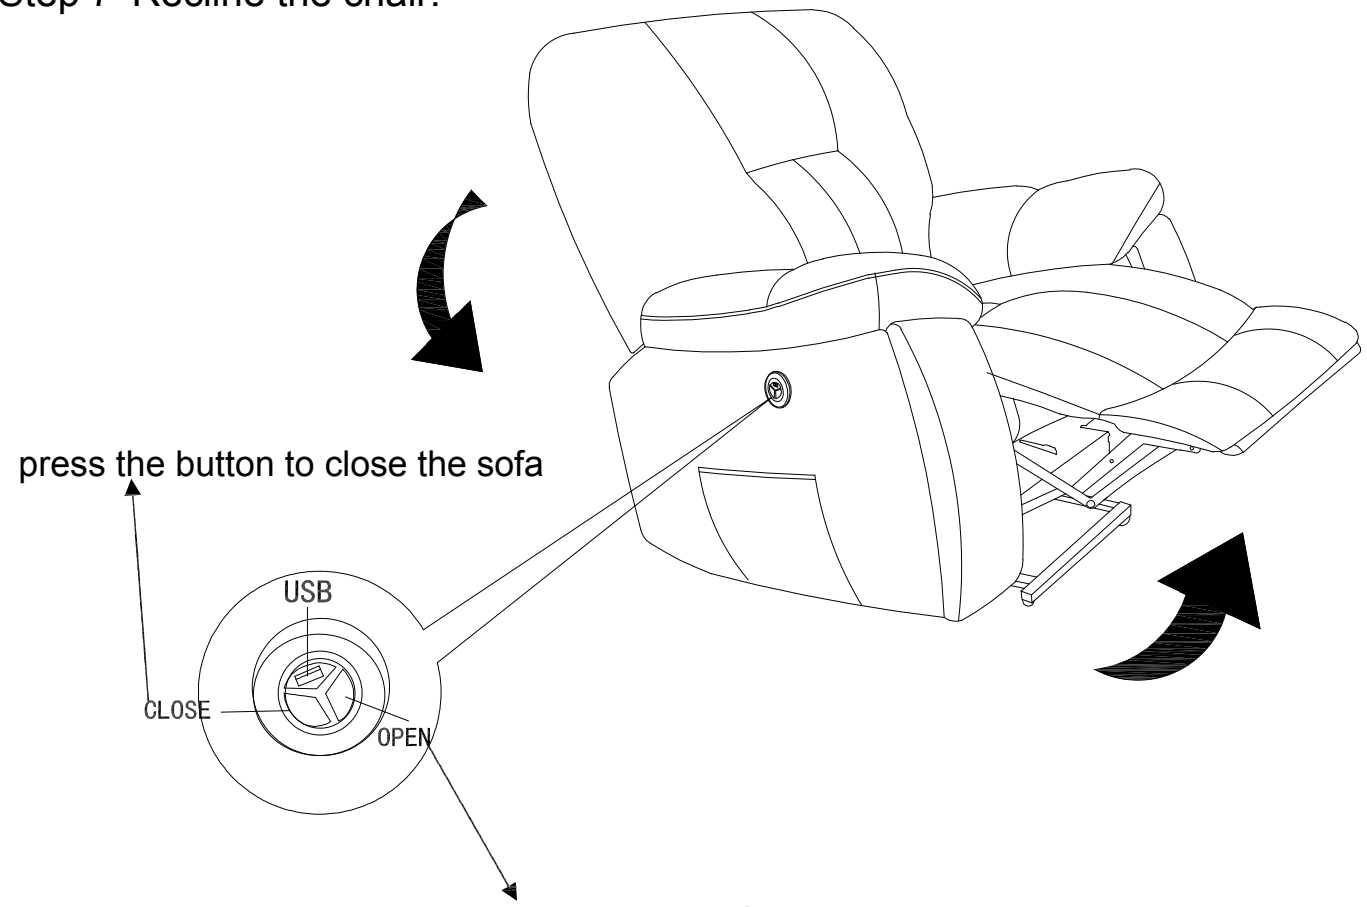


Step 8 Recline the chair.

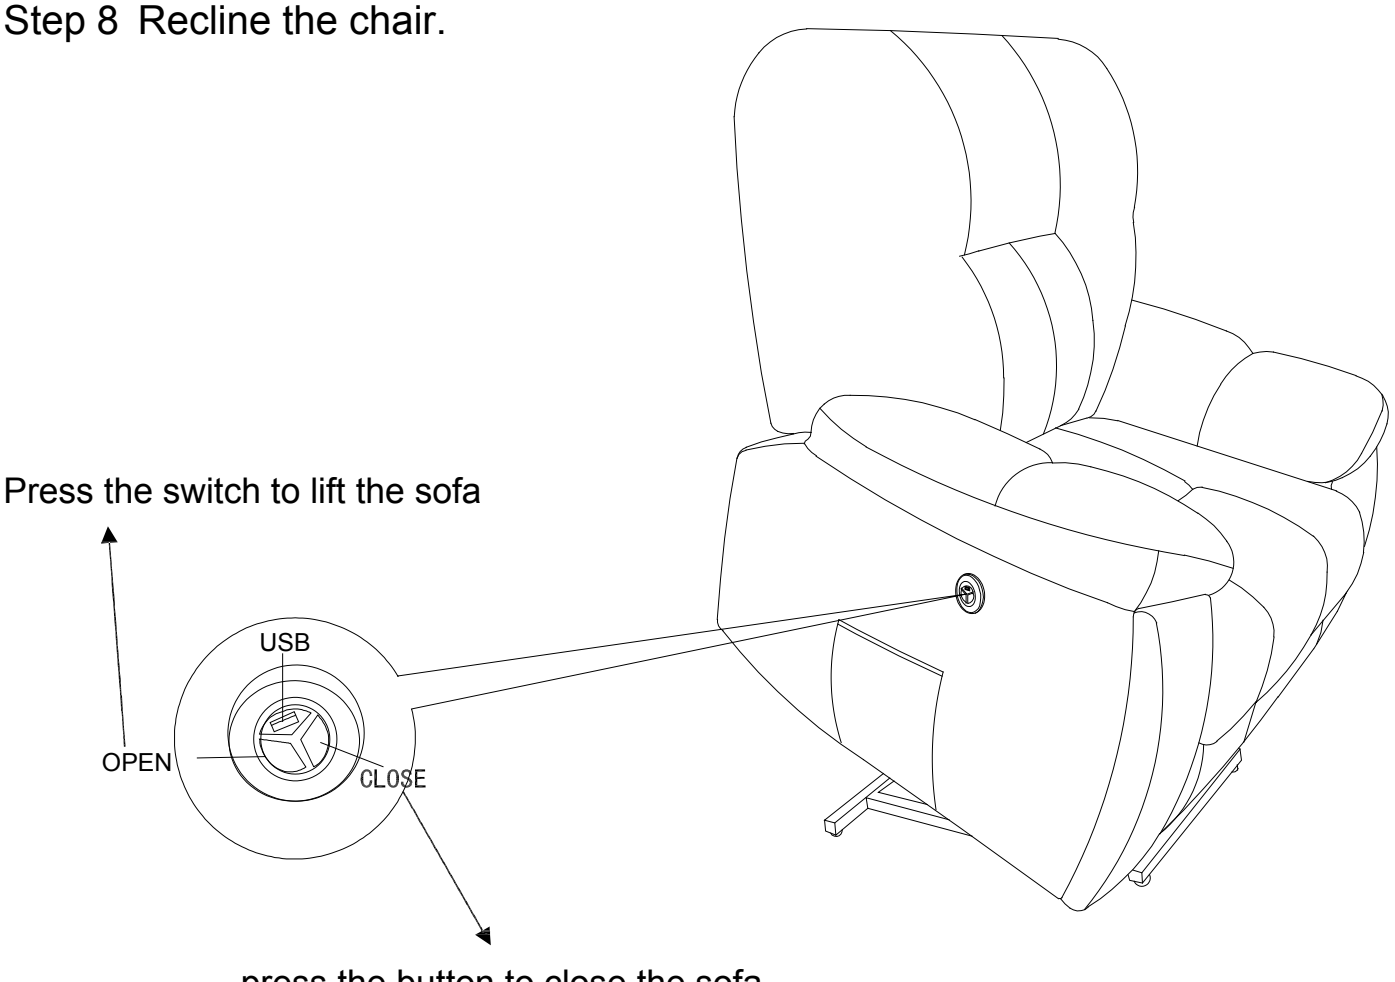


Step 9 Foot rest retraction

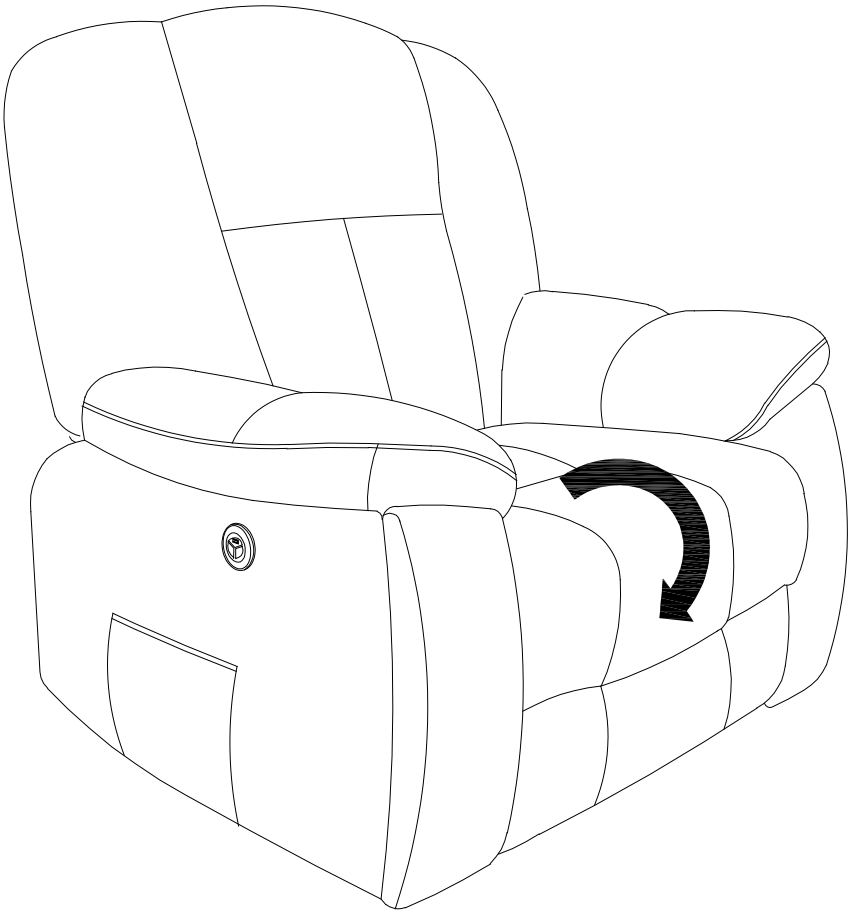

Step 10 Cup holder pulled out

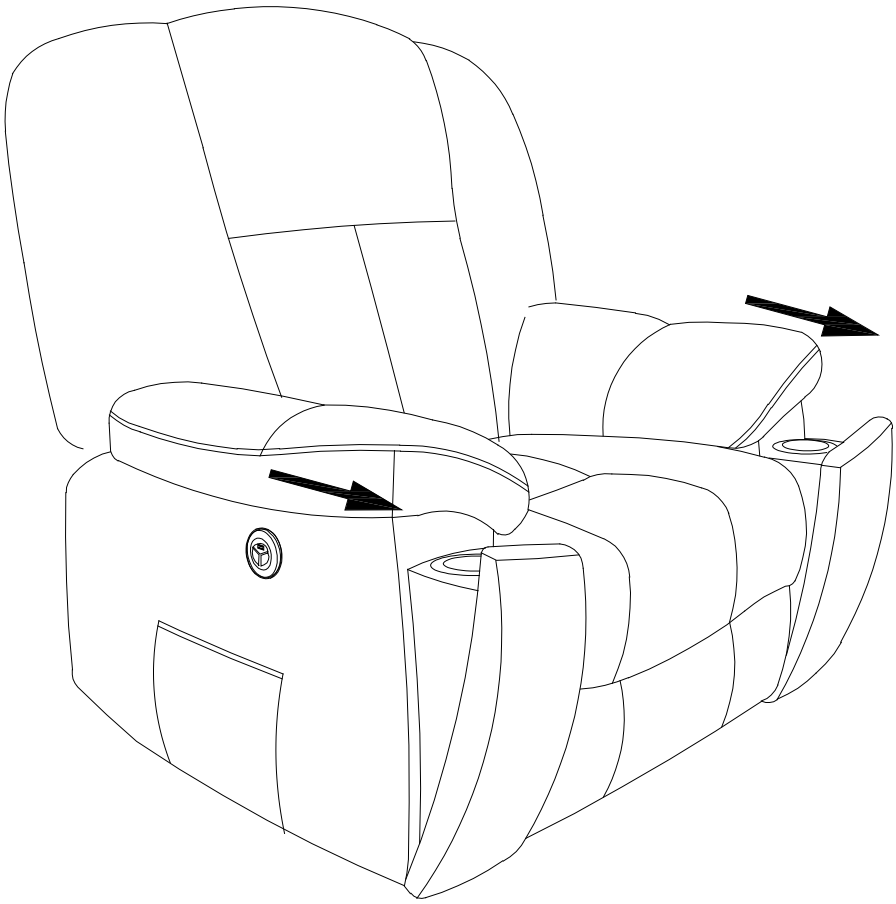

Done!

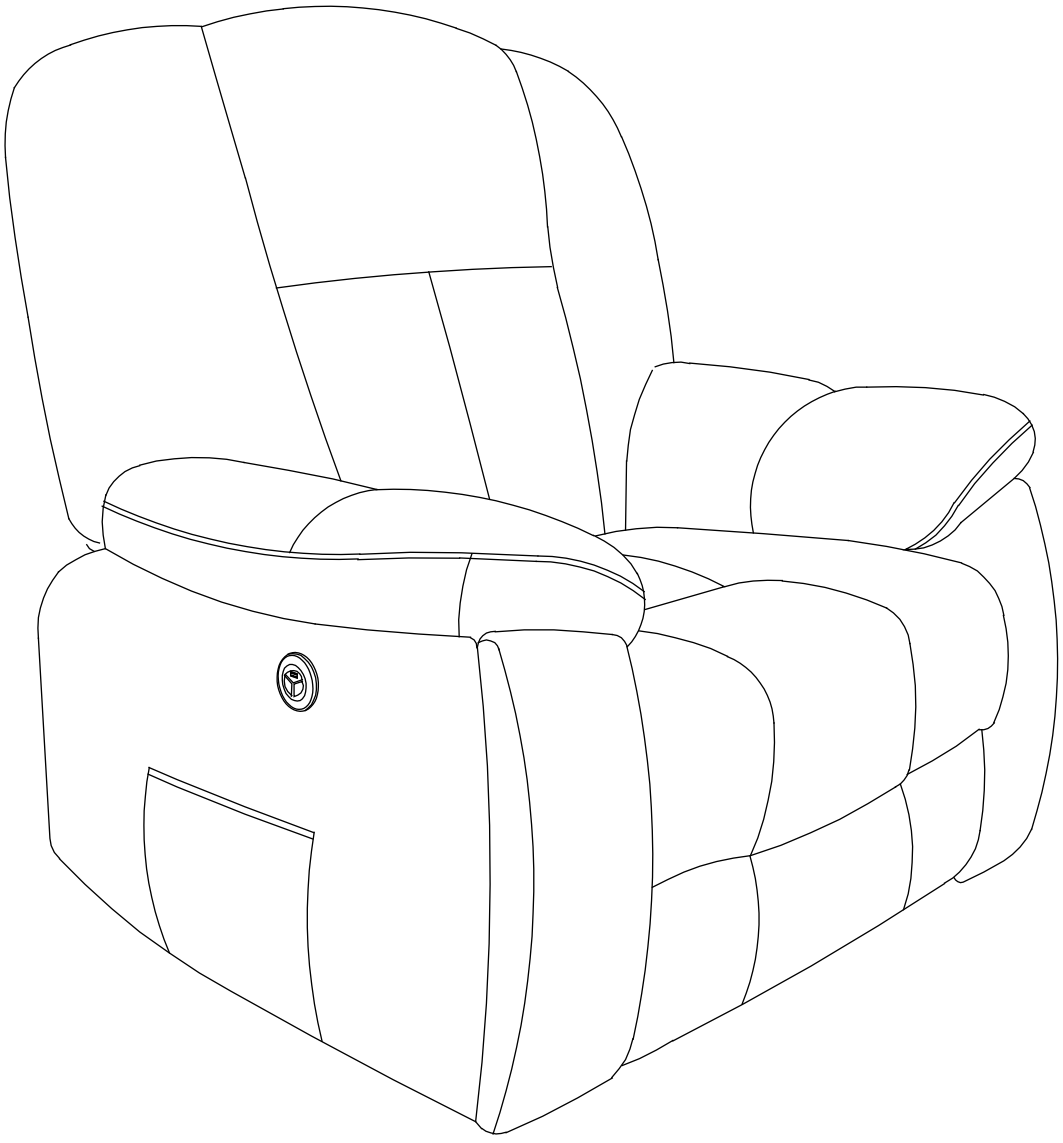


MASSAGE CHAIR

READ ALL INSTRUCTIONS

BEFORE USING THE ITEM

REMOTE CONTROL

Function of remote

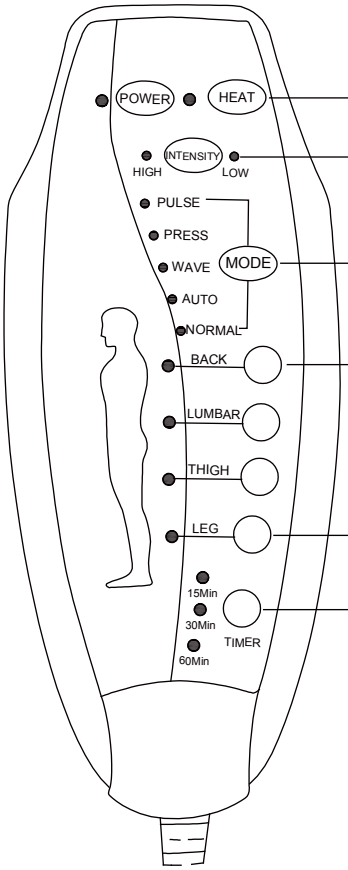

POWER:Tum on/off remote control

HEAT:Tum on/off heat function for lumbar part only

INTENSITY: Control massage function from low to high

MODE:Choose one massage mode you like(pulse,press, wave, auto, normal)

You can choose 1-4 massage parts(back, lumbar, thighs, legs) to enjoy.

TIMER:15 mins/30 mins/60 mins

Ⅰ、Specifications of power adapter

Power on in standby state. The user can realize the function through the hand controller controler control

Input :AC 100-240V, 50Hz/60HZ; Output: DC12V1A.

Ⅱ、Product features

1、4 way vibration motor

2、Five vibration modes

3、Vibration intensity of the second gear

4、3 Set the timed shutdown duration

5、1 way can be separate switch heating plate

Ⅲ、Function details

1、Click on the switch cycle

2、Switch point by vibration intensity (strong/weak)

3、Click heating switch circulation

4、Tap the five vibration modes to switch（Pulse/Press/Wvae/Auto/Normal）

5、Back massage switch

6、Lumbar massage switch

7、Thigh massage switch

8、Leg massage switch

9、Positioning cycle by massage time (10/30/60 min)