T2236

Manual for thermostatic coasters

I. Product introduction

Constant temperature health coaster is a product that can keep the water temperature in the cup at about 45-55 degrees. Low or high water temperature is not suitable for human health drinking water. According to research, 45-55 degrees is the best water temperature for drinking. Constant temperature health coaster for you to solve the problem of healthy drinking water, low energy constant temperature timing intelligent switch, safe and convenient to use.

2. Parameter

Product name: Thermostatic health coasters
Product model: T2236
Rated power: 16W
Rated voltage: AC110V
Rated frequency: 60Hz
Execution standard: GB4706.1 GB4706.55

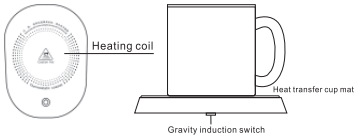

3.Methods

1. Gravity sensing coaster: Set as heavy weight mechanical switch, after checking the power line no problem, directly plug in the power standby. Will be equipped with a halfThe cup above the cup of water is placed directly in the middle of the coaster, and the blue indicator light is on, so it can keep warm (about 45-55 degrees). When not in use, please take off the cup, and the electricity will be cut off automatically.

2.USB input coasters: After checking the power line is no problem, plug in the power directly, and the indicator light will be on when it is working. It can keep warm (about 45-55 degrees). When not in use, please remove the cup and unplug the power supply.

4.Cleaning and maintenance

Before cleaning, cut off the power supply, let stand for 5 minutes, and then clean; The cup body should be cleaned in a conventional manner and should not be scraped with sharp metal instruments. Constant temperature health coaster surface can be wiped with a little cleaner cloth; If not used for a long time, please clean it and place it in a ventilated and dry place to avoid dampness.

5. Matters needing attention

In order to ensure the quality of use of the product, please follow the following:
1. Before using the appliance, please check whether the supply voltage provided is in line with the requirements.
2. If the power cord is damaged, it must be replaced by the manufacturer or its maintenance department or its professional technicians to avoid danger.
3. Products should be placed in places that cannot be reached by children, disabled people and other people with no capacity for behavior.
4. The appliance must be unplugged before being cleaned and its socket must be dried before being used again.
5. the surface of the appliance shall not be splashed with water, shall not be immersed in water for cleaning.
6. Warning: If the surface is broken, do not use the appliance.

6. FAQ

1.No heating, no light:
Check that the power is switched on and the plug is loose
2.The water in the cup is cold;
Place the bottom of the cup in the center of the circle around the base and close the lid;

Warm prompt>>>>>>>>>>
The heating temperature of the glass surface of the product is divisor, which will affect the temperature value of the glass surface slightly with the difference of ambient temperature. The liquid temperature in the cup is also affected by the difference of the ambient temperature and the material of the container, and the constant temperature of the liquid is also different, which will not affect the use of the product.

T2236

Manual for thermostatic coasters

I. Product introduction

Constant temperature health coaster is a product that can keep the water temperature in the cup at about 45-55 degrees. Low or high water temperature is not suitable for human health drinking water. According to research, 45-55 degrees is the best water temperature for drinking. Constant temperature health coaster for you to solve the problem of healthy drinking water, low energy constant temperature timing intelligent switch, safe and convenient to use.

2. Parameter

Product name: Thermostatic health coasters
Product model: T2236
Rated power: 16W
Rated voltage: AC110V
Rated frequency: 60Hz
Execution standard: GB4706.1 GB4706.55

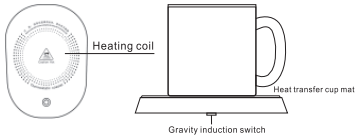

3.Methods

1. Gravity sensing coaster: Set as heavy weight mechanical switch, after checking the power line no problem, directly plug in the power standby. Will be equipped with a halfThe cup above the cup of water is placed directly in the middle of the coaster, and the blue indicator light is on, so it can keep warm (about 45-55 degrees). When not in use, please take off the cup, and the electricity will be cut off automatically.

2.USB input coasters: After checking the power line is no problem, plug in the power directly, and the indicator light will be on when it is working. It can keep warm (about 45-55 degrees). When not in use, please remove the cup and unplug the power supply.

4.Cleaning and maintenance

Before cleaning, cut off the power supply, let stand for 5 minutes, and then clean; The cup body should be cleaned in a conventional manner and should not be scraped with sharp metal instruments. Constant temperature health coaster surface can be wiped with a little cleaner cloth; If not used for a long time, please clean it and place it in a ventilated and dry place to avoid dampness.

5. Matters needing attention

In order to ensure the quality of use of the product, please follow the following:
1. Before using the appliance, please check whether the supply voltage provided is in line with the requirements.
2. If the power cord is damaged, it must be replaced by the manufacturer or its maintenance department or its professional technicians to avoid danger.
3. Products should be placed in places that cannot be reached by children, disabled people and other people with no capacity for behavior.
4. The appliance must be unplugged before being cleaned and its socket must be dried before being used again.
5. the surface of the appliance shall not be splashed with water, shall not be immersed in water for cleaning.
6. Warning: If the surface is broken, do not use the appliance.

6. FAQ

1.No heating, no light:
Check that the power is switched on and the plug is loose
2.The water in the cup is cold;
Place the bottom of the cup in the center of the circle around the base and close the lid;

Warm prompt>>>>>>>>>>
The heating temperature of the glass surface of the product is divisor, which will affect the temperature value of the glass surface slightly with the difference of ambient temperature. The liquid temperature in the cup is also affected by the difference of the ambient temperature and the material of the container, and the constant temperature of the liquid is also different, which will not affect the use of the product.

T2236

Manual for thermostatic coasters

I. Product introduction

Constant temperature health coaster is a product that can keep the water temperature in the cup at about 45-55 degrees. Low or high water temperature is not suitable for human health drinking water. According to research, 45-55 degrees is the best water temperature for drinking. Constant temperature health coaster for you to solve the problem of healthy drinking water, low energy constant temperature timing intelligent switch, safe and convenient to use.

2. Parameter

Product name: Thermostatic health coasters
Product model: T2236
Rated power: 16W
Rated voltage: AC110V
Rated frequency: 60Hz
Execution standard: GB4706.1 GB4706.55

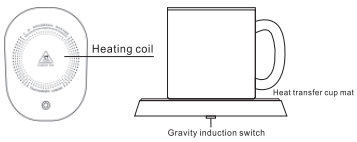

3.Methods

1. Gravity sensing coaster: Set as heavy weight mechanical switch, after checking the power line no problem, directly plug in the power standby. Will be equipped with a halfThe cup above the cup of water is placed directly in the middle of the coaster, and the blue indicator light is on, so it can keep warm (about 45-55 degrees). When not in use, please take off the cup, and the electricity will be cut off automatically.

2.USB input coasters: After checking the power line is no problem, plug in the power directly, and the indicator light will be on when it is working. It can keep warm (about 45-55 degrees). When not in use, please remove the cup and unplug the power supply.

4.Cleaning and maintenance

Before cleaning, cut off the power supply, let stand for 5 minutes, and then clean; The cup body should be cleaned in a conventional manner and should not be scraped with sharp metal instruments. Constant temperature health coaster surface can be wiped with a little cleaner cloth; If not used for a long time, please clean it and place it in a ventilated and dry place to avoid dampness.

5. Matters needing attention

In order to ensure the quality of use of the product, please follow the following:
1. Before using the appliance, please check whether the supply voltage provided is in line with the requirements.
2. If the power cord is damaged, it must be replaced by the manufacturer or its maintenance department or its professional technicians to avoid danger.
3. Products should be placed in places that cannot be reached by children, disabled people and other people with no capacity for behavior.
4. The appliance must be unplugged before being cleaned and its socket must be dried before being used again.
5. the surface of the appliance shall not be splashed with water, shall not be immersed in water for cleaning.
6. Warning: If the surface is broken, do not use the appliance.

6. FAQ

1.No heating, no light:
Check that the power is switched on and the plug is loose
2.The water in the cup is cold;
Place the bottom of the cup in the center of the circle around the base and close the lid;

Warm prompt>>>>>>>>>>
The heating temperature of the glass surface of the product is divisor, which will affect the temperature value of the glass surface slightly with the difference of ambient temperature. The liquid temperature in the cup is also affected by the difference of the ambient temperature and the material of the container, and the constant temperature of the liquid is also different, which will not affect the use of the product.

T2236

Manual for thermostatic coasters

I. Product introduction

Constant temperature health coaster is a product that can keep the water temperature in the cup at about 45-55 degrees. Low or high water temperature is not suitable for human health drinking water. According to research, 45-55 degrees is the best water temperature for drinking. Constant temperature health coaster for you to solve the problem of healthy drinking water, low energy constant temperature timing intelligent switch, safe and convenient to use.

2. Parameter

Product name: Thermostatic health coasters
Product model: T2236
Rated power: 16W
Rated voltage: AC110V
Rated frequency: 60Hz
Execution standard: GB4706.1 GB4706.55

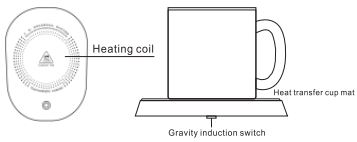

3.Methods

1. Gravity sensing coaster: Set as heavy weight mechanical switch, after checking the power line no problem, directly plug in the power standby. Will be equipped with a halfThe cup above the cup of water is placed directly in the middle of the coaster, and the blue indicator light is on, so it can keep warm (about 45-55 degrees). When not in use, please take off the cup, and the electricity will be cut off automatically.

2.USB input coasters: After checking the power line is no problem, plug in the power directly, and the indicator light will be on when it is working. It can keep warm (about 45-55 degrees). When not in use, please remove the cup and unplug the power supply.

4.Cleaning and maintenance

Before cleaning, cut off the power supply, let stand for 5 minutes, and then clean; The cup body should be cleaned in a conventional manner and should not be scraped with sharp metal instruments. Constant temperature health coaster surface can be wiped with a little cleaner cloth; If not used for a long time, please clean it and place it in a ventilated and dry place to avoid dampness.

5. Matters needing attention

In order to ensure the quality of use of the product, please follow the following:
1. Before using the appliance, please check whether the supply voltage provided is in line with the requirements.
2. If the power cord is damaged, it must be replaced by the manufacturer or its maintenance department or its professional technicians to avoid danger.
3. Products should be placed in places that cannot be reached by children, disabled people and other people with no capacity for behavior.
4. The appliance must be unplugged before being cleaned and its socket must be dried before being used again.
5. the surface of the appliance shall not be splashed with water, shall not be immersed in water for cleaning.
6. Warning: If the surface is broken, do not use the appliance.

6. FAQ

1.No heating, no light:
Check that the power is switched on and the plug is loose
2.The water in the cup is cold;
Place the bottom of the cup in the center of the circle around the base and close the lid;

Warm prompt>>>>>>>>>>
The heating temperature of the glass surface of the product is divisor, which will affect the temperature value of the glass surface slightly with the difference of ambient temperature. The liquid temperature in the cup is also affected by the difference of the ambient temperature and the material of the container, and the constant temperature of the liquid is also different, which will not affect the use of the product.