NSTRUCTIONS: SEMI FLUSH FIXTURE

WARNING

USK OF FIRE, MOST DWELLINGS BUILT BEFORE 1985 HAVE UPPLY WIRE RATED 60°C. CONSULT A QUALIFIED ELEC-RICIAN BEFORE INSTALLING.


) Run wire from center stem through hole in center of canopy Secure in place with lockwasher and hexnut.
) Turn off power.
) Assemble mounting screws to outlet box. (Screws not provided)
) Attach mounting strap to outlet box. (Screws not provided)
) Grounding instructions: (See Illus. A or B).

A) On fixtures where mounting strap is provided with a hole and two raise dimples. Wrap ground wire from outlet box around green ground screw, and thread into hole.

B) On fixtures where a cupped washer is provided. Attach ground wire from outlet box under cupped washer and green ground screw, and thread into mounting strap.

If fixture is provided with ground wire. Connect fixture ground wire to outlet box ground wire with wire connector. (Not provided.) After following the above steps.


Never connect ground wire to black or white power supply wires.

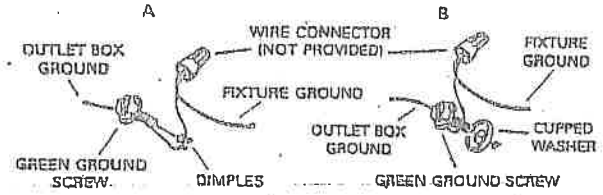

Make wire connections (connectors not provided.) Reference Chart below for correct connections and wire accordingly.

Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor


lote: When parallel wire (SPT 1 & SPT II) is sed. The neutral wire is square shaped or dged and the other wire will be round in shape r smooth. (See Illus.)



ush fixture to ceiling, carefully passing mounting screws rough holes.

ecure fixture to ceiling with knurl knob.

sert lamps and attach glass with trim (if provided) and finial.

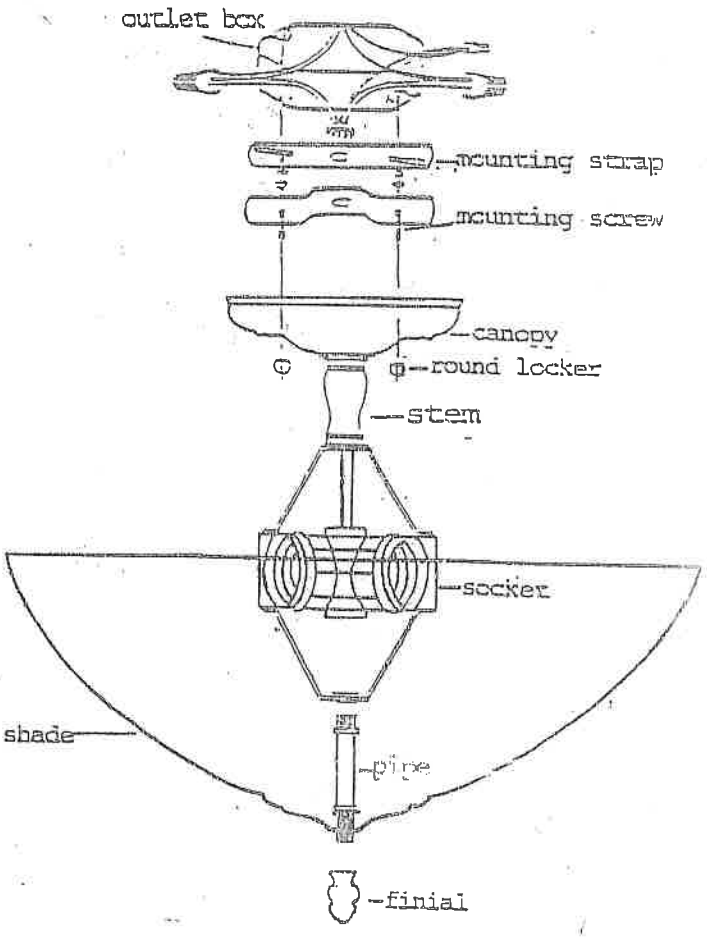

MOUNTING AND WIRING INSTRUCTIONS

1. Fasten mounting strap to junction box with machine screws found in junction box. The mounting strap must be used to provide proper grounding of fixture.
2. Turn nipple into threaded hole in the mounting strap. Turn hex nut onto nipple. Remove knurled nut from hanger loop. Turn hanger loop onto nipple. Place canopy up against ceiling and adjust nipple to leave about 3/8" protruding through canopy. Remove canopy and tightly lock nipple in place by turning hex unt up against mounting strap.

3. Assemble one end of chain to fixture loop by opening chain link and closing it around loop. NOTE: Never twist chain link to open. Chain link must be opened in a "C" shape.

4. Weave the two conductor cord and bate ground wire through the chain about every third link. Slide knurled nut down chain. Slide canopy down chain.

5. Adjust chain length and wire lead length at this time for dasired hanging height of fixture. Leave at least 12" of leads beyond end of chain.

6. Open last chain link then lift chain and fixture up to ceiling and hook open link through hanger loop. Close chain link.

7. Insert wire leads through hloe in hanger loop and nipple into junction box. Pull leads down out of junction box for easier wiring. Connect the IDENTIFIED lead (white, tinned or ribbed - if both conductors are the same color, feel for the ribbed edge that runs the entire length of one side) to the WHITE house wire. Connect the UNIDENTIFIED lead to the BLACK house wire. Turn the green ground screw into the hole in the mounting strap and wrap the bare ground wire around screw one full turn and tighten screw. Connect remaining end of bare wire to the house ground wire (bare). If the junction box itself is metal and is already grounded, attachment to the green screw only is sufficient. Always use wire connectors that are UL approved for the size and number of wires to be connected.
Caution: Never connect the bare ground wire to the black or white house wires.

8. Place all wites and connectors back into the junction box making sure there are no loose wire connectors or bate leads. Slide canopy up to ceiling and hold in place by turning knurled nut onto hanger loop.

9. (For fixtures with glass shades only) Your glass shade is held in place either by thumbscrews or by a spin-on ring sctewed onto a threaded socket. Place glass shade(s) into holder and tighten thumbscrews or spin ring onto socket.

10. Lamp fixture with proper size bulbs in accordance with the wattage label found on the fixture.

