ASSEMBLY INSTRUCTION SHEET



IF YOU PURCHASED THE CHRISTMAS TREE ONLINE AND HAVE ANY QUESTIONS OR CONCERNS PLEASE CONTACT US WITH EMAIL OR TEXTEMAIL: yardsightfurniture@outlook.com
TEXT:+1 323-400-0363

WARNING:

1. Read all instructions and warning tags included with this tree. Retain for future reference.
2. Ensure all packaging is removed before assembly and use.
3. Keep tree's light sets unplugged from power before beginning assembly.
4. Keep wires clear of being pinched or cut during assembly and use.
5. Ensure final assembly is upright and stable.
6. Do not use candles on tree.
7. Do not use near candles, fireplaces, radiators, or other similar sources of heat.
8. Do not use near tubs, sinks, or other wet areas.
9. Artificial trees are made from small fibers that may pose a choking hazard if detached from the branches. Use care around children and pets.

Before you start:

These instructions will guide you on how to set up your tree to ensure it is fully functioning and looking its best. This guide will also give you tips on how to store your tree to last for years to come. Please read the following instruction carefully before you start.

Remember to save the carton for storage of your tree

1. Each tree section contains a tag labeled A, B and C. Please identify all sections before assembling.
2. Remove the tree sections from the packaging before beginning and keep the carton for future storage.
3. Select an area where the ground is firm enough to hold the tree upright.
4. If you are having difficulties with any of the tree components, 2-person assembly is recommended.

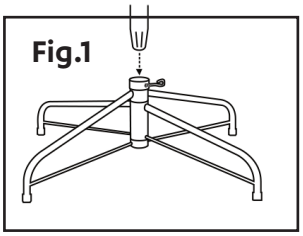

5. Take out the tree stand, unfold it, and insert the eye bolts. Remove the packing materials from the end of poles. Put the bottom section pole into the tree stand and make sure it is inserted properly as in Fig.1.
6. Continue by inserting the upper tree section into the lower section until inserting the treetop. Make sure the tree is stable and upright. Tighten eye bolts evenly to ensure tree does not lean too far to one side.
7. One plug tree does not require the connection of light strings between sections. Electrical connections for lights are made as each section is assembled. Connect the electrical cord at the base of tree into a standard electrical outlet or other power sources. Find the power cord at the bottom section seen in Fig 2.
8. To shape the tree please refer to Fig.3. All hinged branches should fall into lower position during assembly. Any branches that remain upright should be gently lowered by hand.

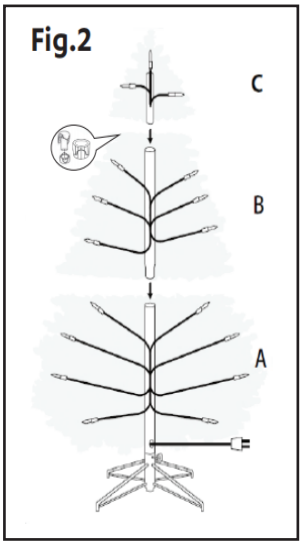

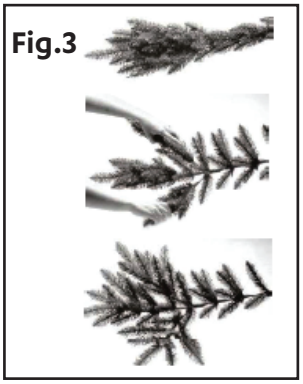

Storage Tips:

1. Remove all decorations.
2. Starting from the top, carefully press each tip against each branch, and then fold them towards the main stem.
3. Store the carton on a flat surface in a cool and dry environment.
4. Do not store the tree in a damp area or where temperatures can reach over 100 degrees Fahrenheit.

The Lights on this tree are non-replaceable LED bulbs.
Plug the transformer into an indoor light socket and switch on the main supply.
Press the remote control to get more lighting functions.

Remote control

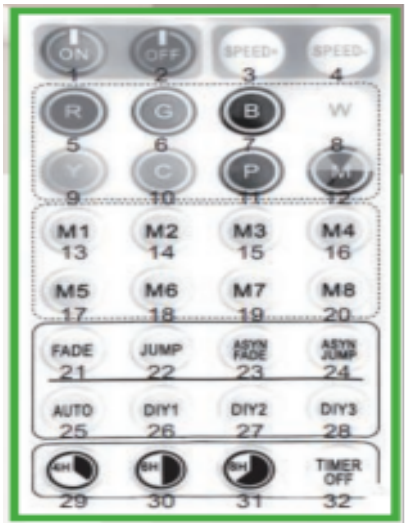

1. Before using the remote control, first remove the insulation tab at the bottom of the control.
2. The remote control includes one CR2025 battery.
3. Selector Button. Press the selector button and wait for a second to enjoy light effects.

Lighting functions

1- On
2- Off
3- Speed+ for all dynamic modes
4- Slow down for all dynamic modes
5- Stable red color
6- Stable green color
7- Stable blue color
8- Stable cold white colour
9- Stable yellow color
10- Stable cyan color
11- Stable purple color
12- Stable multicolor
13-M1 flow function
14- M2 trailing chase effect
15- M3 door switch effect
16- M4 breath like chase effect
17- M5 cumulative effect
18-M6 twinkle effect/double chase
19- M7 chase effect with background color
20- M8 rainbow chase
21- The fading lights fade in sync
22- The jump lights fade in sync
23-Asyn fade asynchronous slow flash
24-Jump lights asyn in asynchronous mode
25-Automatically: from m1 to m8 for each combination of Colors, cast, jump, asyn cast and asyn jump
26-28-Color programming to the taste of the DIY user
29-32 - Timer Settings can be 4/6/8 hours and off

Battery Replacement

The remote uses a CR2025 button cell battery. To replace the battery, open the battery compartment by pushing a little tab inwards while pulling the battery compartment outwards. Replace the used battery with a new CR2025 button cell battery. Make surethat the battery is installed with the correct polarity (+ and -). Close the battery compartment.



⚠WARNING

- **INGESTION HAZARD**: This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



BATTERY WARNING

1. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
2. Even used batteries may cause severe injury or death.
3. Call a local poison control center for treatment information.
4. The remote uses one CR2025 button cell battery.
5. The nominal voltage of the battery is 3V.
6. Non-rechargeable batteries are not to be recharged.
7. Do not force discharge, recharge, disassemble, heat above 60°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
8. Ensure the batteries are installed correctly according to polarity (+ and -).
9. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
10. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
11. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.