Floor Lamp

User Manual

Product Stucture (inch)

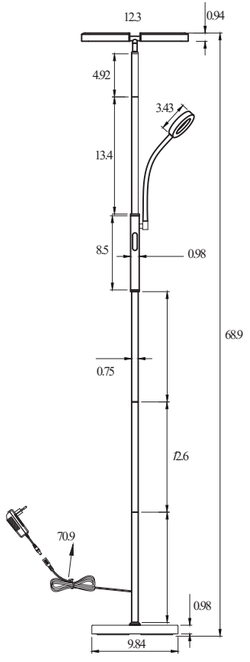

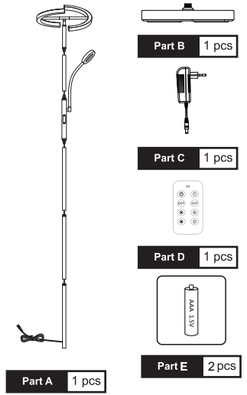

Part A 1 pcs

Part B 1 pcs

Part C 1 pcs

Part D 1 pcs

Part E 2 pcs

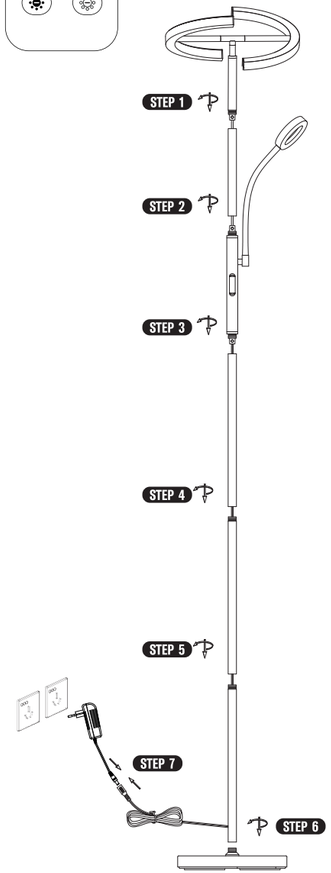

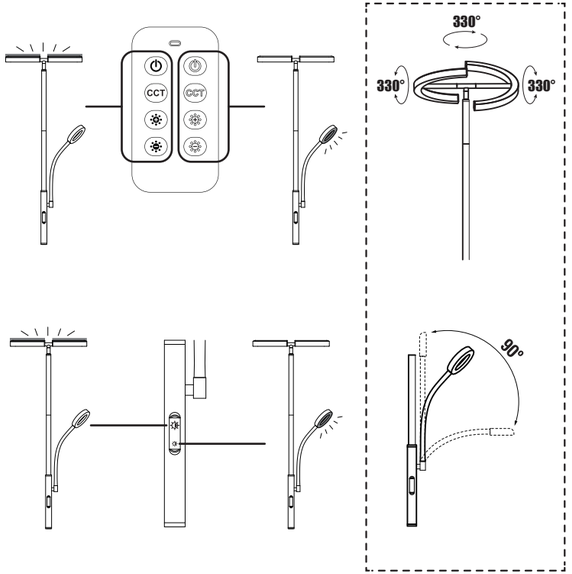

Attention

When the power plug is connecting to the power, remote control is working normally.
However, if it does not work, **How to pair the remote control with the light.**
1.When you want to match, you should keep lamp power-off.(no plug in)
2.Install the batteries into remote control. Please keep long press the on-off key of the remote control and plug the power into the socket at the same time.
3.If the light flickers,it indicates that the pairing is successful,the remote control can be used now.

SPECIFICATION

Name	LED floor lamp
Material	M etal+PC
Color	White
Wattage	20W+7W
Rated Frequency	50/60HZ
Liumious fluxx	1600LM+400LM
Color temperature	3000k-6000k
Dimmable	Yes (10%~100%)
Lifespan	30000Hrs
Adapter voltage	AC100-240V
Protection class	IP20
Switch Type	Touch Dimmable and Remote Control

REMOTE CONTROL

CCT CCT	**Color Temperature:** Short press this button to select the color temperature(3000-6000K)after turning on the light.
	Brightness +: Hold the button to increase the brightness.
	Brightness -: Hold the button to reduce the brightness.

HOW TO USE

The upper button controls the mother lamp, and the lower button controls the daughter lamp.
Short press the button in the sequential order: light on-3000k-4000k-6000k-light off
Long press to adjust the brightness from 10% - 100%

NOTICE

1.Read the instructions before using the lamp.
2.To ensure long lifetime keep the lamp away from damp,hot or corrosive environments.
3.Do not disassemble or repair the lamp if you are not qualified to do so by your local regulations
4.Do not touch the electrical appliances with wet hands and keep it away from fluids
5.Only use the included power adapter.
6.Please cut of the power when the device is not used.
7.Only clean with dry cloth,no solvents or cleaning solutions.
8.Do not use if exceed the voltage