
furniturebox

PENROSE

4 Chest of Drawers
Assembly Guide

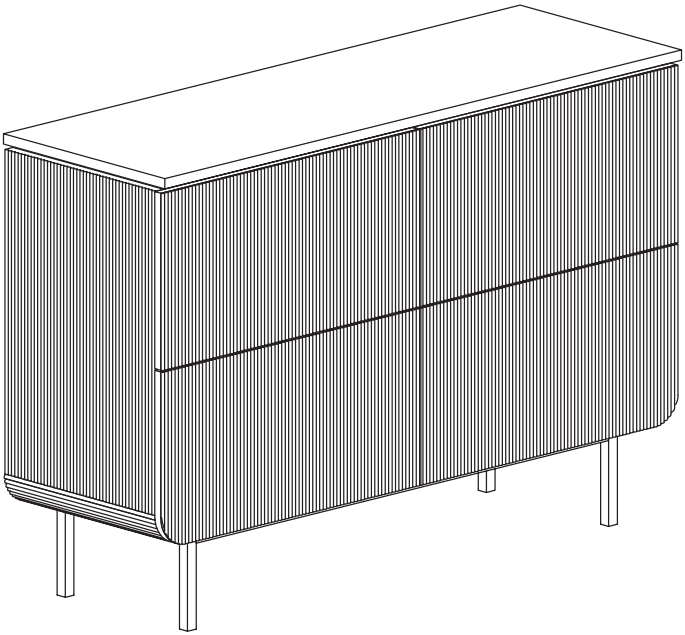

furniturebox

IMPORTANT: please read these instructions fully before starting assembly



SAFETY AND CARE ADVICE



NO POWER TOOLS

- Check you have all the components and tools listed
- Remove all fittings from their bags and separate into groups
- We do not recommend use of power tools - this could damage the unit. Only use hand screwdrivers and Allen keys
- Keep children and animals away from the work area, small parts could cause choking if swallowed
- Make sure you have enough space to lay out the parts before starting
- Assemble the item as close to its final position (same room) as possible
- Do not over tighten the nuts to avoid damage to the threads
- Only clean using a damp cloth and mild detergent. Do not use bleach or abrasive cleaners
- Do not allow children to climb or play on this product
- From time to time, check there are no loose screws in this unit
- This product should not be discarded with household waste. Take to your local authority waste disposal centre
- Unless otherwise stated, this product is designed for domestic use and is not certified for commercial or contract settings.

furniturebox

IMPORTANT INFORMATION



60 Minute Build



Two Person Build



Max Weight Capacity 80kg


Note: Assembly estimates are approximate and can differ based on the specific environment and user experience.

furniturebox

WHAT'S IN THE BOX

Note: the quantities are the correct amount to complete the assembly. In some cases more fixings may be supplied than are required.







Getting to know your product:




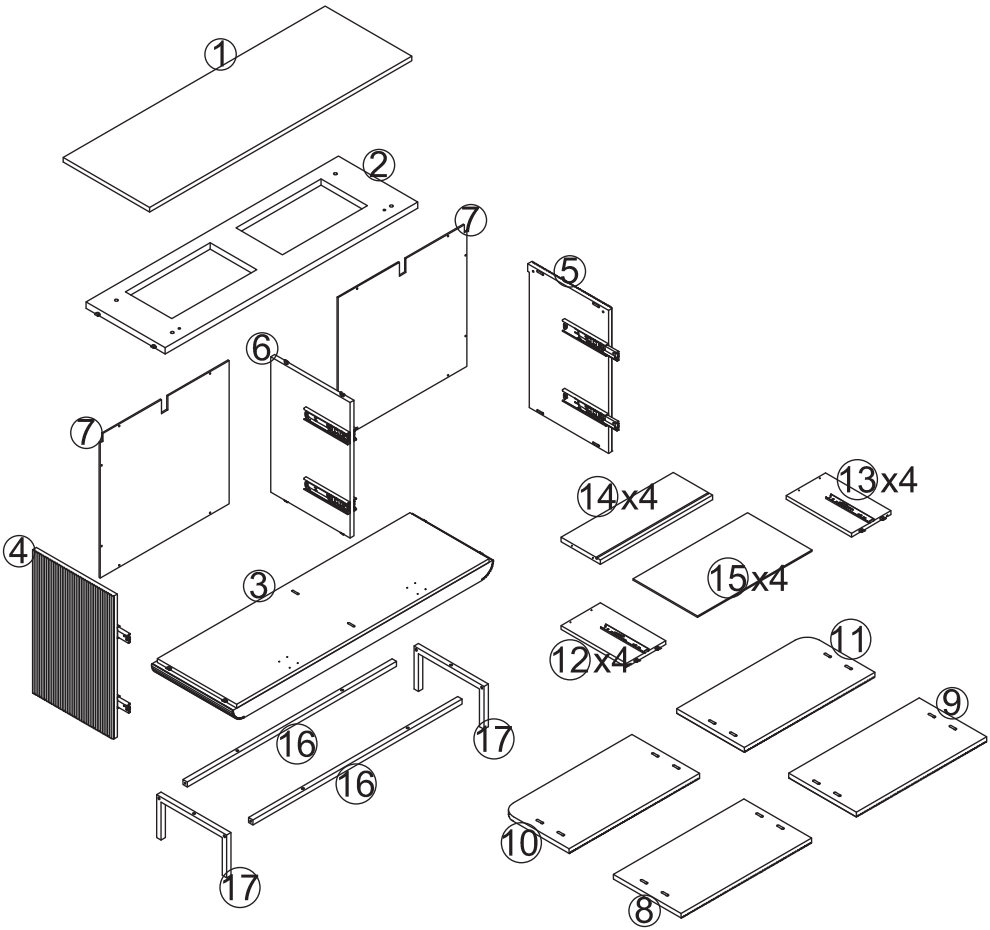


furniturebox

WHAT'S IN THE BOX

Note: the quantities are the correct amount to complete the assembly. In some cases more fixings may be supplied than are required.

Label	Part Name	Drawing	Quantity
1	Top Panel		1
2	Top Connecting Plate		1
3	Bottom Panel		1
4	Left Side Panel		1
5	Right Side Panel		1
6	Divide Panel		1
7	Back Panel		2
8	Drawer Front Panel		1
9	Drawer Front Panel		1

Label	Part Name	Drawing	Quantity
10	Drawer Front Panel		1
11	Drawer Front Panel		1
12	Drawer Left Side Panel		4
13	Drawer Right Side Panel		4
14	Drawer Back Panel		4
15	Drawer Bottom Panel		4
16	Aprons		2
17	Legs		2

furniturebox

WHAT'S IN THE BOX

Note: the quantities are the correct amount to complete the assembly. In some cases more fixings may be supplied than are required.

Label	Hardware Description	Drawing	Size(mm)	Quantity
A	Allen Key		4#	1
B	Dowels		Ø8x30mm	2
C	Bolts		M6x16mm	2
D	Bolts		M6x35mm	10
E	Washer		Ø6x16mm	6
F	L-Bracket			2
G	Screws		M3.5x16	28
H	Screws		M3.5x35	16
J	Push-Open			4
K	Shelf Pins			4


furniturebox

Note:


- Use a clear, flat surface to avoid bumps or scratches before assembling.
- Insert all fixings loosely at first to allow for alignment; only tighten them once everything is properly positioned, as some adjustment may be required.
- Avoid over-tightening, as this may damage the parts.
- Seek assistance when moving large or heavy parts

Fitting Assembly Instructions


Assembly

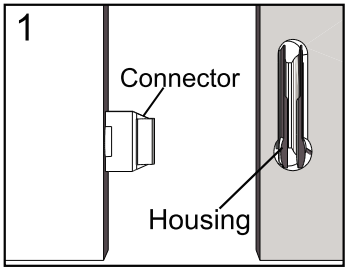


Push connector into housing to join.

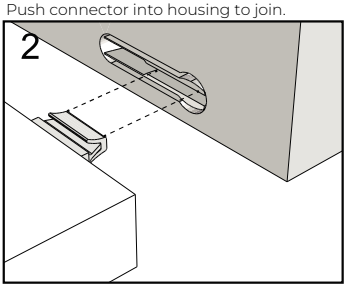


Make sure there is no gap between the panels.

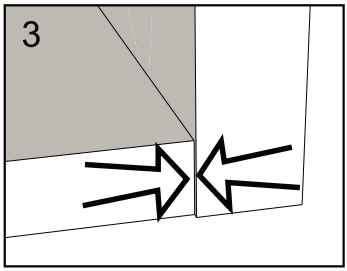

Disassembly

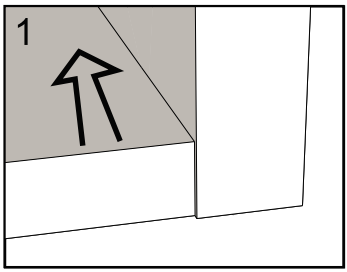


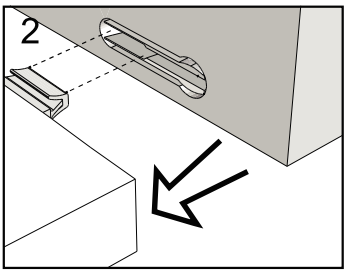

furniturebox

STEP 1

Loosely attach 2 x Legs [17] to 2 x Aprons [16] using 4 x Bolts [D] with Allen Key [A].

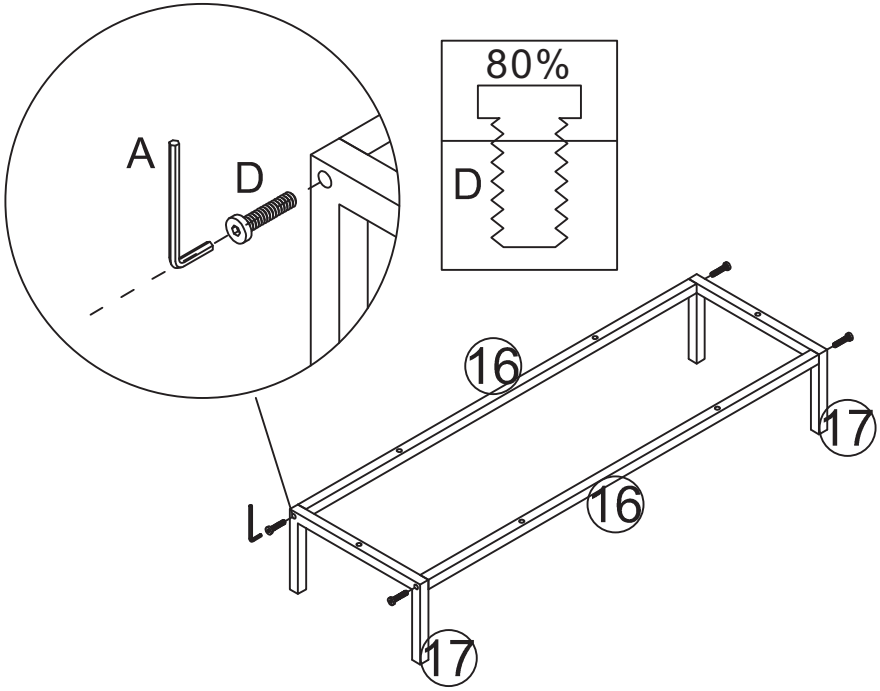


A		1pc
D		4pcs


furniturebox

STEP 2

Loosely attach metal frame to Bottom Panel [3] using 6 x Bolts [D] with Allen Key [A]..

NOTE: Fully tighten All Bolts [D] in step 1 and step 2 with Allen key [A].

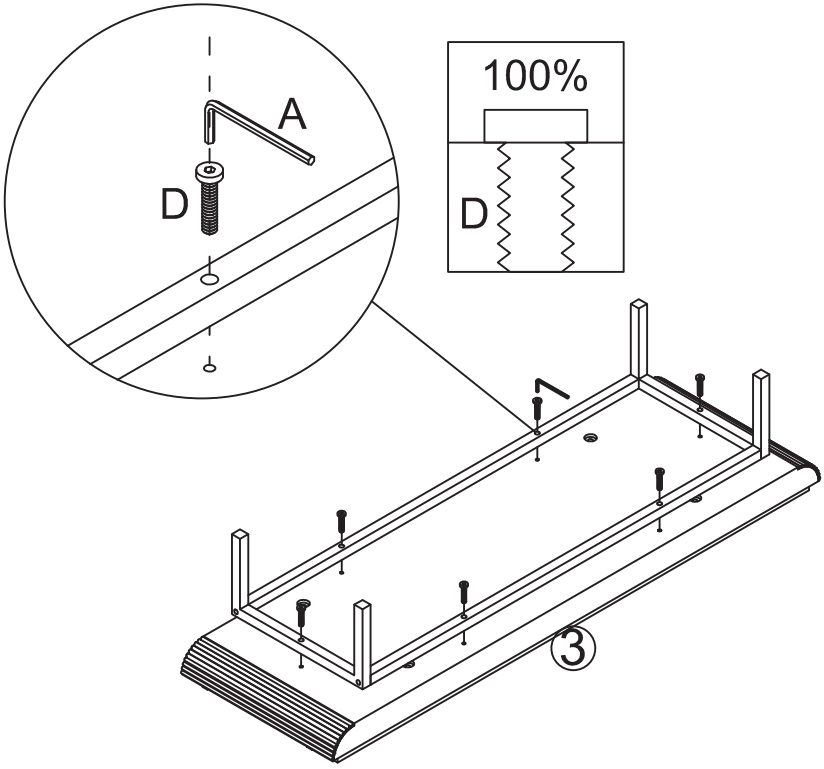


A		1pc
D		6pcs

furniturebox

STEP 3

Attach 2 x L-Bracket [F] to Top Connecting Plate [2] using 2 x Bolts [C] and 2 x Washers [E] with Allen Key [A].

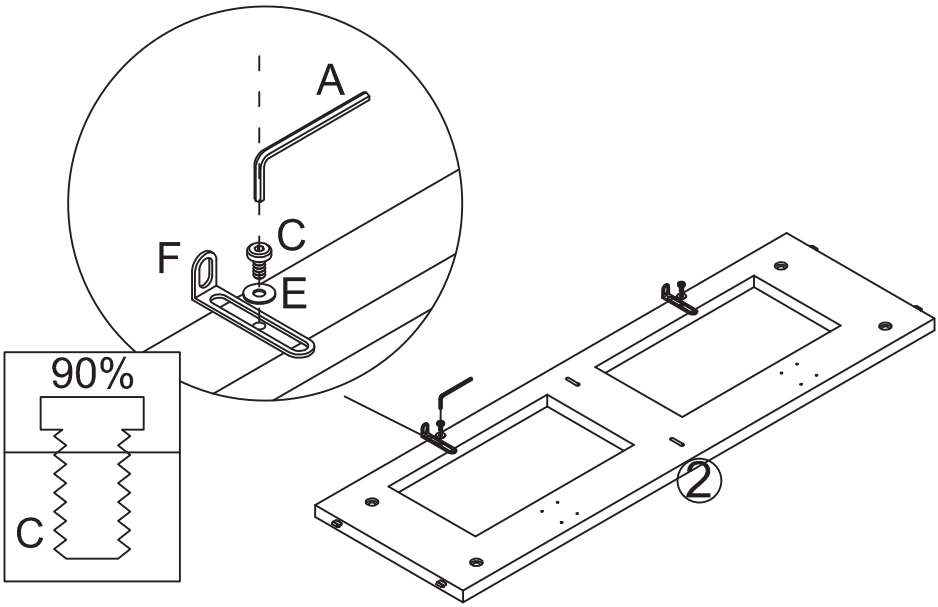


A		1pc
C		2pcs
E		2pcs
F		2pcs

furniturebox

STEP 4

Tighten 4 x Shelf Pins [K] into Left Side Panel [4] and Right Side Panel [5] as shown.

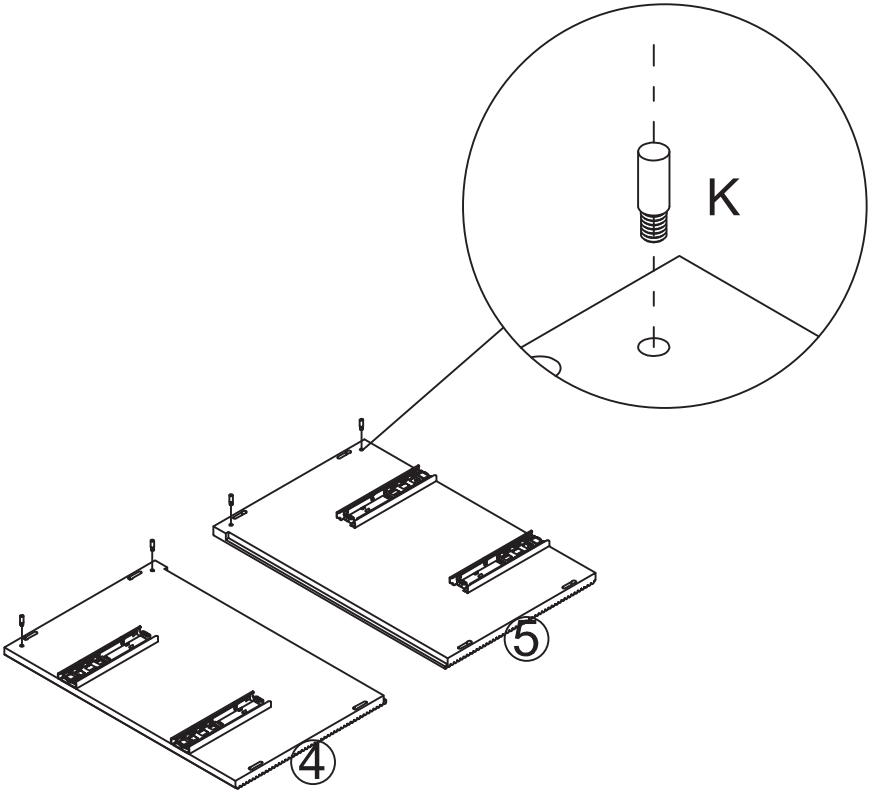


K		4pcs

furniturebox

STEP 5


Attach Divider Panel [6] to Bottom Panel [3] as shown.

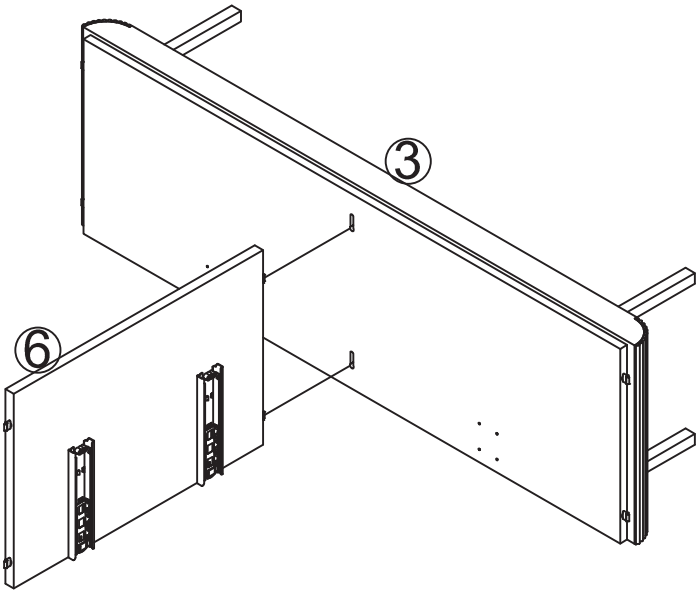

furniturebox

STEP 6


Attach Top Connecting Plate [2] to Divider Panel [6] as shown.

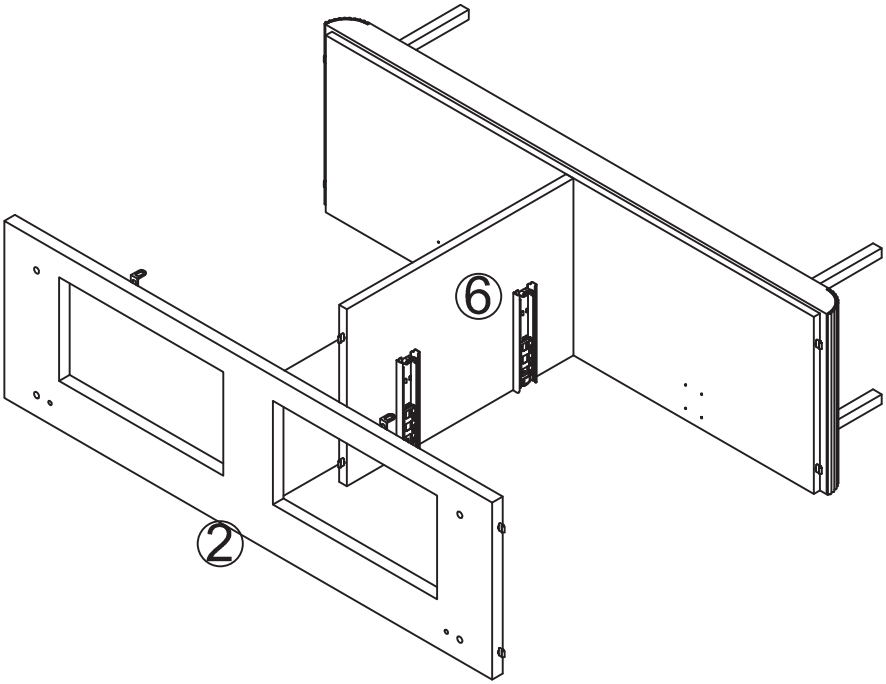

furniturebox

STEP 7


Attach Left Side Panel [4] and Right Side Panel [5] to Top Connecting Plate [2] and Bottom Panel [3] as shown.

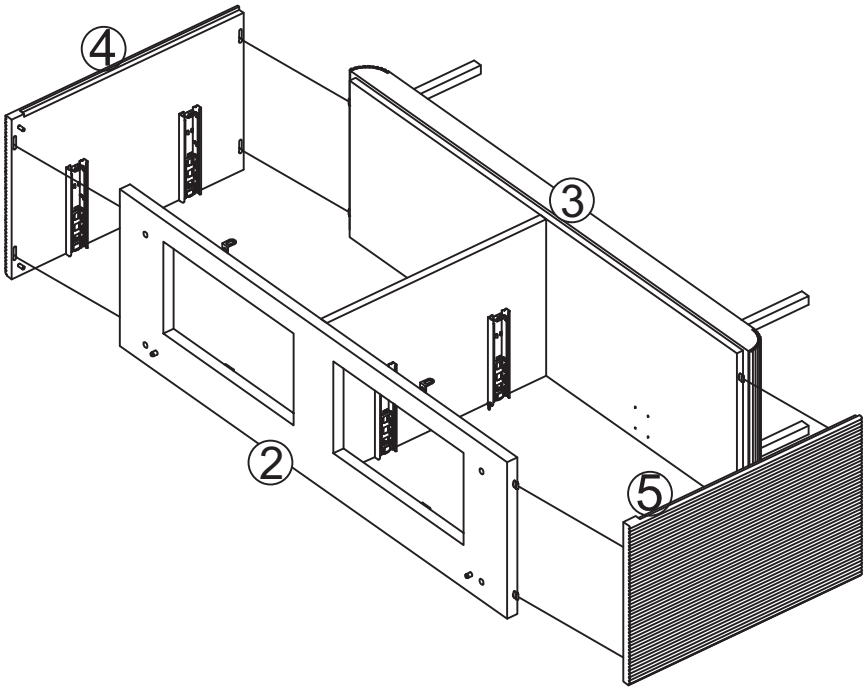

furniturebox

STEP 8

Attach 2 x Back Panel [7] to Frame using 12 x Screws [G] with a Phillips Head Screwdriver

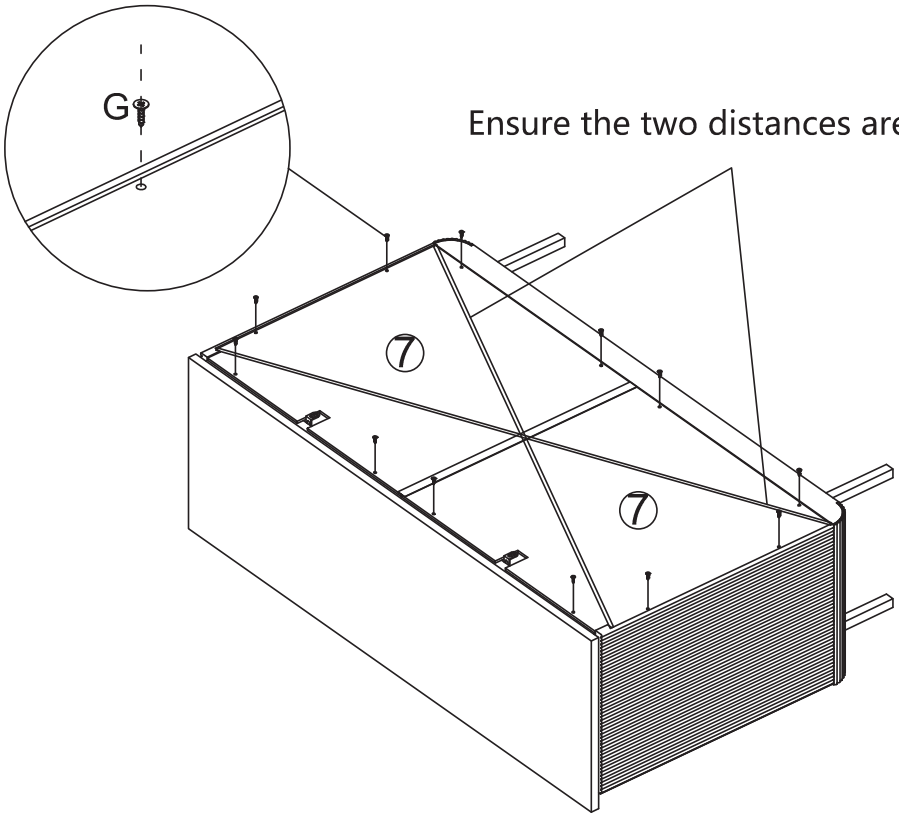


G		12pcs

furniturebox

STEP 9

Attach Top Panel [1] to Top Connecting Plate [2] using 2 x Dowels [B] as shown.

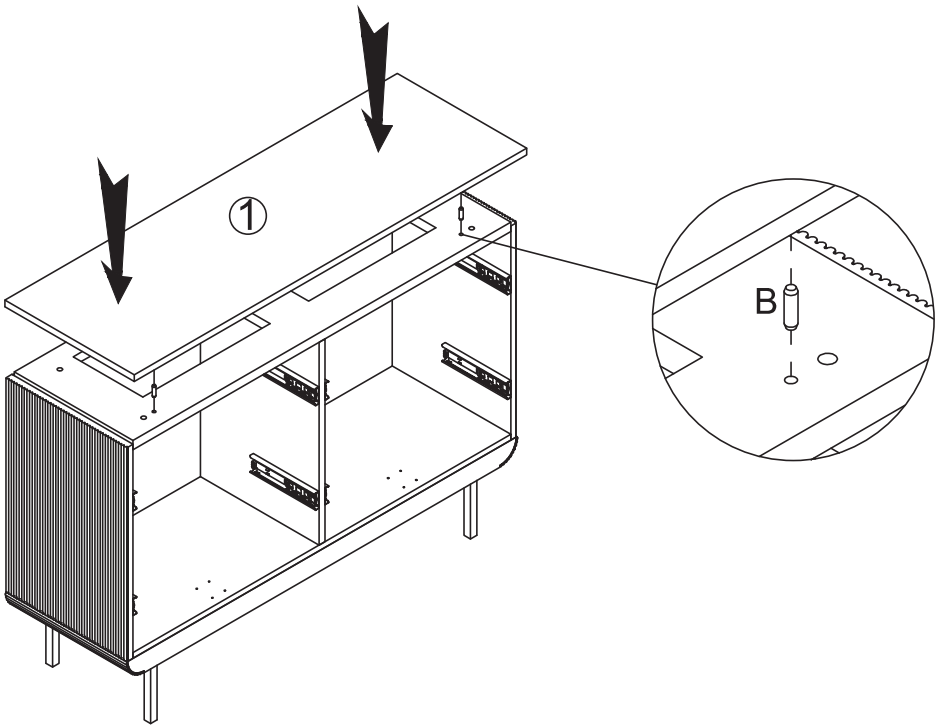


B		2pcs

furniturebox

STEP 10

Attach Top Panel [1] to Top Connecting Plate [2] using 4 x Bolts [D] and 4 x Washers [E] with Allen Key[A]

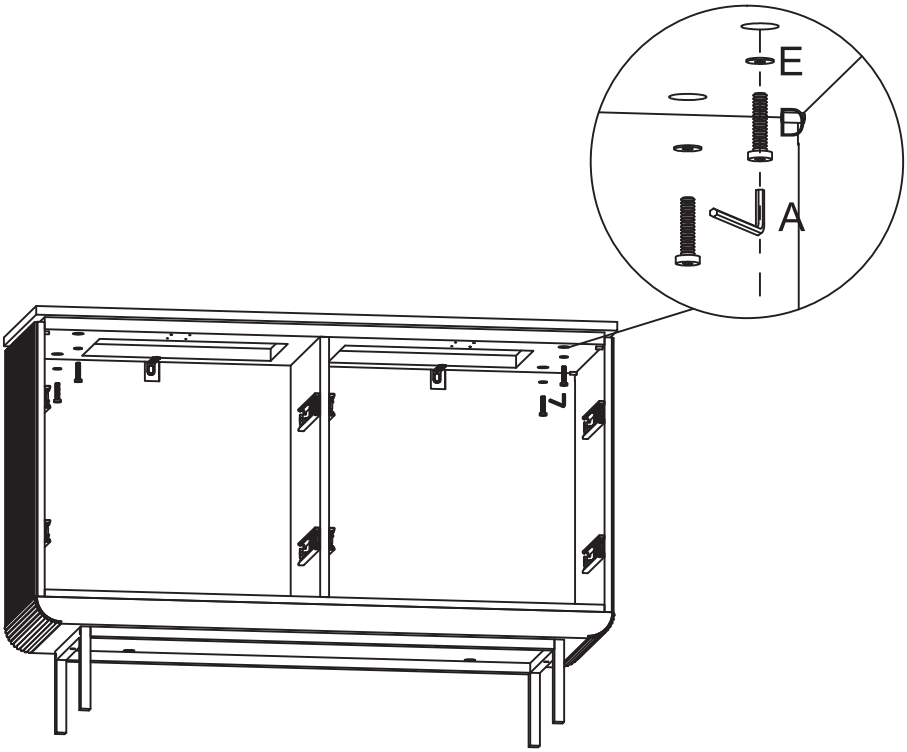


A		1pc
D		4pcs
E		4pcs


furniturebox

STEP 11

Attach 4 x Push-Open [J] to Top Connecting Plate [2] and Bottom Panel [3] using 16 x Screws [G] with a Phillips Head Screwdriver.

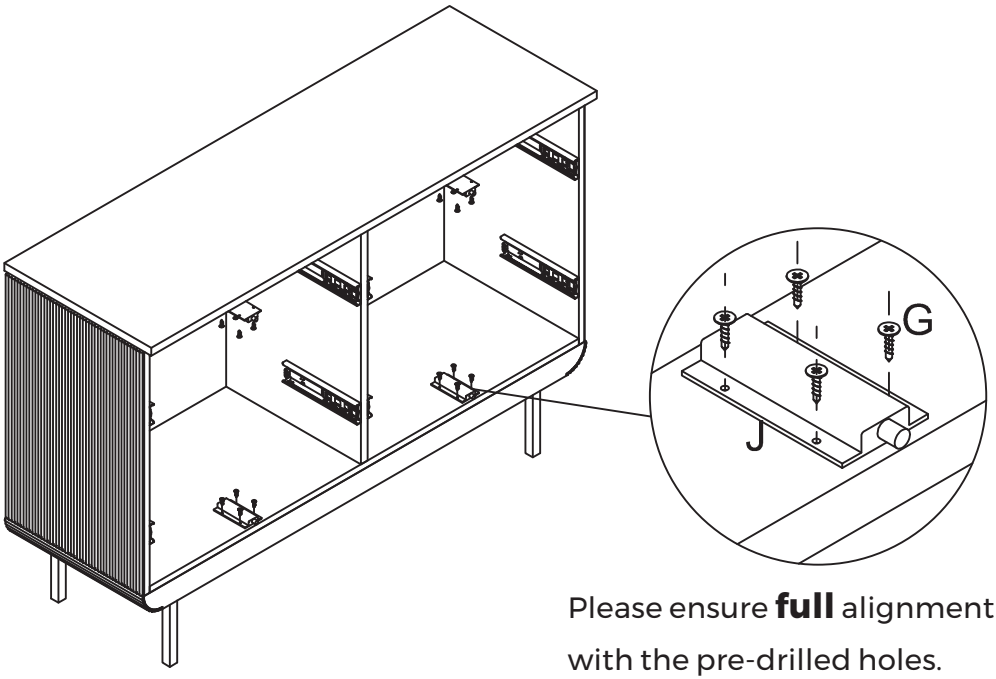


Please ensure **full** alignment with the pre-drilled holes.

G		16pcs
J		4pcs

furniturebox

STEP 12


Attach Drawer Left Side Panels [12] and Drawer Right Side Panels [13] to the four Drawer Front Panels [8], [9], [10] and [11].

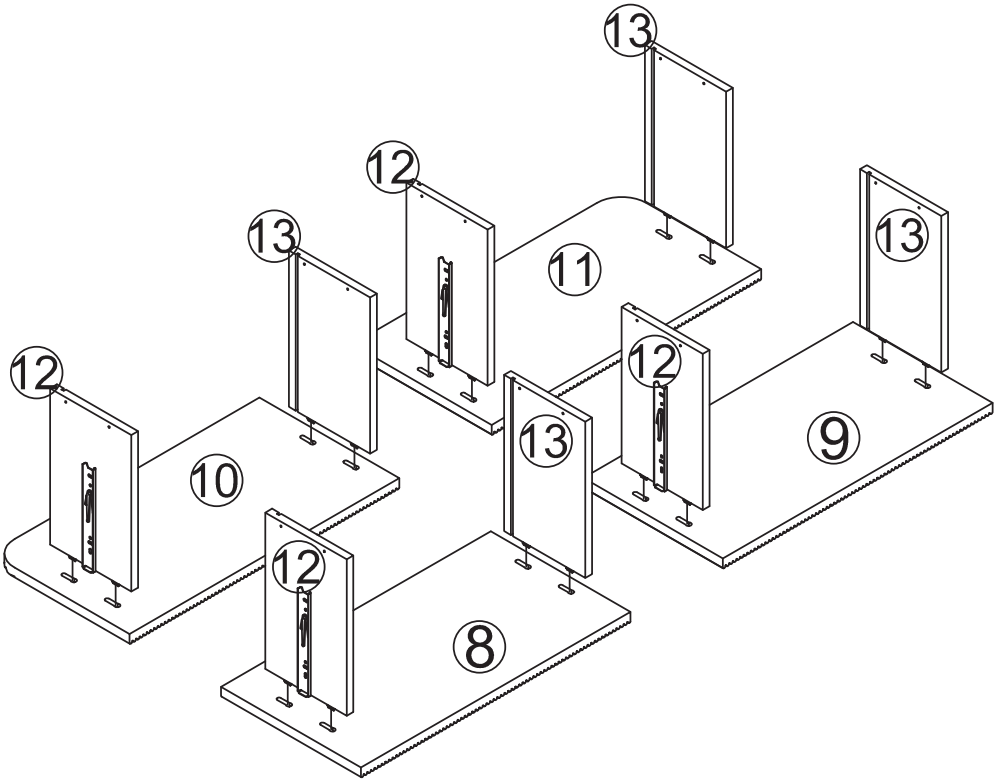

furniturebox

STEP 13


Attach 4 x Drawer Bottom Panels [15] to Drawers Frame [8+9+10+11] as shown.

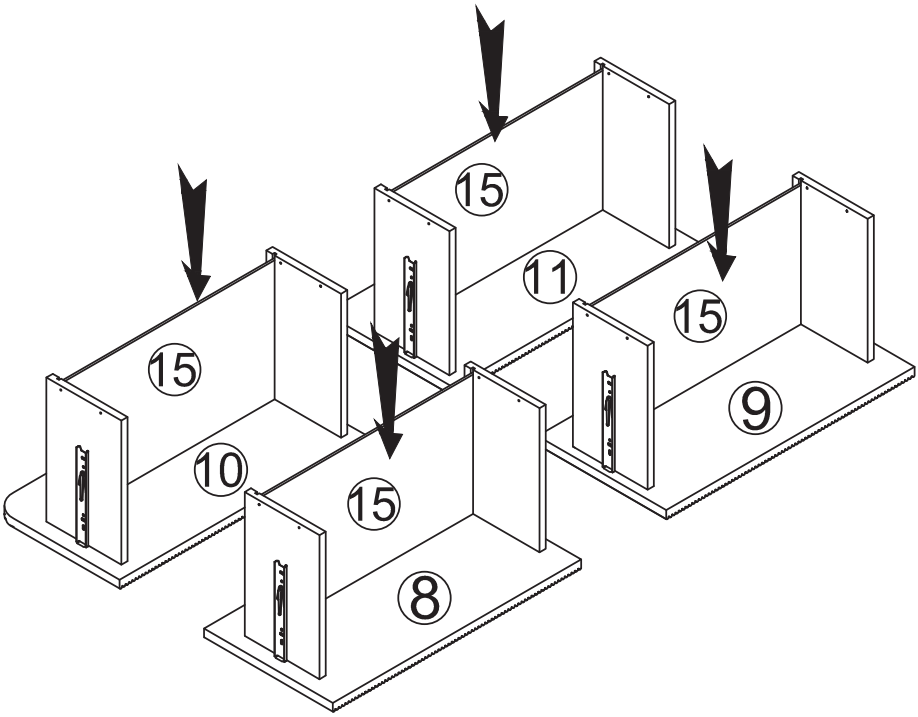

furniturebox

STEP 14

Attach 4 x Drawer Back Panels [14] to Drawers Frame [8+9+10+11] using 16 x Screws [H] as shown.

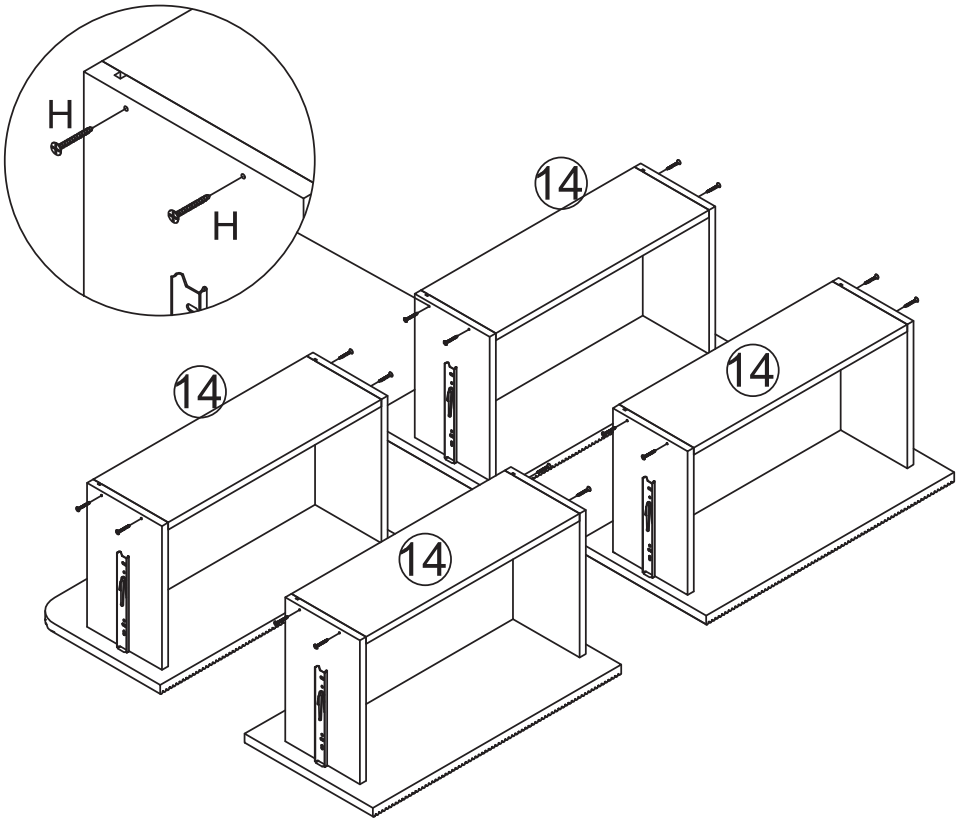


H		16pcs


furniturebox

STEP 15

For safety, this unit should be securely affixed to the wall using appropriate fixings for your wall type. **Before drilling, always check for hidden pipes and electrical wires in the wall to avoid damage or iniury.** If in doubt, please consult a professional or seek advice from your local hardware store.

1. **With assistance**, carefully move the unit into its final position.
2. **Mark** the wall using the pre-attached L-bracket [F] as a guide.
3. Remove the unit and prepare the wall for **appropriate fixings** for your wall type (e.g. masonry, plasterboard, etc.).
4. **Reposition the unit** and secure the pre-attached L-bracket [F] to the wall using **appropriate fixings** suitable for your wall type.
5. Lift the cabinet from its base, not by the top panel. Lifting by the top panel may cause it to detach.

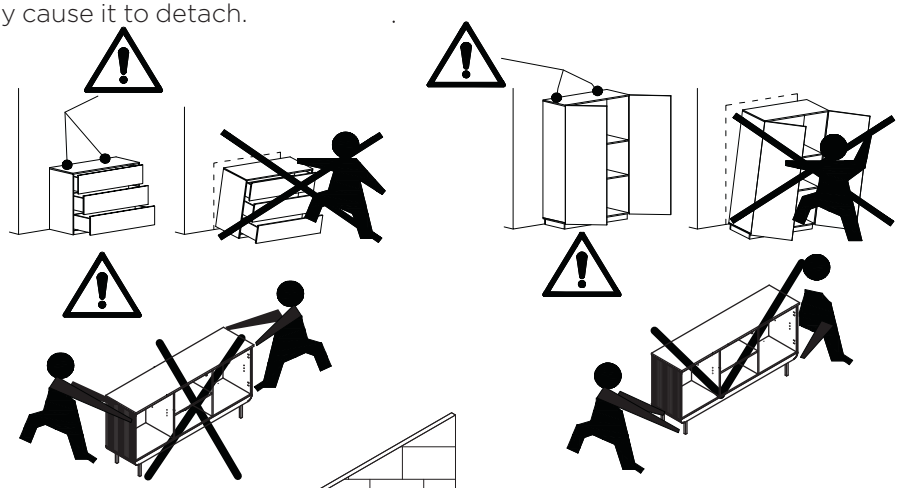

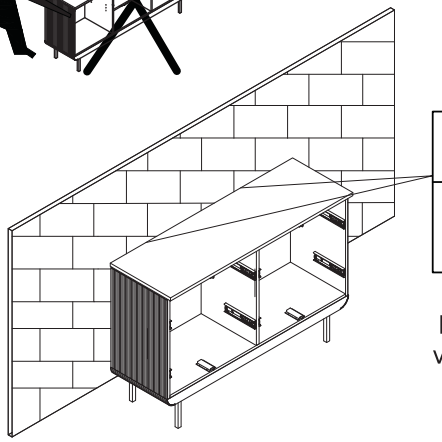



Fully tighten the bolts [C] in step 3 with Allen Key [A].


furniturebox

STEP 16


Attach 2 x Drawers [10+11] to 4 Chest of Drawers as shown.

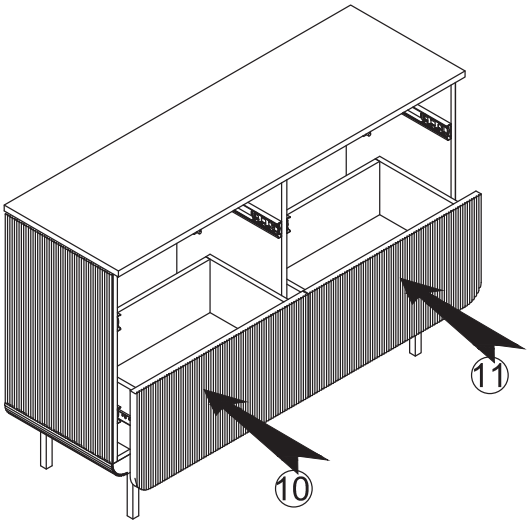

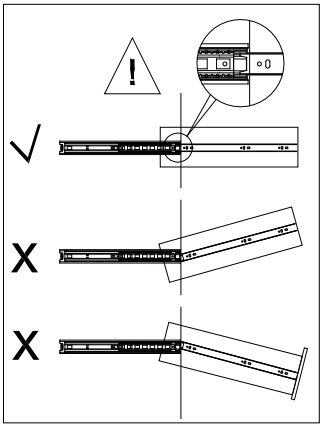

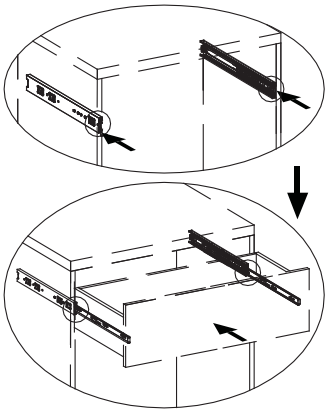

Move the inner ball-bearing runner to the front of the slide.




Gently insert the drawer runner into the ball-bearing track.





furniturebox

STEP 17


Attach 2 x Drawers [8+9] to 4 Chest of Drawers as shown.

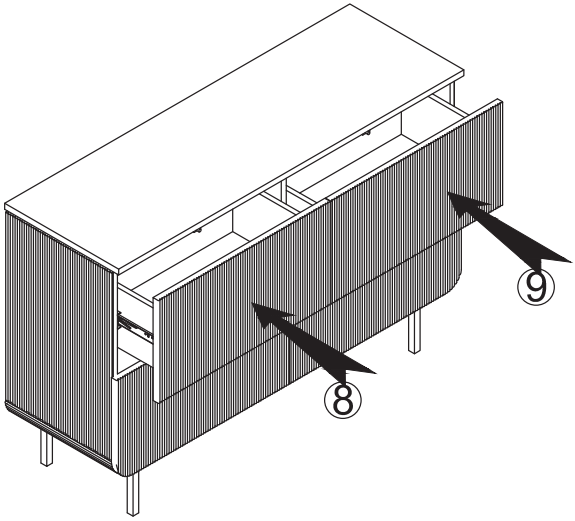

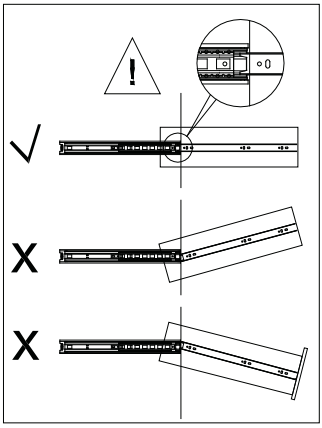

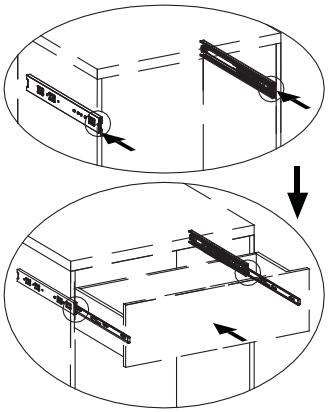

Move the inner ball-bearing runner to the front of the slide.




Gently insert the drawer runner into the ball-bearing track.



furniturebox

STEP 18

Your 4 Chest of Drawers is complete and ready to use.

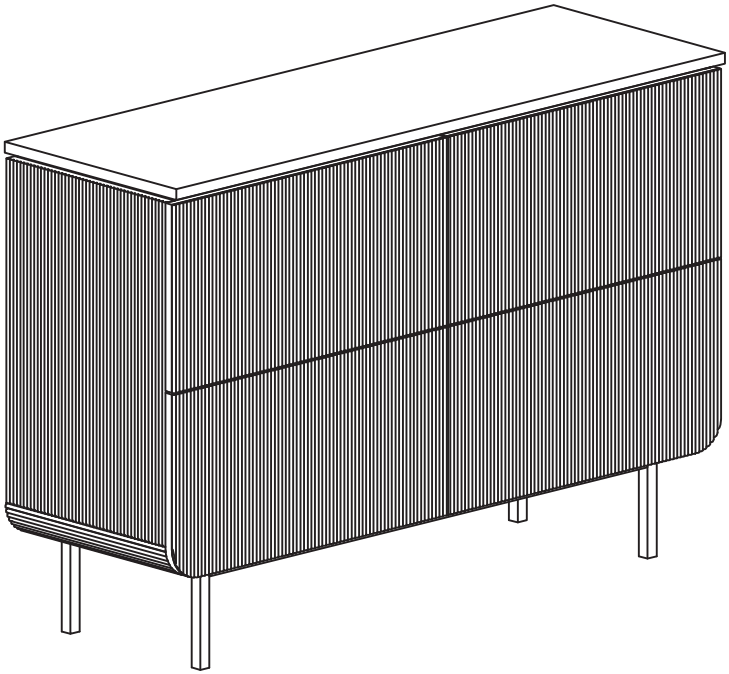

Please ensure any and all fixings and fittings are FULLY tightened before using this product

Looking Good!


Now you've assembled your furniture, find out how to care for your item and keep it looking brand new.

Product Care Guide



Look for your care guide in the box or visit:
www.furniturebox.co.uk/club/care-guide

let's stay IN TOUCH

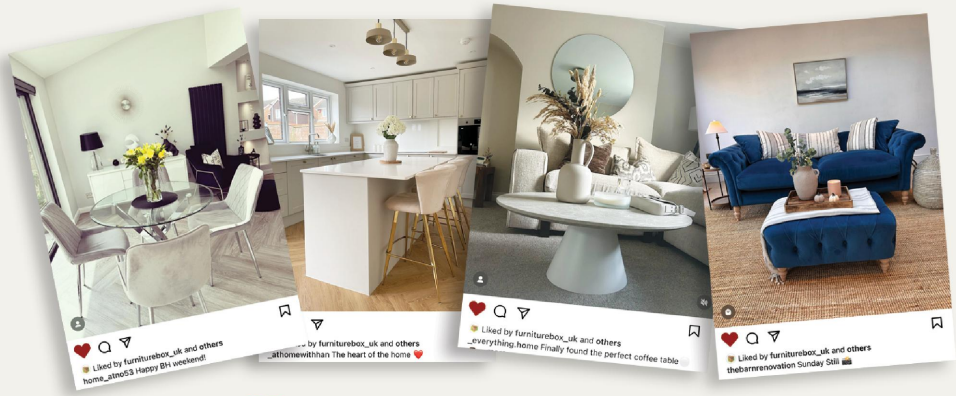

WE LOVE INTERIORS! SHARE YOURS WITH US ON SOCIAL MEDIA

1. Follow us on our socials | **2.** Post your snap or video
3. Tag us so we can see (and for a chance to be featured!)

@furnitureboxUK @furniturebox_uk @furnitureboxuk @furniturebox_uk

We're proud of our service and product reviews

Trustpilot

RATED EXCELLENT based on thousands of Trustpilot reviews

our 2 year GUARANTEE

Our products come with a 2 year guarantee, giving you extra peace of mind when shopping with us!

What the guarantee covers

PRE-INSERTED FIXINGS
e.g. loose metal threads

FAULTY JOINTS
e.g. legs bending

EXTERNAL FIXING FAULTS
e.g. metal discs removing from table top

STRUCTURAL INTEGRITY
e.g. the frame of the product

Activate your Guarantee

Scan the QR code to read the full guarantee online and register your product. It only takes a moment to fill out.
Or visit: furniturebox.co.uk/our-guarantee

Furniturebox Unit 6, Indurent Park Chippenham, Clanville Way, Chippenham, SN15 5BD, UK
Telephone: 01747 863 333 **Email:** sales@furniturebox.co.uk