HYLONE

Hylone Mid Back Drafting

HL-0006-C

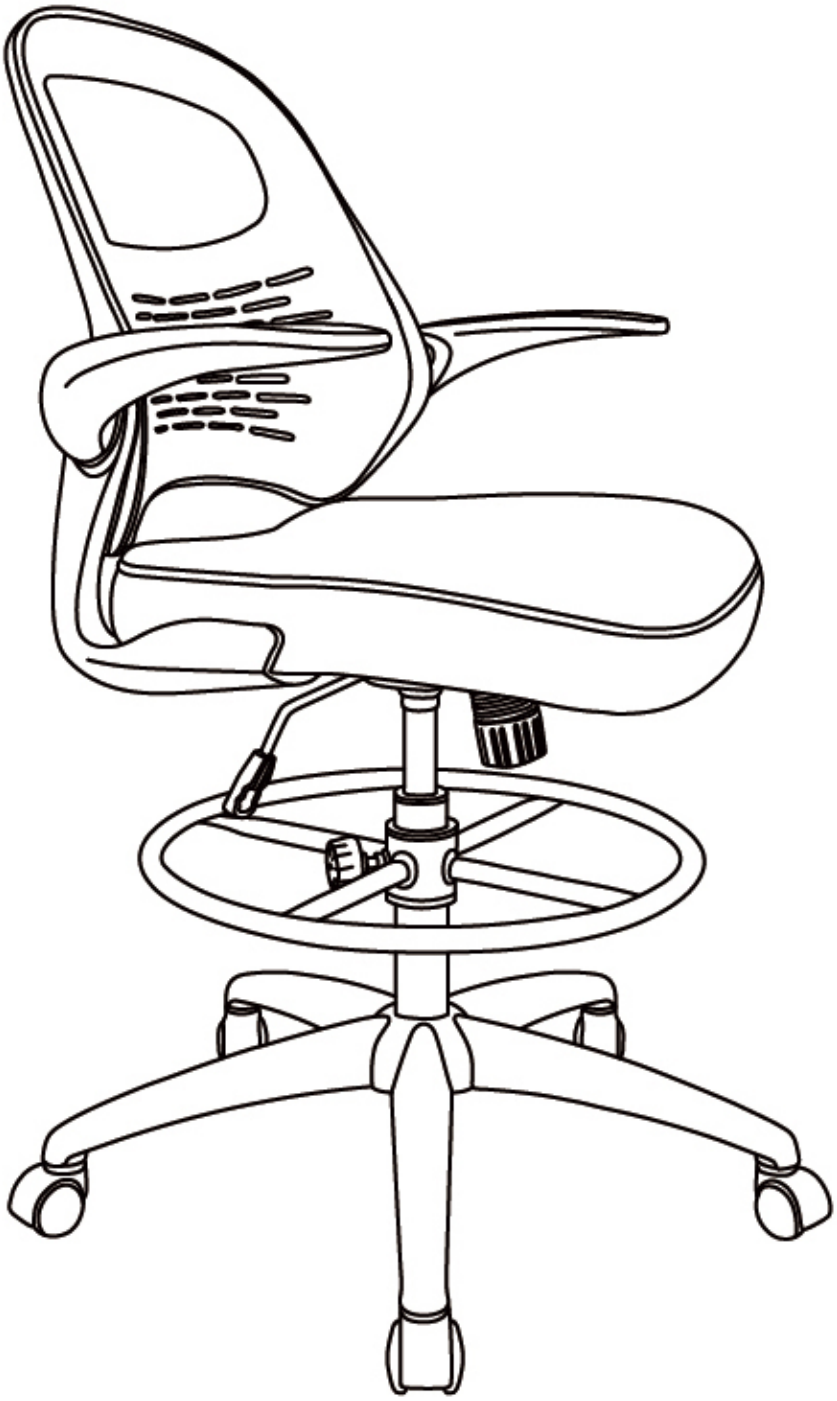

support@hyloneoffice.com
www.hyloneoffice.com
youtube.com/watch?v=jV3P6aY1G5A

HYLONE

Dear valued customer,

Thank you for purchasing from HYLONE!

We spare no effort to create high-quality and comfortable products for customers. Please contact our customer service team for any problems: **support@hyloneoffice.com.**

We provide each customer with the best quality service, continuously improve product quality while solving problems for you, we value your voice, every feedback and review.

Before you want to return the goods, please give us a chance to help you. In fact, in most cases, we have solved problems for customers and avoided the trouble of returning goods.

Have a more wonderful day with the HYLONE office chair!

Sincerely,

HYLONE

Instruction Manual

Contents

Make sure that the package contains the following parts:

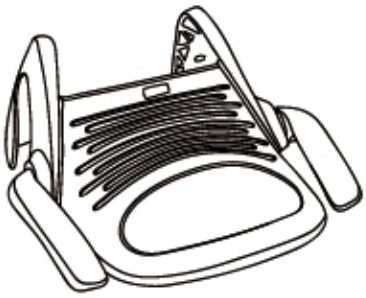

① Back Cushion With Arms(1)



② Seat Cushion(1)



③ Gas Lift(1)

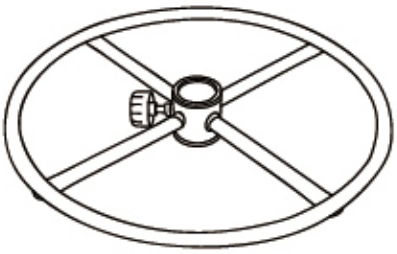

④ Foot Ring(1)



⑤ Seat Plate(1)



⑥ Star Base(1)



⑦ Casters(5)



Bolts M6*35mm(4)
Ⓑ



Bolts M6*20mm(4)
Ⓒ



Washers M6*18mm(8)
Ⓓ



Wrench(1)
Ⓕ

Safety and Compliance

- Use care when handling
- Please read the instructions completely before assembly
- Remove all parts from the carton and ensure all parts are included prior to assembly
- Assemble the chair on the carton or carpet to prevent scratching the chair
- Be careful not to cross-thread screws
- Do not use power tools







Assembly Instructions

Step 1: Push in the seat cushion to the back cushion as shown in the picture.
Aligning the holes on the one side of arm with the holes on the seat bottom, assembling with two (B) bolts, two (D)washers using the wrench (E). DON'T fully tighten, keep 50% tightness.

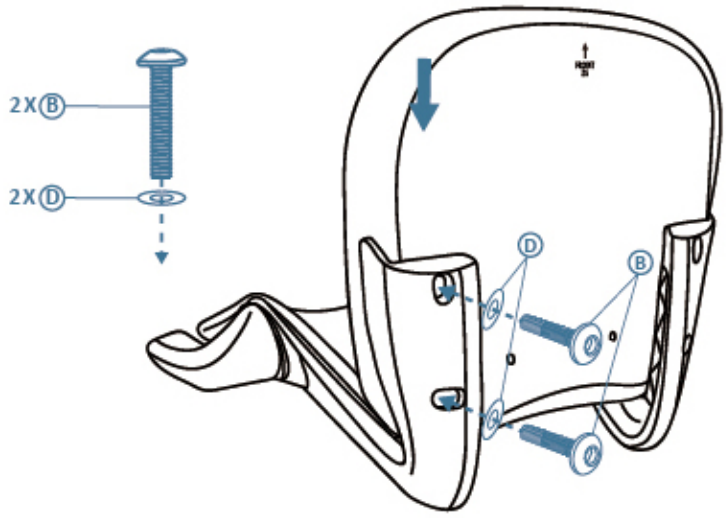

Step 2: Aligning the holes on the other side of arm with the holes on the seat bottom, (you may need to pull out the arm side to make sure the holes are aligned).
Assembling with two (B) bolts, two (D)washers using the wrench (E).
Then tighten the two (B) bolts of step 1.

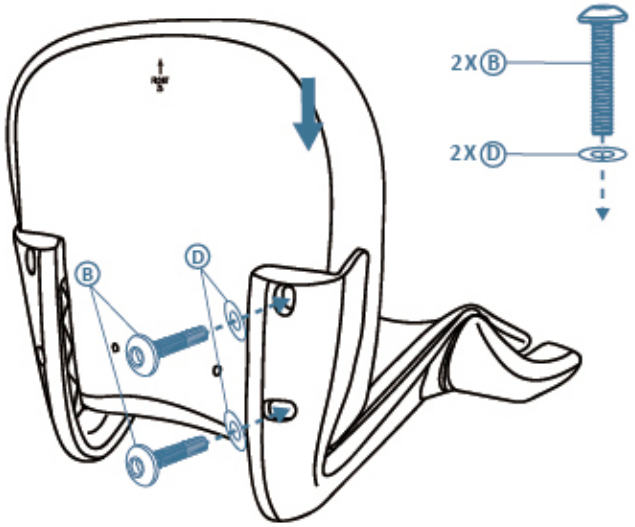

Step 3: Attach the seat plate to the seat cushion using four (C) bolts and four (D)washers. Tighten all the bolts with the wrench (E), being careful not to miss-thread the bolts or damage the seat.

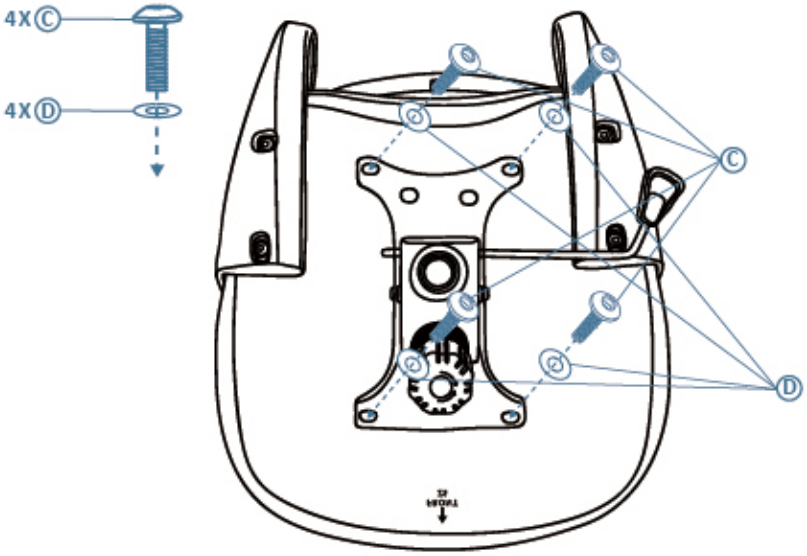

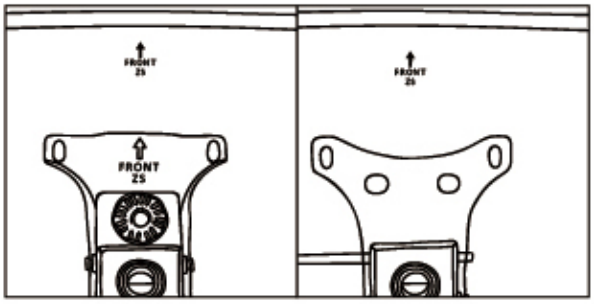

Step 4: Turn the star base upside down, then press the casters into the holes at the end of each base leg; Insert the gas lift into the center hole of the star base.
Slide the foot ring around the gas lift and tighten into place by turning the tension knob to the right.

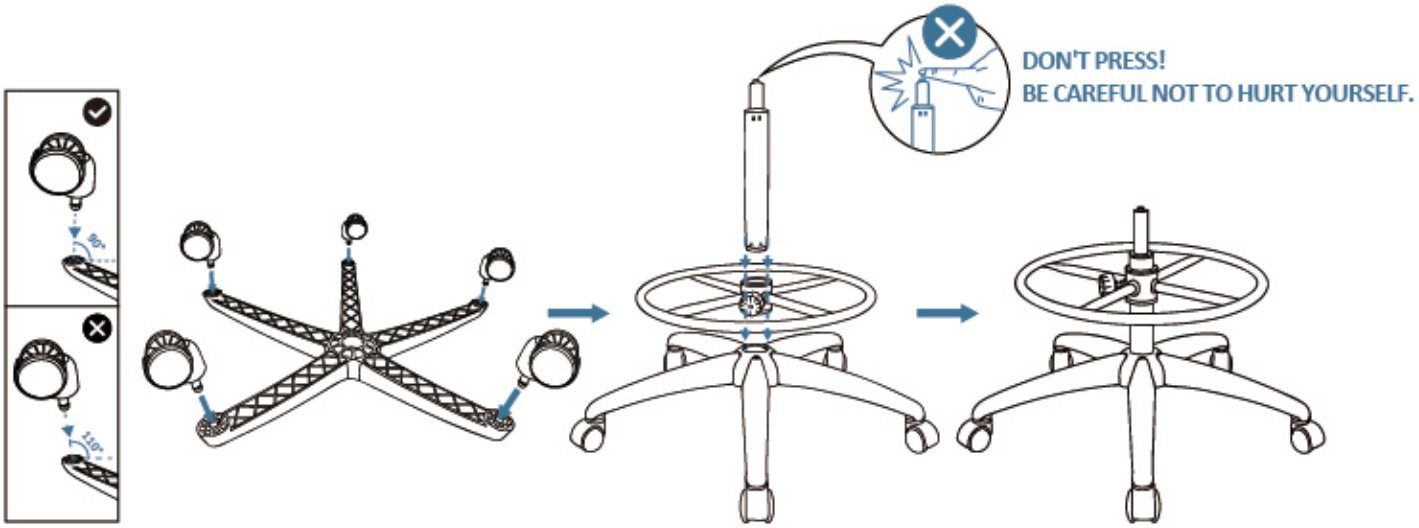

DON'T PRESS!
BE CAREFUL NOT TO HURT YOURSELF.

Step 5: Attach the seat cushion down onto the lift firmly until the connection is secure.

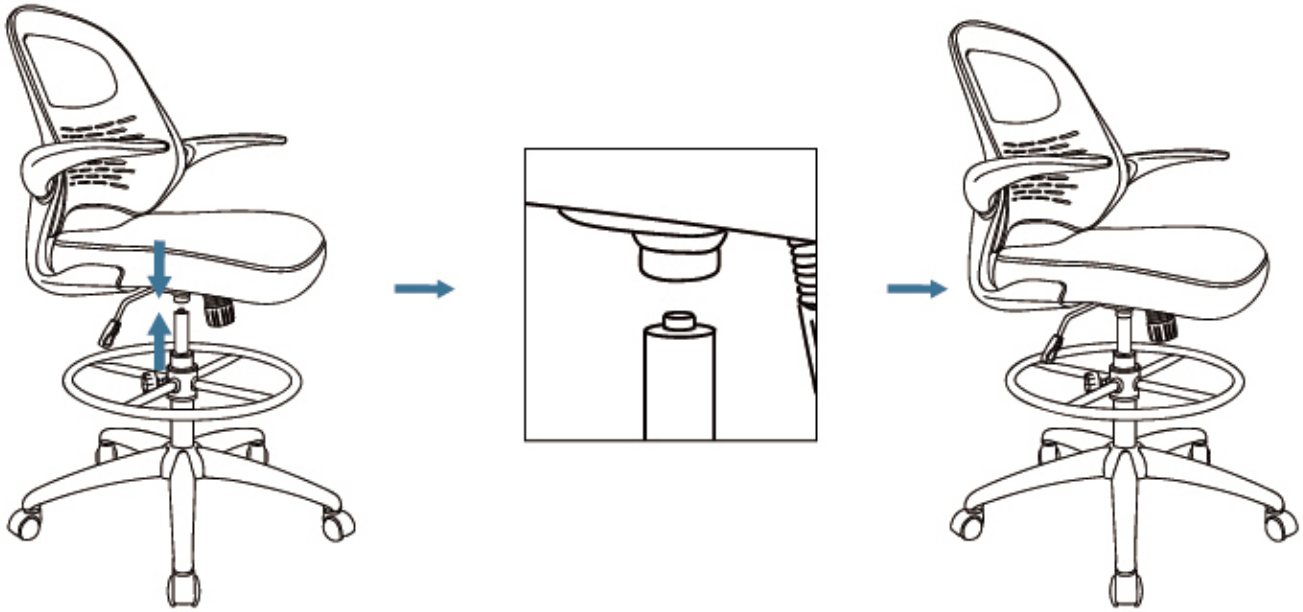

Adjustment

Adjusting the seat height

To raise your seat, lean forward to lift your body weight from the seat, then pull up the lever.
To lower the seat, pull up the lever while you're seated.

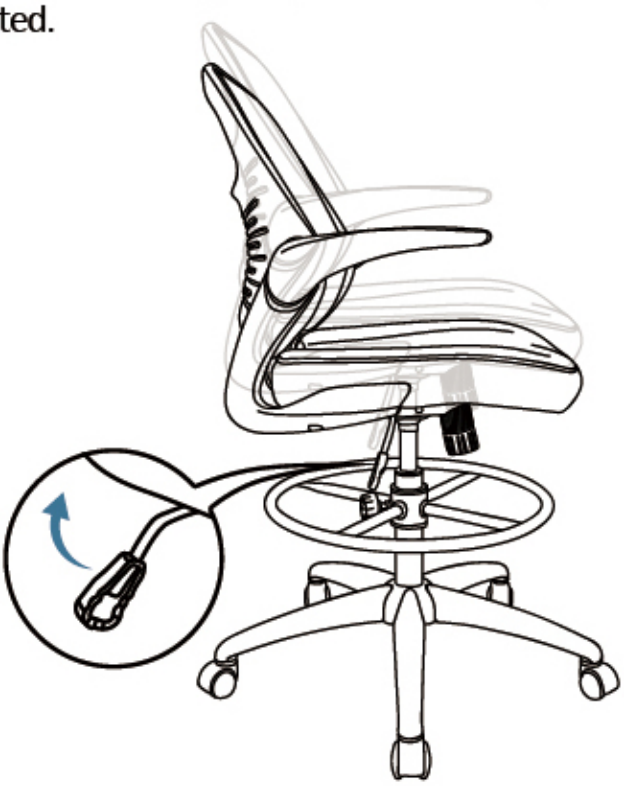

To operate the rocking function

To let your chair rocking, pull the lever out.
To stop your chair from rocking, push the lever in.

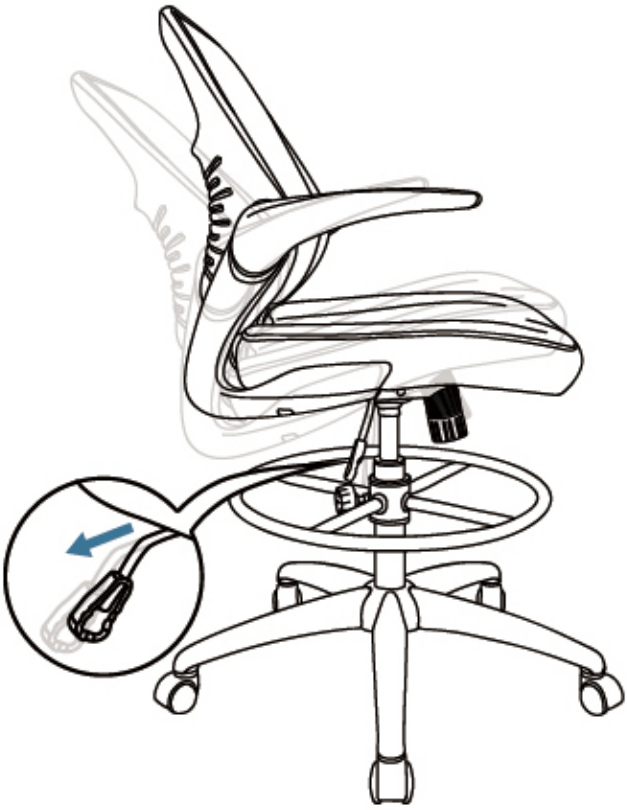

Adjusting the seat tension

Turn the tilt knob clock wise to make it easier to rock your chair backwards.
Turn the tilt knob counter-clockwise to make it harder to rock your chair backwards.

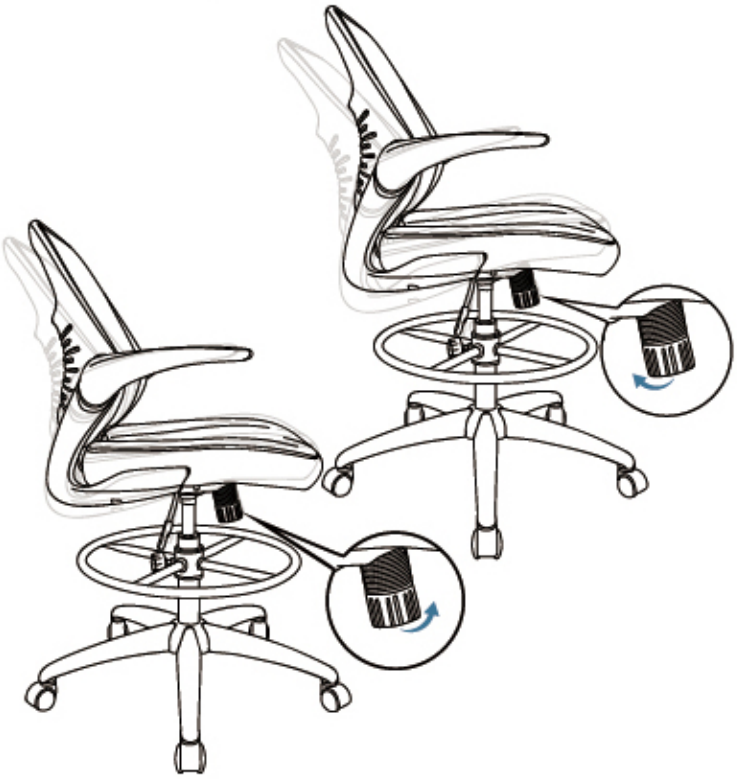

Adjusting the armrests

The armrests can be flipped up, so that you can have better rest and is space saving.

Adjusting the foot ring

Turn the tilt knob on the foot ring counter-clockwise, then the foot ring can be raised up or down to your desired height.

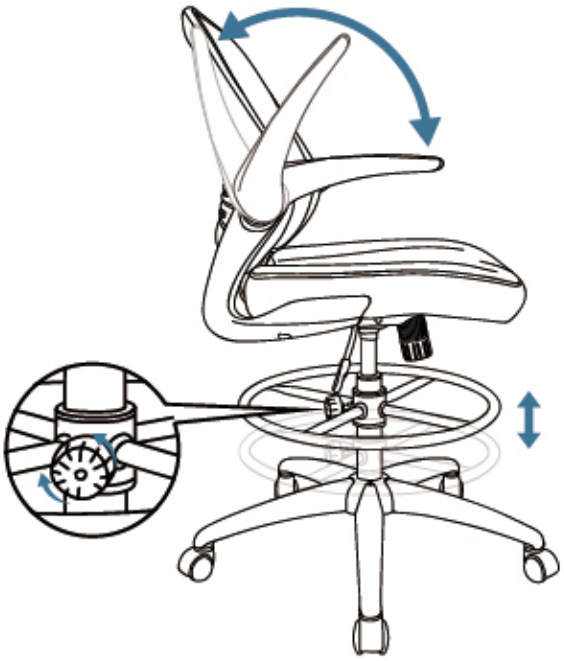

Let's take a look at the problems encountered by customers for reference.

1.How do I separate the seat from the gas lift?

First, adjust the seat to the highest position, step on the star base, hold the height control handle with one hand, and hold the seat bottom with another hand, then rock the seat left and right until it separate with the lift.

If you want to continue to separate the gas lift from the star base, hold the star base, using a rubber hammer to hammer the middle of the star base until the lift and the star base separate.

2.Why doesn't chair tilt? Why does the seat cushion lean forward and I even slide out of the seat?

Reasons for the coexistence of these two problems: reverse assembly of the SEAT PLATE. Make sure the tilt knob is in front of the gas lift.

And please kindly make sure that when you want to tilt, the Tilt knob was in the limit clockwise directions and the Tilt Control Handle in the pulled-out state.

If you encounter other problems that cannot be solved by yourself, please feel free to contact us, and our professional customer service team will help you solve your problems in time.

HYLONE

Designed for your comfort!

Since1998

*For any problem,email us:***support@hyloneoffice.com**
1-Year Limited Warranty & Lifetime Technical Support Guaranteed
If you are happy for this product, we appreciate your share on Amazon

Get more promotions: **@hyloneoffice.com**
And sign up for exclusive offers and great content!