


FAUX WOOD FIREPIT LIVE EDGE

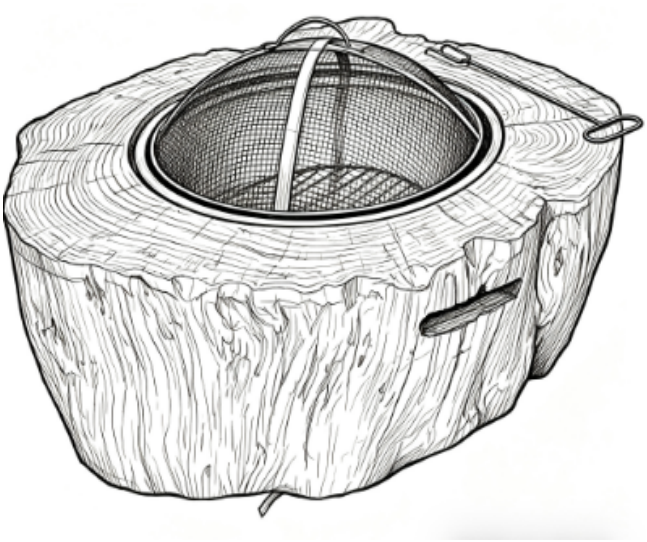


PART LIST:

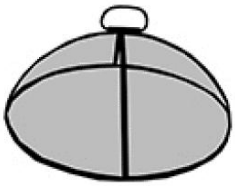


1(1X)

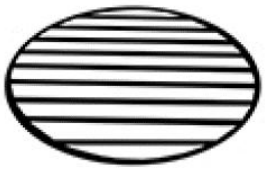

2(1x)

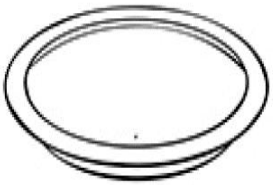

3(1x)

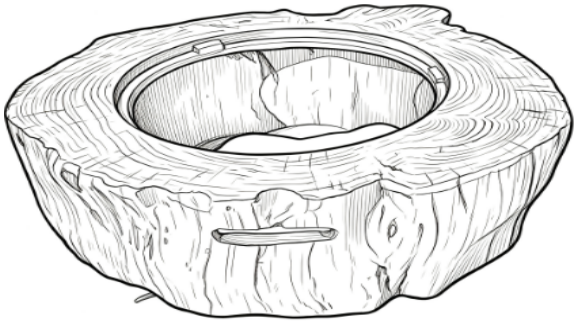

4(1x)



5(1x)

ASSEMBLY:

Unpack all the parts for a clear overview

Step 1

Unpack all components carefully from the package. Put the Fire Pit Body (4) on a hard, level, and non-combustible surface.

Step 2

Take out of Fire pit Bowl(3).

Step 3


Put the Fire Bowl into the Fire Pit opening as shown in Step 3 above. Make sure it sits evenly in the frame housing

Step 4

After the Fire Bowl is placed inside the Fire Pit Main Housing, place the Log Grill(2) into the Fire Bowl.

Step 5

Put the Spark Safeguard Screen (1) onto the top opening of the Fire Pit Body and make sure it sits into it evenly. The Firepit is ready for use.

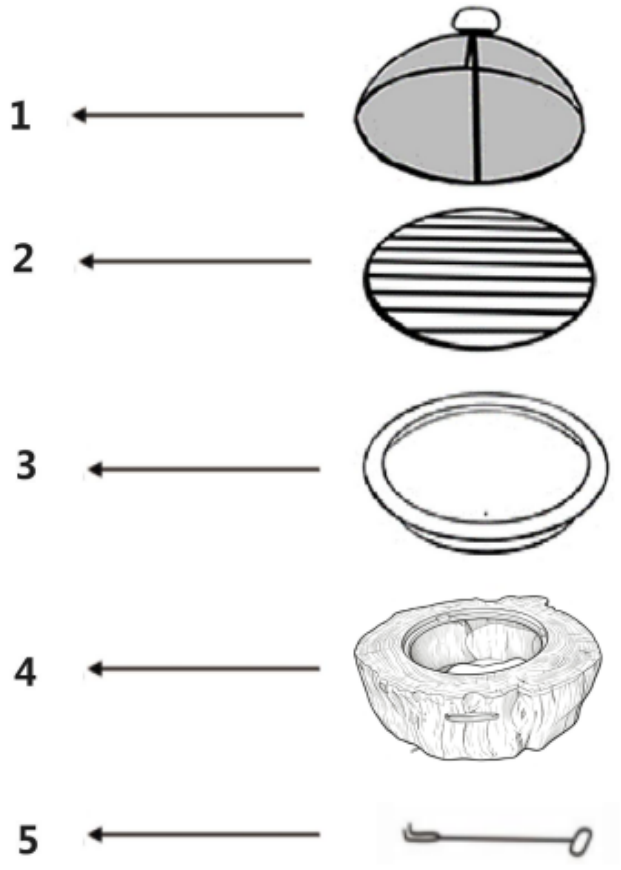

WARNING:FOR OUTDOOR USE ONLY

Retain these instructions for future reference

Before using this product, make sure you have read understand and are following all information provided in the following instructions. Failure to follow can cause death, serious injury or property damage. Improper installation ,adjustment, alteration or maintenance can cause injury or property damage.

Important safeguards

1. **This product is for outdoor use only and shall not be used in a building, garage, or any other enclosed area. Toxic carbon monoxide fumes can accumulate and cause asphyxiation.**
2. **This product should only be used by adults and all children and pets should be kept at a safe distance.**
3. **Do not use gasoline, white spirit, lighter fluid, alcohol, or other similar chemicals to light a fire as a rapid increase in temperature could damage this product. This product is only suitable for use with charcoal, untreated wood or dry logs. Do not use coal.**
4. **Do not use this product until it is completely assembled, and all parts are securely fastened and tightened.**
5. **Do not use the product on decking or any other flammable surfaces such as dry grass, wood chips, leaves.**
6. **Always empty this product after use. Leave a thin layer of ash to protect the bottom. Do not remove ashes or charcoal until they are completely and fully extinguished.**
7. **Do not touch this product until it is completely cooled unless you are wearing heat resistant gloves as it is hot when in use.**
8. **Do not handle or move this product when in use as it is hot.**
9. **Do not attempt to store this product until all ashes and charcoals are completely extinguished.**
10. **Always use a safety tool and heat resistant gloves when adding or moving fuel.**
11. **Always use a safety tool and heat resistant gloves to move the grill and mesh cover during use because this product will become very hot.**
12. **Do not leave a burning fire unattended.**
13. **Fire hazard-Hot embers may emit while in use.**
14. **Do not overload this product with fuel. Two small logs, 5 pounds , is sufficient. Do not add additional fuel until the fire burns down.**
15. **Do not burn fuel directly on the fire bowl base. Burn on the log grate inside the base.**
16. **Keep the fuel away from the wall of the fire bowl and the base as the high temperature may damage it.**
17. **Avoid breathing smoke from the fire and avoid getting it into your eyes.**
18. **Always thoroughly inspect this product before use.**
19. **A slight discoloration of finish may occur after use.**

LIGHTING

1. Ensure this product is positioned on a permanent flat, level, heat resistant, non-flammable surface away from flammable items.
2. Place paper or dry kindling on the log grate in the center of the fire bowl bottom. Then place dry wood or smokeless carbon on top of it.
3. Light the dry kindling or fire starter to start a fire.

Extinguishing

To extinguish this product, stop adding fuel and allow fire to die or douse with sand. Do not use water as this may damage this product.

Care and inspecting

1. This product should be inspected on a regular basis to ensure product safety and longer product life.
2. This product should be cleaned after use to ensure longer product life. Do not use oven cleaner or abrasive cleaner as they will damage this product.
3. When not in use, cover this product once completely cooled with a cover to help protect it from bad weather.
4. Store this product in a dry location to maximize product life.
5. The surface of this product will age, discolor, and develop surface rust as soon as it is placed outside and after use. This is to be expected, but it does not affect use and is not a product defect. Please see below instructions on how to refresh the paint finish.

Remove loose paint and rust from the metal with a wire brush when needed and re-paint using a high temperature paint, resistant to at least 600 degrees F. To help reduce surface rust, rub this product with an oily rag after each use.

The base body has been pre-treated with sealant but regular retreating throughout the season is recommended to extend the life and to protect the product from weathering.

Do not use indoors! Outdoor only!

Customer Service

Contact us through our website :

www.TeamCustomerService.com

If you have a question about assembly,
use or a possible missing part,
Please contact us and we will be glad to assist you.