Version: 30-Nov-2024

Instruction Manual

Pantry Cabinet	SHX15732-WH/BR/BRGR

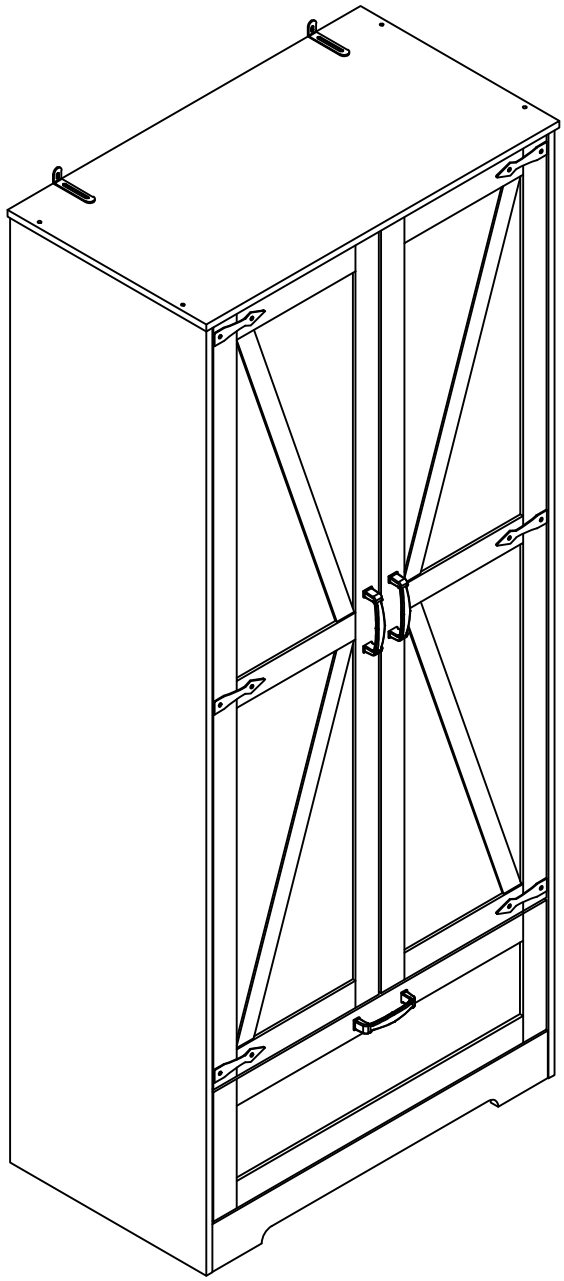

Thank you for shopping with us!

If any part is missing, broken upon receipt or you need any help from us.

For the FASTEST SOLUTION, please FIRSTLY CONTACT US at our after-sales email:

CSsince1987@hotmail. com!

Power tool is recommended for the assembly.

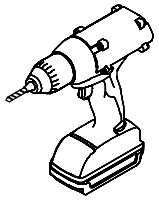

PART LIST

A	B	C	D	E
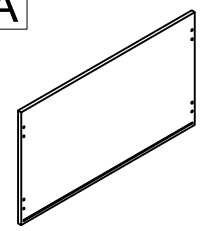	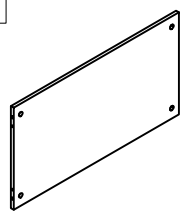	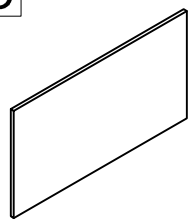	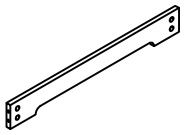	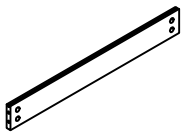
Top Panel 1 PC	Fixed Shelf Panel 3 PCS	Adjustable Shelf 1 PC	Front Foot Board 1 PC	Rear Foot Board 1 PC
F	**G**	**H**	**I**	**J**
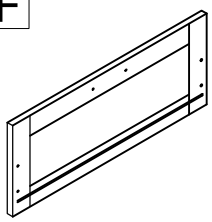	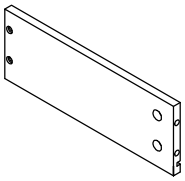	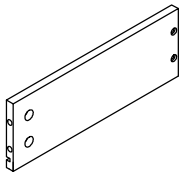	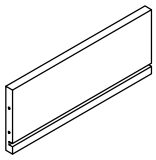	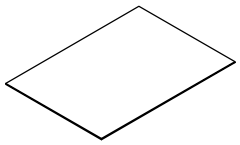
Drawer Front Panel 1 PC	Drawer Left Panel 1 PC	Drawer Right Panel 1 PC	Drawer Back Panel 1 PC	Drawer Bottom Panel 1 PC

K	L	M	N	O	P
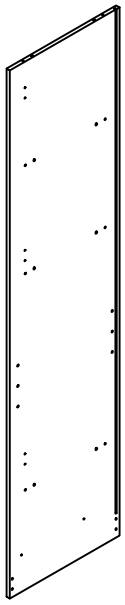	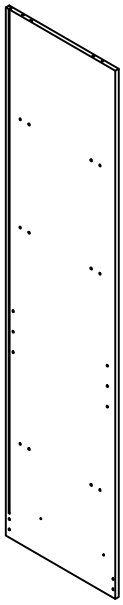				
Left Panel 1 PC	Right Panel 1 PC	Back Panel 2 PCS	Left Door 1 PC	Right Door 1 PC	1565*12*6mm Back Plasic Strip 1 PC

HARDWARE LIST

#1  Ø5*40mm	#2  Ø3.5*30mm	#3  Ø6*30mm	#4  Ø6*35mm	#5  Ø15*9mm
Screw 4PCS (Extra 1)	Screw 4PCS (Extra 1)	Wood Dowel 16PCS (Extra 2)	Cam-bolt 24PCS (Extra 3)	Cam-lock 24PCS(Extra 3)
#6 	#7 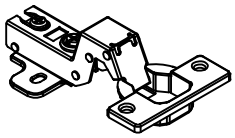 Ø26*10mm	#8  Ø3.5*15mm	#9 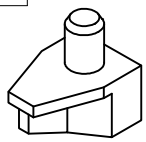 16*11*Ø5mm	#10 
Back Bracket 14 PCS (Extra 2)	Hinge (Big Curved) 6 PCS	Screw 44 PCS (Extra 4)	Shelf Holder 4 PCS (Extra 1)	Handle 3PCS
#11  M4*18mm	#12 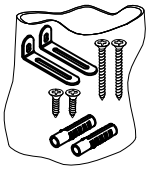	#13 DL 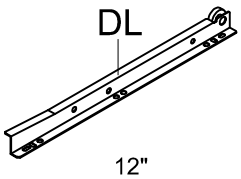 12"	#14 CL 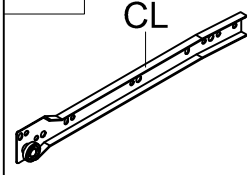 12"	#15 DR 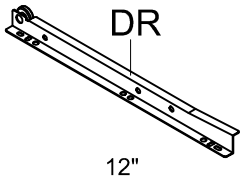 12"
Round Head Bolt 6 PCS (Extra 1)	Safety Strap Kit 1 SET	Left Drawer Slide Set (A) 1 PC	Left Drawer Slide Set (B) 1 PC	Right Drawer Slide Set (A) 1 PC
#16 CR 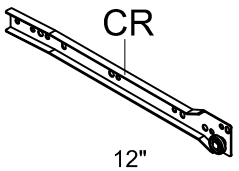 12"	#17  Ø3.5*12mm	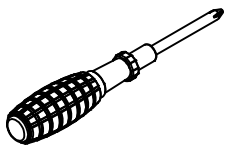		
Right Drawer Slide Set (B) 1 PC	Screw 10 PCS (Extra 2)	Phillips Screwdriver 1 PC		

Instructions For Fastening
CAM-BOLT and CAM-LOCK



CAM-BOLT



CAM-LOCK

Tools Required



INSERTING AND TIGHTENING CAM-BOLT

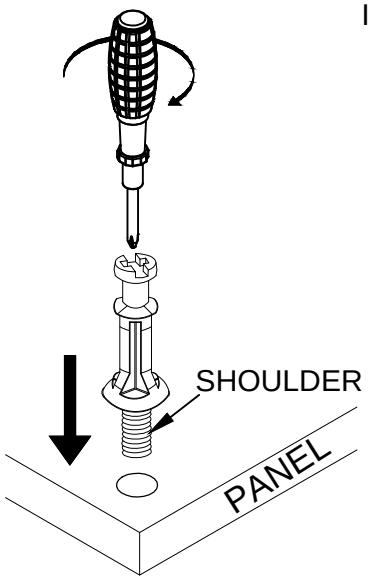

Place Cam-bolt on pre-drilled hole and screw in vertically

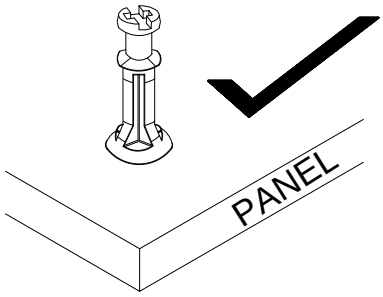

Shoulder is flushed (on the same level) with the panel.

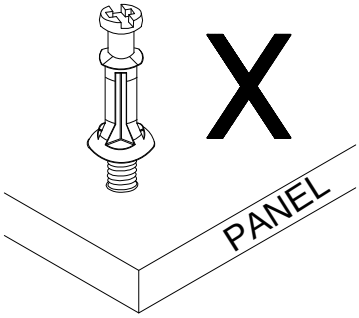

Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

INSERTING CAM-LOCK

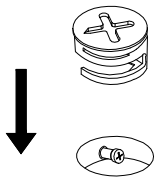

Insert Cam-lock with arrow align to Cam-bolt head

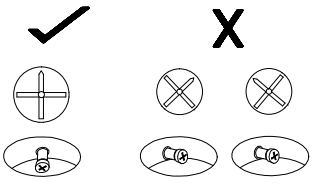

CORRECT WRONG

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

TIGHTENING CAM-LOCK

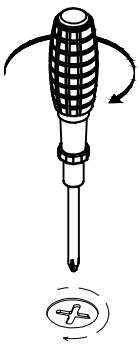

Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

Step 1.

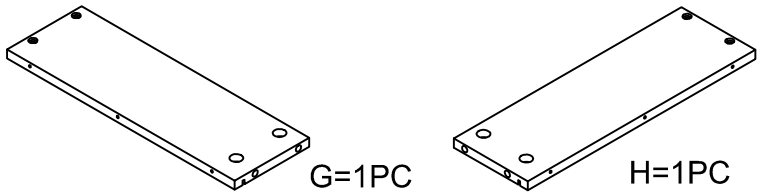
G=1PC
H=1PC

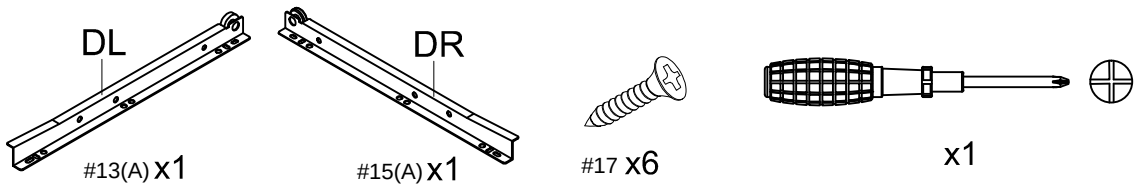
DL
DR
#13(A) x1
#15(A) x1
#17 x6
x1

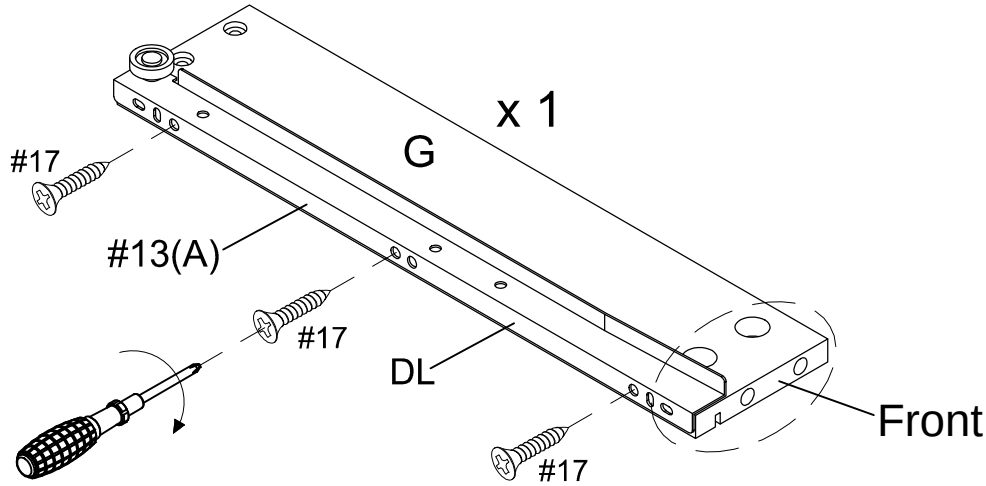
x 1
G
#17
#13(A)
#17
DL
Front
#17

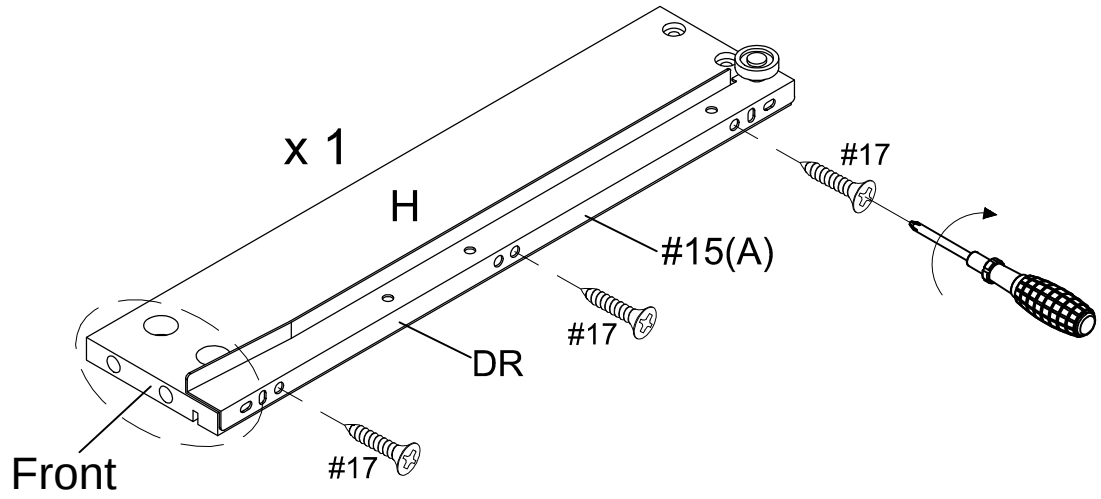
x 1
H
#17
#15(A)
#17
DR
Front
#17

Step 2.

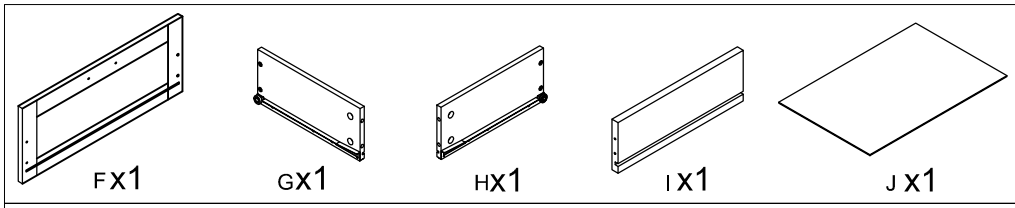

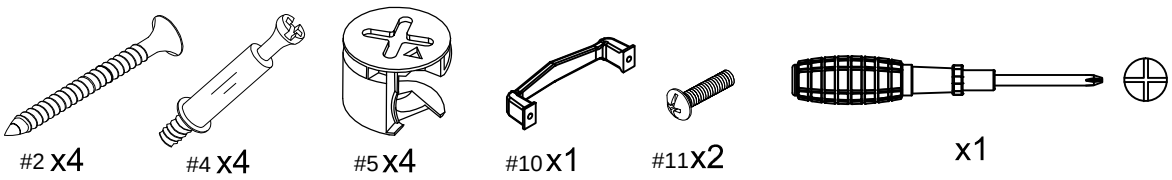

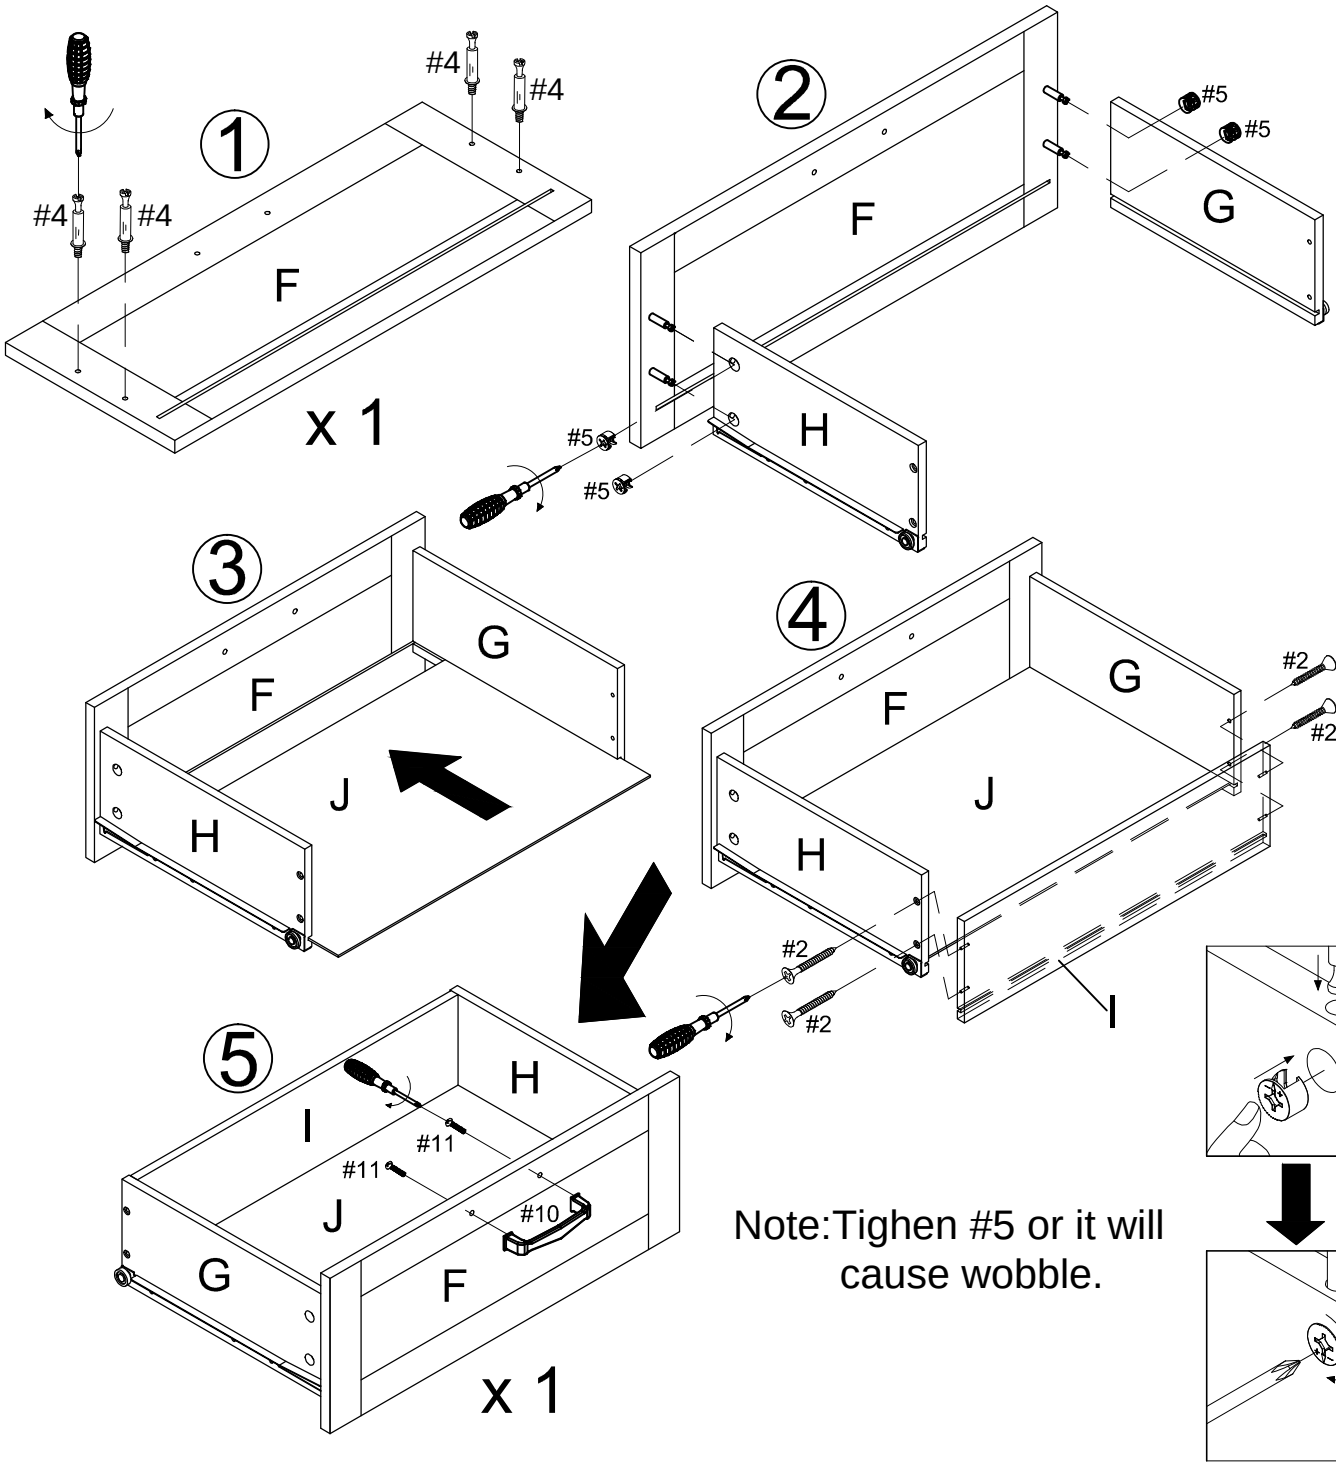

Note:Tighen #5 or it will cause wobble.

Step 3.

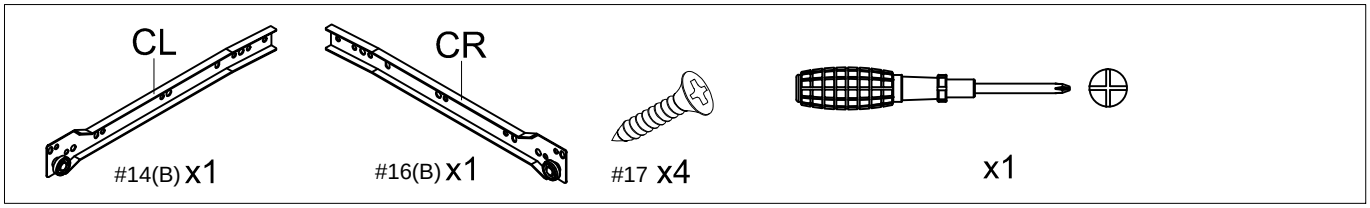
CL
#14(B) x1
CR
#16(B) x1
#17 x4
x1

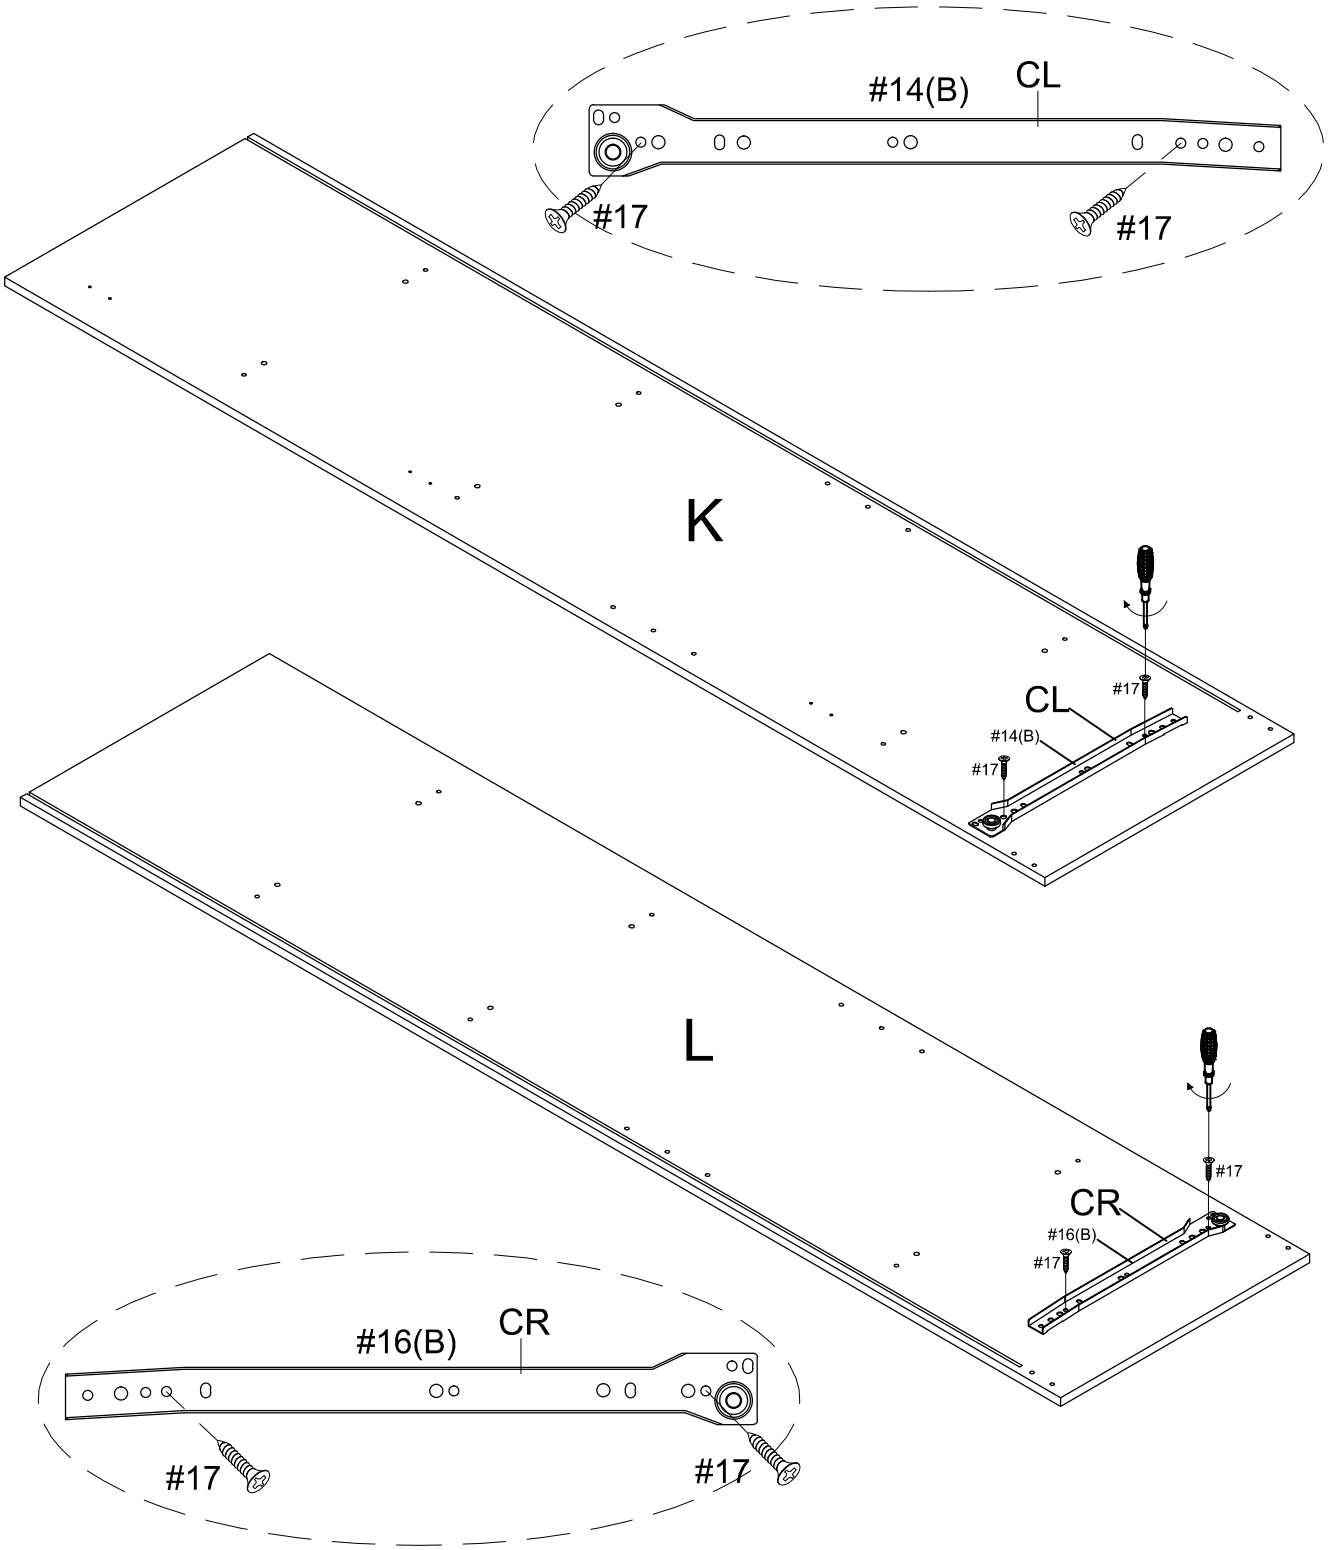
#14(B)
CL
#17
#17
K
#17
CL
#14(B)
#17
L
#17
CR
#16(B)
#17
#16(B)
CR
#17
#17

Step 4.

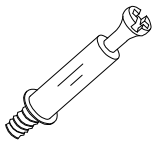

#4 x20



x1

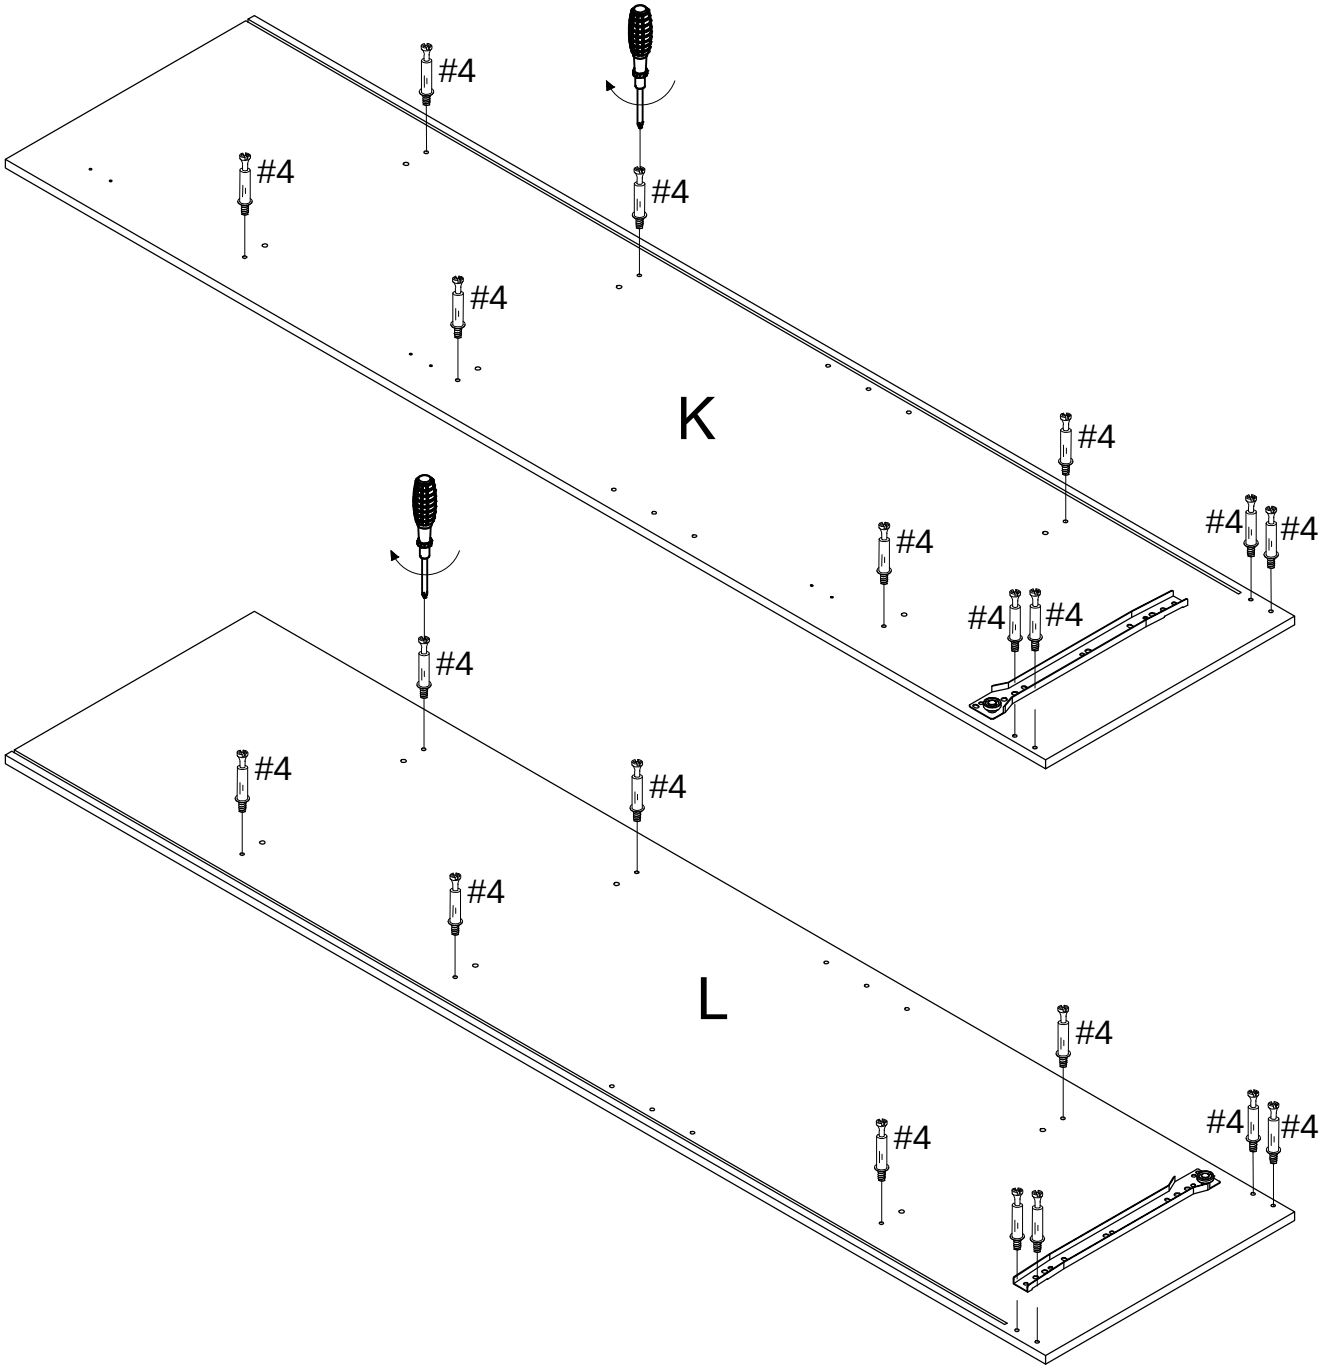

Step 5.

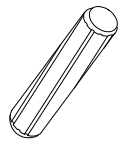
#3 x12


#5 x20


x1

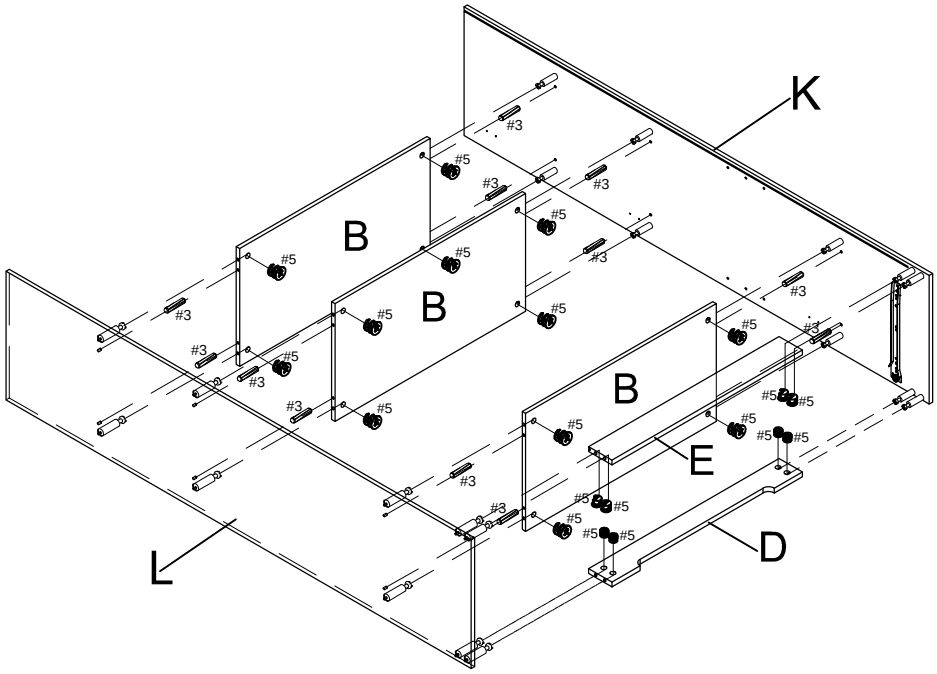

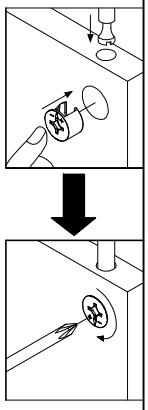

Step 6.

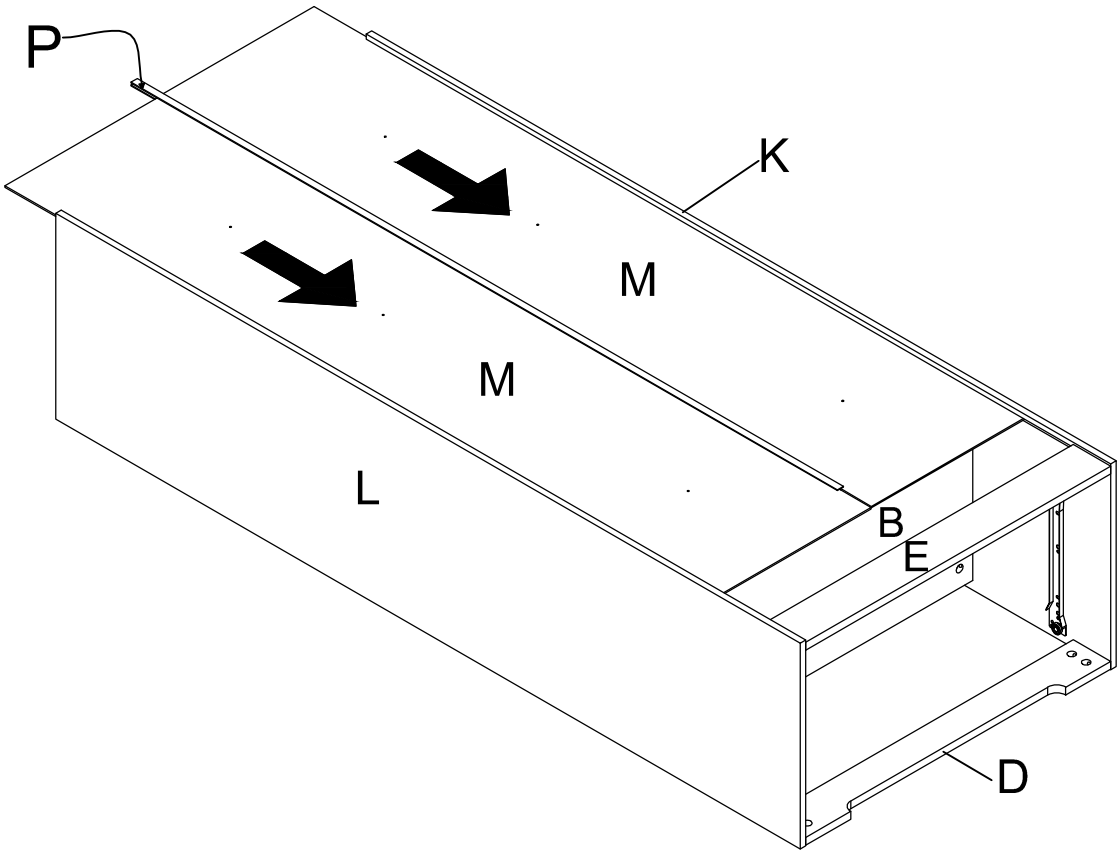

Step 7.

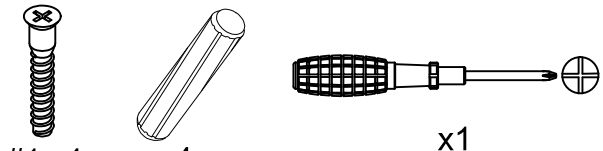

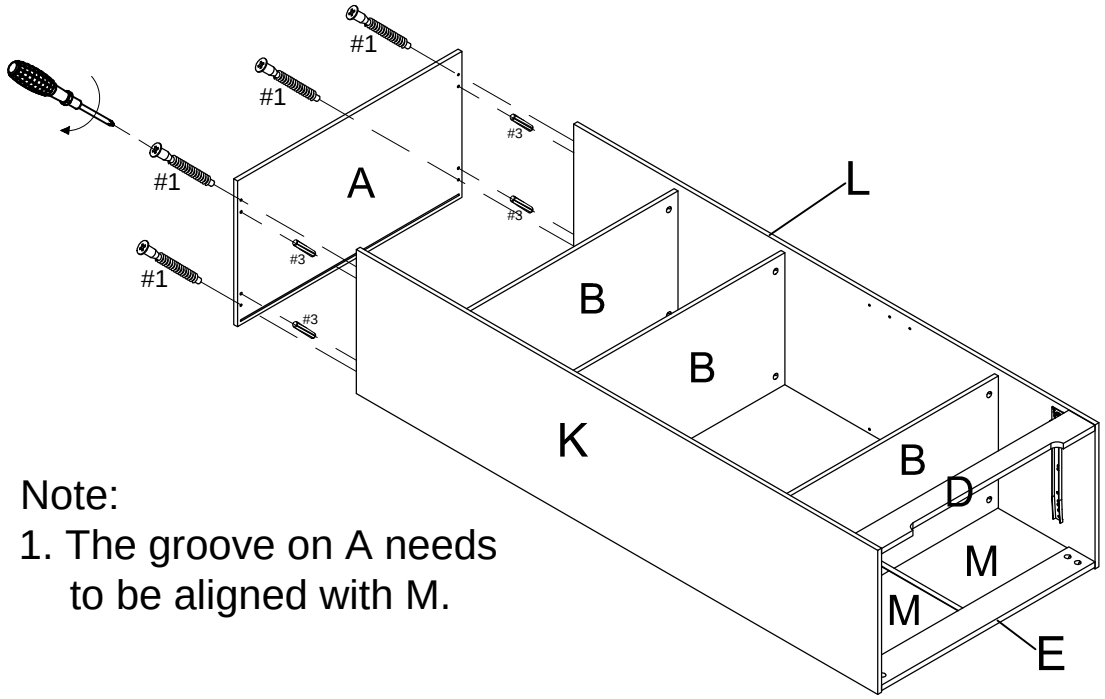

Note:
1. The groove on A needs to be aligned with M.

Step 8.

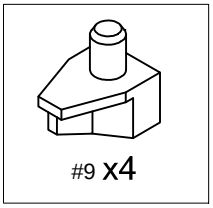

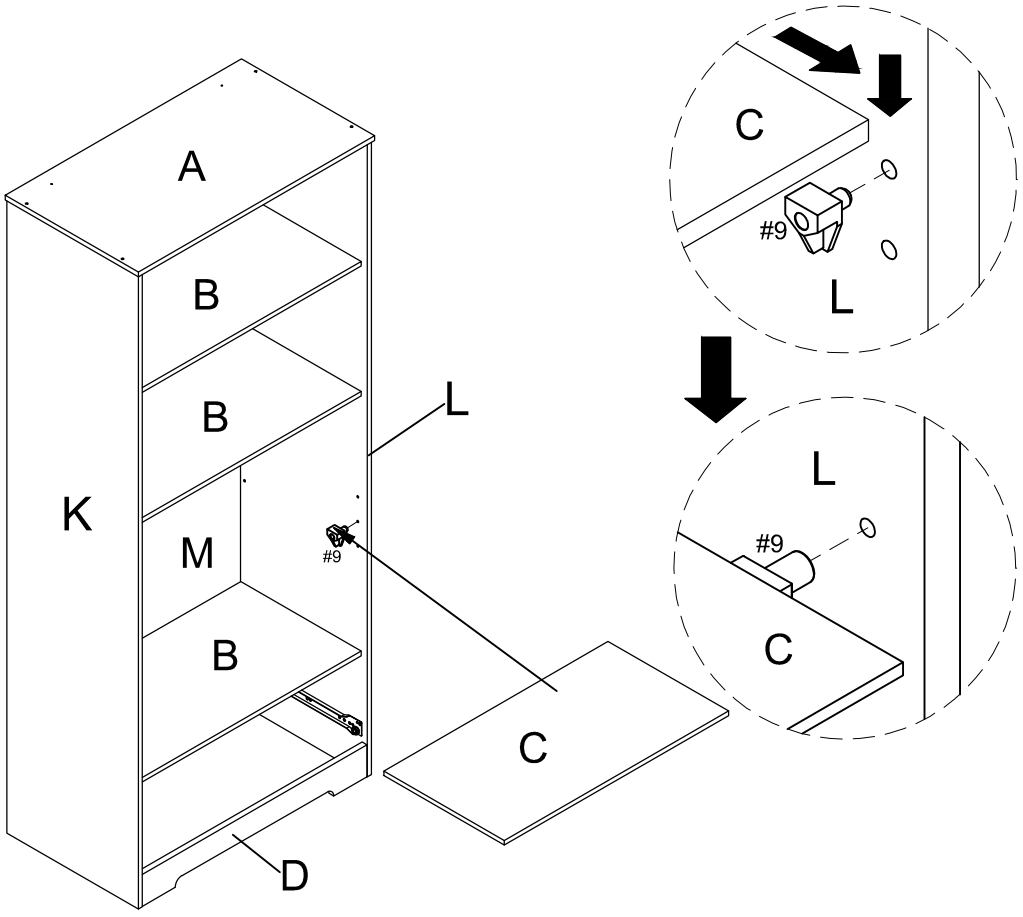

Step 9.

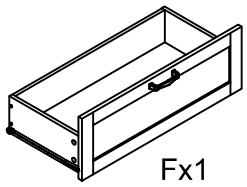

Fx1

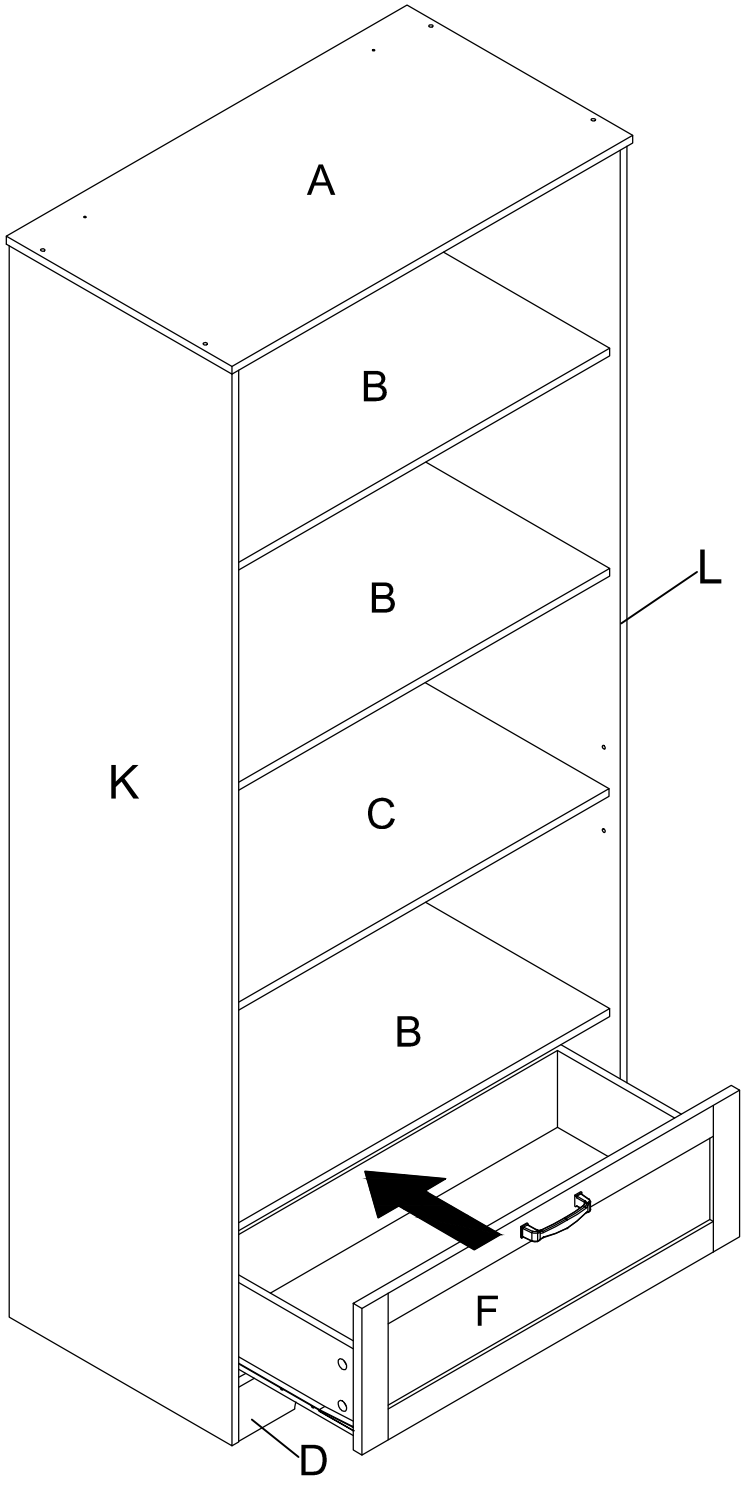

Step 10.

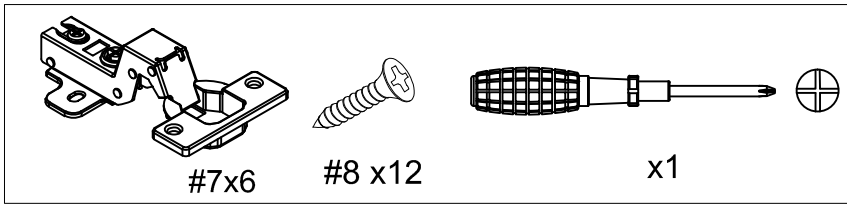

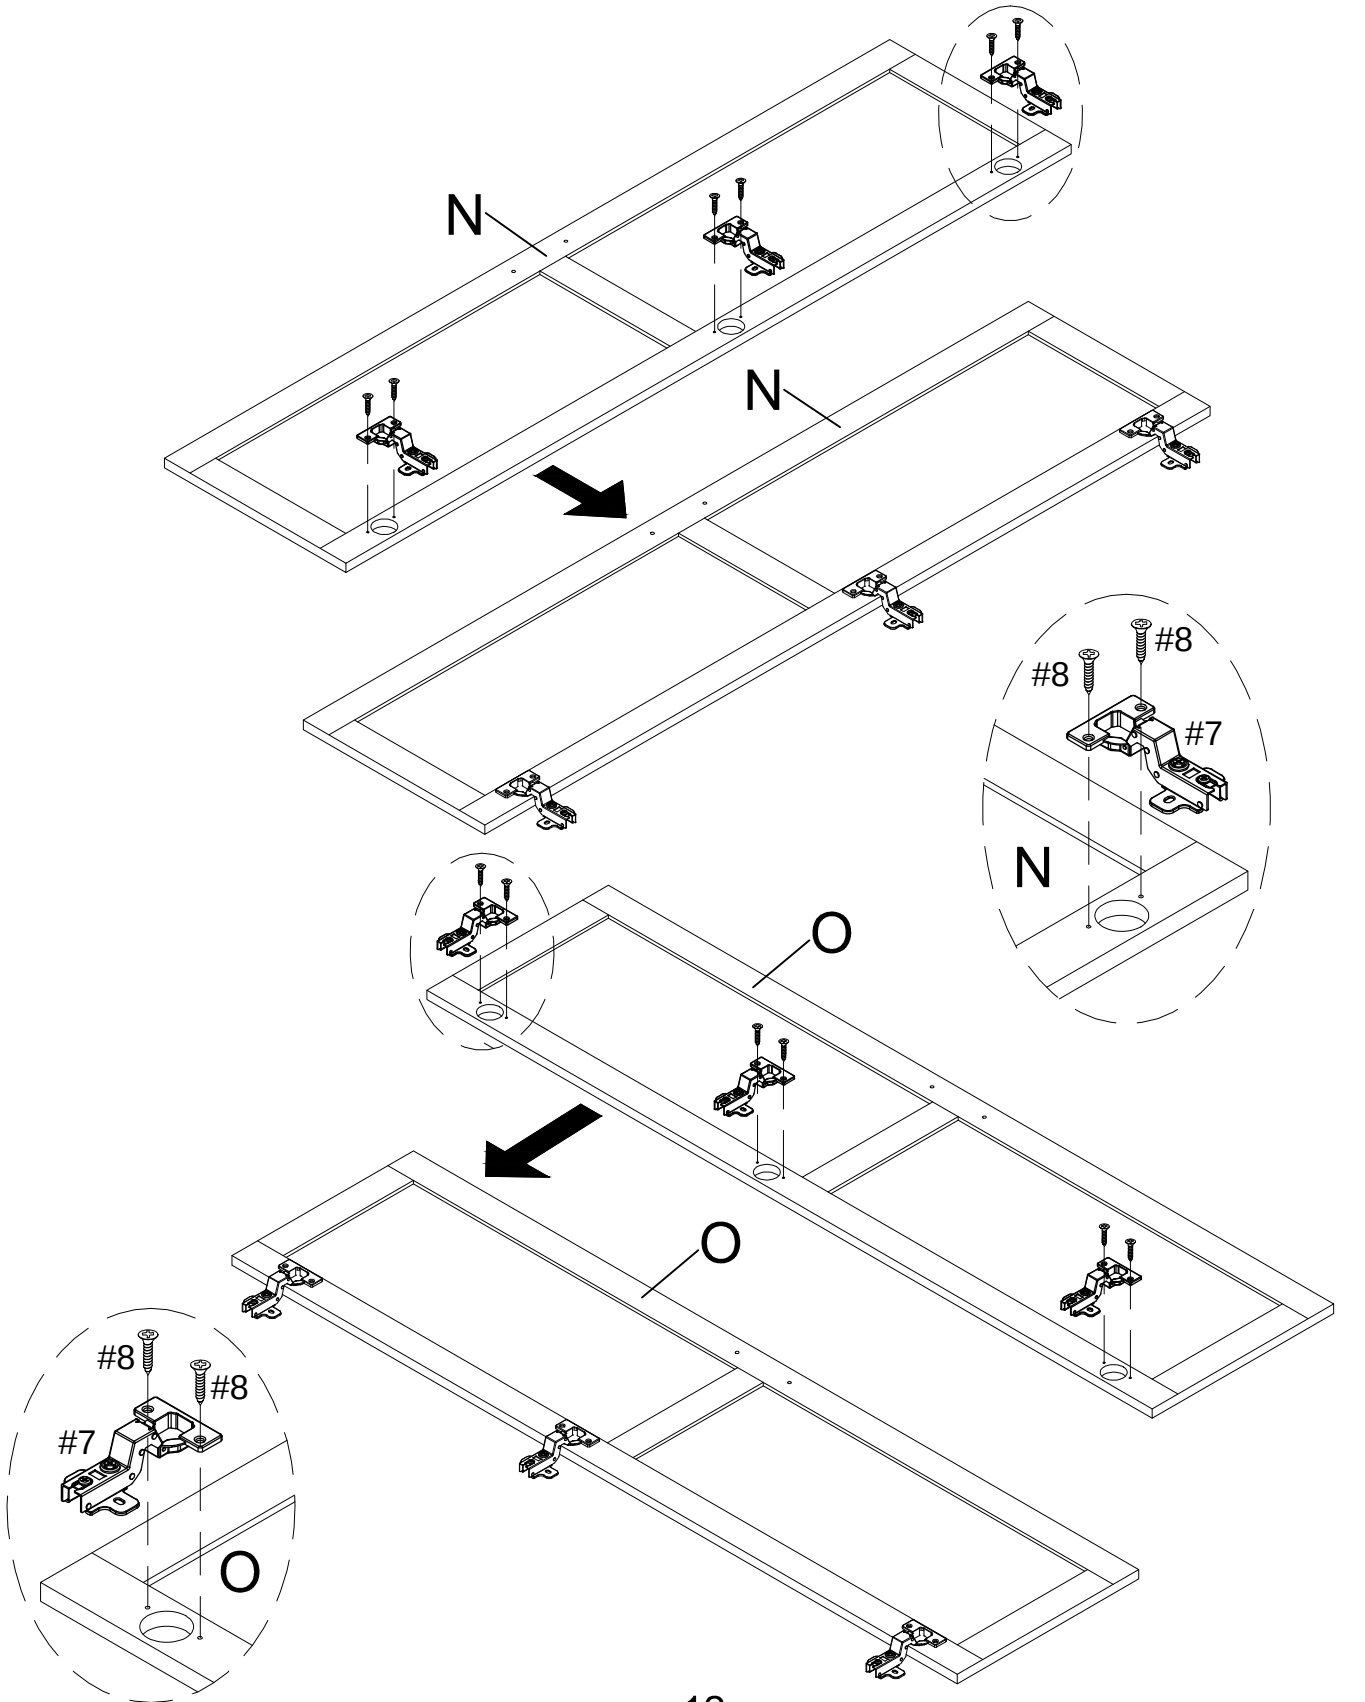

Step 11.



#8 x6 #10 x1 #11 x2 x1

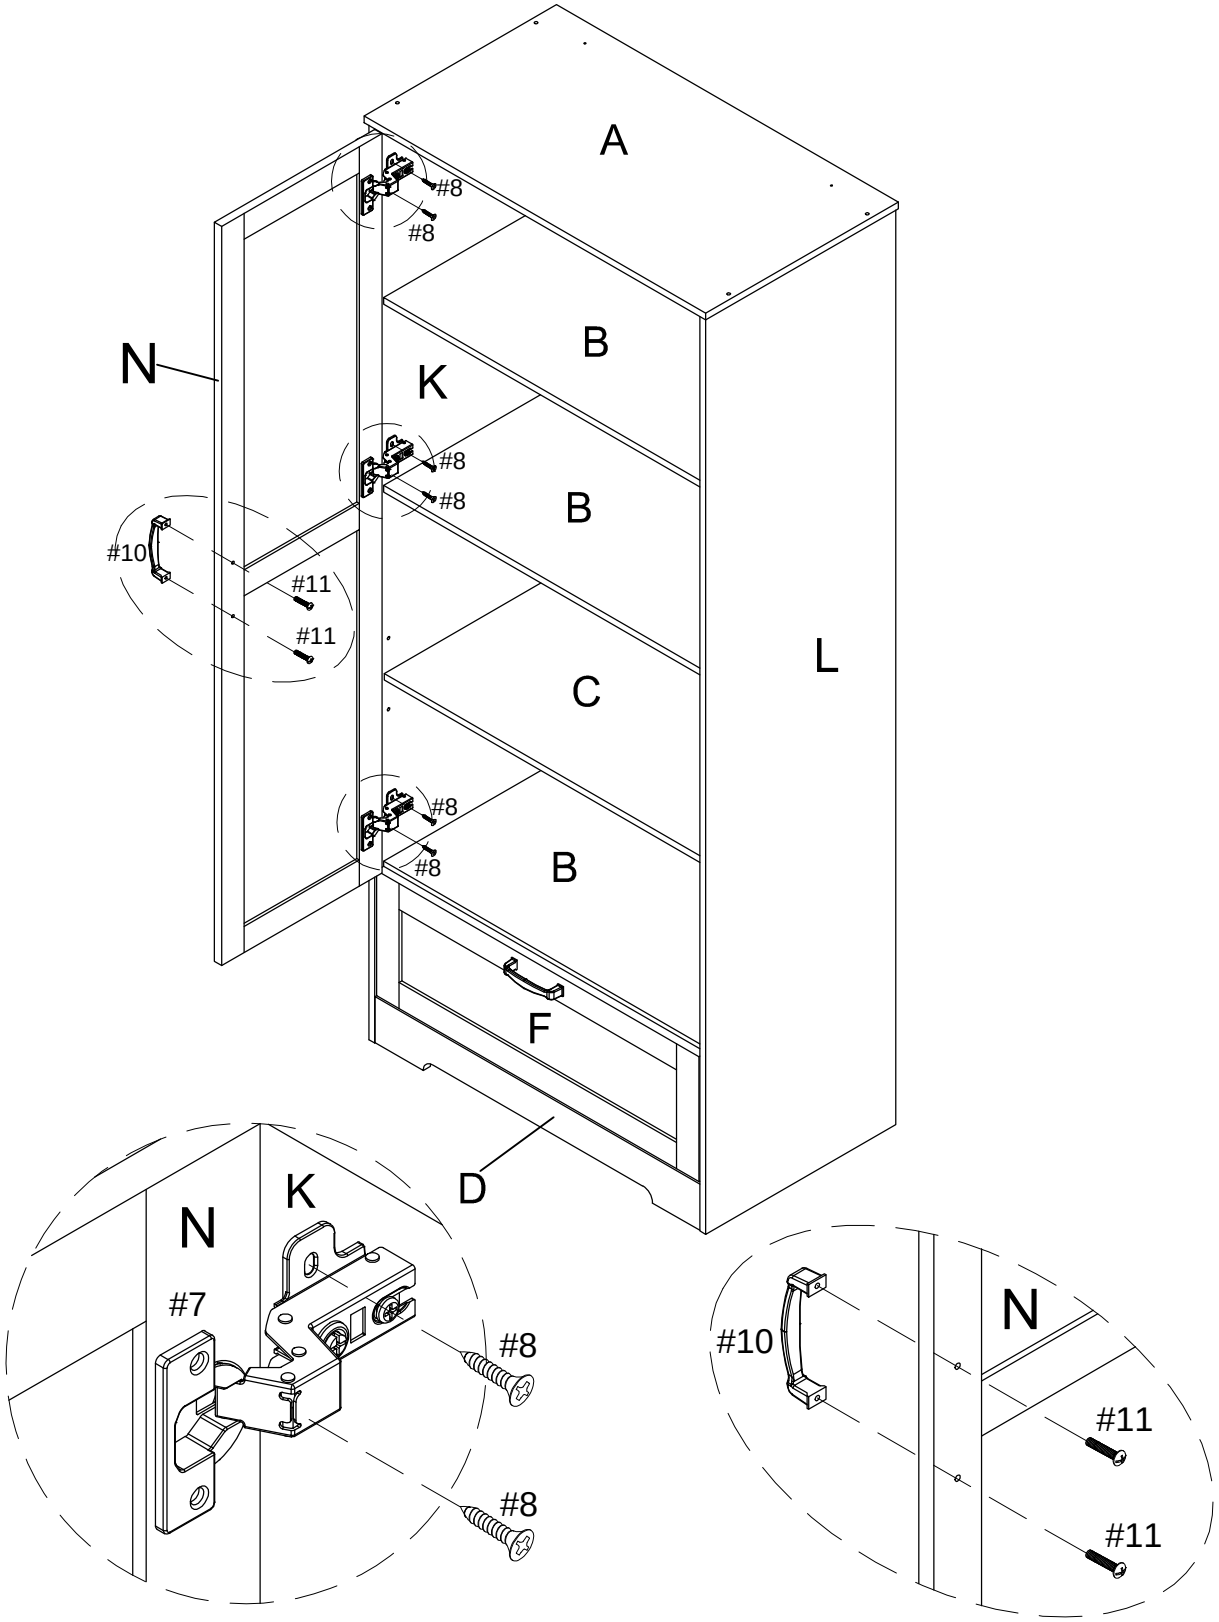

Step 12.



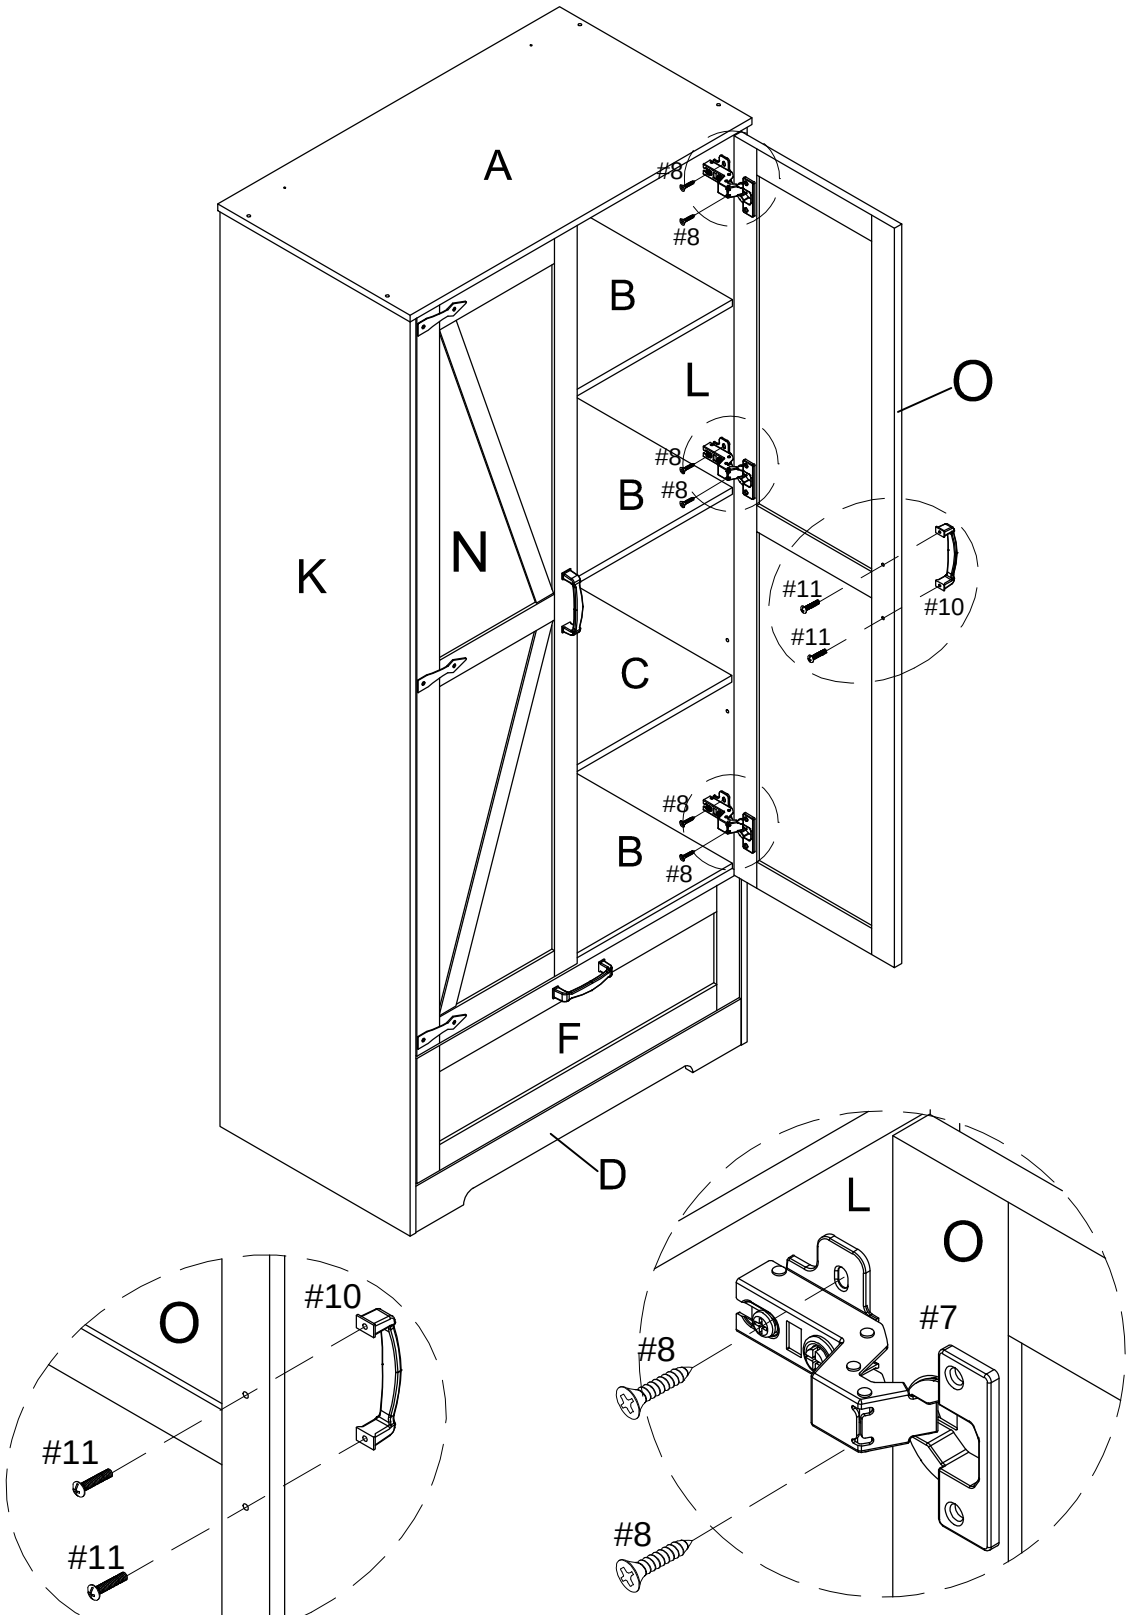

Step 13-A.

The way to adjust the door by hinge.

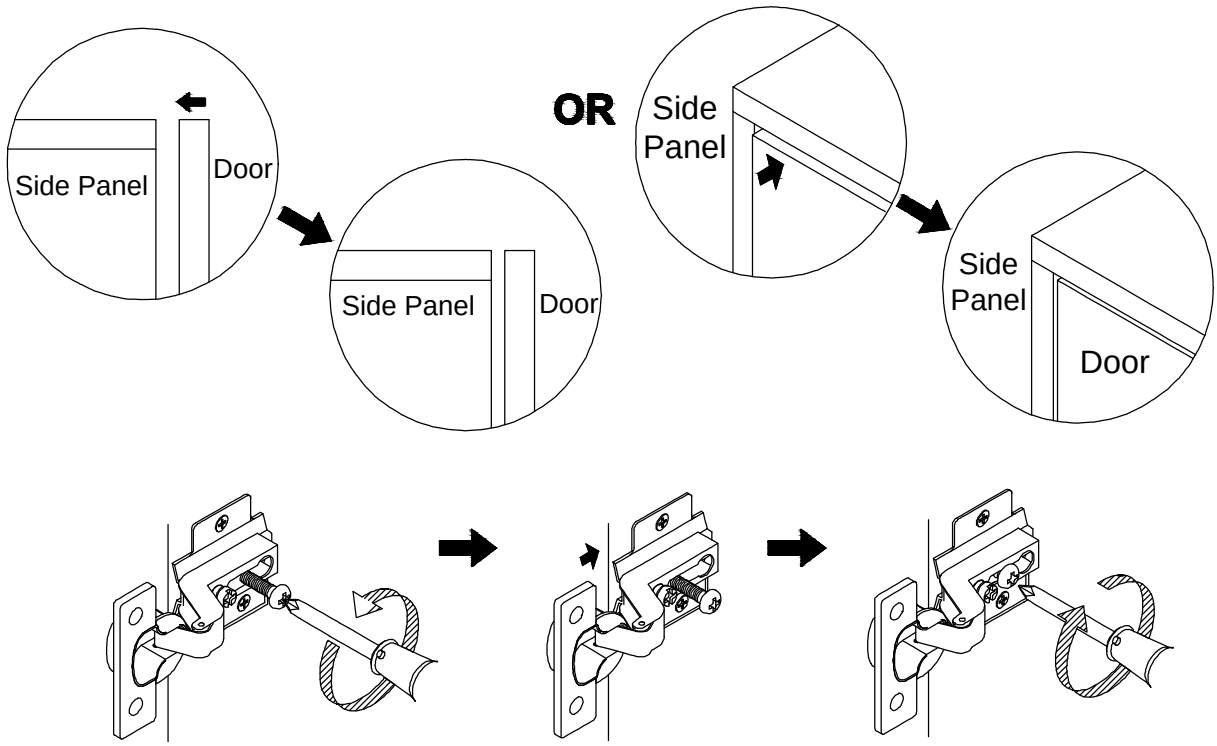

If the gap is too big between side panel and door or the door is over the edge of side panel, loose the back screw as shown, then move in the door with hinge and tighten the back screw as shown when the gap is just well.

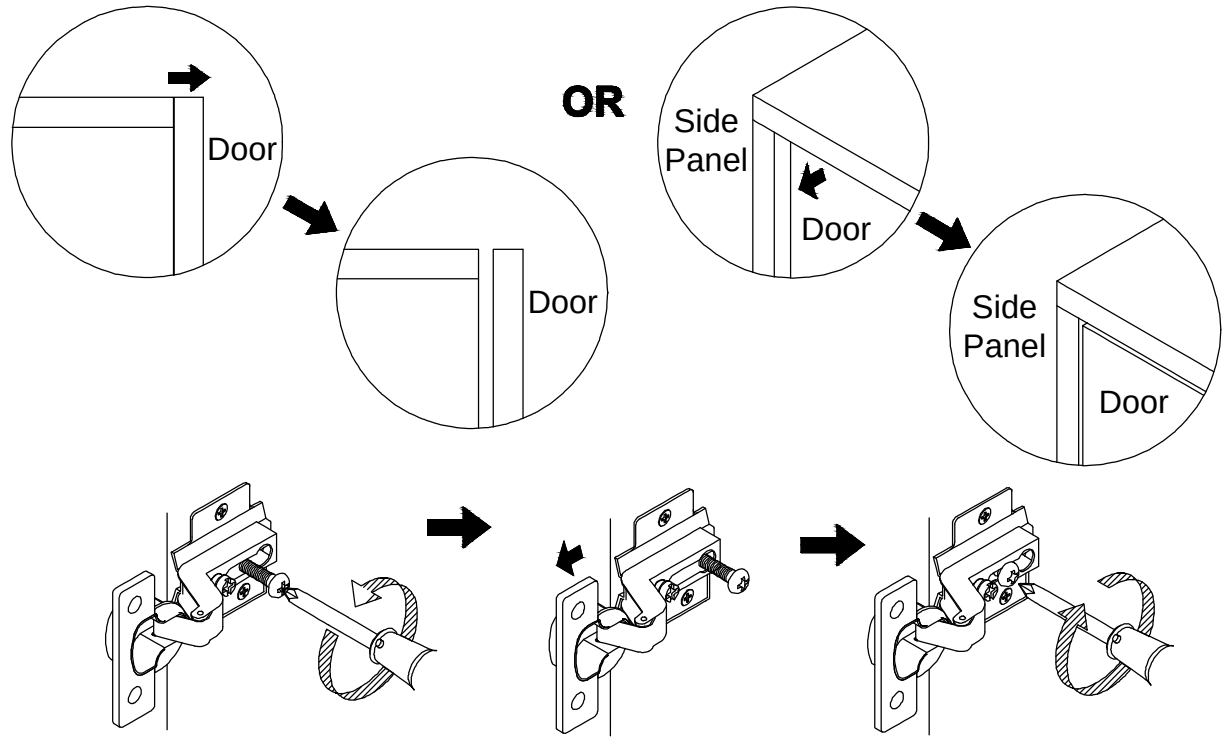

If the gap is too small between side panel and door or the door sank in side panel, loose the back screw as shown, then move out the door with hinge and tighten the back screw as shown when the gap is just well.

Step 13-B.

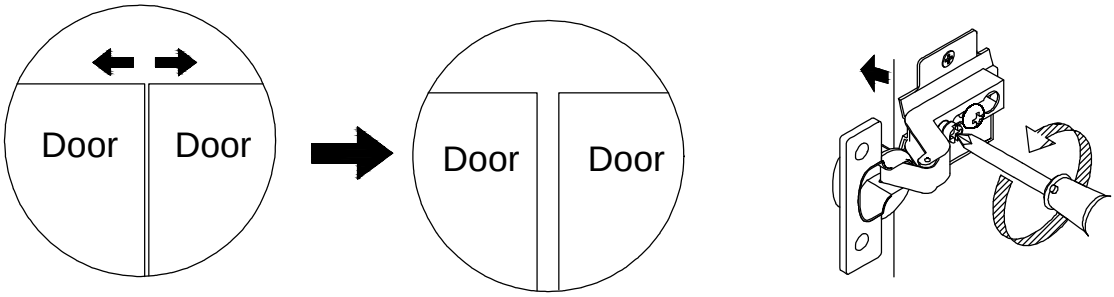

If the gap is too small between two doors, loose the front screw as shown.

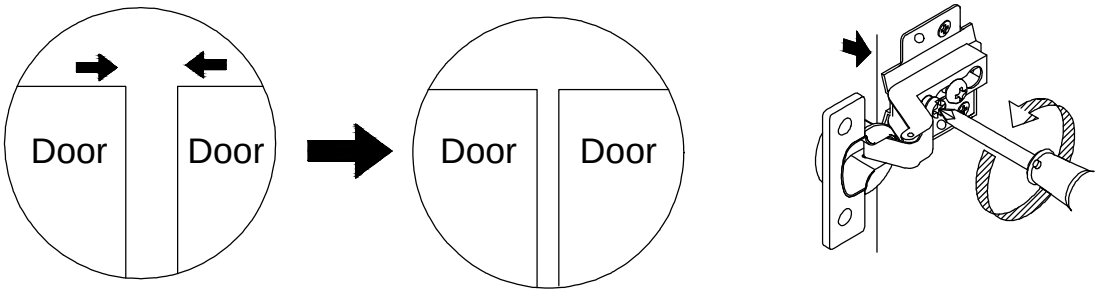

If the gap is too big between two doors, tighten the front screw as shown.

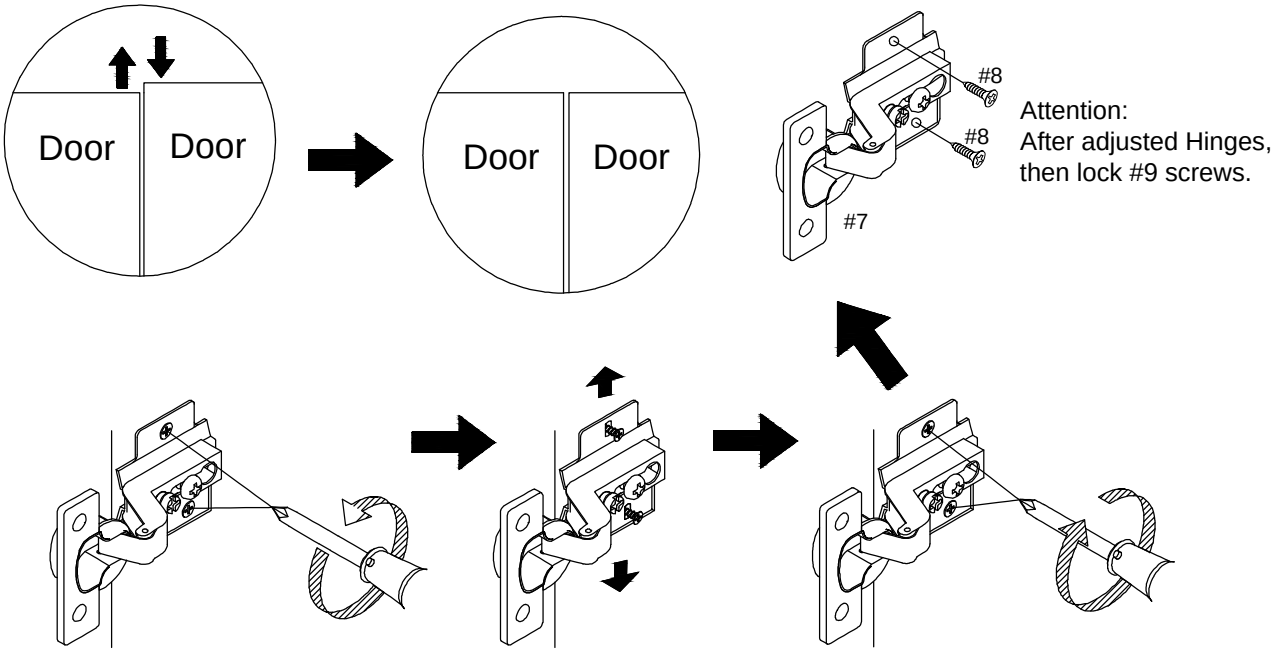

Attention:
After adjusted Hinges, then lock #9 screws.

If the doors are not in same level, losse the back screws on wing, then adjust the door up and down, tighten the screws when both doors are in same level.
Screw front two screws (#9) on wing when all are in place.

Step 14.

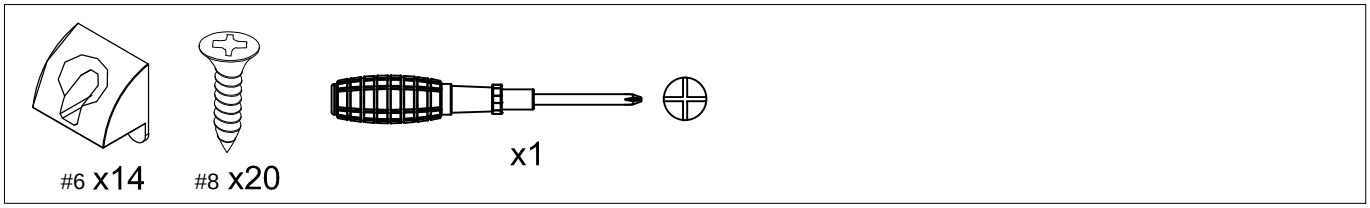

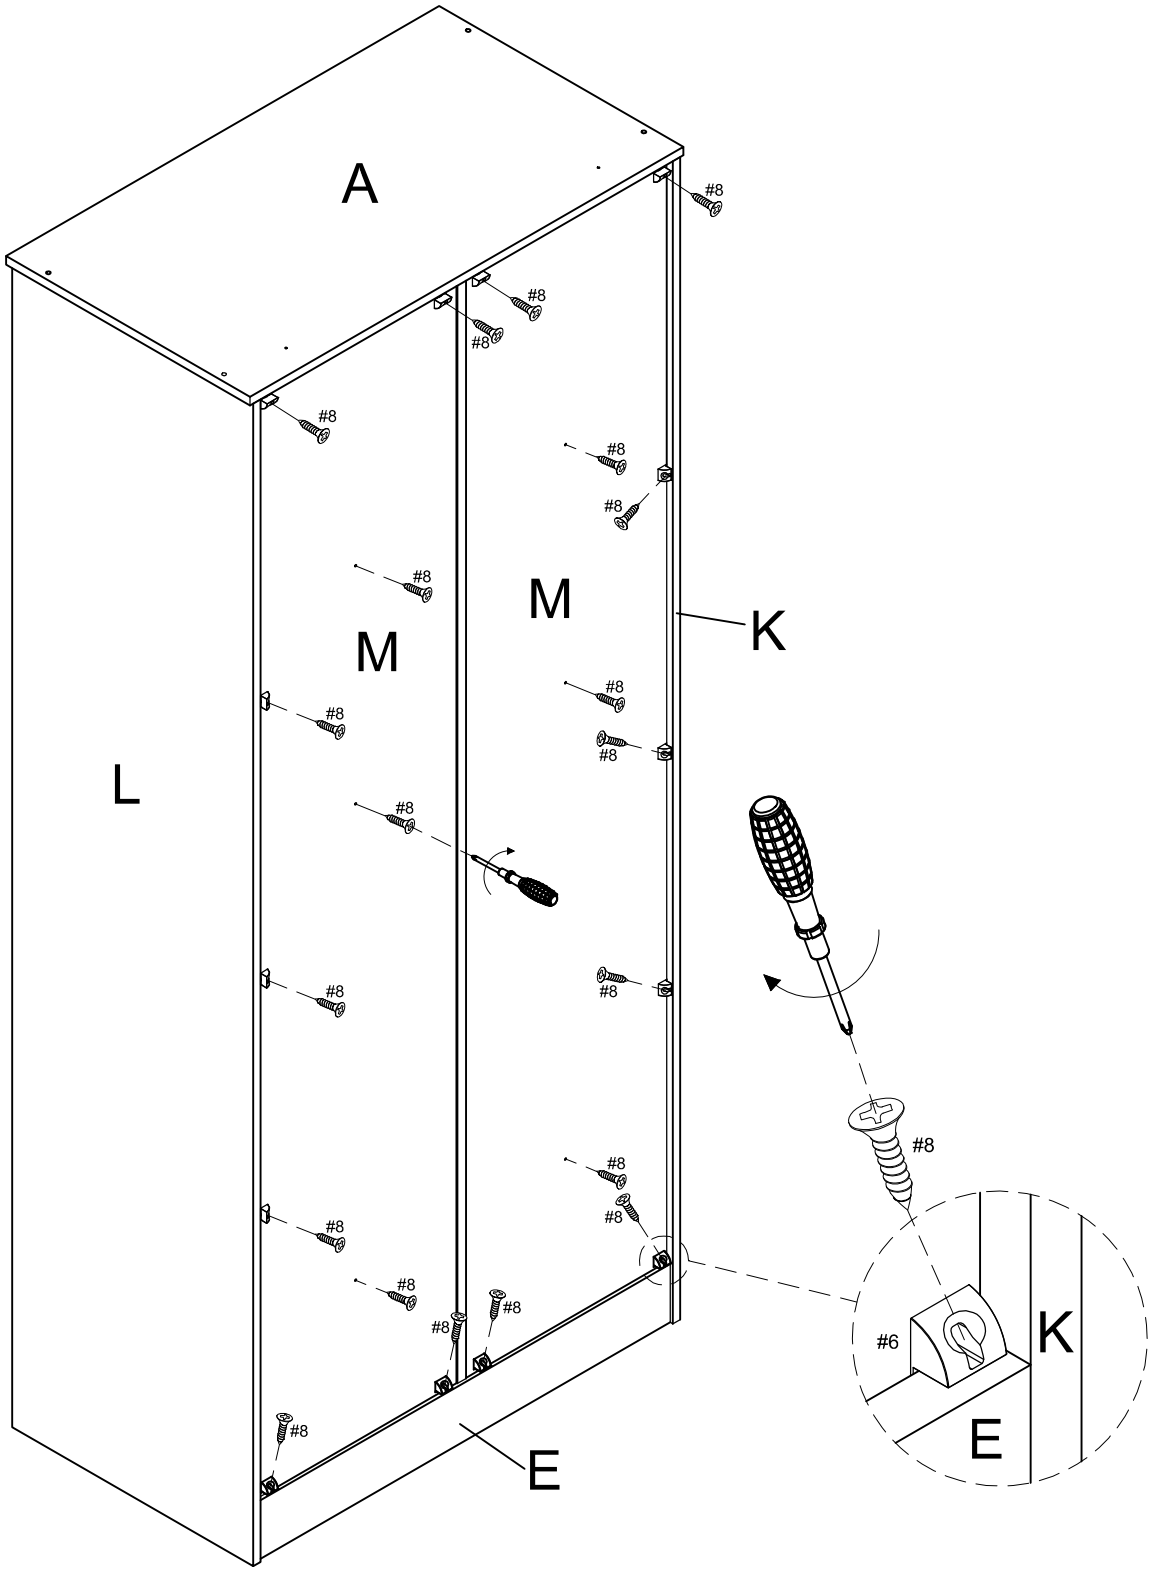

Step 15.

#12	#12-A	#12-B	#12-C	#12-D
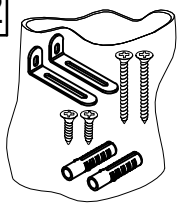	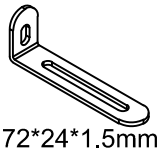 72*24*1.5mm	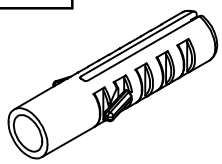	 Ø3.5*15mm	 Ø4*40mm
Safety Strap Kit 1 SET	Angel Iron 2 PCS	Wall Anchor 2 PCS	Short Screw 2 PCS	Long Screw 2 PCS

Safety strap kit (#12) must be installed to prevent tipping, damage and/or injury.

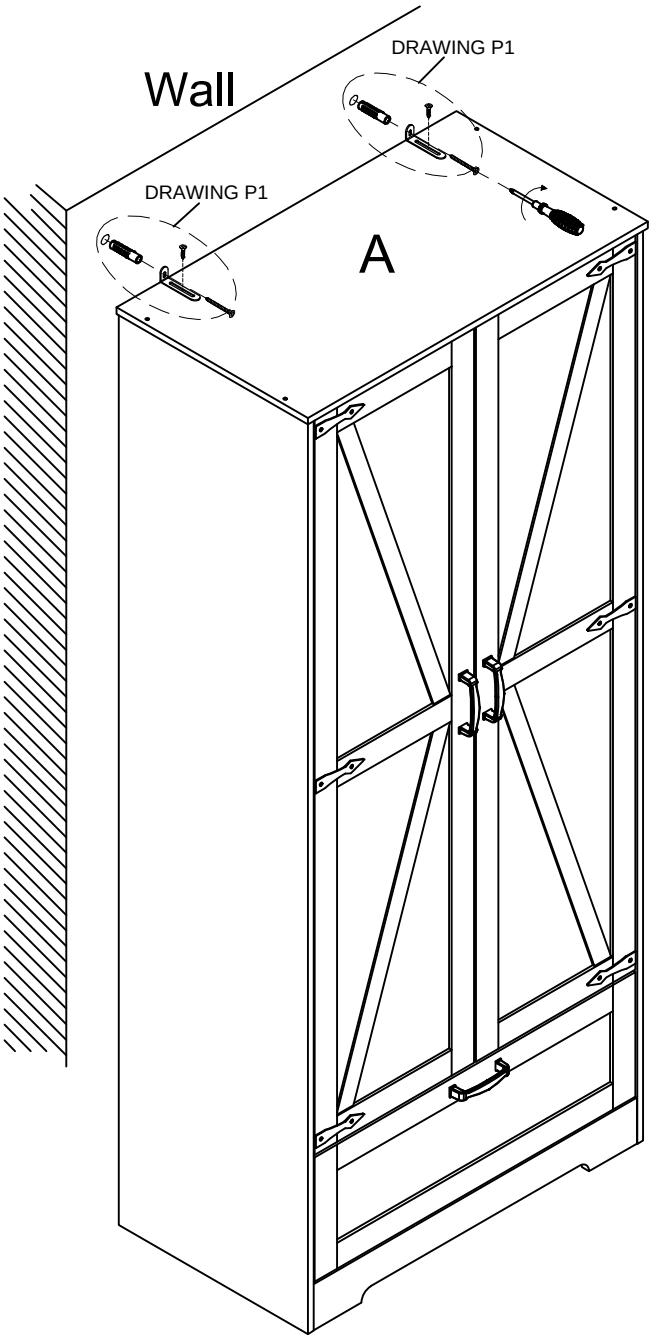

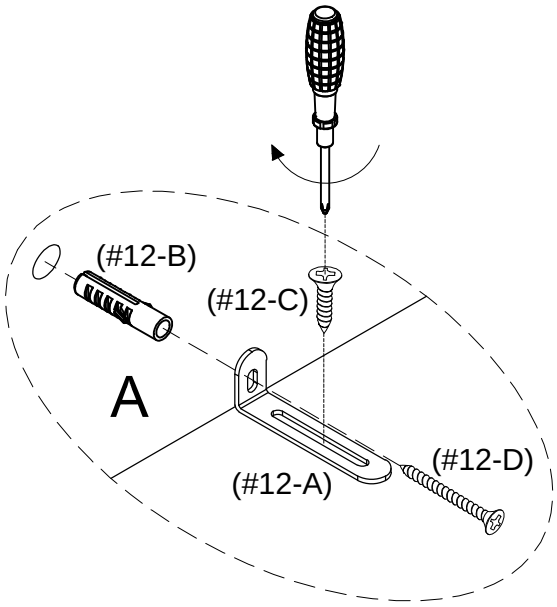

DRAWING P1

The assembly of the cabinet is complete.

Warning:

Seller is responsible for the product-related issues occurred upon receipt, but will not be responsible for the personal injury, property damage or loss resulting from the incorrect assembly, improper use, inadequate maintenance or neglect of this product.

Notes:

1. ASSEMBLY PREPARATION AND TIPS FOR ASSEMBLY

1). Remove all packaging materials, staples and packing straps from the carton.
2). Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly. Contact customer service for missing parts.
3). Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.
4). Allow ample room for assembly and assemble the product near where the product will be placed.
5). During assembly, do not over-tighten any fittings as this may cause damage.
6). Always place the product on a flat, level surface.

2. CARE AND MAINTENANCE

1). KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2). Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
3). Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.

3. TIPS TO PROTECT & CARE FOR YOUR FURNITURE

1). Avoid placing your furniture in direct sunlight, as sunlight causes fading.
2). Use a protective pad when writing on the furniture surface.
3). Use cutting boards and trivets for food preparation in order to avoid damaging the top for the unit.