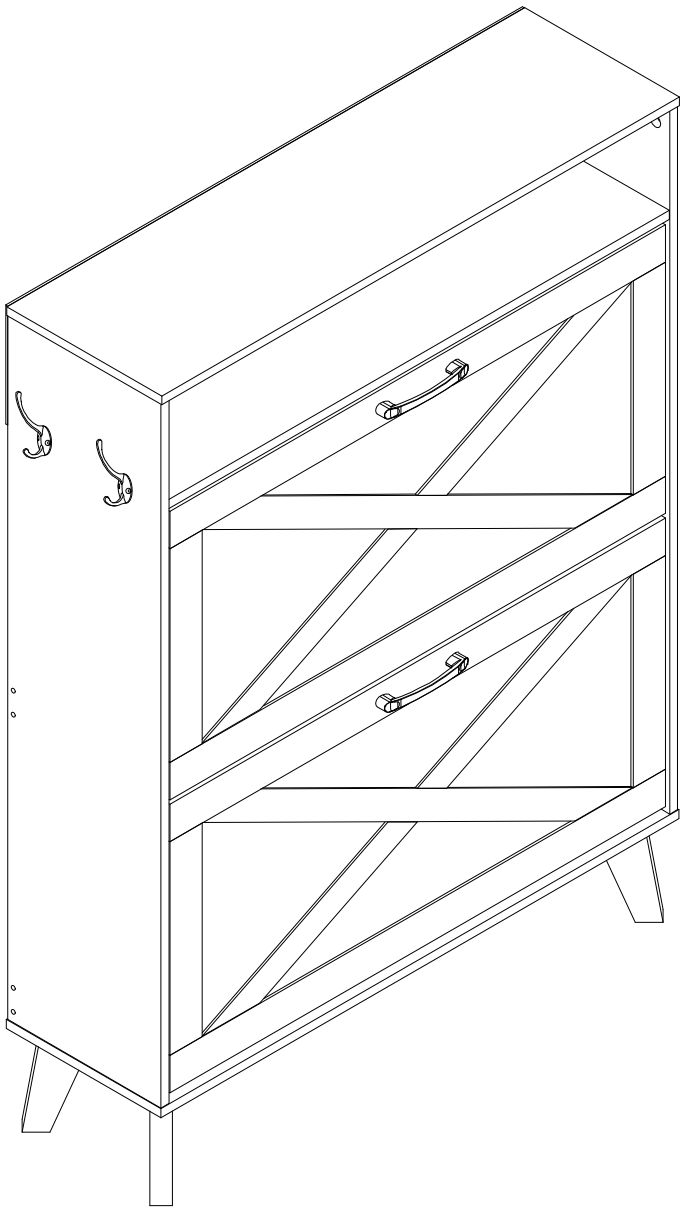


ATTENTION

If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

Children have died from furniture tipover. To reduce the risk of furniture tipover. ALWAYS install tipover restraint provided.

BEFORE STARTING


Before Using Product

- Read each step carefully before starting.It is very important thateach step is performed in the correct order.If these steps are not followed in sequence,assembly difficulties will occur.
- Make sure all parts are included.
- Work in a spacious area and near where the unit will be used,preferably on a carpet,or use a piece of the cardboard packaging to protect your floor and product.
- For a smooth assembly process,we suggest you keep a lite tightness for all the screws during assembly.After the whole product is assembled, firmly tighten all the screws.

⚠ WARNING


- Do not allow children to climb on unit.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly,keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- Please make sure that all objects are removed before moving the assembled unit.
- The unit must be team lifted,not dragged or pushed.Failure to do so could cause instability,product collapse,and/or serious injury.
- Be careful when using power tools to assemble your furniture.Power tools may strip or damage the parts.

QUICKFIT

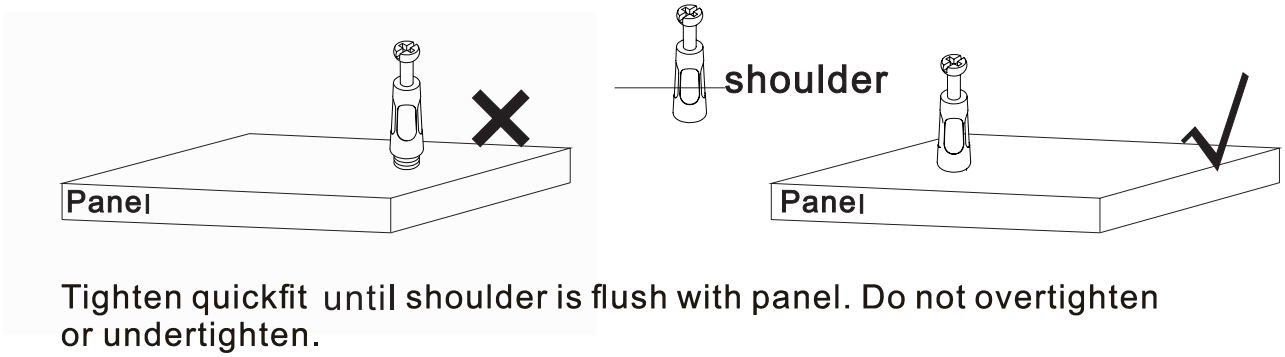


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

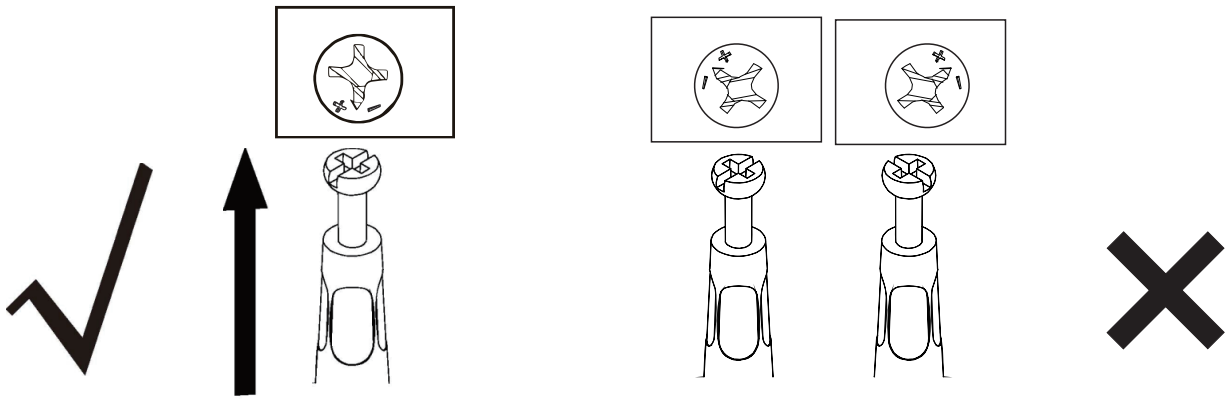


CORRECT WRONG

When fitting cam lock, ensure starting positions is correct before you insert cam lock to quickfit.

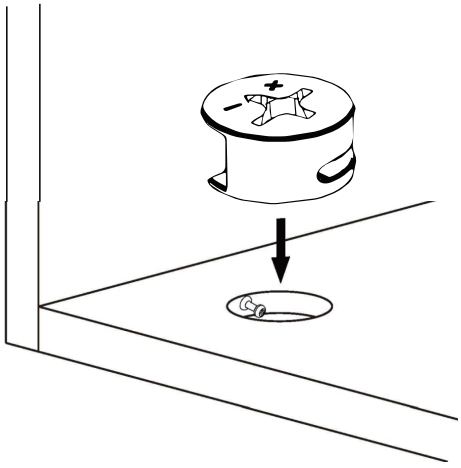


Quickfit head should be in the center of the cam lock. When the two panels are joined. Cam lock should be inserted before quickfit.












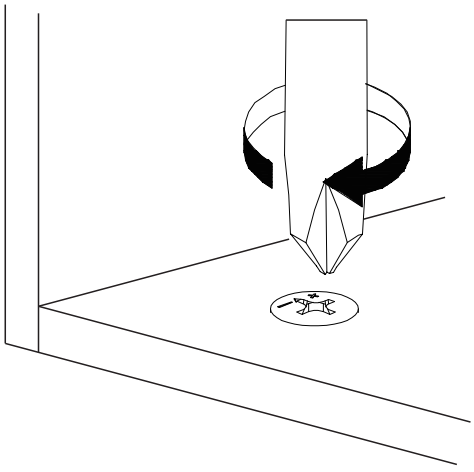


Turn cam lock clockwise to tighten.













PART LIST

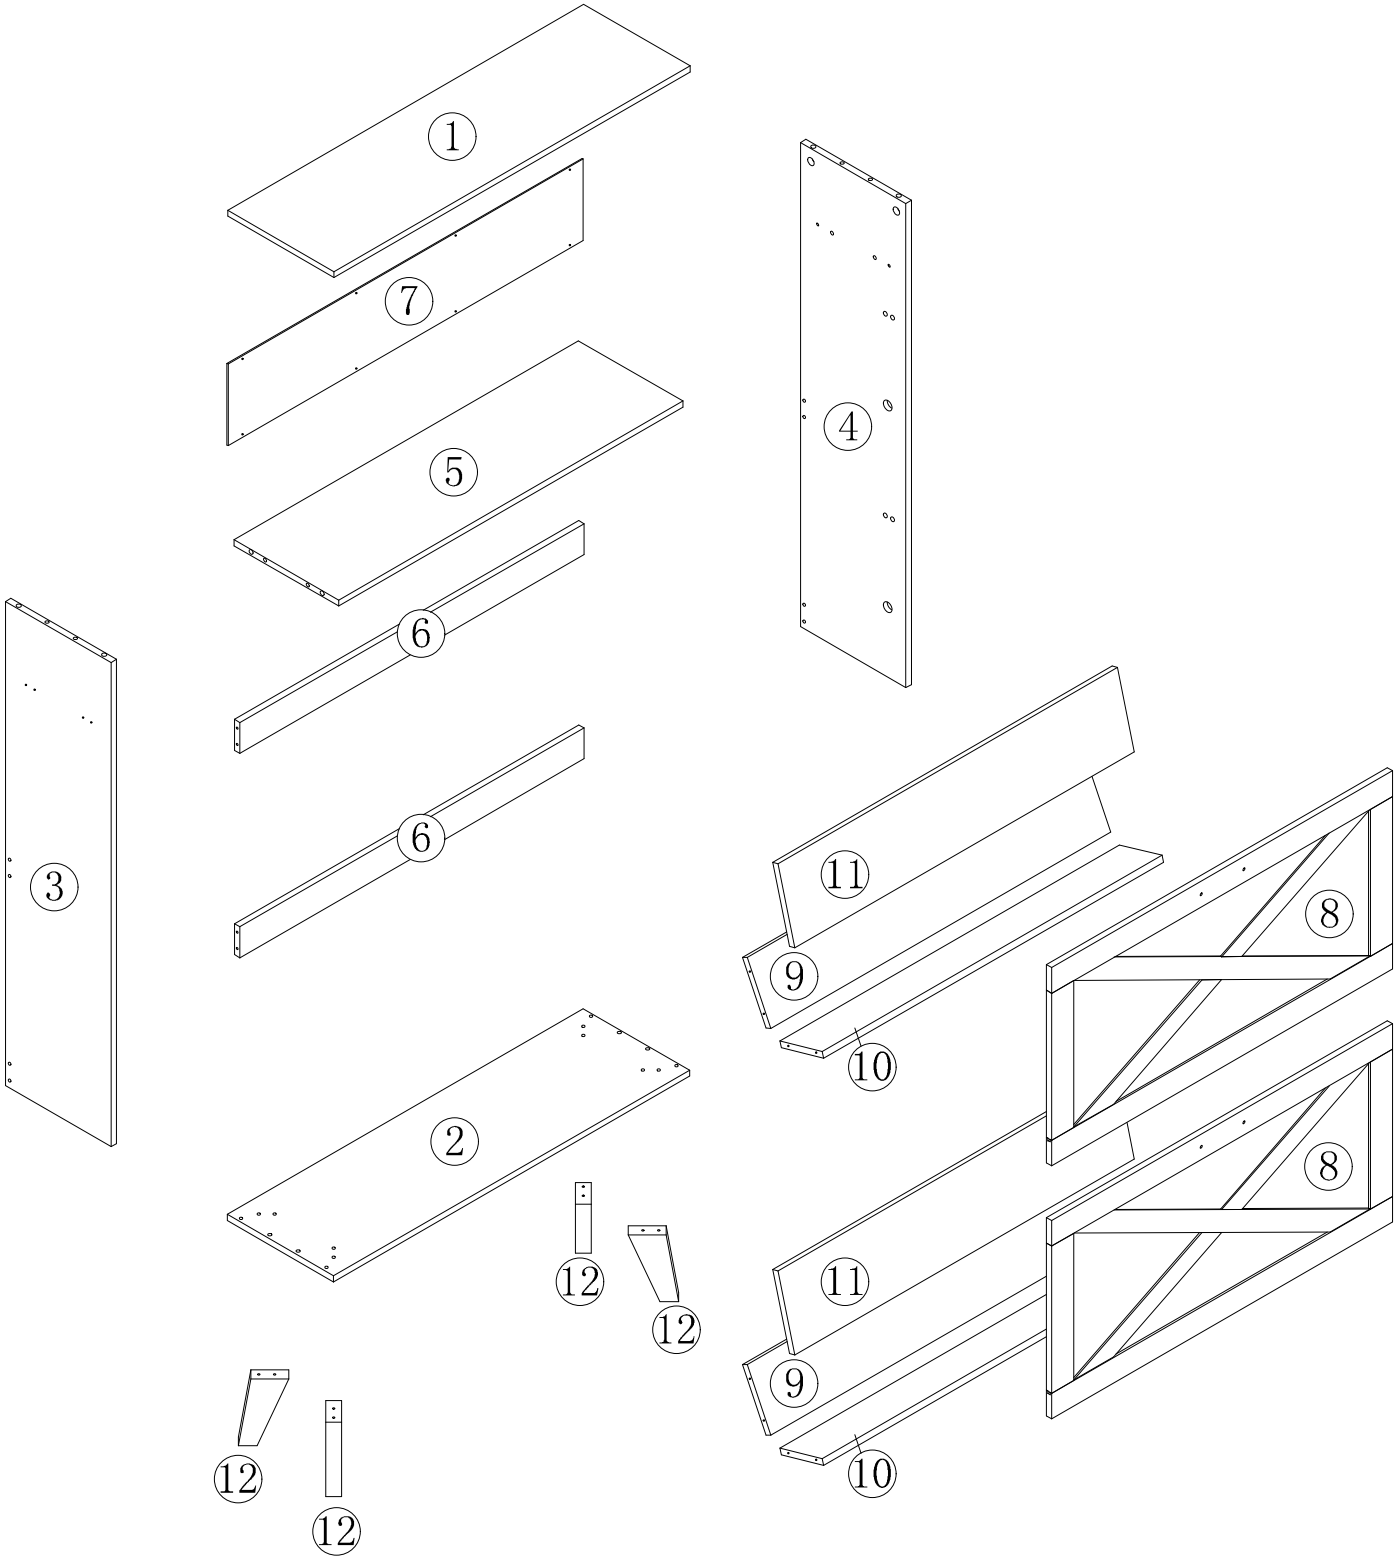


PART LIST

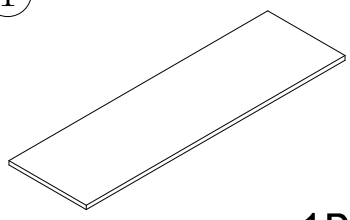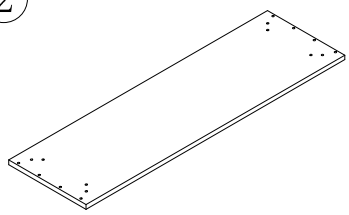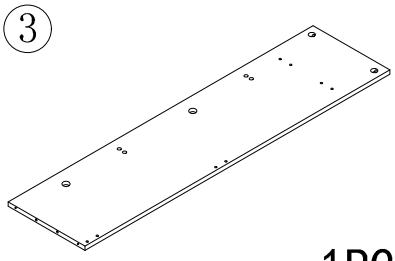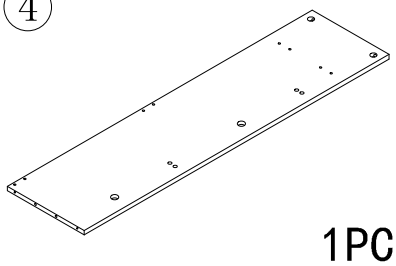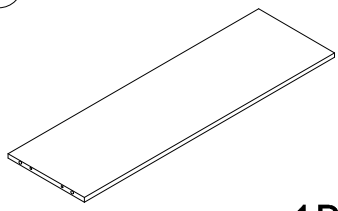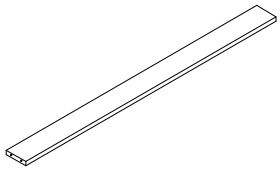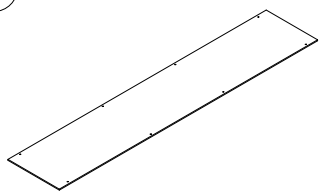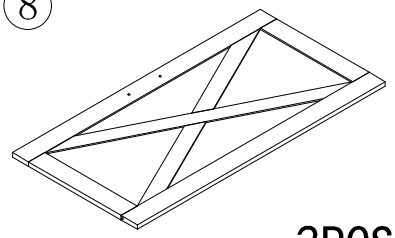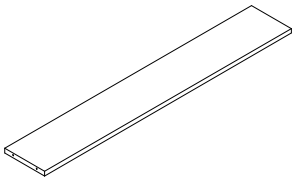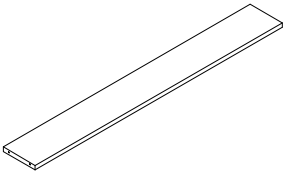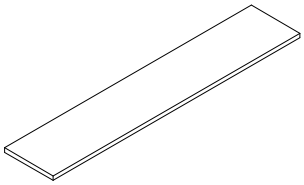
①  1PC	②  1PC	③  1PC
④  1PC	⑤  1PC	⑥  2PCS
⑦  1PC	⑧  2PCS	⑨  2PCS
⑩  2PCS	⑪  2PCS	⑫  4PCS


HARDWARE LIST

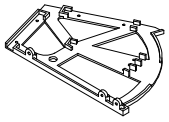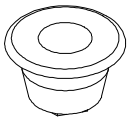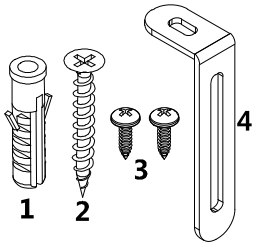
A  ϕ6X32.5 (8+1)PCS	B  ϕ15X9.5 (8+1) PCS	C  ϕ6X30 (12+1)PCS
D  ϕ5X40 (20+2)PCS	E  2PCS	F  ϕ4X16 (4+1)PCS
G  2PCS	H  2PCS	I  ϕ3.5X14 (12+1)PCS
J  4PCS	K  4PCS	L  ϕ4X8 4PCS
M  4PCS	N  ϕ4X16 (16+1)PCS	O  2PCS
P  ϕ3X12 (4+1)PCS	Q  ϕ3X15 (8+1)PCS	R  2SET
 2PCS	 1PC	

R =








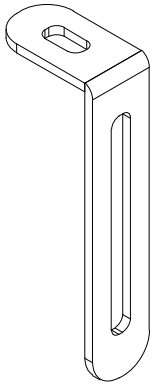



STEP 1

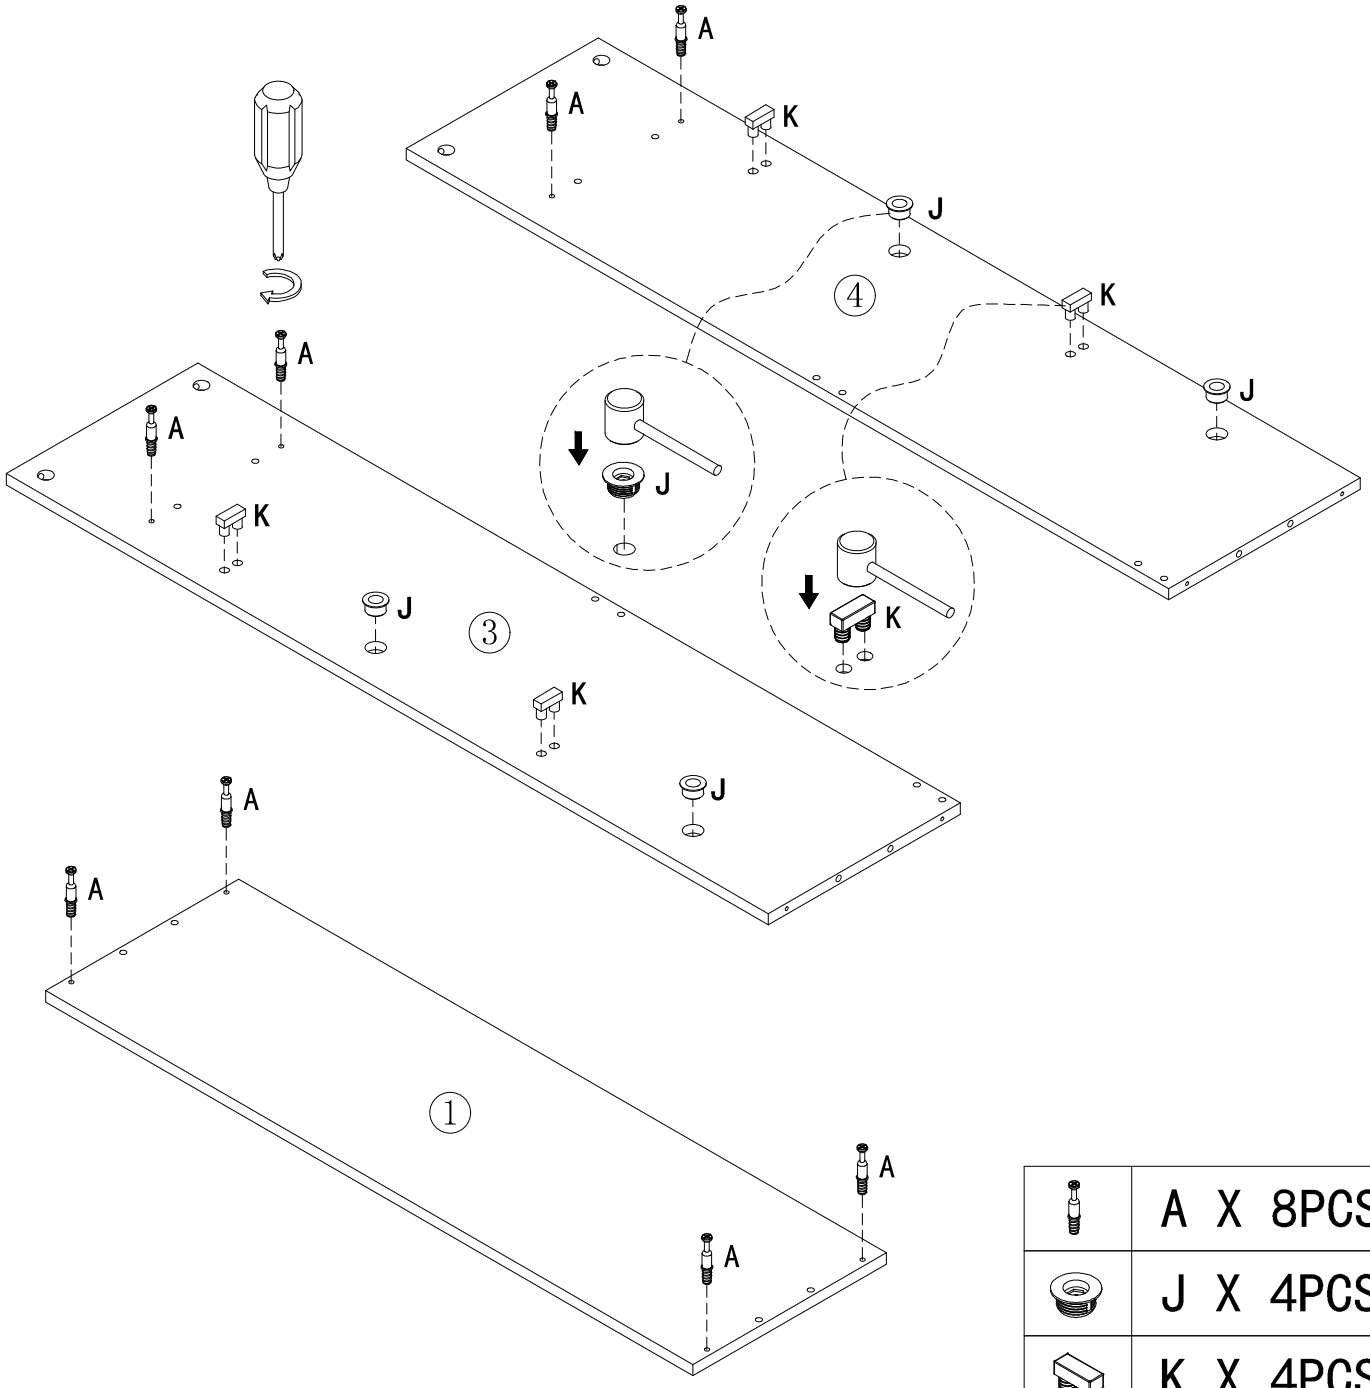

	A X 8PCS
	J X 4PCS
	K X 4PCS


STEP 2

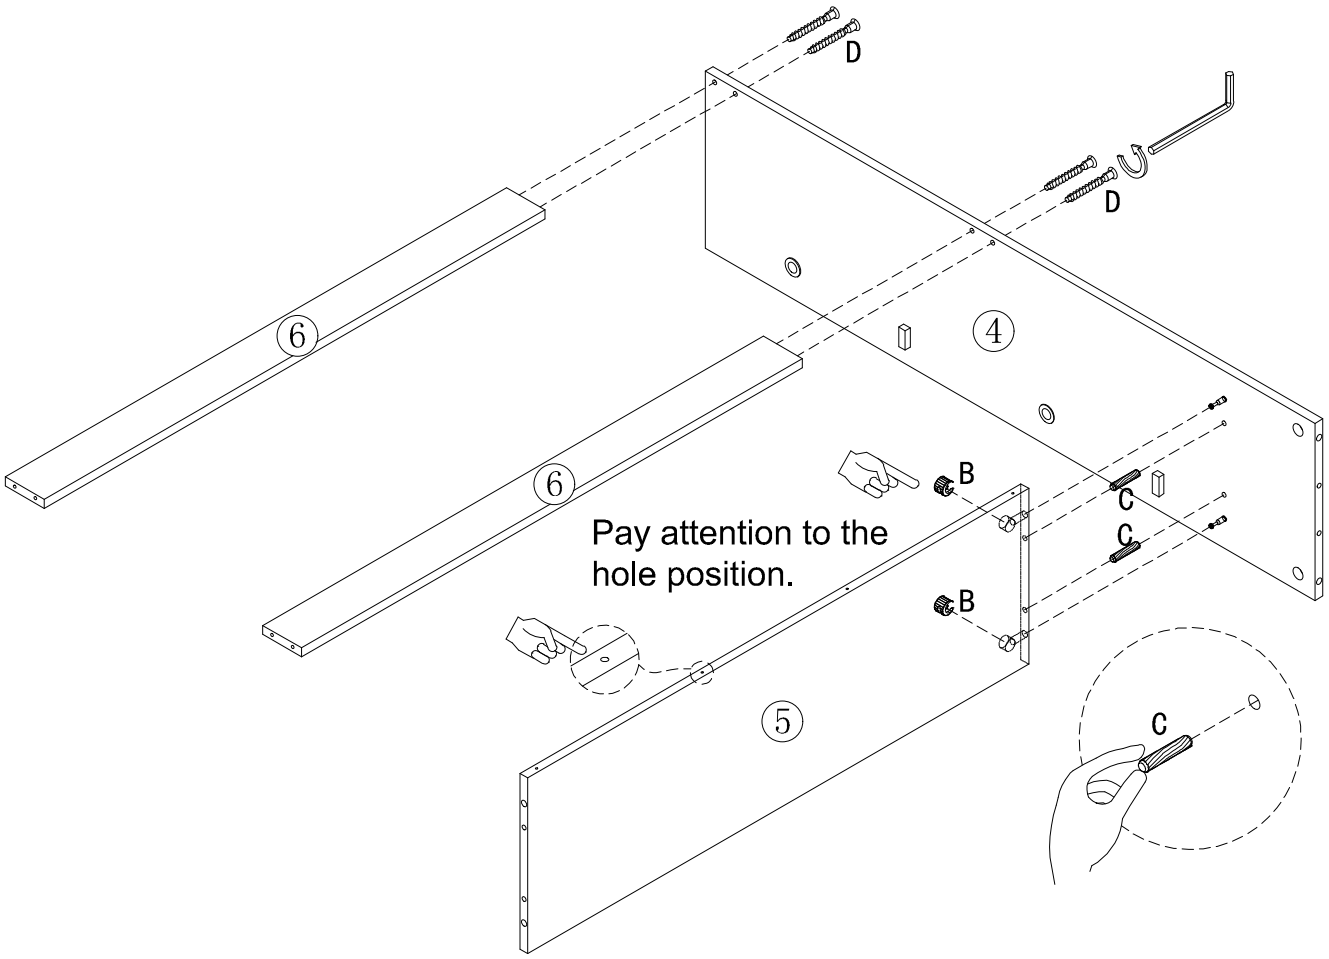

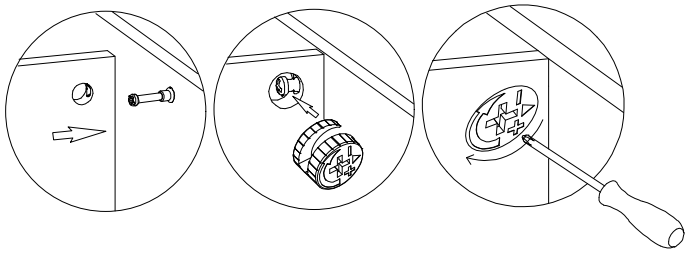


	B X 2PCS
	C X 2PCS
	D X 4PCS

STEP 3

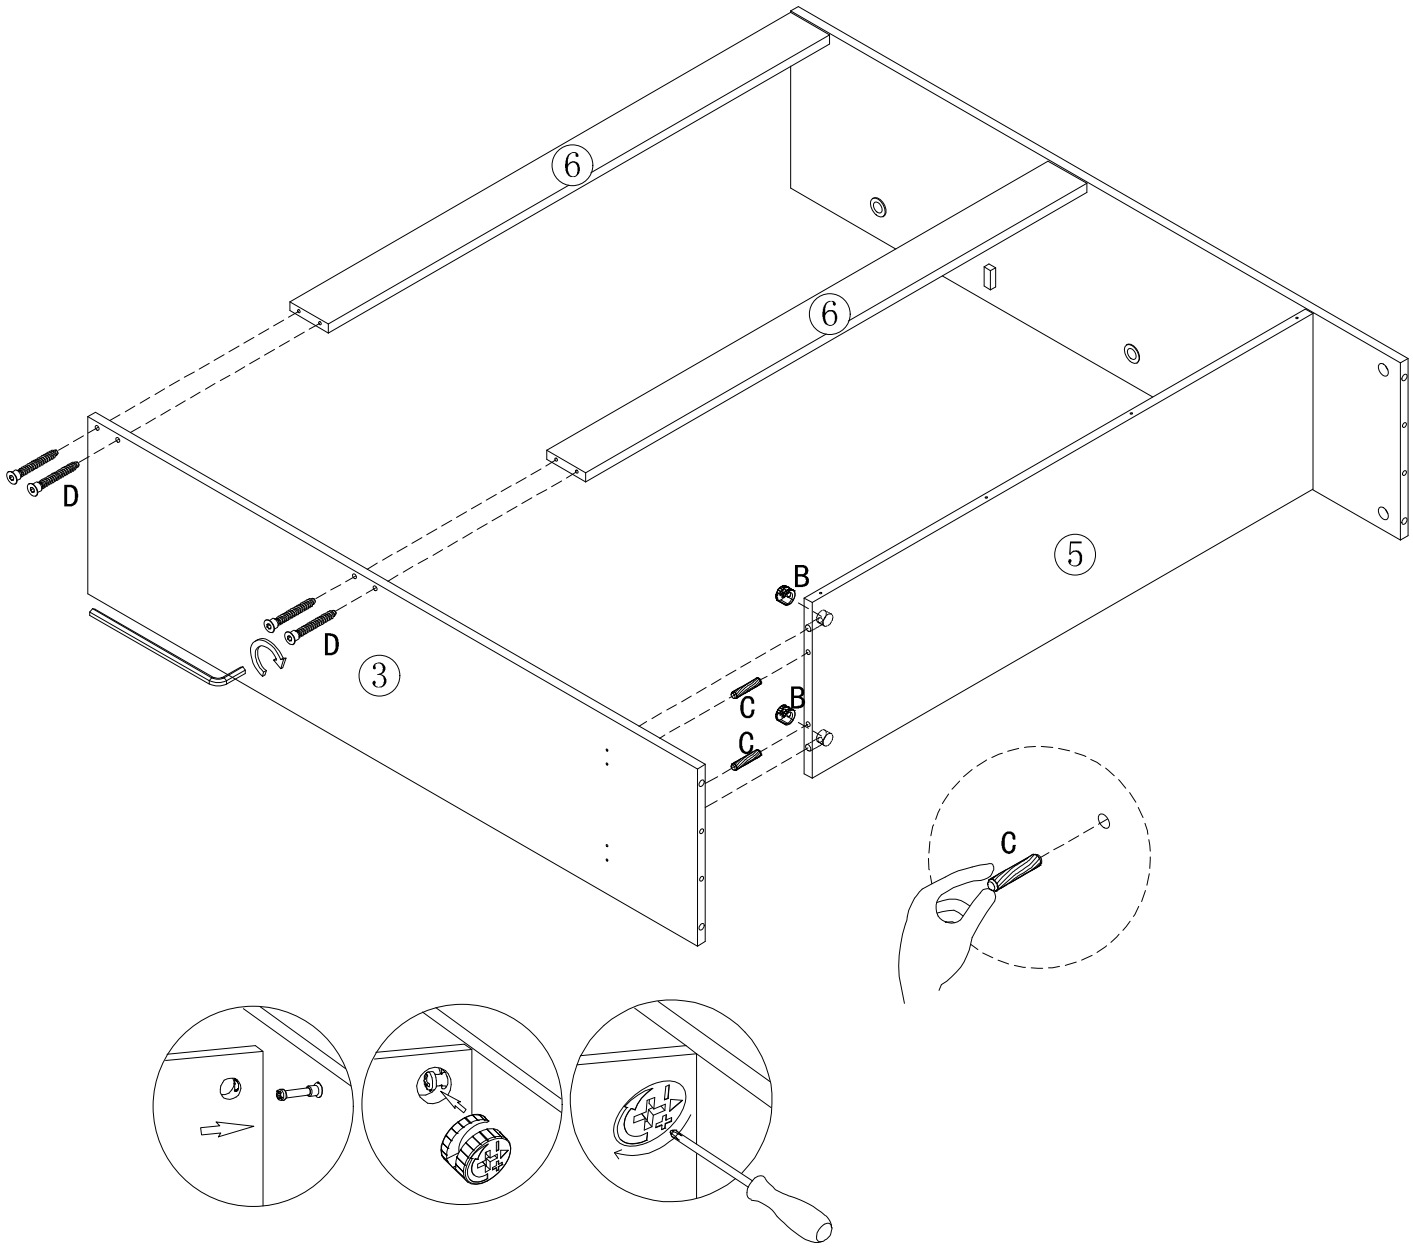


	B X 2PCS
	C X 2PCS
	D X 4PCS

STEP 4

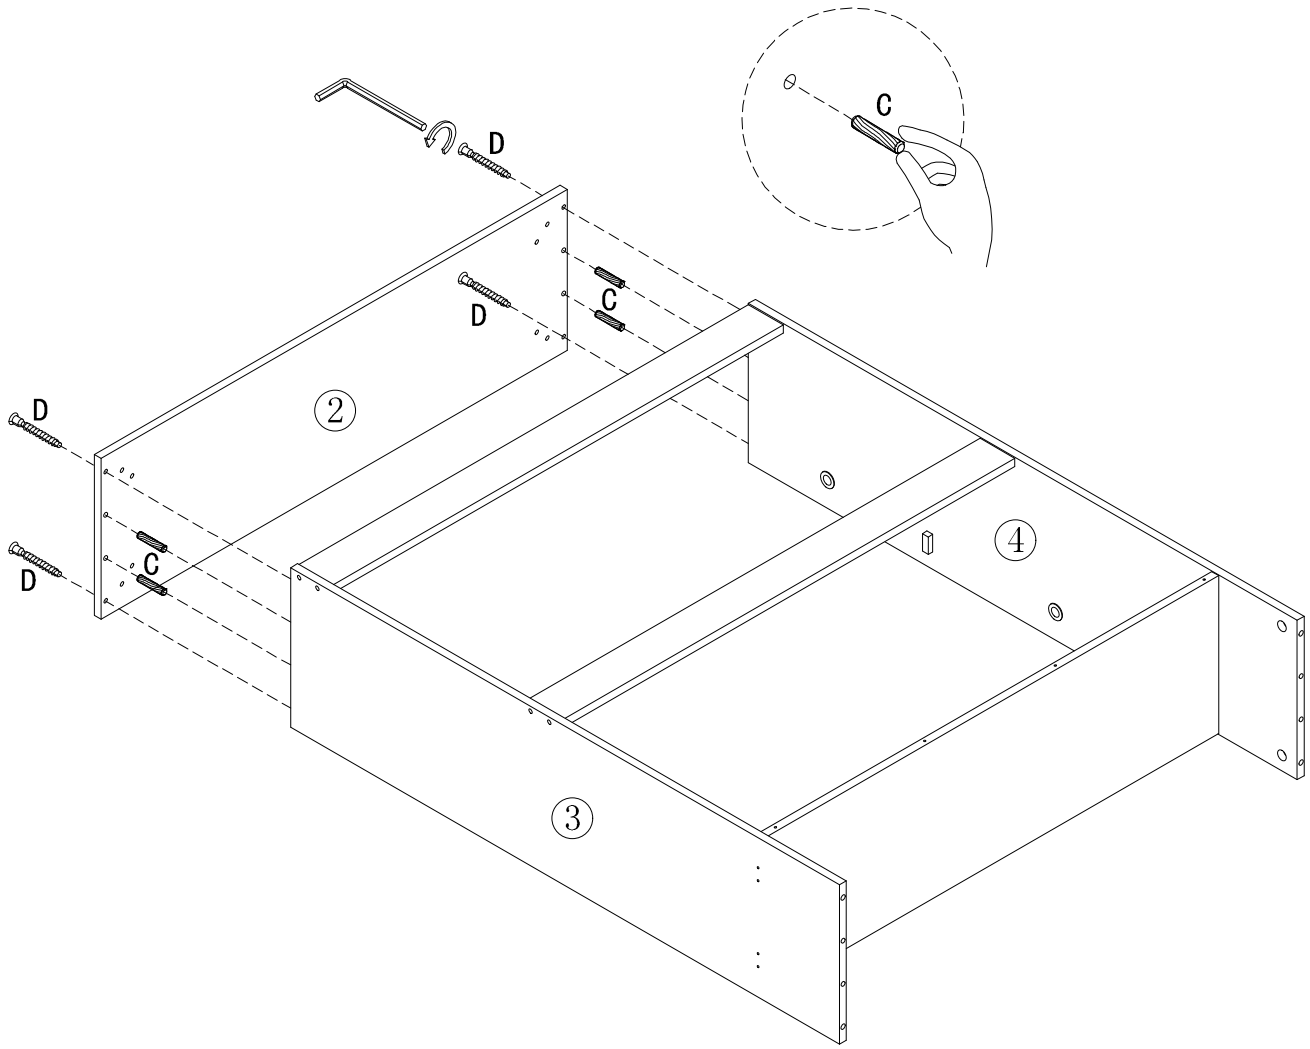

	C X 4PCS
	D X 4PCS


STEP 5

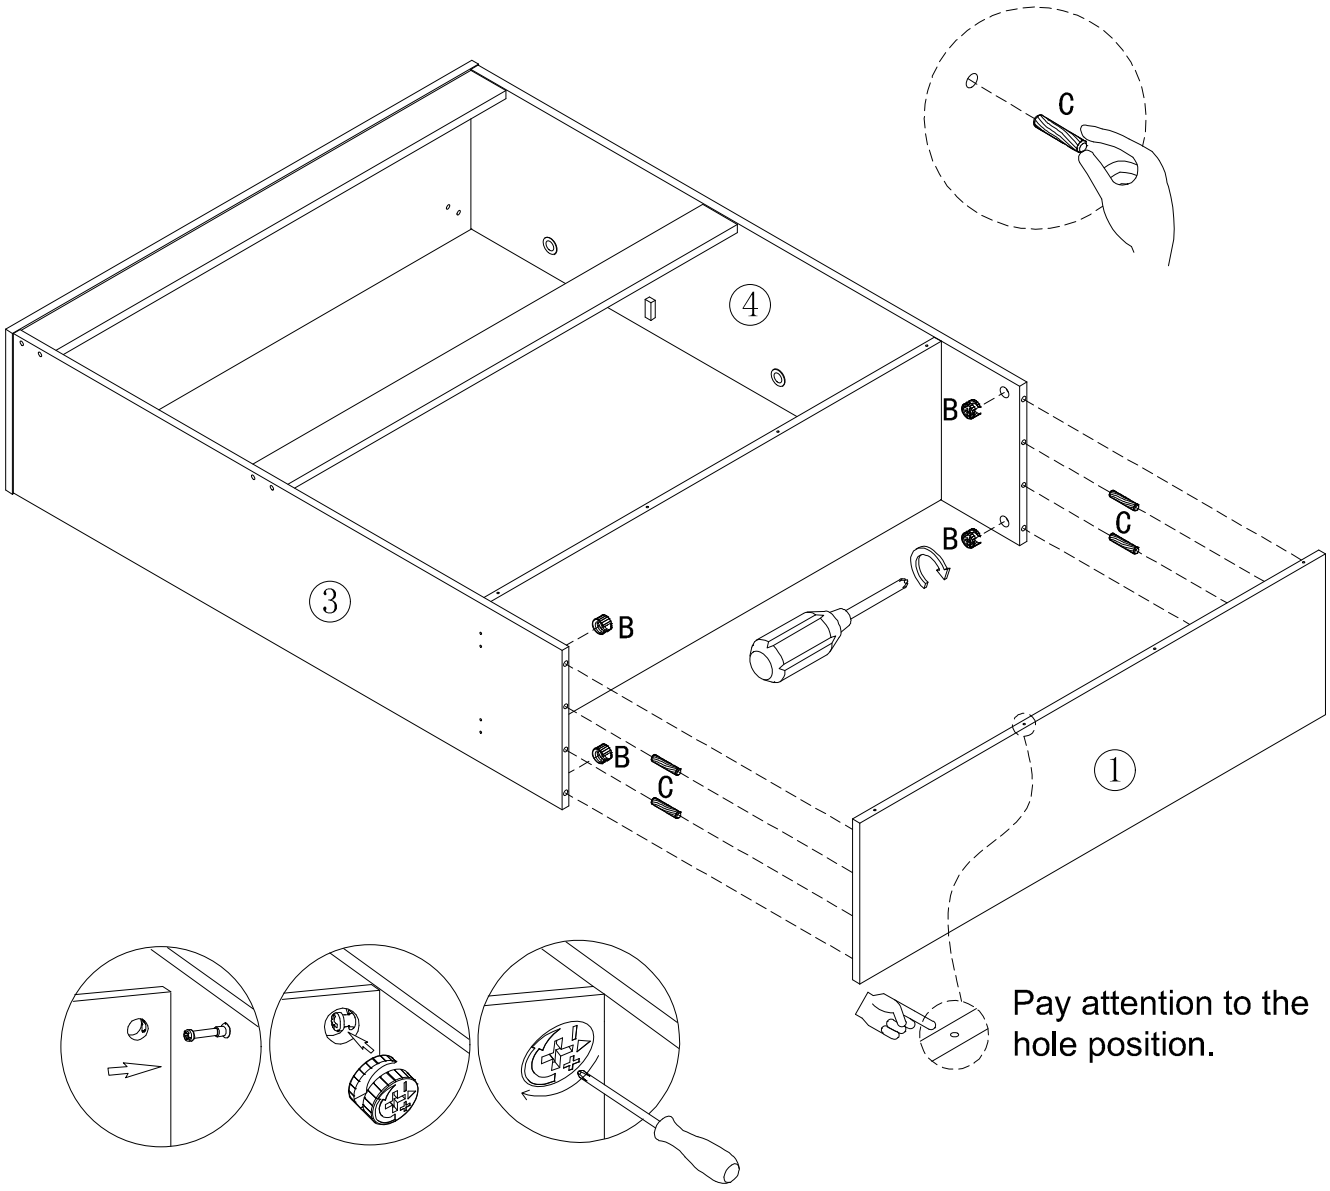

Pay attention to the hole position.


	B X 4PCS
	C X 4PCS


STEP 6

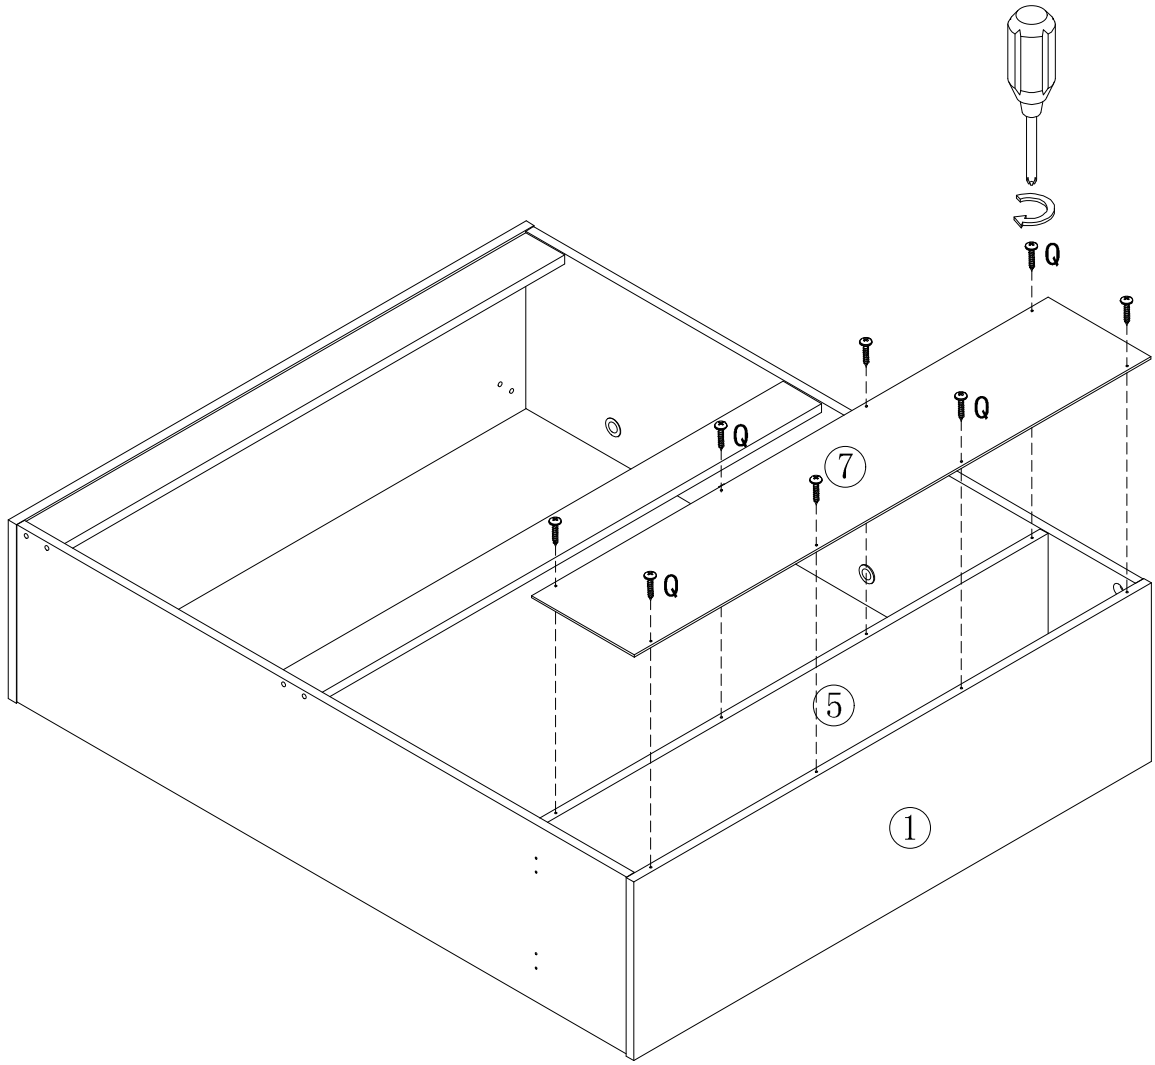

	Q X 8PCS


STEP 7

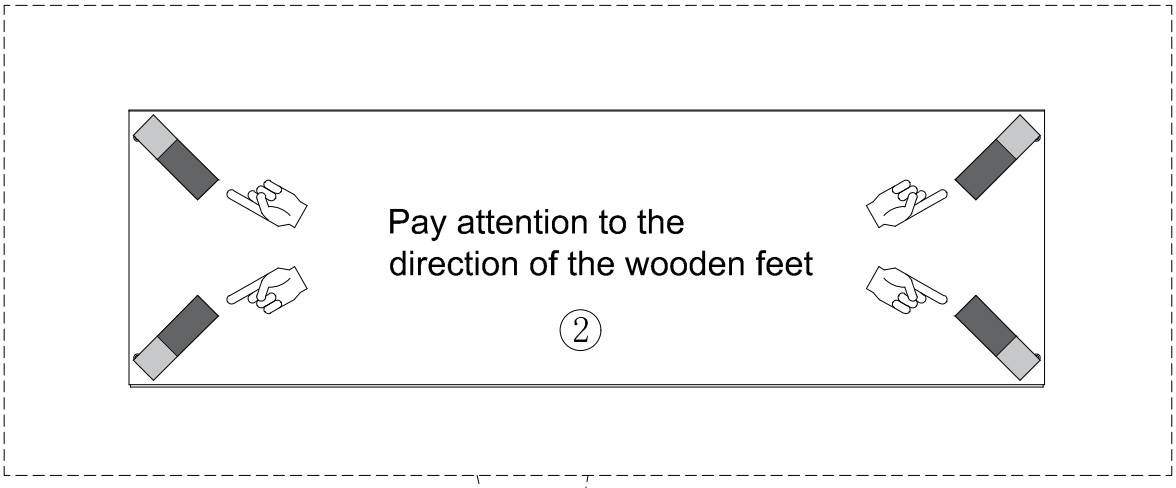

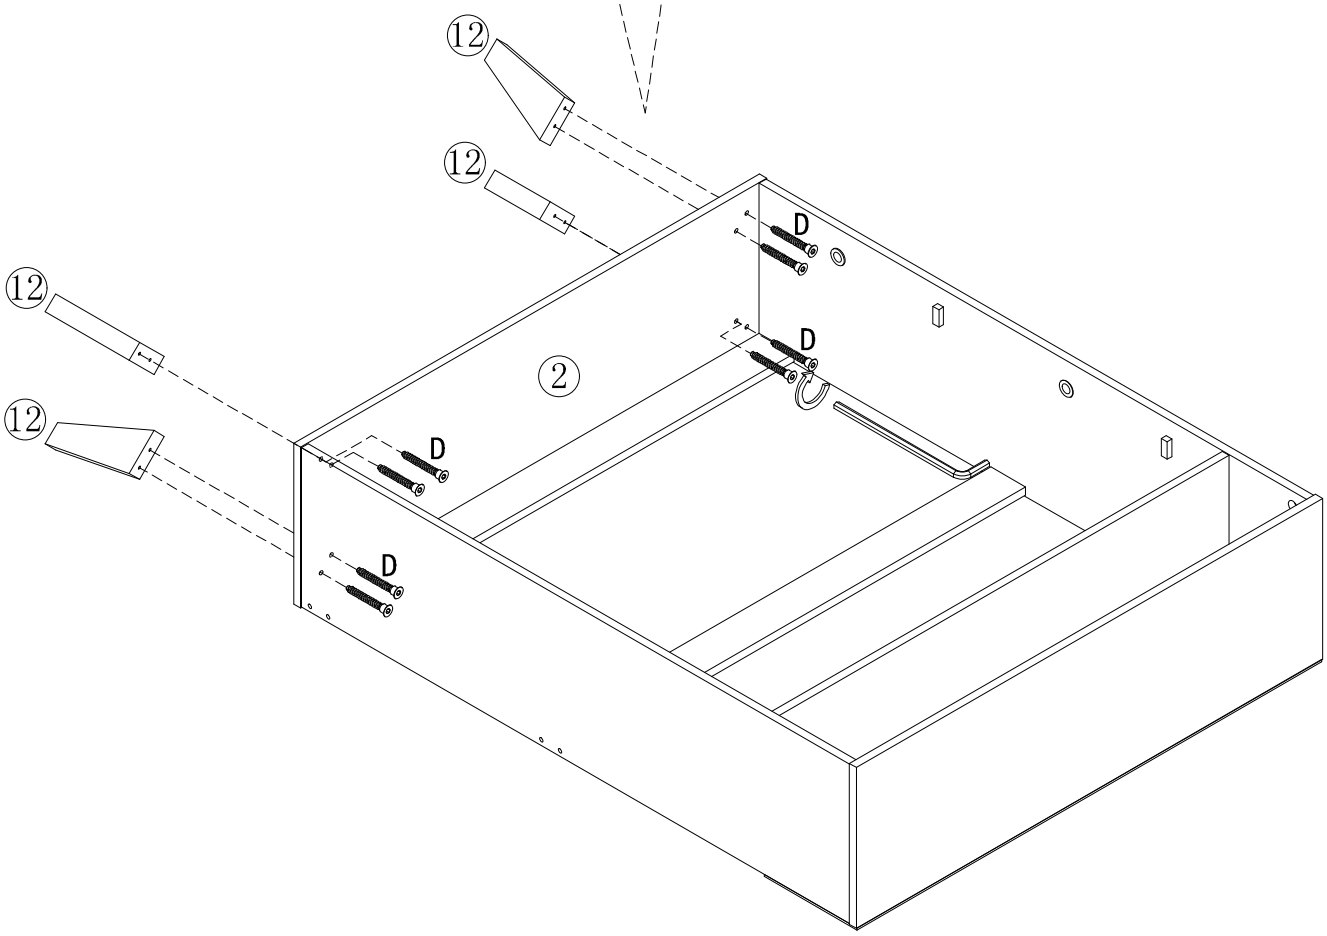


	D X 8PCS


STEP 8

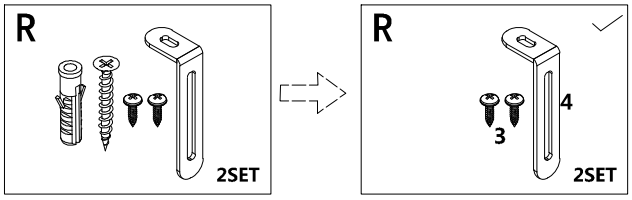

Note: Put the anti-tip device R4 on the top, near theback side, and fix it with a screw R3.

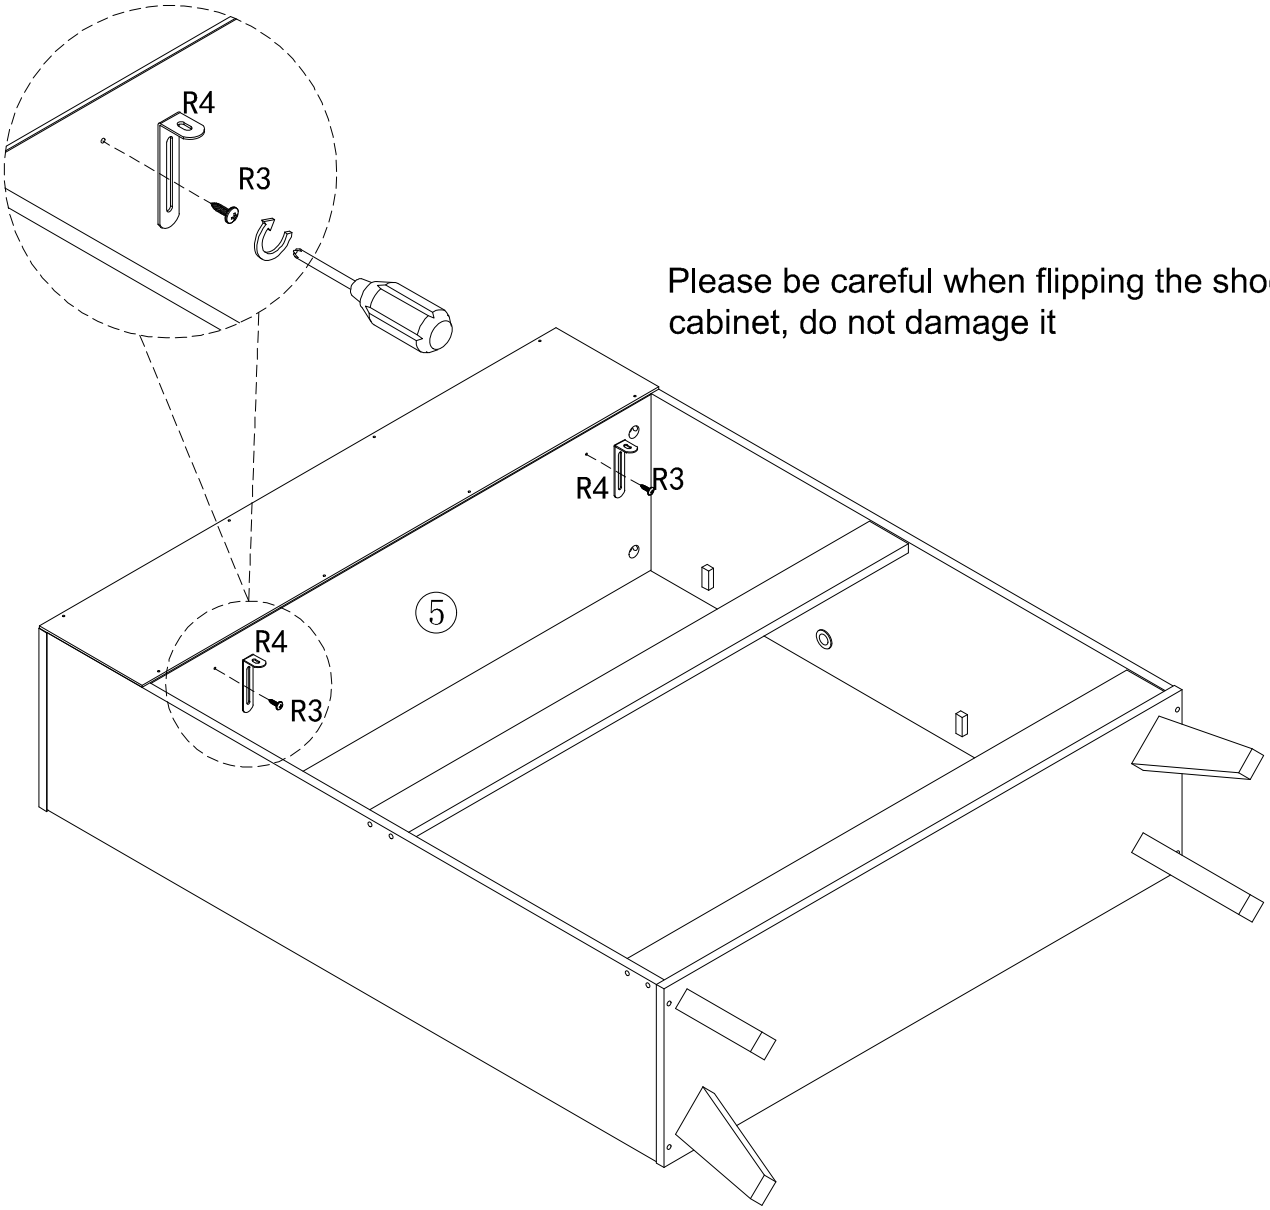


Please be careful when flipping the shoe cabinet, do not damage it

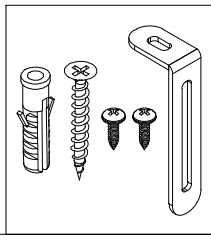

R X 2SET


STEP 9

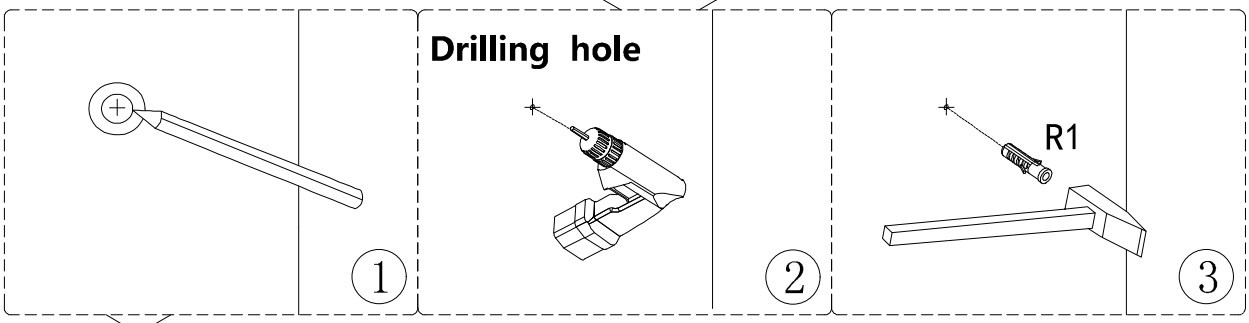


Drill a hole in the wall, then hammer the R1 into the wall with a hammer


WALL

Note: Follow step
Link R4 and R1 with a R2 using a screwdriver,and assembly it tightly.

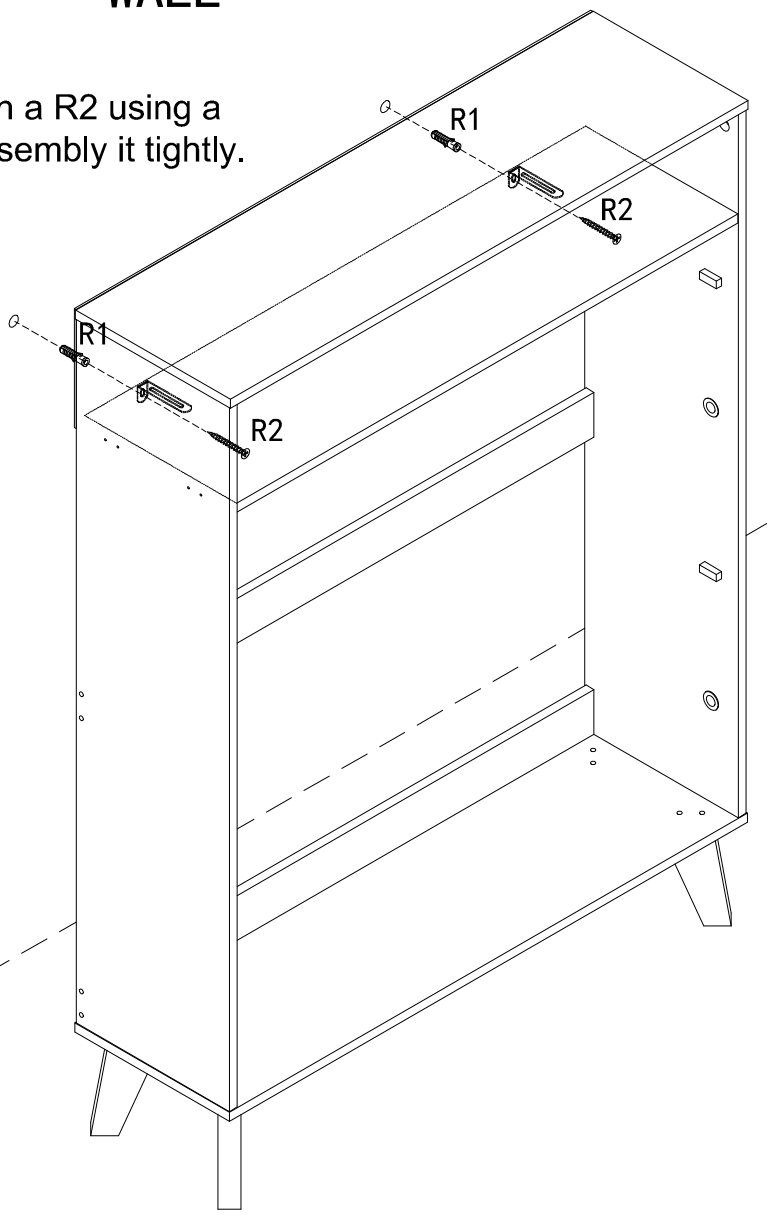

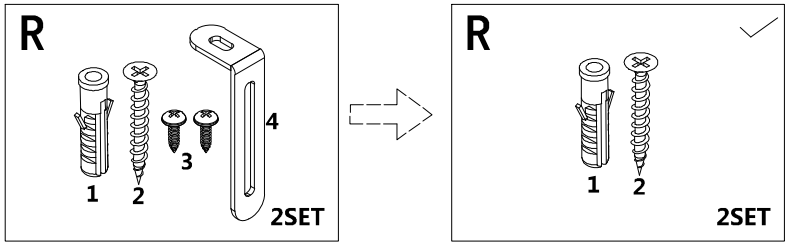


STEP 10

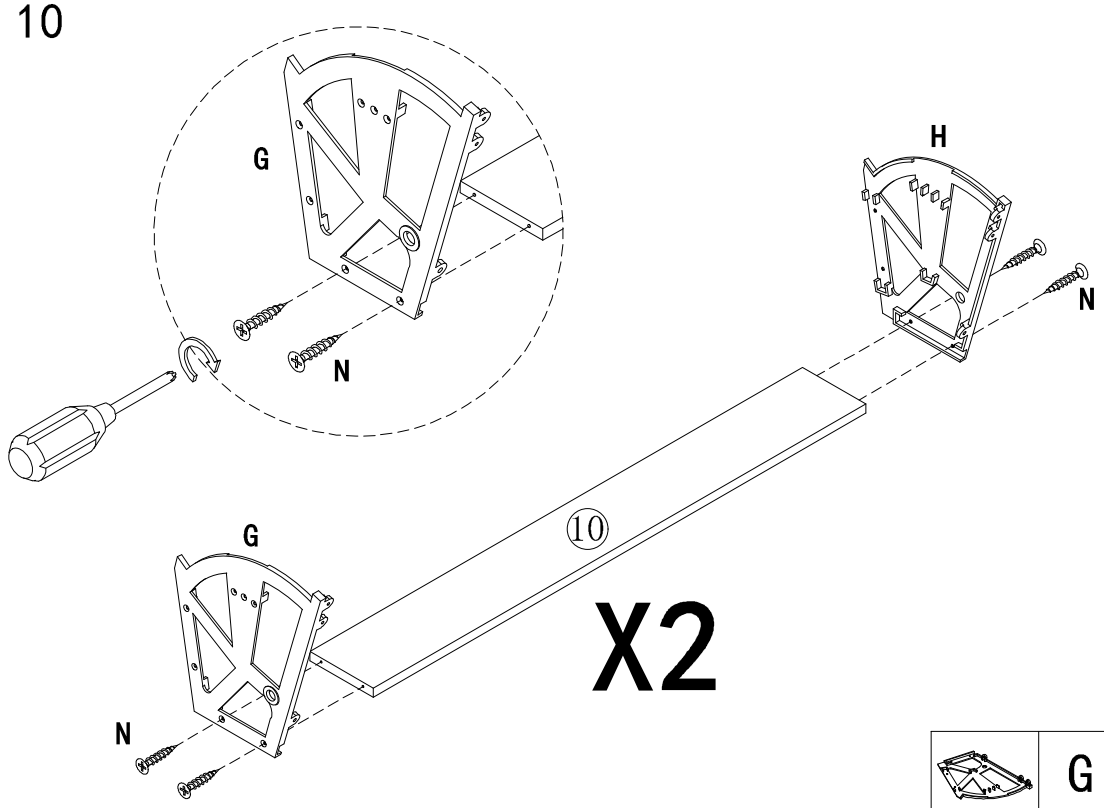


	G X 2PCS
	H X 2PCS
	N X 8PCS

STEP 11

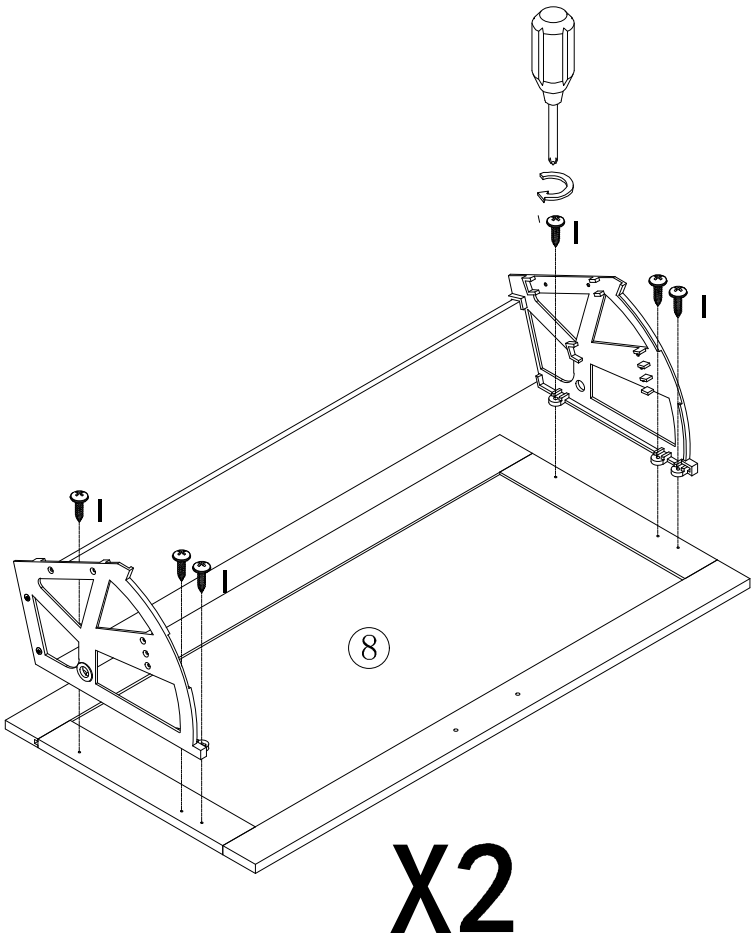

	I X 12PCS


STEP 12

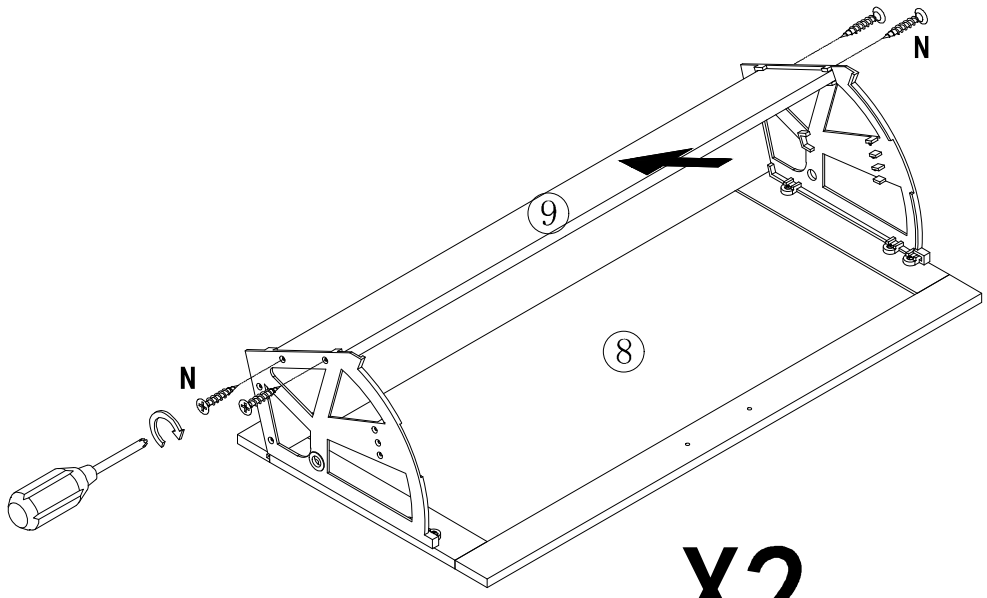

X2

	N X 8PCS


STEP 13

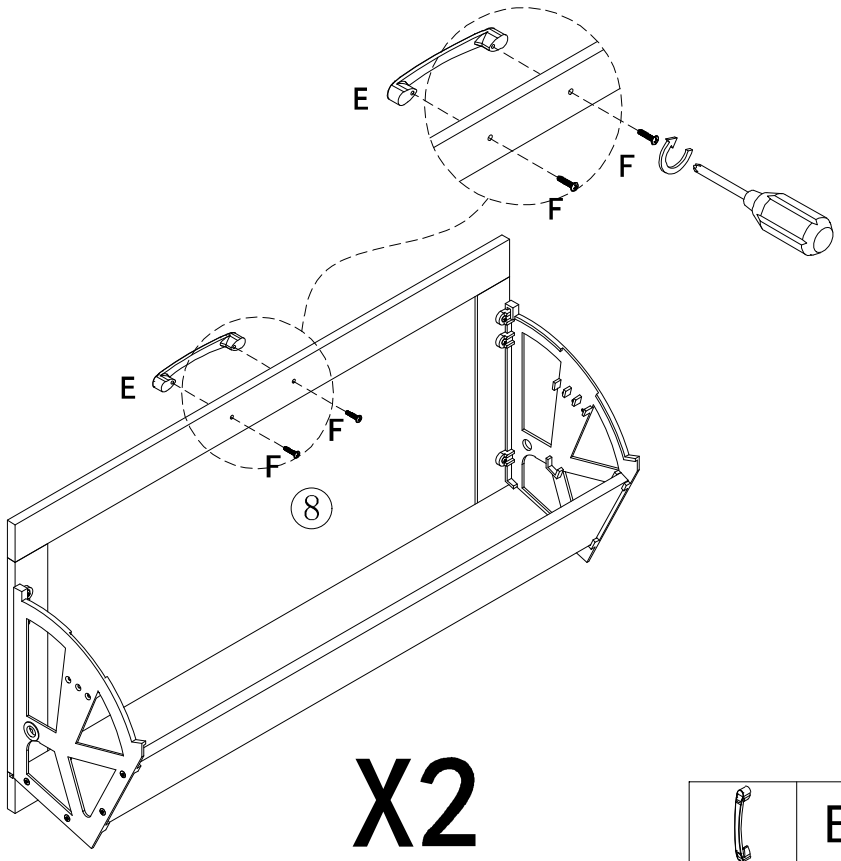

X2


	E X 2PCS
	F X 4PCS

STEP 14

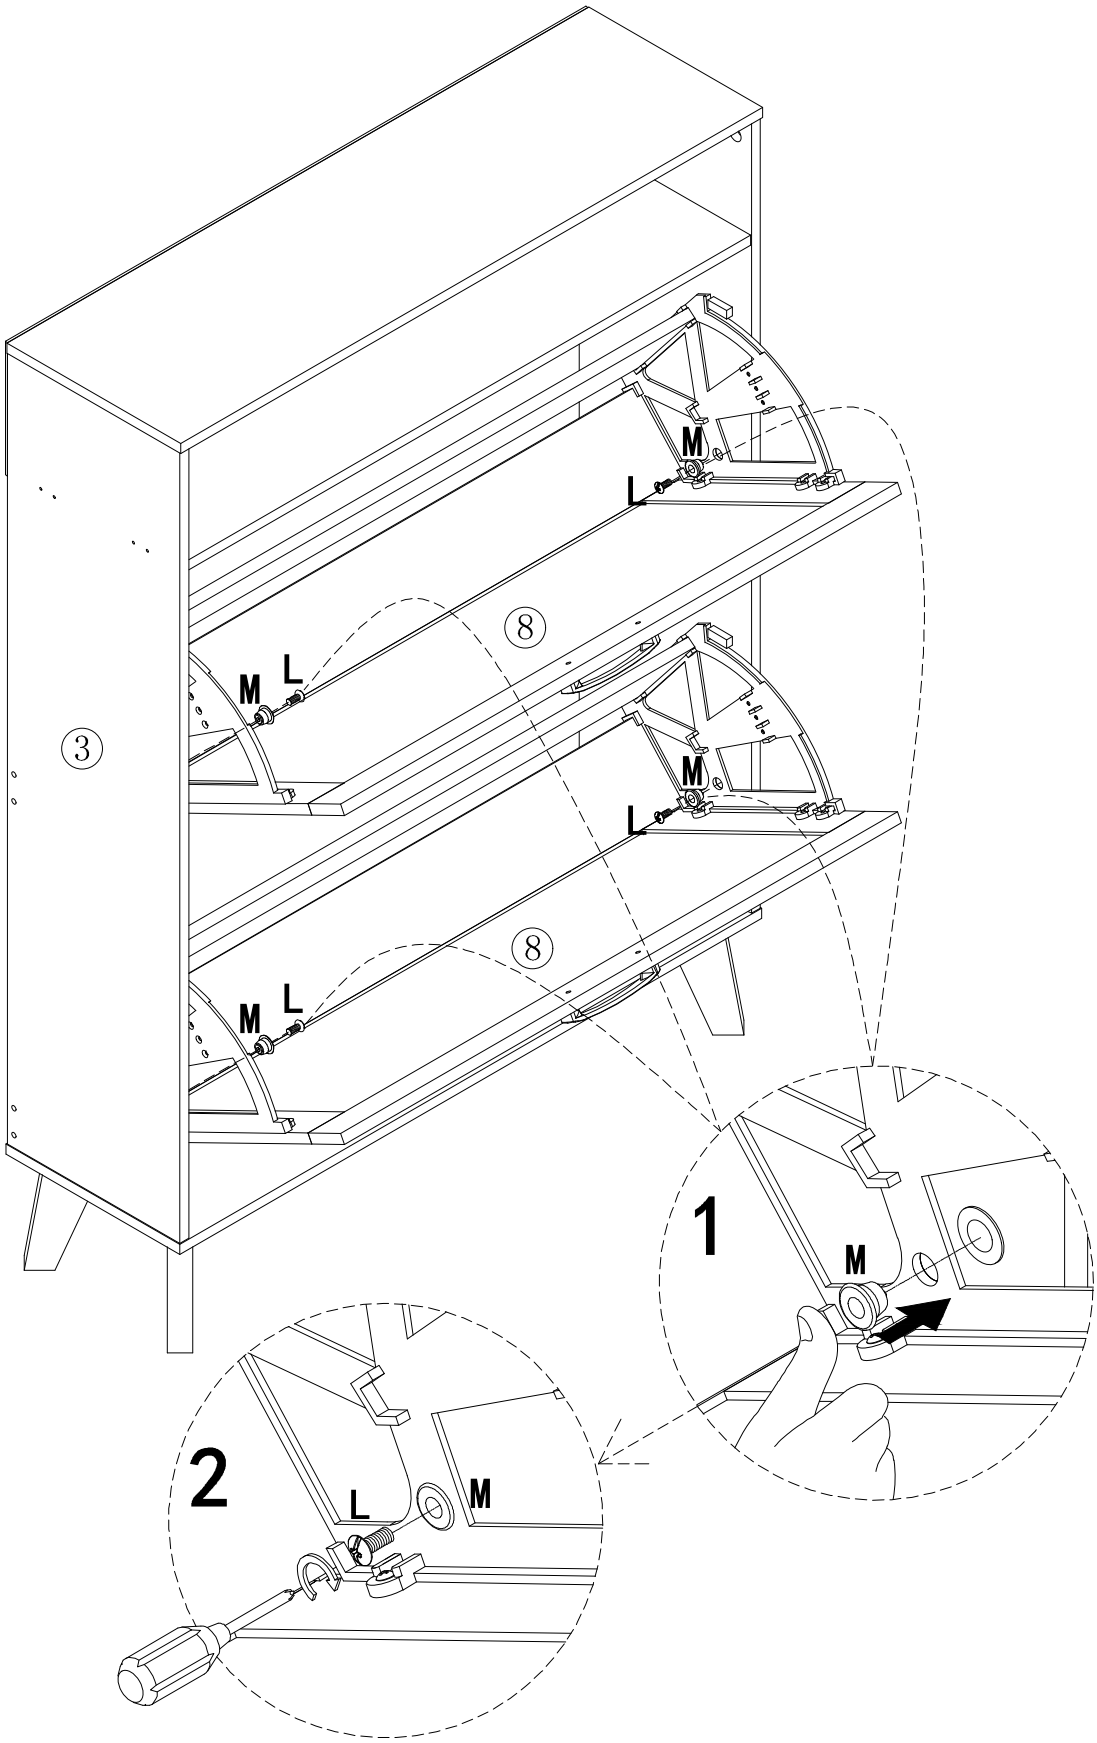


	L X 4PCS
	M X 4PCS


STEP 15

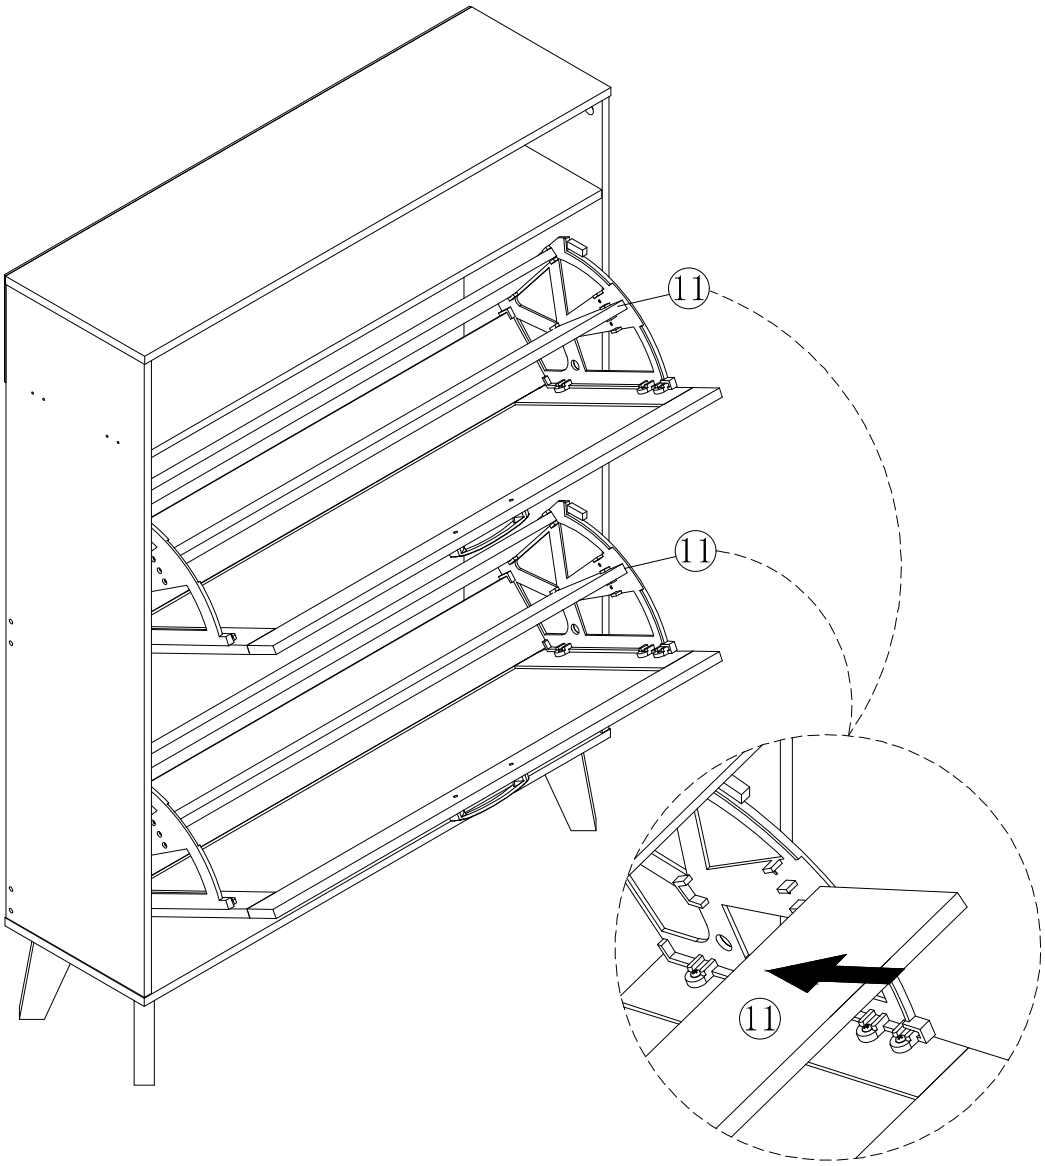

Adjustable shelf for various size of shoes

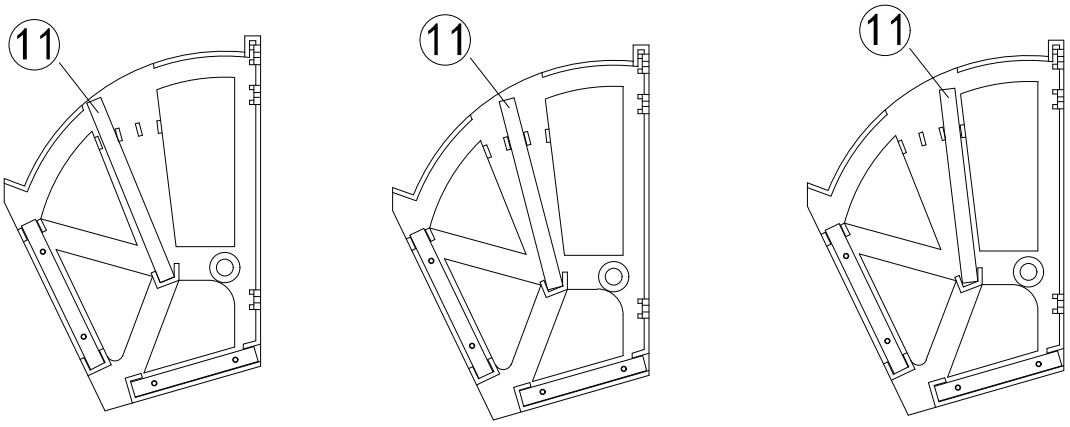

STEP 16

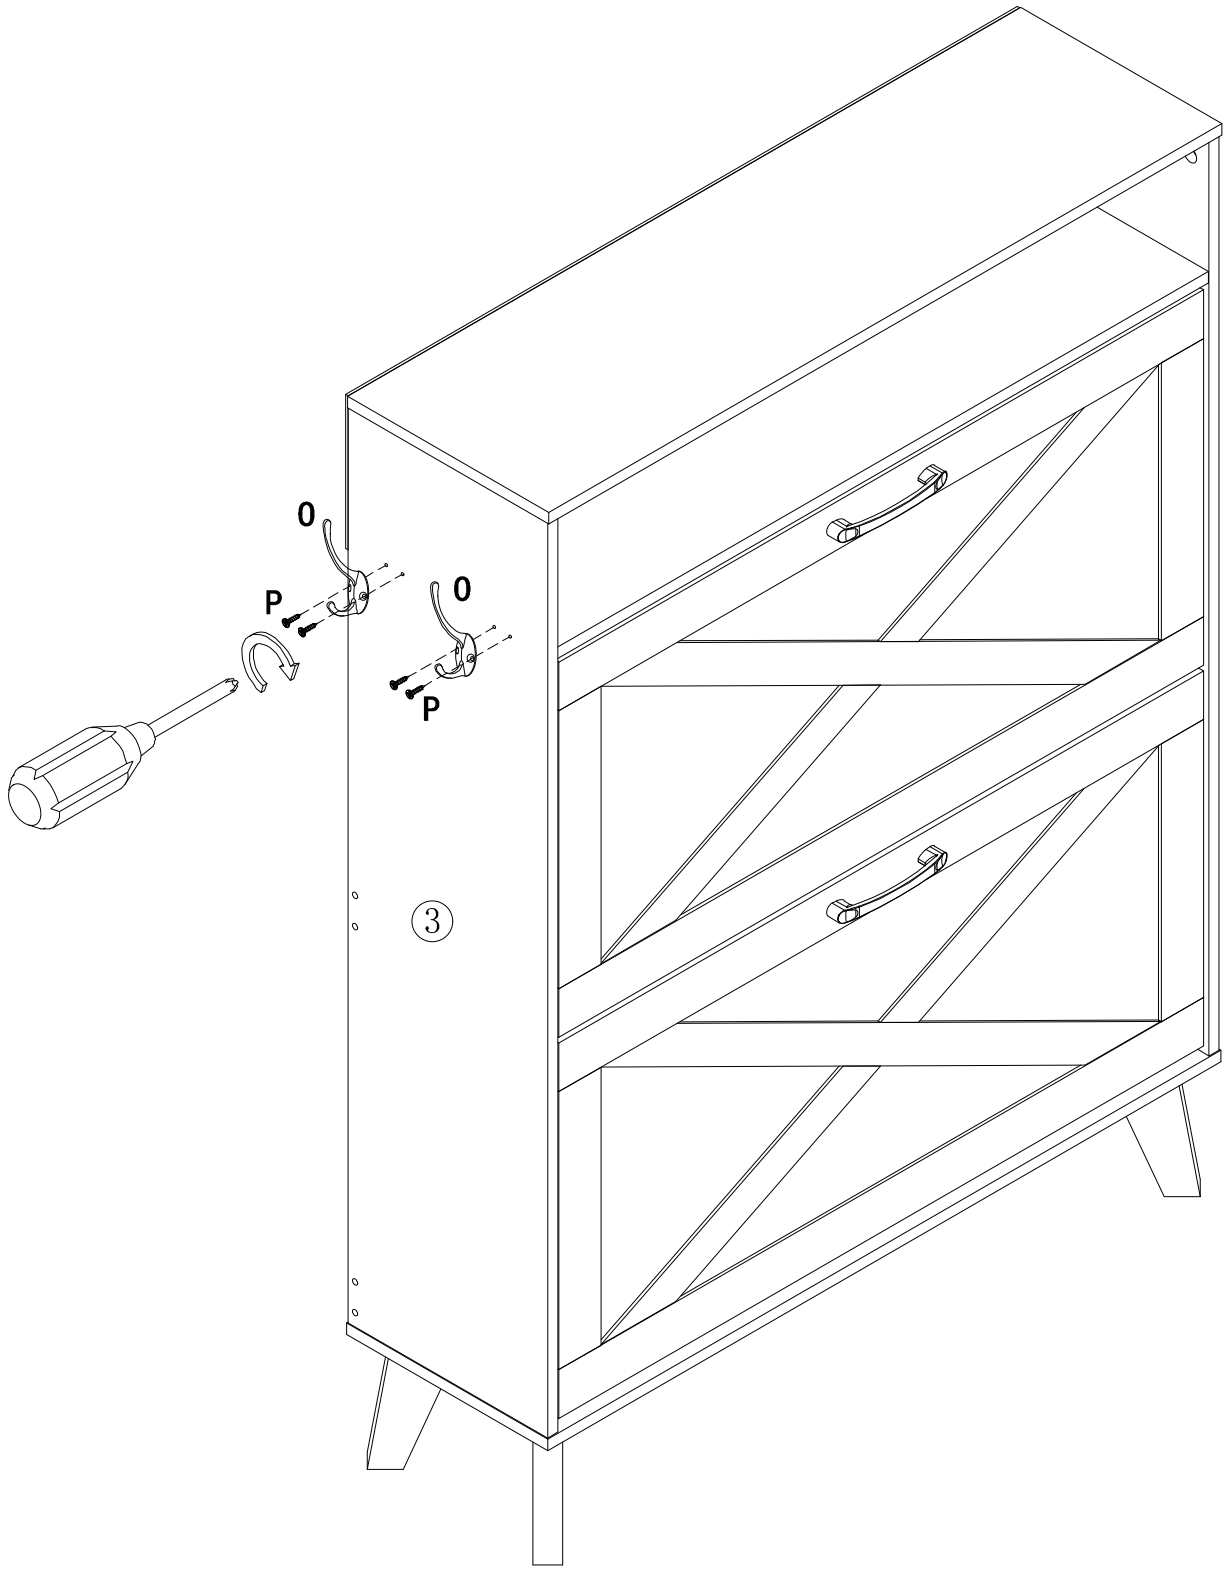

	O X 2PCS
	P X 4PCS