THE DUSTPAN & BRUSH STORE

USER'S MANUAL

WINDOW VACUUM



Thank you for purchasing our window vacuum cleaner. This manual will guide you in the correct use of this product. Please read it carefully before use and retain this document for future reference.

STREAK-FREE GUIDE



Required Action: Ensure the squeegee blade sits flush against the housing and extends slightly above the guide teeth before use. A bent or dirty blade will leave streaks.

FAQS & TROUBLESHOOTING

Issue	Possible Cause	Solution
Won't turn on	Depleted battery	Recharge using supplied charger.
Leaves streaks	Dirty / worn blade	Wipe blade clean or reverse to fresh side.
Short runtime	Battery degraded	Recharge monthly if stored unused.

SAFETY WARNINGS


- Read all instructions carefully before use. Retain manual for future reference.
- The manufacturer accepts no liability for injury or damage caused by failure to follow instructions.
- **Battery:** Contains Li-ion rechargeable battery. Do not disassemble, crush, or expose to heat or water.
- Use **only** the supplied charger to avoid fire hazards or damage.
- Keep appliance and packaging materials away from children.
- Dispose of product responsibly per UK WEEE / local authority guidelines.

PRODUCT OVERVIEW

1. Silicone squeegee
2. Power switch
3. Drain outlet
4. Handle
5. Wastewater tank
6. Charging port
7. Indicator light




ASSEMBLY INSTRUCTIONS

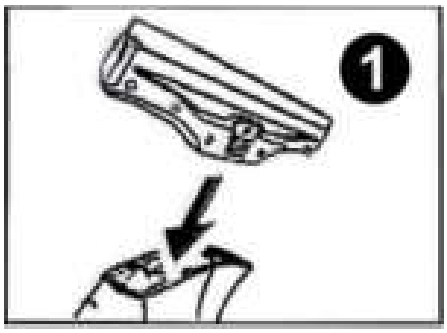


1. Align the squeegee head with the top of the main unit.
2. Push the head firmly down until it clicks securely into place.

OPERATING INSTRUCTIONS

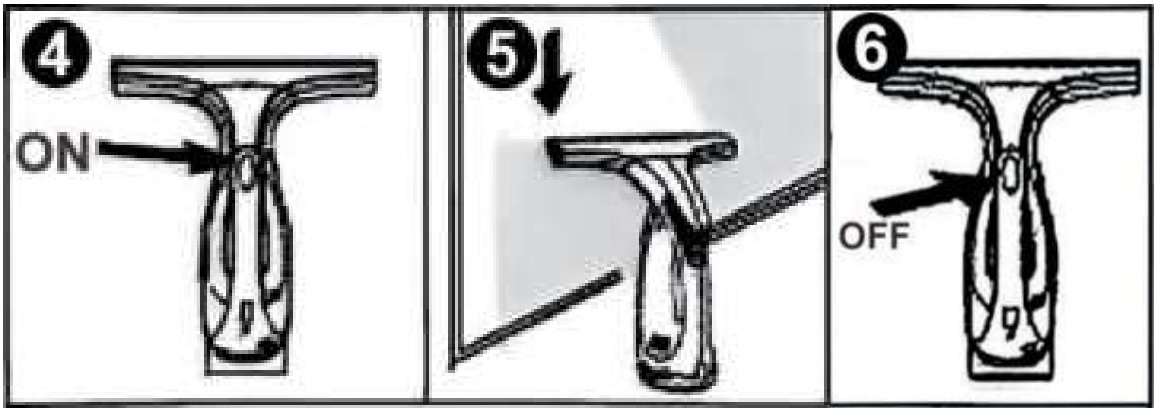

1. Press the **Power Button** to start the motor.
2. Place the rubber blade gently against wet glass and glide downwards.
3. Press the **Power Button** again to turn off when finished.

DISASSEMBLY & CLEANING

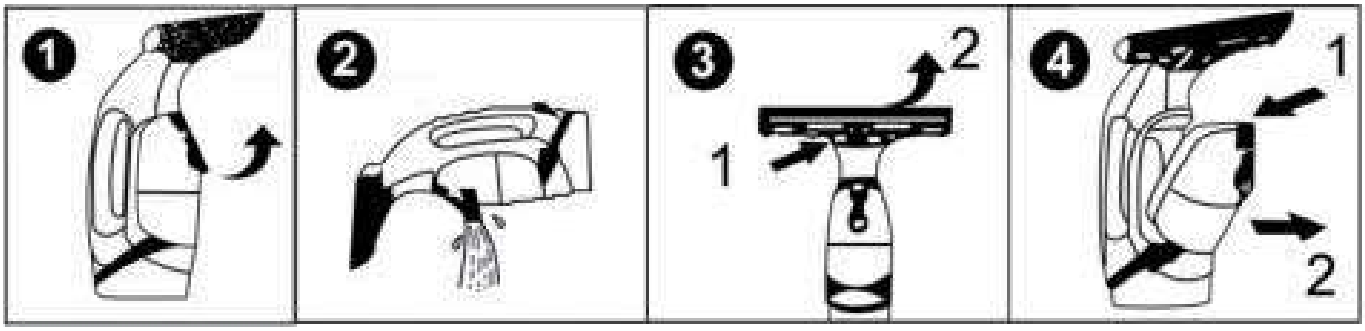

1. Open the dirty water tank drain plug.
2. Tilt the device over a sink to drain dirty water.
3. Press the tank release latch to pull the tank away for thorough rinsing.
4. Press the squeegee lock button to detach and clean the blade head.


> **IMPORTANT:**
> Always switch off the device before emptying. Do not allow dirty water level to exceed the **MAX** line on the tank.

LED INDICATOR LIGHTS

Light Color	Pattern	Meaning
Blue	Solid	Operating normally / Fully charged
Blue	Slow Flash	Low battery / Charging in progress
Blue	Fast Flash	Battery empty / Protection active

UK REGULATORY INFORMATION

UKCA & CE: Complies with UK Electrical Equipment Safety Regulations 2016 and EMC Regulations 2016.

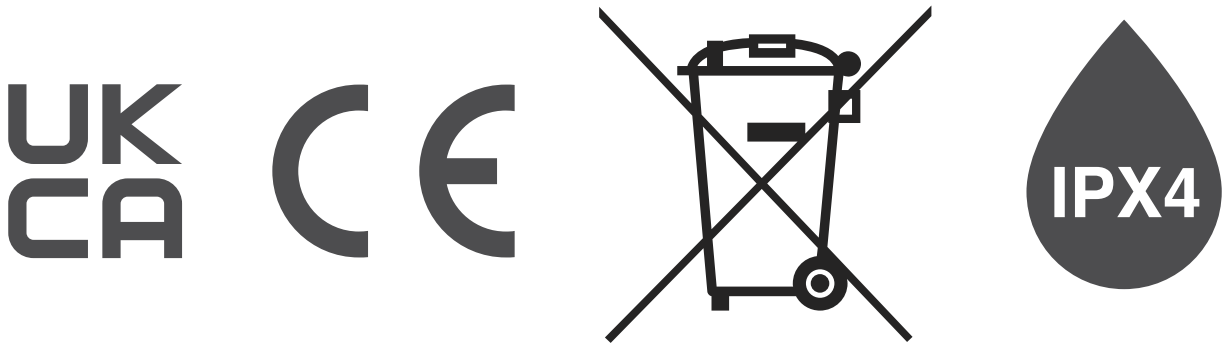

Imported & Distributed by:

The Dustpan and Brush Store
Amotherby Business Centre,
Amotherby, Malton YO17 6TQ

Support: Help@thedustpanandbrushstore.co.uk