
Pure & Easy


ASSEMBLY INSTRUCTIONS

NOTICE


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY
WICHTIG, FÜR SPÄTERE NACHSCHLAGE AUFBEWAHREN: SORGFÄLTIG LESEN
IMPORTANTE, GUARDAR PARA REFERENCIA POSTERIOR: LEER ATENTAMENTE
IMPORTANTE, CONSERVARE PER RIFERIMENTI FUTURI: LEGGERE ATTENTAMENTE
IMPORTANT, À CONSERVER POUR RÉFÉRENCE FUTURE : LIRE ATTENTIVEMENT

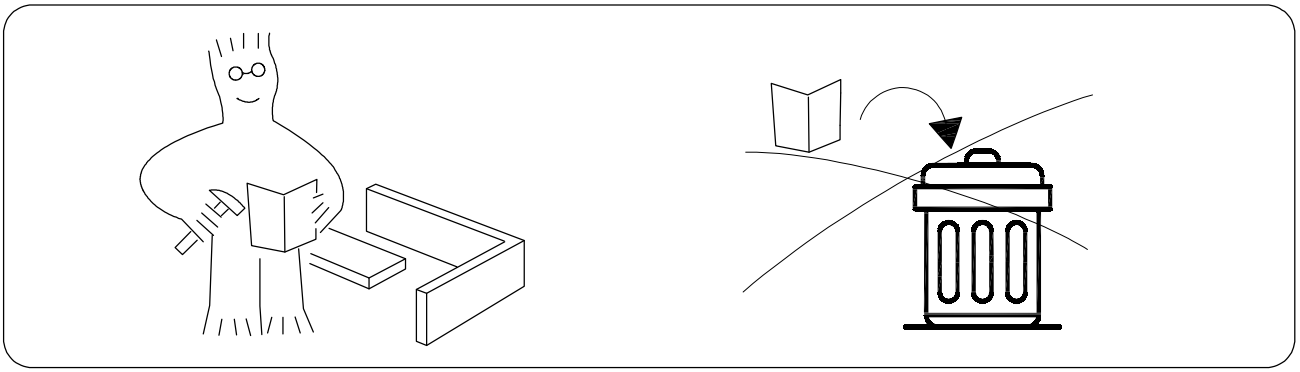


Assemble on a flat, clean and soft surface.
Auf einer flachen, sauberen und weichen Oberfläche zusammenbauen.
Assembler sur une surface plate, propre et douce.
Assemblare su una superficie piatta, pulita e morbida.
Ensamblar sobre una superficie plana, limpia y suave.

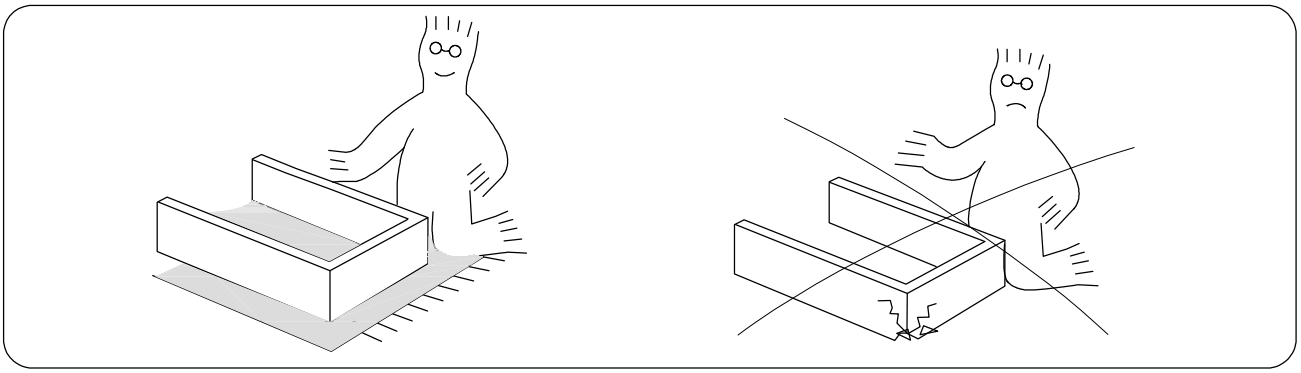


Professional installation is highly recommended.
Eine professionelle Installation wird dringend empfohlen.
Une installation professionnelle est fortement recommandée.
Si raccomanda vivamente l'installazione professionale.
Se recomienda altamente la instalación profesional.

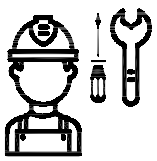


Periodically Check That All Components Are Tightly Secured.
Überprüfen Sie Regelmäßig, Dass Alle Komponenten Fest Gesichert Sind.
Vérifiez Périodiquement Que Tous Les Composants Sont Bien Fixés.
Controllare Periodicamente Che Tutti I Componenti Siano Ben Fissati.
Verifique Periódicamente Que Todos Los Componentes Estén Bien Asegurados.

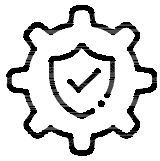


It is recommended that multiple people assemble this product.
Es wird empfohlen, dass mehrere Personen dieses Produkt zusammenbauen.
Il est recommandé que plusieurs personnes assemblent ce produit.
Si raccomanda che più persone assemblino questo prodotto.
Se recomienda que varias personas ensamblen este producto.

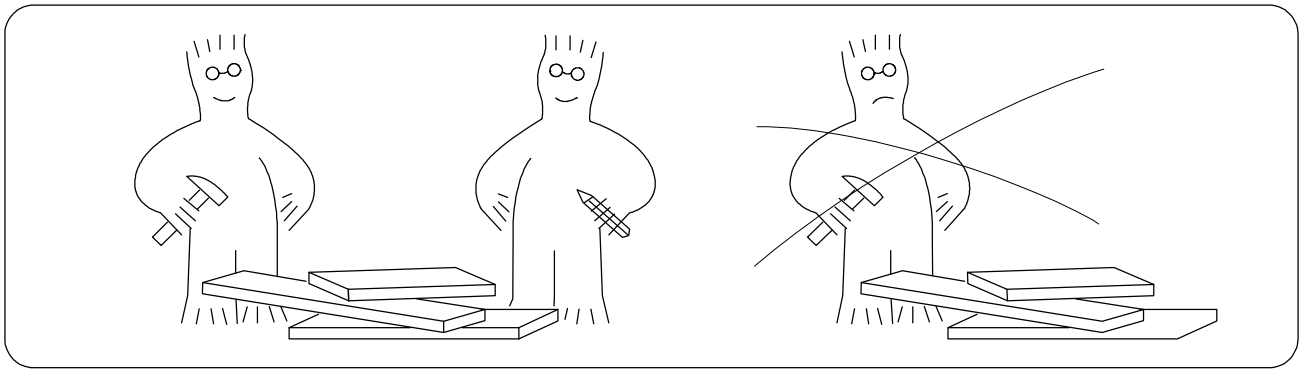

Serious or fatal crushing injuries can occur from furniture tip-over. Always secure this furniture to the wall using tip-over restraints.
Schwere oder tödliche Quetschverletzungen können durch das Umkippen von Möbeln verursacht werden. Sichern Sie diese Möbel immer mit Kipp-Sicherungen an der Wand.
Des blessures graves ou mortelles par écrasement peuvent survenir en cas de basculement de meubles. Fixez toujours ces meubles au mur à l'aide de dispositifs anti-basculement.
Lesioni gravi o mortali da schiacciamento possono verificarsi a causa del ribaltamento dei mobili. Fissare sempre questi mobili alla parete utilizzando i sistemi di blocco anti-ribaltamento.
Pueden ocurrir lesiones graves o fatales por aplastamiento debido al volcamiento de muebles. Siempre asegure este mueble a la pared utilizando dispositivos anti-vuelco.

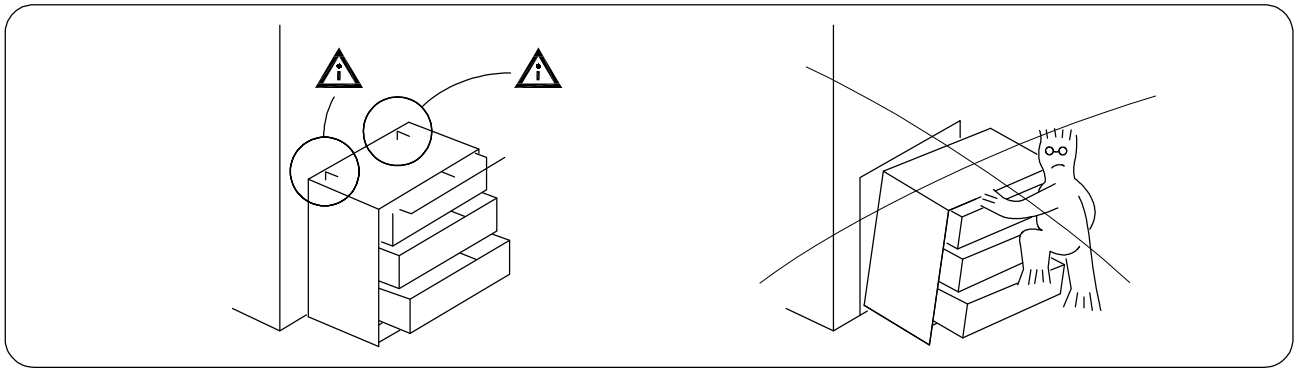


Please have the following auxiliary tools ready:
Bitte haben Sie die folgenden Hilfswerkzeuge bereit:
Veuillez avoir les outils auxiliaires suivants à portée de main:
Si prega di avere pronti i seguenti strumenti ausiliari:
Por favor, tenga listos las siguientes herramientas auxiliares:

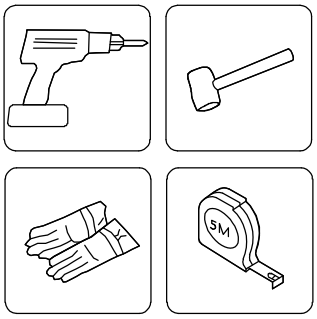


USING CAM LOCK AND OUICKFIT
VERWENDUNG VON NOCKENSCHL OSS UND OUICKFIT
UTILISATION DE SERRURE Ã CAME ET OUICKFIT
USO DISERRATURA A LEVA E OUICKFIT
USANDO EL CIERRE DE LEVAY OUICKFIT


Tighten QuickFit until the shoulder is flush with the panel. Do not overtighten or undertighten.
Ziehen Sie den Quickfit an, bis die Schulter bündig mit der Platte ist. Nicht zu fest oder zu locker anzie-hen.
Serrez le quickfit jusqu'à ce que l'épaulement soit affleurant avec le panneau. Ne serrez pas trop ou trop peu..
Stringere il quickfit fino a quando la spalla è a filo con il pannello. Non stringere troppo o troppo poco.
Apriete el quickfit hasta que el hombro esté al ras con el panel. No apriete demasiado ni demasiado poco.

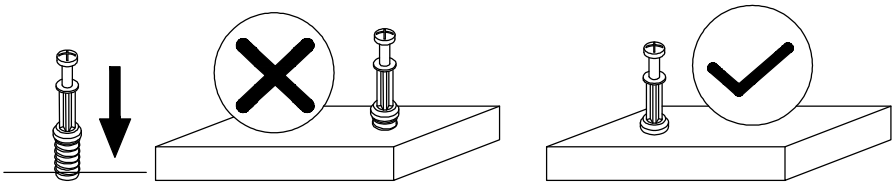





When fitting the cam lock, ensure the starting position is correct before inserting the connecting QuickFit.
Stellen Sie beim Einbau des nockenschloss sicher, dass die Startposition korrekt ist, bevor Sie den verbindenden Quickfit einsetzen.
Lors de la pose du serrure à came, assurez-vous que la position de départ est correcte avant d'insérer le quickfit de connexion.
Quando si monta il serratura a leva, assicurarsi che la posizione di partenza sia corretta prima di inserire il quickfit di collegame to.
Al instalar el cierre de leva, asegúrese de que la posición inicial sea correcta antes de insertar el quickfit de conexión.




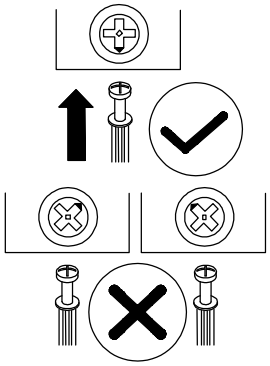






The QuickFit head should be in the centerof the cam lock when the two panels are joined.The cam lock should be inserted before the QuickFit. Turn the cam lock clockwise to tighten.
Der Quickfit-Kopf sollte sich in der Mitte des nockenschloss befinden, wenn die beiden Platten ver bunden sind.Der nockenschloss sollte vor dem Quickfit eingesetzt werden. Drehen Sie den nockenschloss im Uhrzeigersinn, um ihn zu befestigen.
La tÃête du quickfit doit être au centre du serrure à came lorsque les deux panneaux sont assemblés. Le serrure à came doit être inséré avant le quickfit. Tournez le serrure à came dans le sens des aiguilles d'une montre pourle serrer.
La testa delquickfit dovrebbe essere al centro del serratura a leva quando i due pannelli sono uniti, Il serratura a leva deve essere inserito prima del quickfit. Ruotare il serratura a leva in senso orario per stringere.
La cabeza del quickfit debe estaren el centro del cam lock cuando los dos paneles estén unidos. El cierre de leva debe insertarse antes del quickfit. Gire el cierre de leva en sentido horario para apretar.




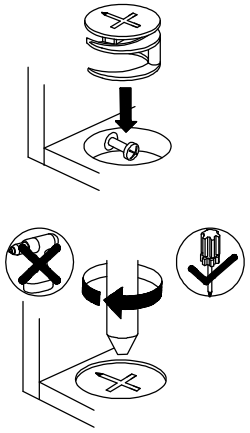






PARTS



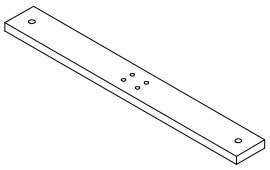
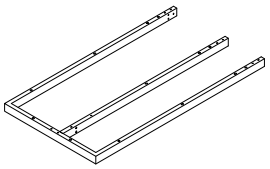
Item no. Nr . N °d artlcle Articolo No. Artículo No	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.
1		x1
2		x1
3		x2
4		x1

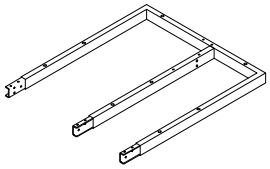
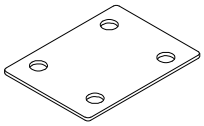
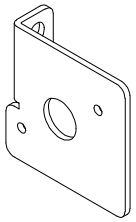
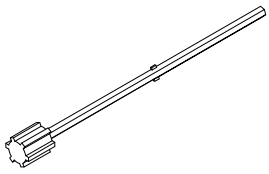
Item no. Nr . N °d artlcle Articolo No. Artículo No	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.
5		x1
6		x5
7		x1
8		x1

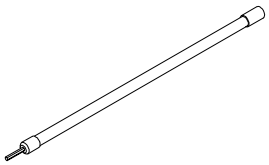
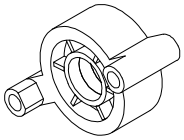
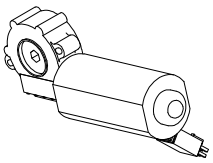
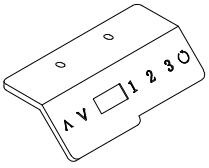
Item no. Nr . N °d artlcle Articolo No. Artículo No	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.
9		x1
10		x1
11		x1
12		x1

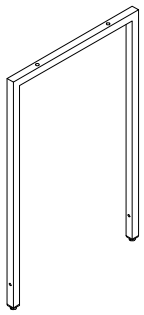
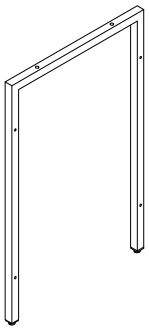
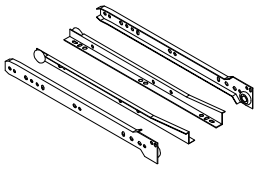
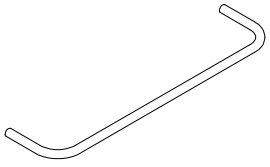
Item no. Nr . N °d artlcle Articolo No. Artículo No	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.
13		x1
14		x2
15	 12" 1.0	x1
16		x1

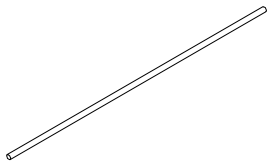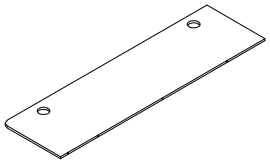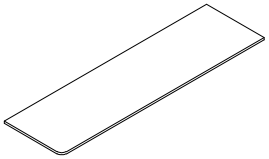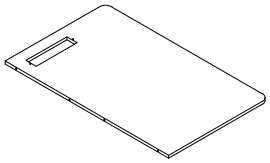
Item no. Nr . N °d artlcle Articolo No. Artículo No	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.
17		x2
18		x1
19		x1
20		x1

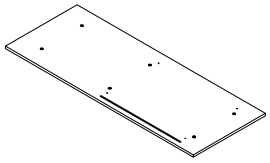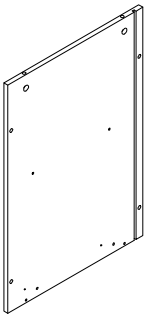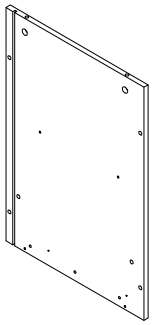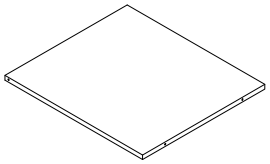
Item no. Nr . N °d artlcle Articolo No. Artículo No	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.
21		x1
22		x1
23		x1
24		x1

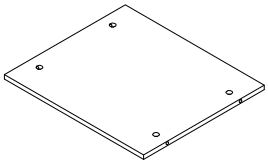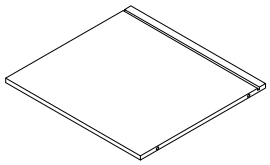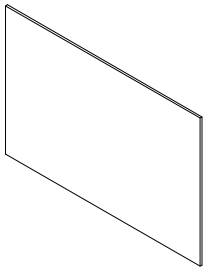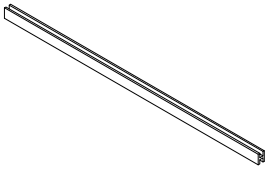Item no. Nr . N °d artlcle Articolo No. Artículo No	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.
25		x1
26		x1
27		x2
28		x1

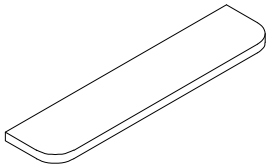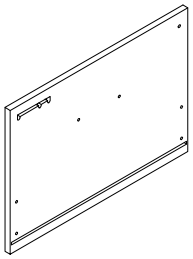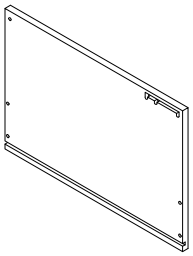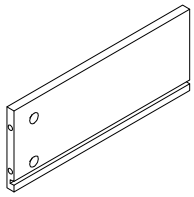Item no. Nr . N °d artlcle Articolo No. Artículo No	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.
29		x1
30		x1
31		x1
32		x1

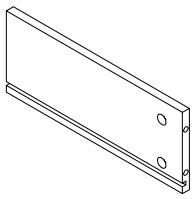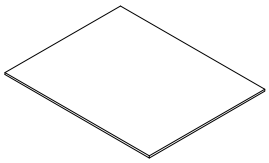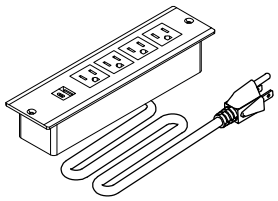
Item no. Nr . N °d artlcle Articolo No. Artículo No	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.
33		x1
34		x1
35		x1
36		x2

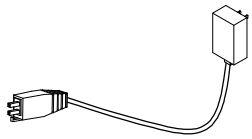Item no. Nr . N °d artlcle Articolo No. Artículo No	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.
37		x1


Item no. Nr . N °d artlcle Articolo No. Artículo No	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.
A	 M5x42	x16
B	 Ø15x10	x16
C	 M5x40	x11
D	 Ø6x40	x8
E	 M3.5x12	x10
F	 M6x10	x43
G	 M6x28	x16
H	 M6x50	x21

Item no. Nr . N °d artlcle Articolo No. Artículo No	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.
I	 15*6*2	x21
J	 M8x40	x8
K	 M6xL12	x4
L	 M5x10	x2
M	 M4x15	x2
N	 220-96	x1
O	 M8xØ45	x4
P	 M4x45	x2

Item no. Nr . N °d artlcle Articolo No. Artículo No	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.
Q	 M4	x2
R	 M4*Ø12*1.0	x2
	     4 # 5 # M4 10mm 12mm	


Item no. Nr . N °d artlcle Articolo No. Artículo No	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.
S		x2
T	 M6x30	x4


EXPLODED VIEW

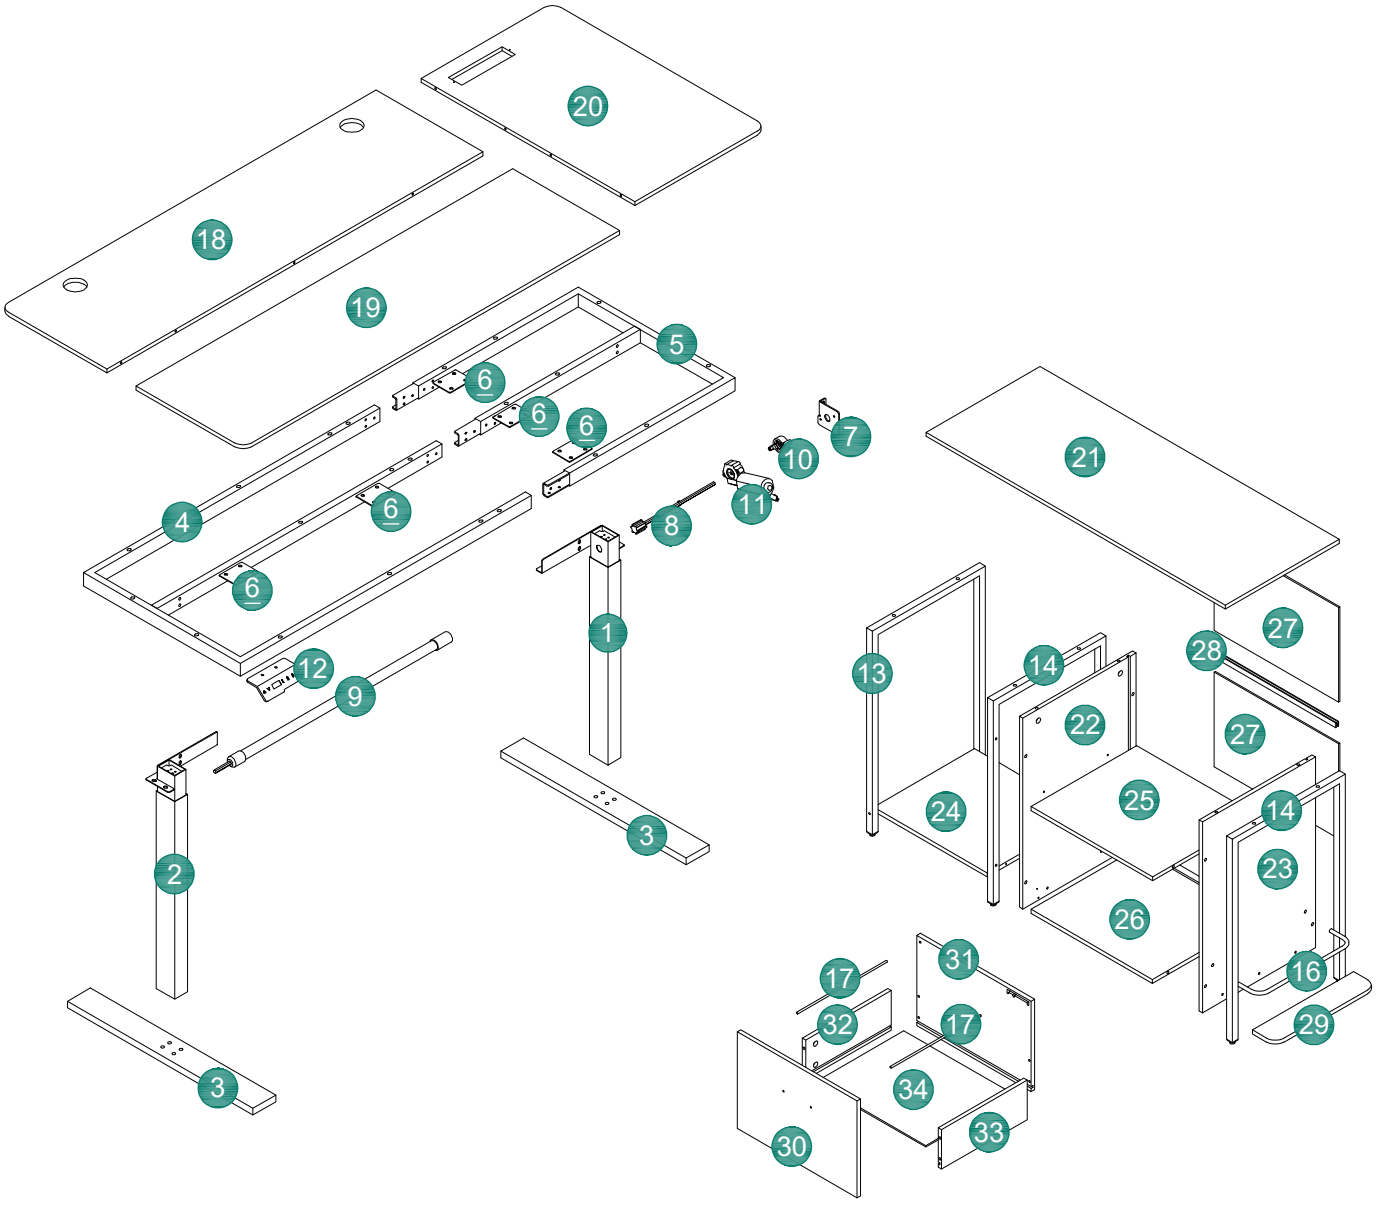


ASSEMBLY


1

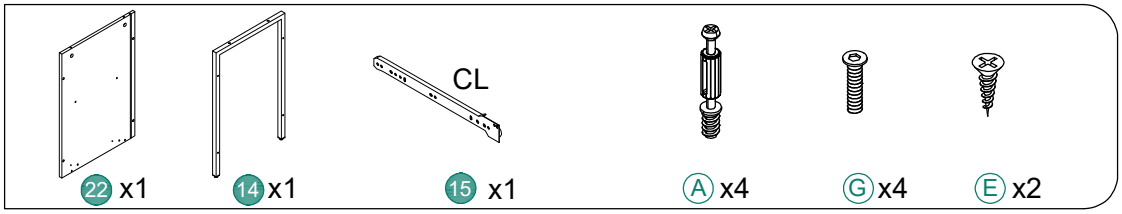

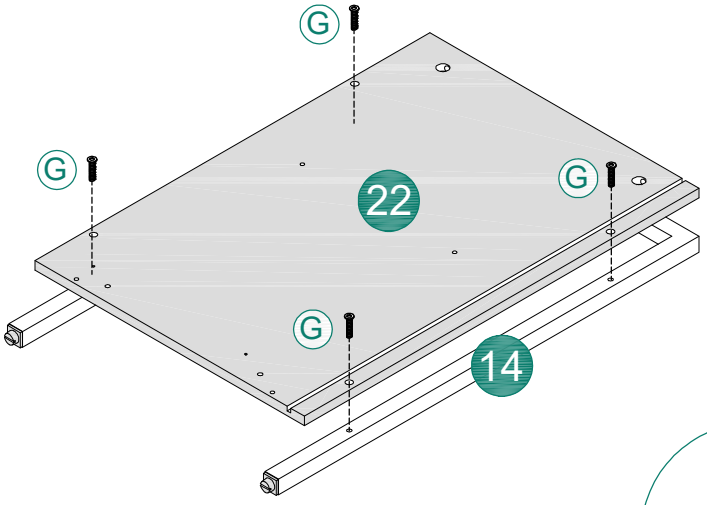


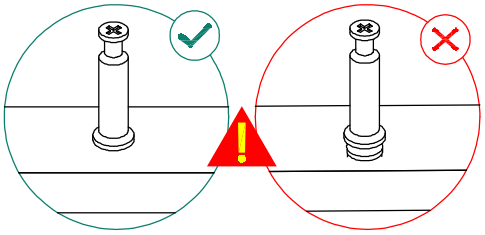





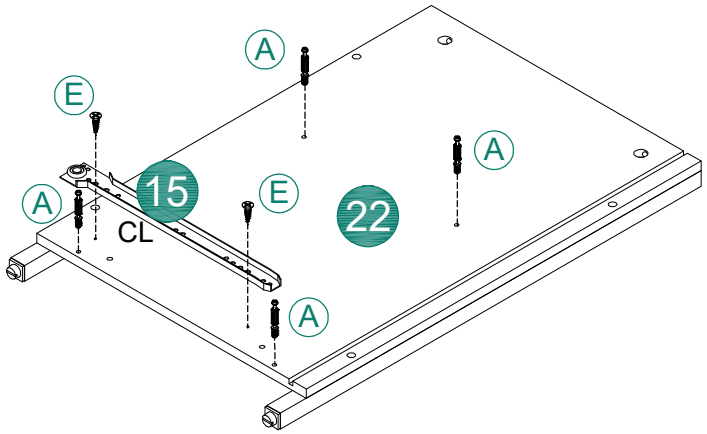


2

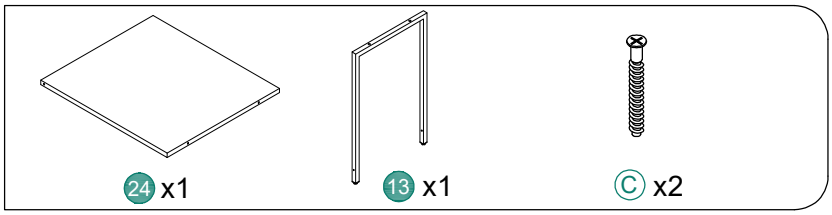

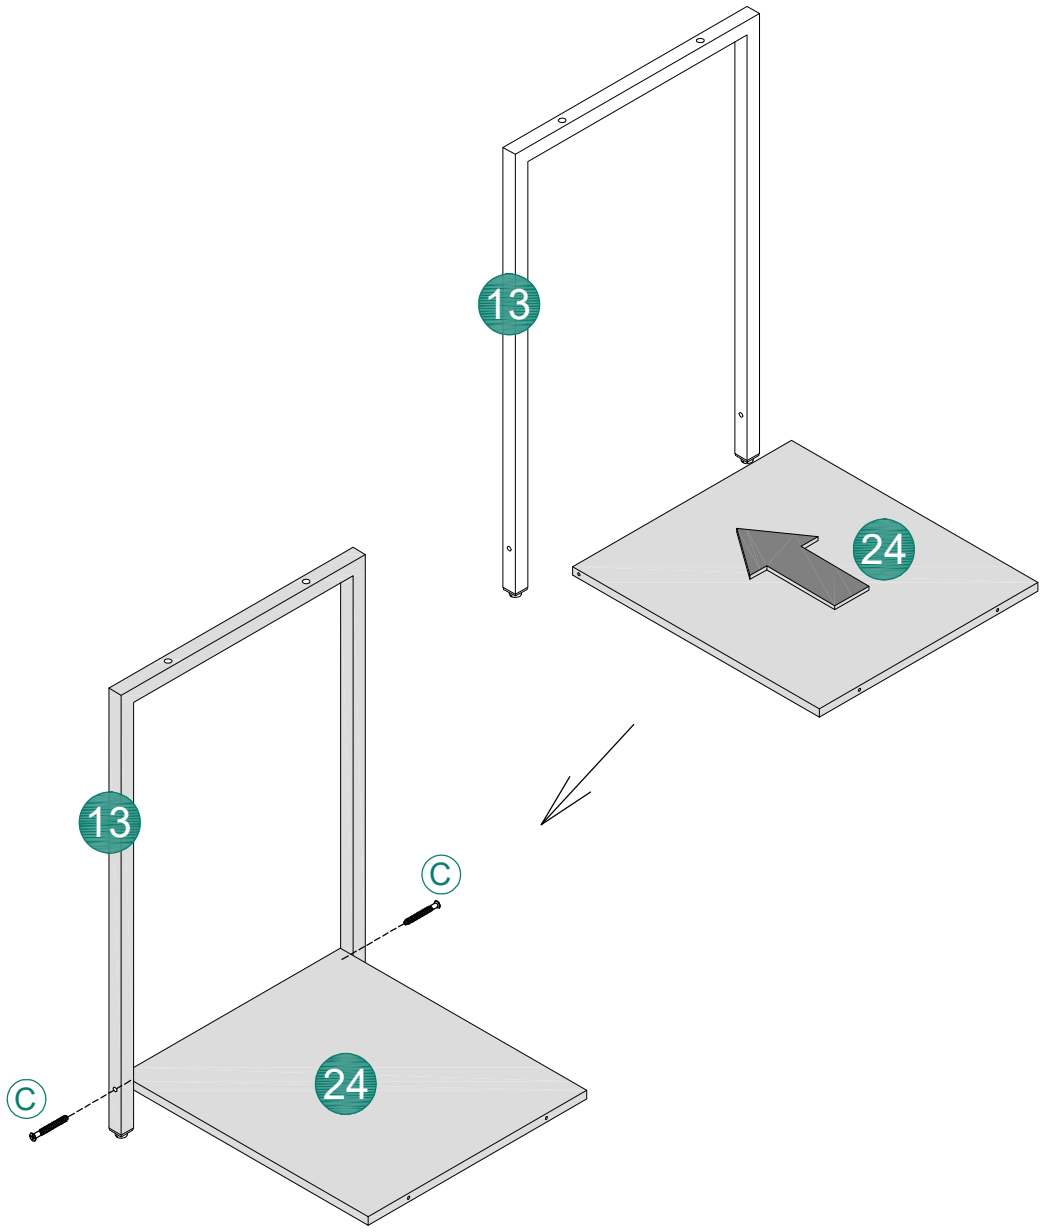


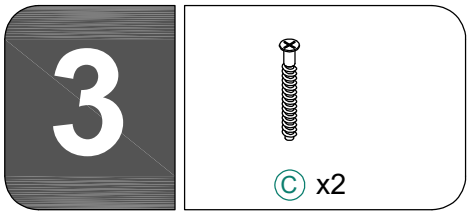
3
Ⓒ x2

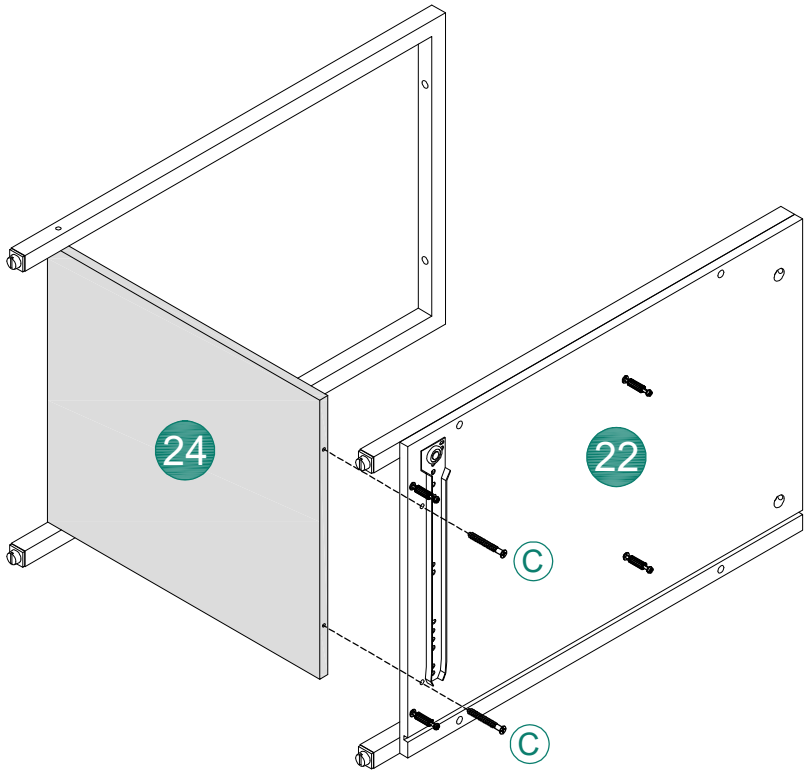

24
22
Ⓒ
Ⓒ

4



25 x1

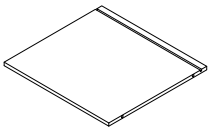

26 x1



B x4

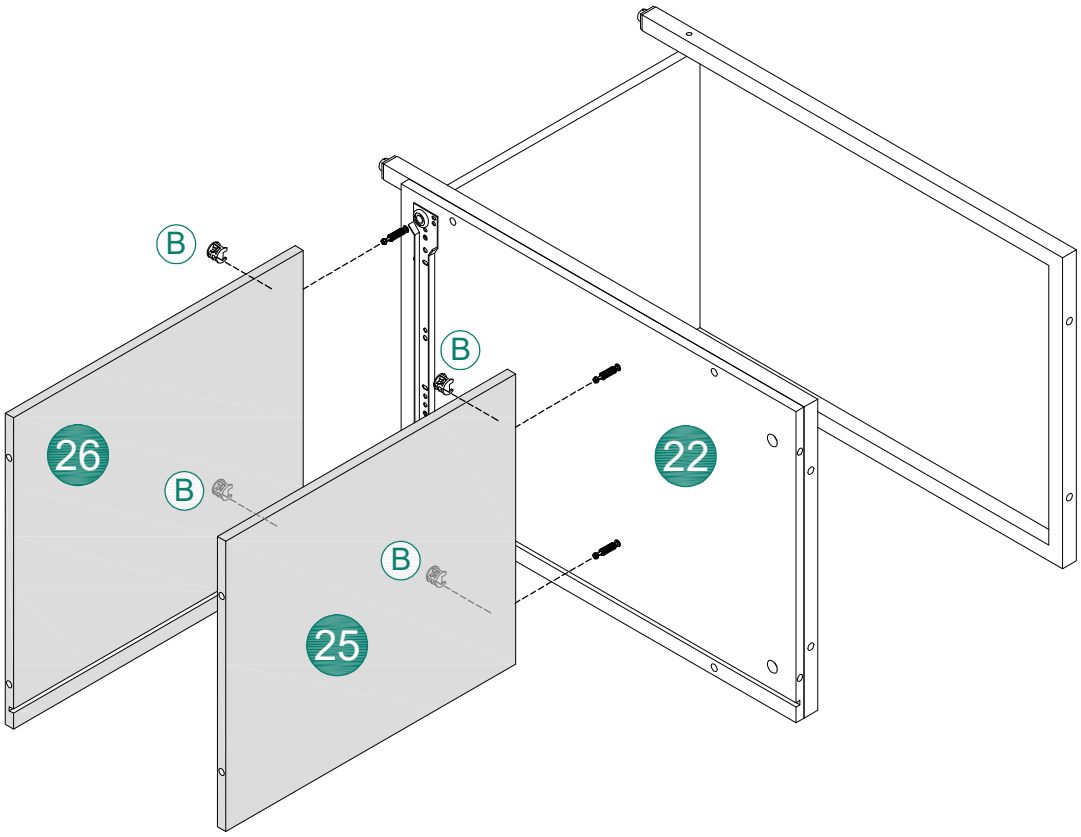



5

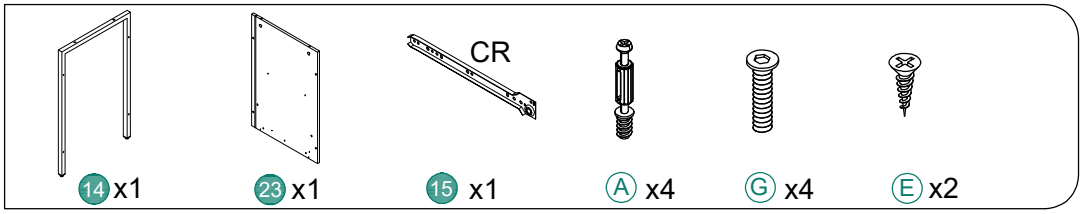

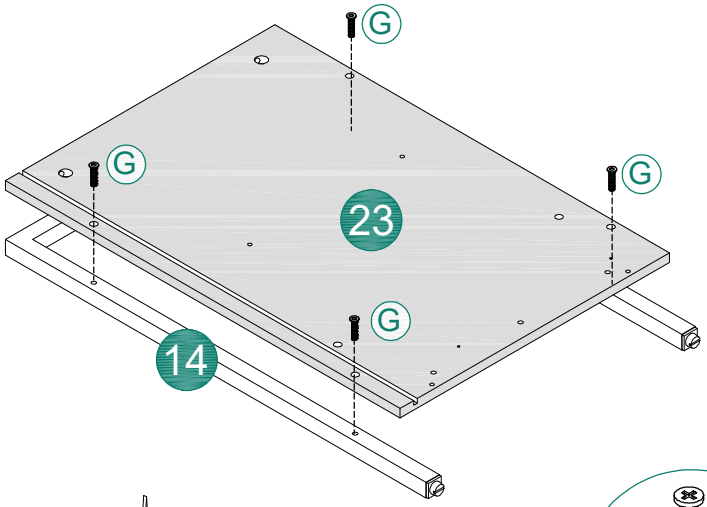


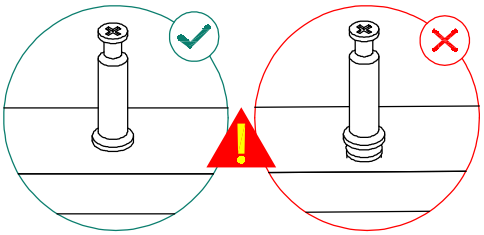


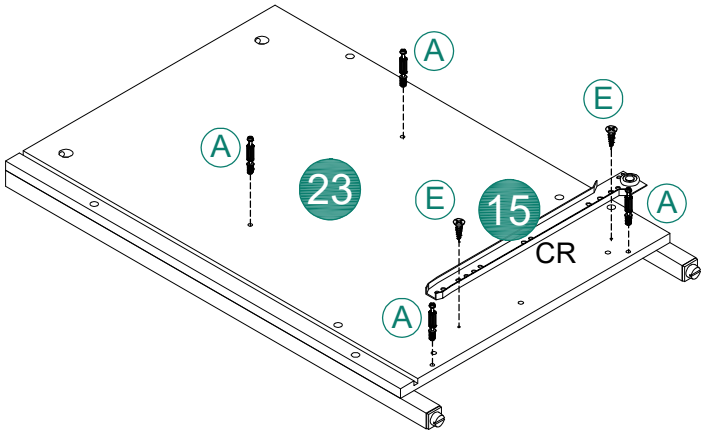






6

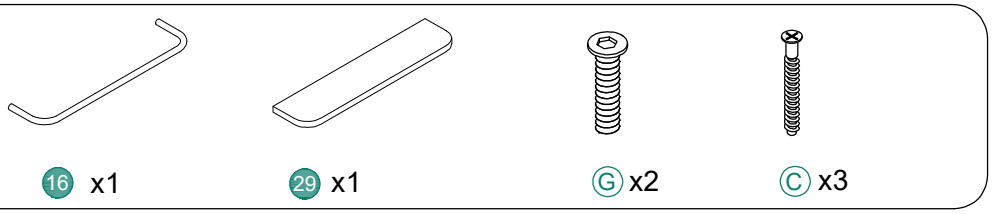

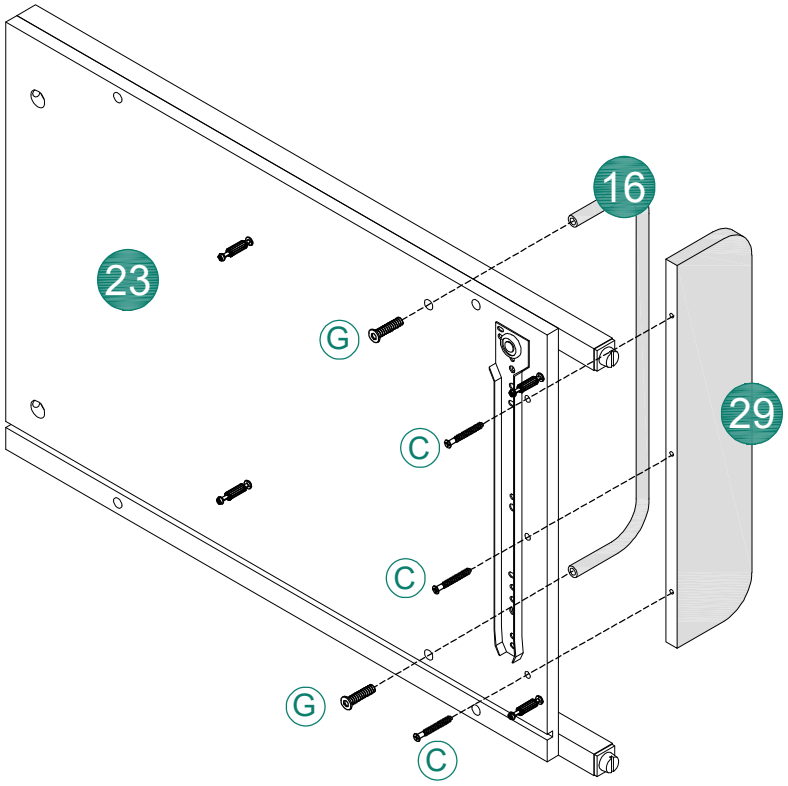


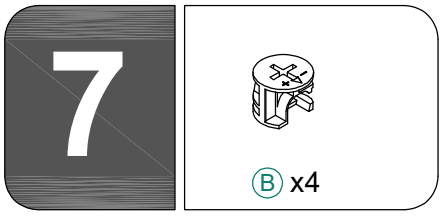

7
B x4

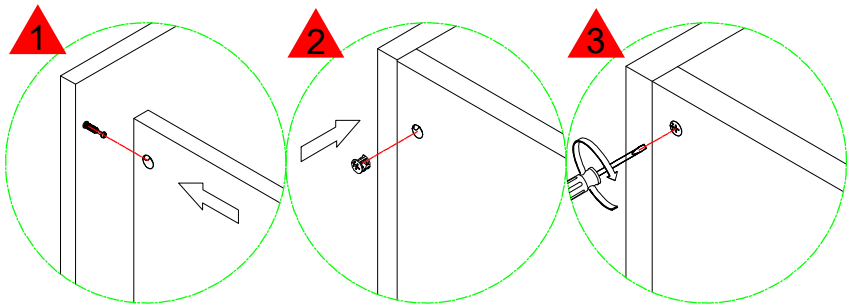
1
2
3

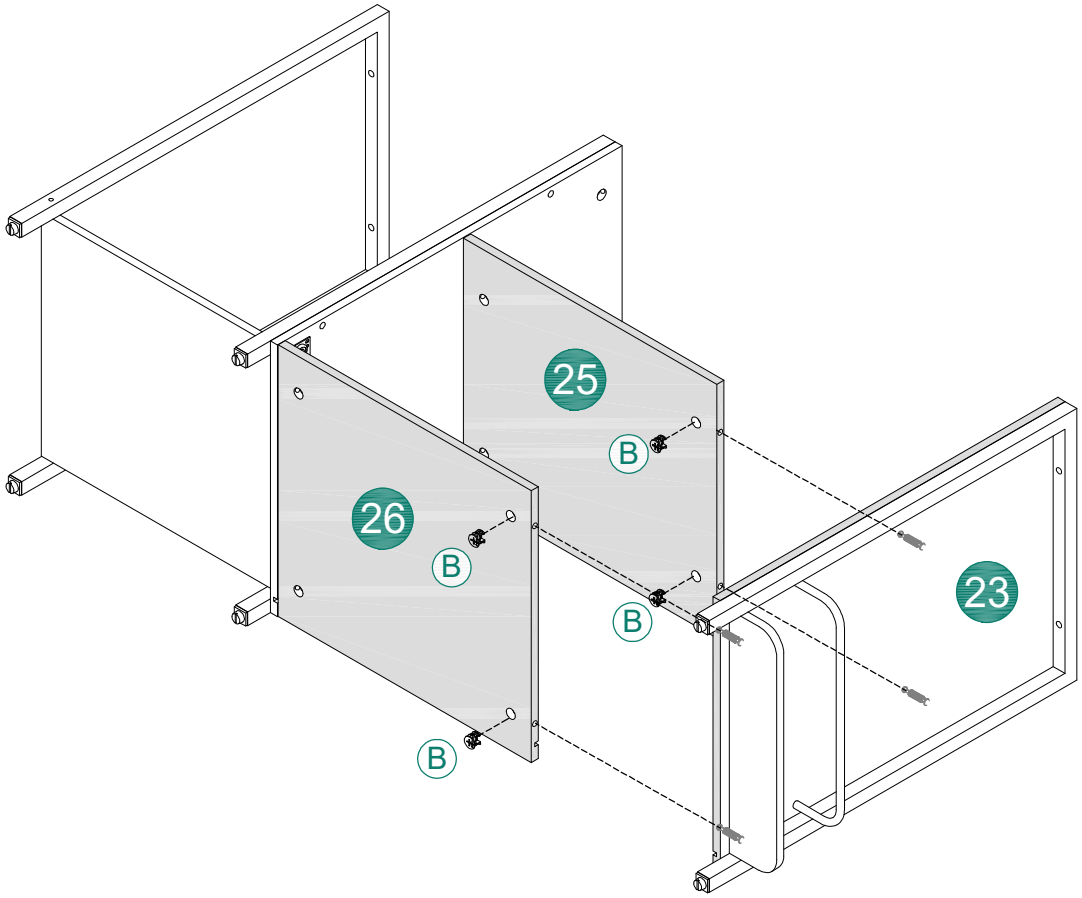

25
B
26
B
B
B
23

8

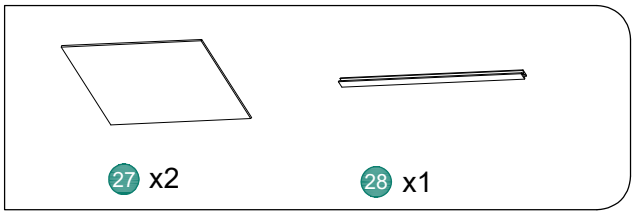

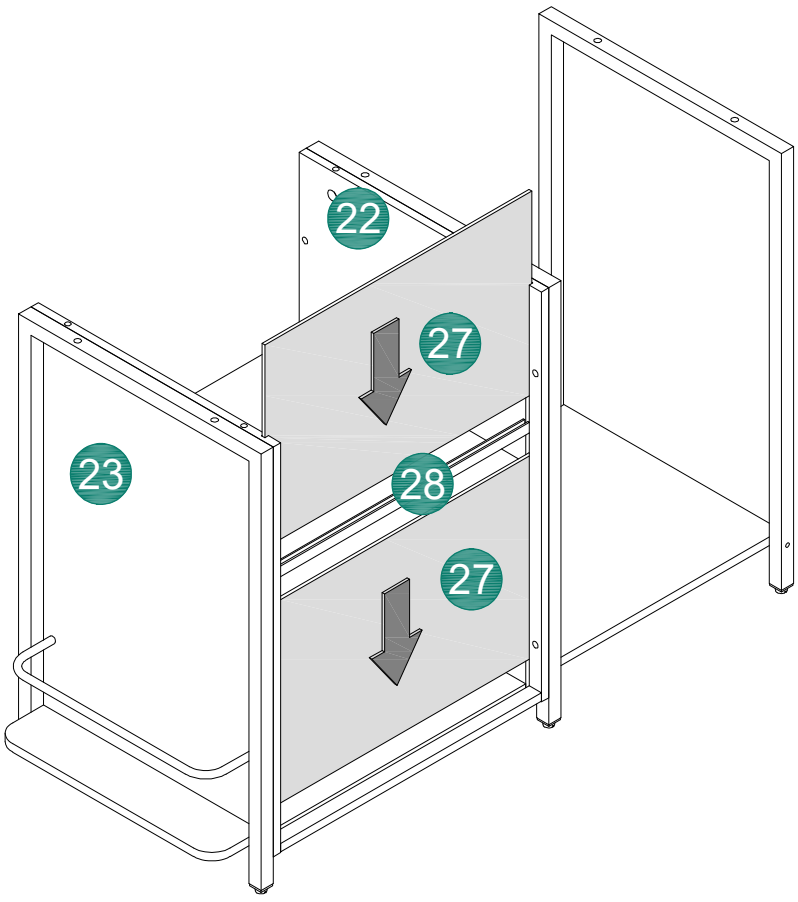

9




21 x1




A x4





B x4




G x6

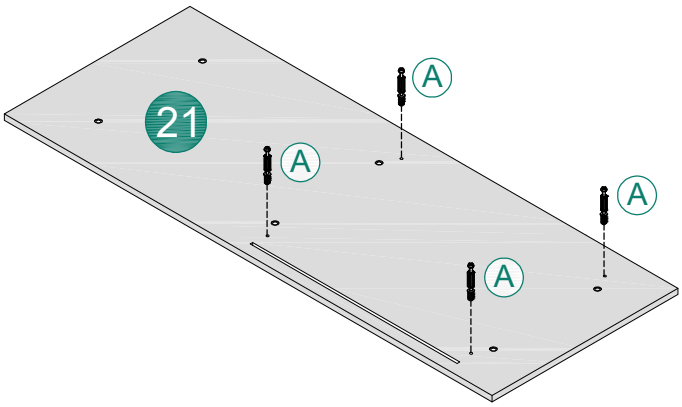


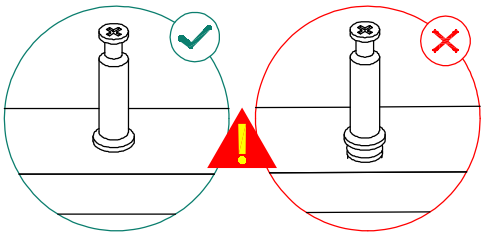


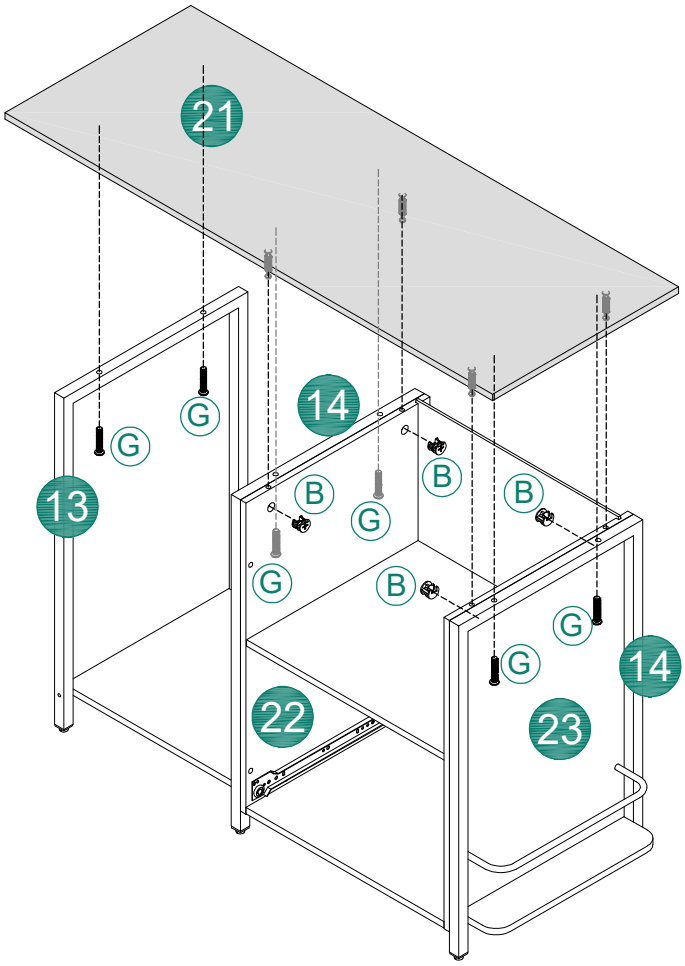


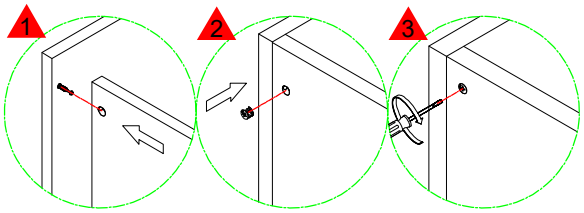


10

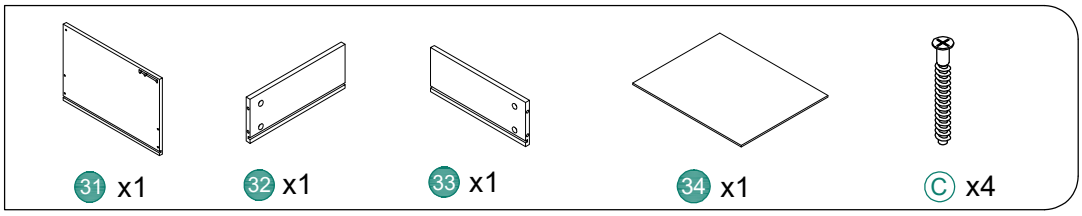


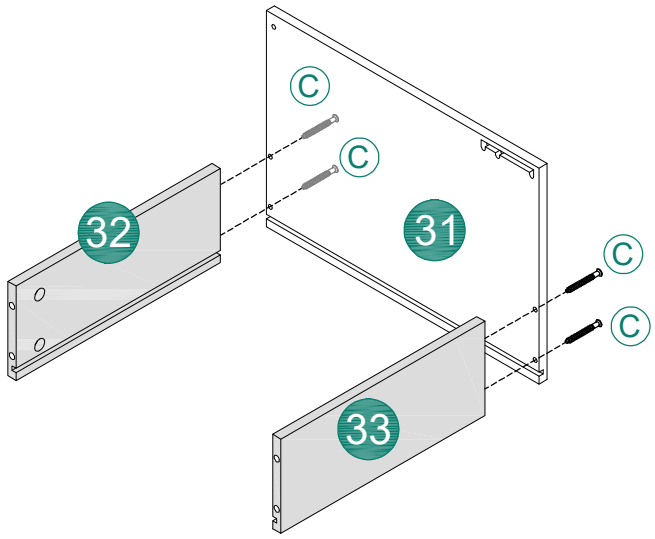

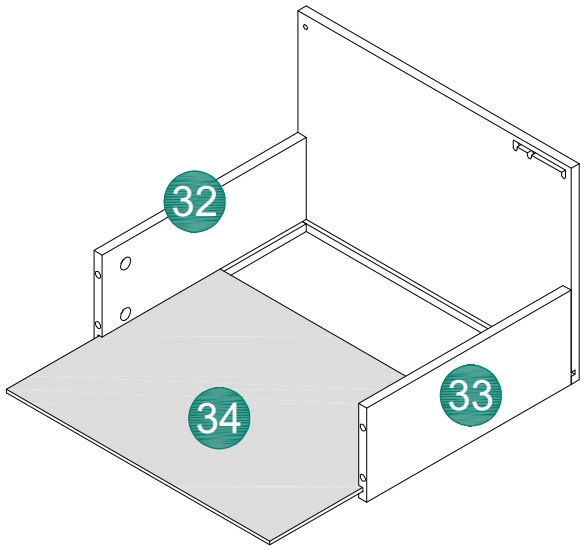

11

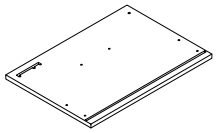
30 x1



17 x2



A x4



B x4



M x2



N x1

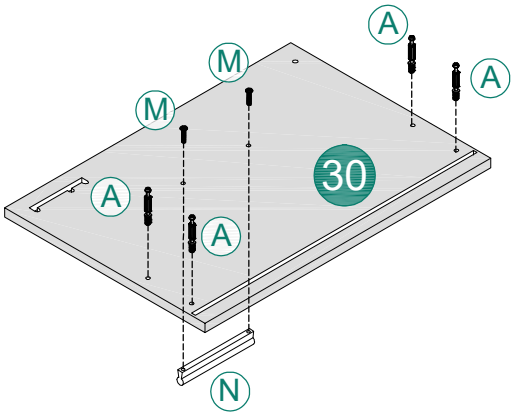


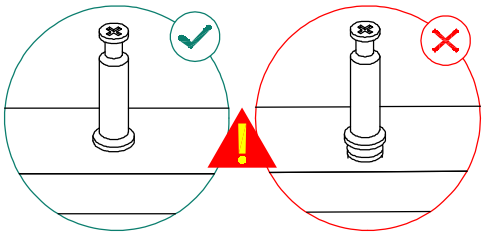

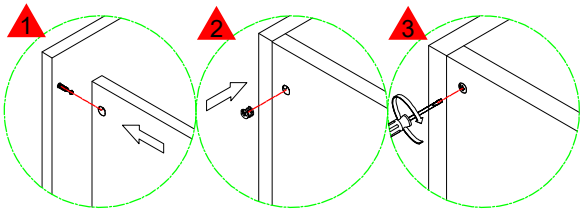


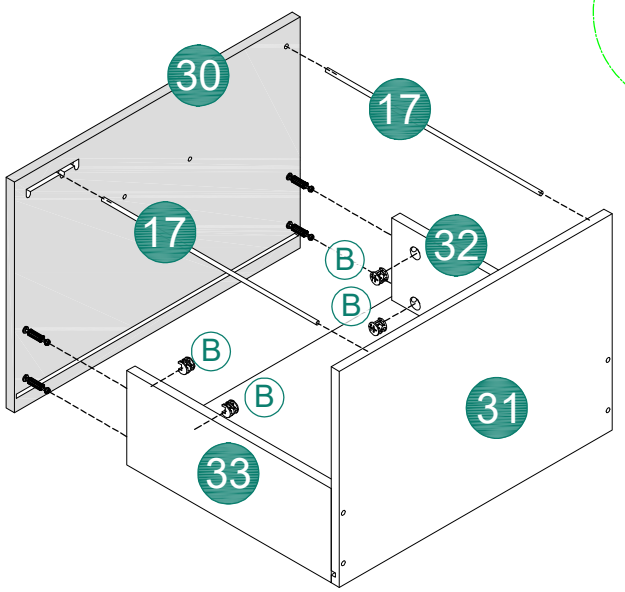


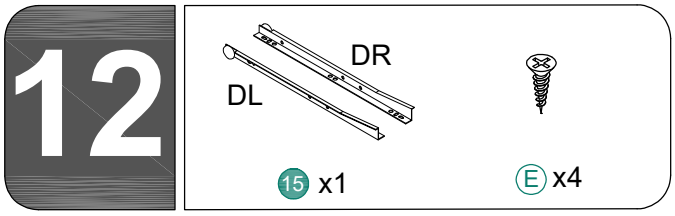

12
DR
DL
15 x1
E x4

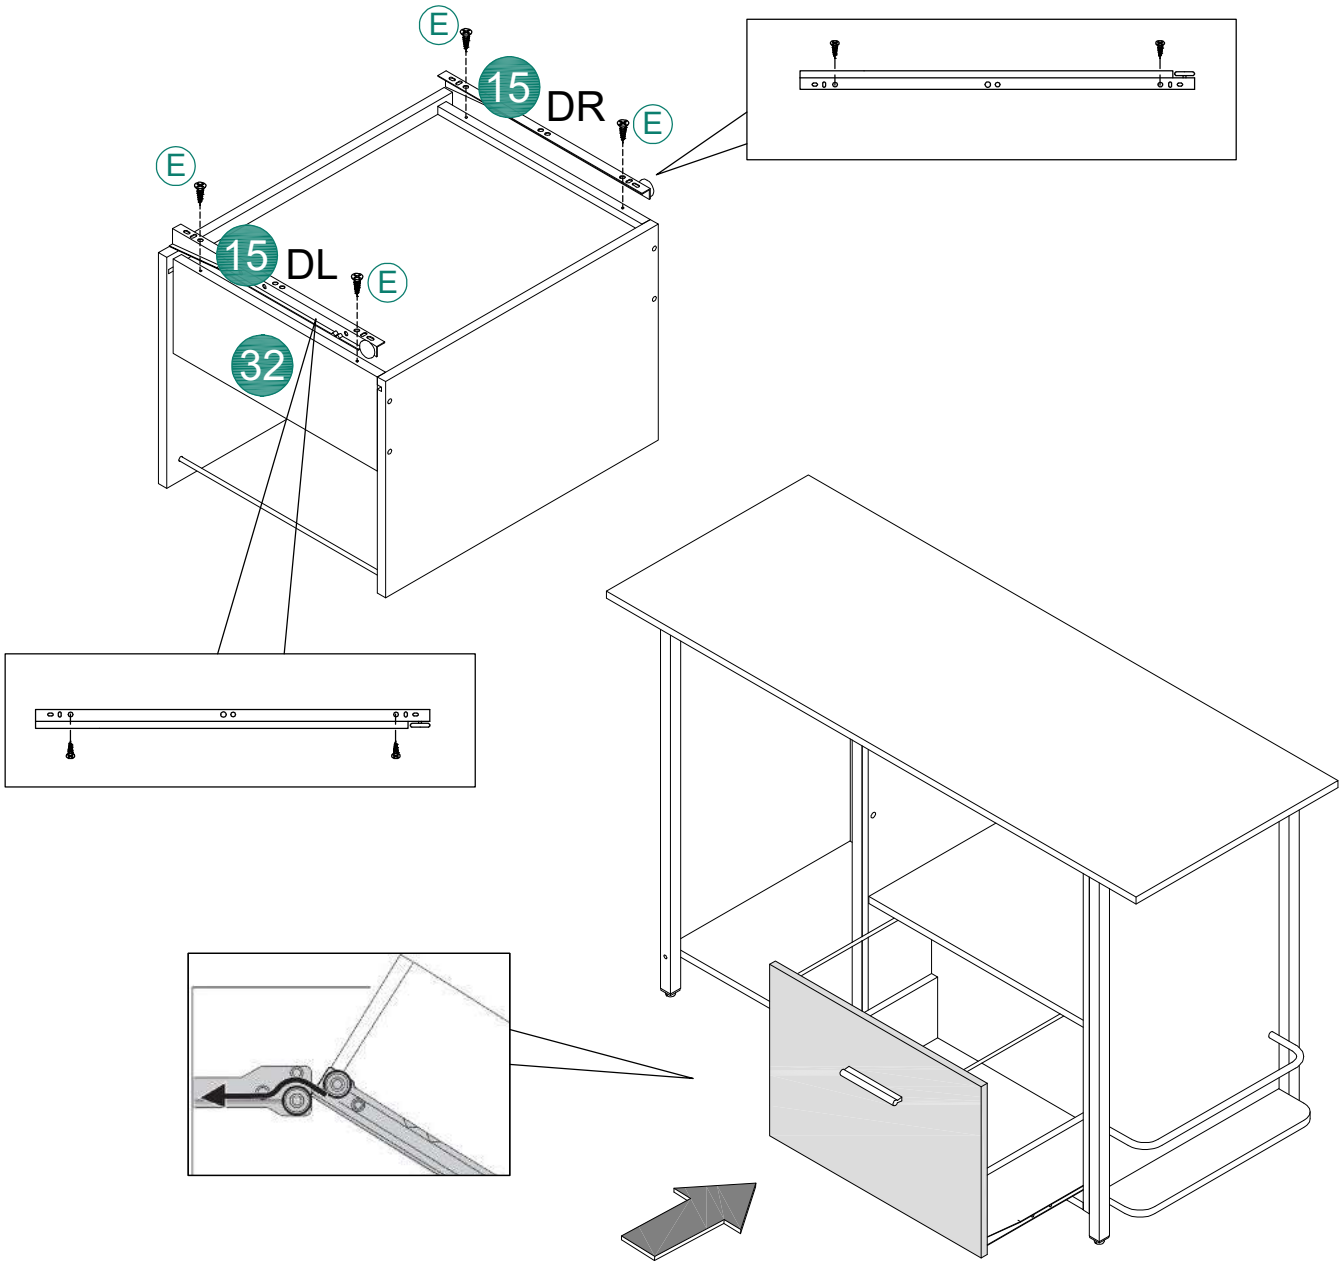
E
15
DR
E
E
15
DL
E
32


13

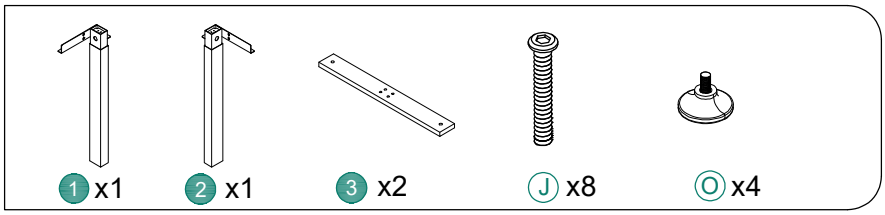


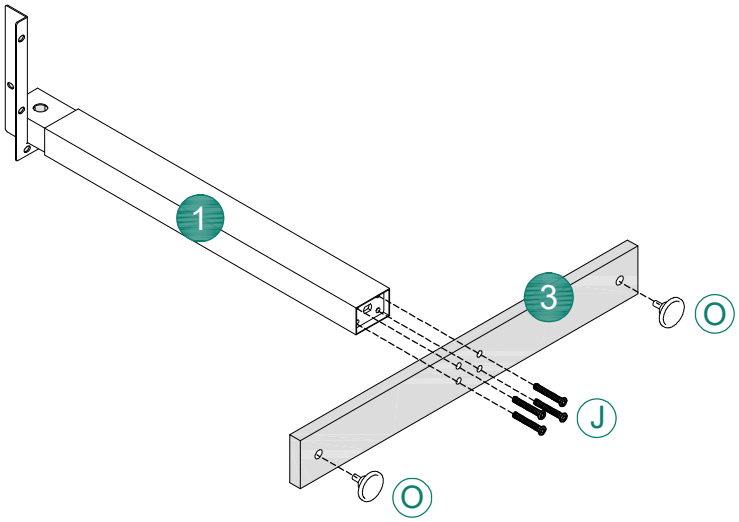

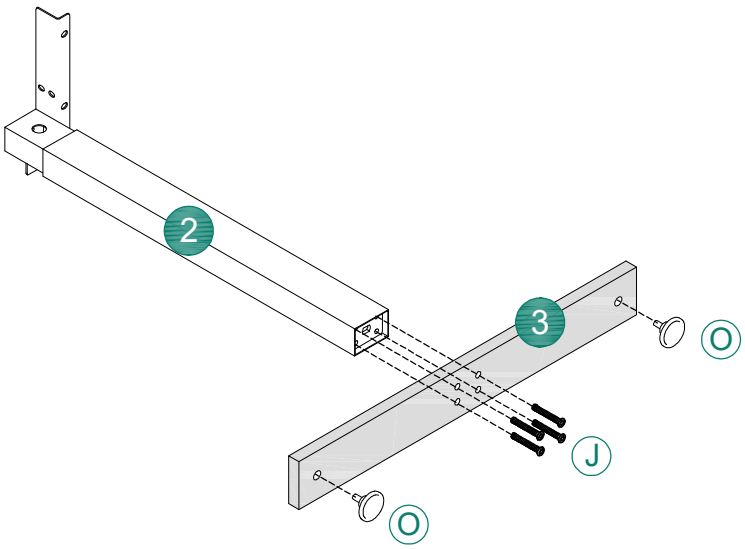


14

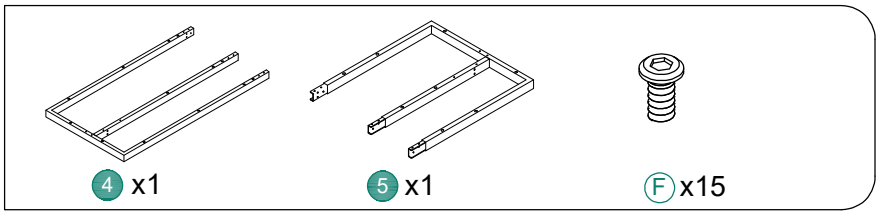

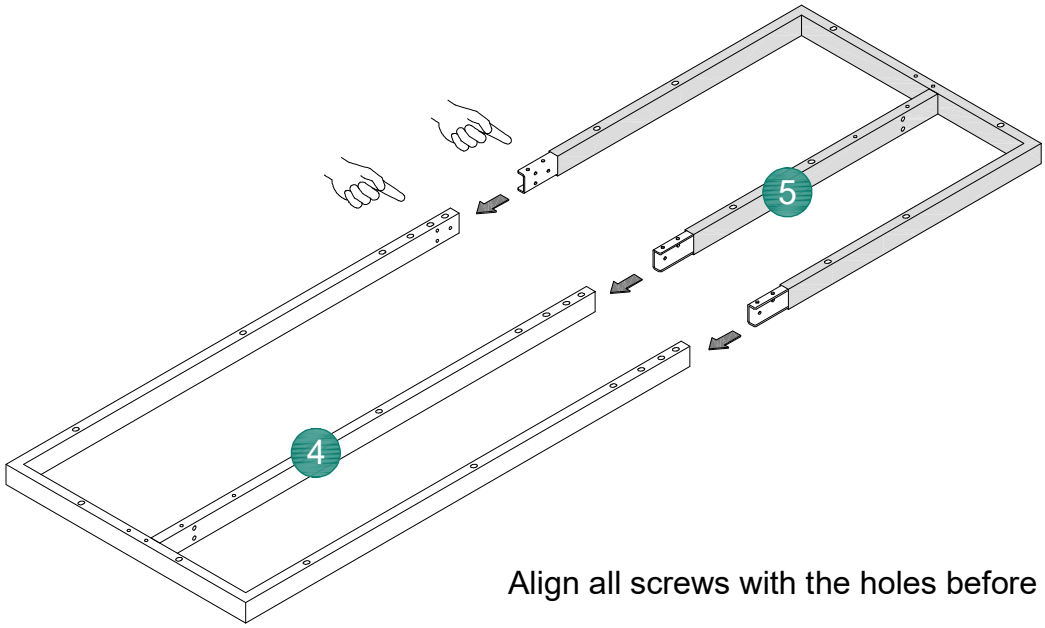


Align all screws with the holes before tightening.

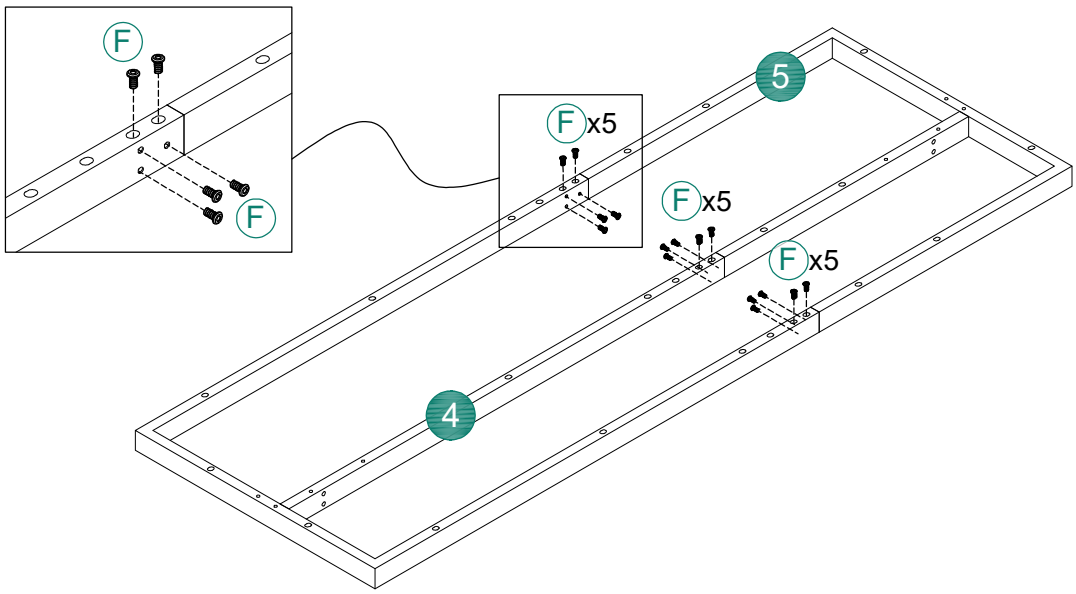


15


Ⓕ x 8 Ⓣ x 2 Ⓚ x 2

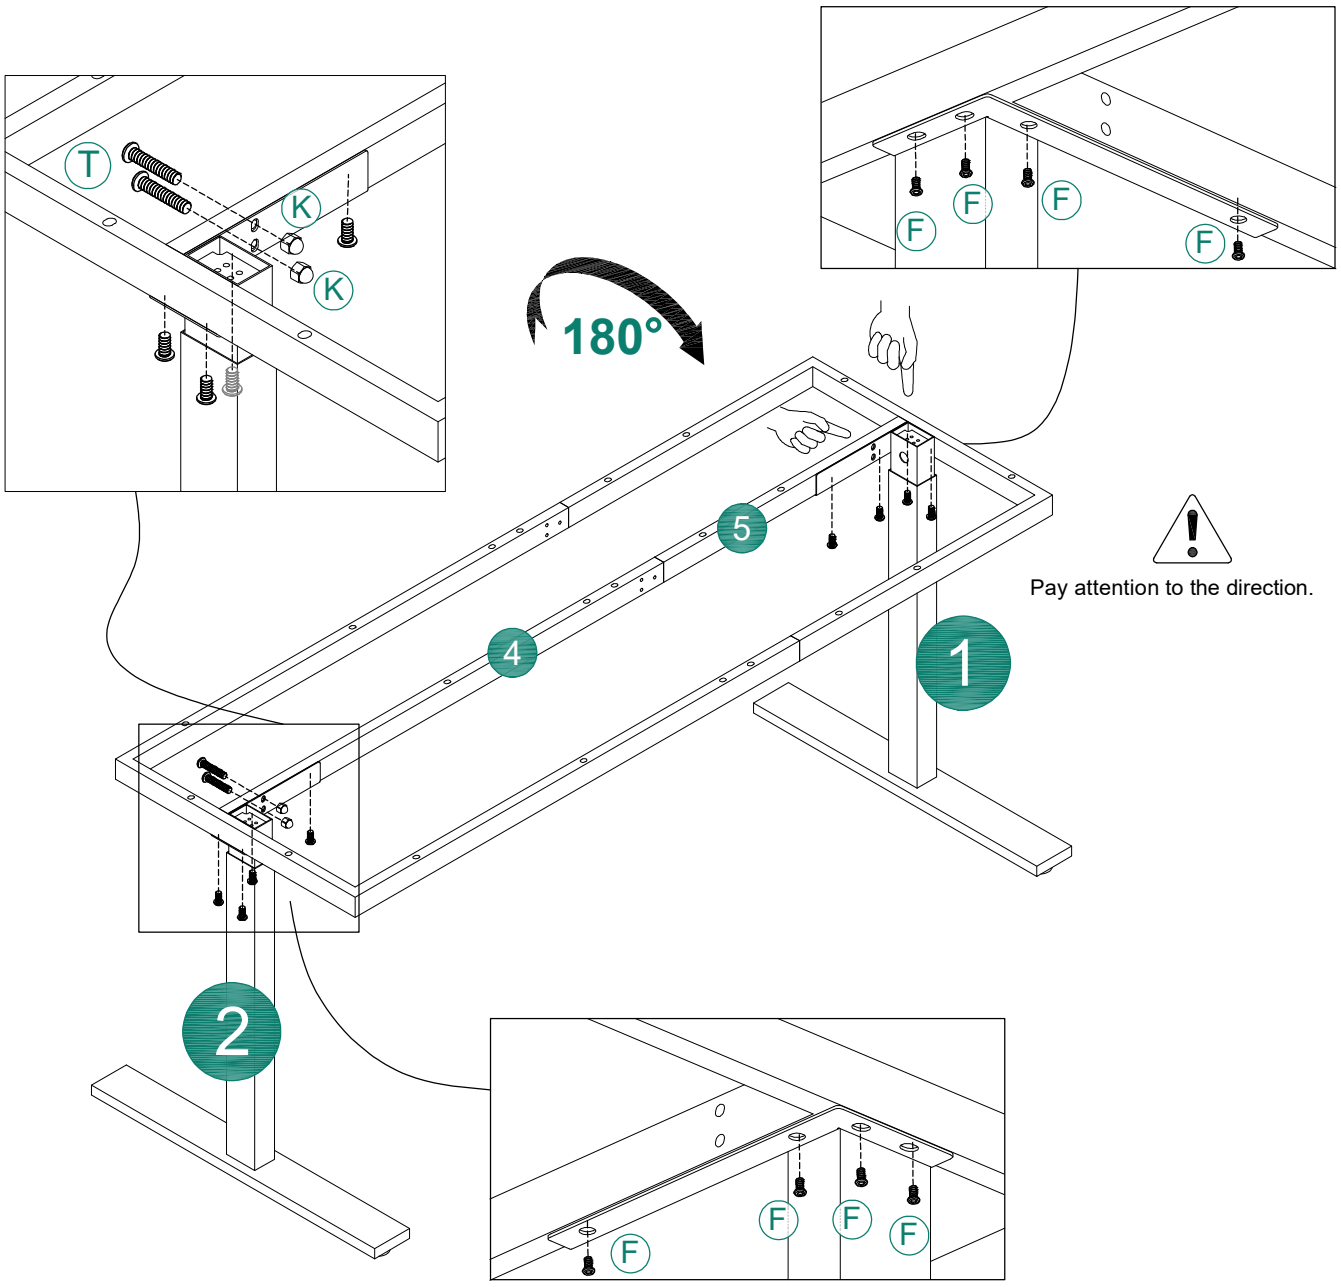

Pay attention to the direction.

16

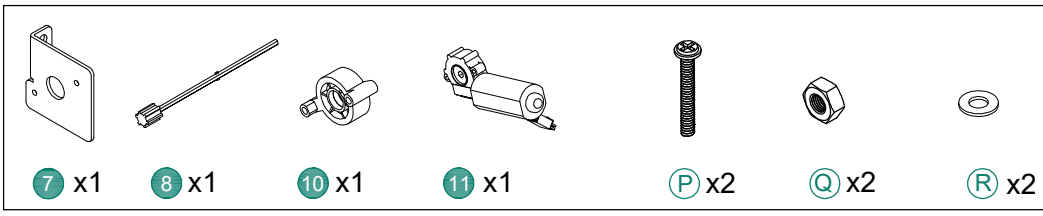


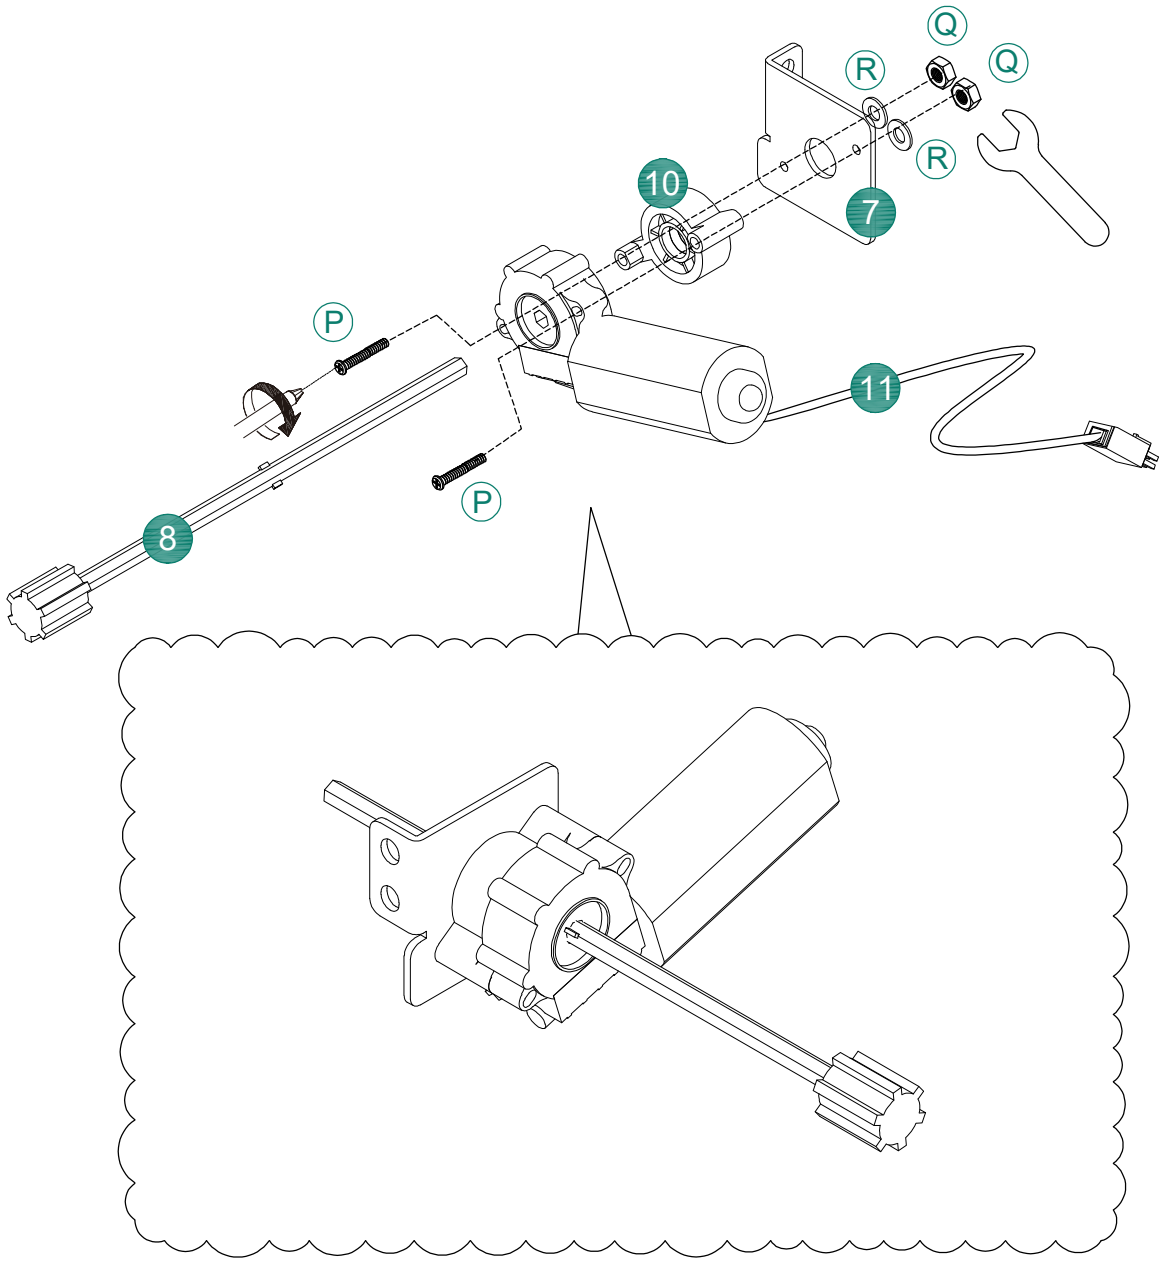


17




Ⓣ x2 Ⓚ x2

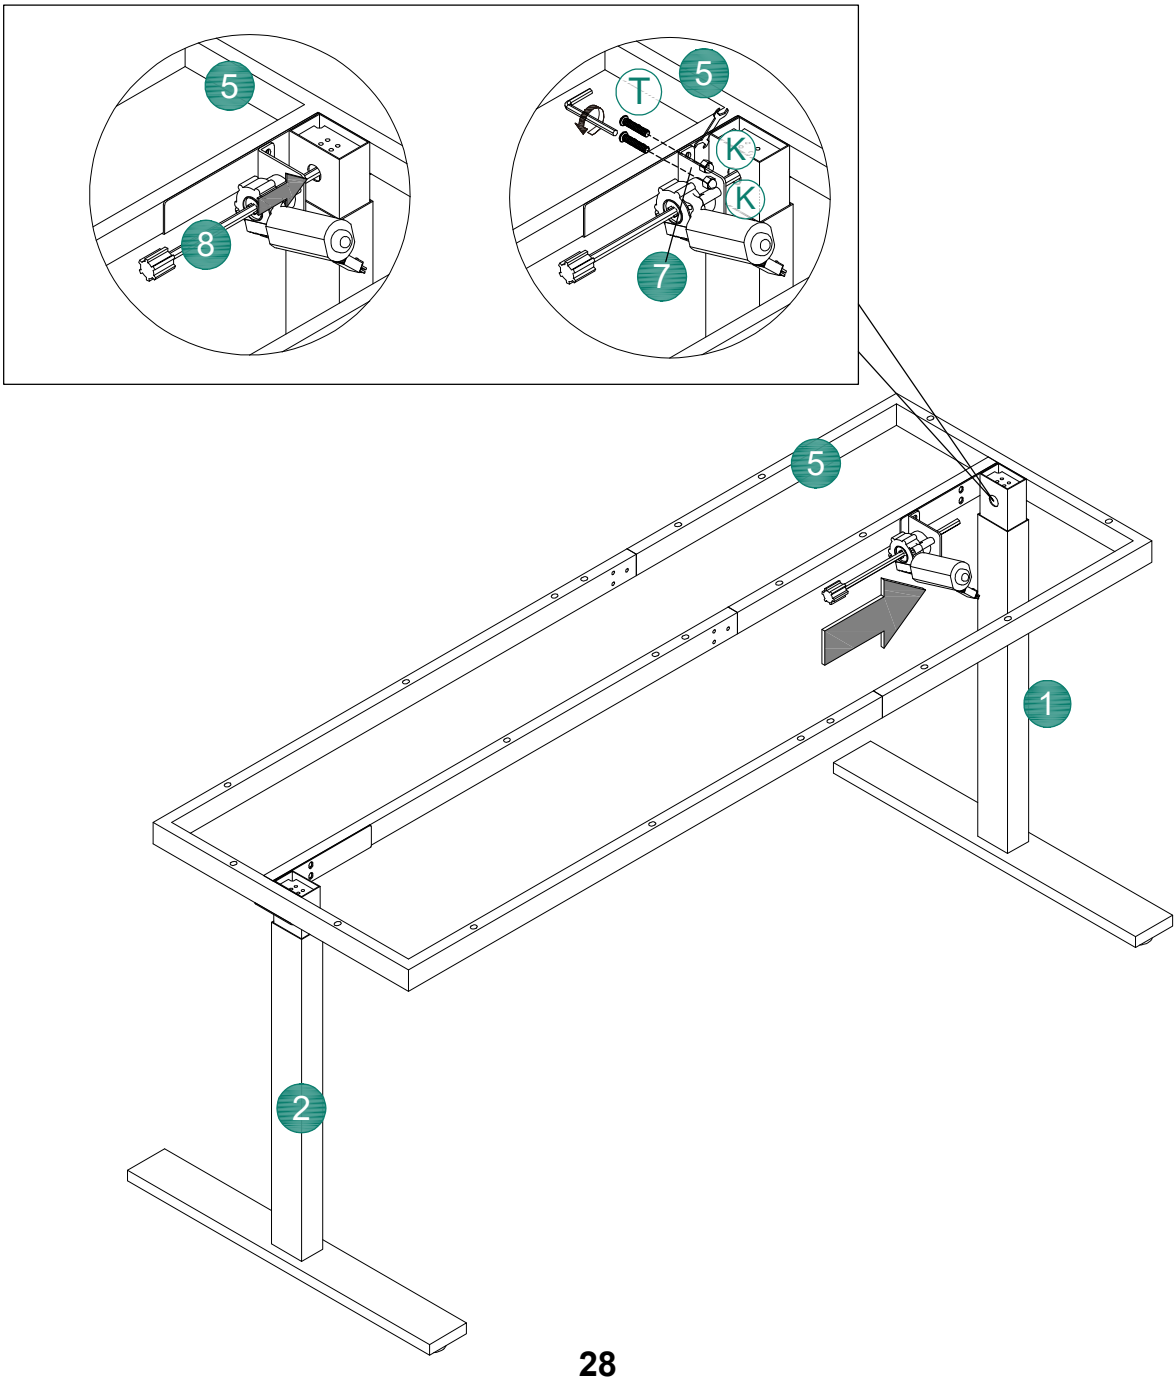

18




9 x1

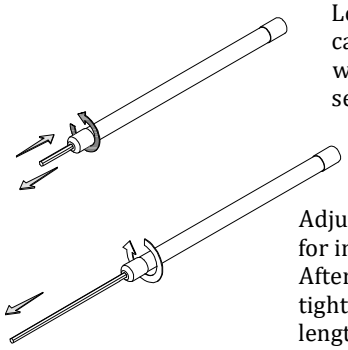



Loosening this button can extend Telescopic rod, while tightening it can secure Telescopic rod.


Adjust to the appropriate length for installing Telescopic rod. After the installation is completed, tighten the button to secure the length of Telescopic rod.

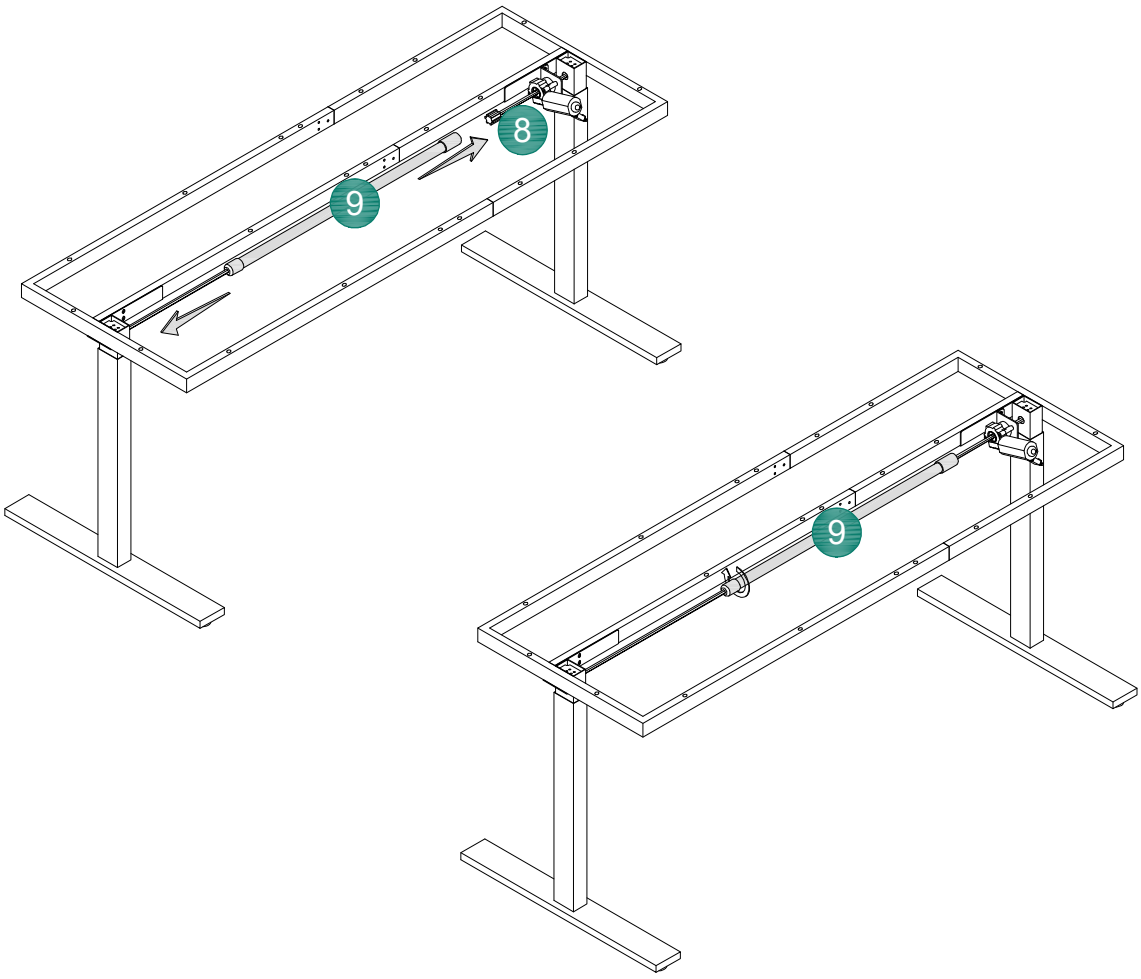


19

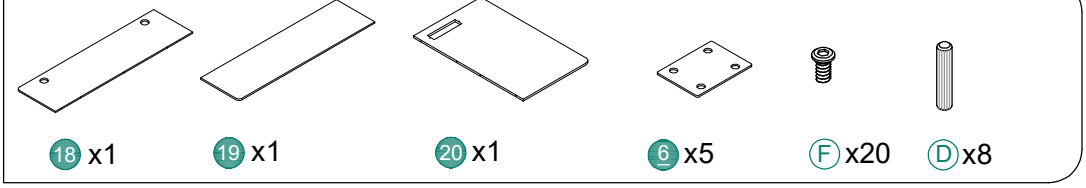

18 x1
19 x1
20 x1
6 x5
F x20
D x8

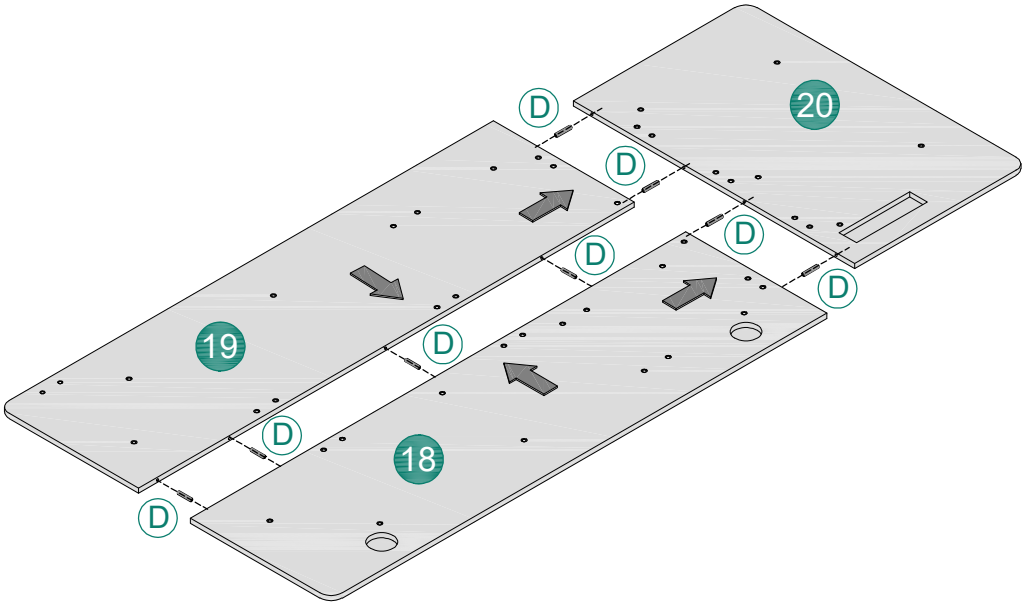
D
20
D
D
D
D
19
D
18
D

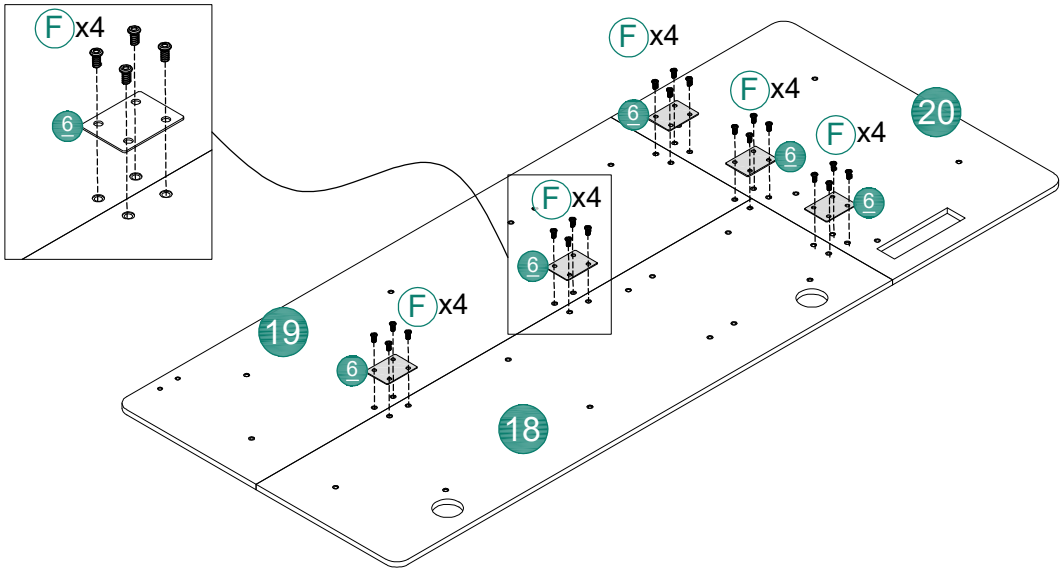

F x4
6
F x4
F x4
F x4
20
6
6
6
F x4
6
F x4
19
6
18


20

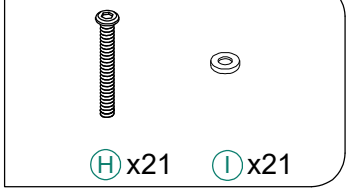

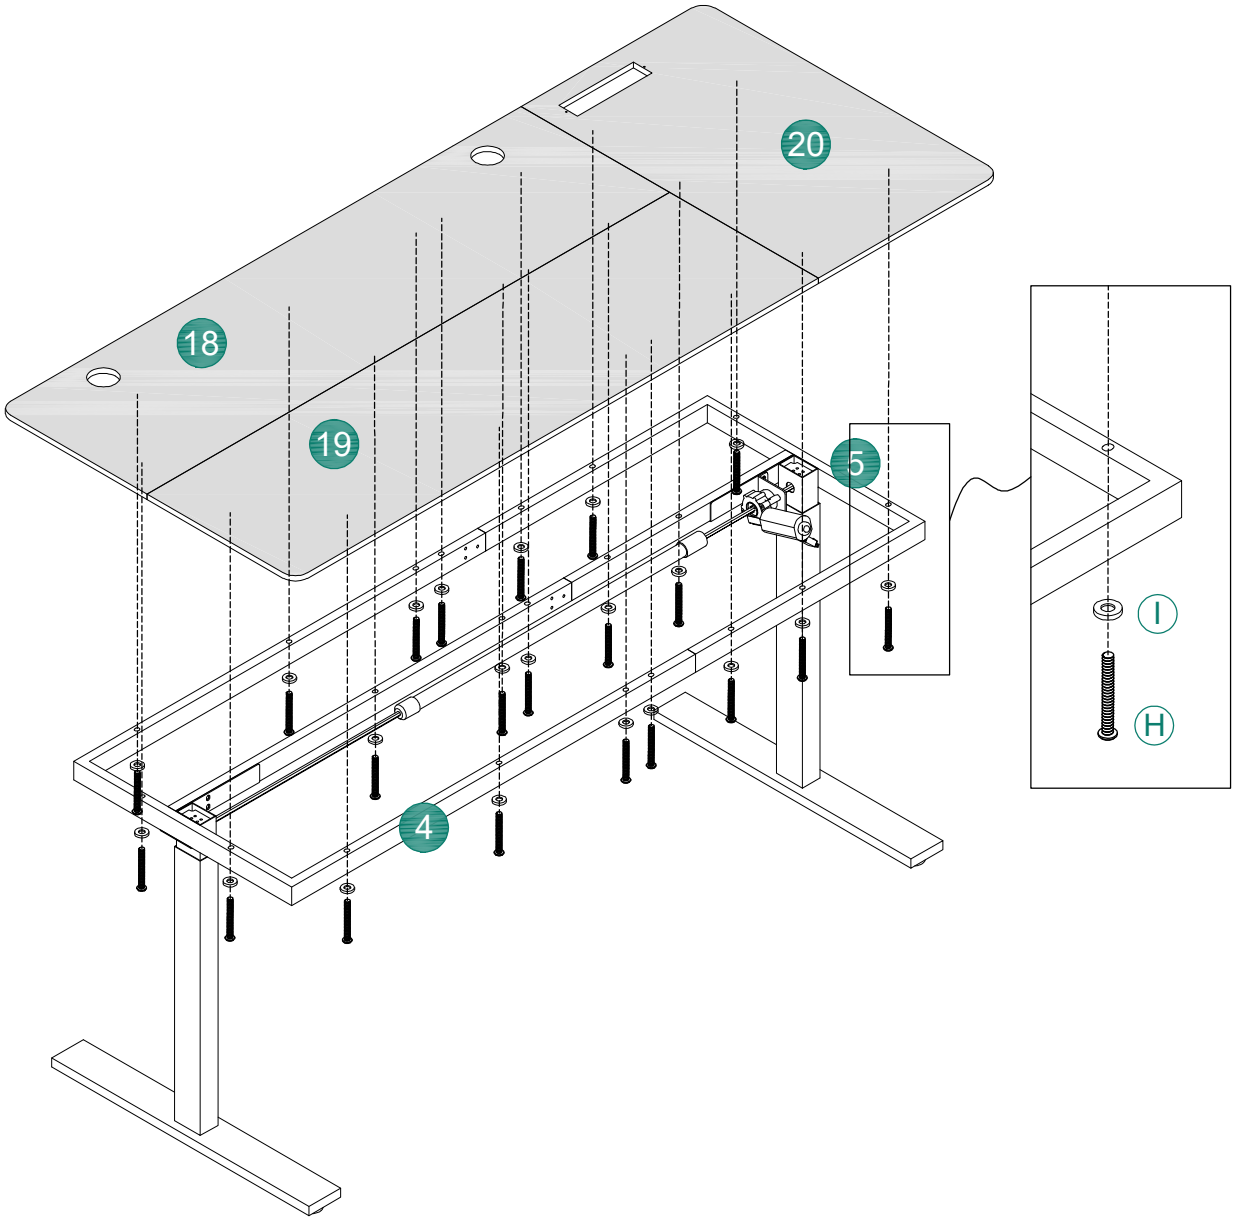


21

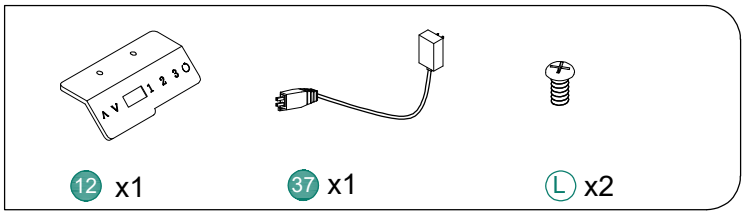

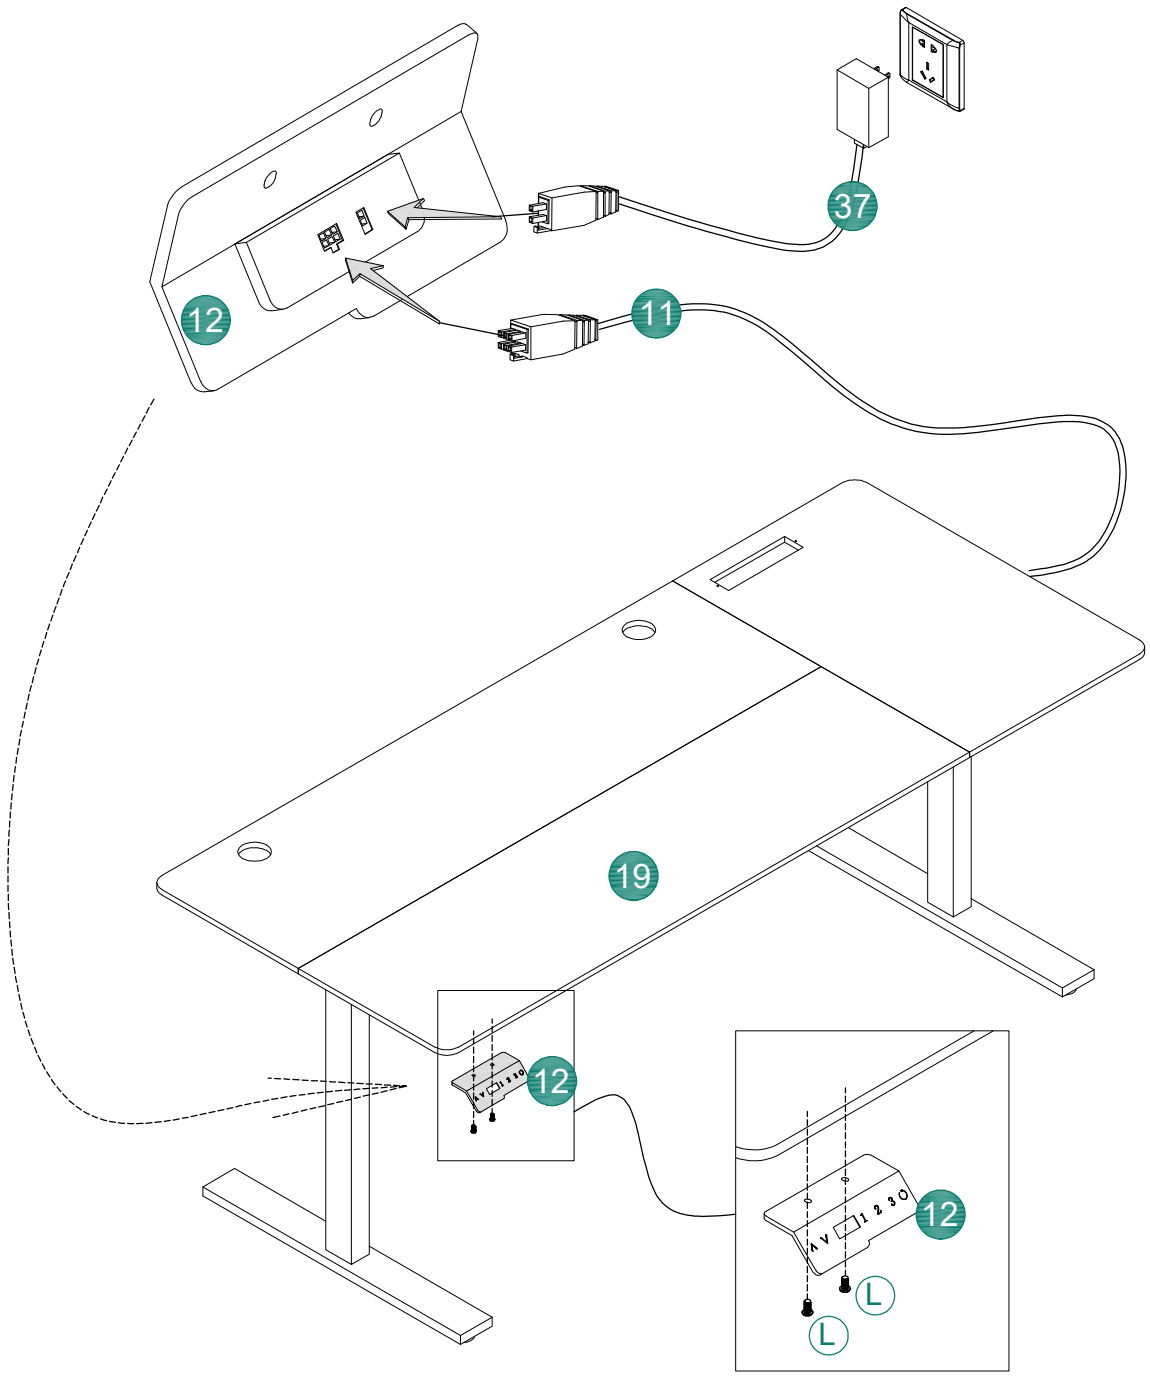

22

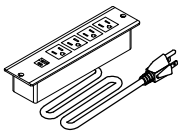

35 x1




36 x2




E x2




S x2

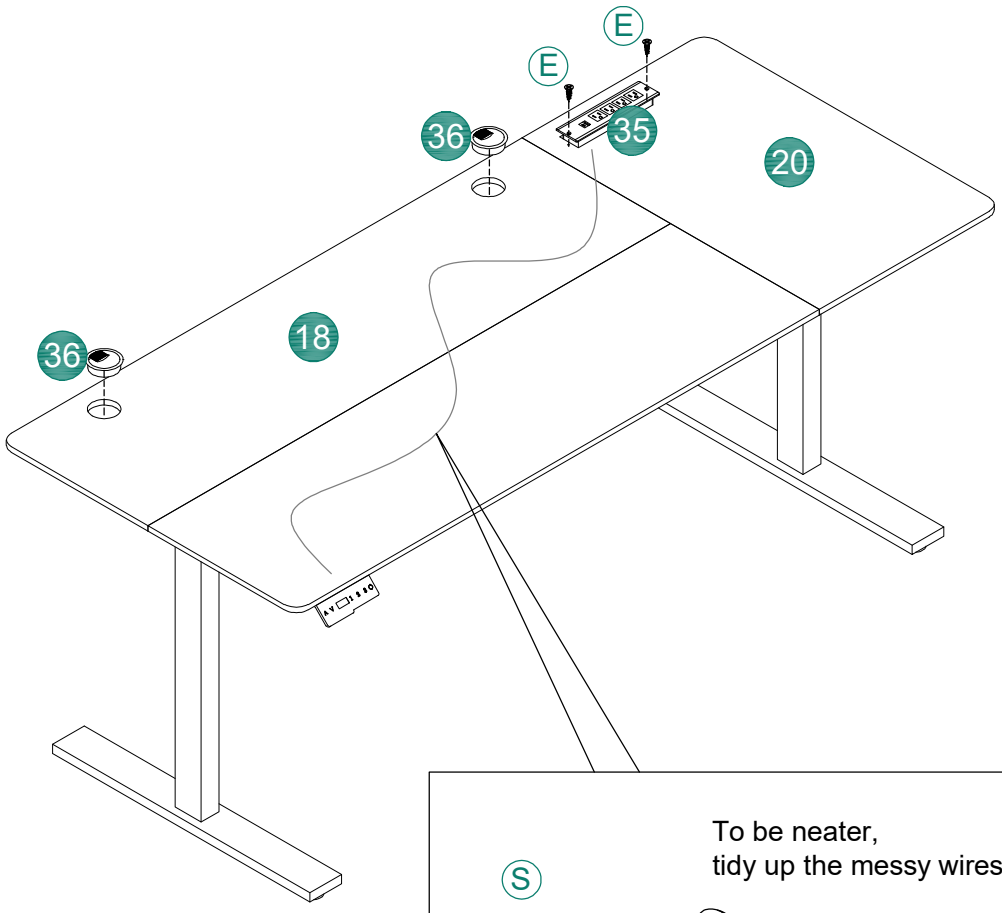

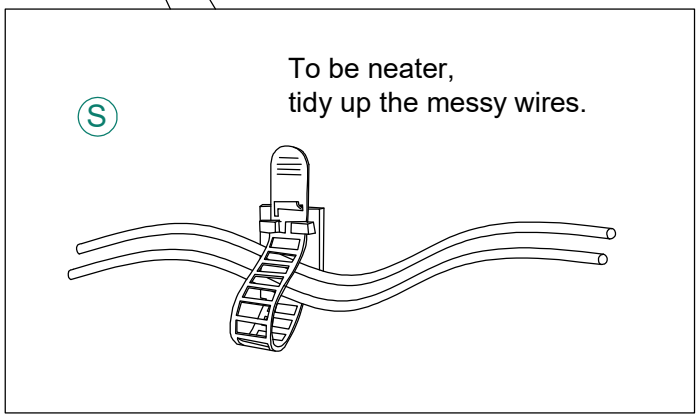

23

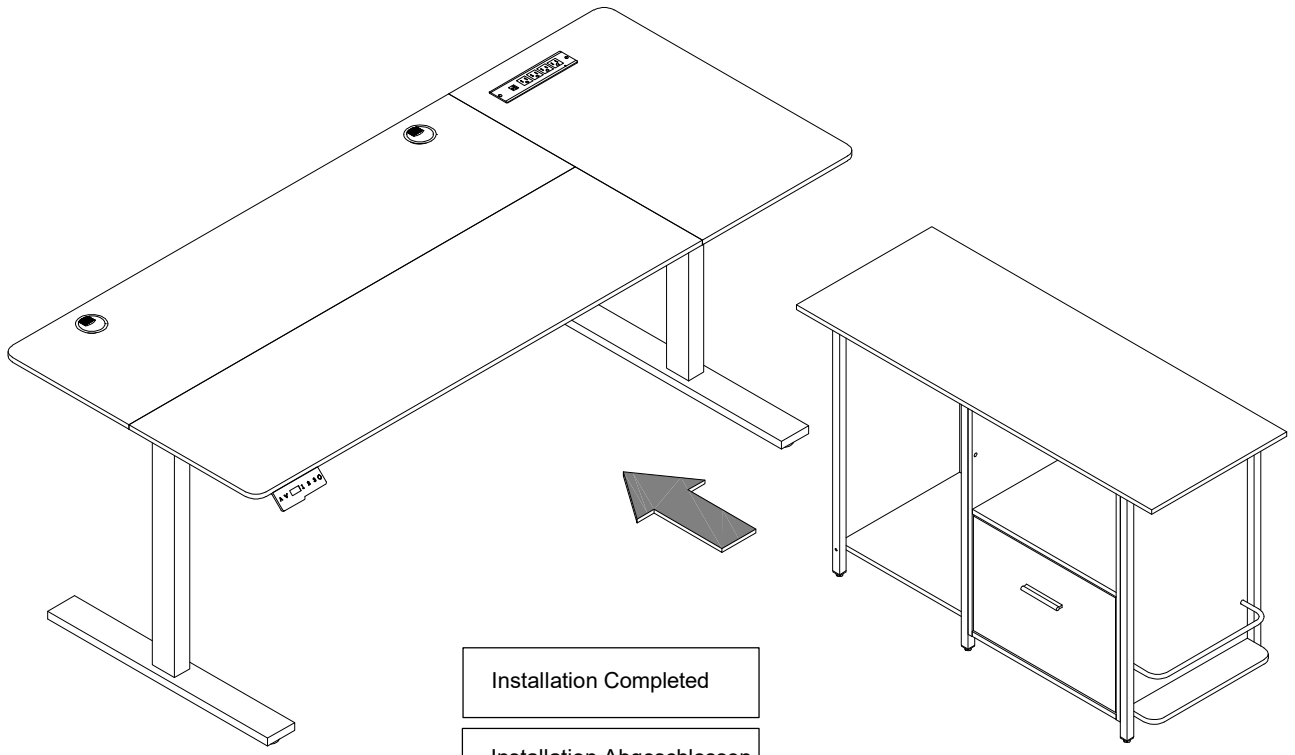

Installation Completed

Installation Abgeschlossen

Installation Complétée

Installazione Completata

Instalación Completada

HELP CENTER

 Inquiry  Assembly issue  Missing parts


If you encounter any difficulties during assembly, please contact us.
Wenn Sie während der Montage auf Schwierigkeiten stoßen, kontaktieren Sie uns bitte.
Si vous rencontrez des difficultés lors du montage, veuillez nous contacter.
Se incontri difficoltà durante il montaggio, ti preghiamo di contattarci.
Si encuentras alguna dificultad durante el ensamblaje, por favor contáctanos.

DISCLAIMER

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attach ment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.
Der Hersteller und Verkäufer lehnen ausdrücklich jegliche Haftung für Personenschäden, Sach schäden oder Verluste ab, egal ob direkt, indirekt oder zufällig, die durch falsche Anbringung, unsachgemäßen Gebrauch, unzureichende Wartung, nicht genehmigte Änderungen oder Vernachlässigung dieses Produkts entstehen.
El fabricante y vendedor renuncian expresamente a toda responsabilidad por lesiones perso nales, daños materiales o pérdidas, ya sean directos, indirectos o incidentales, derivados de la incorrecta colocación, uso inadecuado, mantenimiento insuficiente, modificación no aprobada o negligencia de este producto.
Il produttore e il venditore declinano espressamente ogni responsabilità per lesioni personali, danni materiali o perdite, dirette, indirette o incidentali, derivanti dall'errato fissaggio, uso improprio, manutenzione inadeguata, modifica non autorizzata o negligenza di questo prodotto.
Le fabricant et le vendeur déclinent expressément toute responsabilité en cas de blessures corporelles, de dommages matériels ou de pertes, qu'ils soient directs, indirects ou accessoires, résultant de la fixation incorrecte, de l'utilisation inappropriée, de l'entretien insuffisant, de la modification non approuvée ou de la négligence de ce produit.

Motor Lift Table Instruction Manual

Hand controller interface introduction

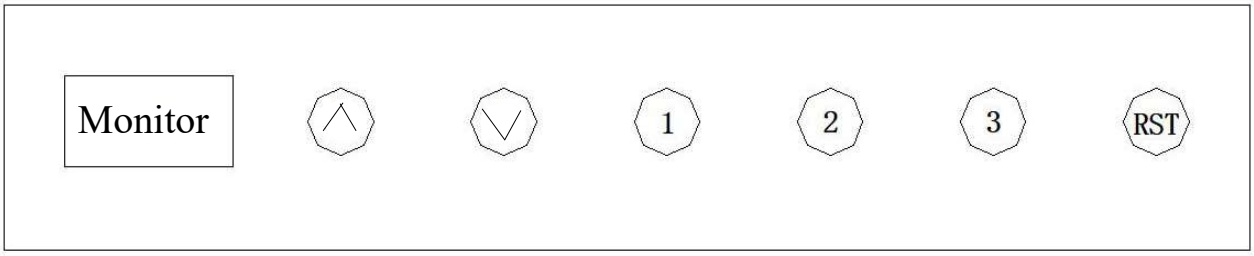

◆monitor
◆UP：up key
◆DOWN：down key
◆1：（save key）1
◆2：（save key）2
◆3：（save key）3
◆RST：reset

Up and down key operation

◆When the "up" key is pressed，desktop run up，until the top of the table is reached
◆When the "Down" key is pressed，desktop run down，until the lowest point of the table is reached
◆When short press the "up" or "down" key，The desktop runs a small distance accordingly，Realize jog）

location storage/memory position operation

◆location storage:Can store 3 memory points,The storage method is as follows,when running to a certain point,At this time, long press the "1 / 2 / 3" button,until the digital number flashes,Save the current altitude to the corresponding label successfully.

◆memory position operation:Short press "1 / 2 / 3" key,Digital tube flashing memory position height 2S,The desktop automatically runs to the height of the memory position,running,Any key can stop the operation.

Zero position reset

◆ **After the installation is completed, if the displayed height does not match the actual height, you can perform the following operations.**
◆ Long press "RST" for 3S and wait for the controller running indicator to flash "- - -",Then release the down button to enter the reset mode,The desktop automatically runs down and then up to find the highest and lowest positions,After the end, the desktop will automatically run down to a fixed position,end of reset process.

automatic testing(Do not proactively disclose to end users)

◆The system supports automatic operation,Run time is fixed at 2 minutes,The stop time is determined by the e parameter,Infinite loop。（Please refer to the internal parameter setting and description for stop time。
◆Enter：Press and hold the "Up" + "Down" + "RST" buttons at the same time for 5 seconds，Nixie tube shows Aot,Indicates automatic test mode.
◆Quit:Press and hold the "Up" + "Down" + "RST" buttons at the same time for 5 seconds,Digital tube display height,Indicates to exit the automatic test mode.

Minimum limit setting

◆The system supports the minimum height of the desktop， The operation method is， Let the desktop run to the position you want to set，Press and hold the "RST" + "Down" buttons at the same time for 5 seconds，Displaying "-d o" indicates that the lowest position is successfully stored，when running to the lowest point，Display shows "-L o"。

◆Cancel storage height， method 1： Mechanical zero reset， The system automatically cancels
Method 2： Let the desktop run to the lowest point， Display shows "-L o"， Press and hold the "RST" + "Down" buttons at the same time for 5 seconds， "--d o" indicates successful cancellation。

Maximum limit setting

◆The system supports the maximum height of the desktop， The operation method is， Let the desktop run to the position you want to set，Press and hold the "RST" + "Up" buttons at the same time for 5 seconds，－ u p indicates that the highest position is successfully stored。when running to a high point， Display shows "-HI"
◆Cancel storage height method 1： Mechanical zero reset， The system automatically cancels
Method 2： Let the desktop run to the highest point，Display shows "-HI"； Press and hold the "RST" + "Up" buttons at the same time for 5 seconds， "--up" indicates successful cancellation。

lock and unlock

◆locking:Press and hold "1" + "2" simultaneously for 5 seconds， when the digital tube displays "L",At this point, the system is locked， Unable to lift and lower the system。
◆Unlock：Press and hold "1" + "2" simultaneously for 5 seconds，When the digital tube displays from "L" to normal digital display， Indicates that the system has been unlocked。

Stand and sit reminder（countdown）

◆countdown time： 3 gears available， T30 = 30 minutes， T45 = 45 minutes， T60 = 60 minutes。

◆ Start the countdown:Short press "RST", the display will display T30/T45/T60 in sequence， Countdown time starts。
◆Exit countdown:1. Short press "RST"， The display shows numbers;
2. The countdown time is up,The display will flash chr,Flashing time is 1 minute,Press any key to stop timing and exit.
3. 3. No operation,It will automatically exit the timer after 3 consecutive reminders at an interval of 5 minutes.

Restore factory default parameters

◆method:Press and hold "1" + "3" at the same time for 5 seconds,， The digital tube displays "C L r",At this point, it indicates that the parameter recovery is successful.

Internal parameter settings and descriptions

◆Press and hold the "RST+1" button on the hand controller for 10 seconds， You can enter the setting interface,Displays "x-y" while "x" flashes,Where "x" is the parameter group,The parameter value corresponding to "y".At this time, press "RST" to switch the parameter group,Press "Up" or "Down" to correspond to the value of the parameter.After setting the parameters, press and hold the "RST" key for 10 seconds,Return to the running interface,The set parameters are as follows:

Display content	Number range	Setting parameters	illustrate
a-y	0-1	Display format	0 means metric display,1 means inch display;
b-y	1-2	Number of pole pairs	1 means 1 pair of NS, 2 means 2 pair of NS;
c-y	1-9	Lifting speed	9 files， The smaller the number, the faster the speed.On the contrary, the slower the speed;
d-y	1-9	Anti-pinch value	0 means off, 1 is the lowest sensitivity, 9 is the highest sensitivity
e-y	1-9	Self-test stop time	The setting value multiplied by 2 is the stop time，For example，setting 2,Then the stop time is 4 minutes
H00	40-99	Base height	Indicates the minimum display height-Table lowered to lowest display height
n00	30-99	table itinerary	The height at which the table can be raised and lowered,The length that the table column can extend,This value determines the maximum height of the table,The highest height display is h00+n00;
L00	3-40	Screw lead	Indicates the lead - one turn of the screw,the raised height of the table,The lead parameters must be accurate,Otherwise, the table itinerary will be inaccurate.
F-y	0-1	Motor direction	0/1 Change motor direction
r-y	0-4	Screen off control	0, do not turn off the screen, 1, turn off the screen.

Error code table

error code	illustrate	How to handle
E01	motor not connected	Press the up or down button again， still exists， Please check the column motor connection line
E02	Motor overcurrent	Press the up or down button again， still exists， Please replace the motor or reduce the load
E03	Motor Hall fault	Press the up or down button again，still exists，Check connections or replace motor
E04	Abnormal main power	Cannot be eliminated after power failure，Replace the power supply
E05	Abnormal motor current	It cannot be eliminated after power failure and needs to be returned to the factory
E06	The motor power device is broken	It cannot be eliminated after power failure and needs to be returned to the factory
E08	Over temperature protection	wait for the temperature to drop
E09	Motor stall	Press the up or down button again， still exists， Please replace the motor or reduce the load
RST	Illegal power down	Reduce the load or check for loose power cables