

INSTALLATION
Product Manual

Version: 750027US-01-26A-AA

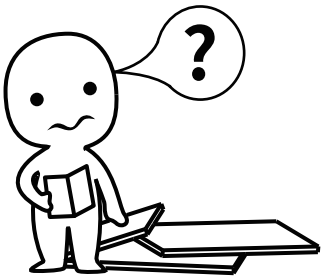


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

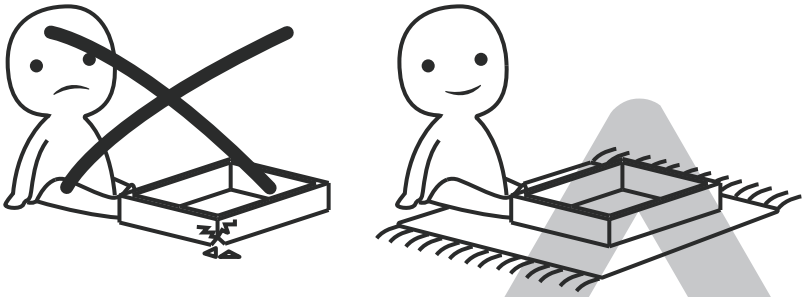


AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.

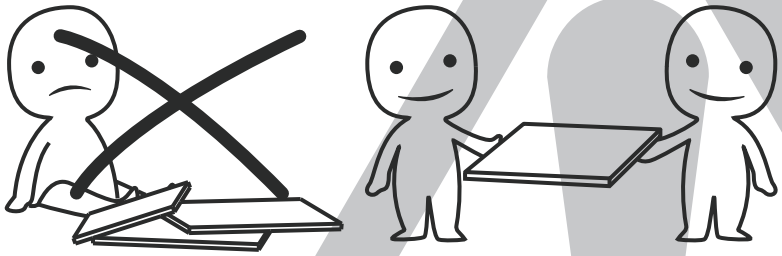

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

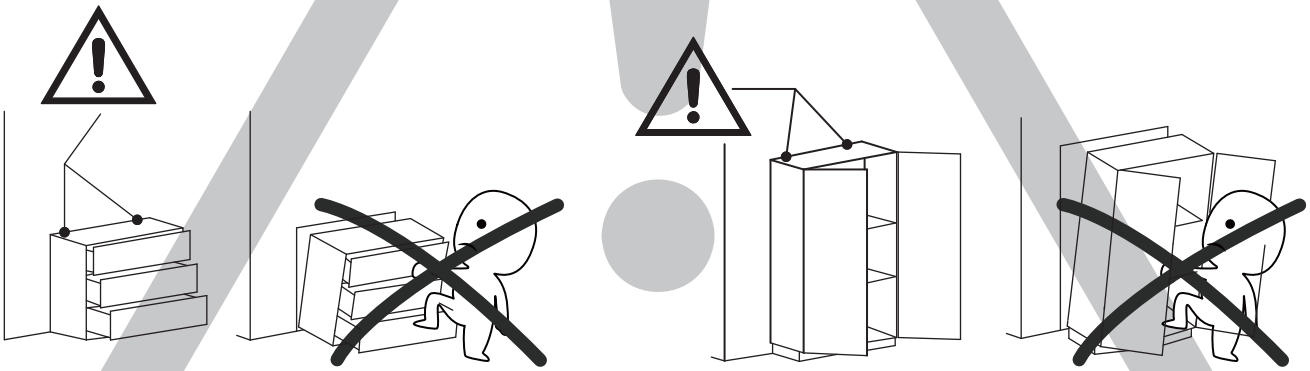

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.





For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.





Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.


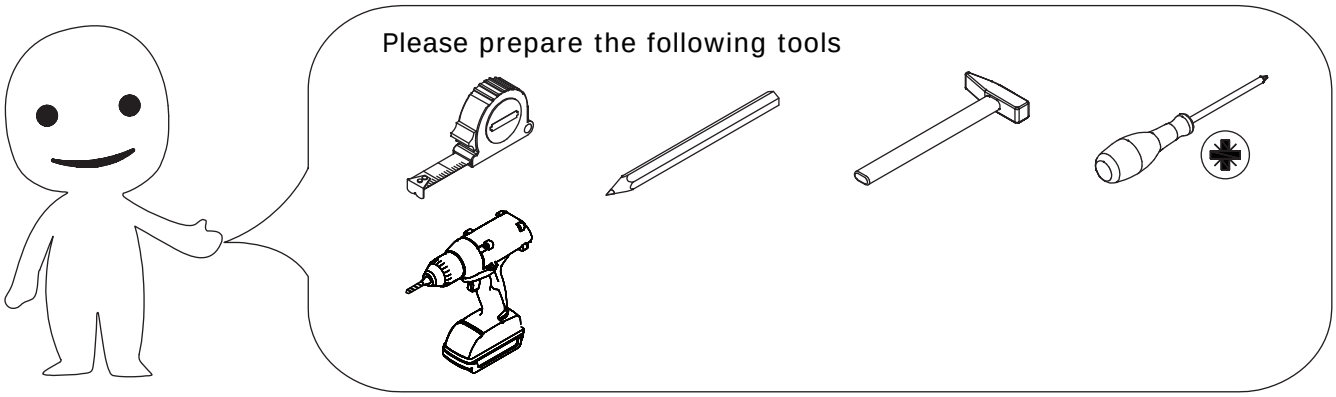




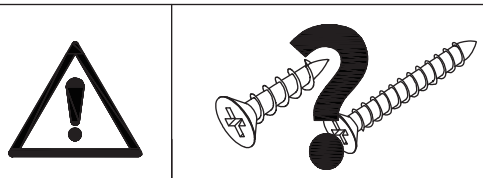







When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size


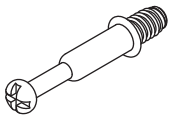

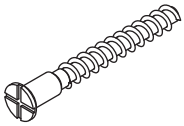

A x 90	B x 90	C x 44	D x 4	E x 150
 CRA0635B	 CRB1595A	 CRF0830A	 CRC0540A	 CRD3514A

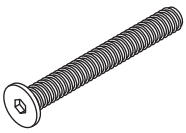
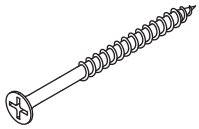

F x 4	G x 82	H x 18	J x 18	K x 90
 CRG0660A	 CRG0612A		 CRD0580A	




L x 4	M x 32	N x 4	P x 8	Q x 16
 CRG0616A	 CRG0645A		 CRG0635A	

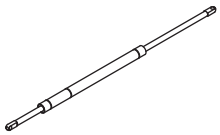
R x 2	S x 2	T x 4	U x 6	V x 12
				 CRE0420A

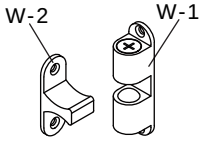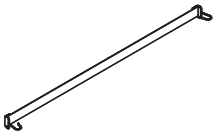


W x 2	X x 2	Y x 2	Z x 2	AA x 52
				 CRD0314A

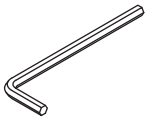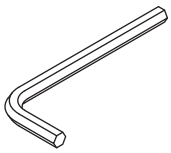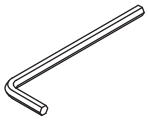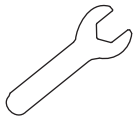
AB x 24	AC x 1	AD x 1	AE x 1	AF x 1
 CRD0416A	 M4	 M12	 M5	 M8


AG x 9	AH x 8	AJ x 16	AK x 8	AL x 10
 CRG0625A		 CRG0835A	 CRF0840A	

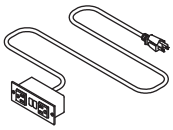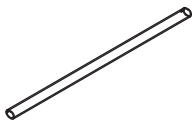
AM x 18	AN x 44	AP x 1	AQ x 2	AR x 4
				

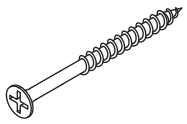AS x 4	AT x 7	AU x 18	AV x 16	AW x 4
	 CRG0630A	 CRD0468A		

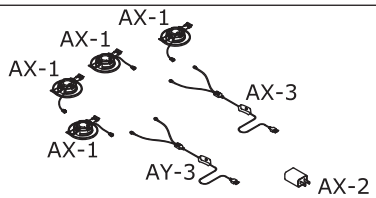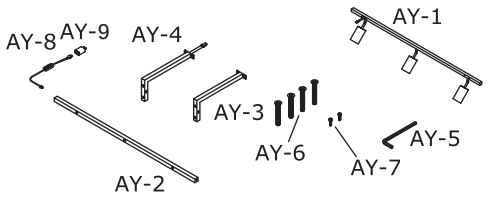AX x 1	AY x 1	AZ x 8
		

BB x 2

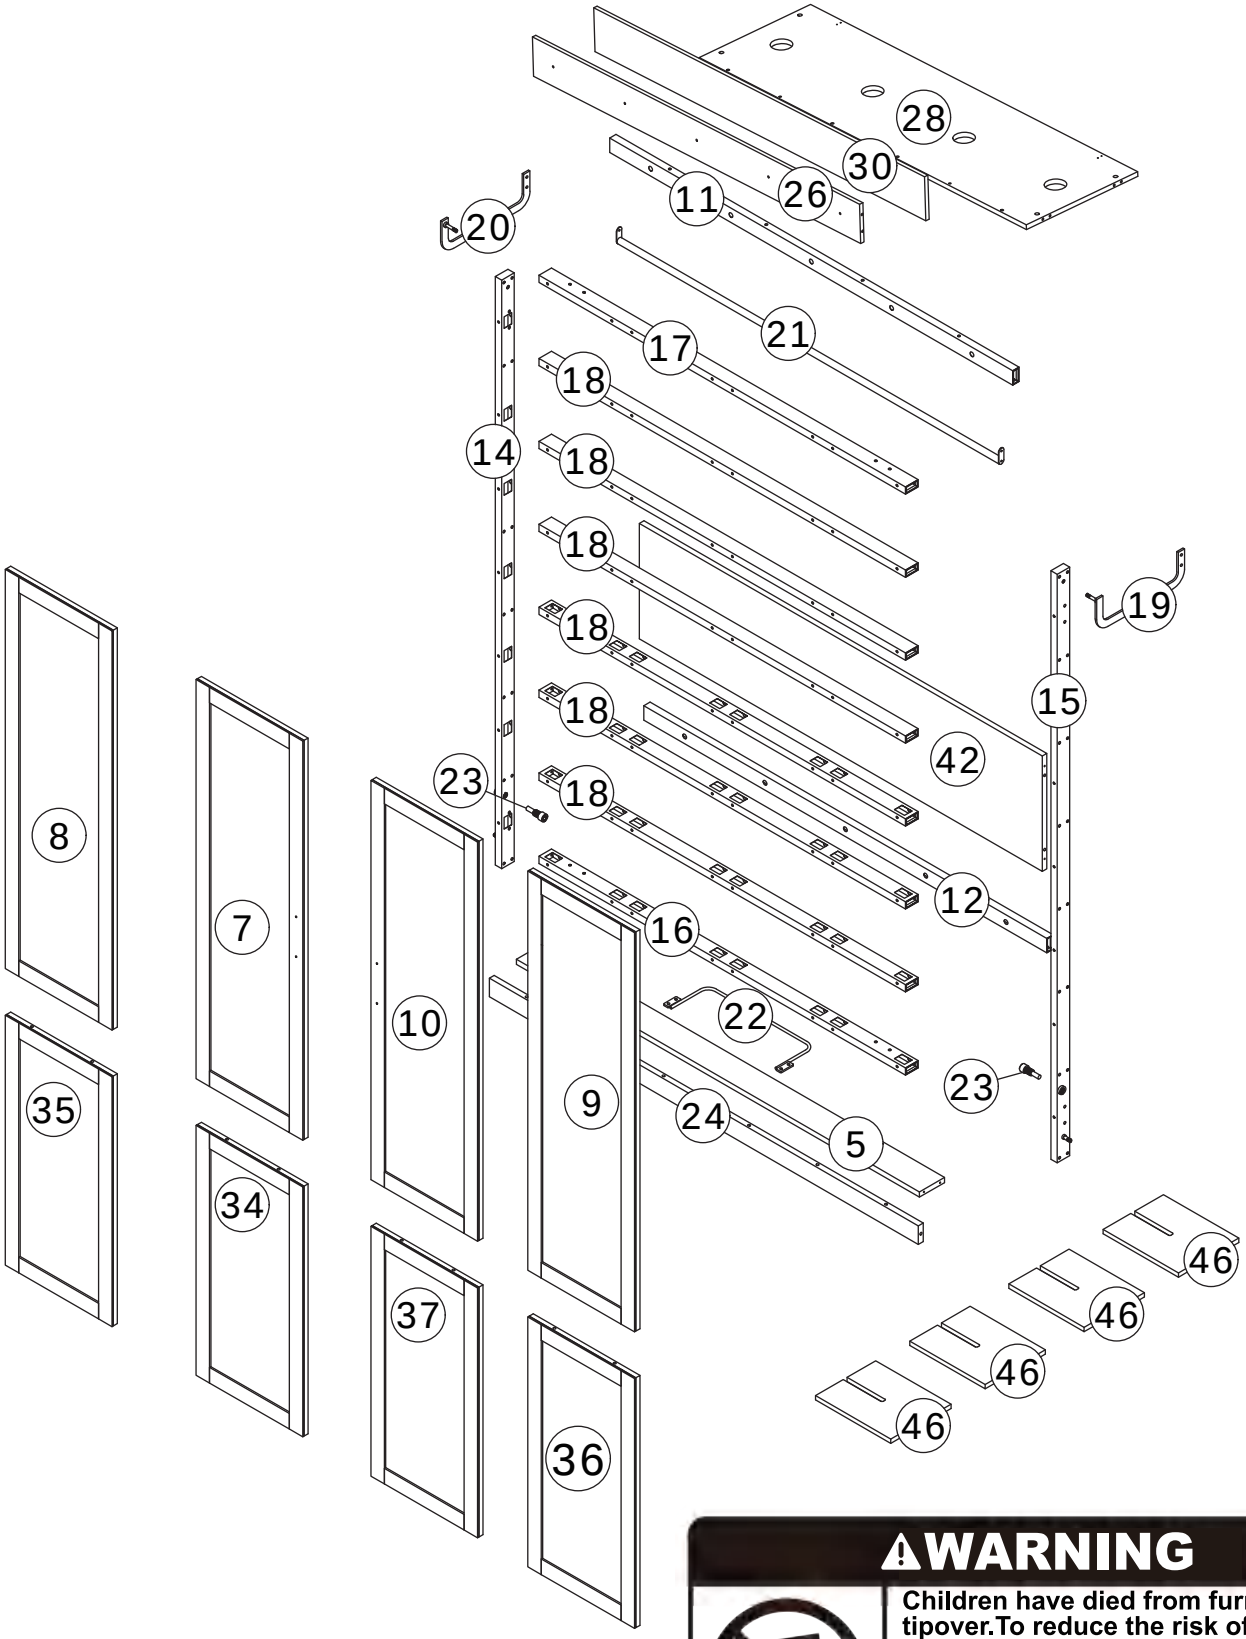

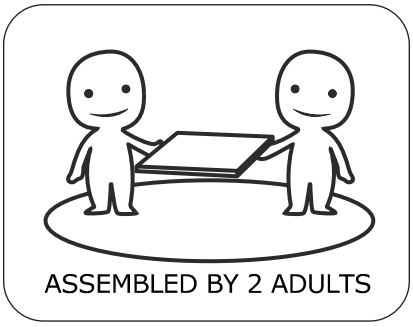


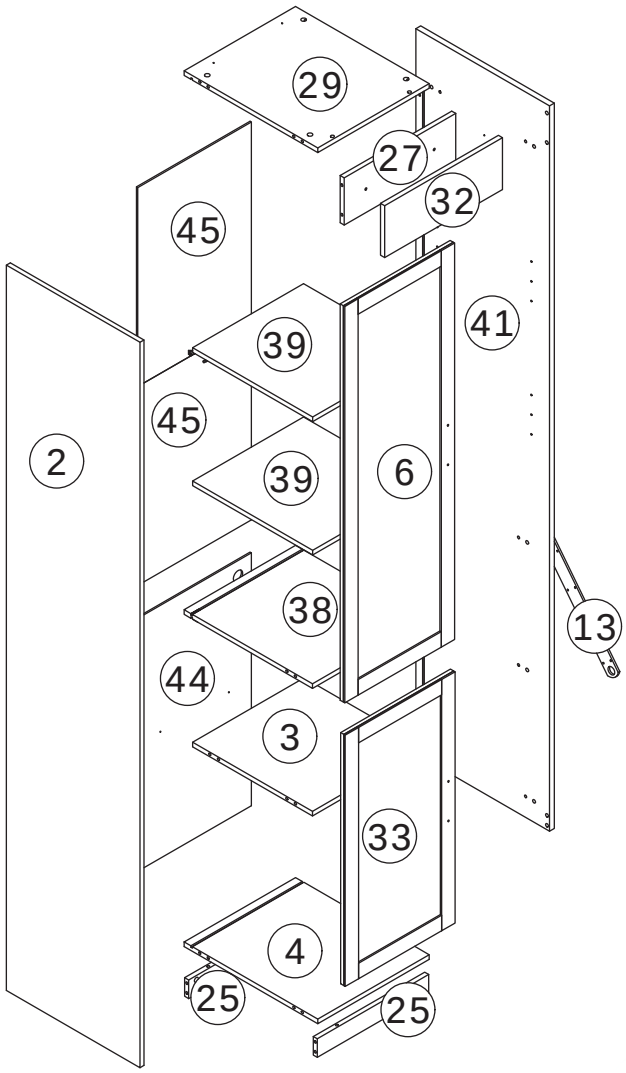
⚠WARNING





Children have died from furniture tipover.To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.
Do not remove!



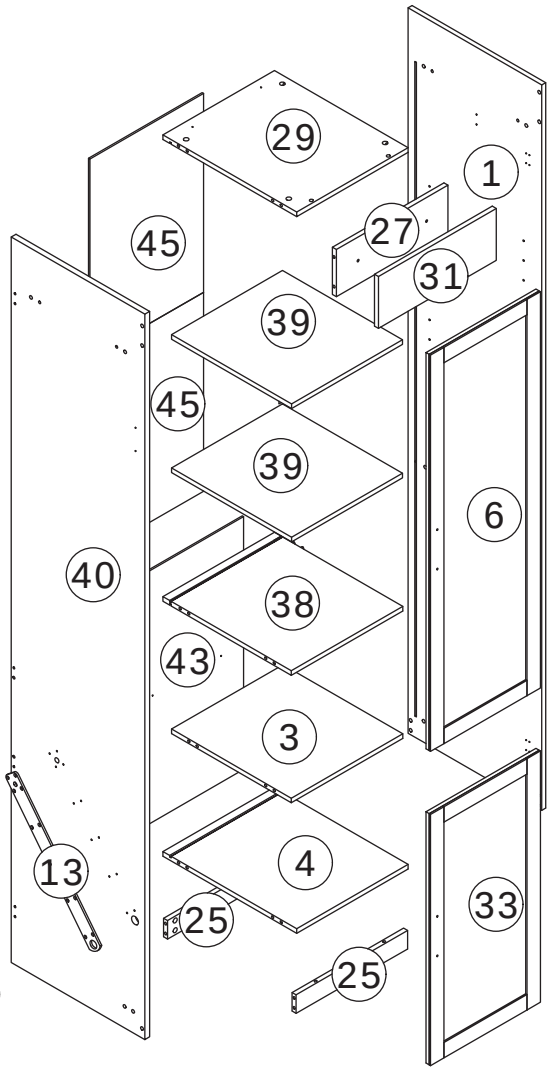

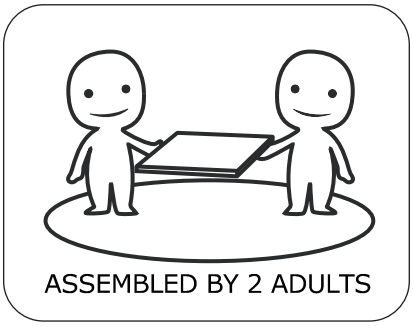


⚠WARNING





Children have died from furniture tipover.To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



This is a permanent label.
Do not remove!

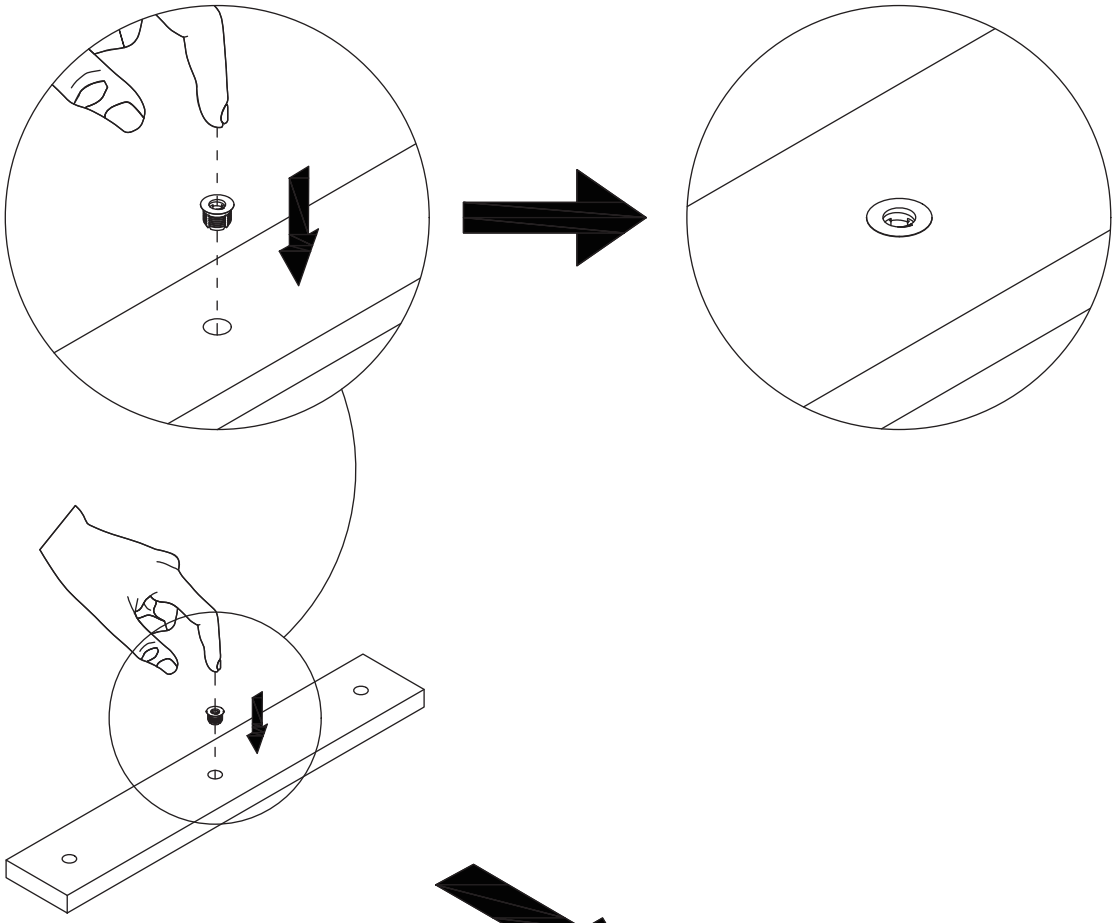


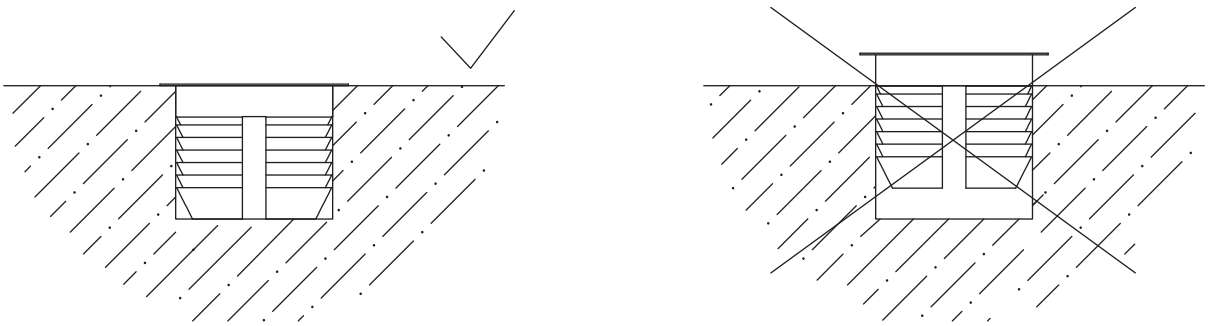

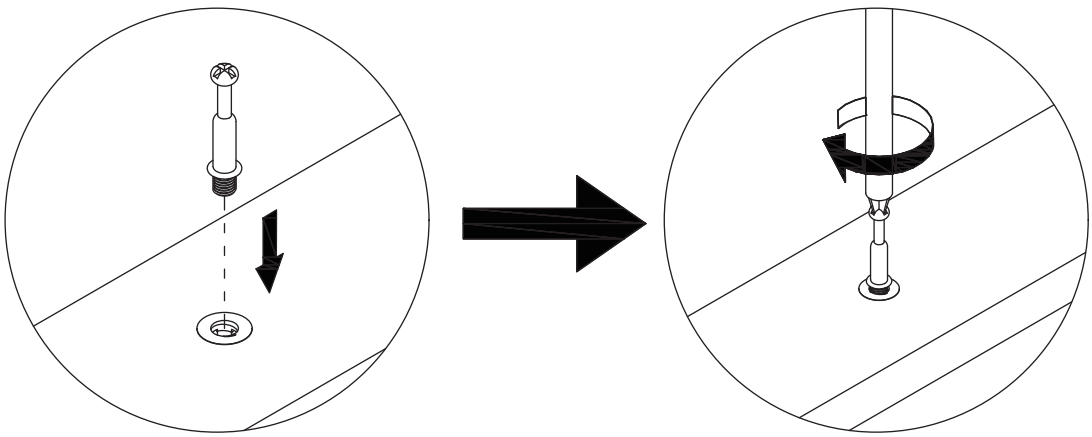


1

A x 8	K x 8	
 CRA0635B		

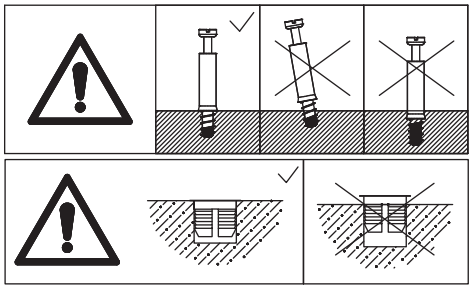

Insert threaded inserts (K) into the pre-drilled holes of Panel 4, then fasten cam screw (A) into the insert nuts.

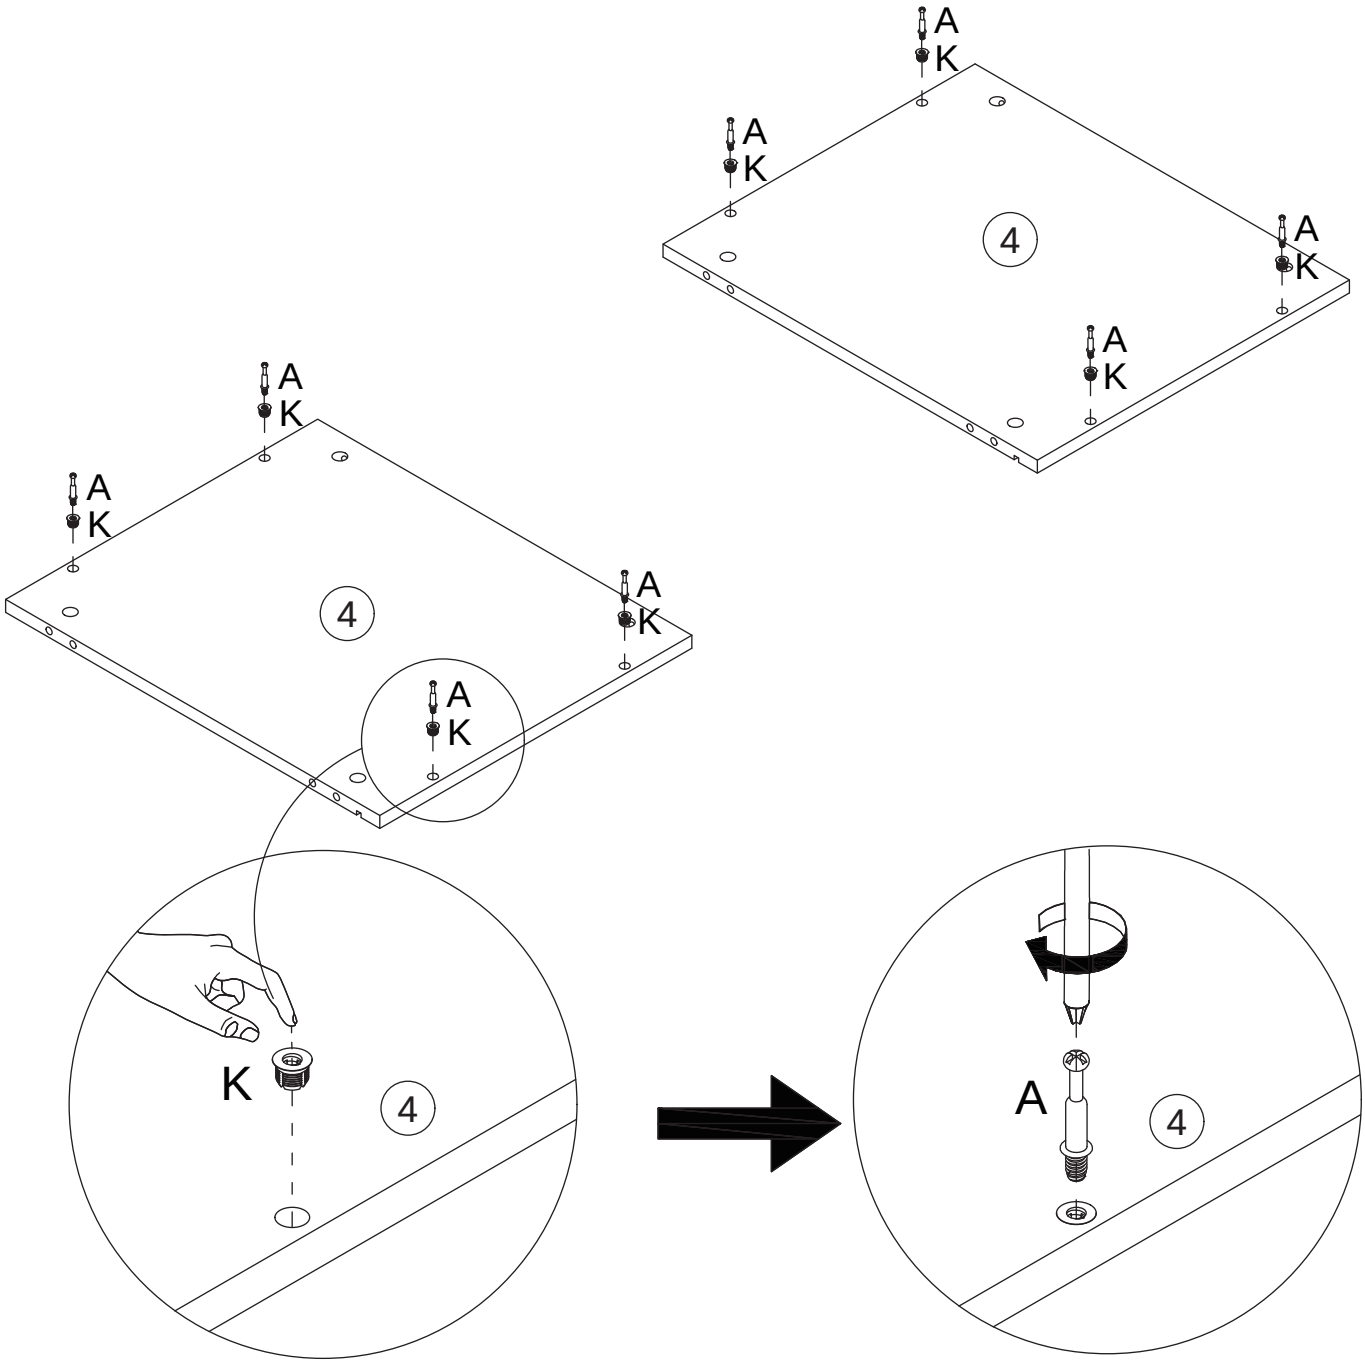



2


B x 8



CRB1595A





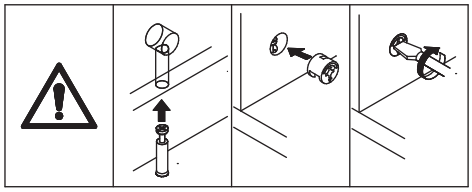

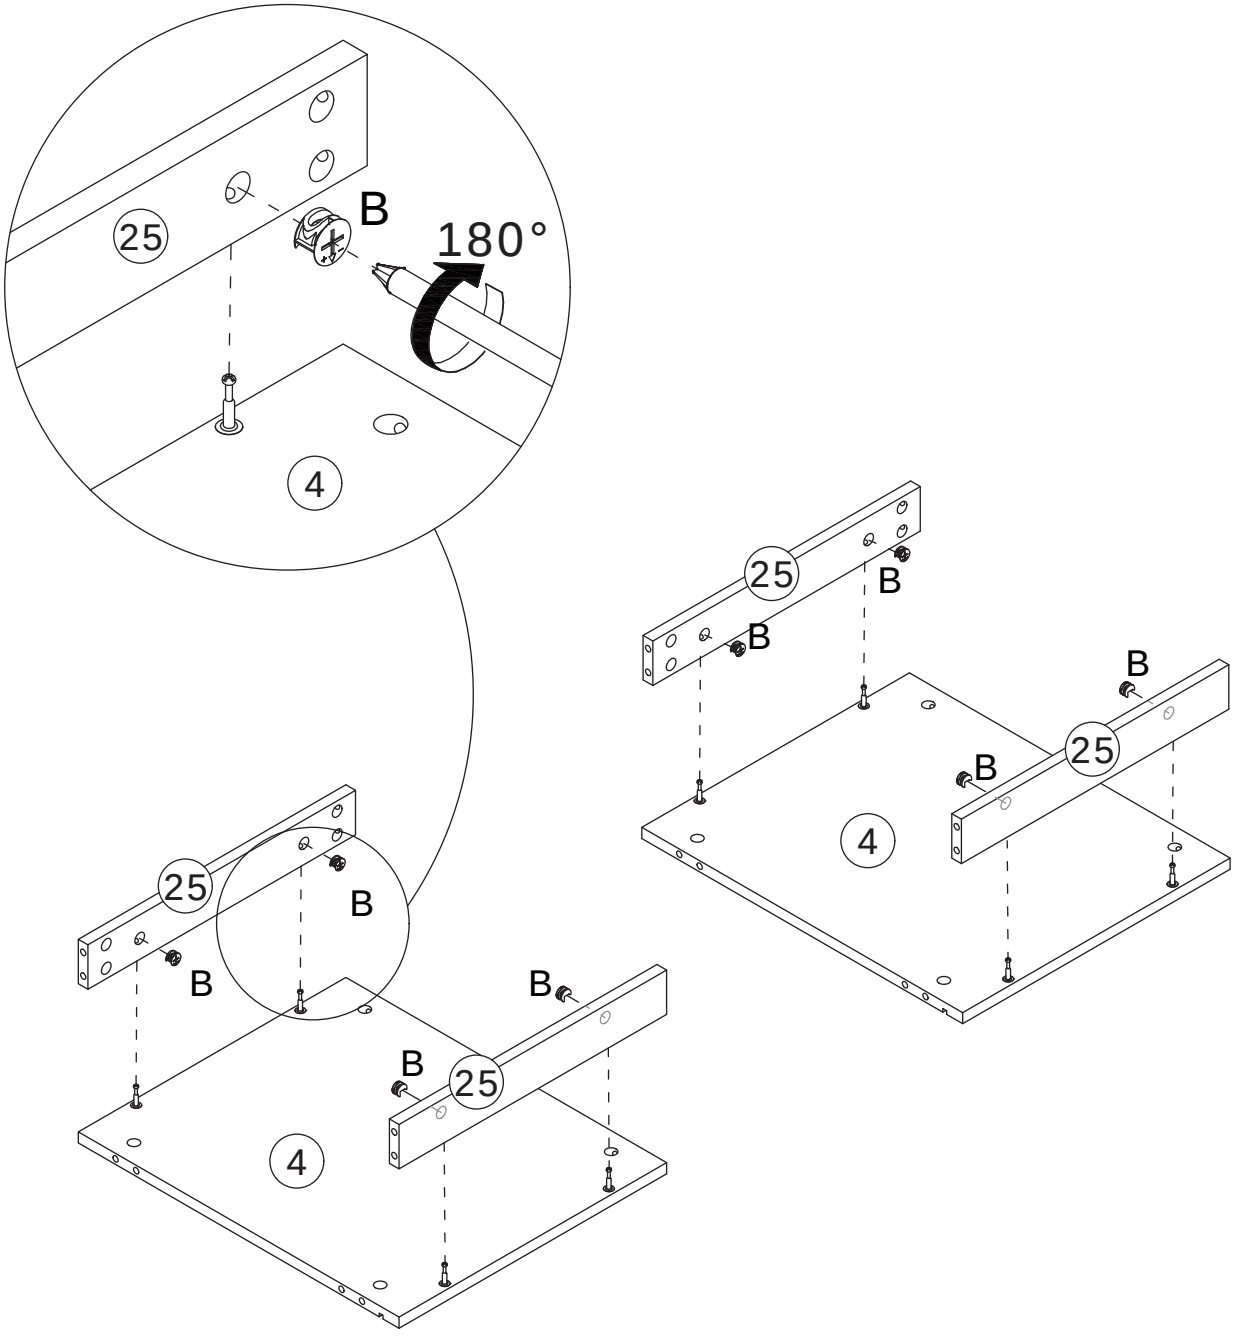



Connect Panel 25 to Panel 4, fit cam lock (B) into position, then turn it clockwise to tighten.


3

A x 28	E x 4	K x 28	AR x 2	
 CRA0635B	 CRD3514A			



Insert threaded inserts (K) into the pre-drilled holes of Panels 1 and 2, then fasten cam screw (A) into the insert nuts.
Secure part (AR) to Panels 1 and 2 with screws (E).

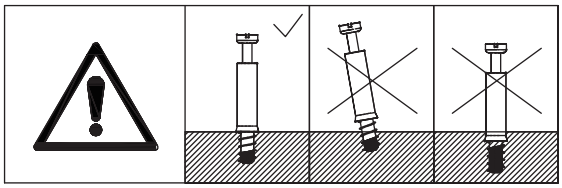


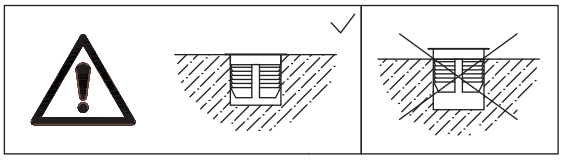


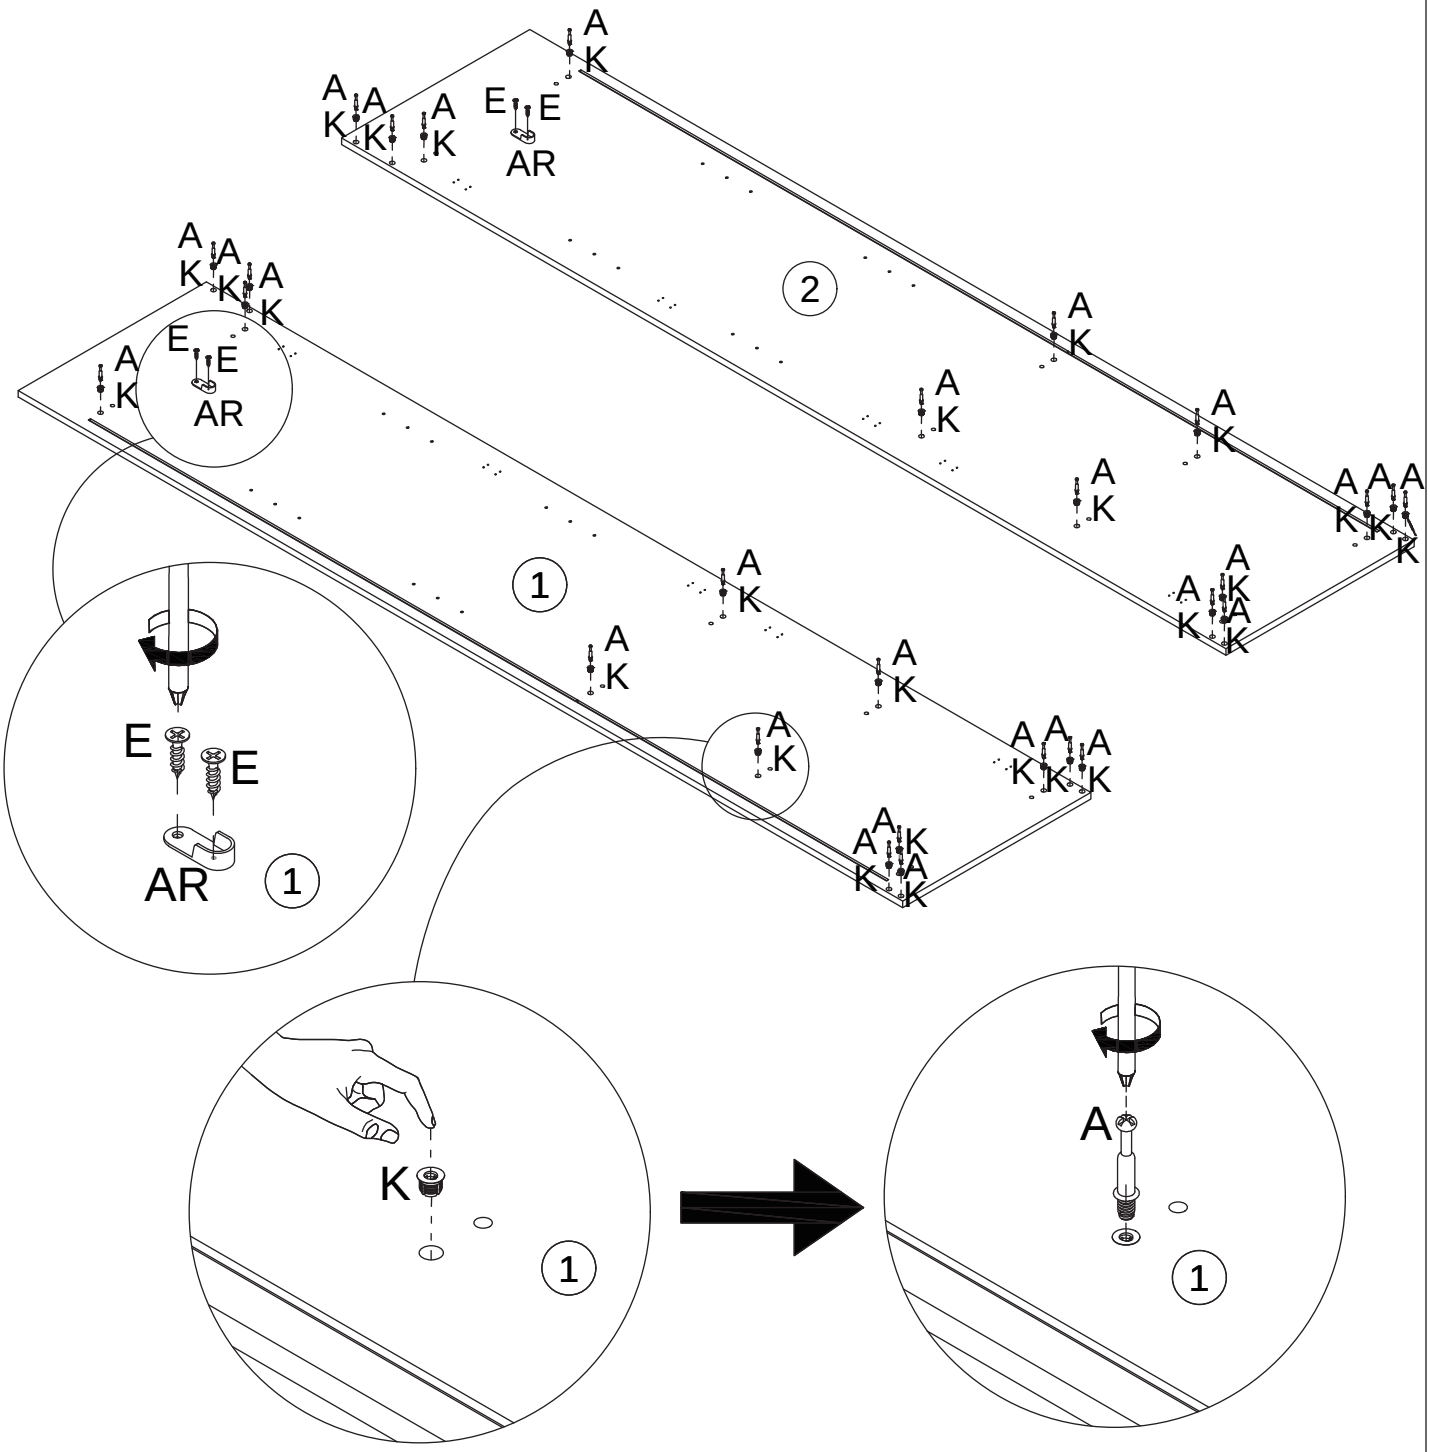


4


A x 4	K x 4	
 CRA0635B		

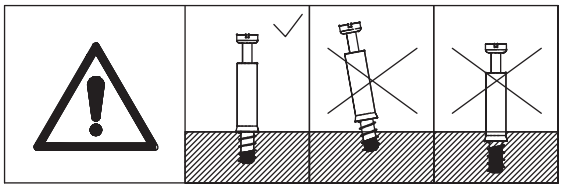


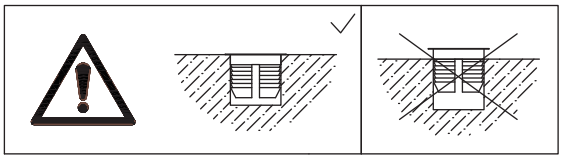

Insert threaded inserts (K) into the pre-drilled holes of Panel 29, then fasten cam screw (A) into the insert nuts.

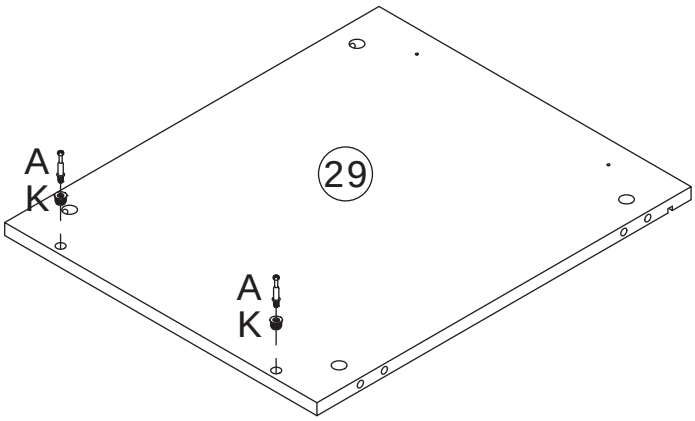

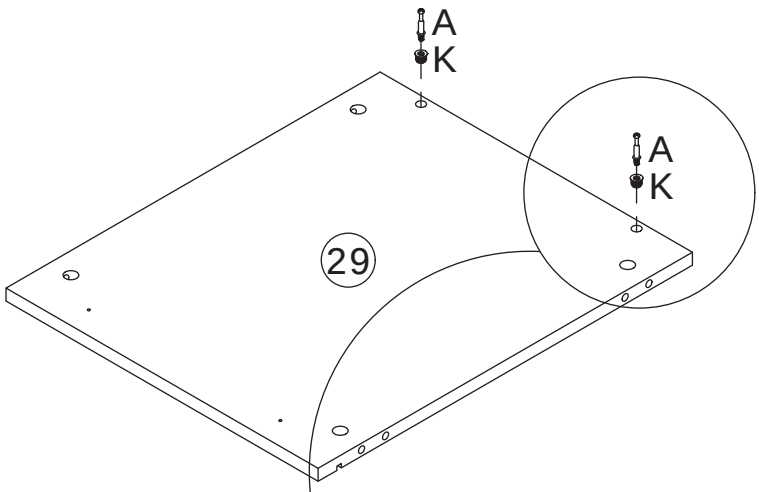

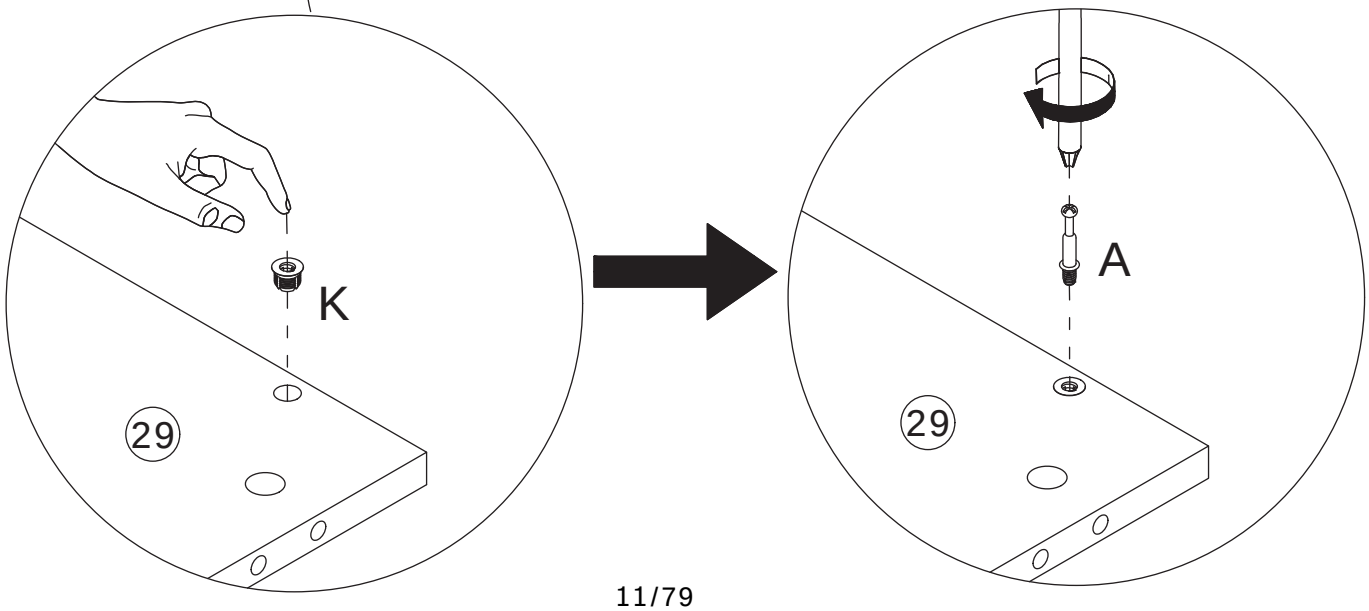



5

B x 4




CRB1595A




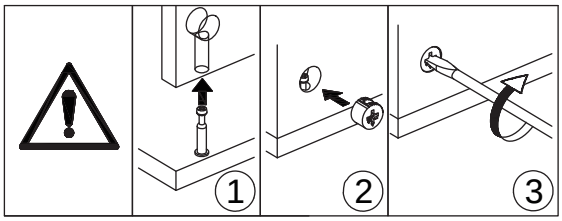


Connect Panel 27 to Panel 29, fit cam lock (B) into position, then turn it clockwise to tighten.

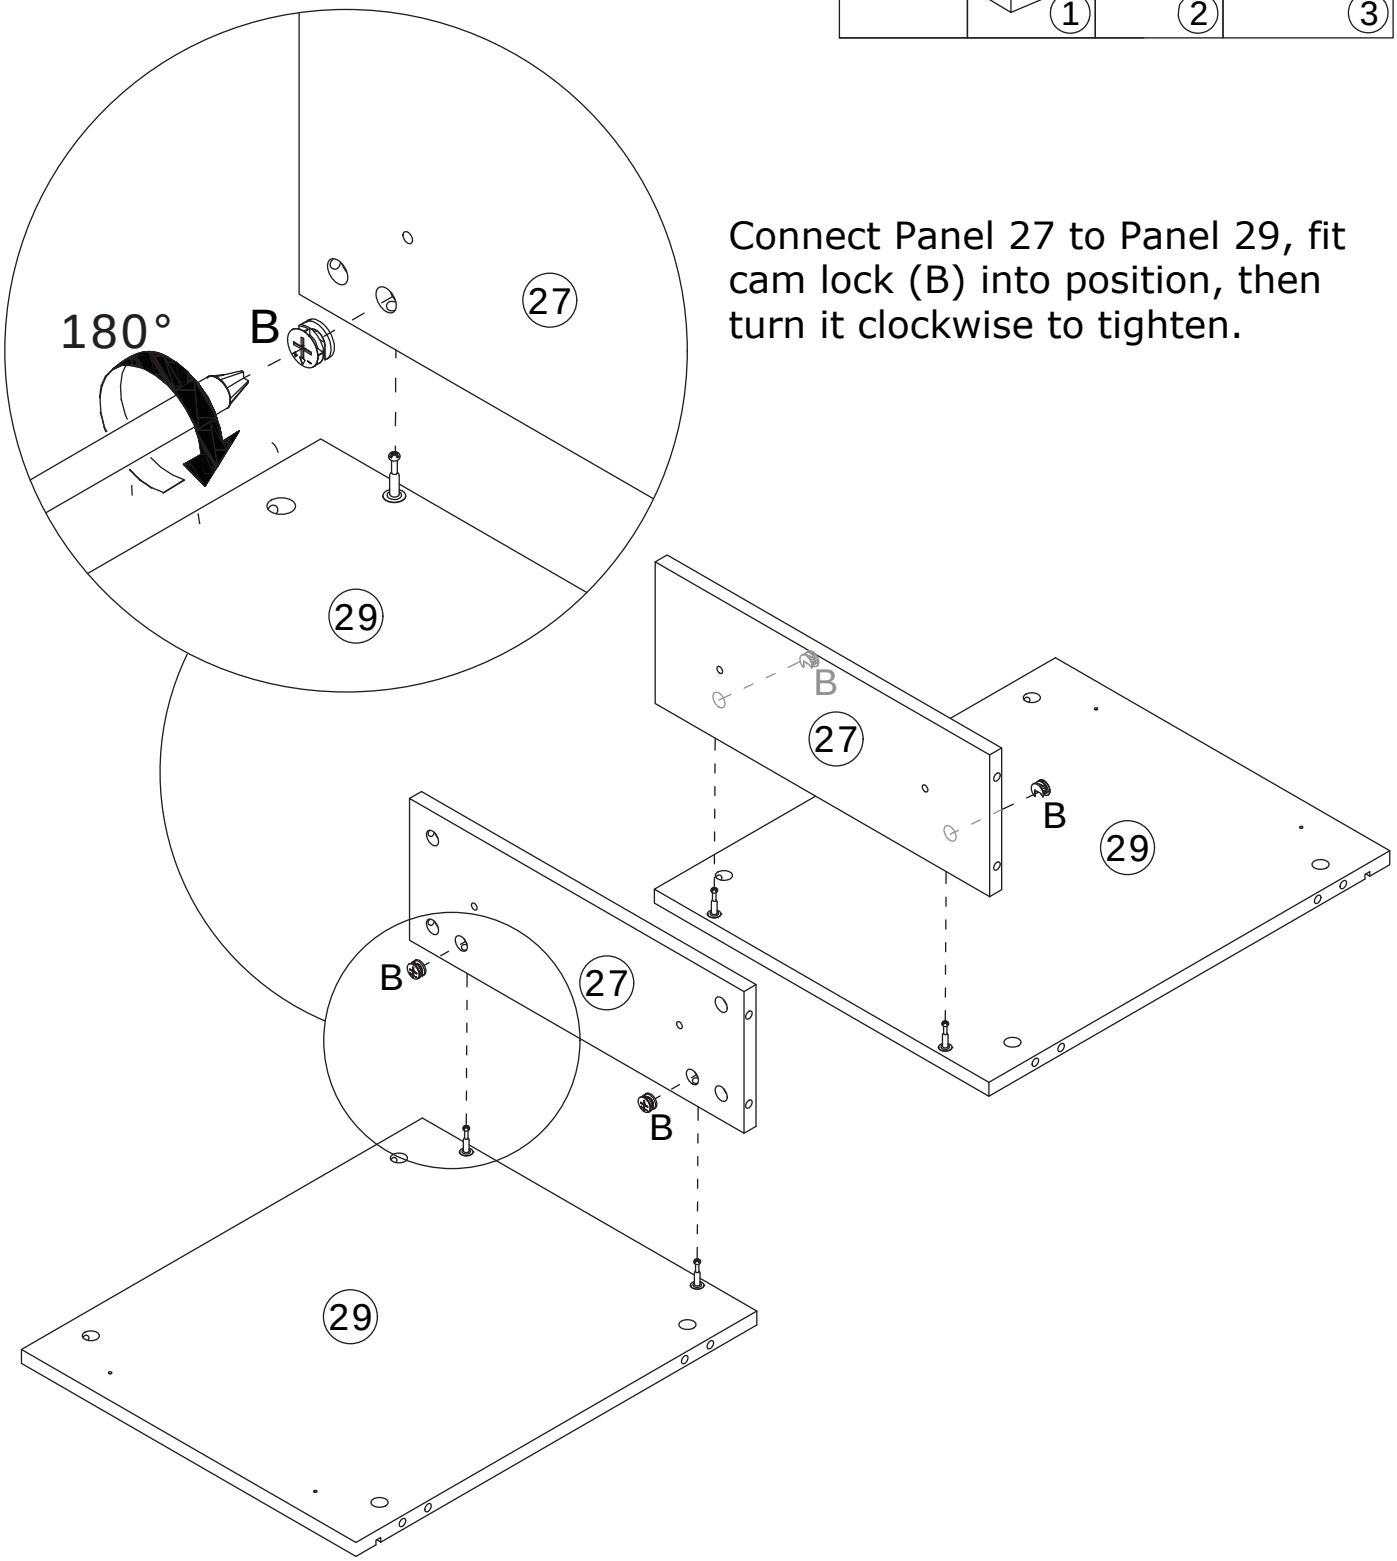


6



AG x 4	AC x 1	
 CRG0625A	 M4	

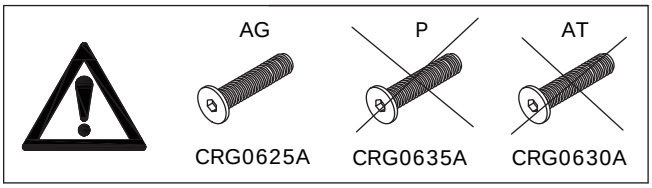


Connect Panels 32 and 31 to Panel 27 with screws (AG).

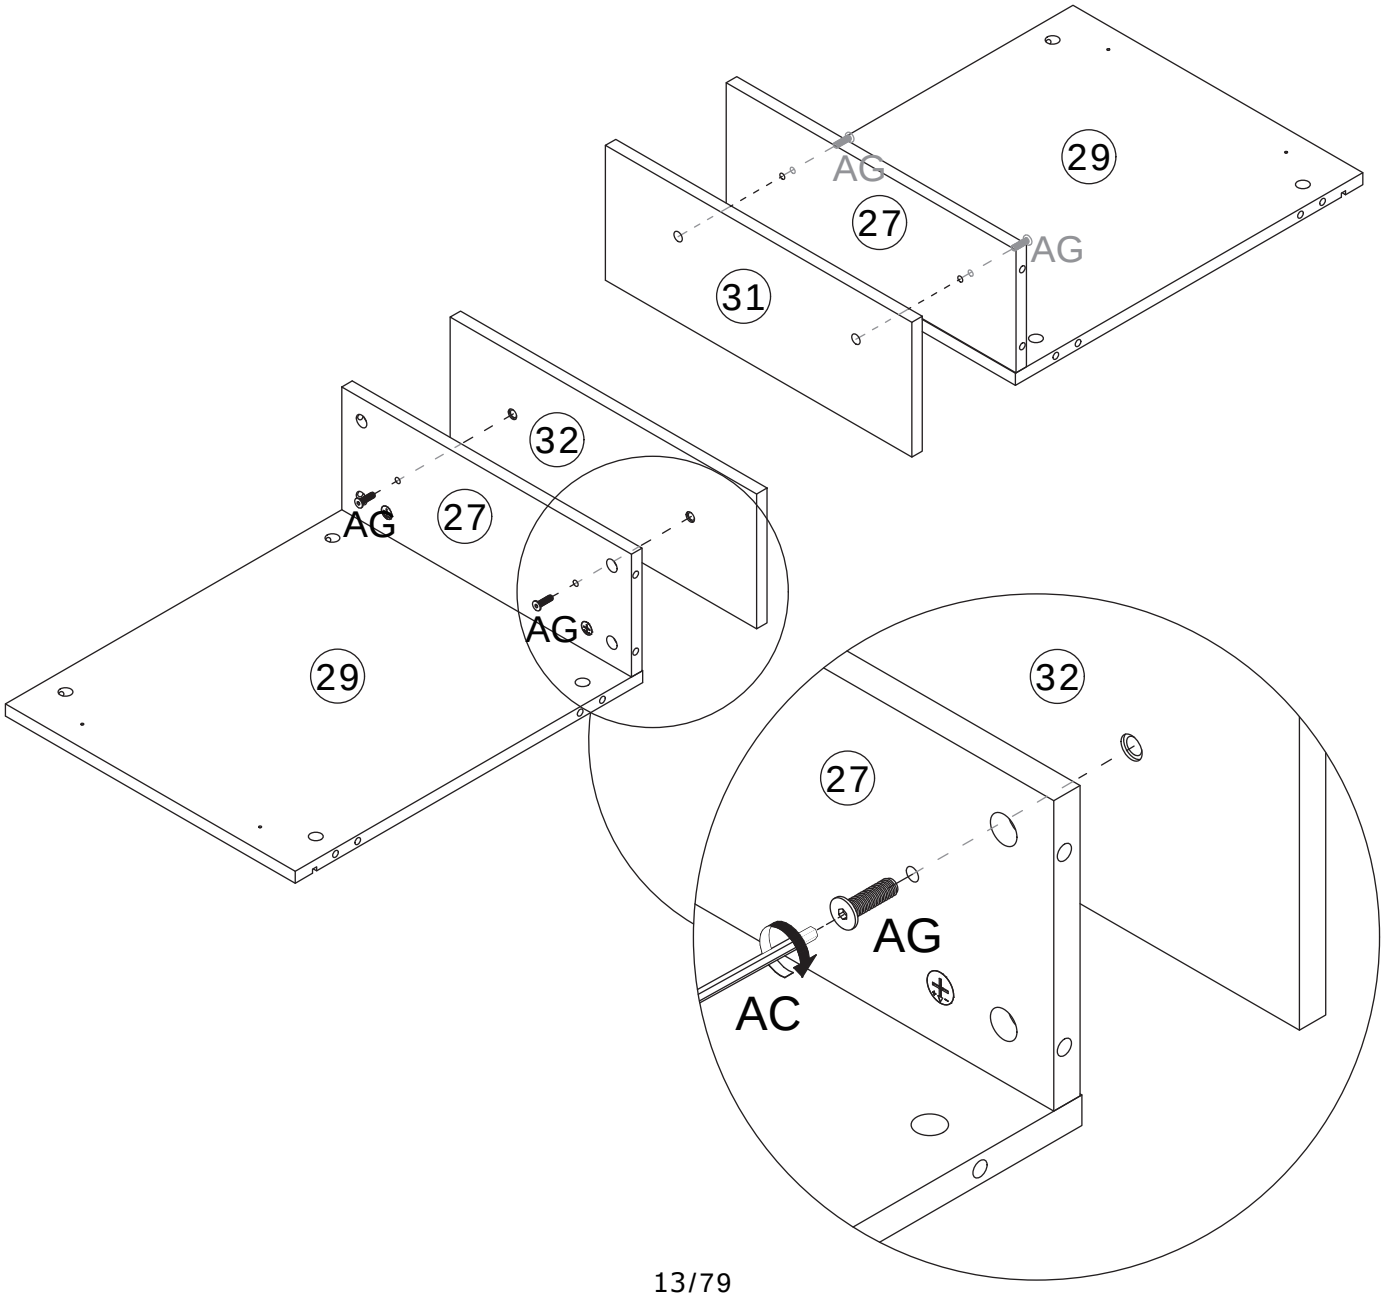


7



B x 28	C x 16	
 CRB1595A	 CRF0830A	

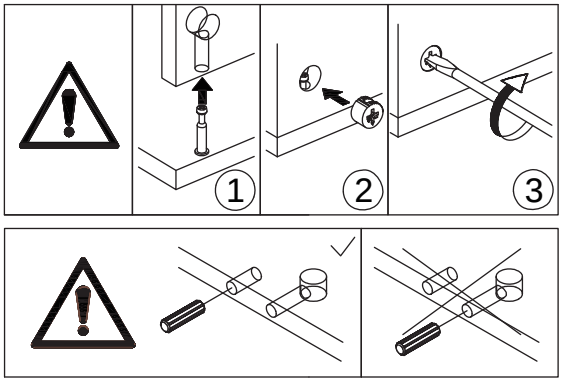


Connect Panels 29, 27, 38, 3, 4 and 25 to Panels 1 and 2 with dowel pins (C), fit cam lock (B) into position, then turn it clockwise to tighten.

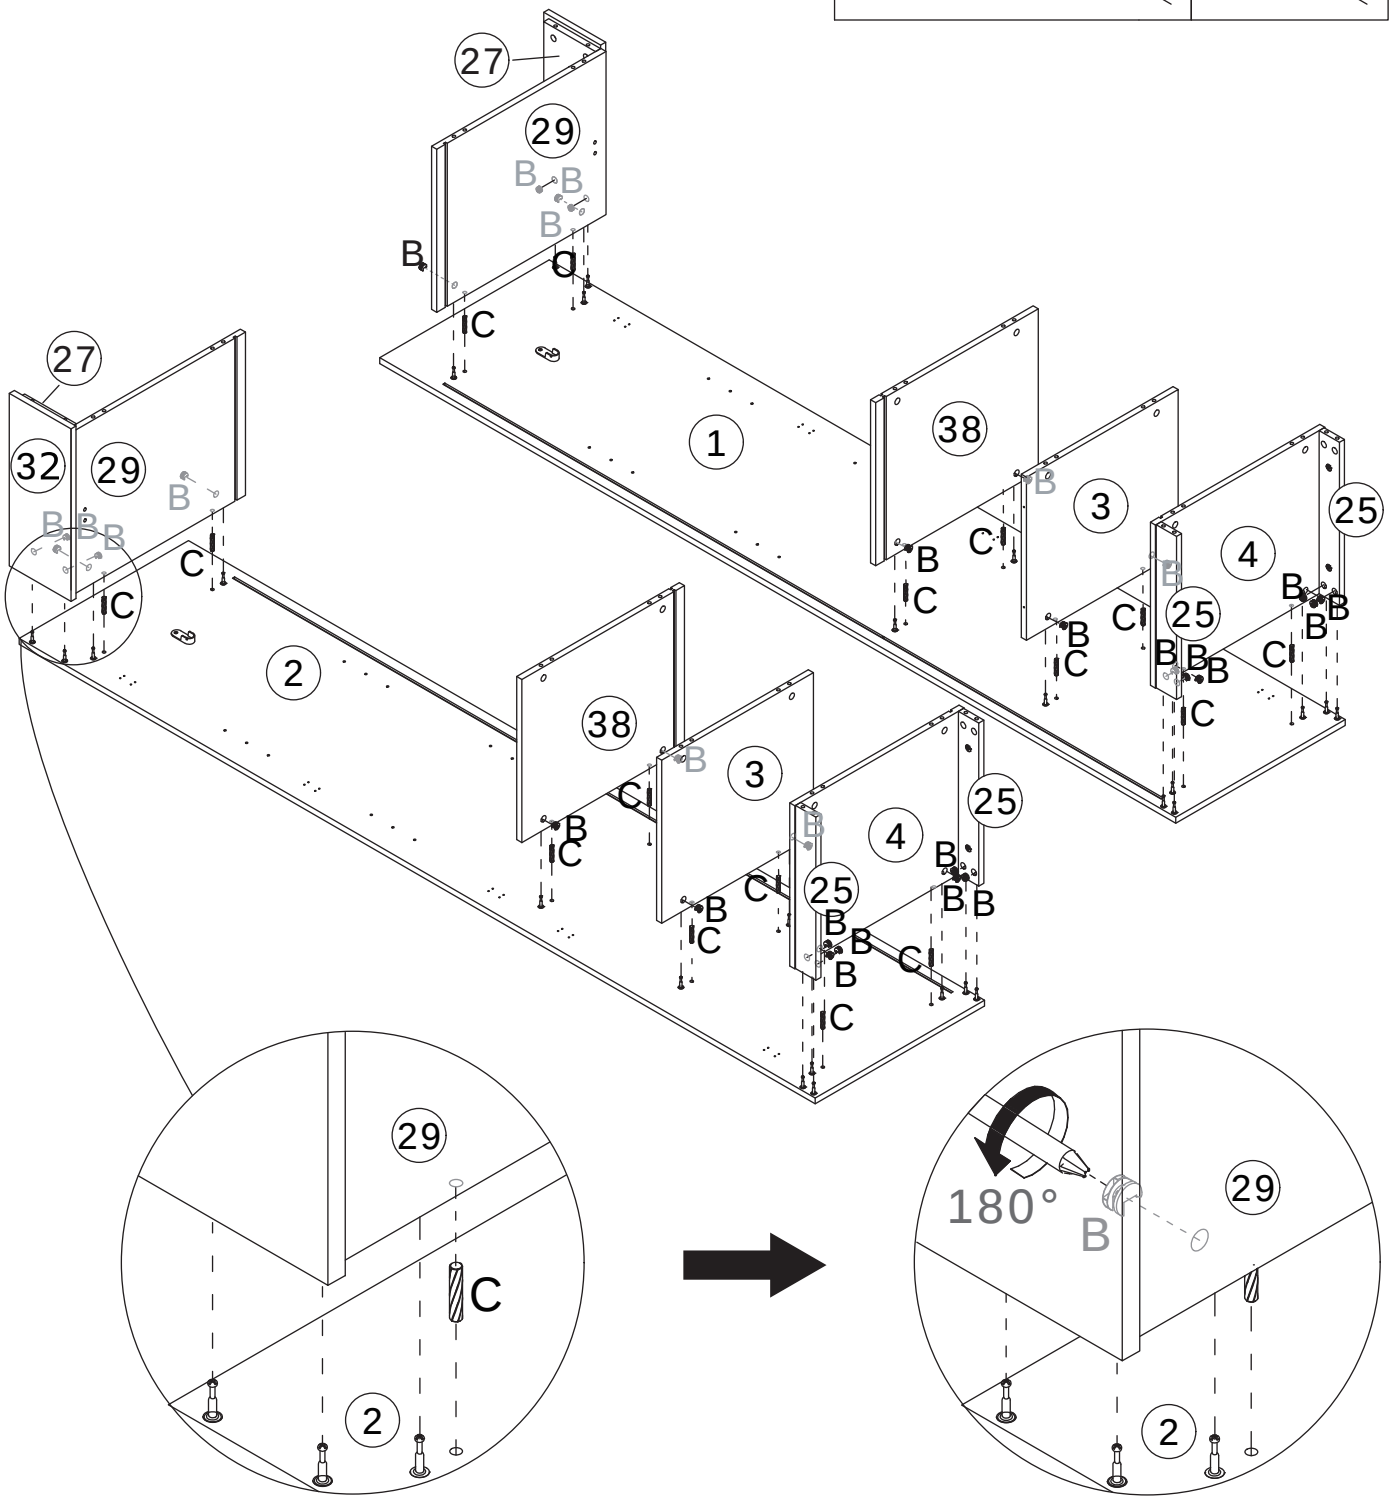

8


AA x 4	AV x 8	BB x 2	
 CRD0314A			

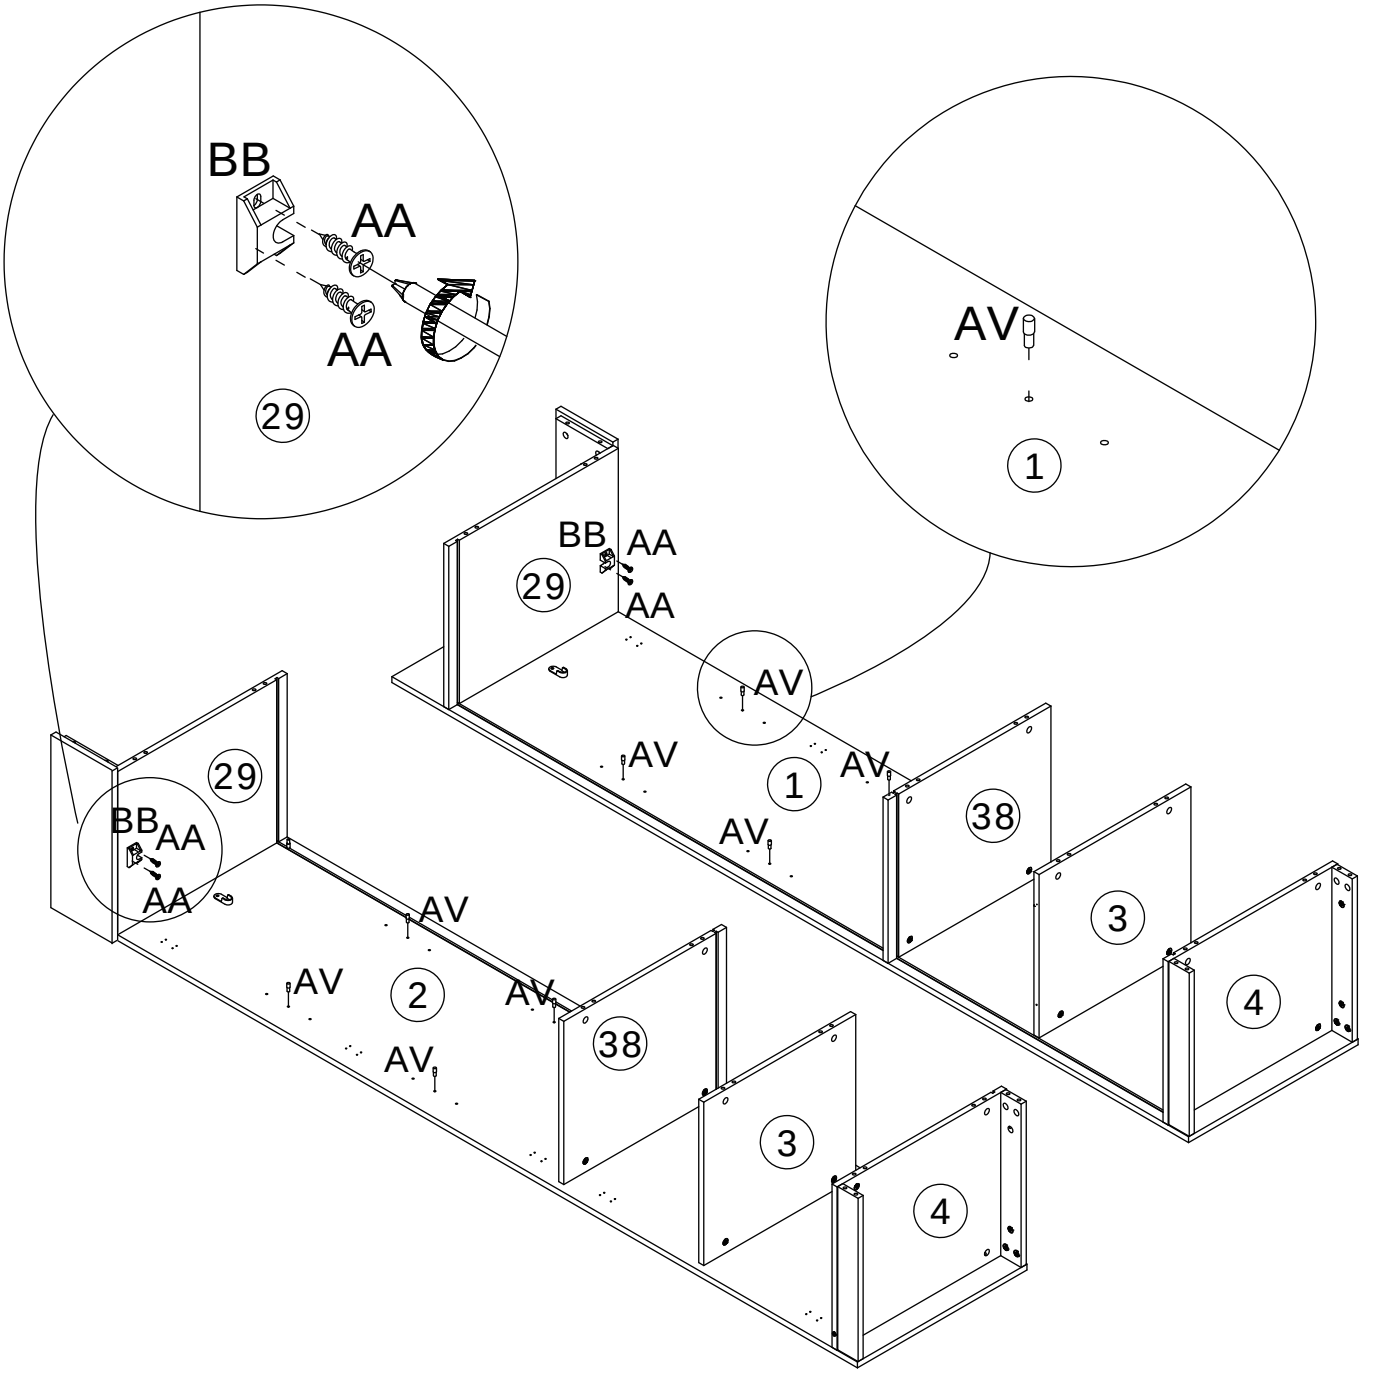

Secure part (BB) onto Panel 29 with screws (AA), and insert part (AV) onto Panels 1 and 2.

9


Insert Panels 45, 43 and 44 along the slots of Panels 29, 38 and 4.

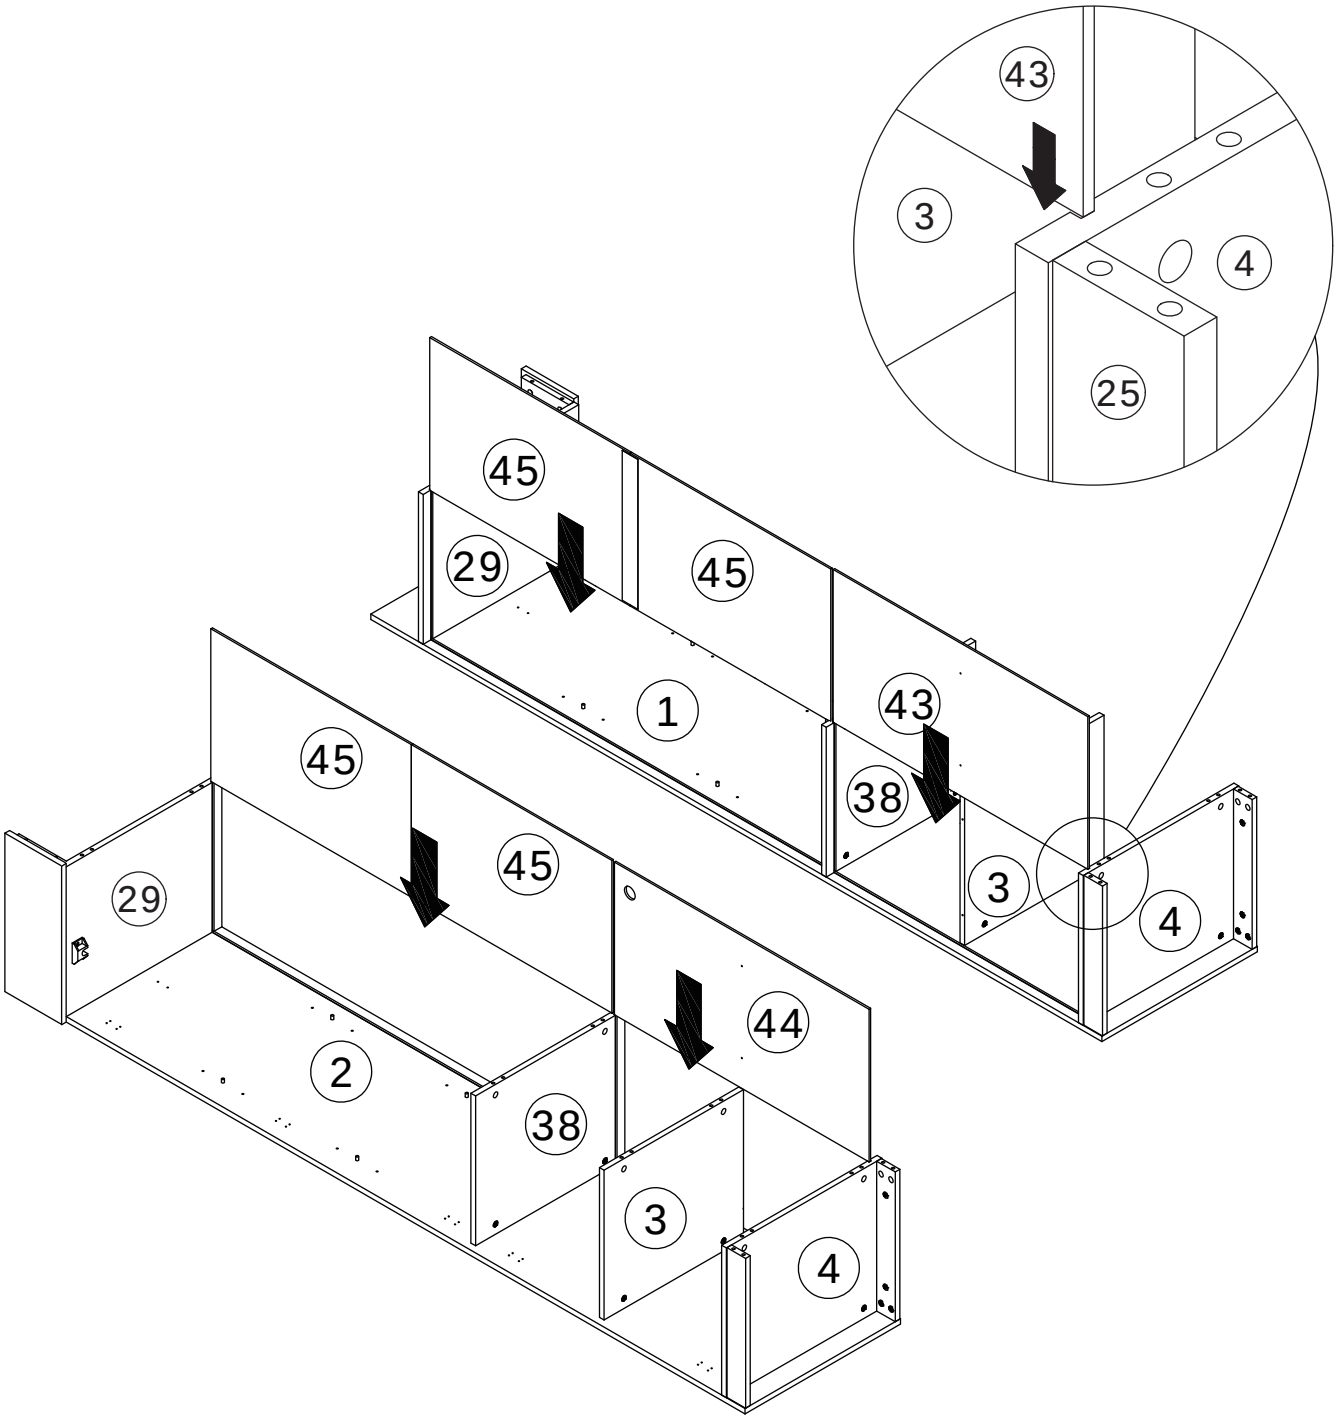


10

AW x 4








Secure Panels 43 and 44 to Panel 3 with screws (AW).

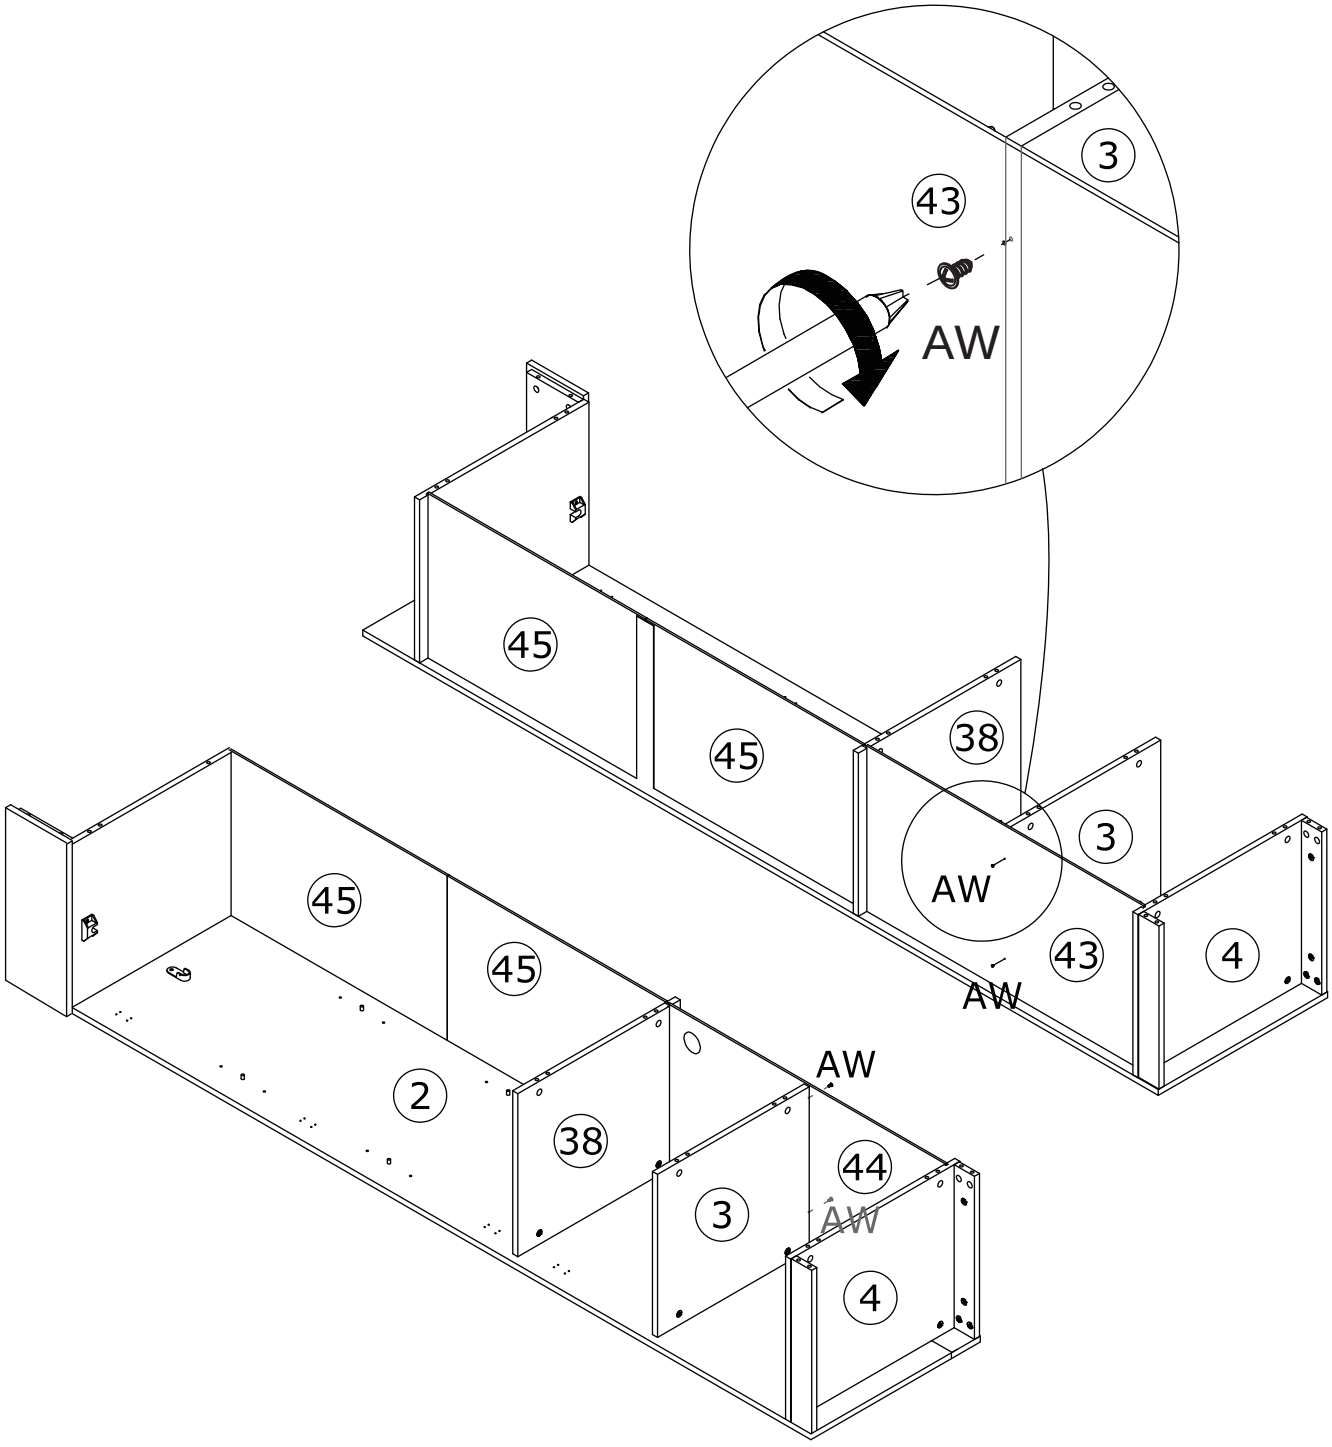



11

A x 28	E x 4	K x 28	AV x 8	AR x 2	
 CRA0635B	 CRD3514A				



Insert threaded inserts (K) into the pre-drilled holes of Panels 40 and 41, then fasten cam screw (A) into the insert nuts.
Secure part (AR) to Panels 40 and 41 with screws (E), and insert part (AV) onto Panels 40 and 41.

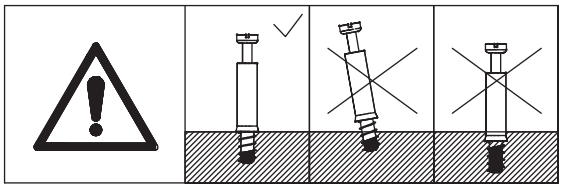

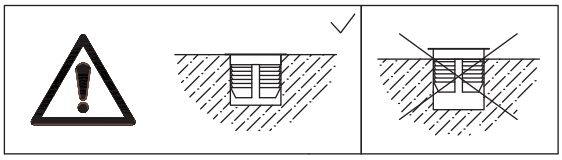


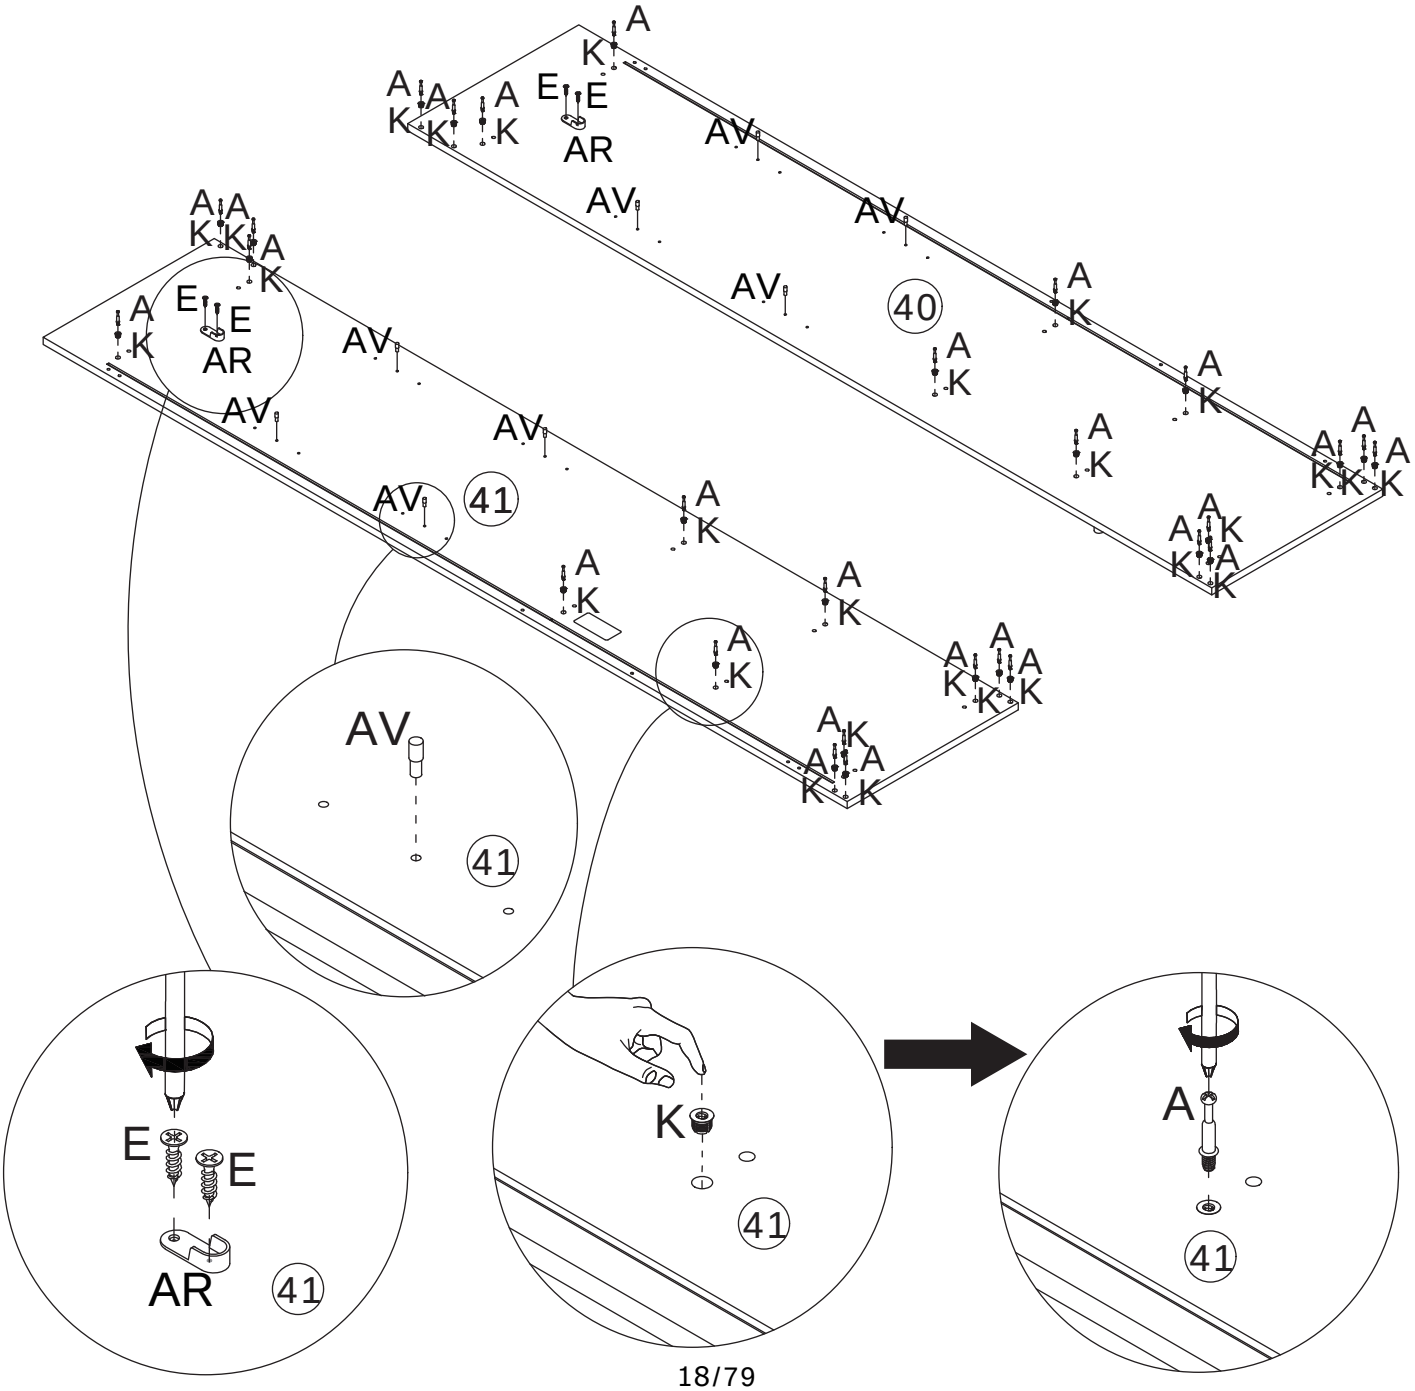



12

B x 28	C x 16	
		
CRB1595A	CRF0830A	



Connect Panels 40 and 41 to Panels 29, 27, 38, 3, 4 and 25 with dowel pins (C), fit cam lock (B) into position, then turn it clockwise to tighten.

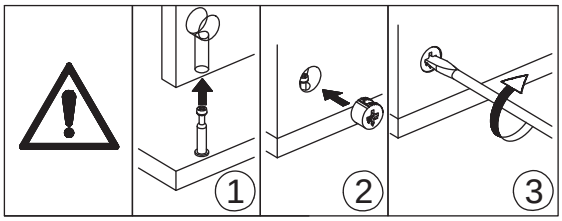

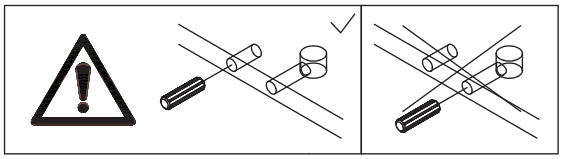


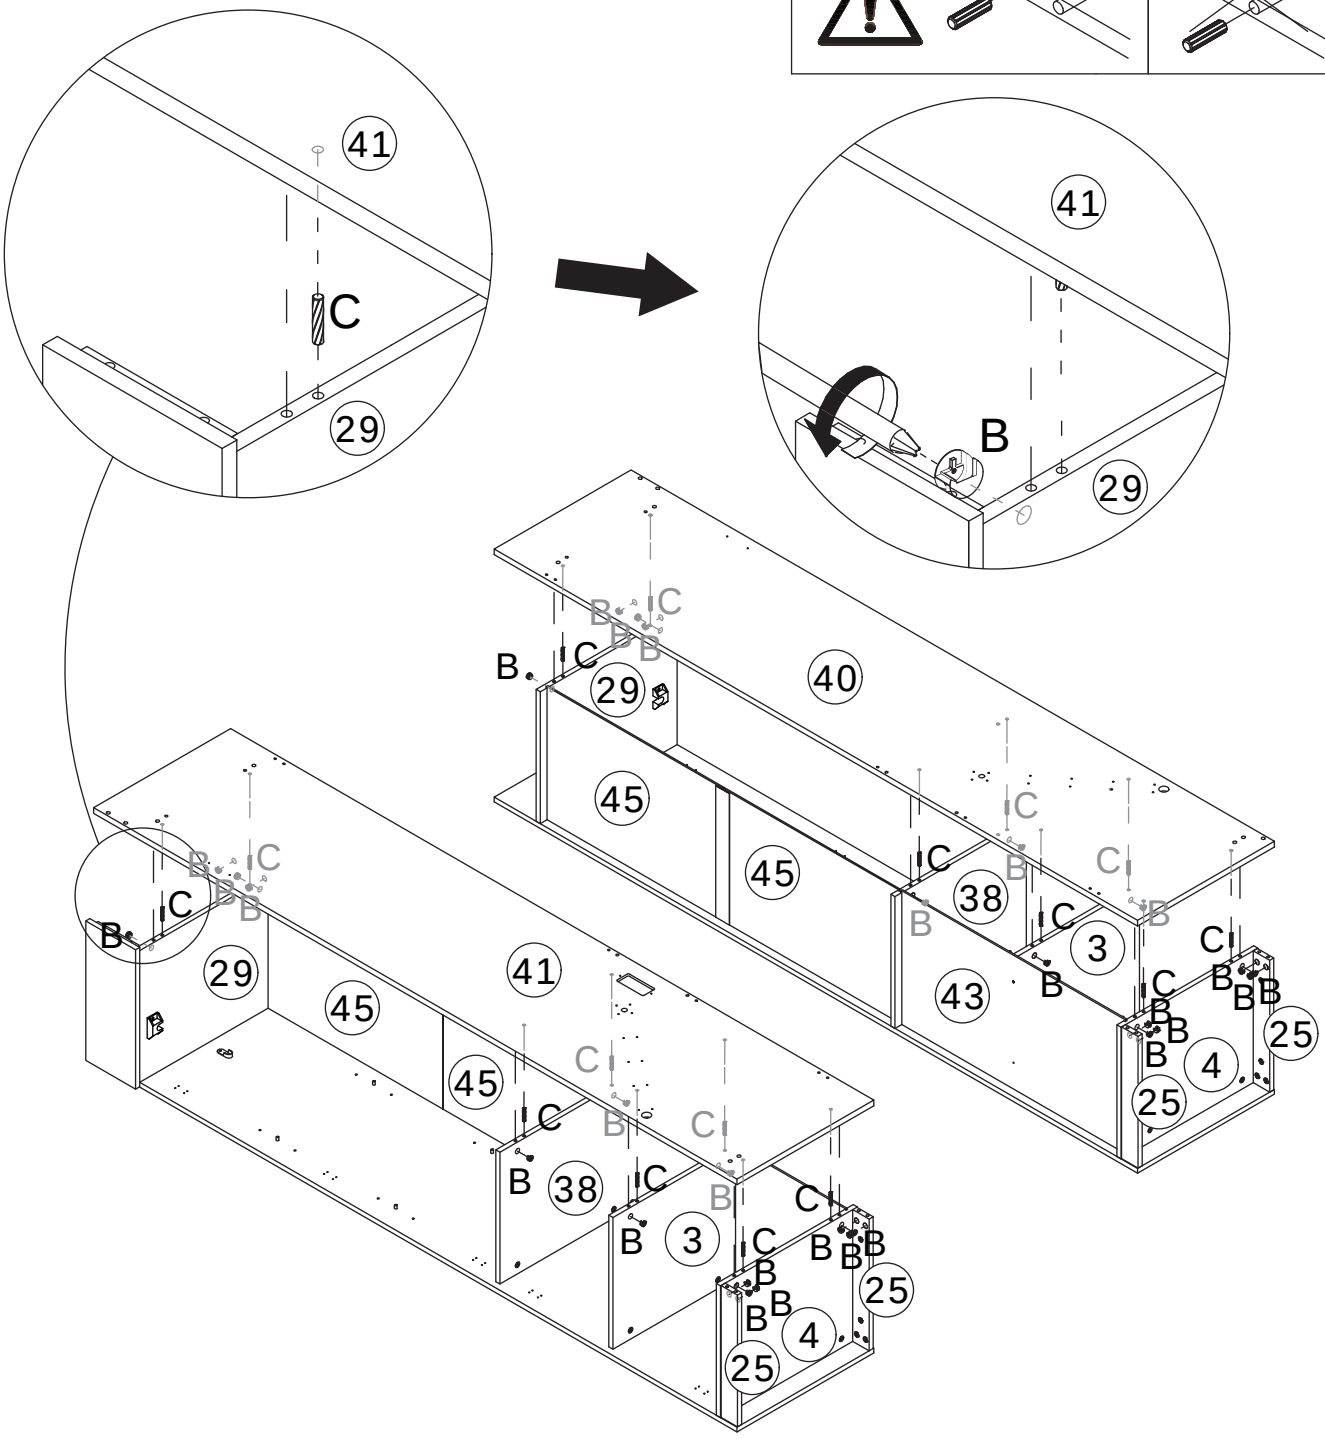




13

E x 2	AP x 1	
 CRD3514A		

Secure part (AP) to Panel 41 with screws (E), and thread the power cable through Panel 44.

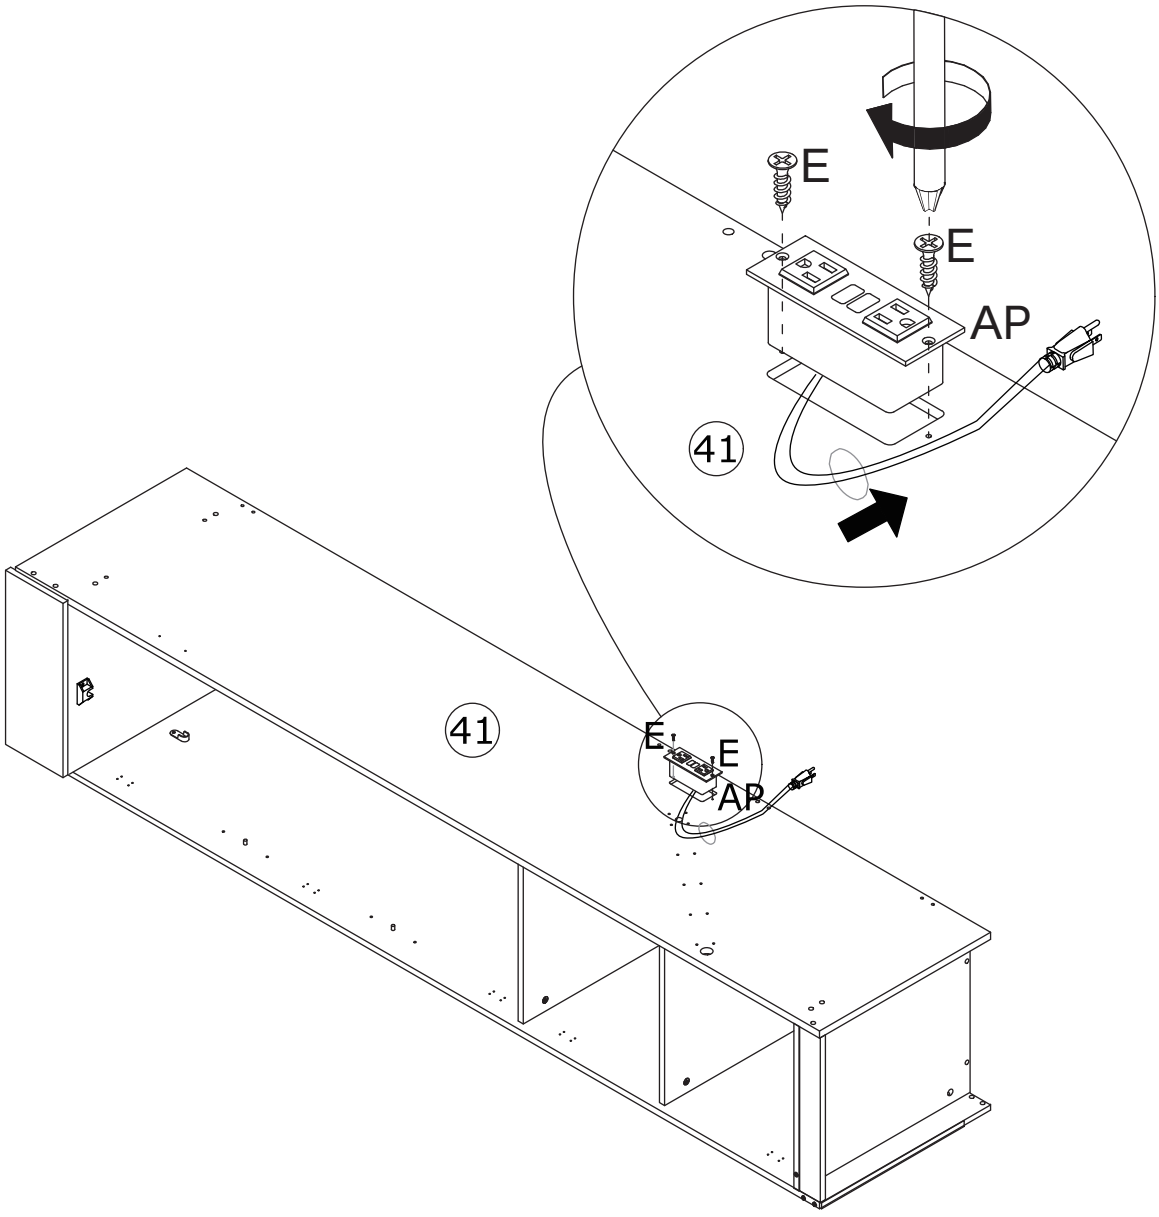


14

A x 14	K x 14	AB x 24	
 CRA0635B		 CRD0416A	





E	AA	AB
 CRD3514A	 CRD0314A	 CRD0416A

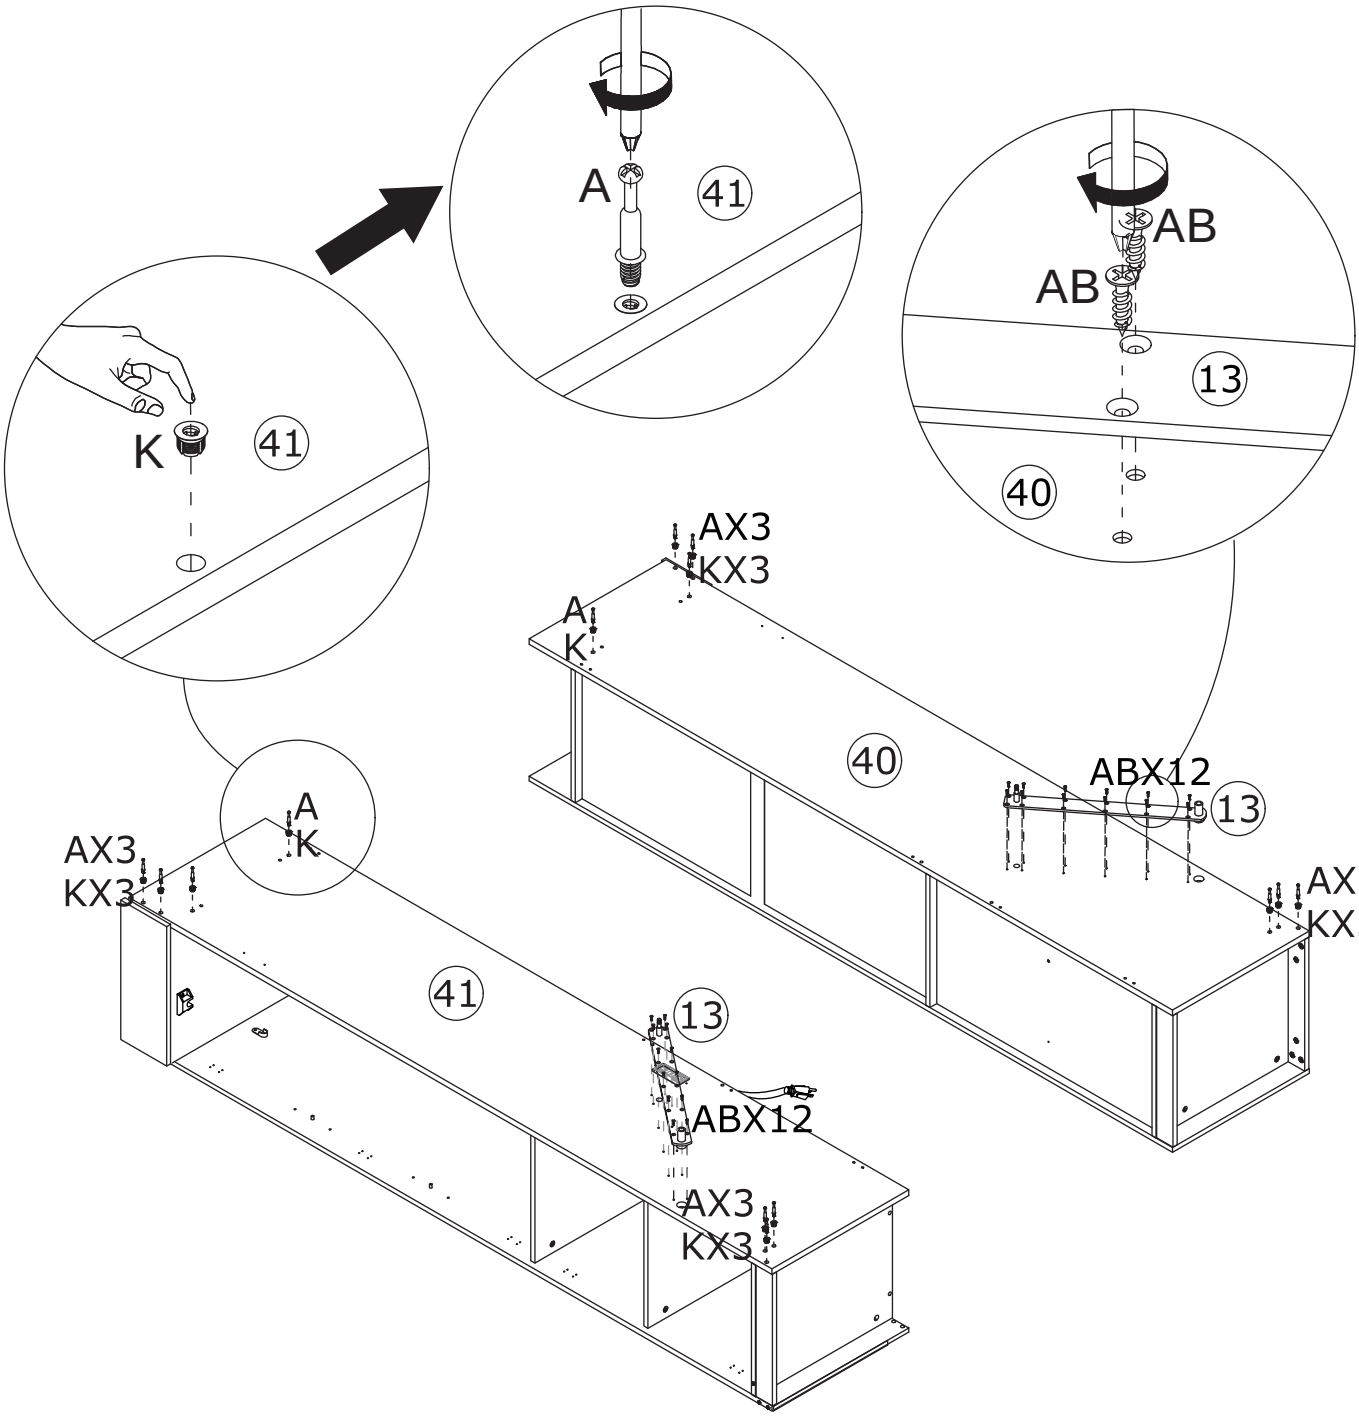


Insert threaded inserts (K) into the pre-drilled holes of Panels 40 and 41, then fasten cam screw (A) into the insert nuts.
Secure part (13) onto Panels 40 and 41 with screws (AB).


15

AG x 5	AC x 1	
 CRG0625A	 M4	

Connect Panel 26 to Panel 30 with screws (AG), and secure by turning part (AC) clockwise.

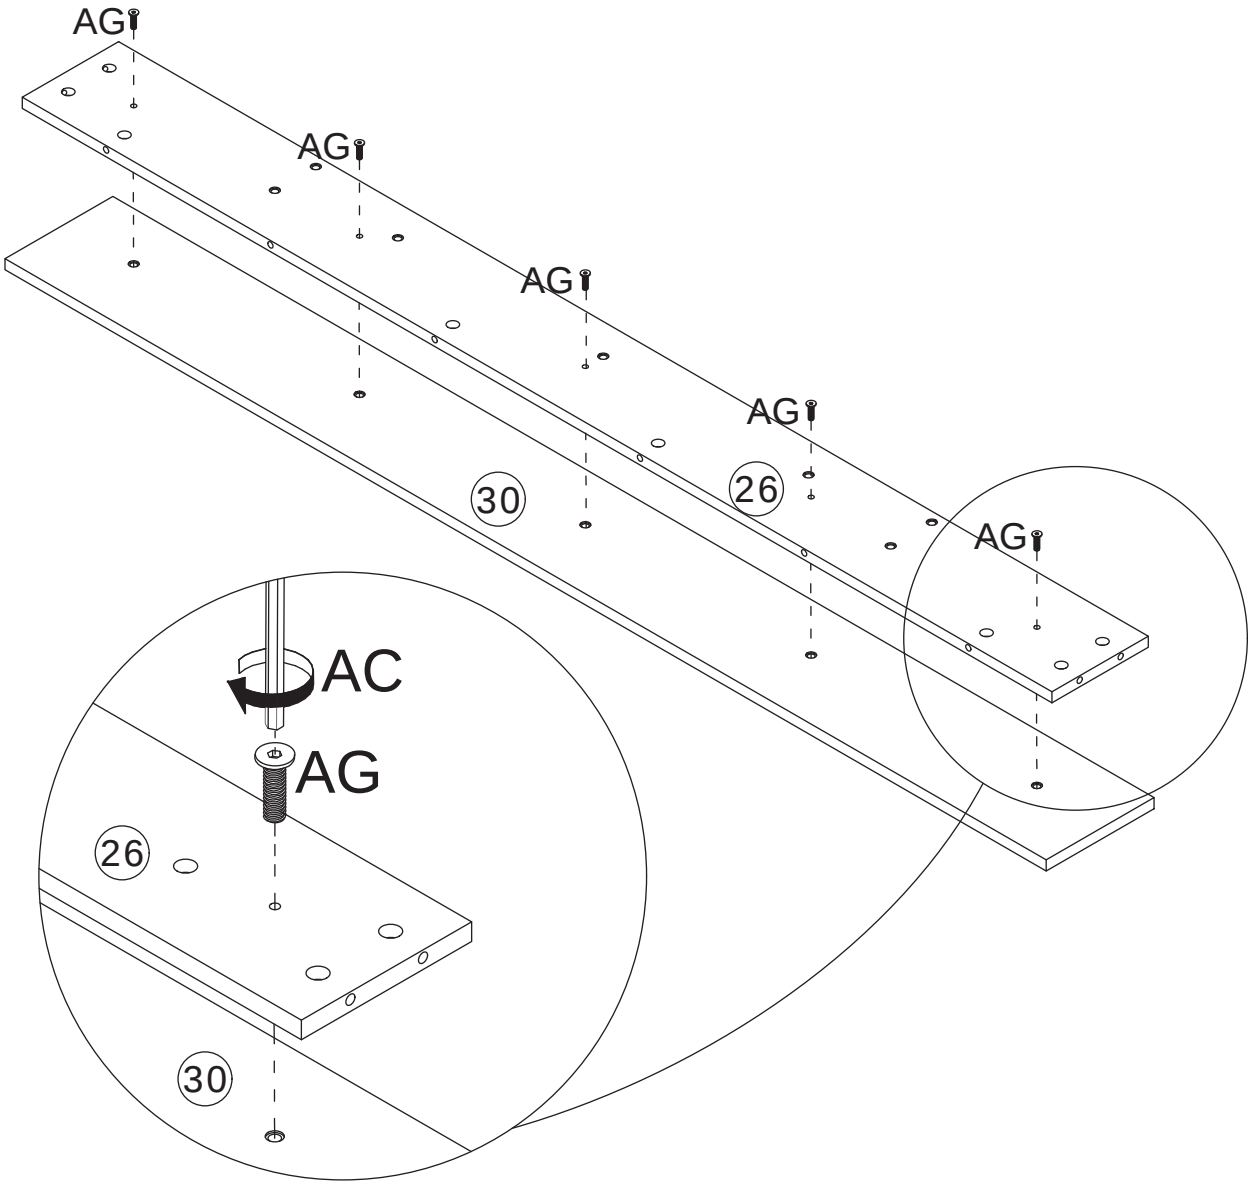


16

F x 4	AC x 1	
 CRG0660A	 M4	

Connect part (11) to Panel 28 with screws (F), and secure by turning part (AC) clockwise. Note the front and back sides of part (11).





Pay attention to the front-to-back orientation of part (11). The front and back are distinguished based on the diameter of the through hole.

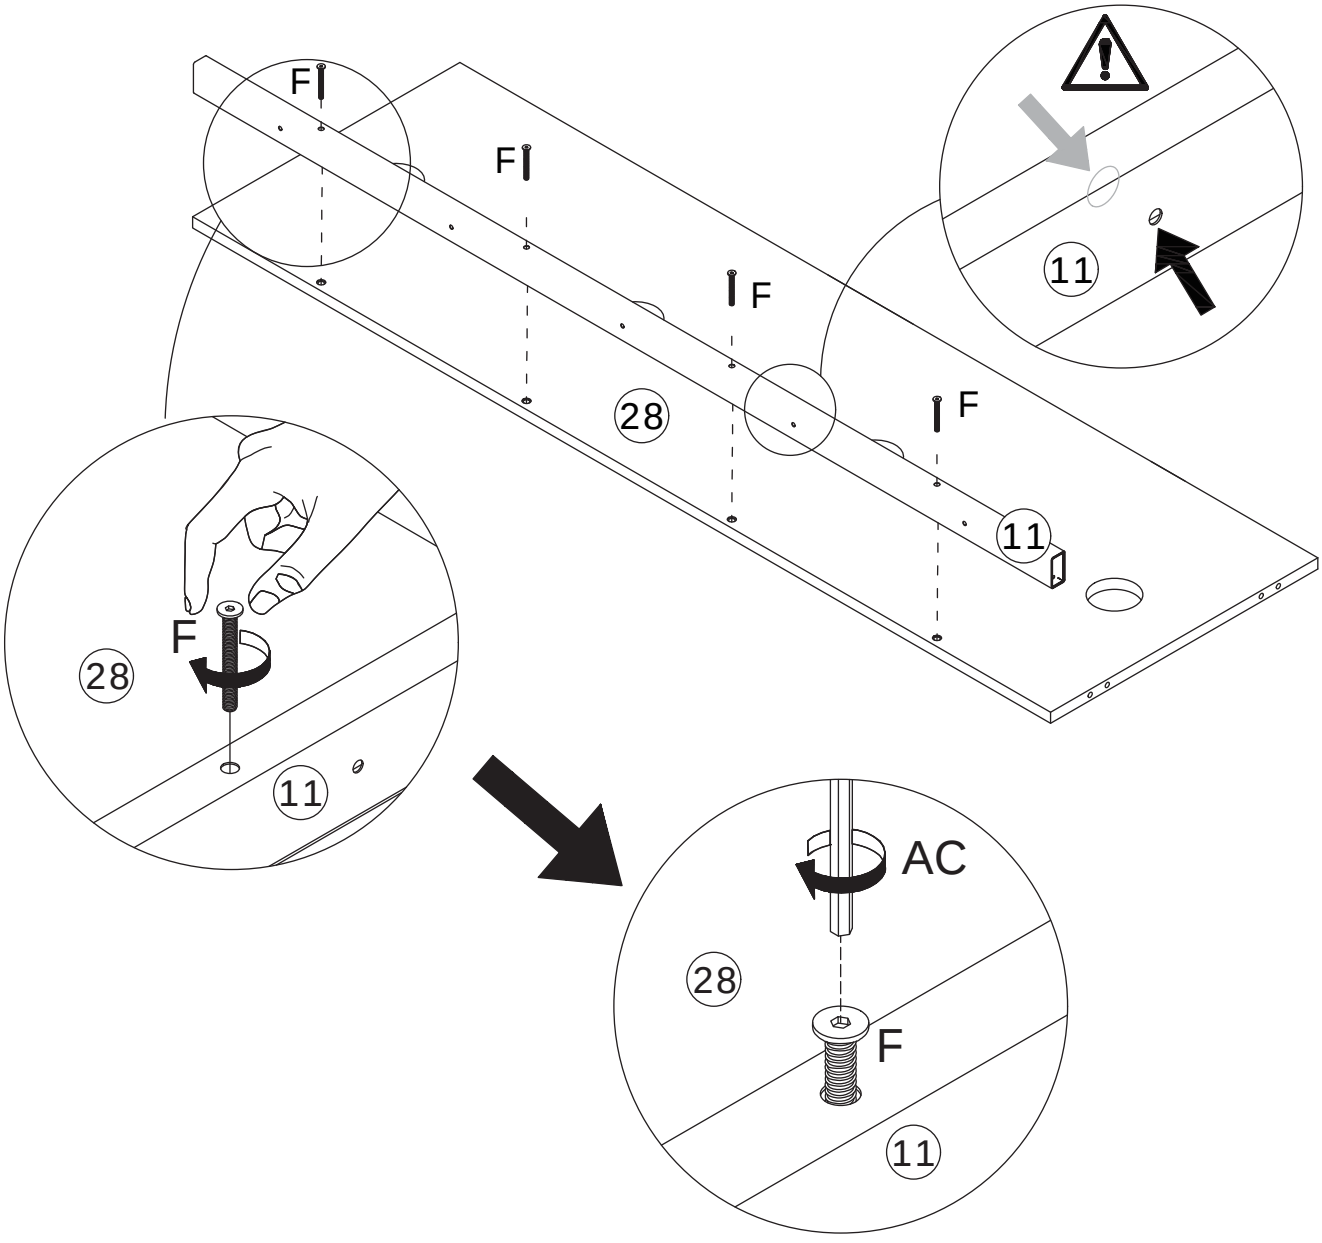

17

AX x 5




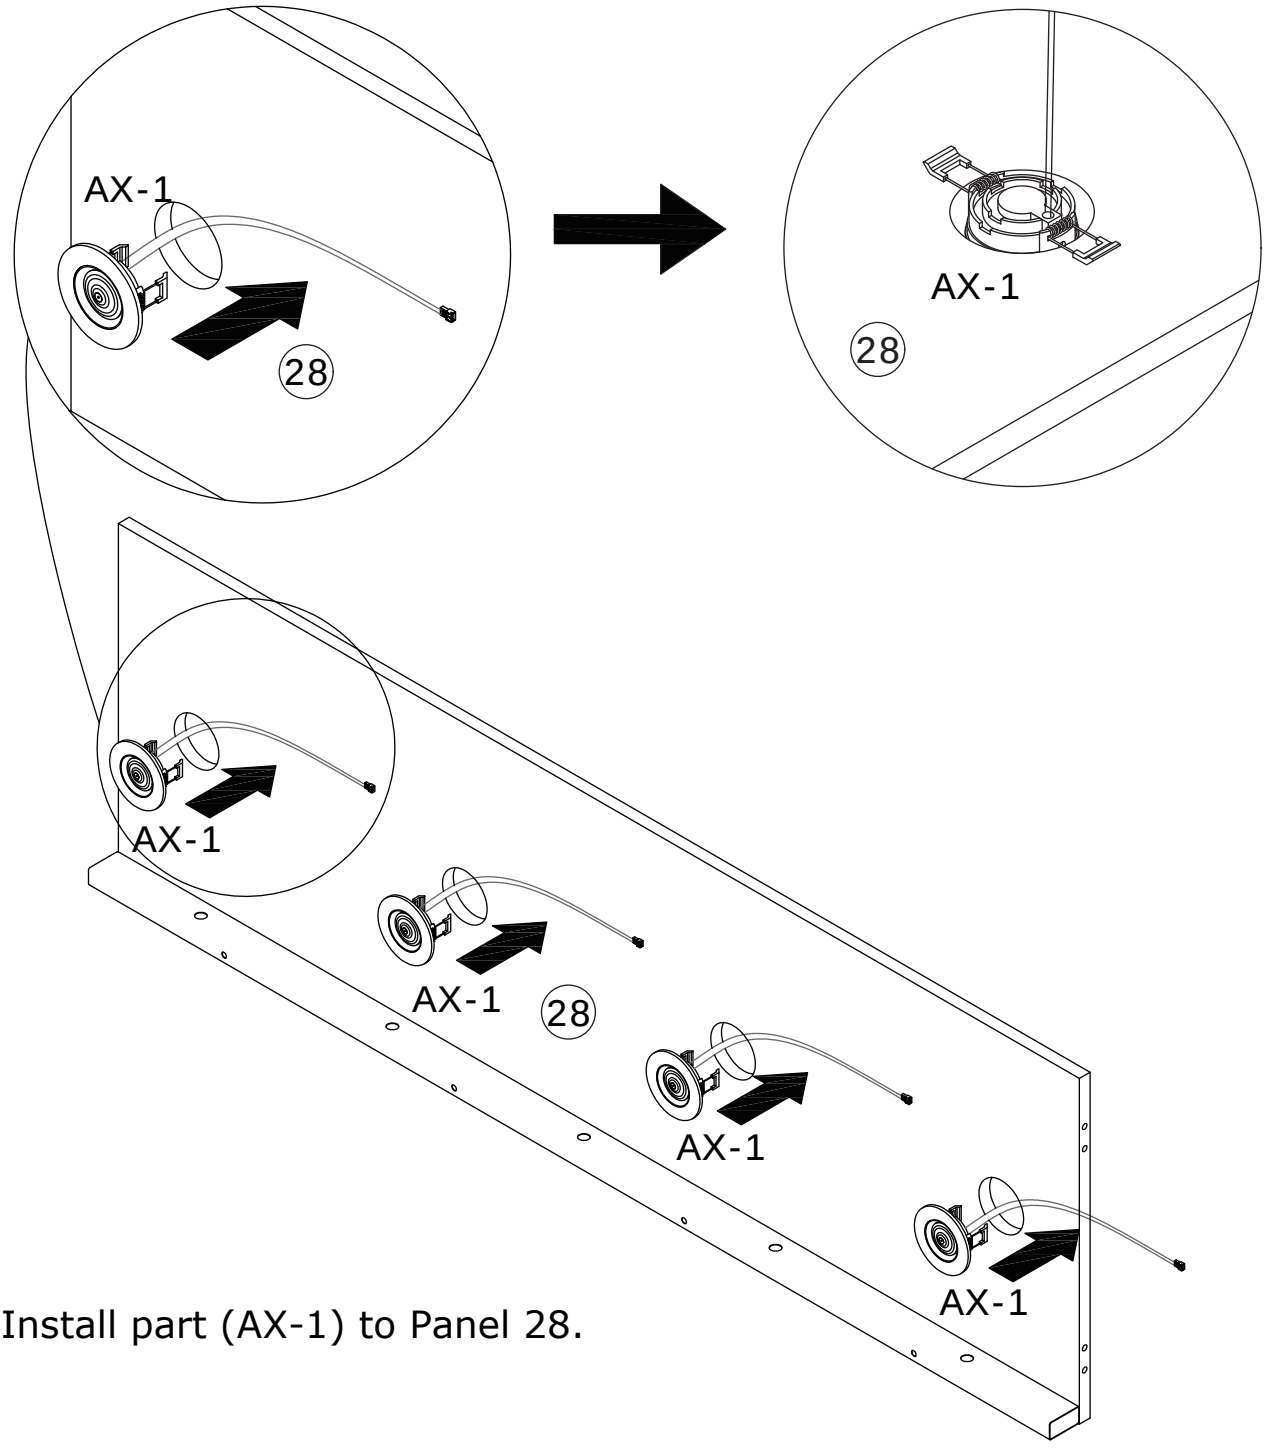


Install part (AX-1) to Panel 28.

18



AX x 1

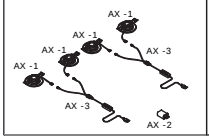


Connect part (AX-1) to part (AX-3), and connect part (AX-2) to part (AX-3).

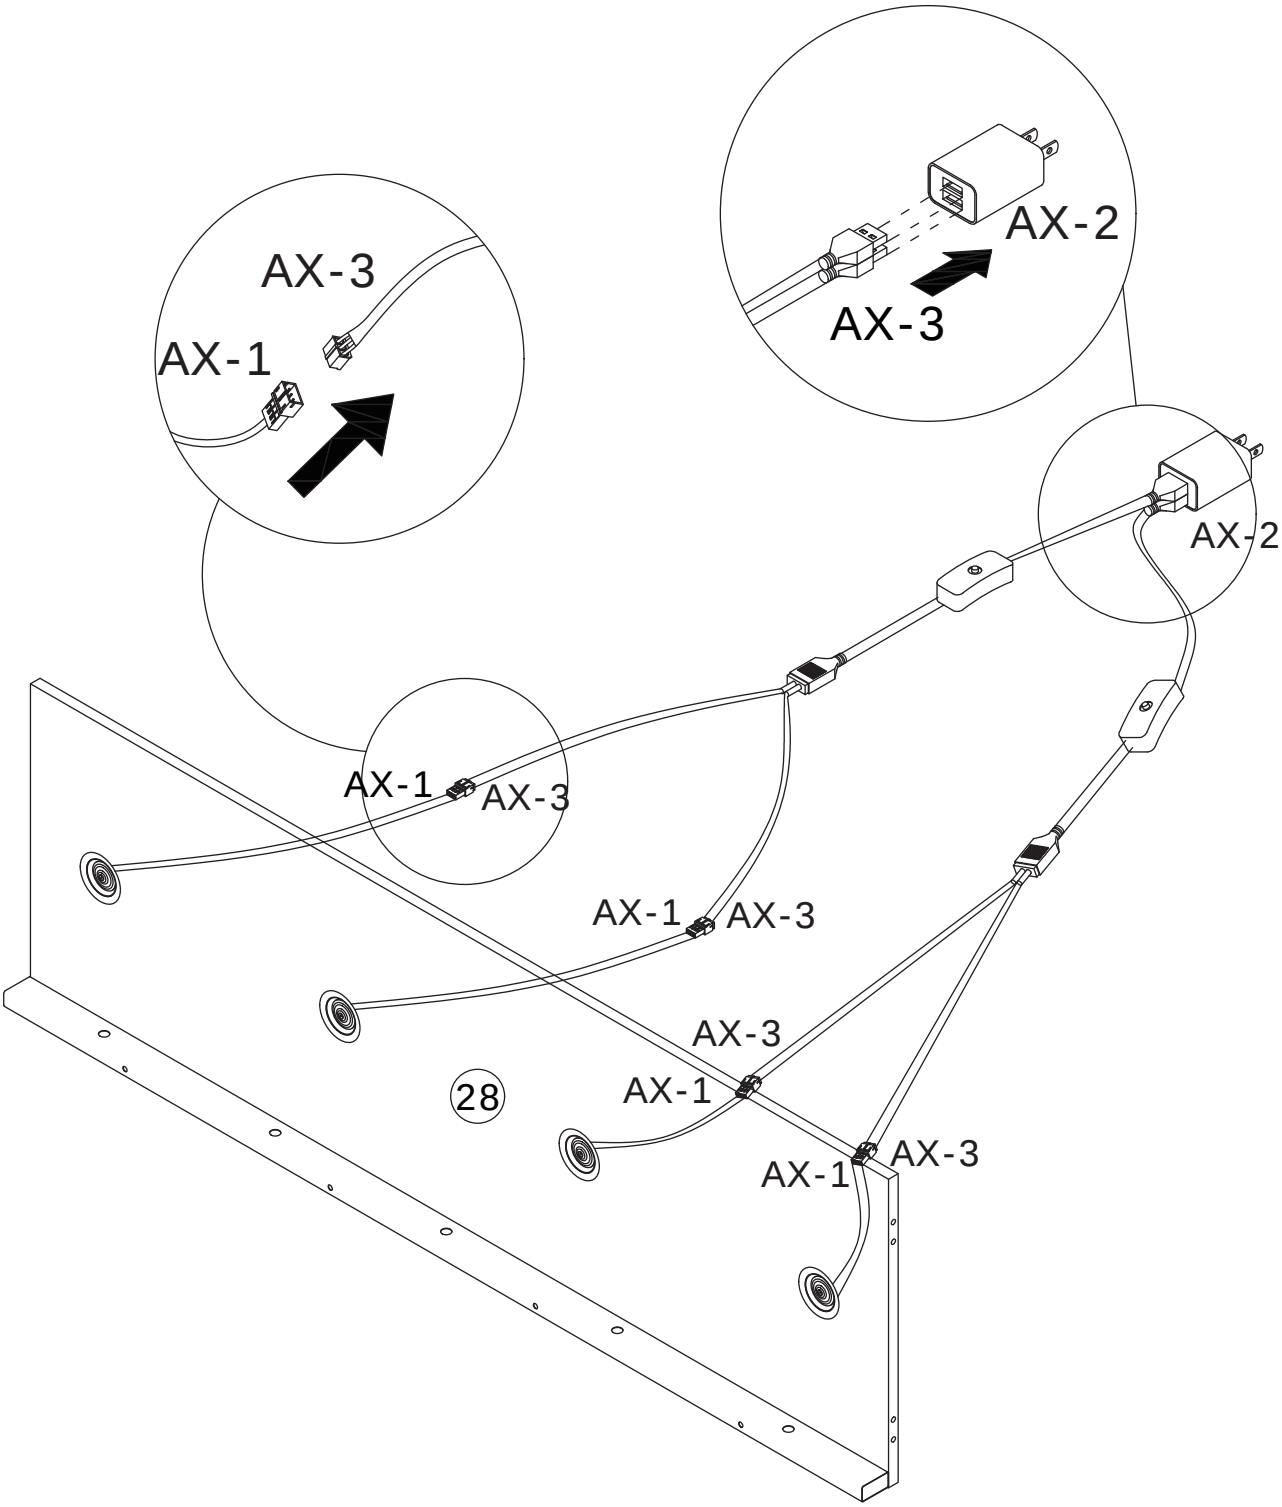



19

A x 4	K x 4	
 CRA0635B		


Insert threaded inserts (K) into the pre-drilled holes of Panel 28, then fasten cam screw (A) into the insert nuts.

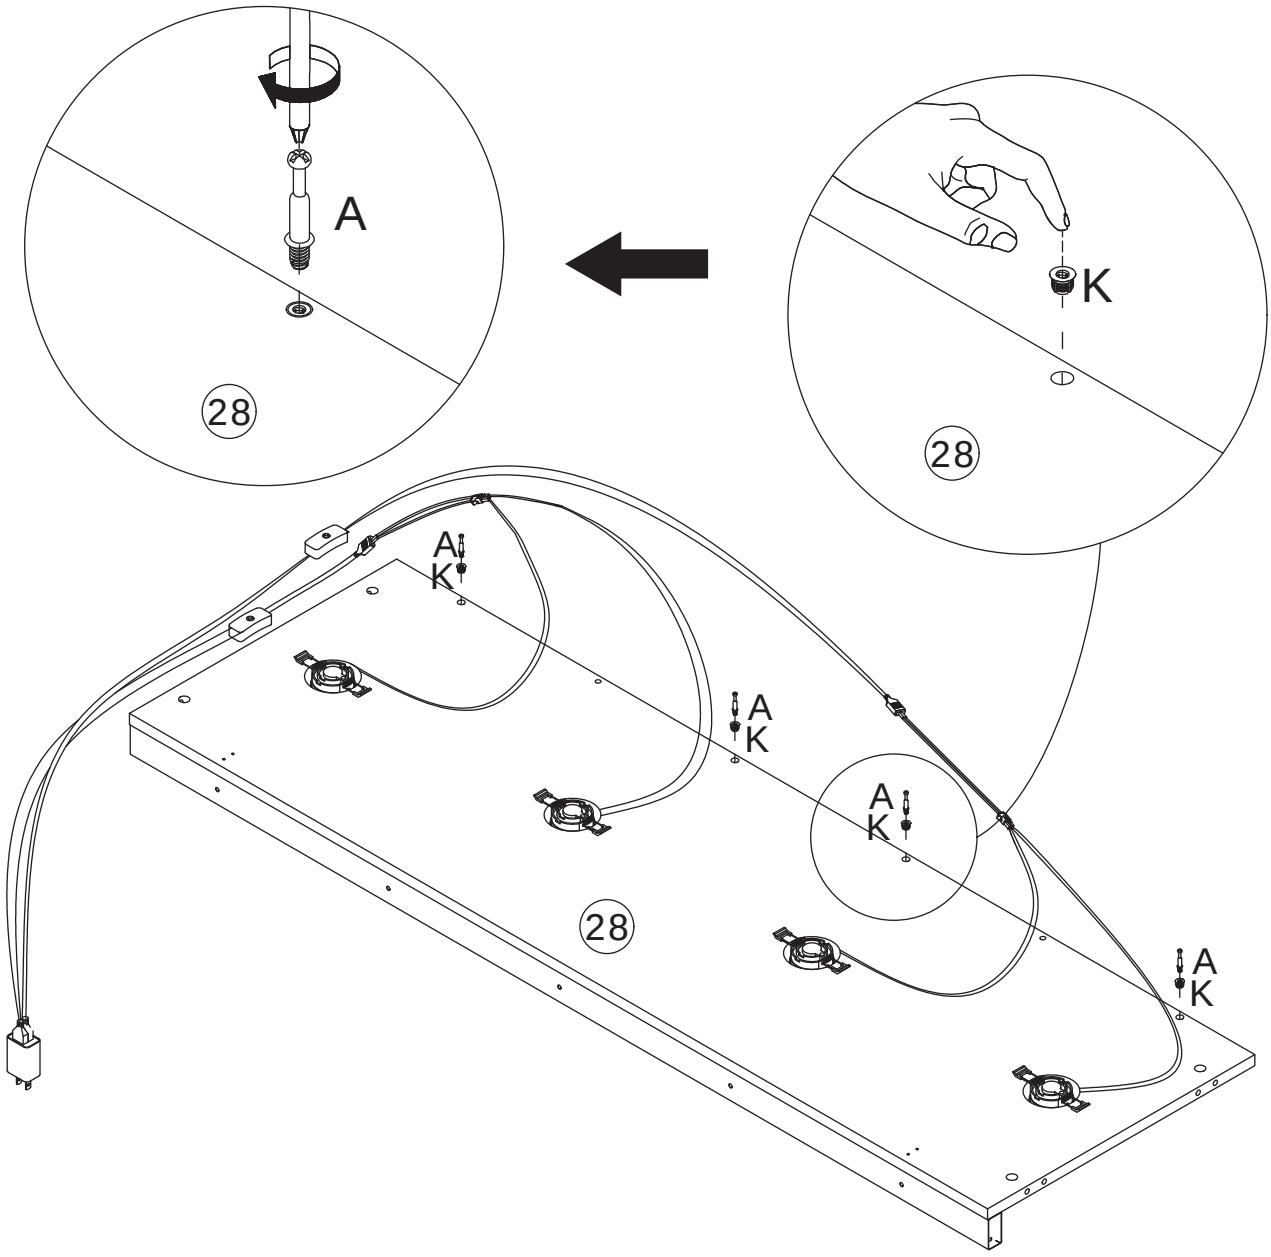



20

B x 4	C x 2	
		
CRB1595A	CRF0830A	

Connect Panel 26 to Panel 28 with dowel pins (C), fit cam lock (B) into position, then turn it clockwise to tighten.

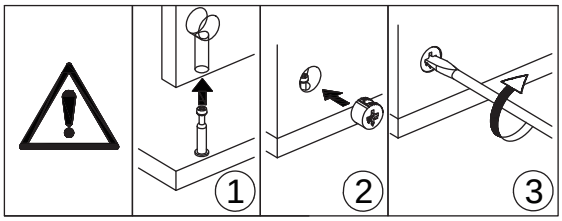


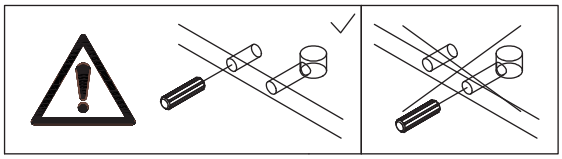

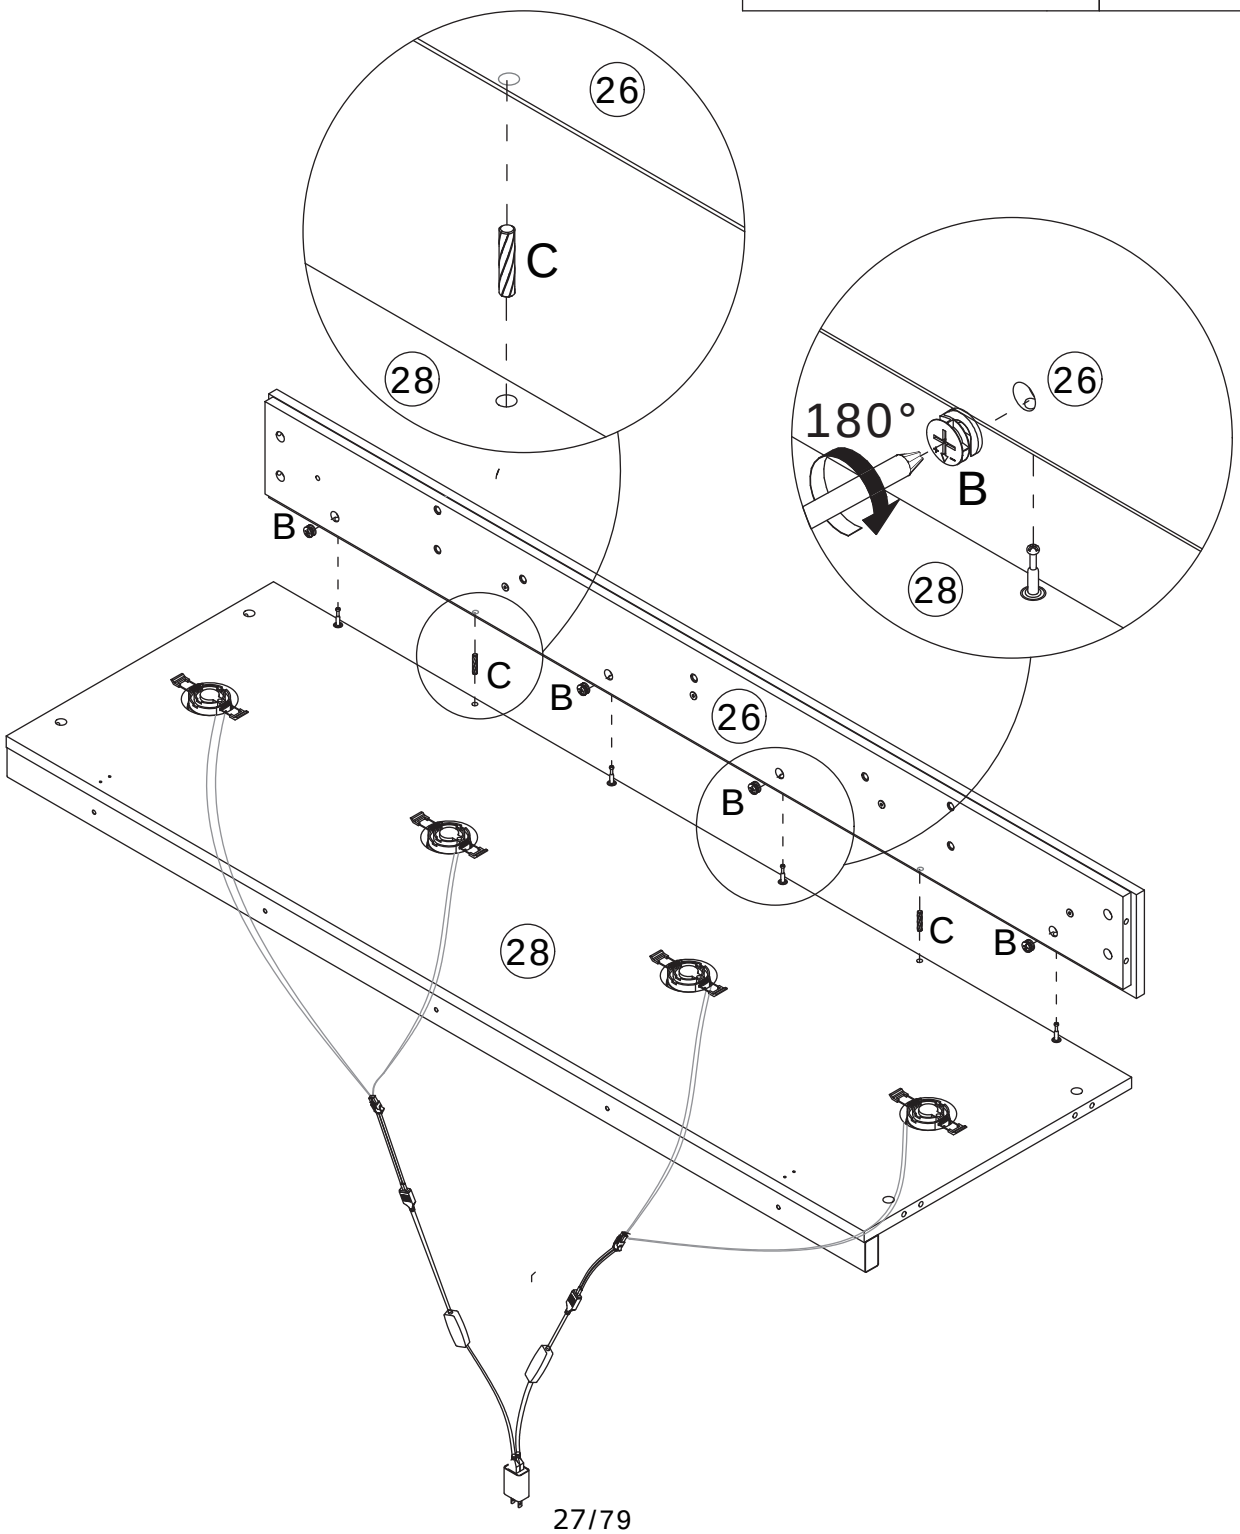


21


AY x 1

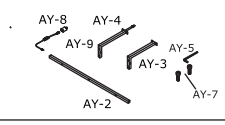

Connect part (AY-3) and (AY-4) to part (AY-2) with screws (AY-7), then connect part (AY-4) to part (AY-8), and part (AY-8) to part (AY-9) respectively.

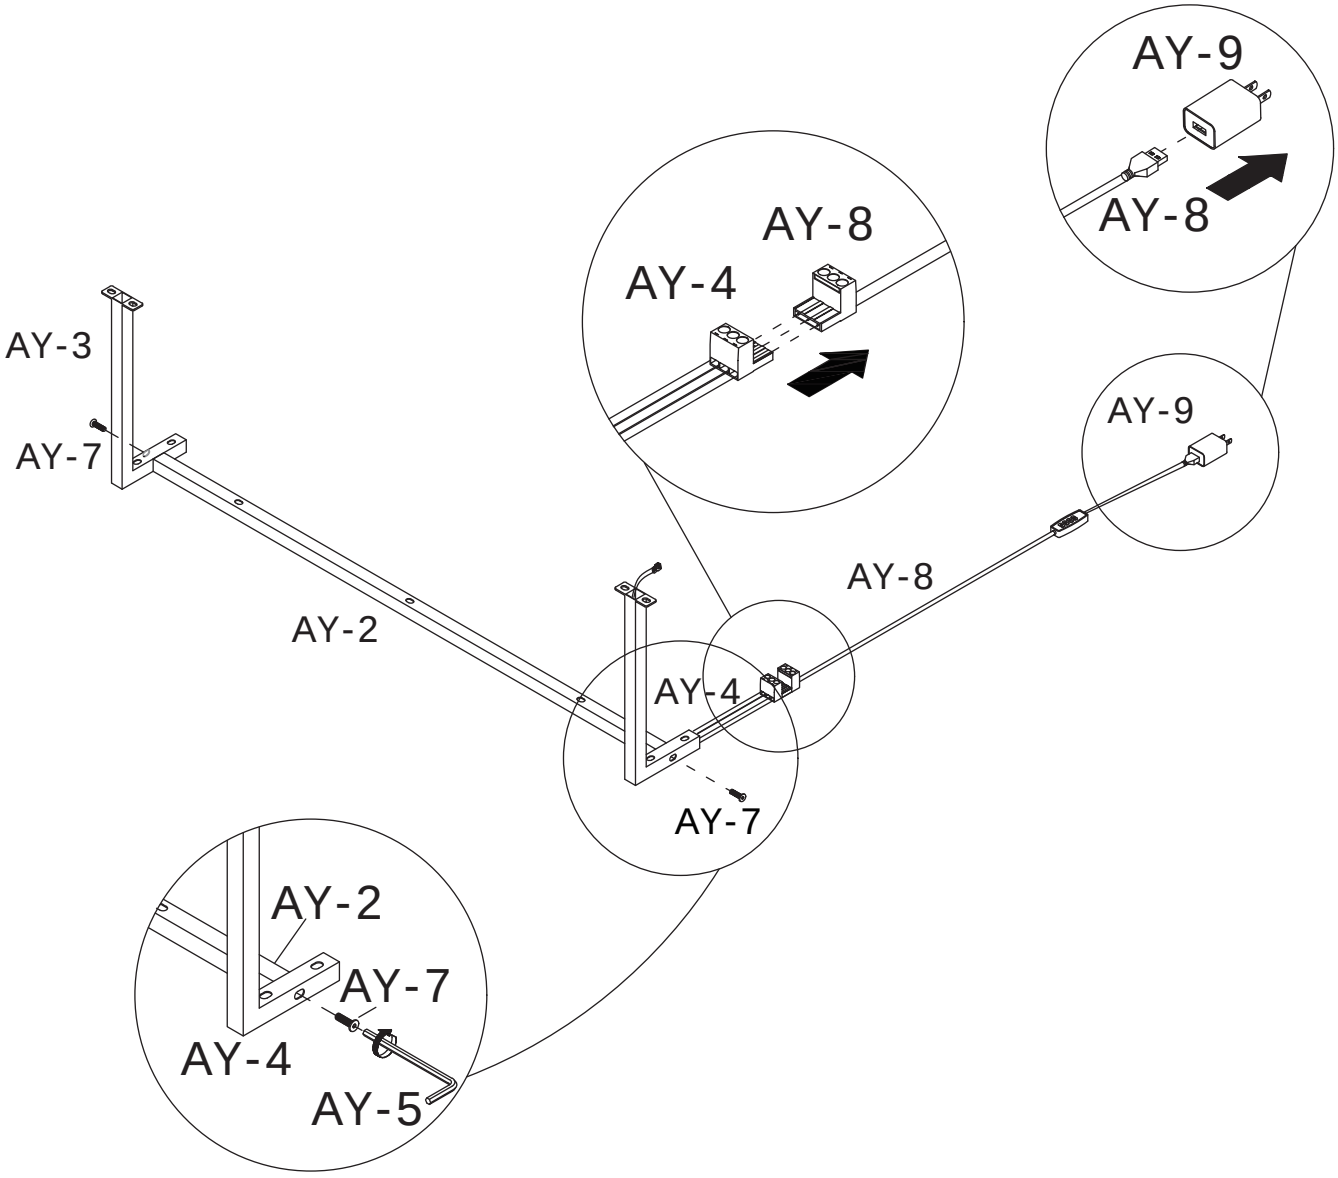


22

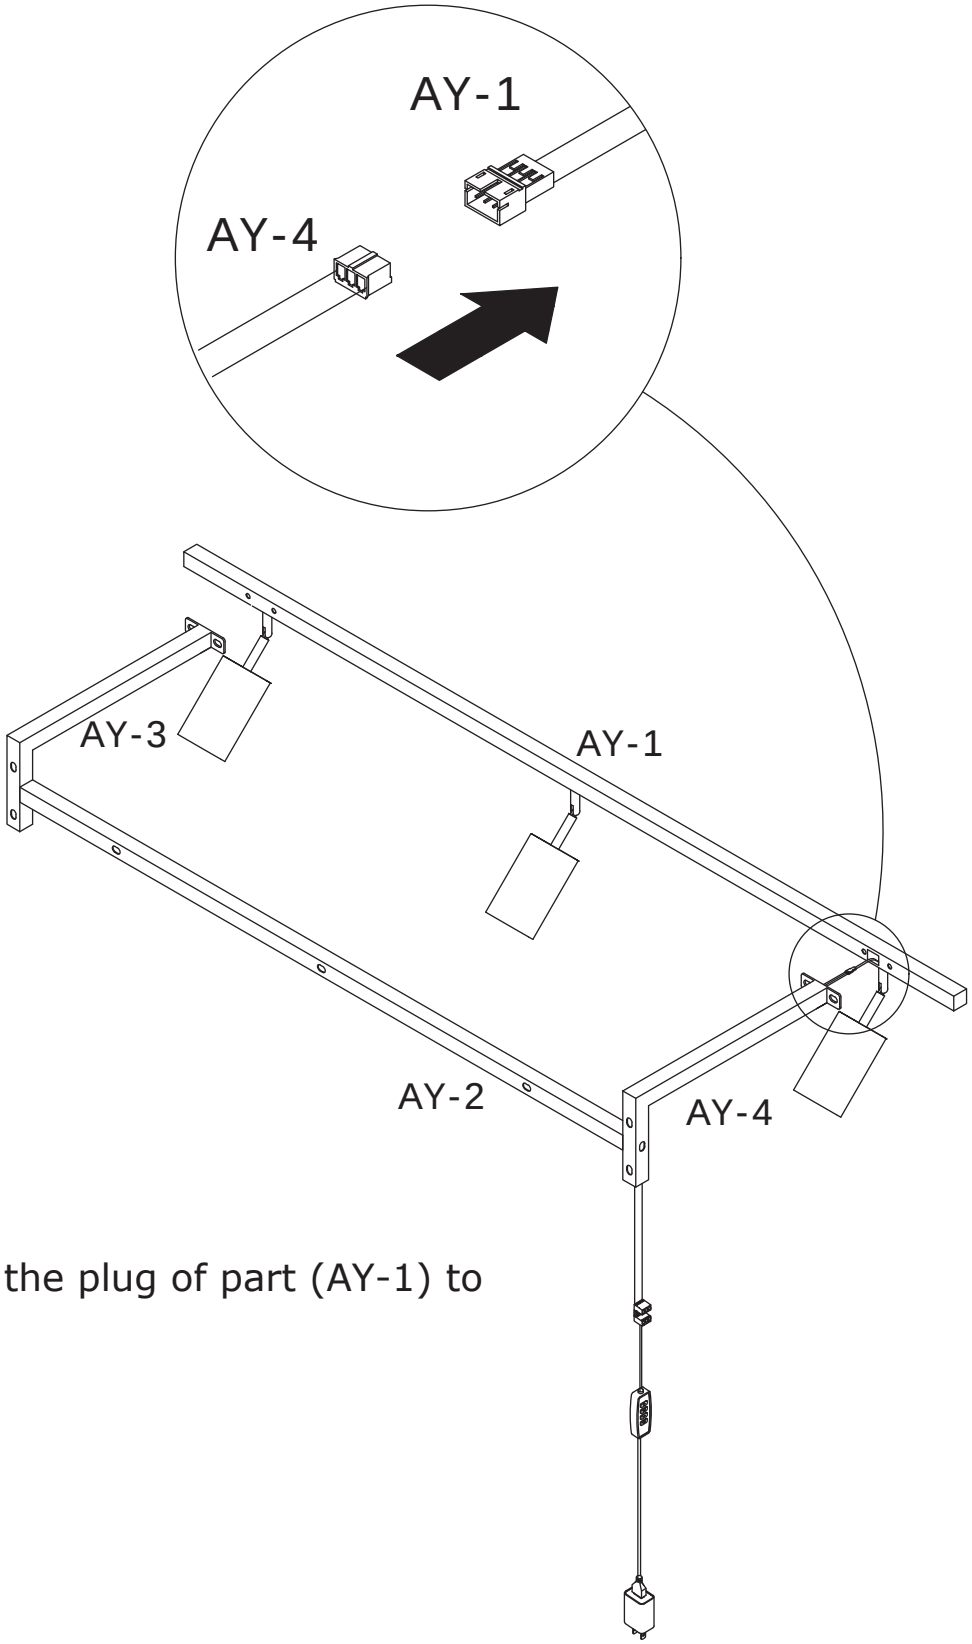



First connect the plug of part (AY-1) to part (AY-4).


23


AY x 1






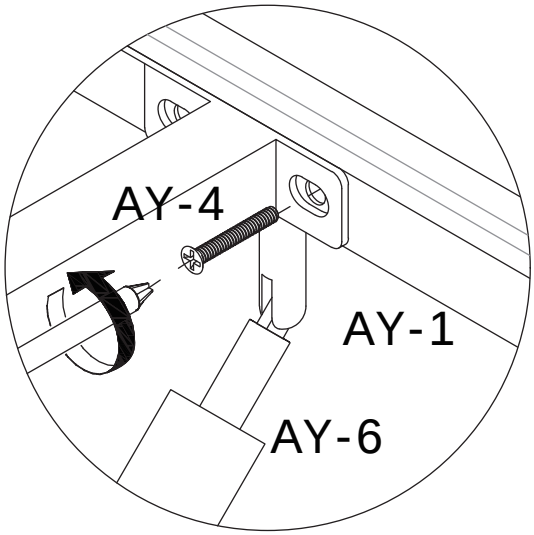


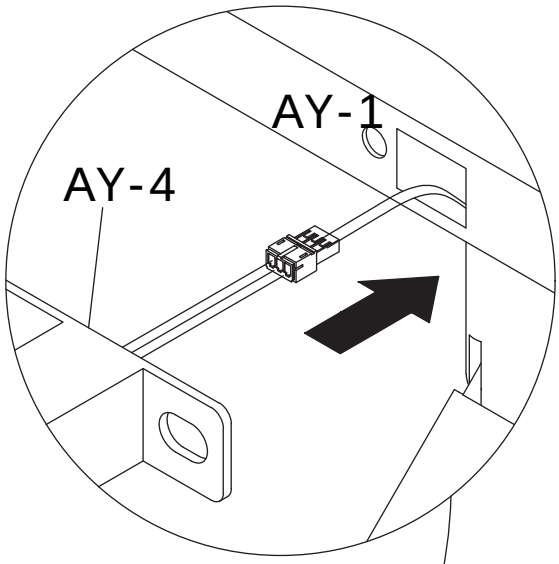

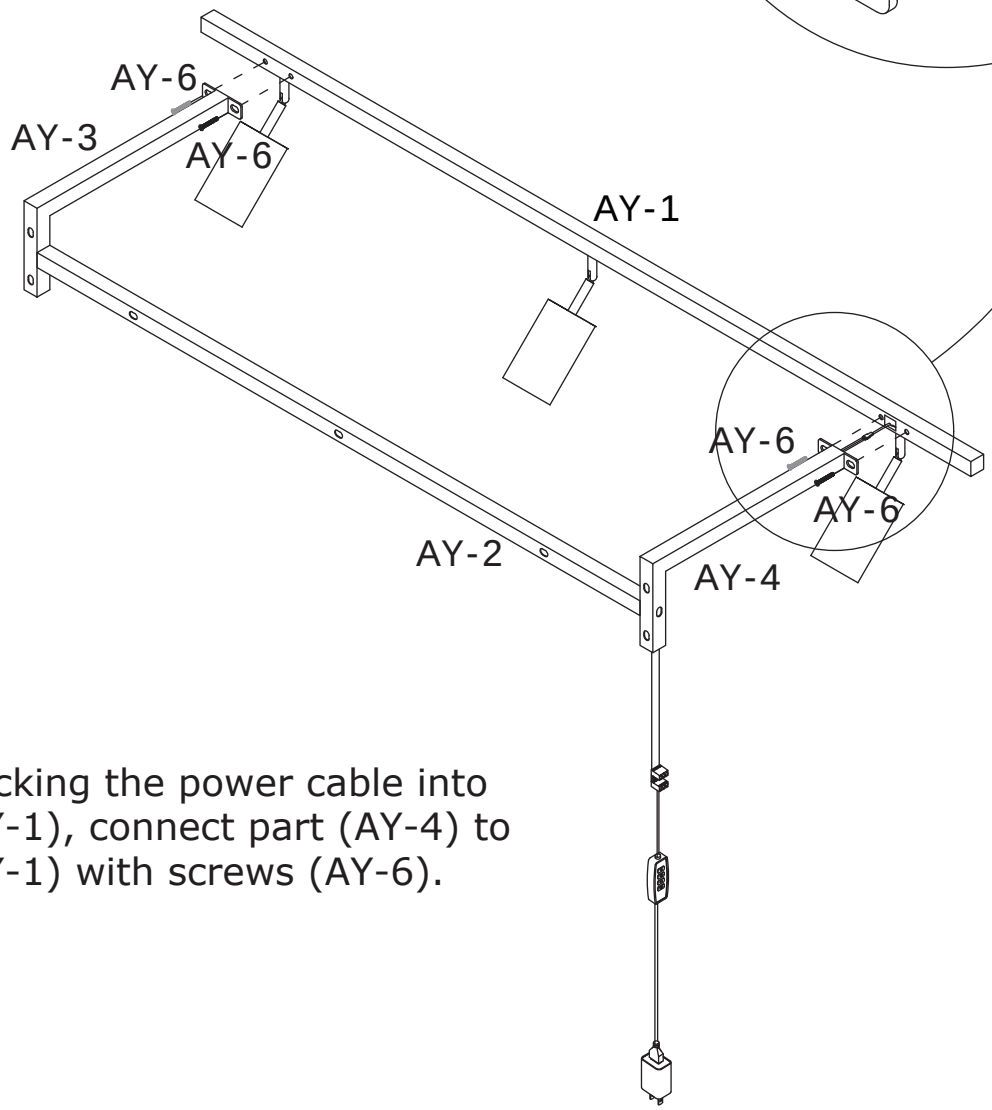


After tucking the power cable into part (AY-1), connect part (AY-4) to part (AY-1) with screws (AY-6).



24


AT x 7	AC x 1	
 CRG0630A	 M4	

Connect part (AY) to Panel 26 with screws (AT).

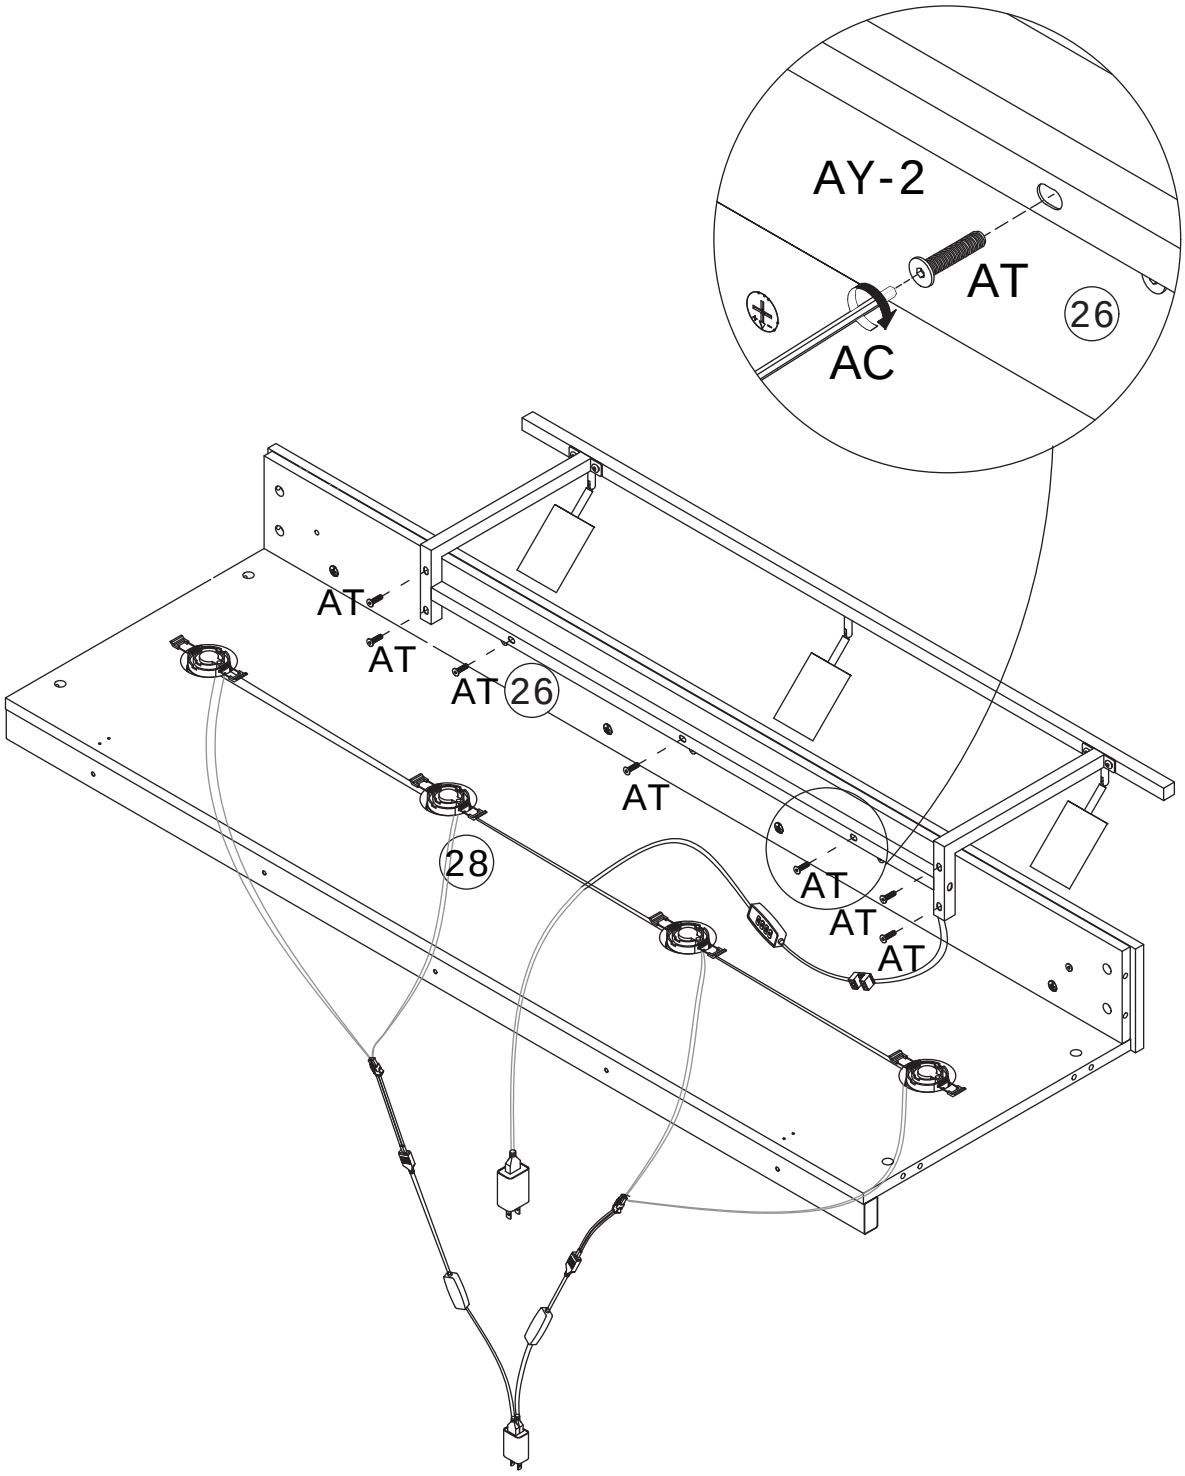


25



A x 4	K x 4	
 CRA0635B		

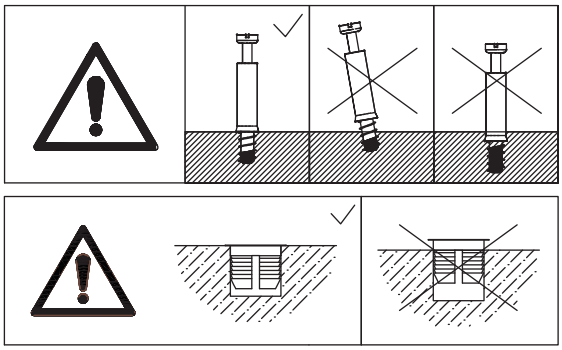


Insert threaded inserts (K) into the pre-drilled holes of Panel 5, then fasten cam screw (A) into the insert nuts.

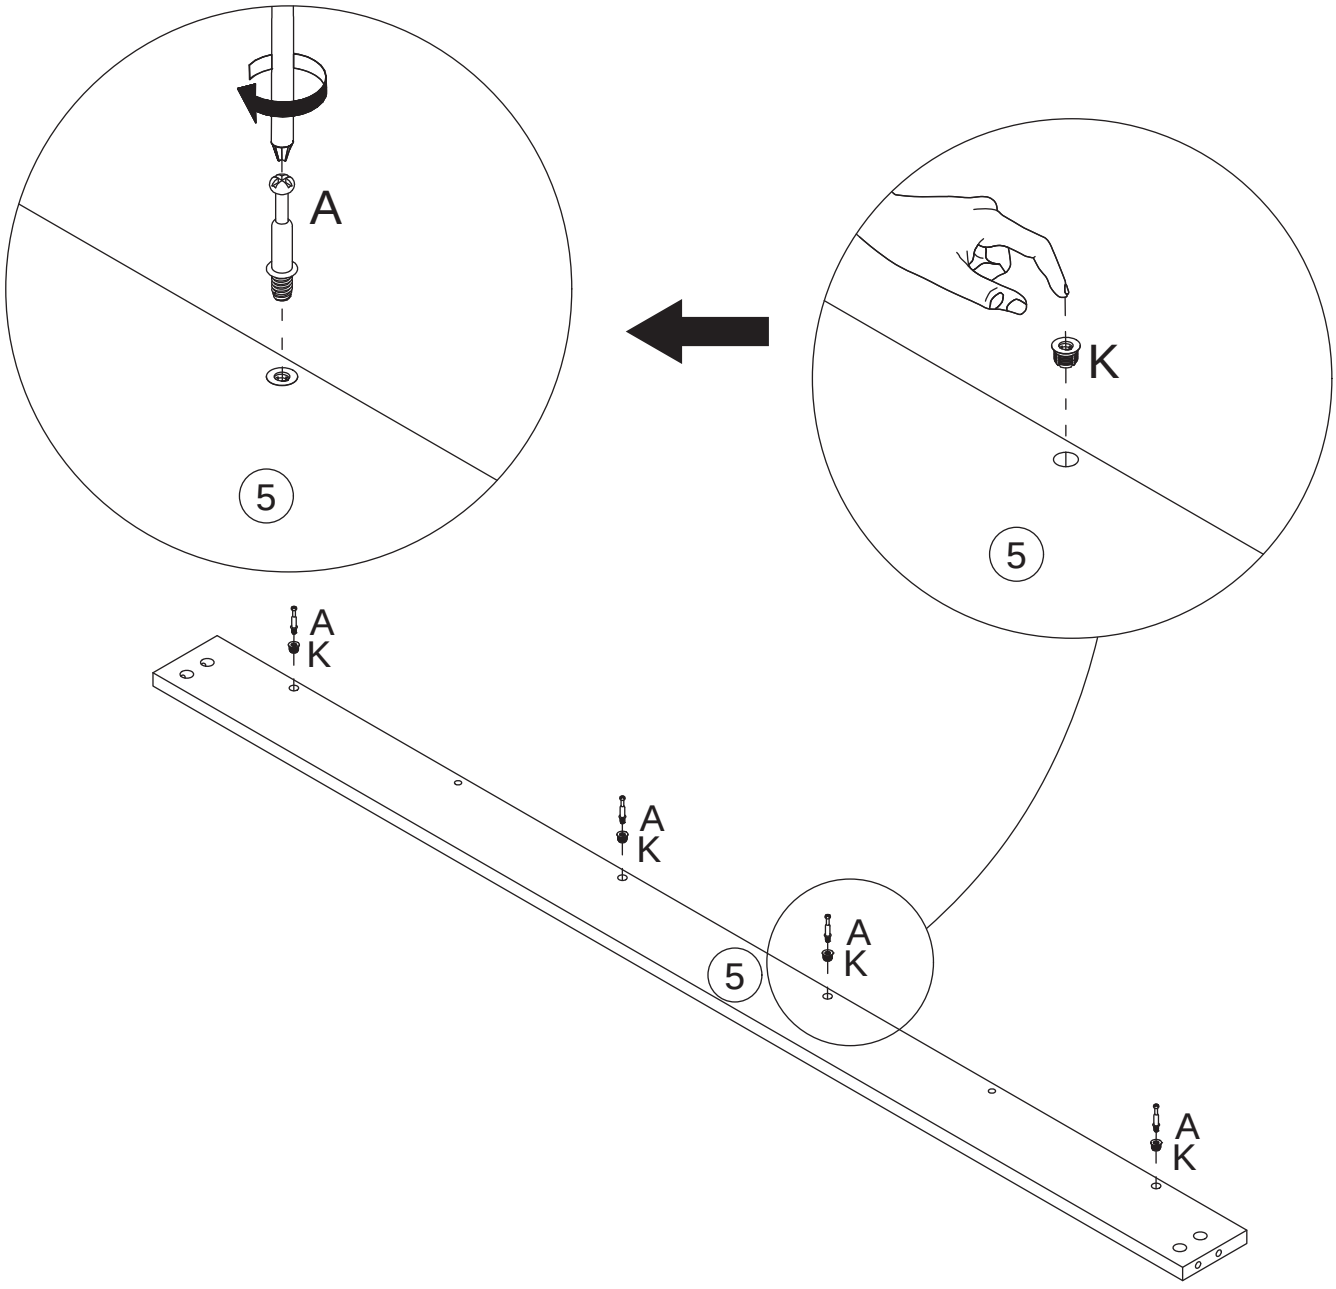


26



B x 4	C x 2	
		
CRB1595A	CRF0830A	

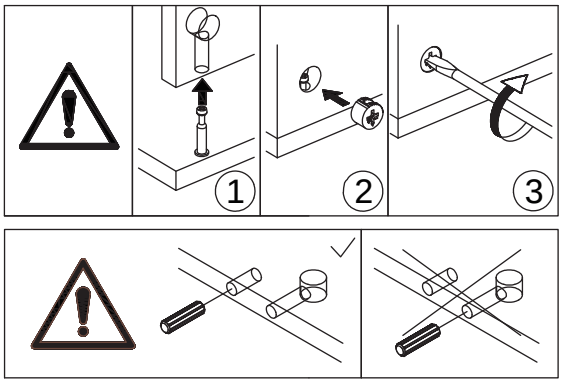



Connect Panel 24 to Panel 5 with dowel pins (C), fit cam lock (B) into position, then turn it clockwise to tighten.

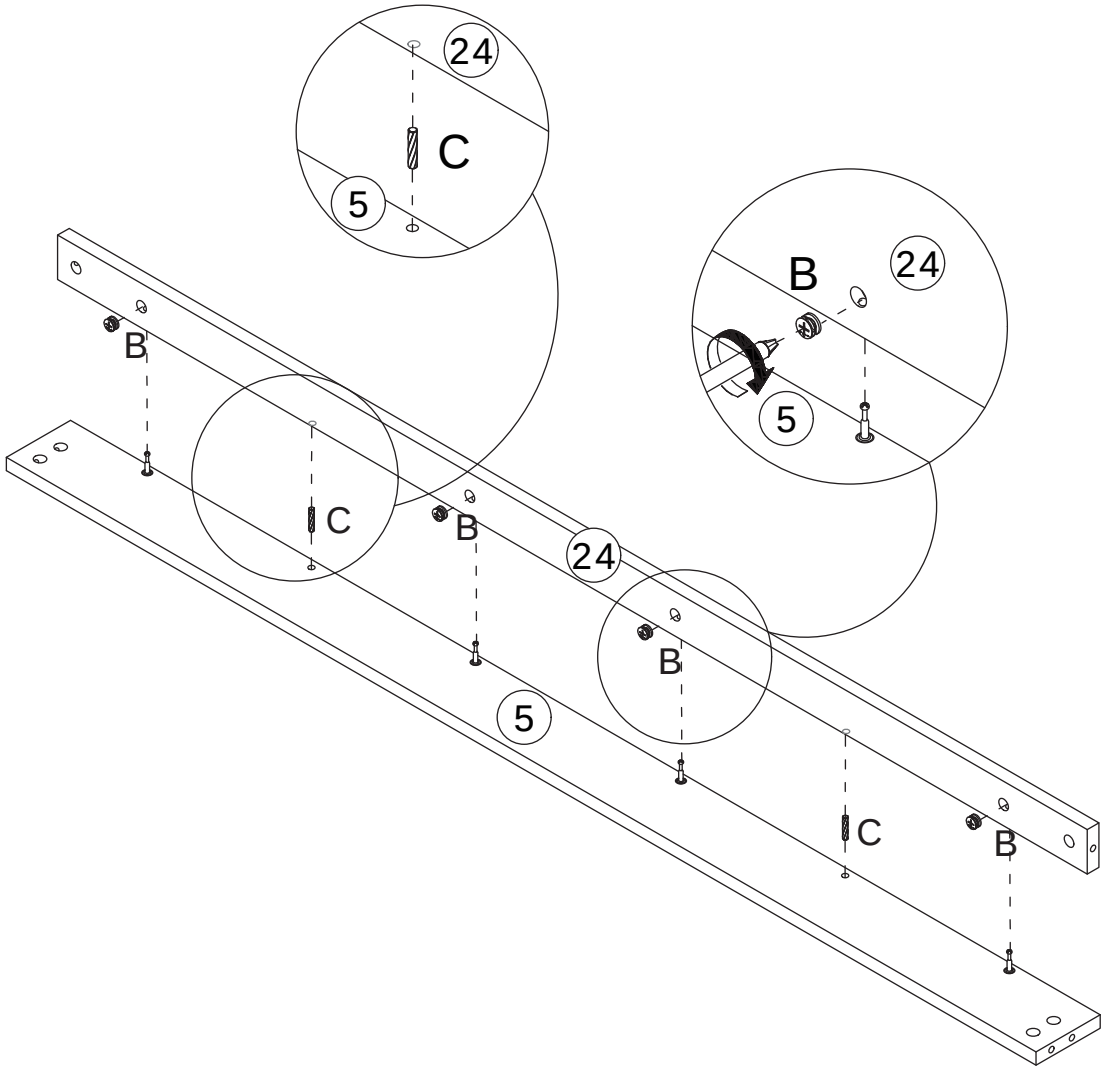


27


B x 4	C x 4	
		
CRB1595A	CRF0830A	

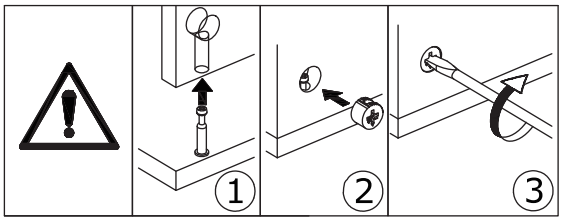


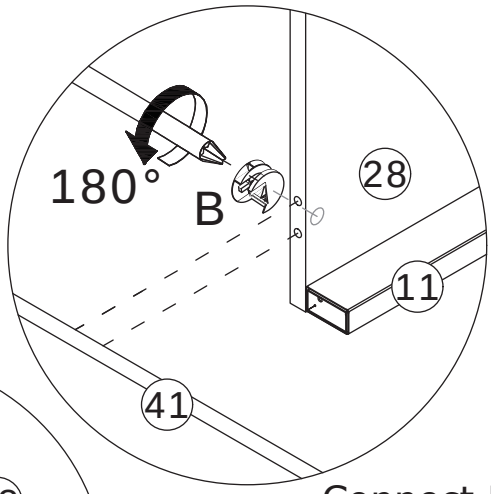


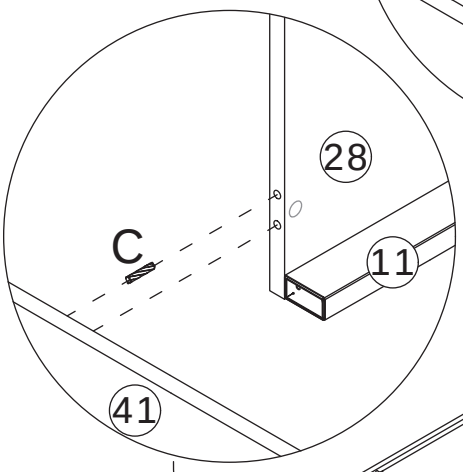



Connect Panels 28 and 42 to Panel 41 with dowel pins (C), fit cam lock (B) into position, then turn it clockwise to tighten.

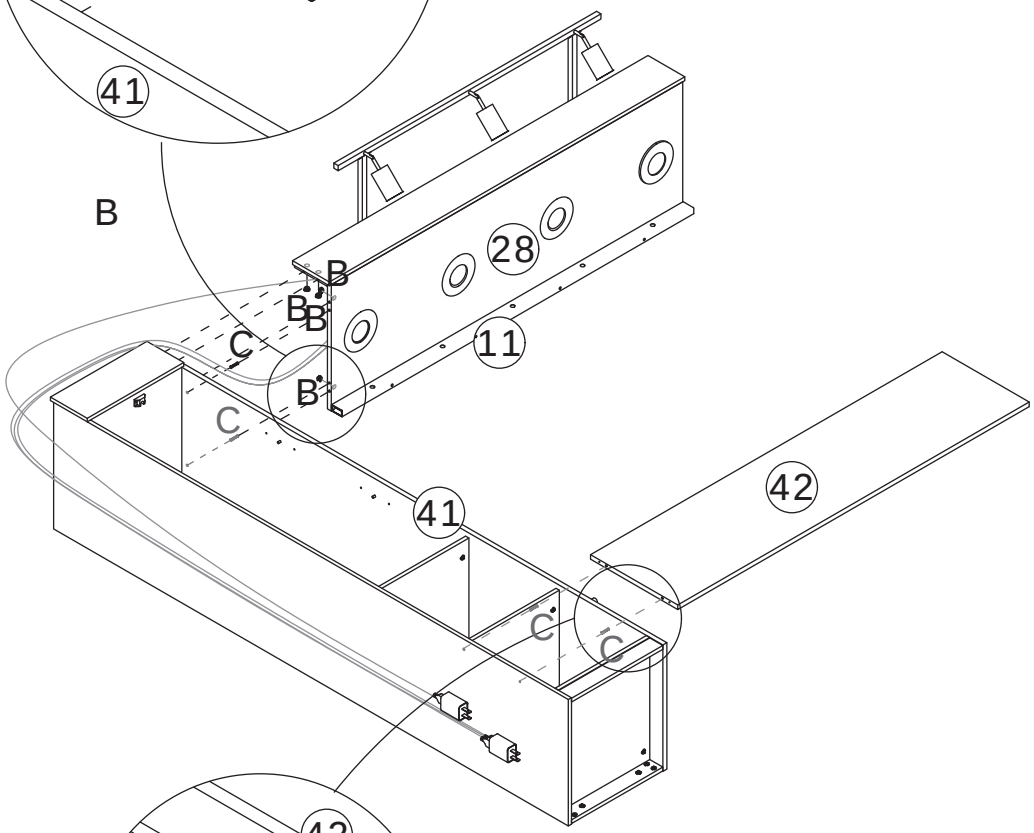


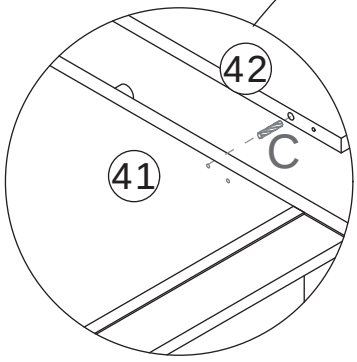

28

B x 10	C x 4	
		
CRB1595A	CRF0830A	



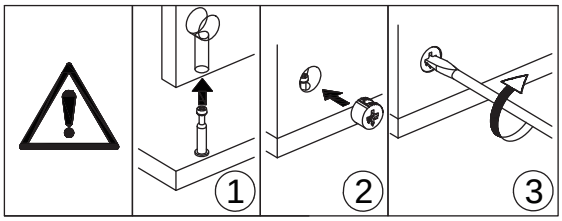


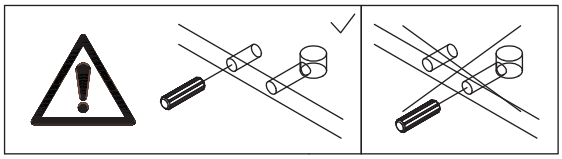


Note: hold Panel 24 by hand during installation to prevent damage to the panel.

Connect Panels 28 and 42 to Panel 40 with dowel pins (C), fit cam lock (B) into position, then turn it clockwise to tighten.
Then connect Panel 24 to Panels 40 and 41, fit cam lock (B) into position, then turn it clockwise to tighten.

29



D x 4	P x 4	AC x 1	
			
CRC0540A	CRG0635A	M4	

Secure parts (12) and (11) to Panels 40 and 41 with screws (P).
Secure Panel 42 to Panels 40 and 41 with screws (D).

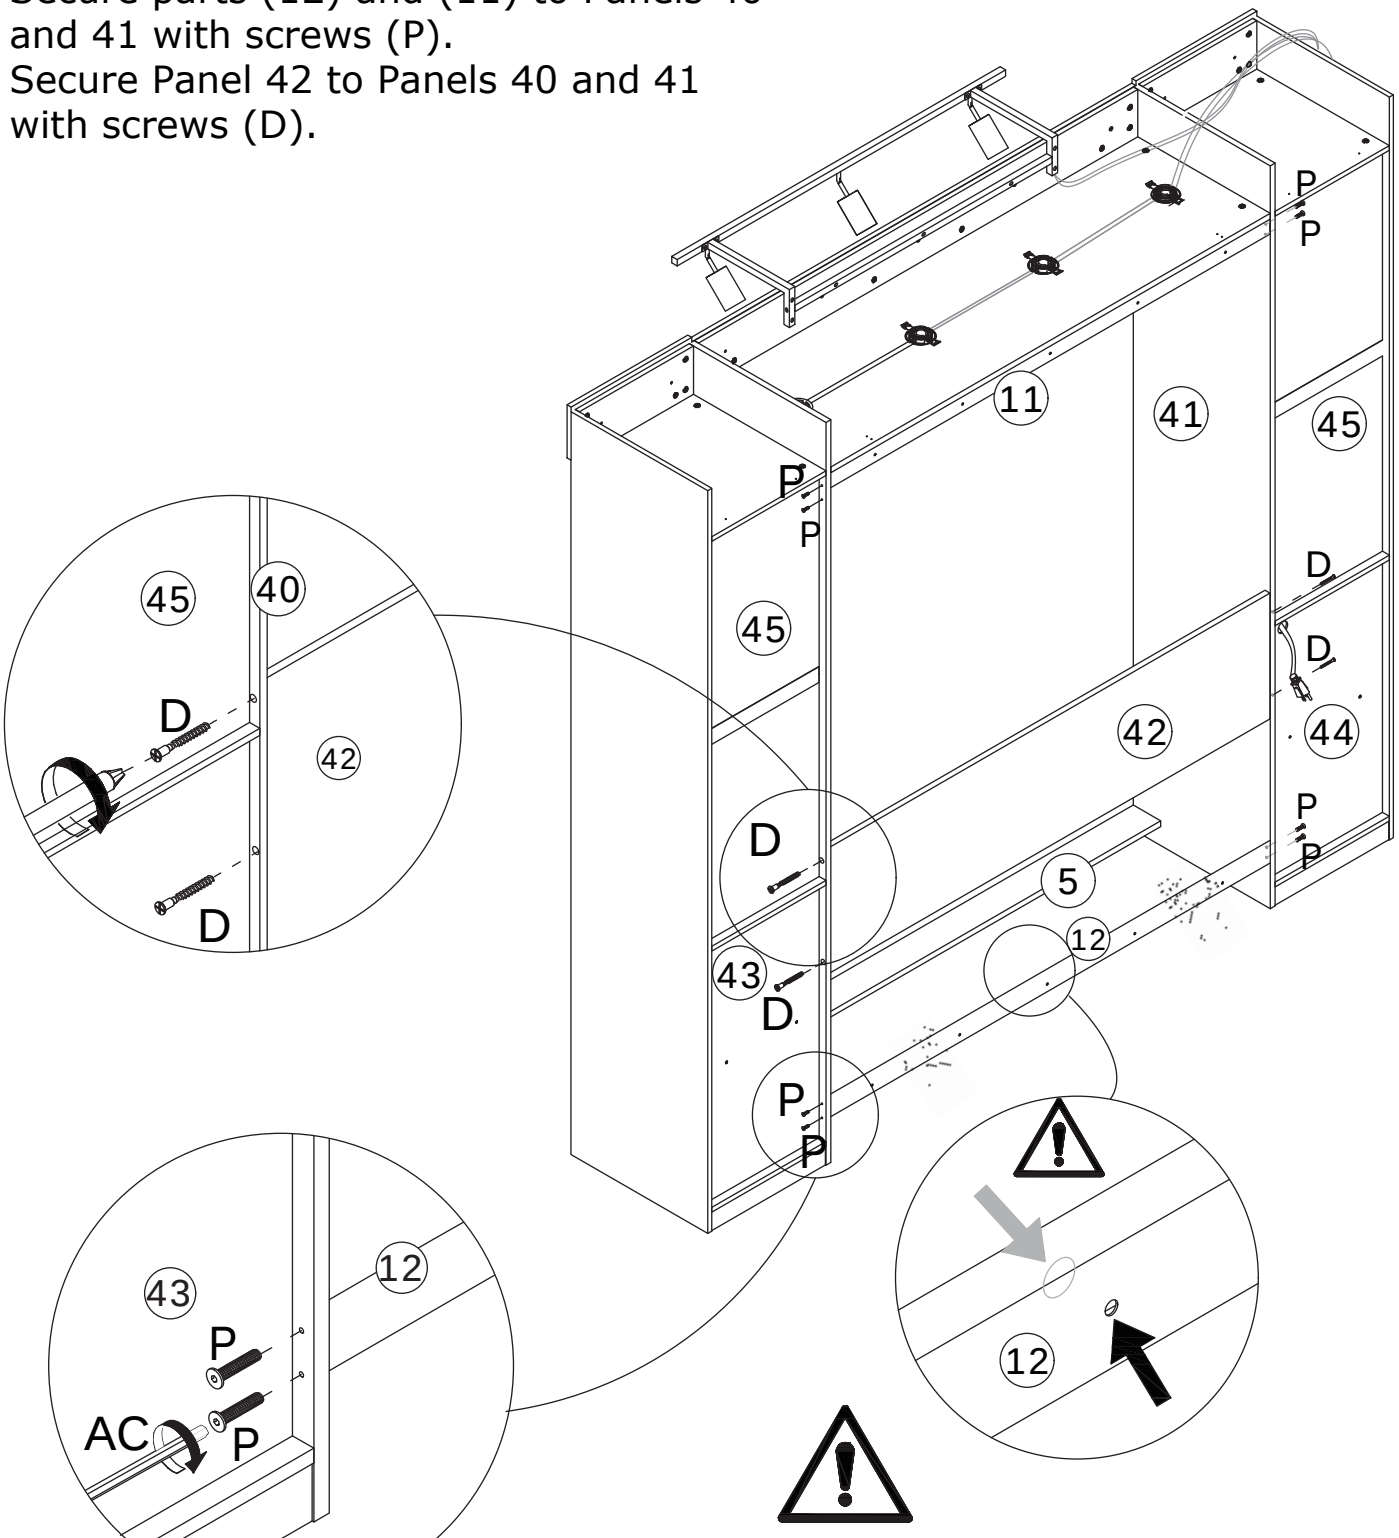


Pay attention to the front-to-back orientation of part (12); use the diameter of the through hole to distinguish between the front and back.

30


AA x 44	AN x 44	AZ x 8	
 CRD0314A			

Insert clips (AN) into the back slots and secure with screws (AA).
Use part (AZ) to secure the power cables of parts (AX) and (AY) to Panels 28 and 29.

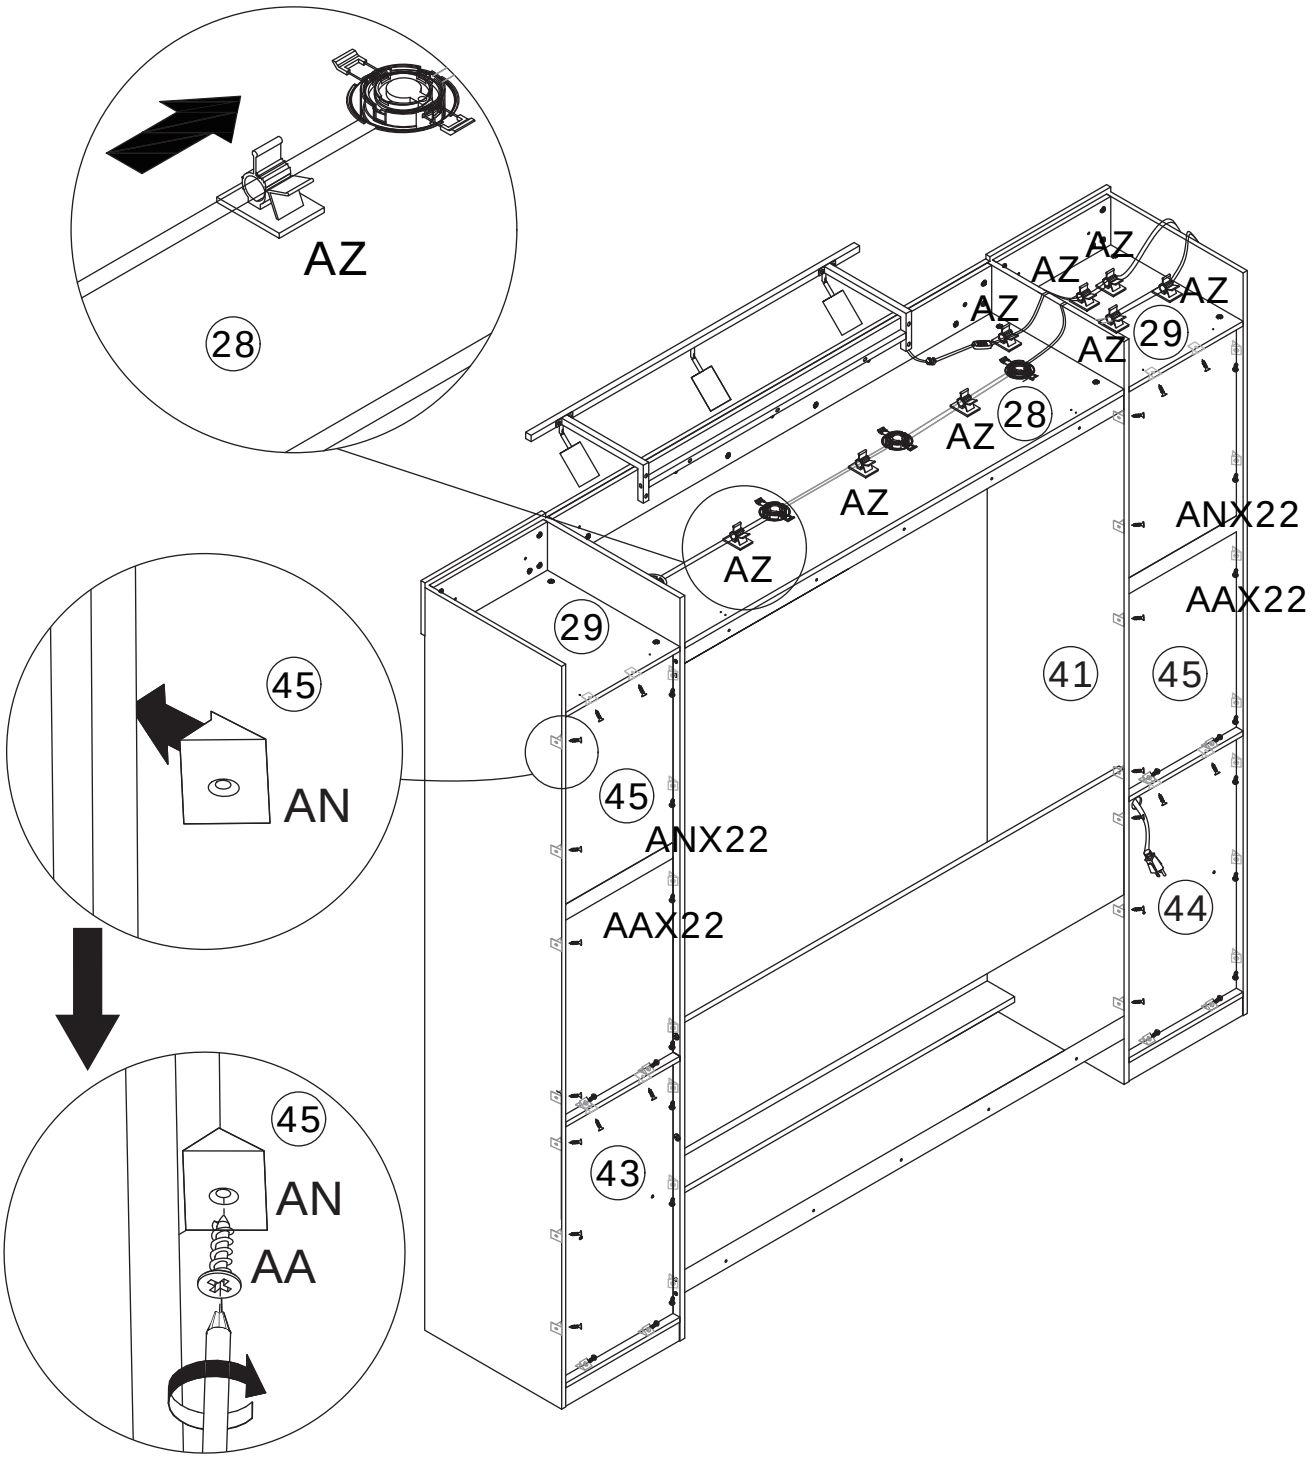


If there is a keel inside the wall, please select Option A
If there is no keel inside the wall, please select Option B.


Option A

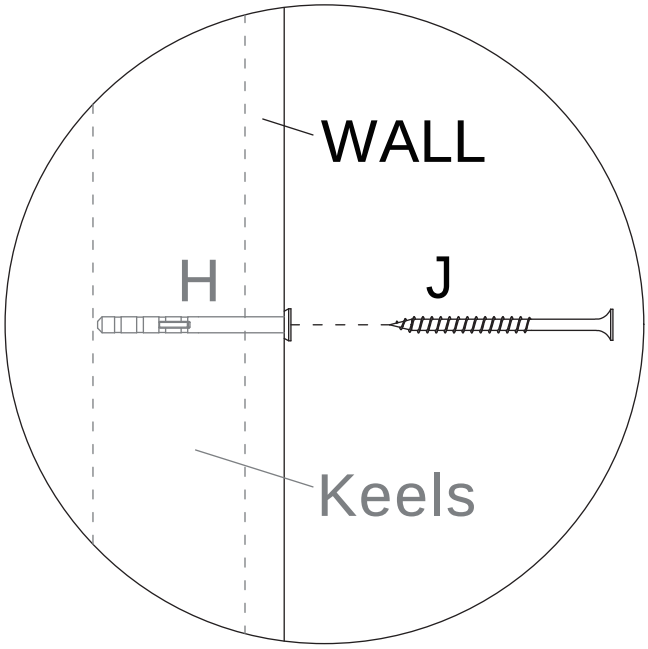


Option B

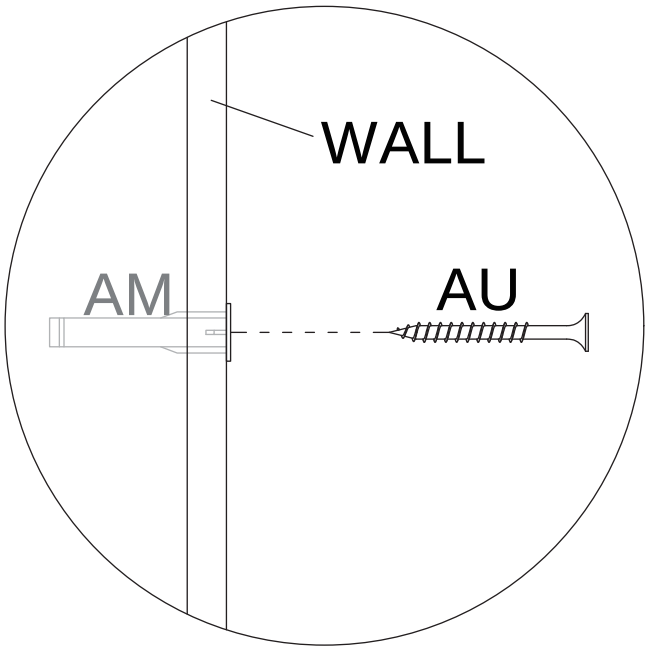

31

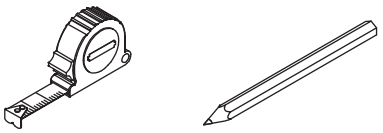


Option A

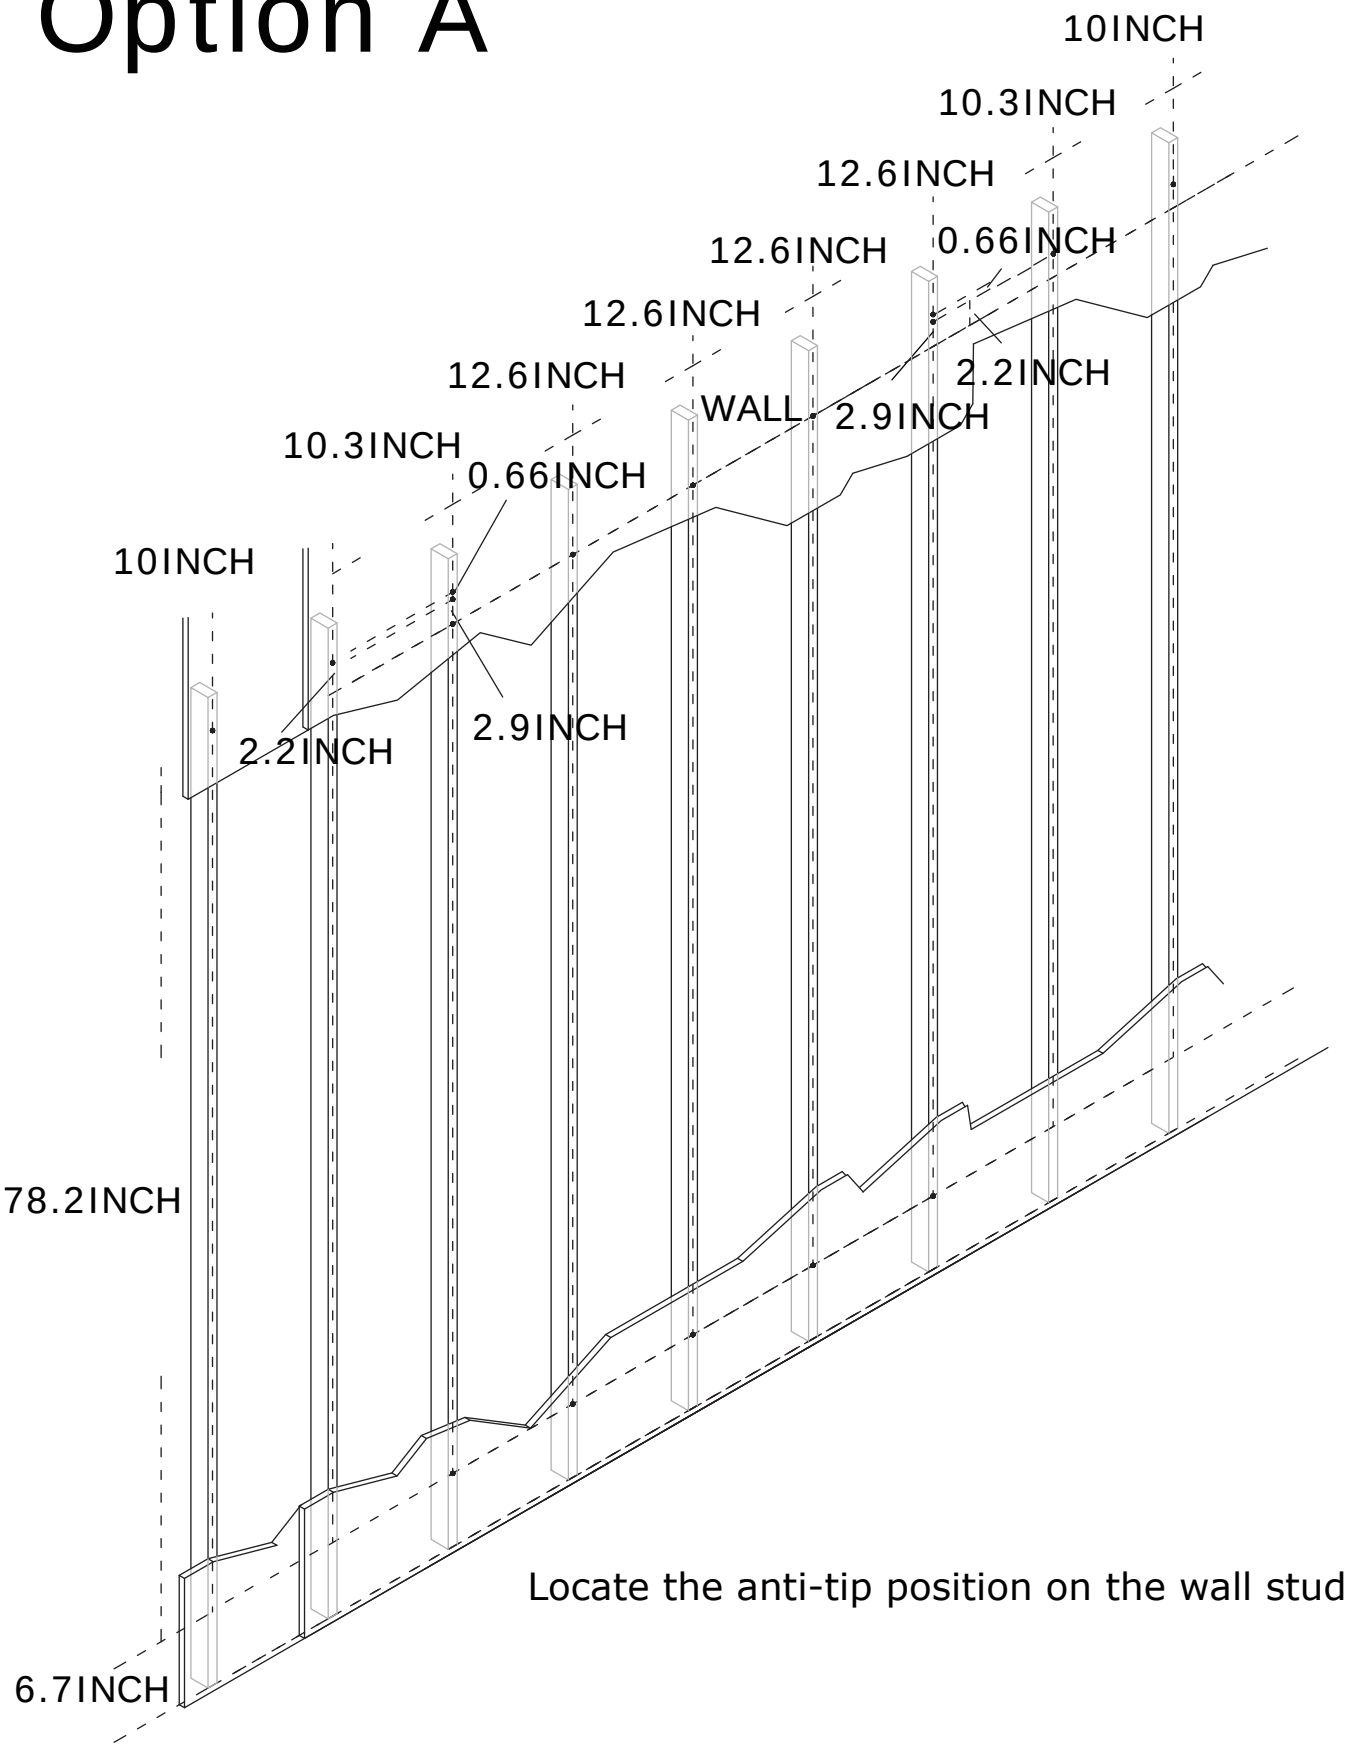


Locate the anti-tip position on the wall stud.

32

H x 18






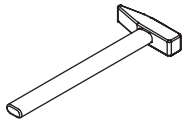

Option A


Install part (H) into the wall stud according to the anti-tip position marked in step 31.

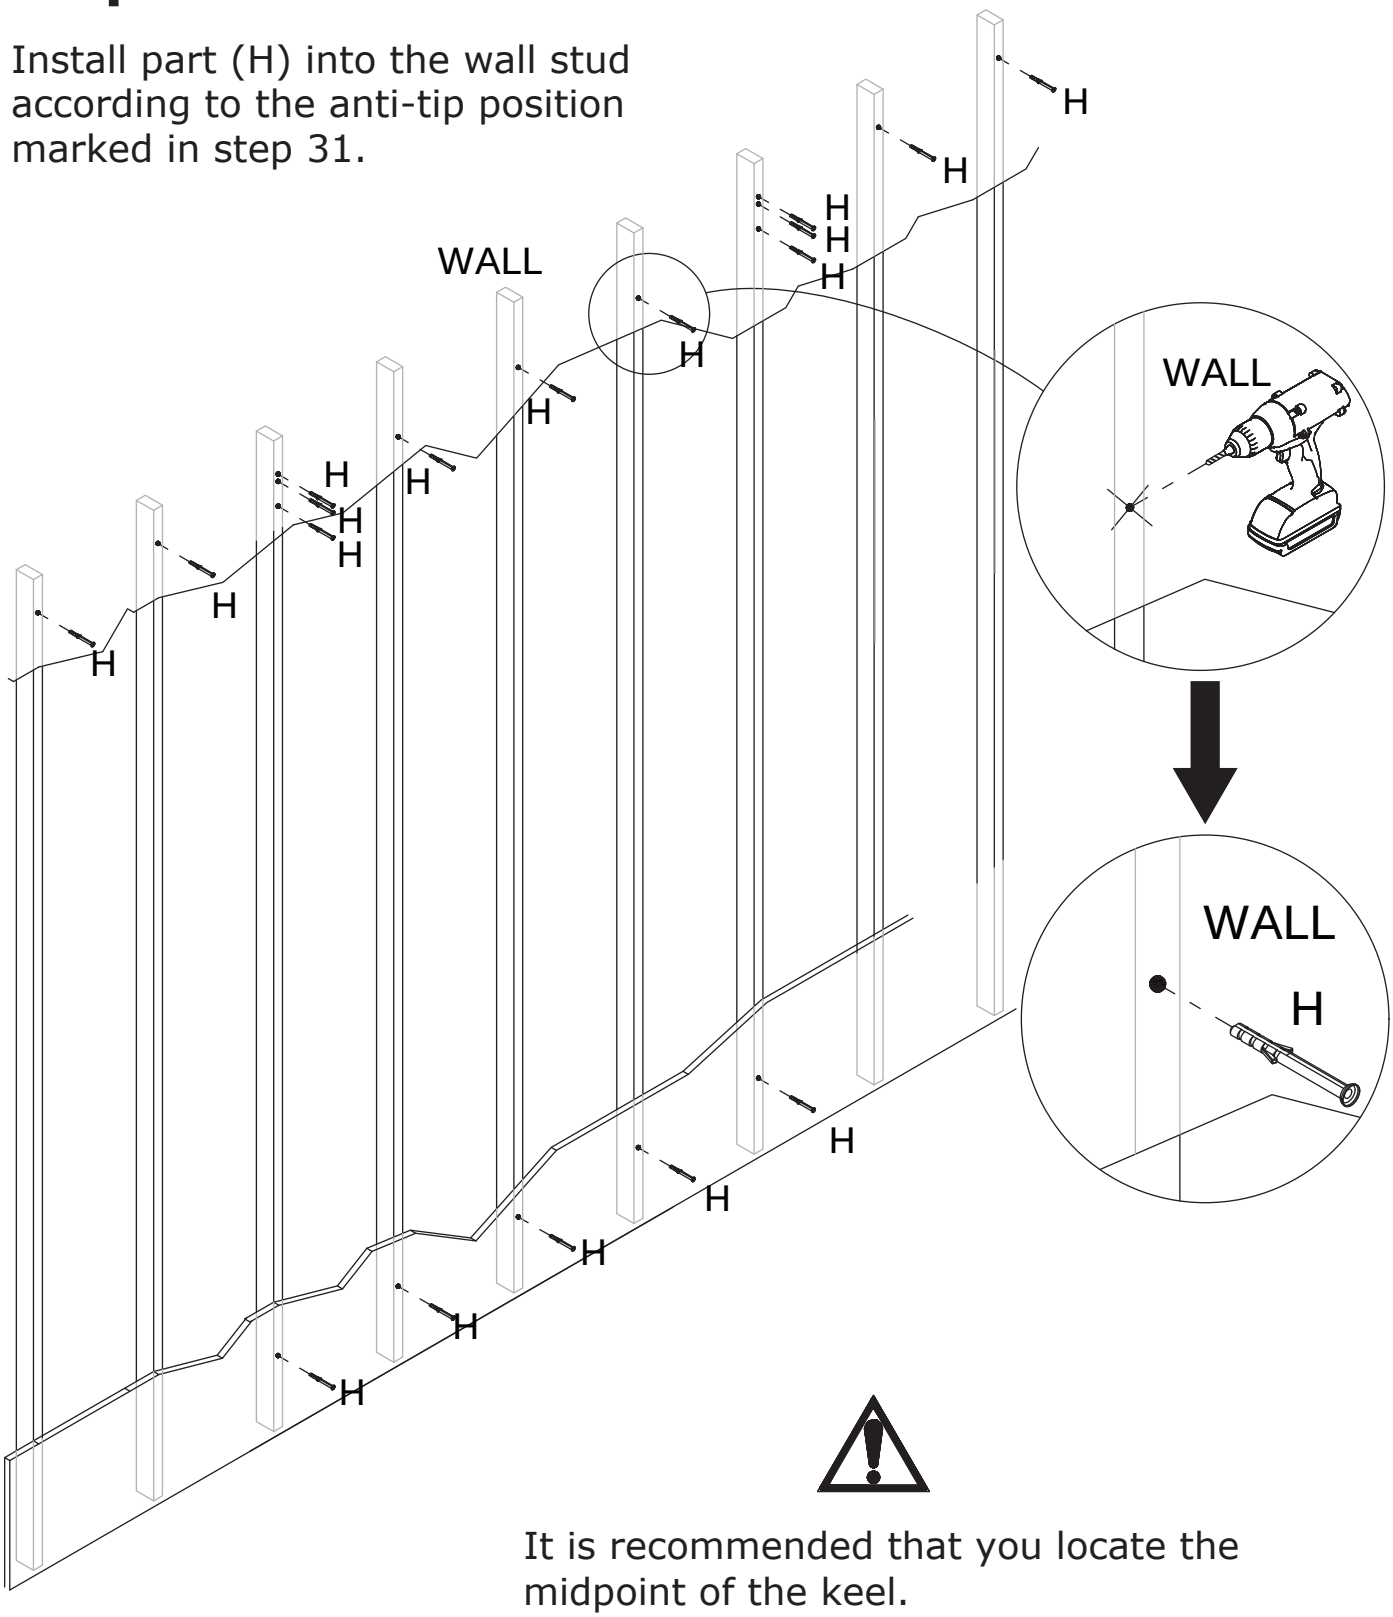


It is recommended that you locate the midpoint of the keel.

33

J x 10




CRD0580A




Option A

J




CRD0580A

AU





CRD0468A

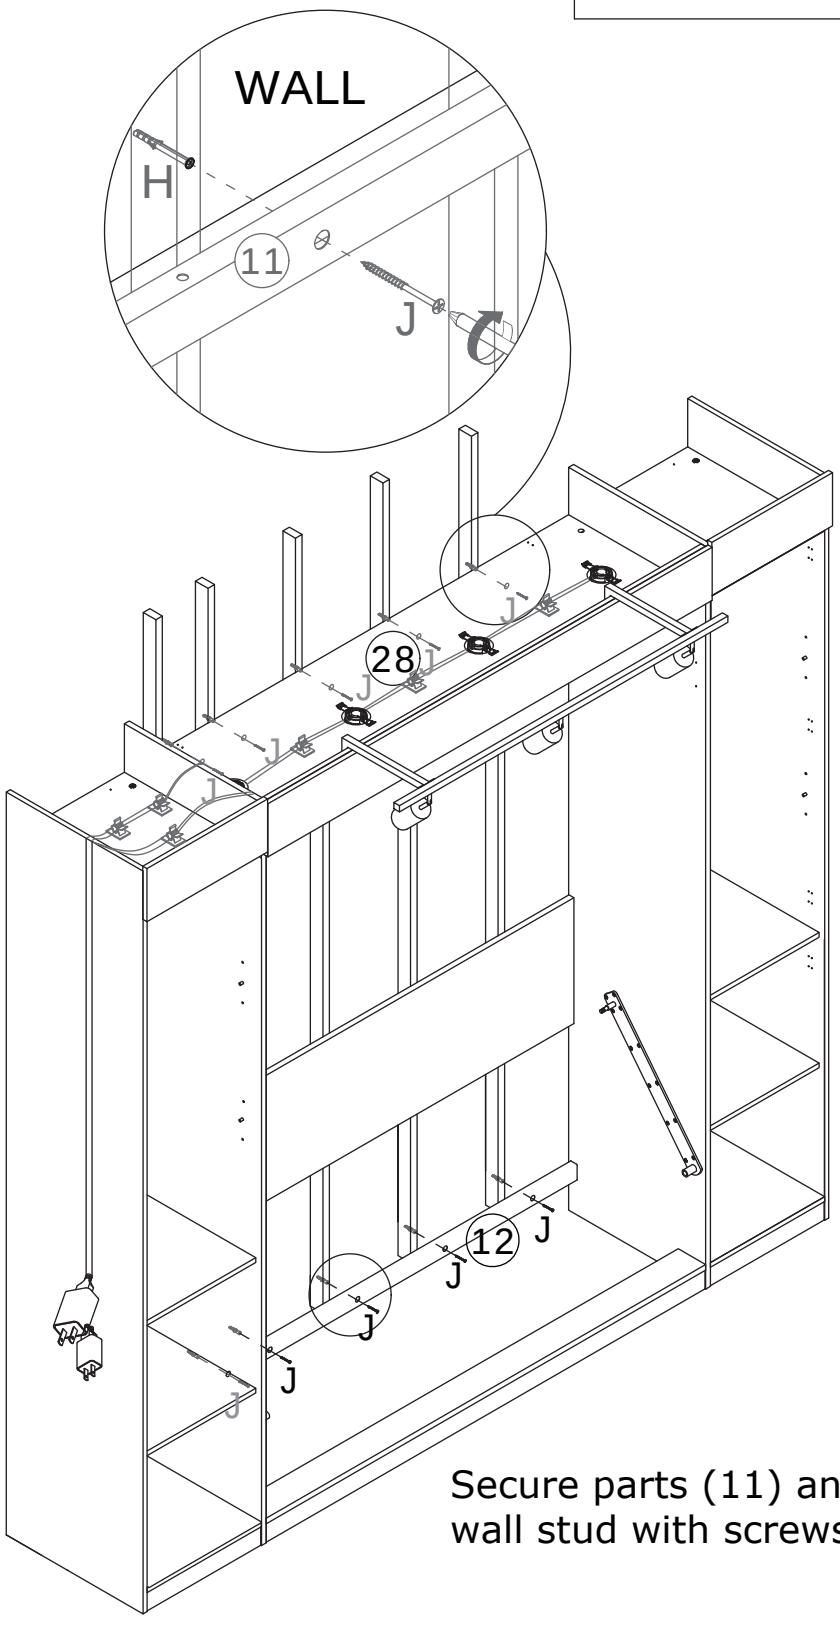


Secure parts (11) and (12) to the wall stud with screws (J).

34

E x 8	X x 2	AS x 4	
 CRD3514A			


Option A

Secure parts (AS) and (X) to Panels 28 and 29 with screws (E).

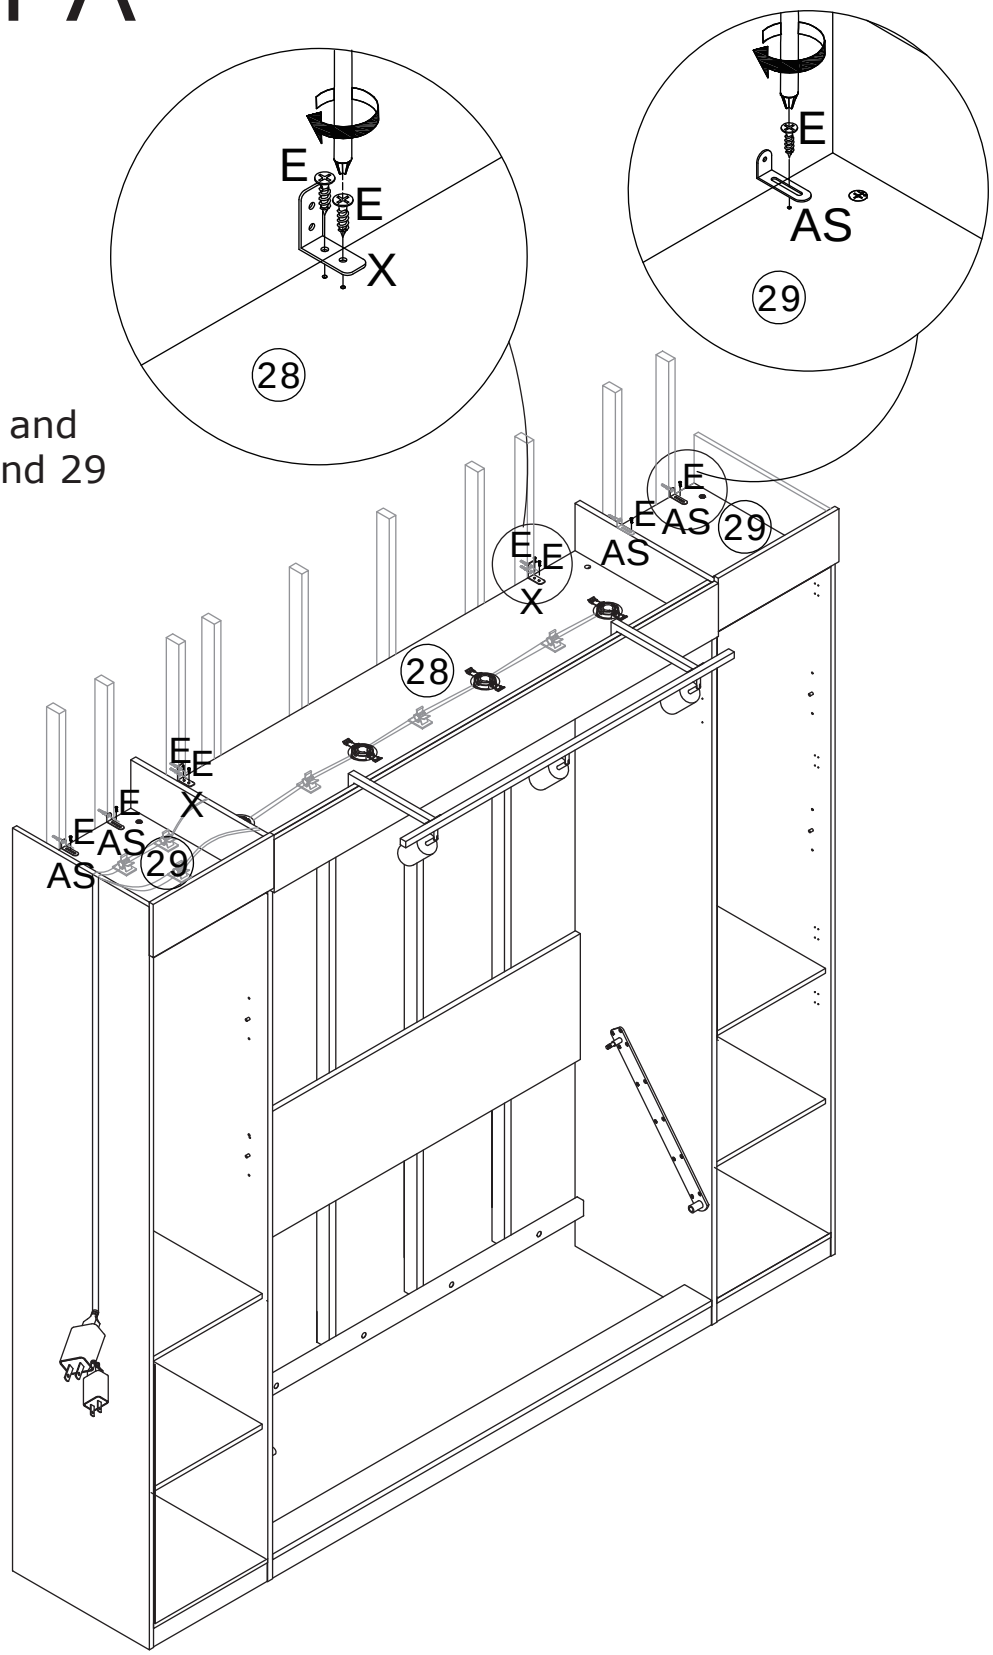


35


J x 8




CRD0580A




Option A

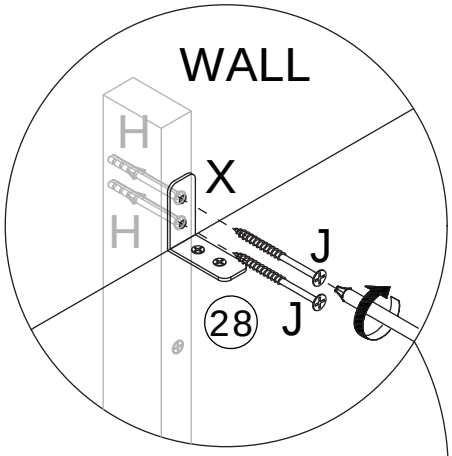


Install parts (X) and (AS) into the wall stud with screws (J) according to the anti-tip position marked in step 31.

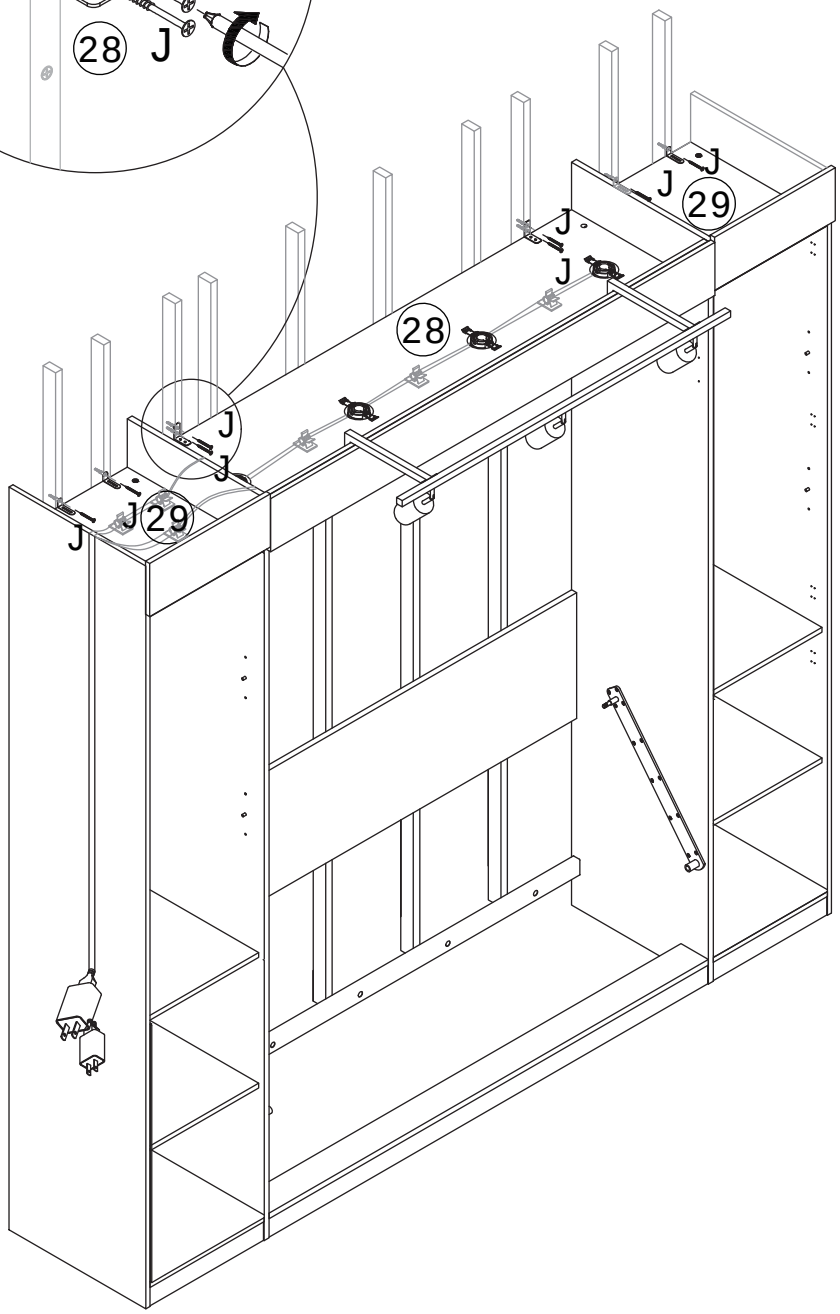

36

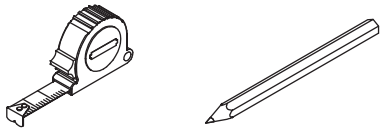


Option B

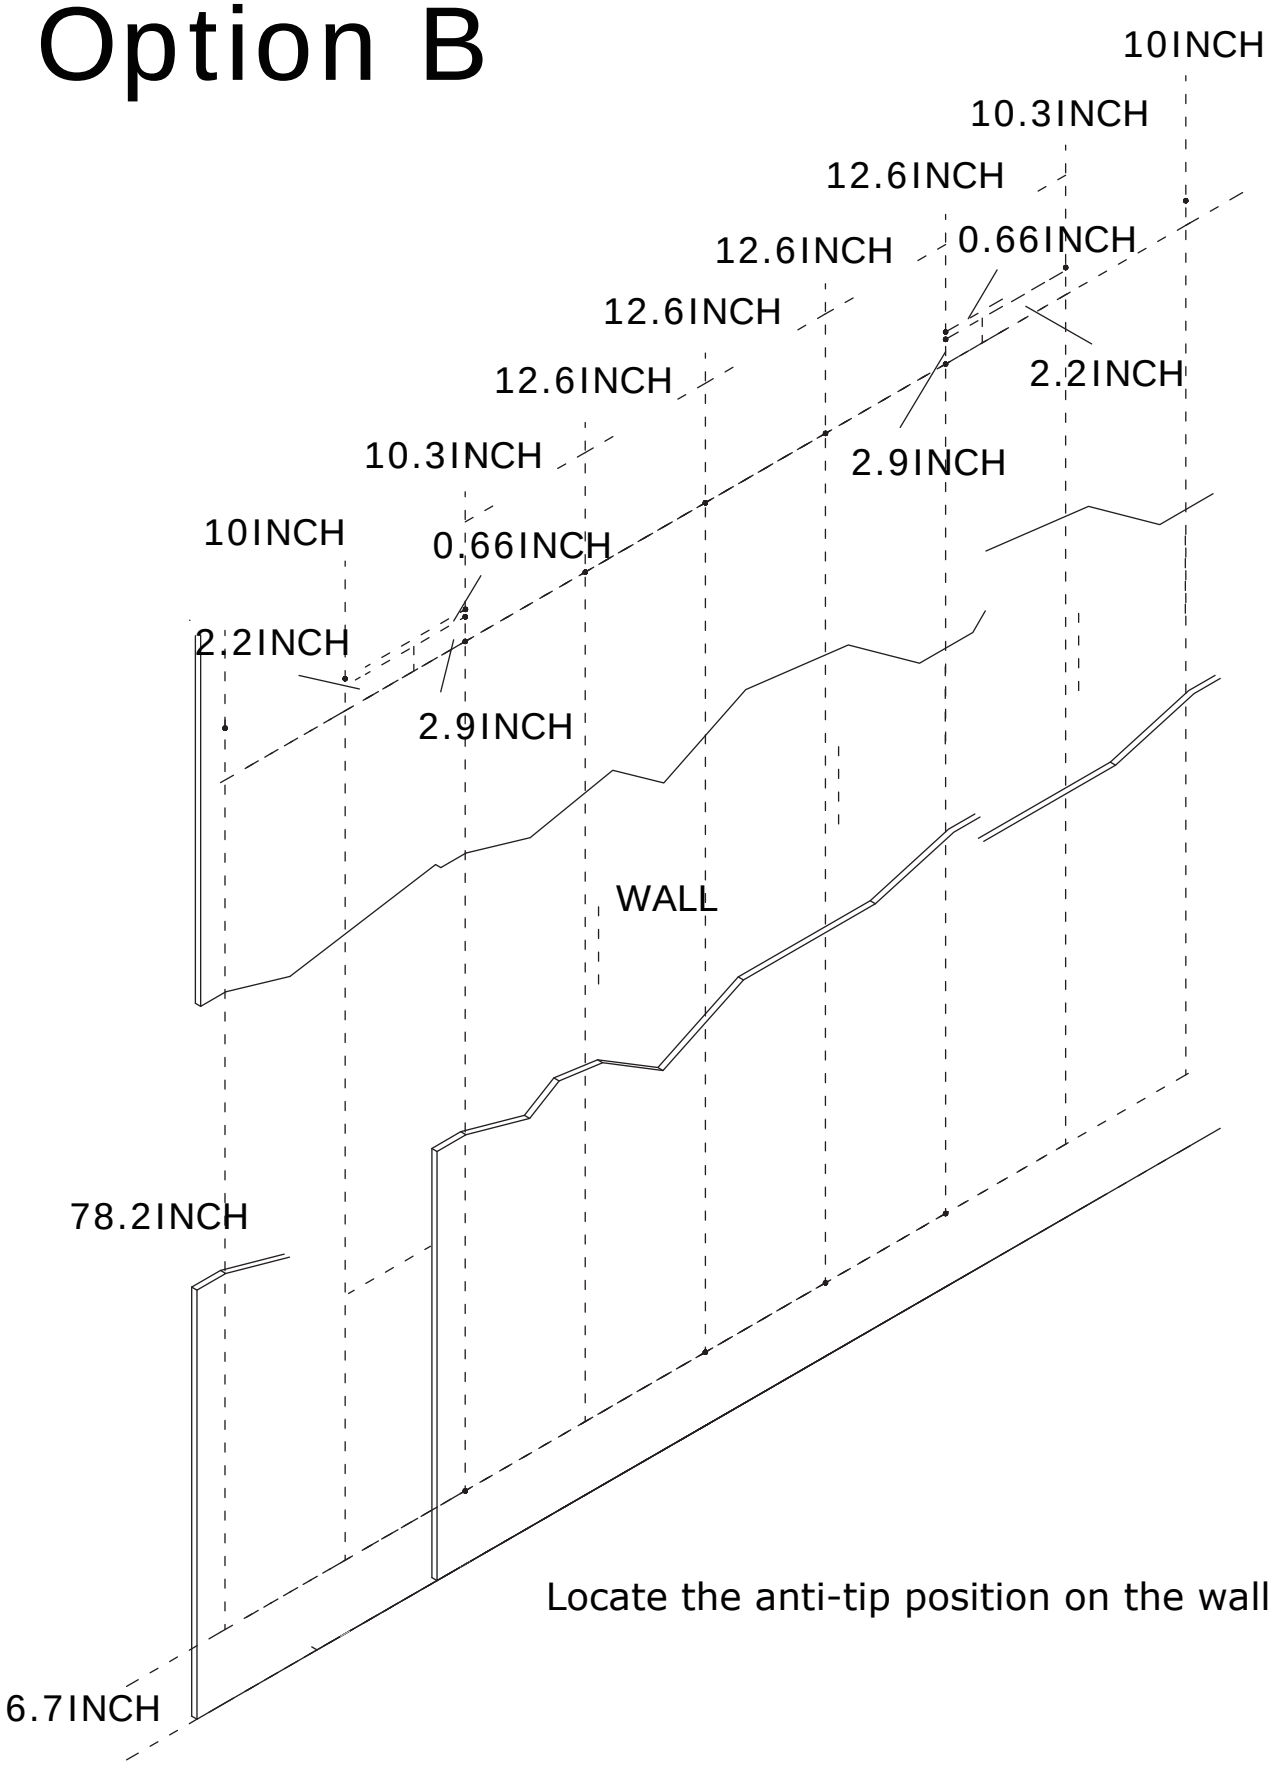


Locate the anti-tip position on the wall.

37


AM x 18





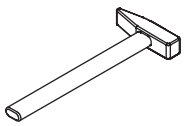


Option B

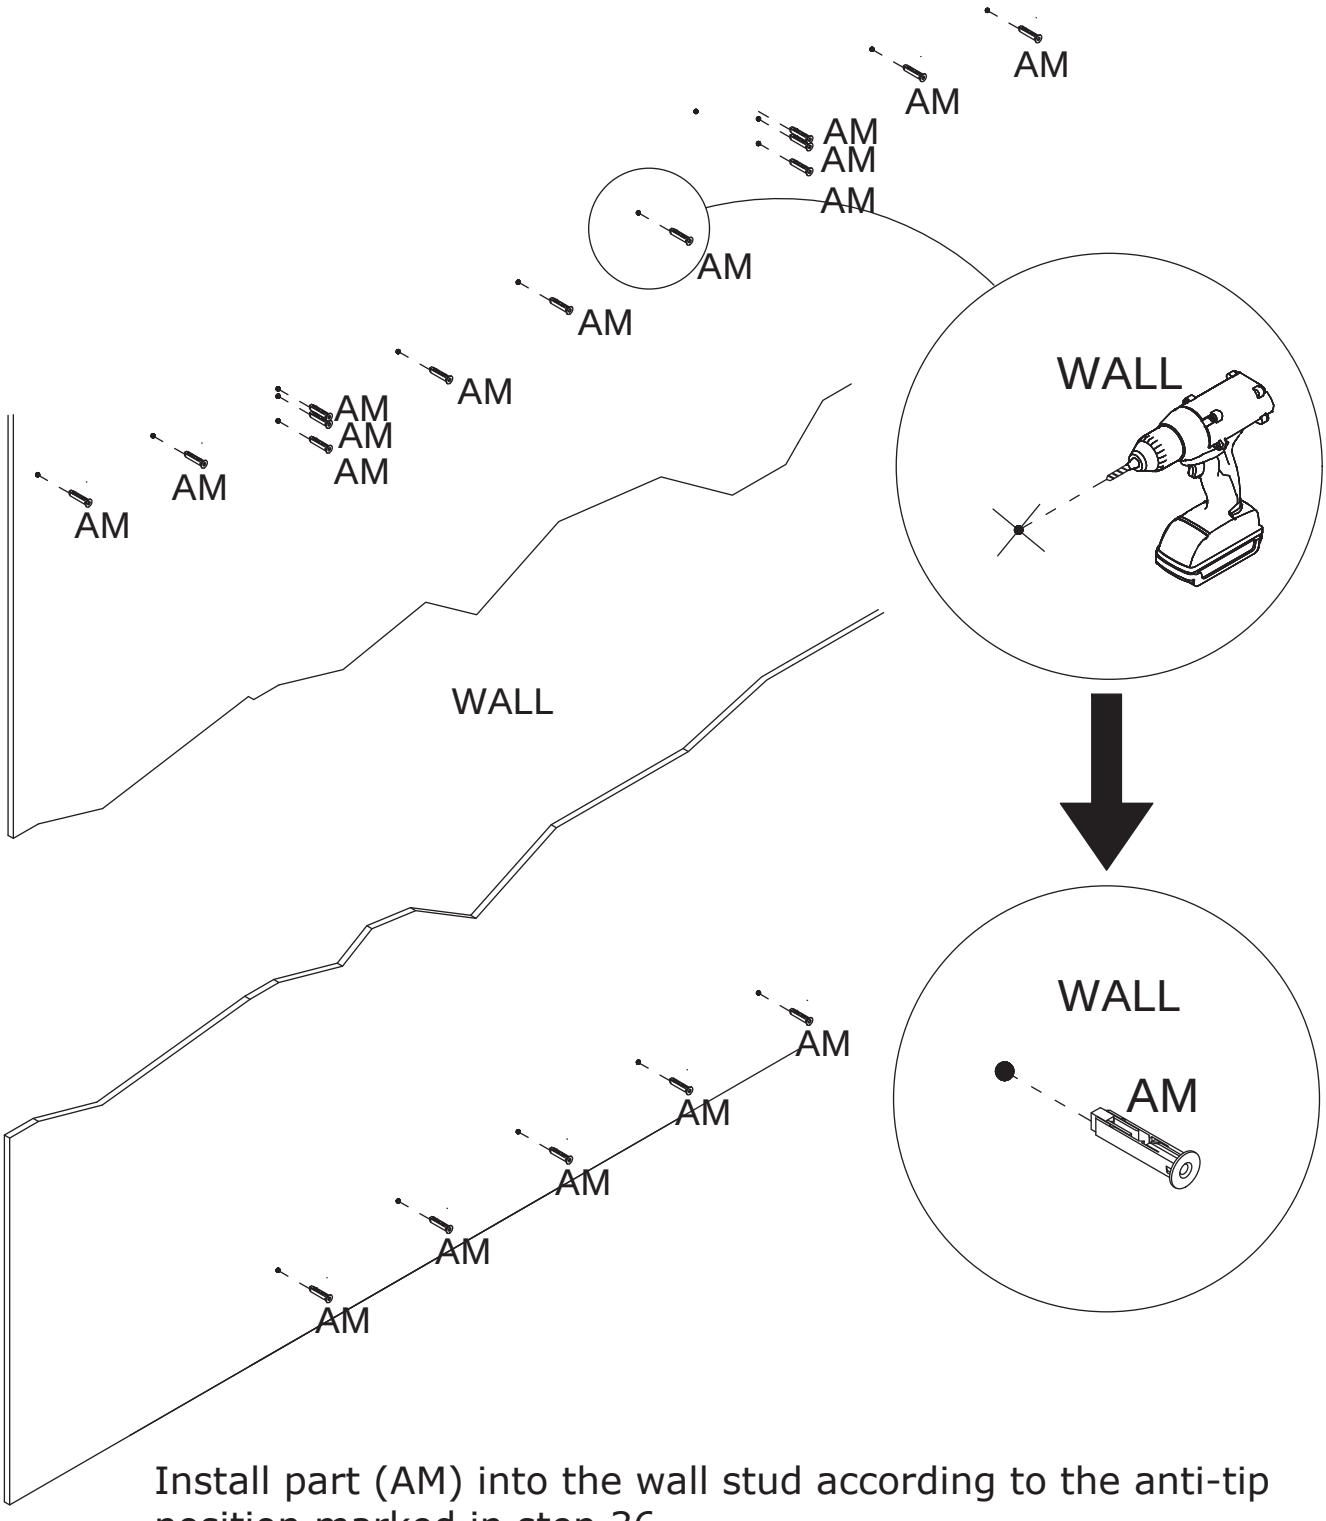


Install part (AM) into the wall stud according to the anti-tip position marked in step 36.

38

AU x 10




CRD0468A



Option B



J




CRD0580A

AU





CRD0468A

Secure parts (11) and (12) to the wall stud with screws (AU).

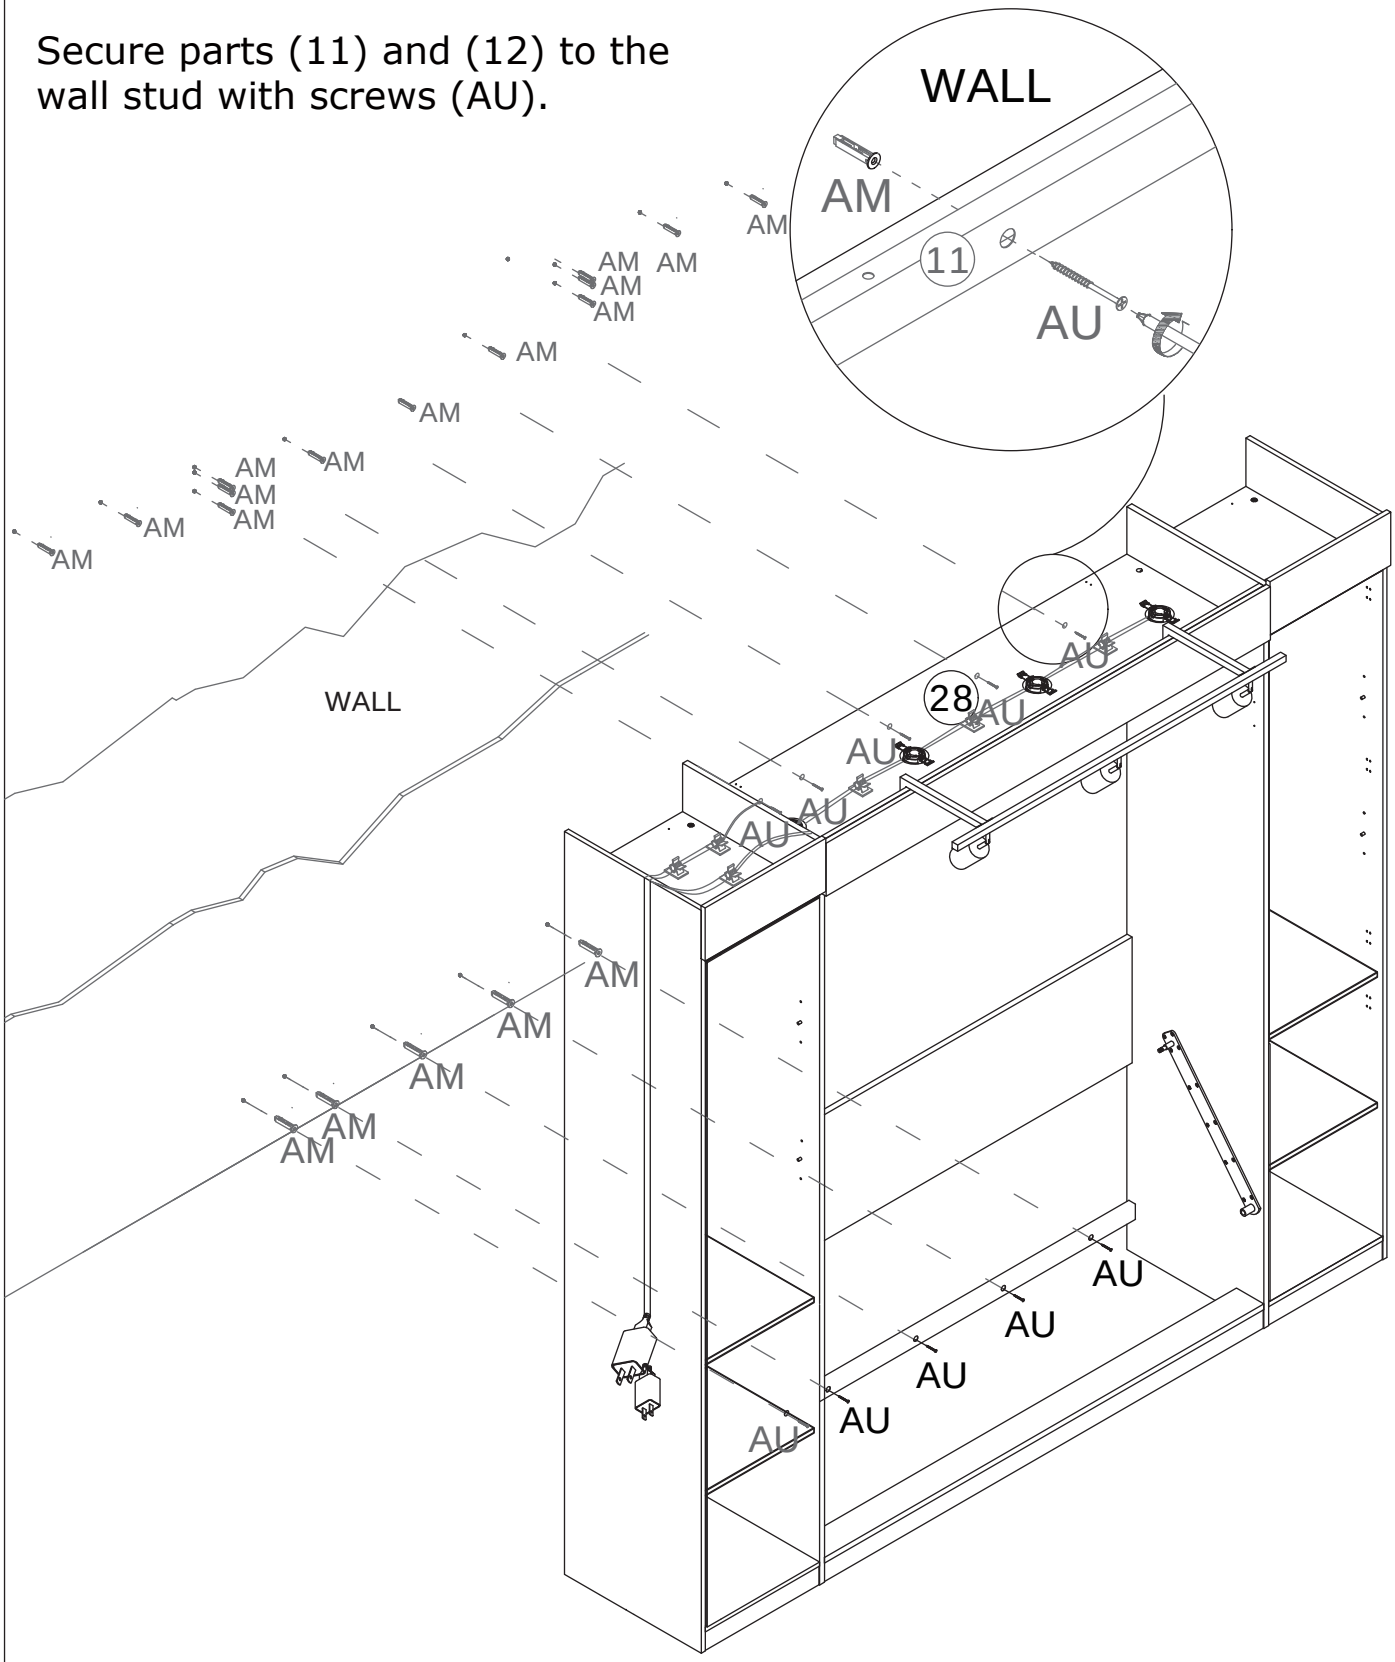


39

E x 8	X x 2	AS x 4	
 CRD3514A			


Option B

Secure parts (AS) and (X) to Panels 28 and 29 with screws (E).

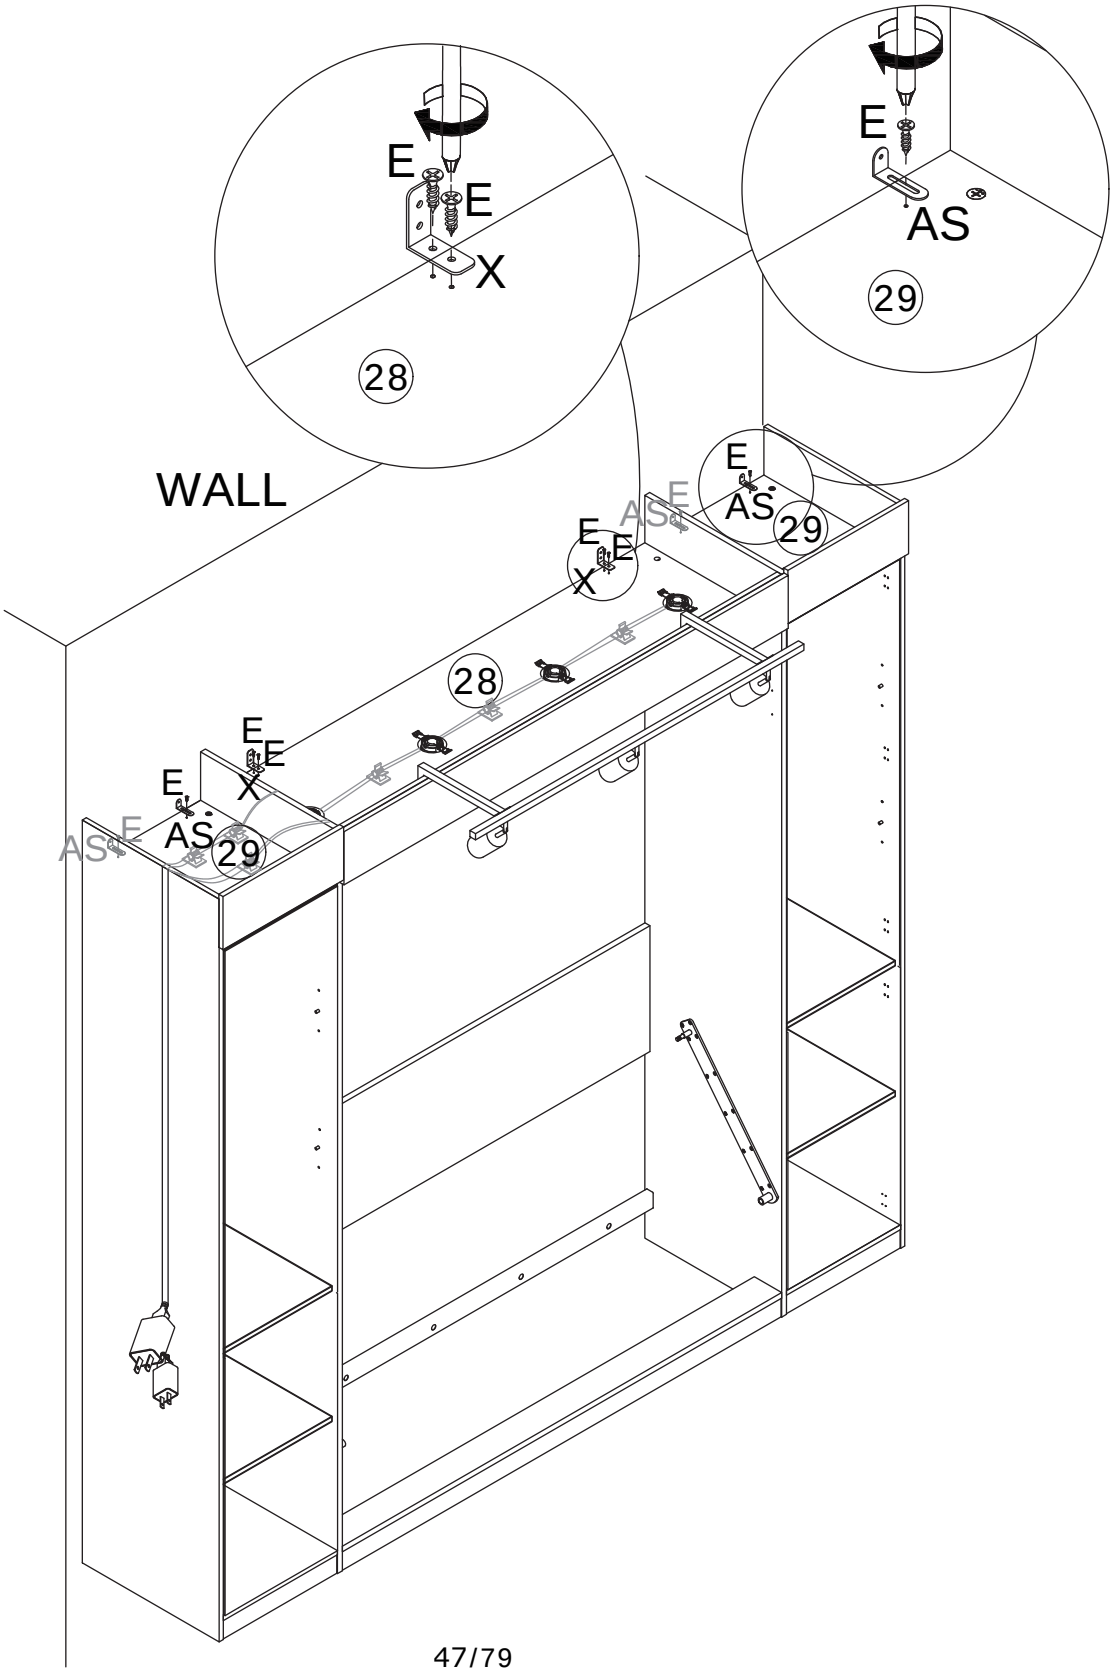


40

AU x 8




CRD0468A




Option B

Install parts (X) and (AS) into the wall stud with screws (AU) according to the anti-tip position marked in step 36.

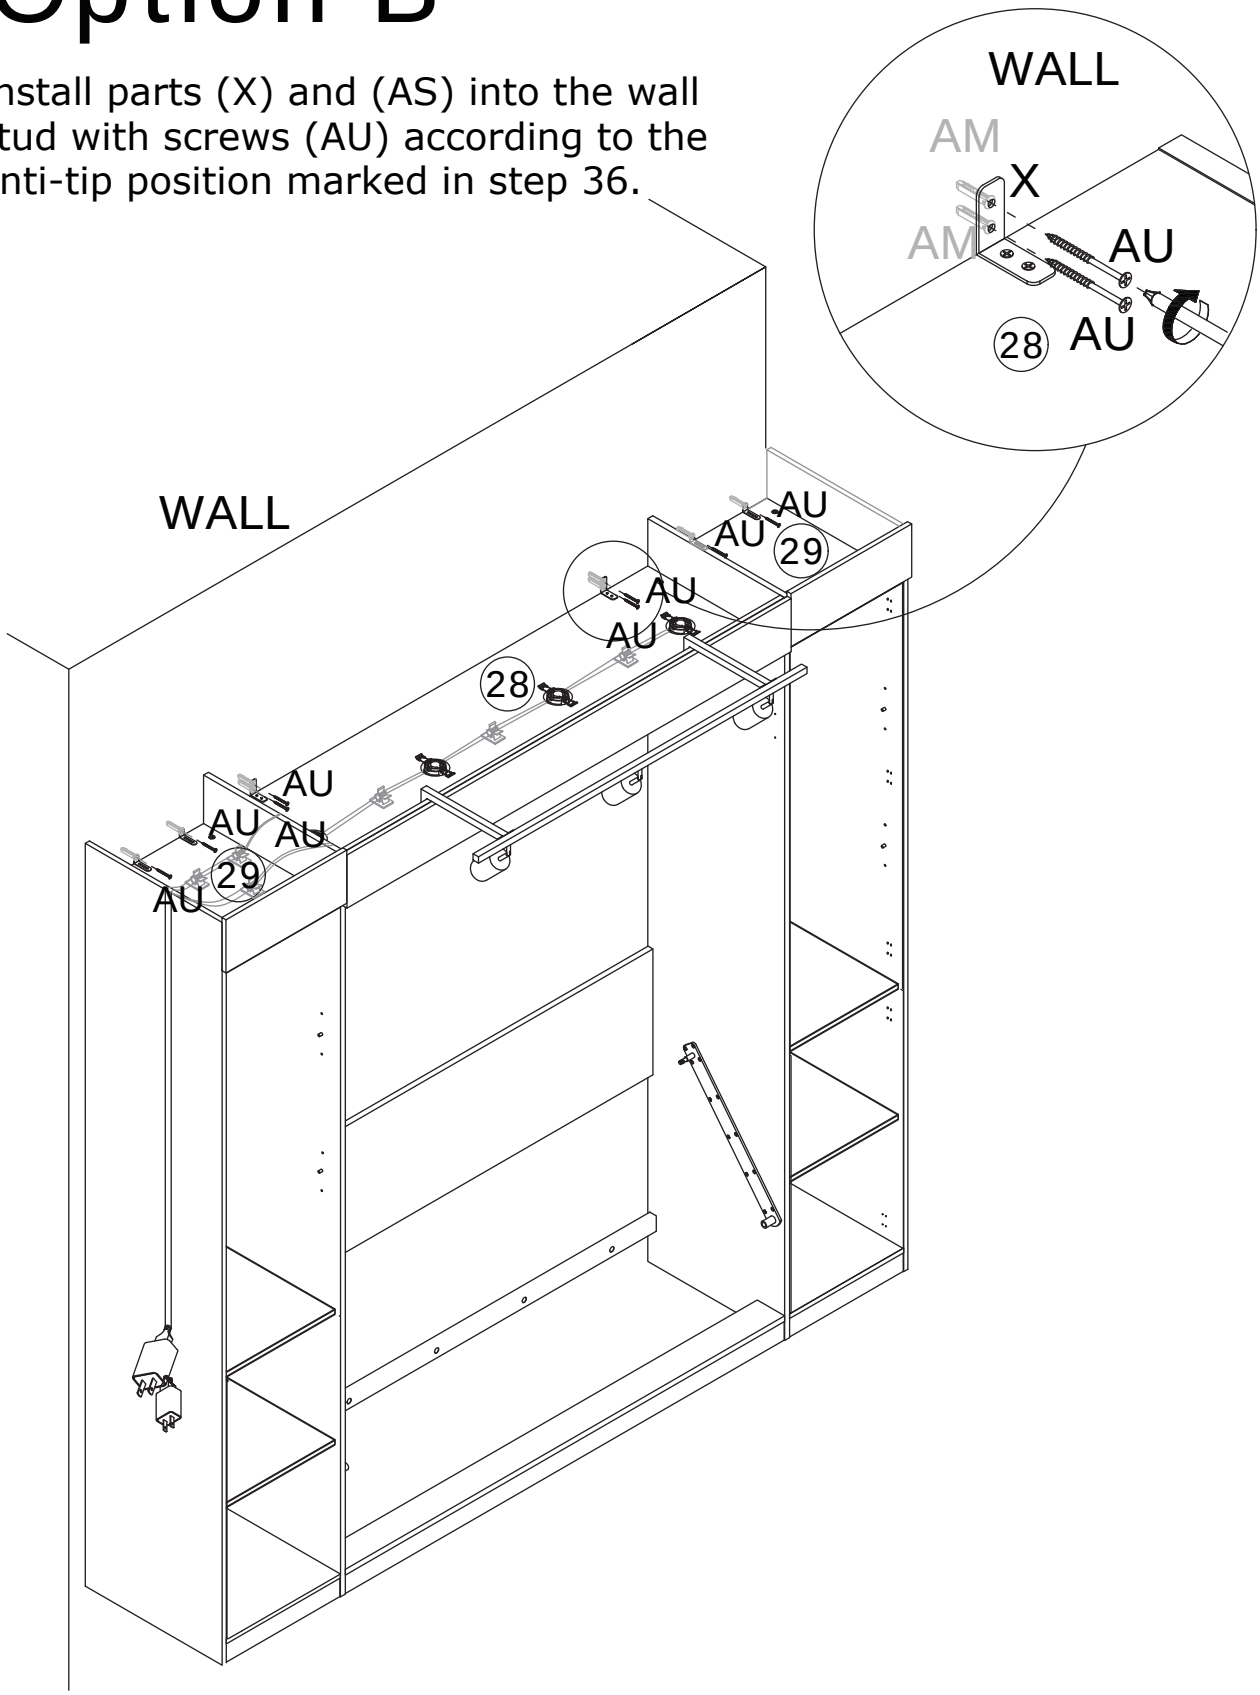

41


After installing the anti-tip device, please perform a pull test on the cabinet to prevent potential hazards caused by the device being loosely installed and the cabinet tipping over.

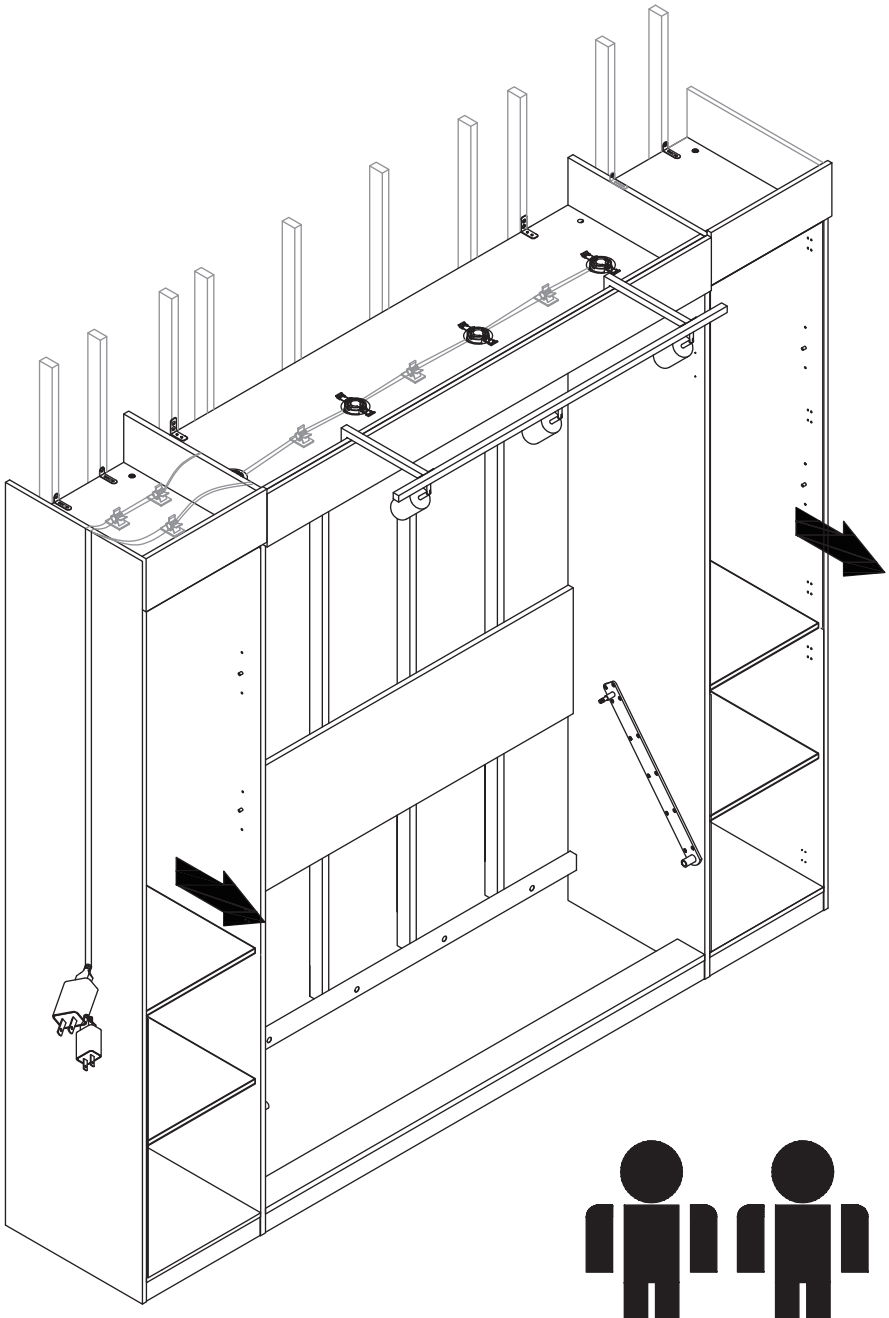


2 OF ADULTS

42



AQ x 2

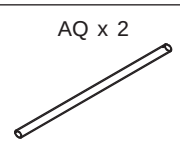


Snap Panel 39 into Panels 1, 2, 40 and 41, and place part (AQ) into part (AR).

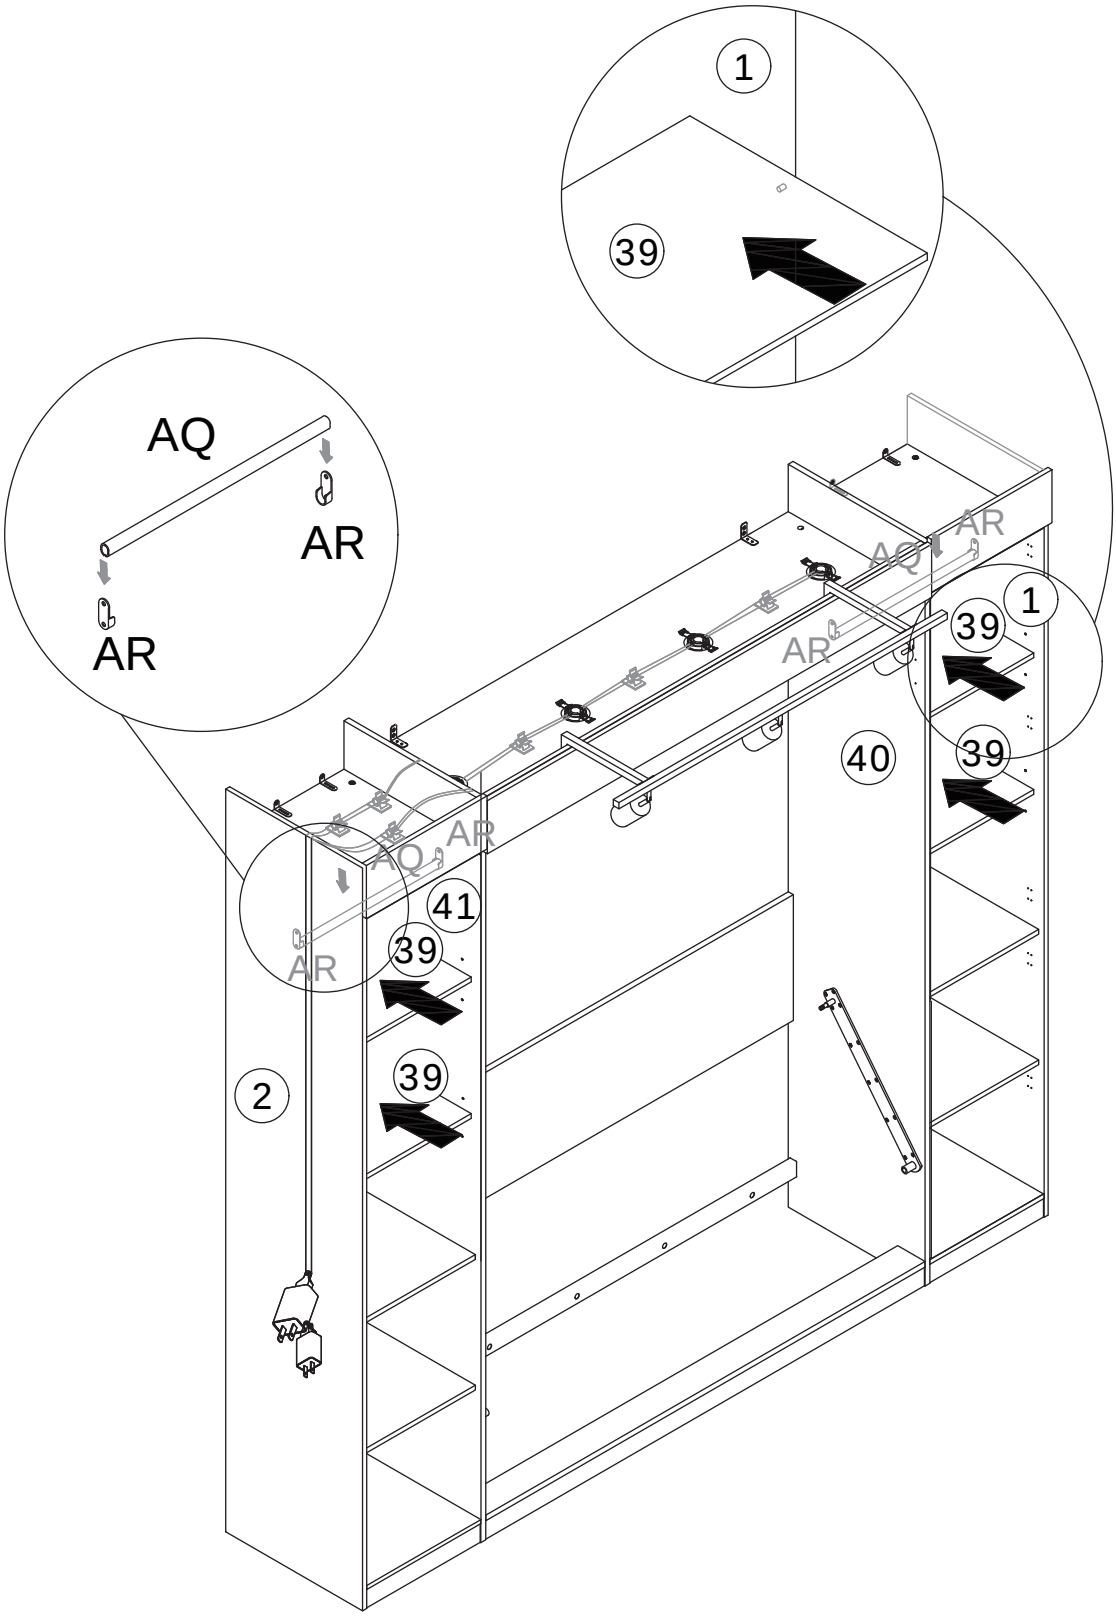

43

E x 20	AL x 10	
 CRD3514A		

Secure hinges (AL) to Panels 6 and 33 with screws (E).

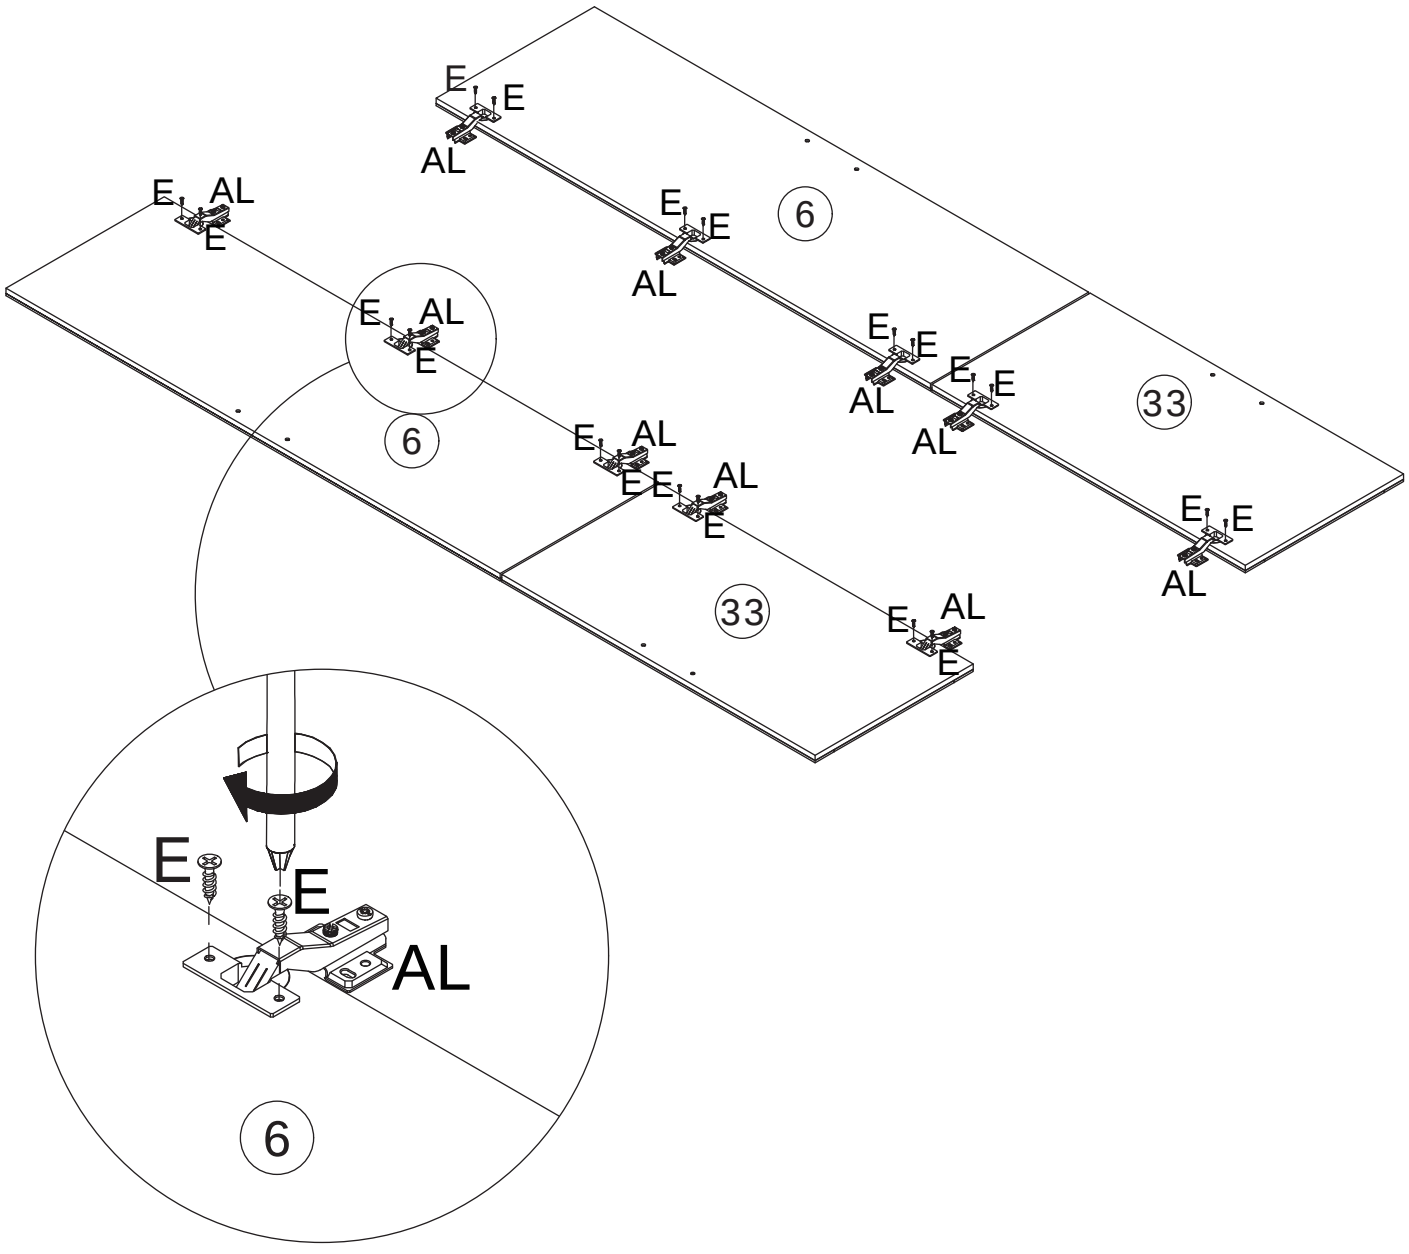


44


E x 40





CRD3514A



Secure hinges (AL) to Panels 1 and 2 with screws (E).



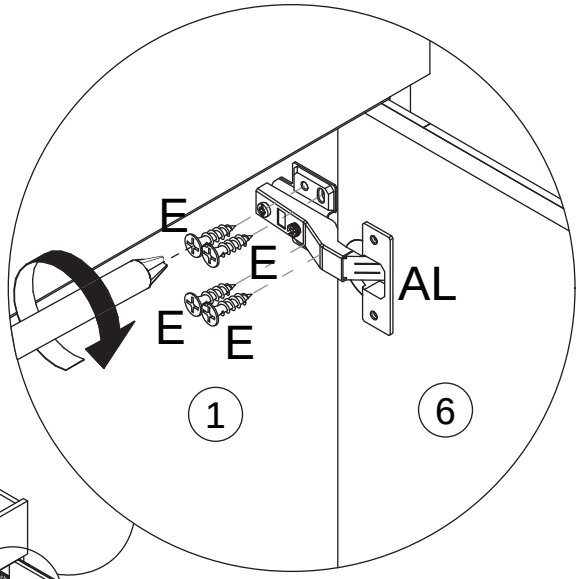


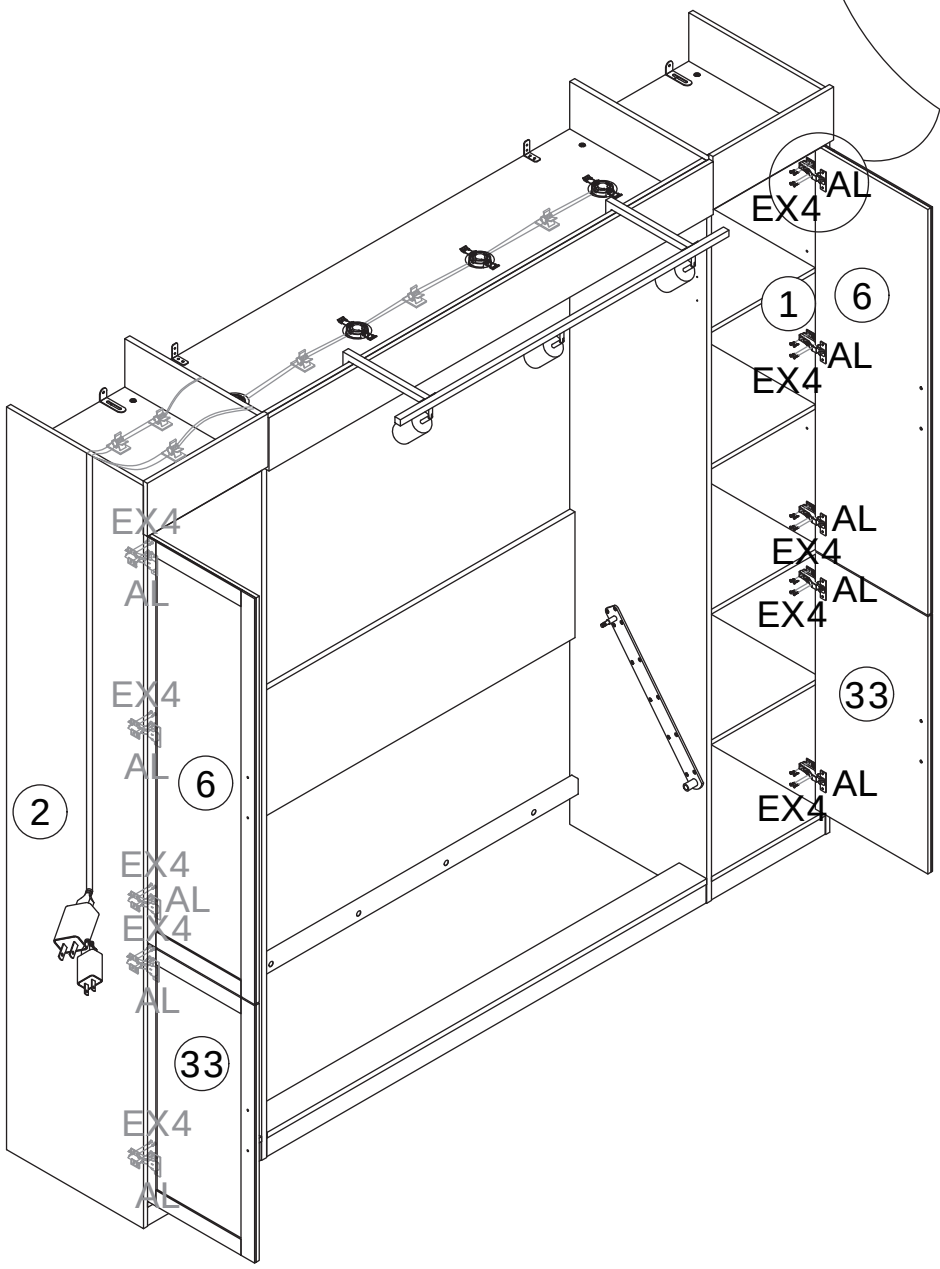

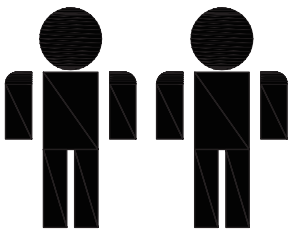



2 OF ADULTS

45

U x 4	V x 8	
	 CRE0420A	


Secure handles (U) onto Panels 6 and 33 with screws (V).

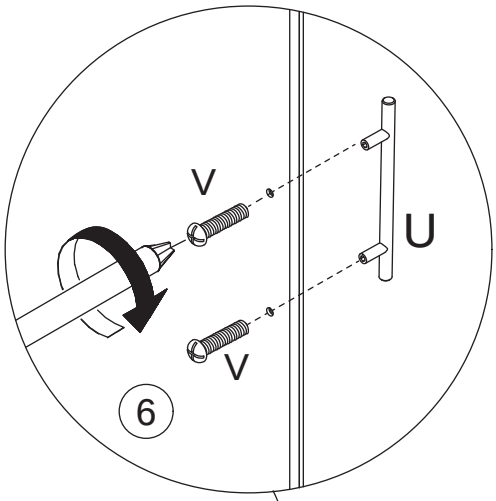

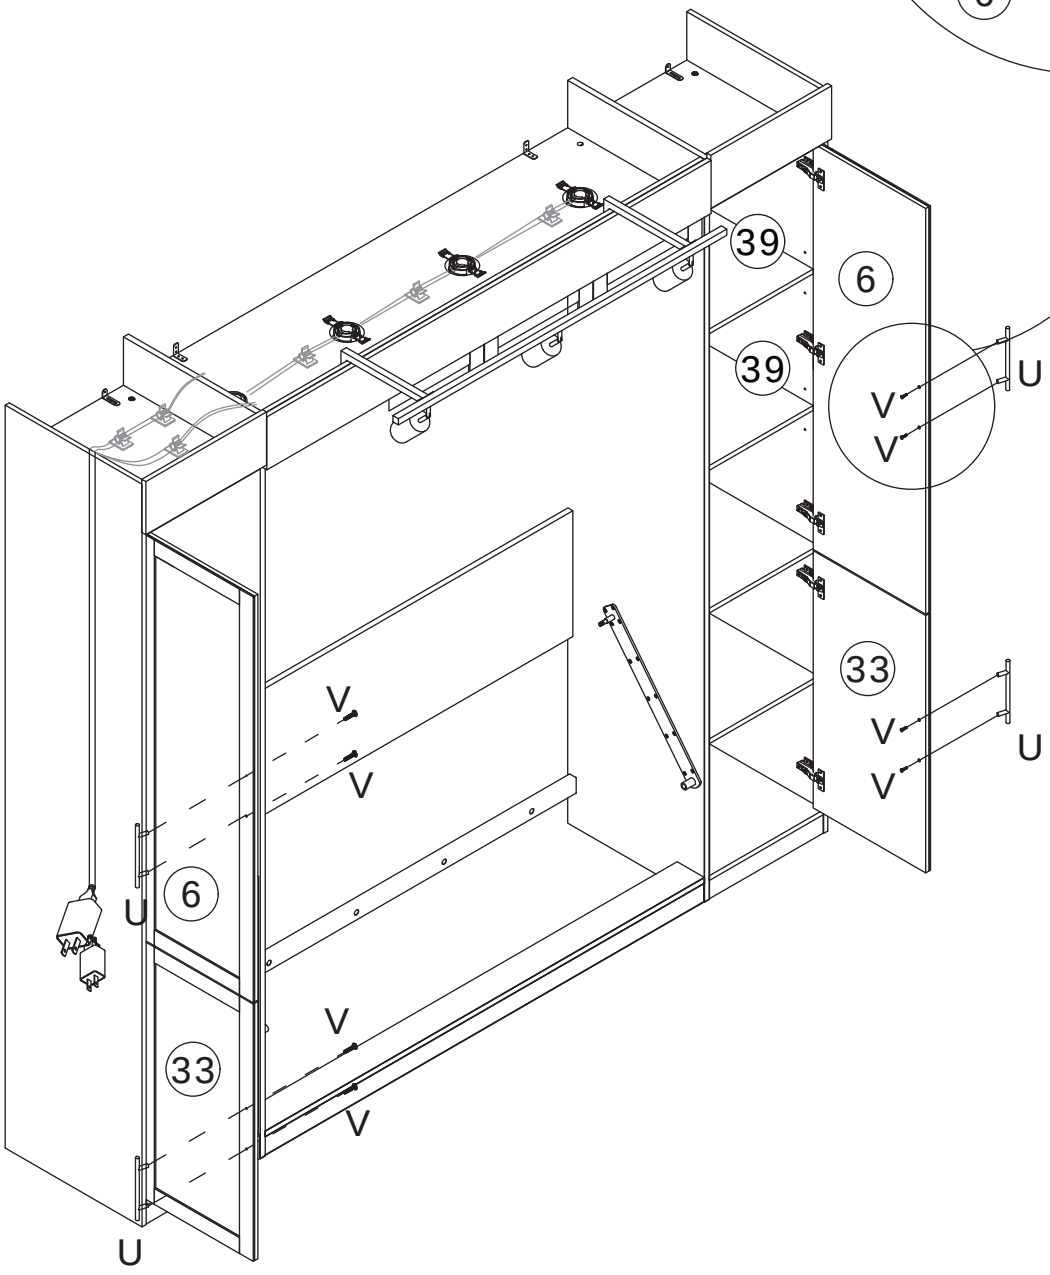



46

AK x 8




CRF0840A



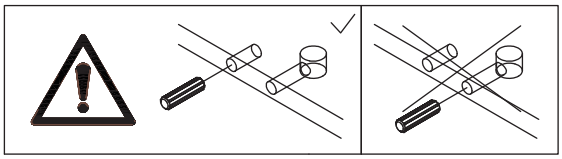

Connect Panels 34, 35, 36 and 37 to Panels 7, 8, 9 and 10 using dowel pins (AK).

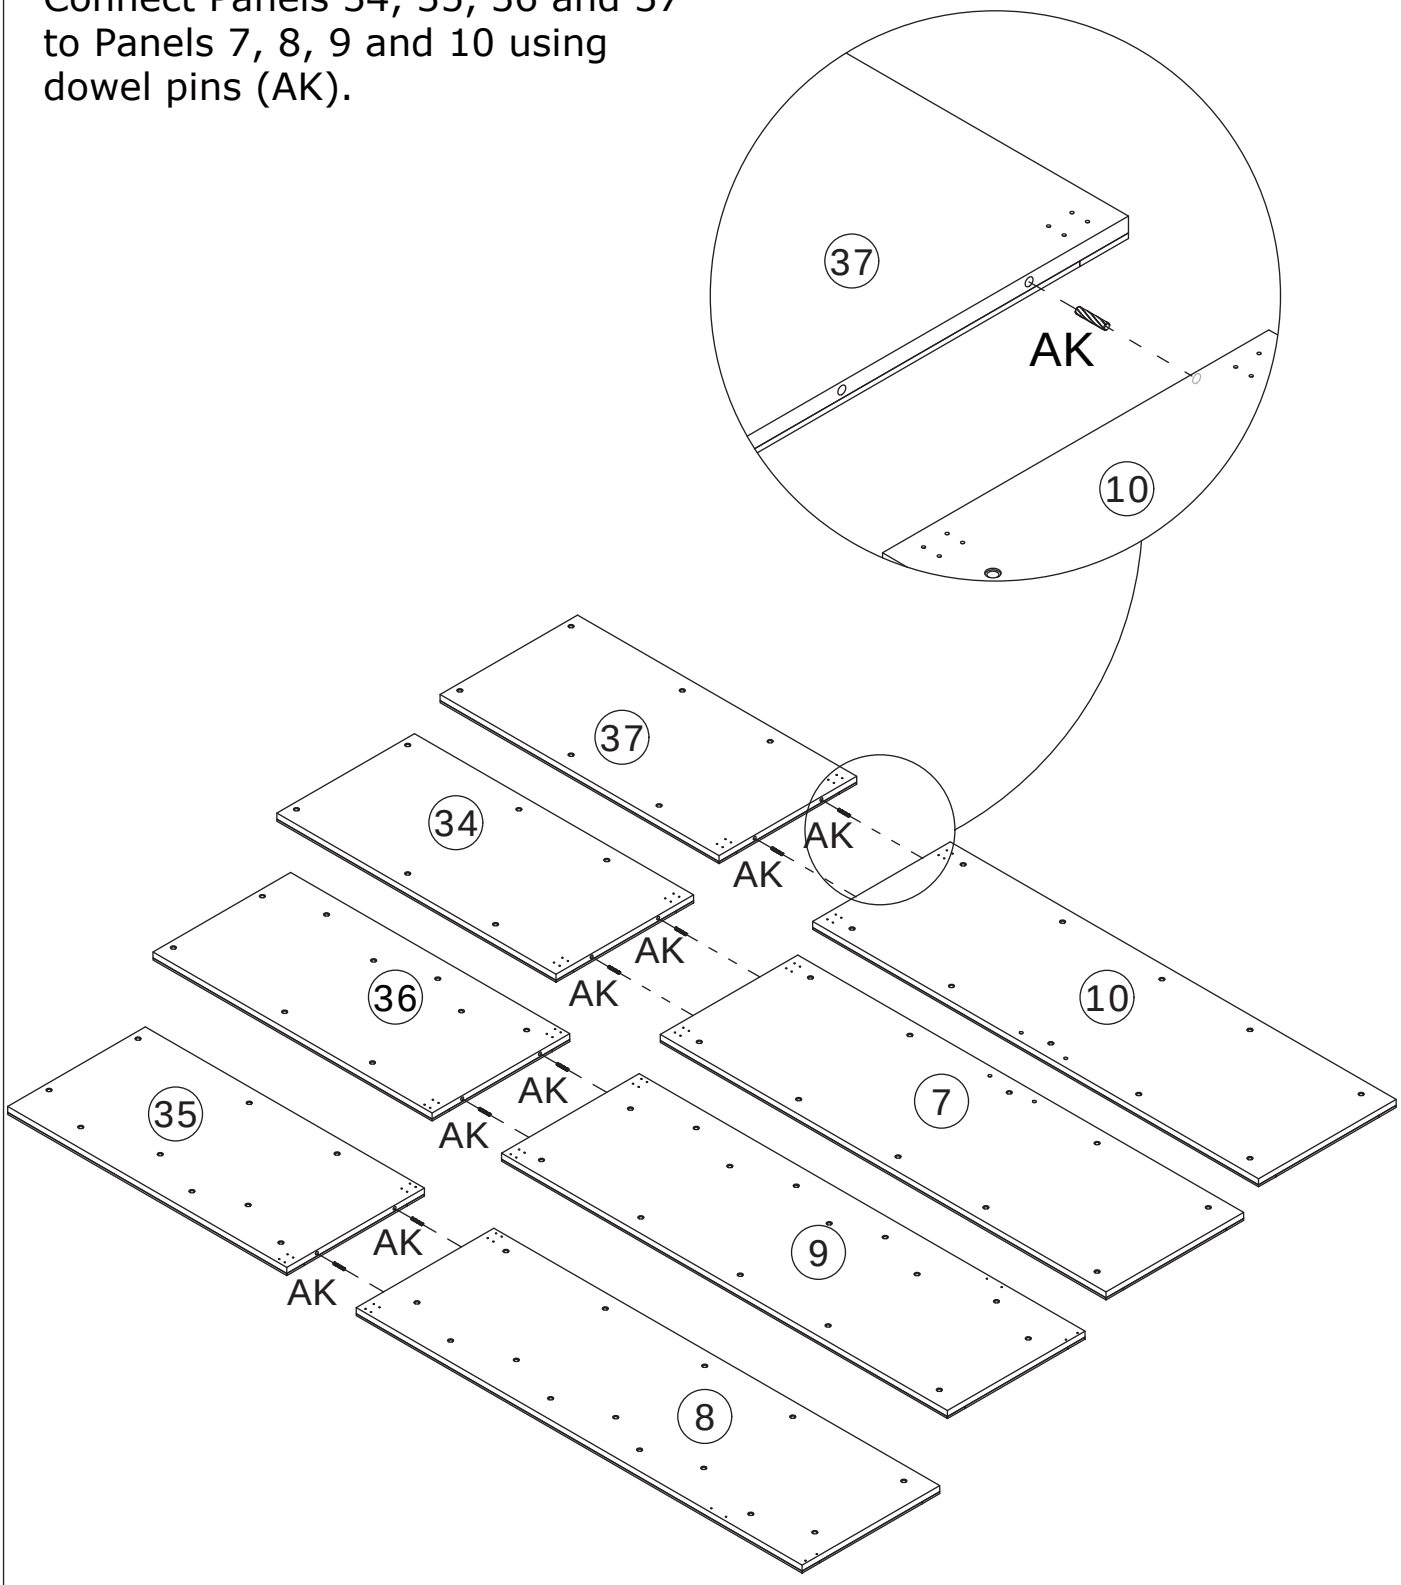


47



E x 68	AH x 8	W x 2	Z x 2	AA x 4	
CRD3514A				CRD0314A	

E	AA	AB
CRD3514A	CRD0314A	CRD0416A


Secure parts (AH), (W) and (Z) to Panels 34, 35, 36, 37 and Panels 7, 8, 9, 10 with screws (E) and (AA).

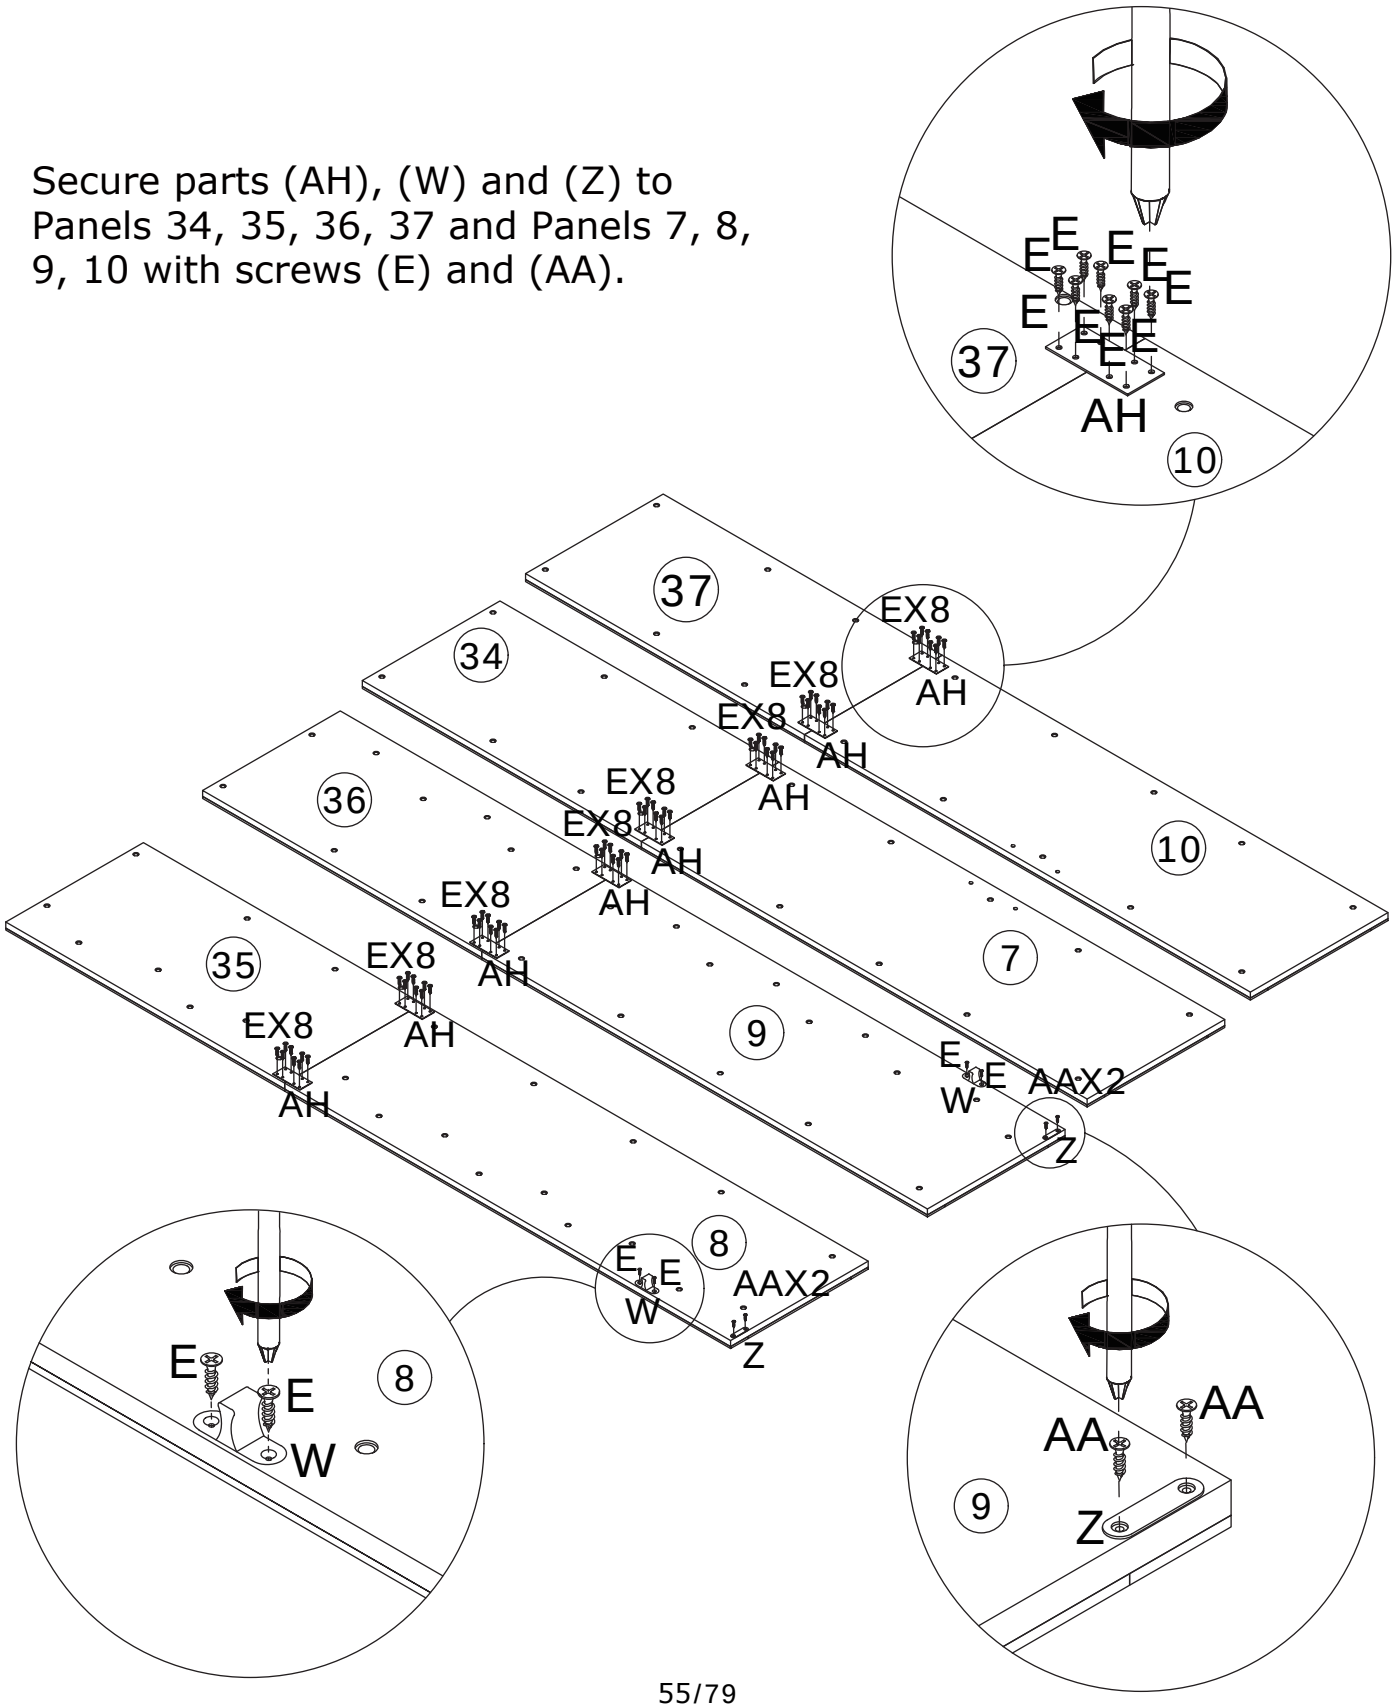


48

M x 16	AC x 1	
 CRG0645A	 M4	

Connect parts (16), (17) and (18) to part (14) with screws (M) and part (AC).


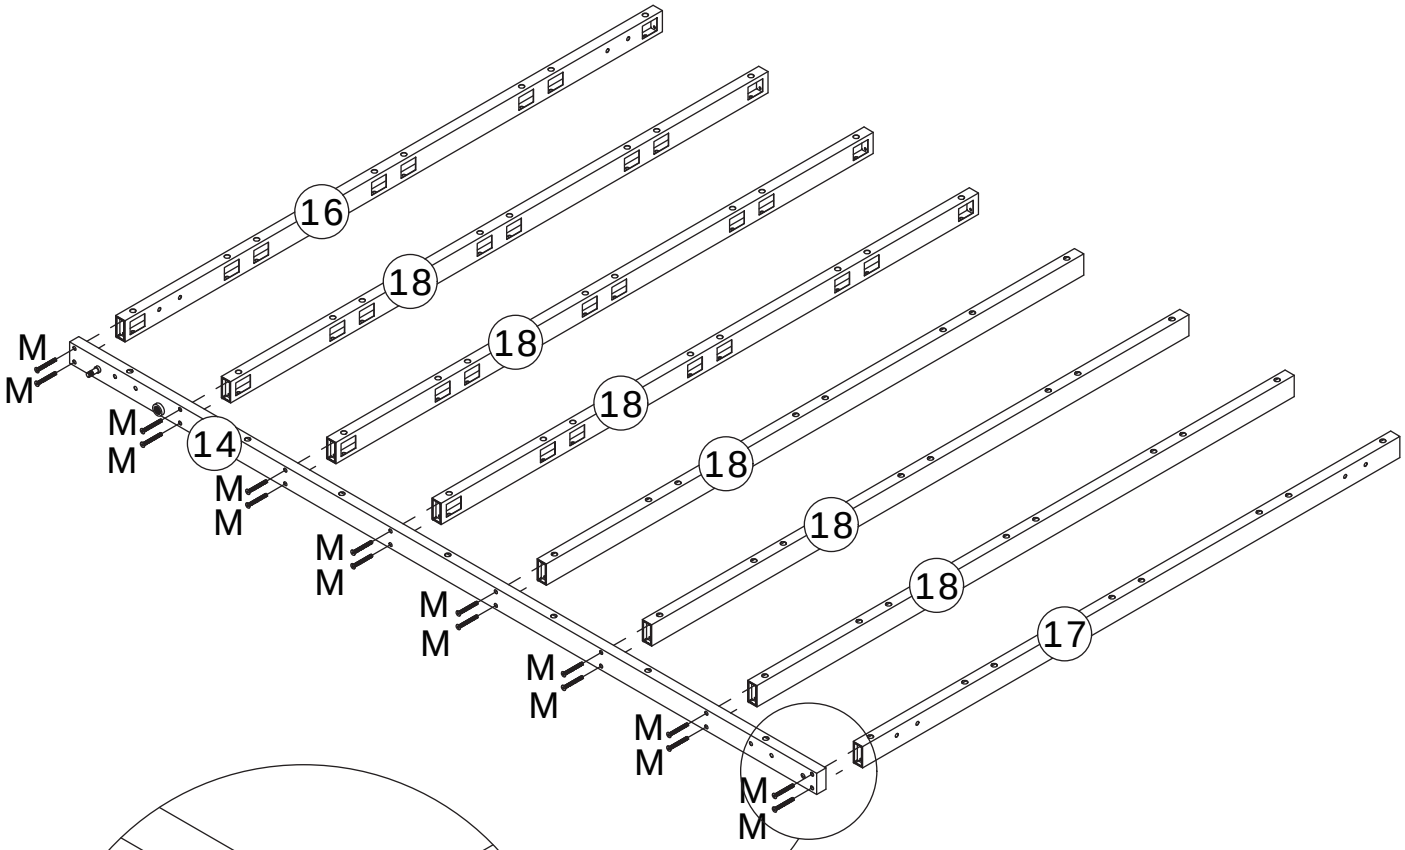


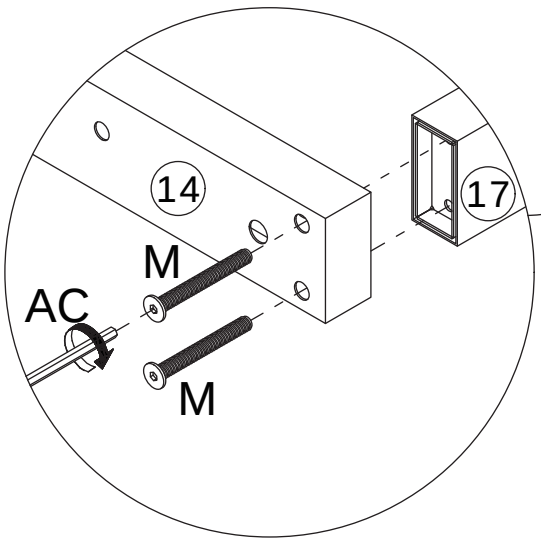




Please ensure the corners are equal diagonally. If not, loosen some screws, make adjustments, and then tighten again.

49


M x 16	AC x 1	
 CRG0645A	 M4	

Connect parts (16), (17) and (18) to part (15) with screws (M) and part (AC).

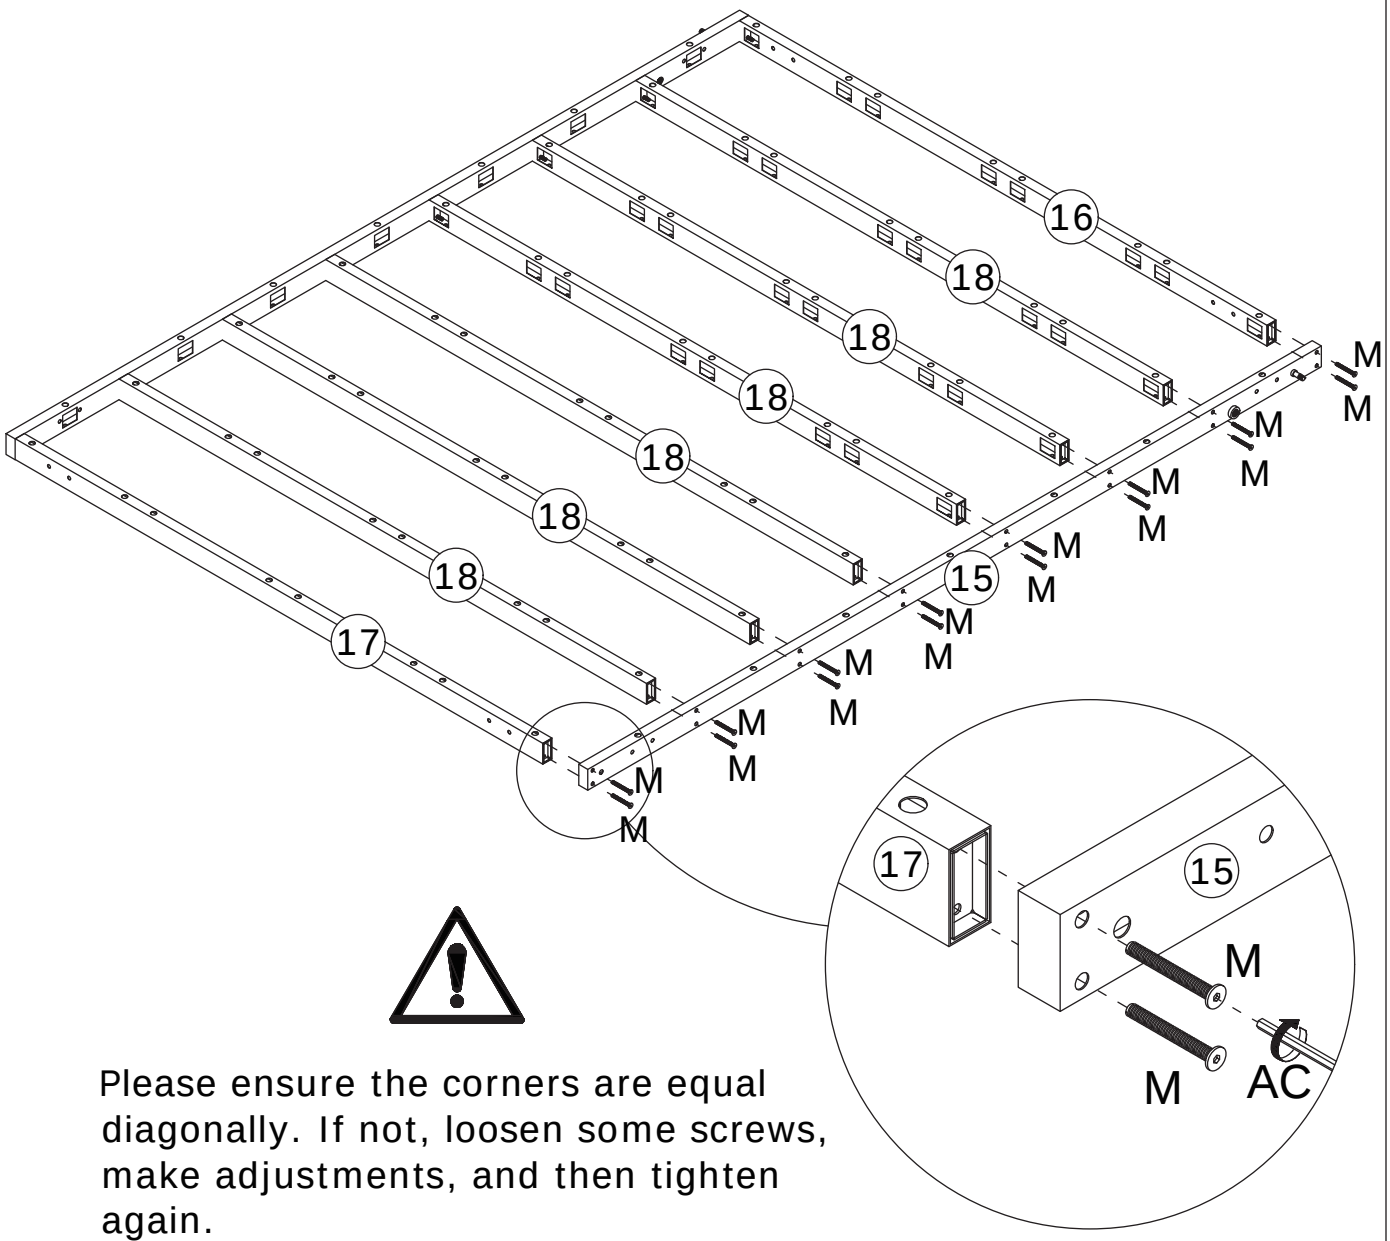

Please ensure the corners are equal diagonally. If not, loosen some screws, make adjustments, and then tighten again.


50


G x 32	AC x 1	
 CRG0612A	 M4	


Connect parts (16), (17) and (18) to Panels 7 and 10 with screws (G) and part (AC). Note the installation orientation of Panels 7 and 10.




Please note, the holes are close to part 17.

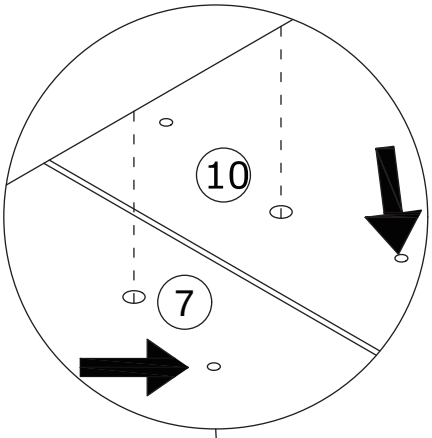

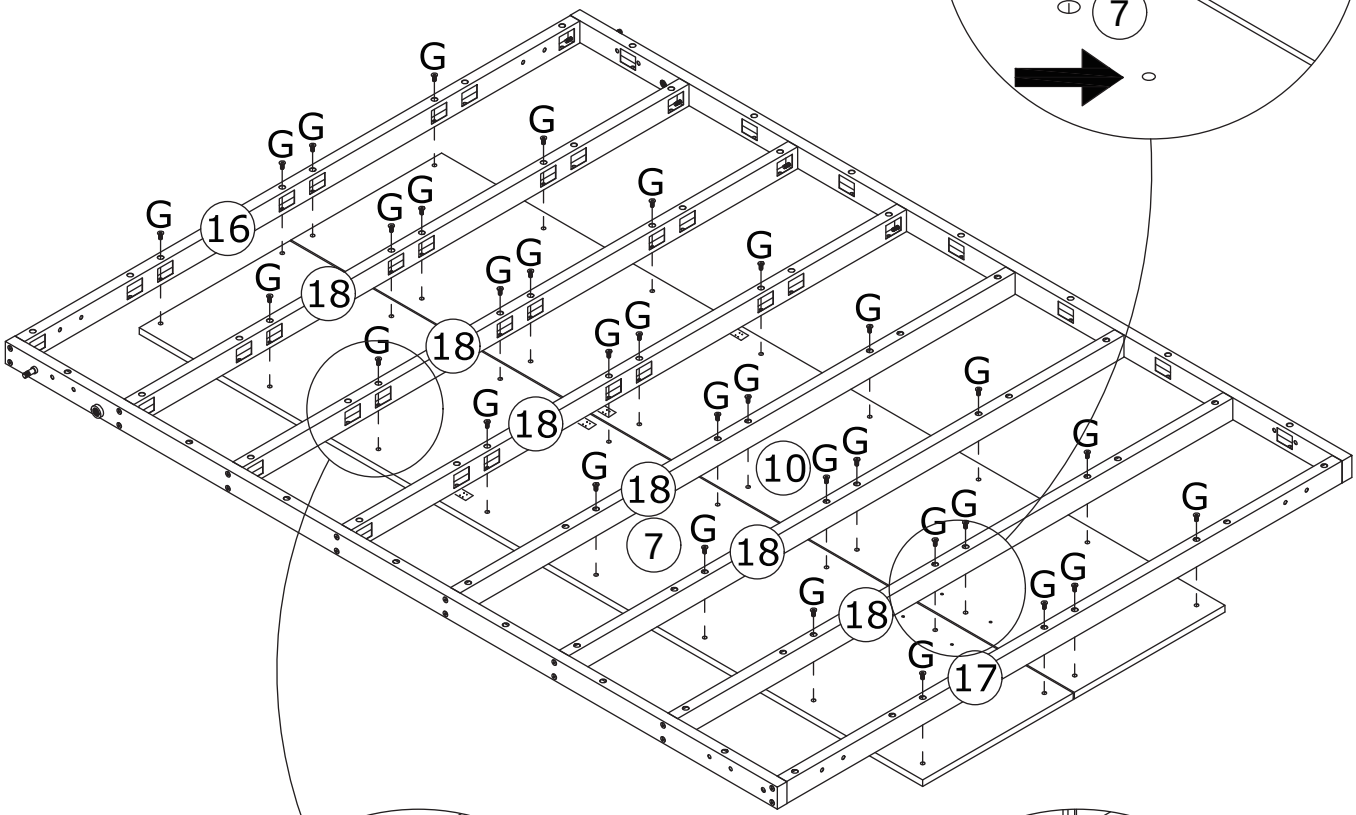


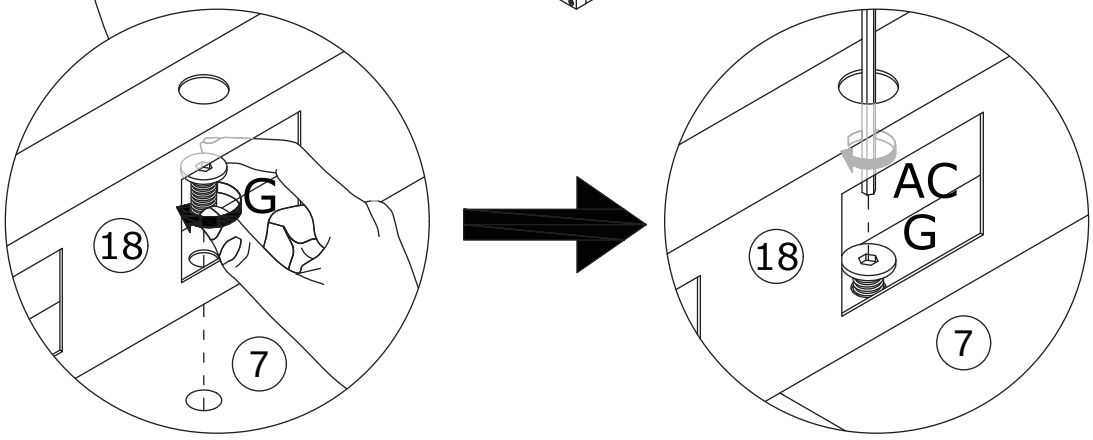

51

L x 4	AC x 1	
 CRG0616A	 M4	


Connect part (22) to part (16) with screws (L) and part (AC).

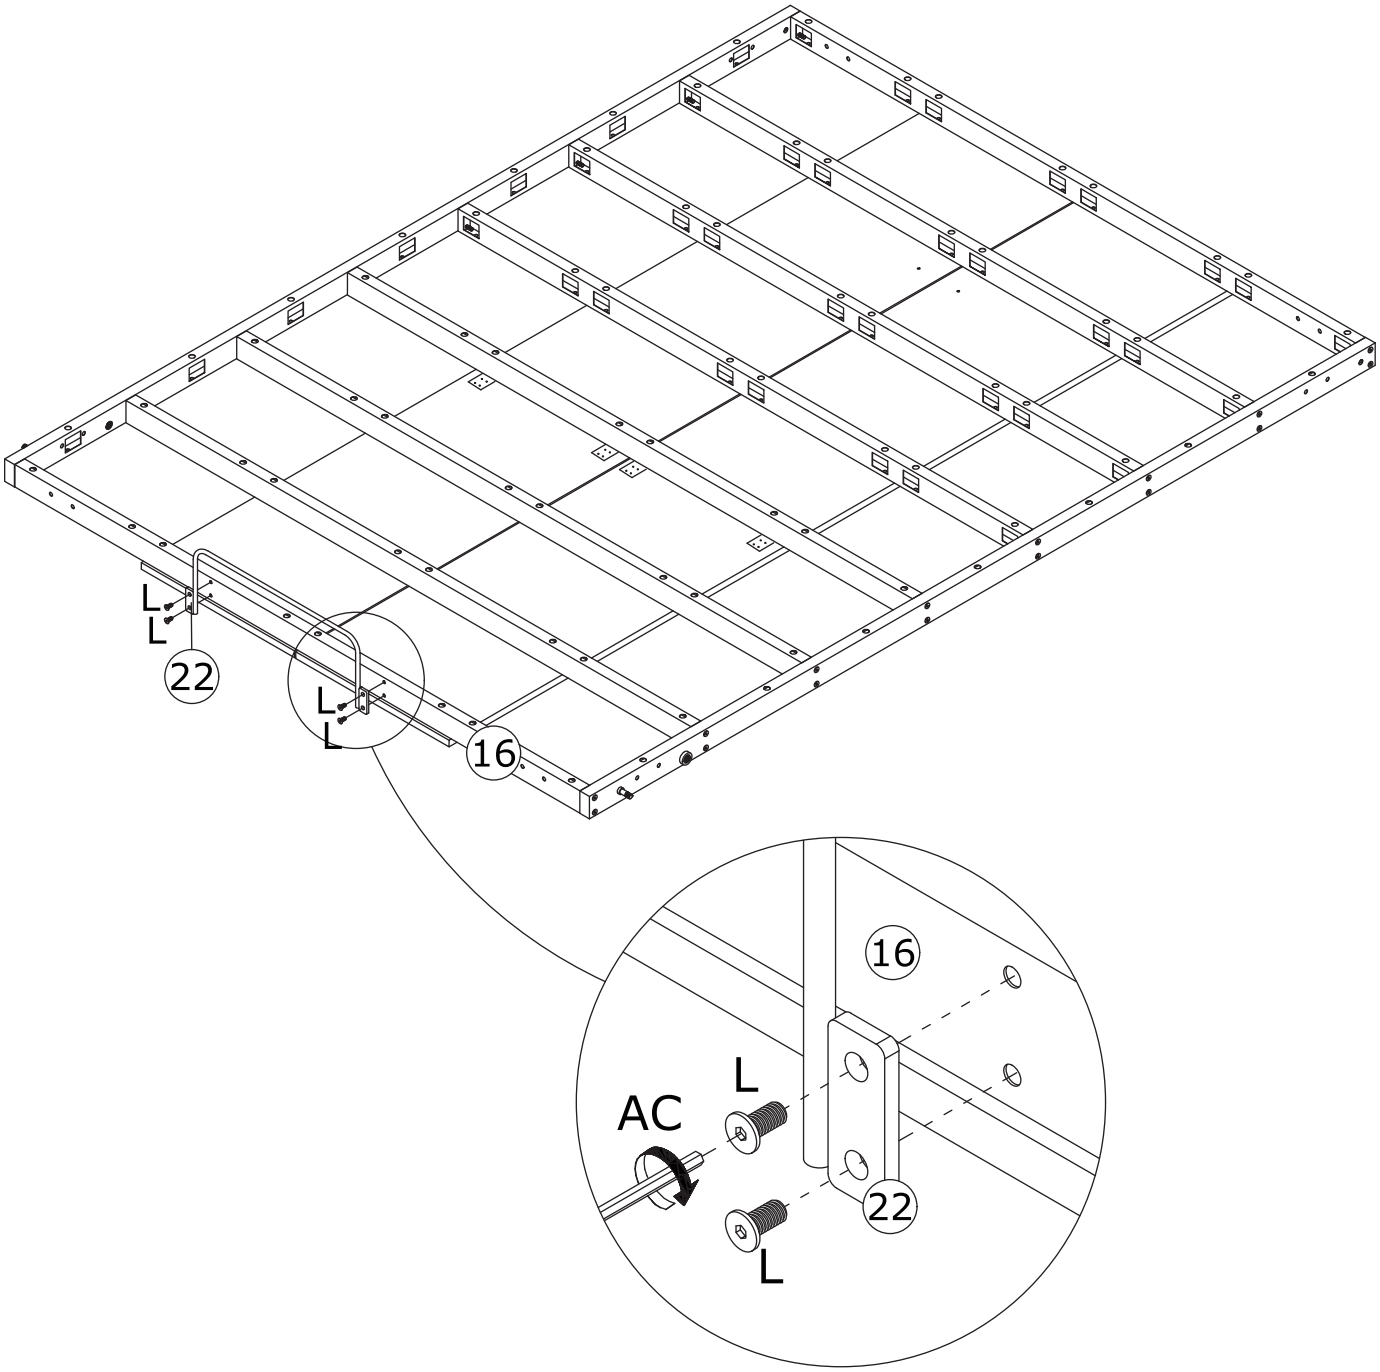



52

G x 4	S x 2	AC x 1	AF x 1	
CRG0612A		M4	M8	


First insert part (19) into parts (15) and (21); insert part (20) into parts (14) and (21). Then secure with nuts (S) and part (AF). Finally connect parts (19) and (20) to part (21) with screws (G).

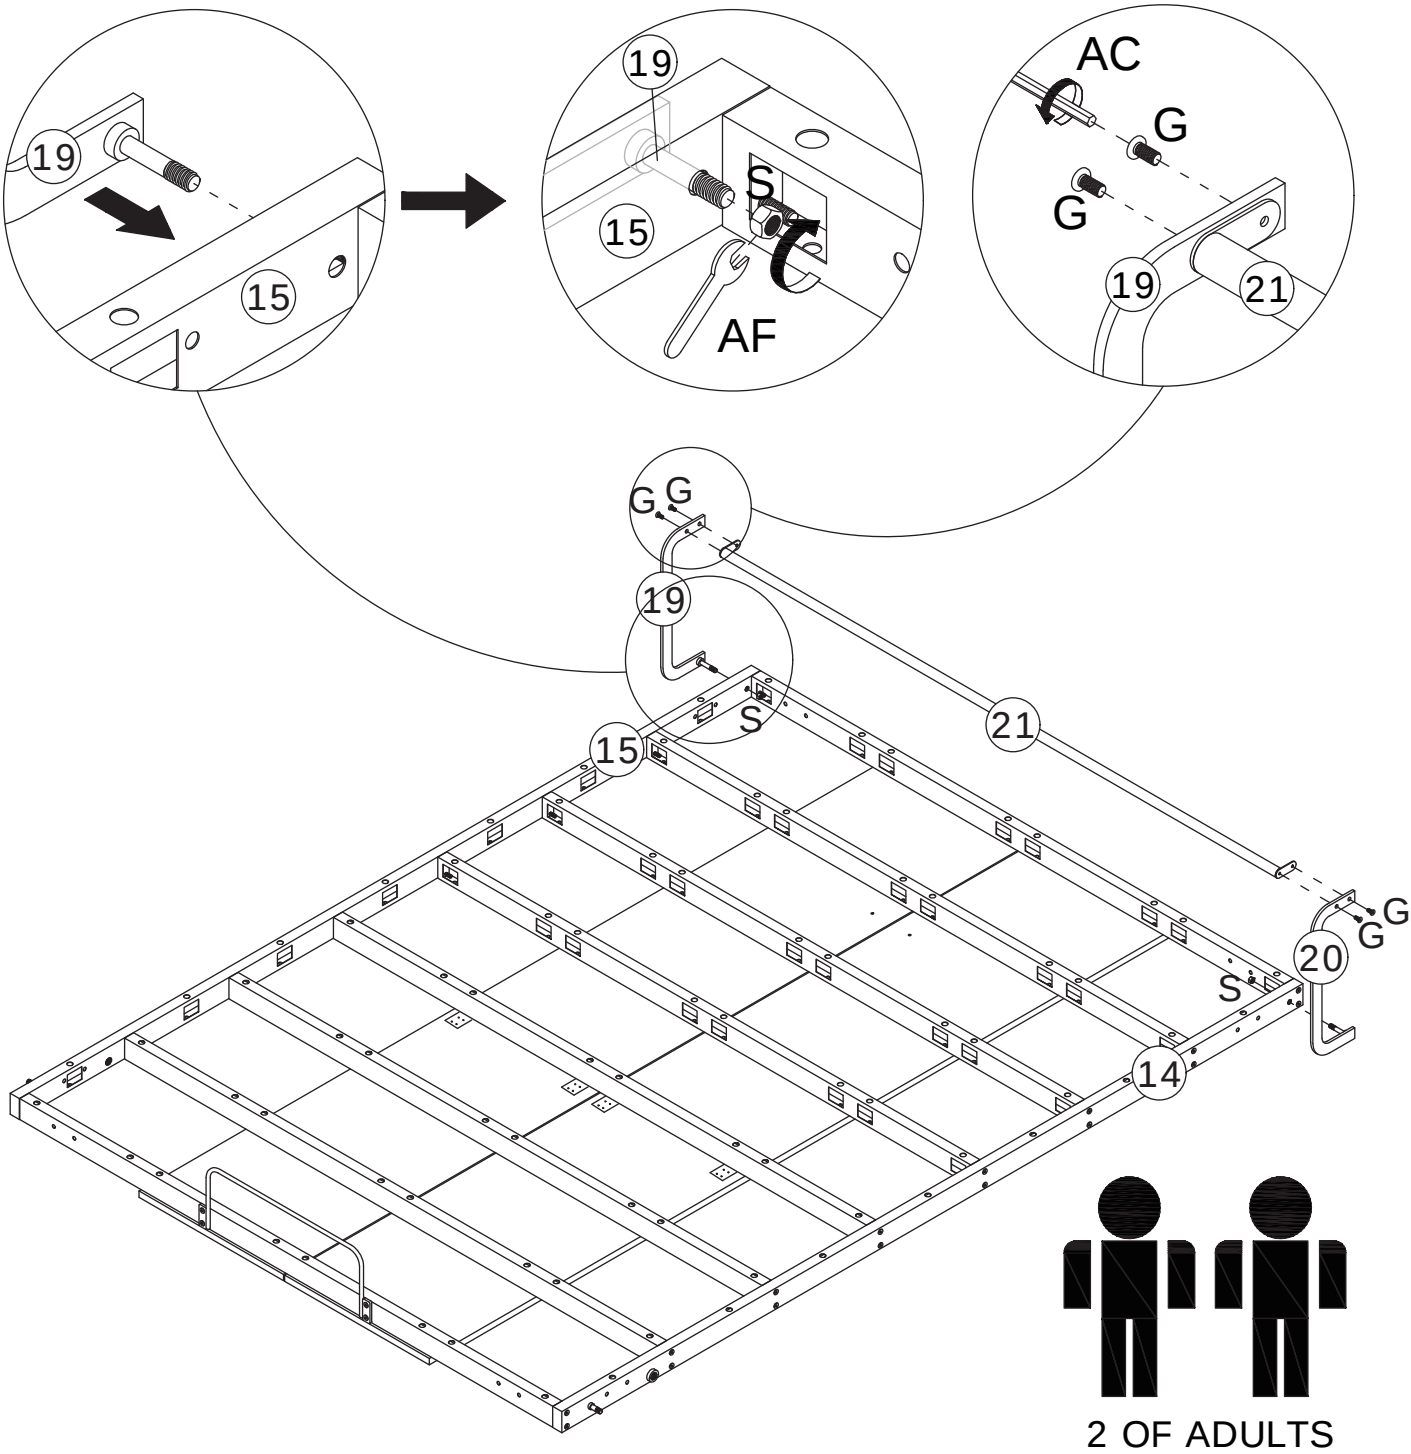


53

N x 4	AJ x 16	Q x 16	AE x 1	AF x 1	
	 CRG0835A		 M5	 M8	


Install part (N) onto the installation unit with screws (AJ), nuts (Q).

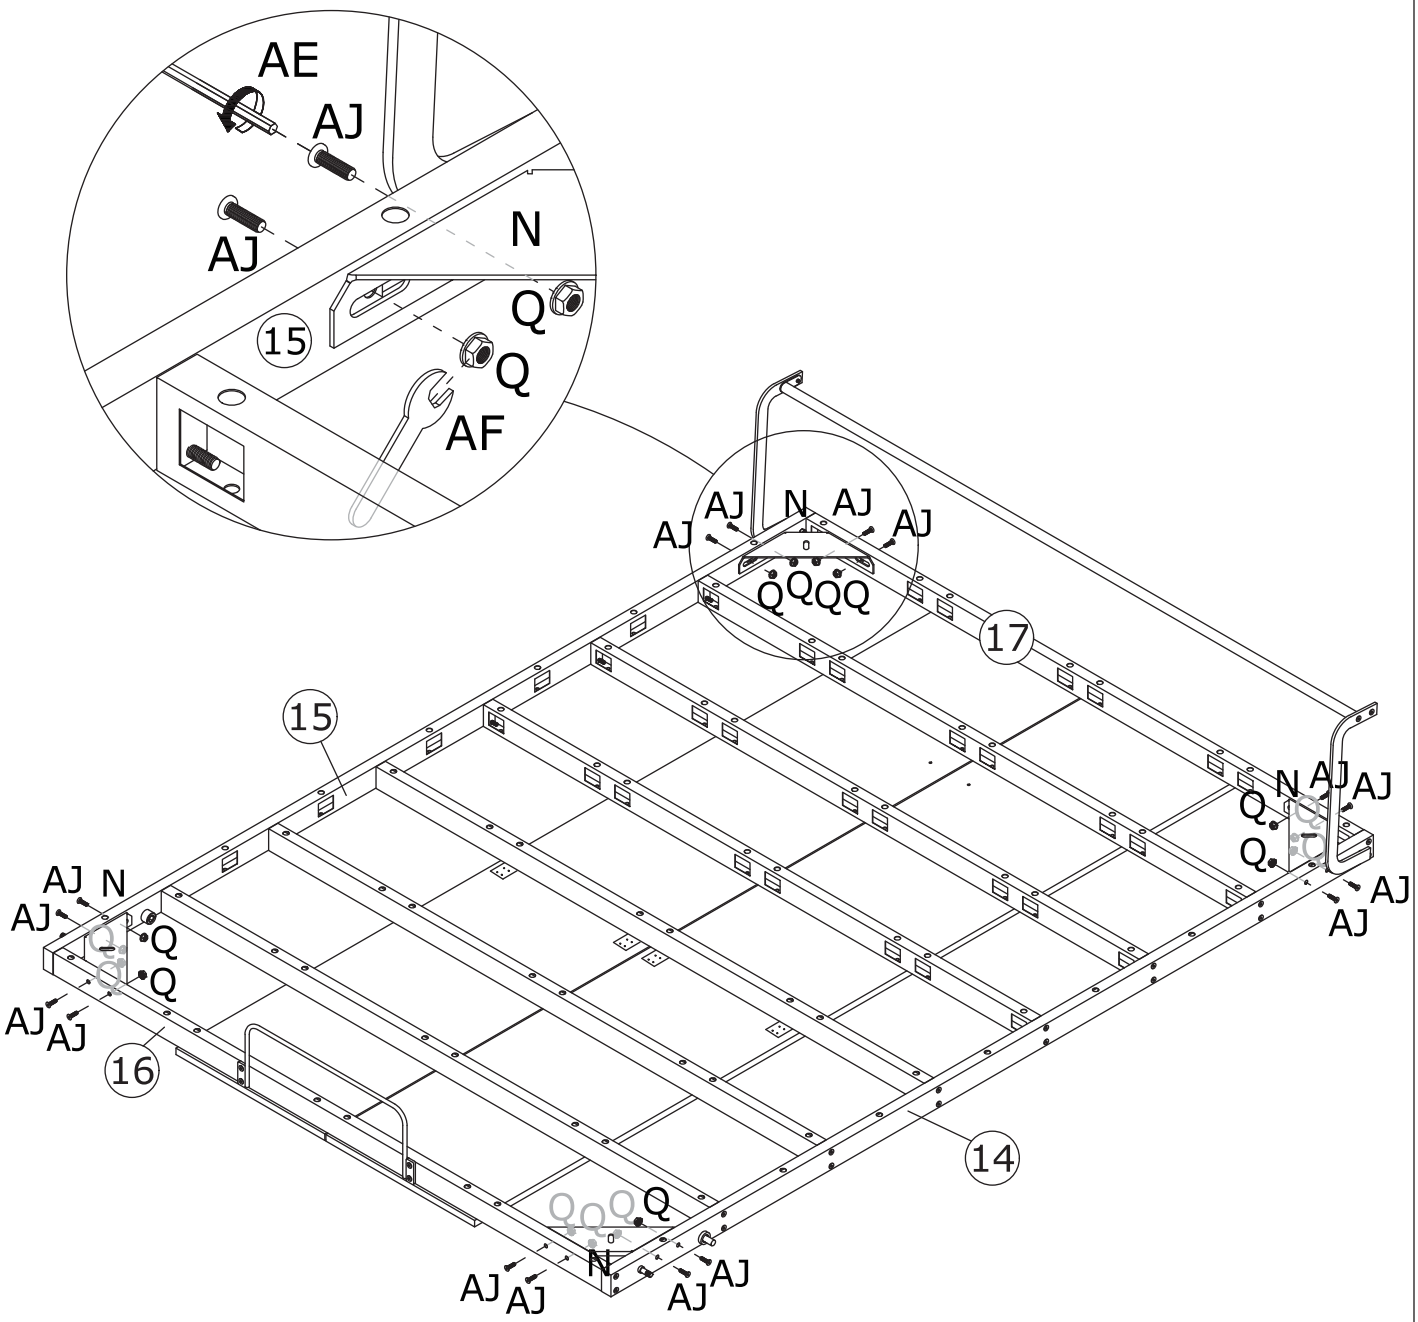


54

R x 2	T x 2	AF x 1	
		 M8	


Install part (R) onto parts (14) and (15) with nuts (T).

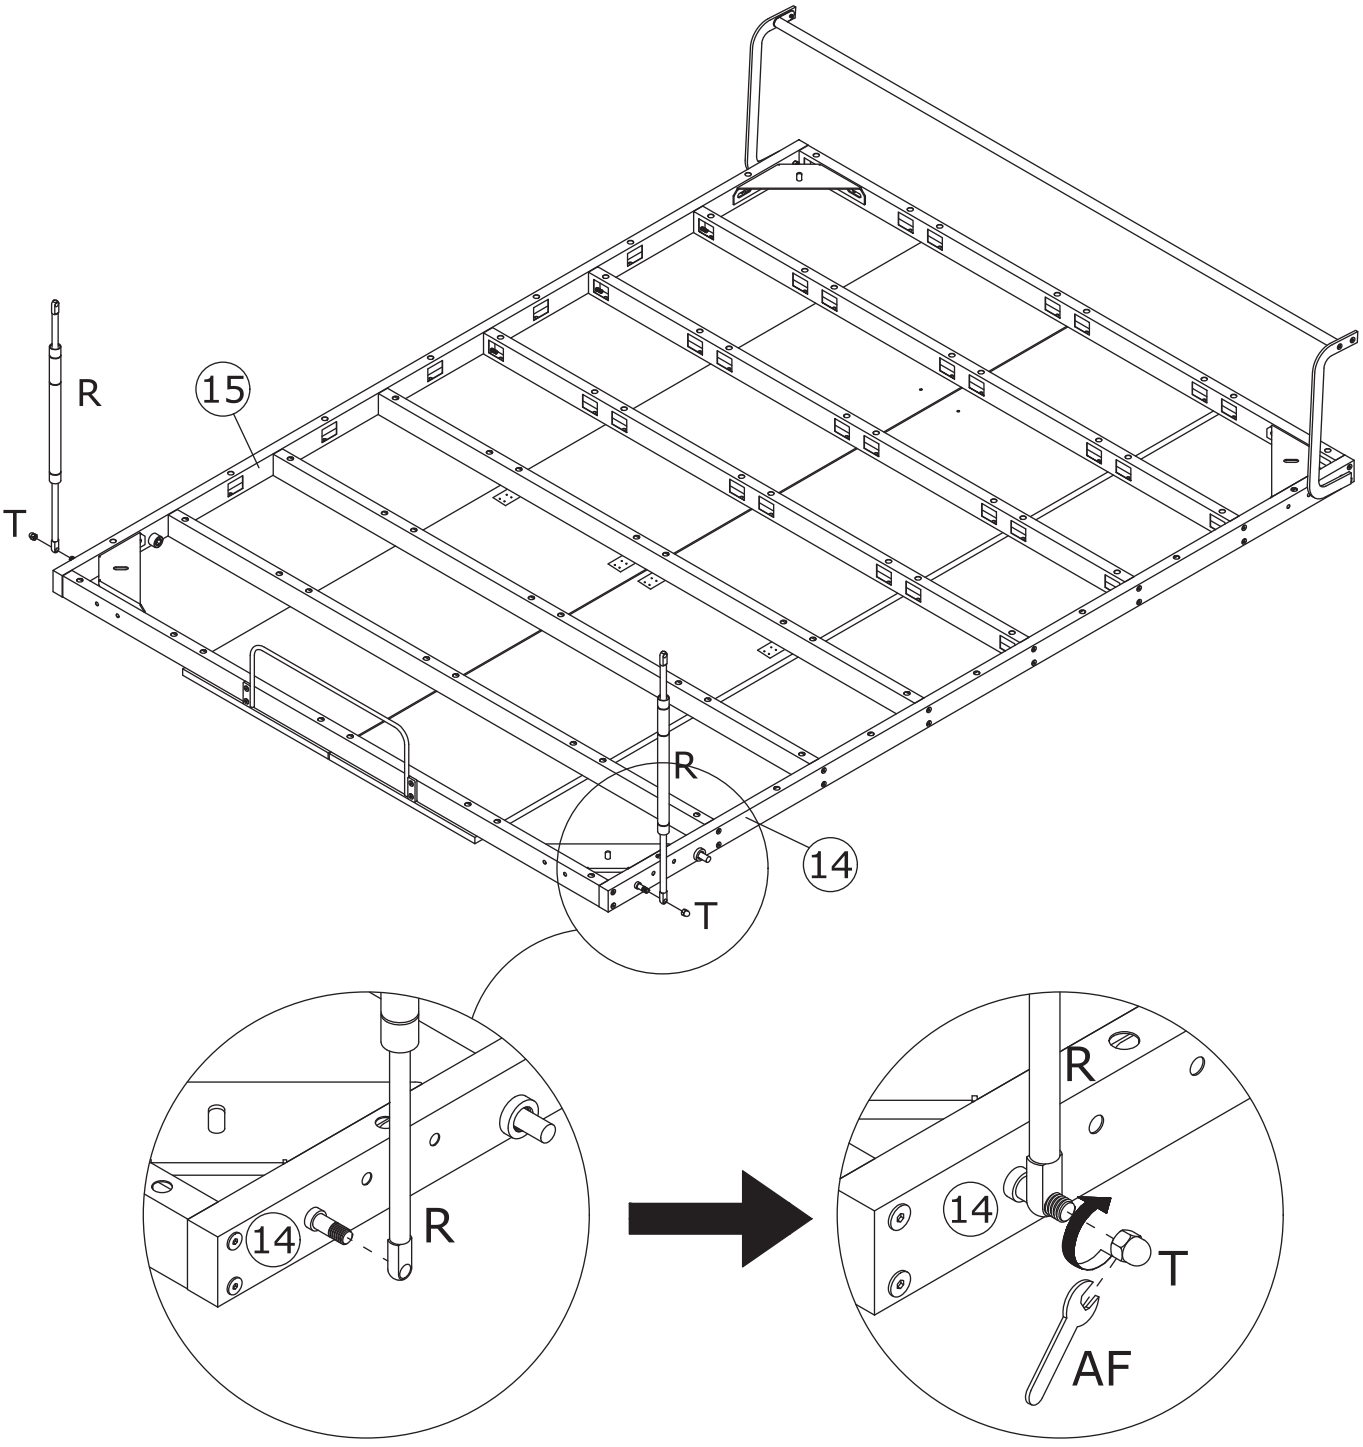


55

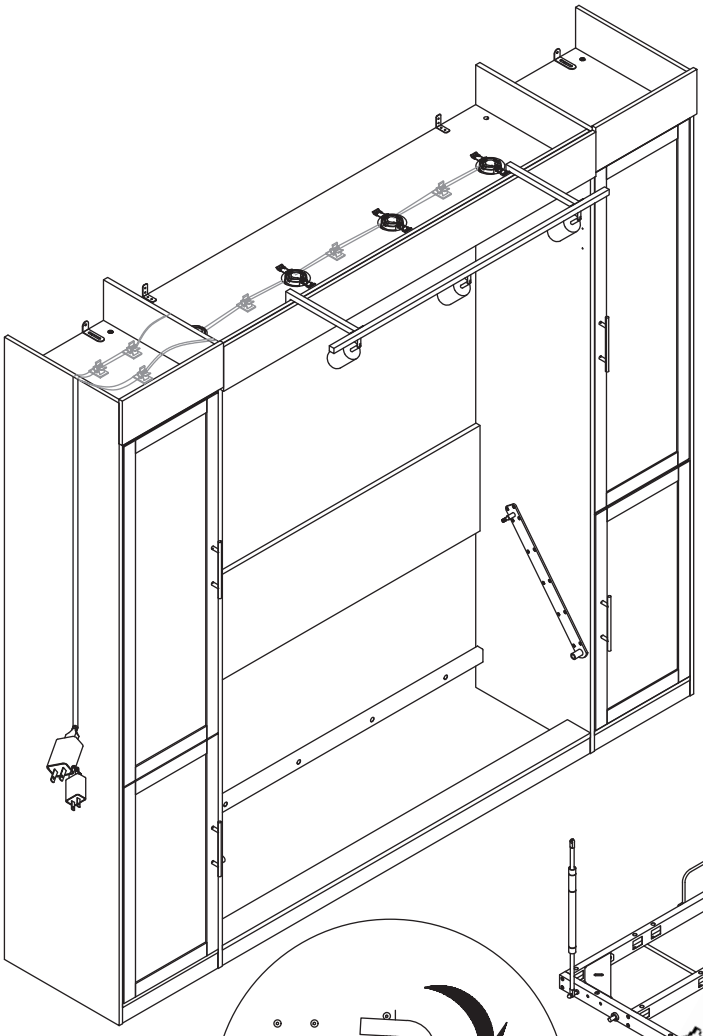

Assemble the bed frame to the main body.
Note: beware of pinching fingers; hold it by hand during installation.

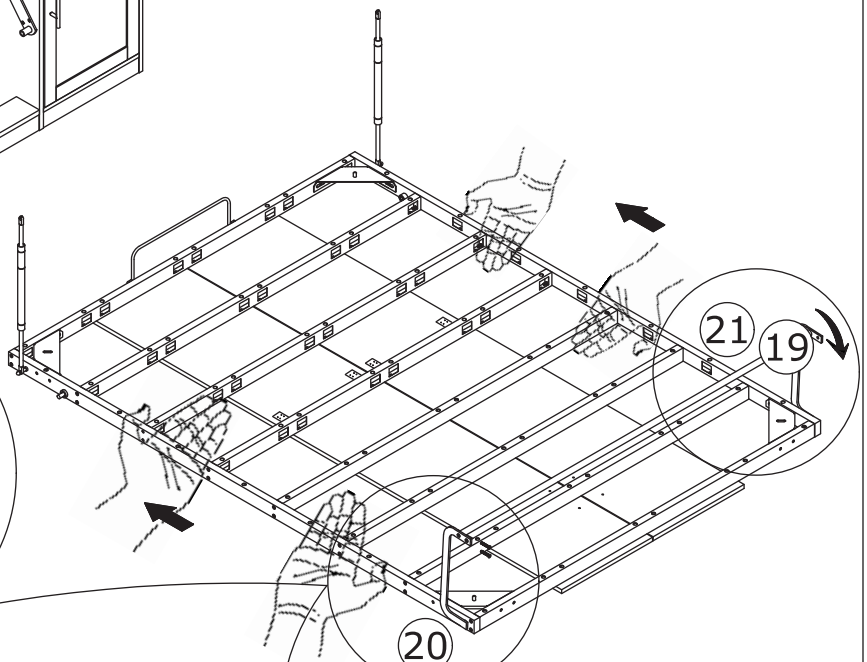


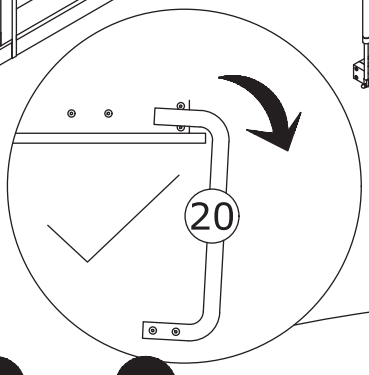



3 OF ADULTS




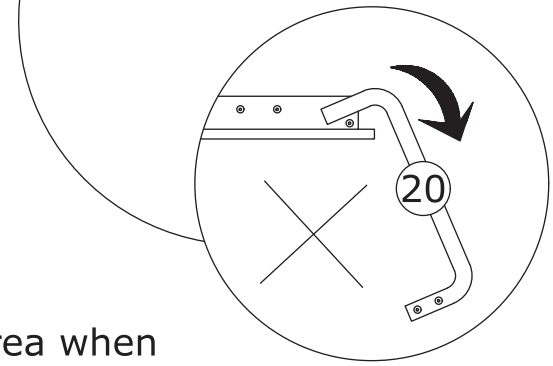


Keep hands away from this area when lifting the bed frame to avoid pinching .


56

AD x 1

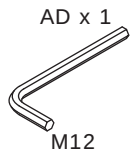



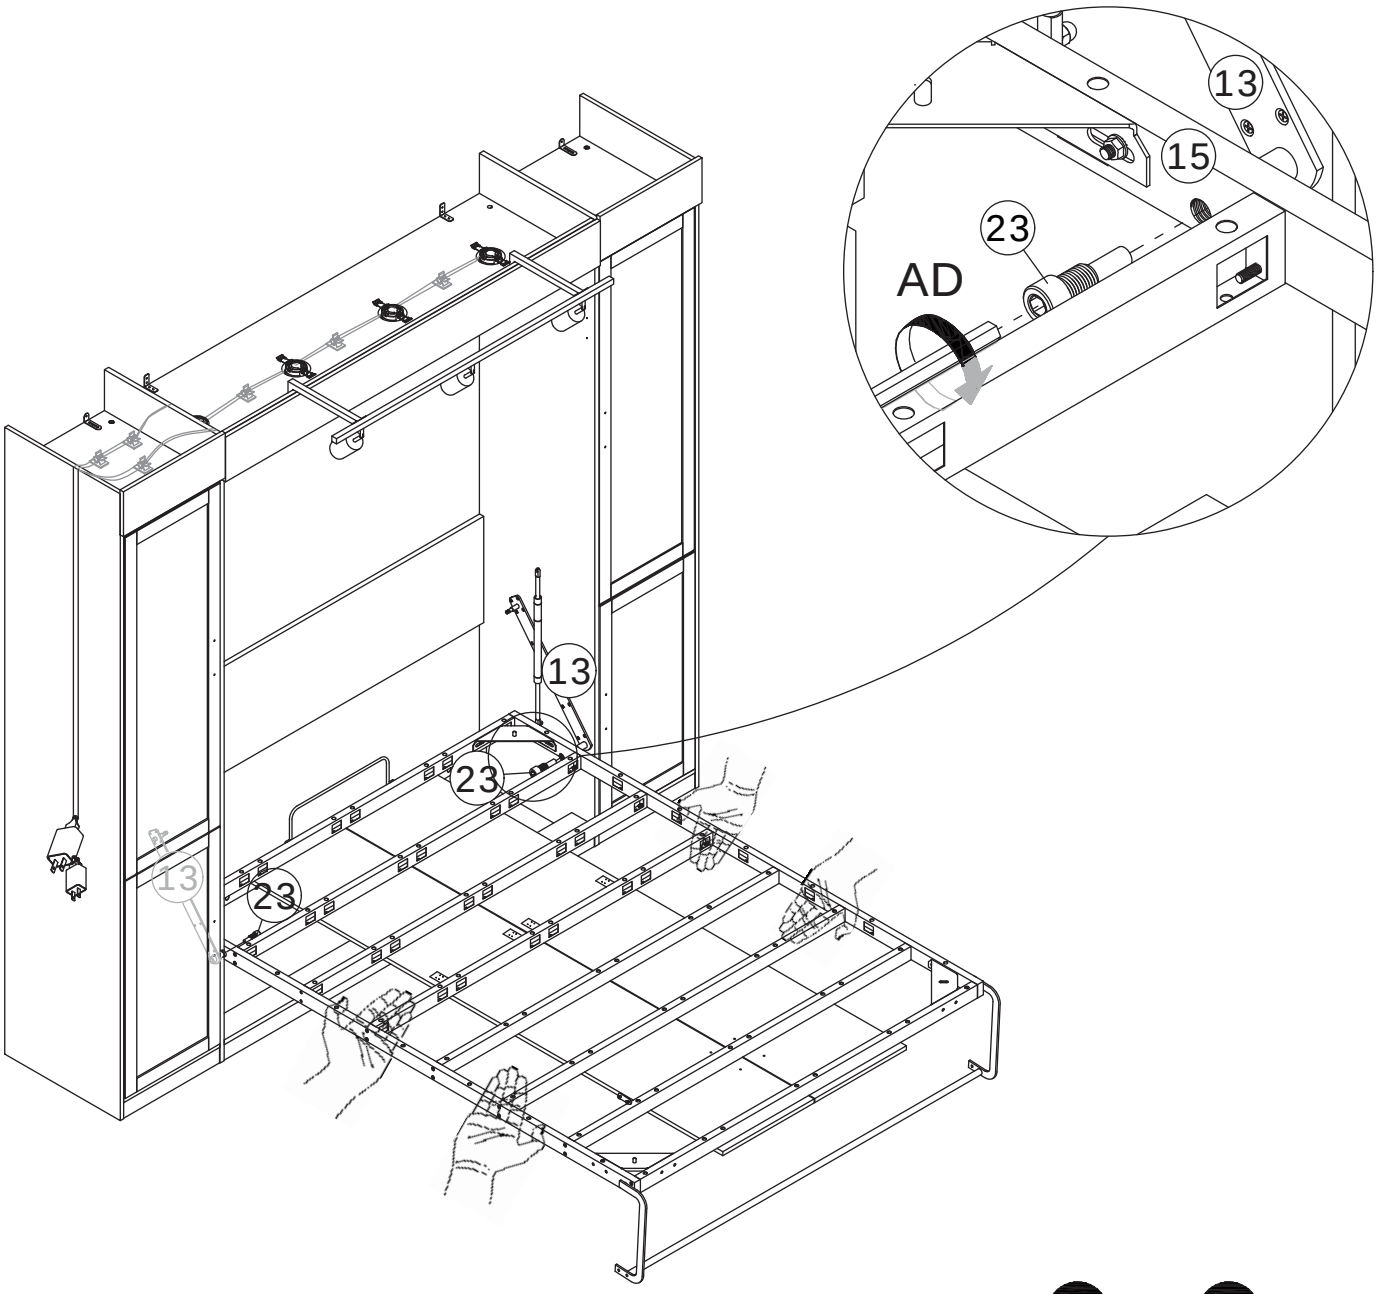


Connect parts (14) and (15) to part (13) with part (23).

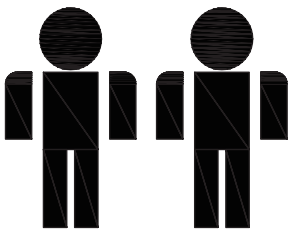


2 OF ADULTS

57

U x 2	V x 4	
	 CRE0420A	


Install handles (U) onto Panels 7 and 10 with screws (V).

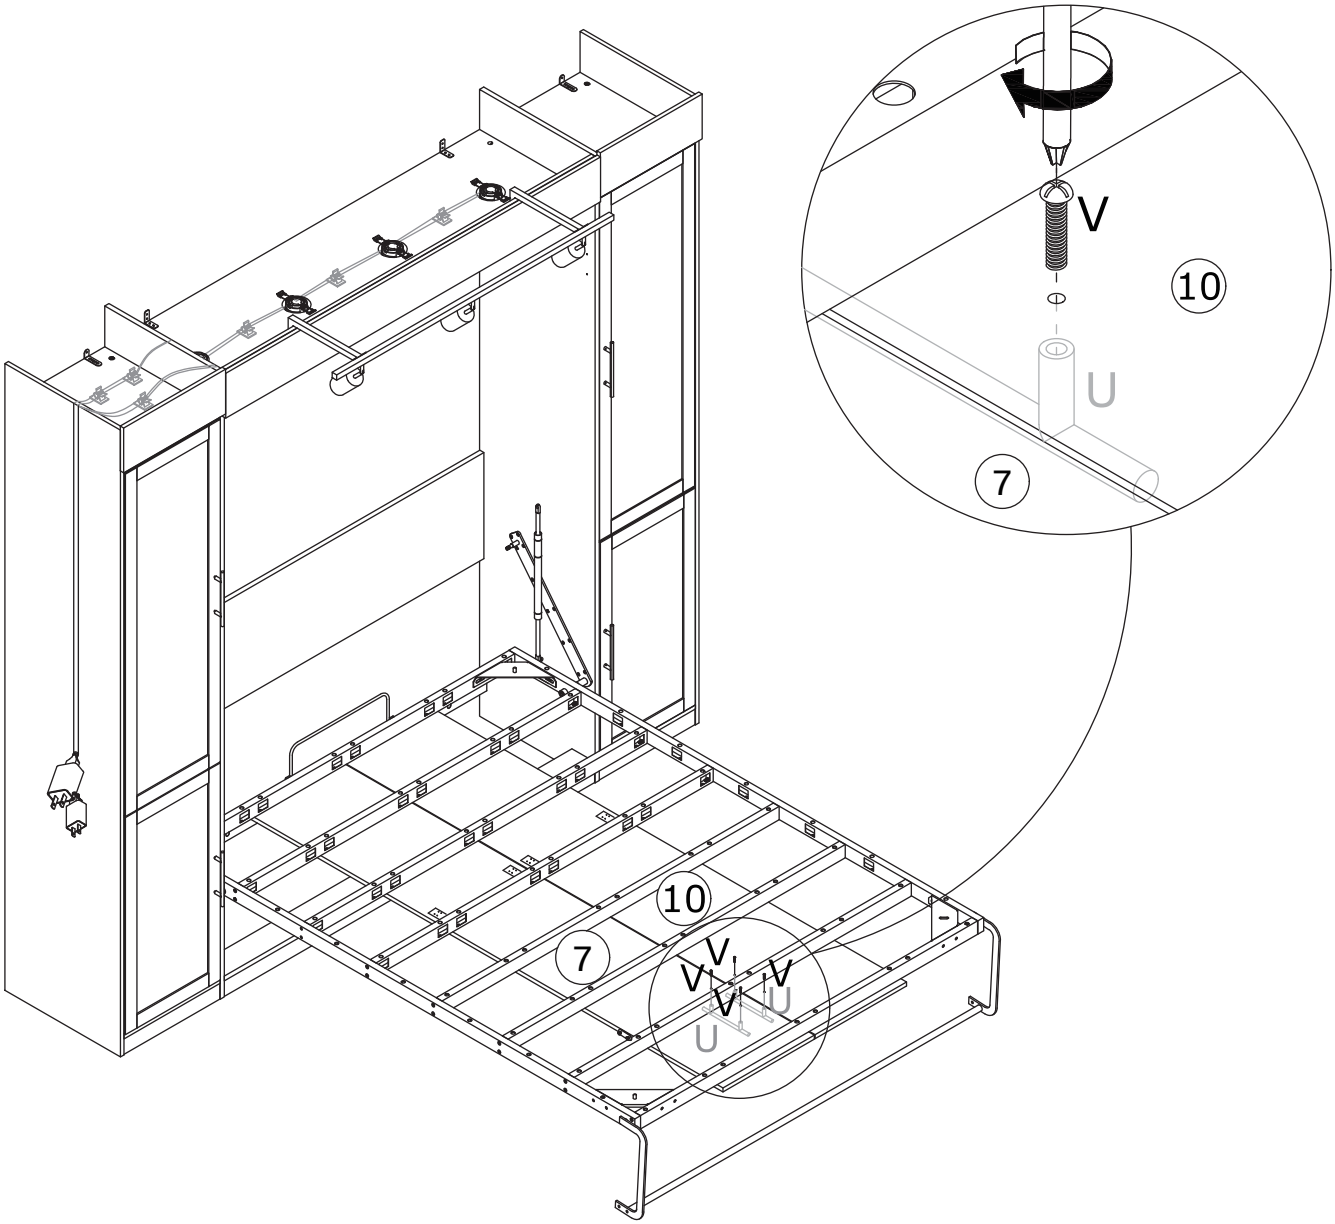

58


Close the bed frame and push it an appropriate distance toward the wall. Note: beware of pinching fingers.


When lifting the bed frame, do not place your hands on the frame edges, as well as parts (19) and (20),to avoid pinching.

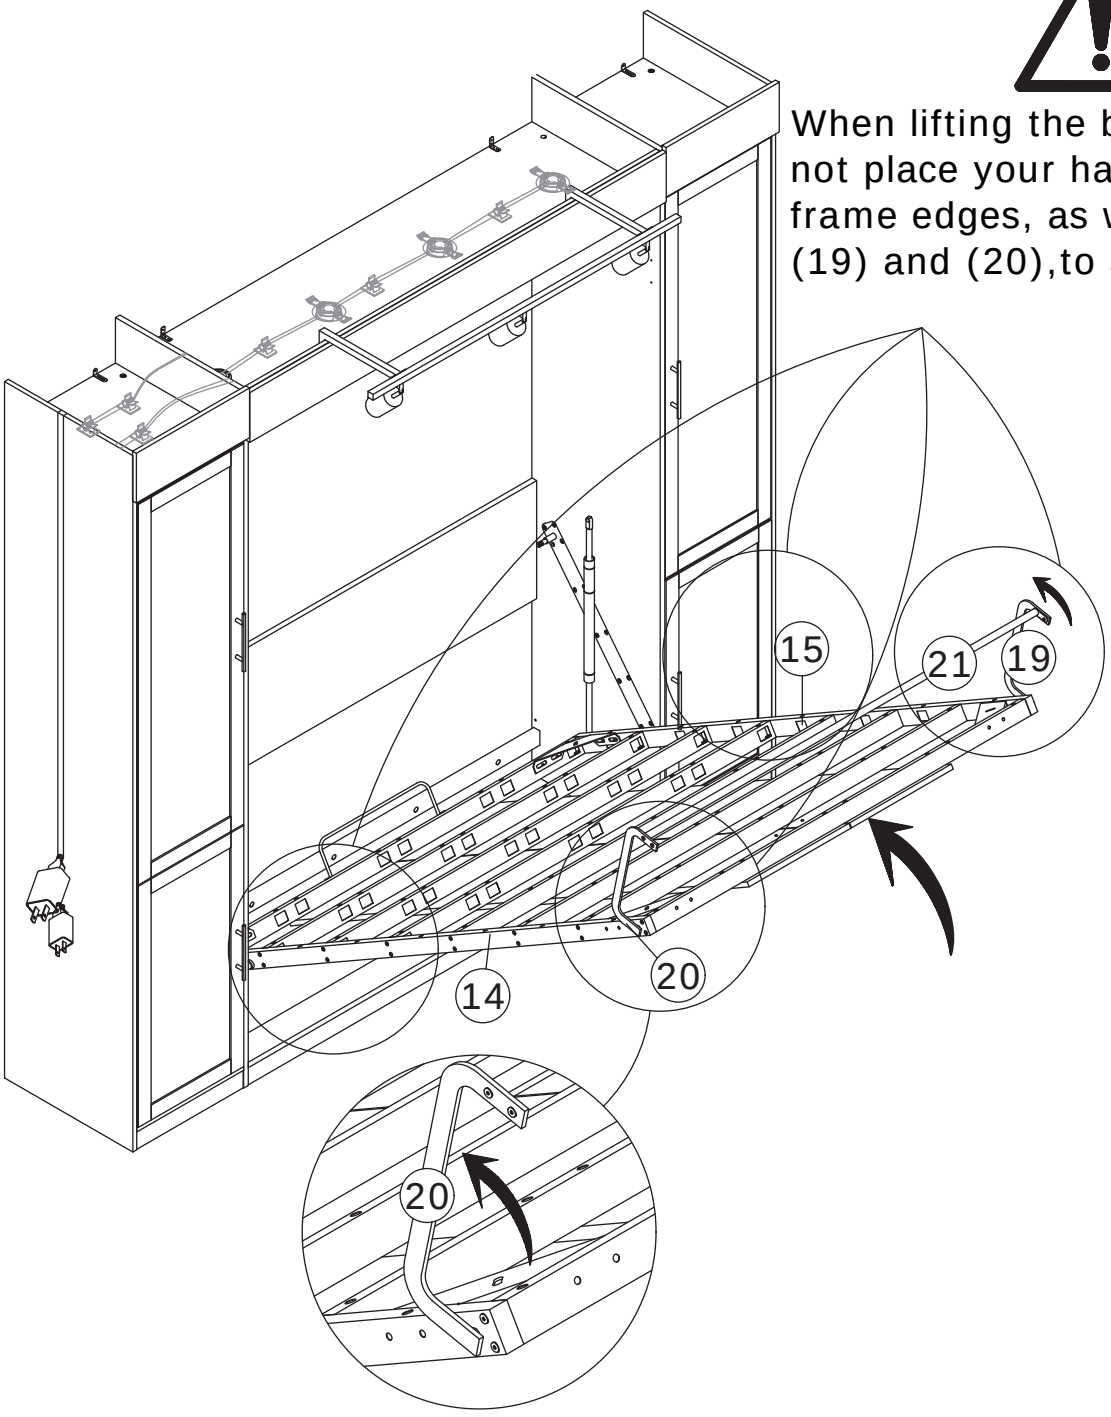

59


T x 2	AF x 1	
	 M8	

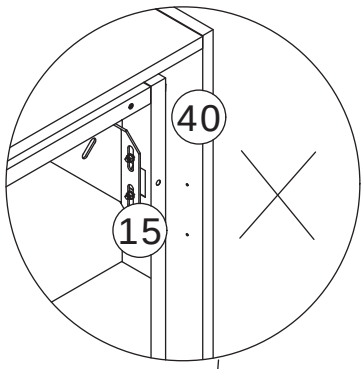


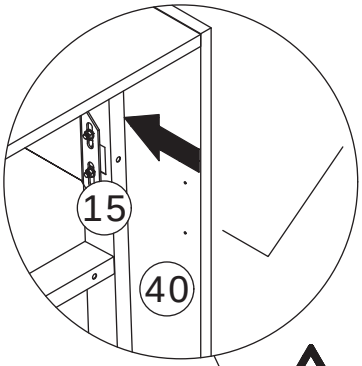



Install part (R) onto part (13) with nuts (T)\.

After straightening the bed frame, push it toward the wall at an appropriate angle.

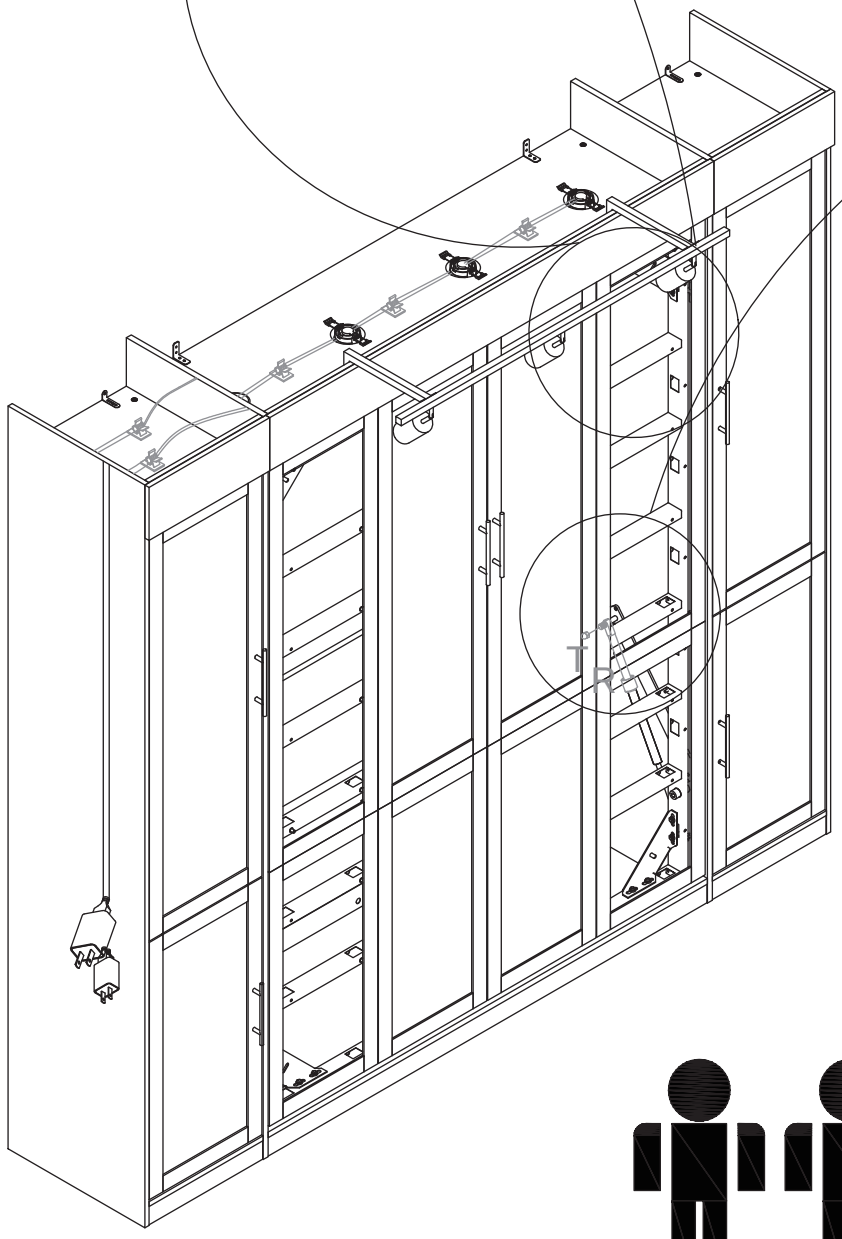

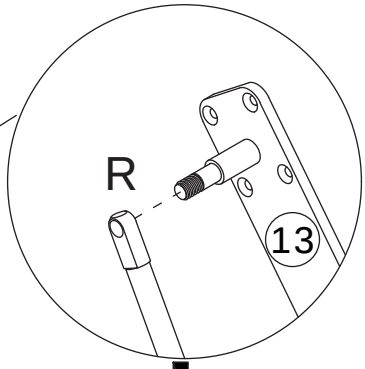

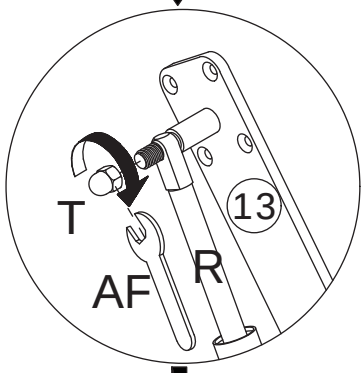

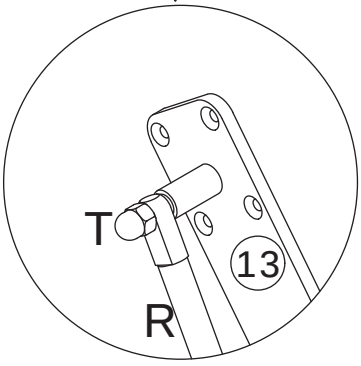


2 OF ADULTS


60

Open the bed frame and flip parts (19), (20) and (21) downward to open.

Note: beware of pinching fingers.


Keep hands away from this area when lifting the bed frame to avoid pinching .

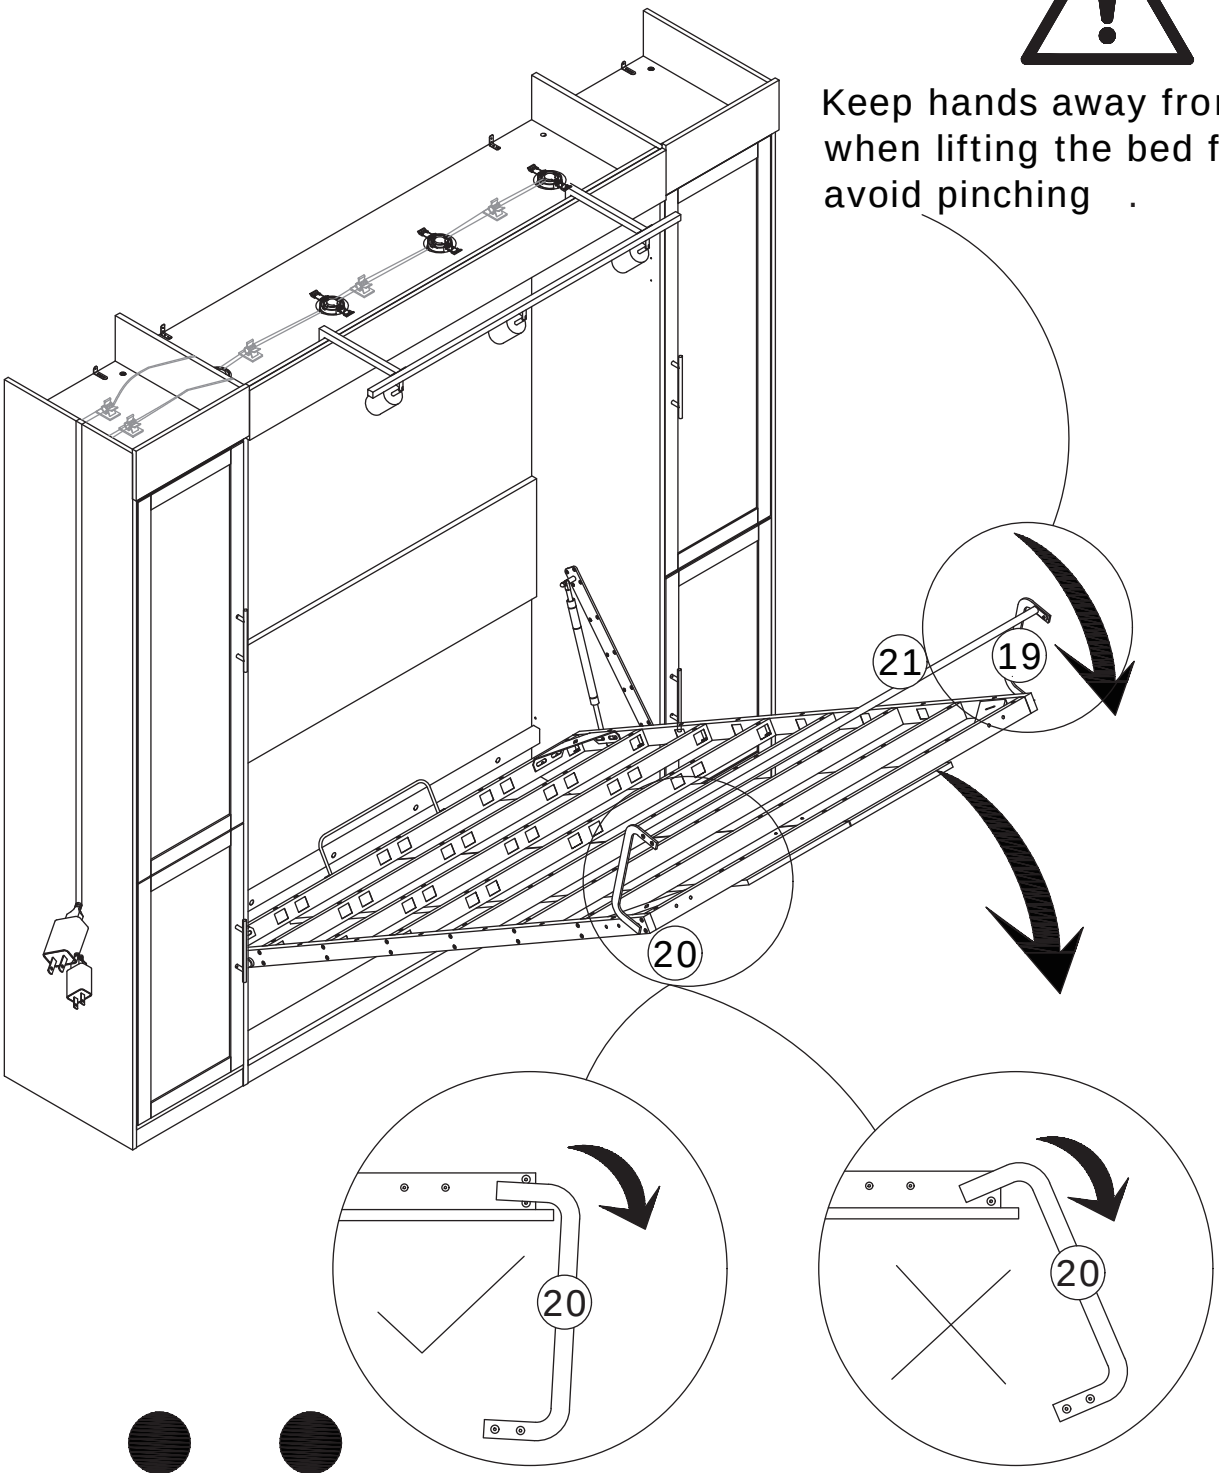

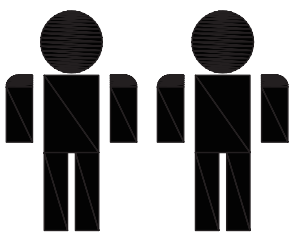


2 OF ADULTS

61


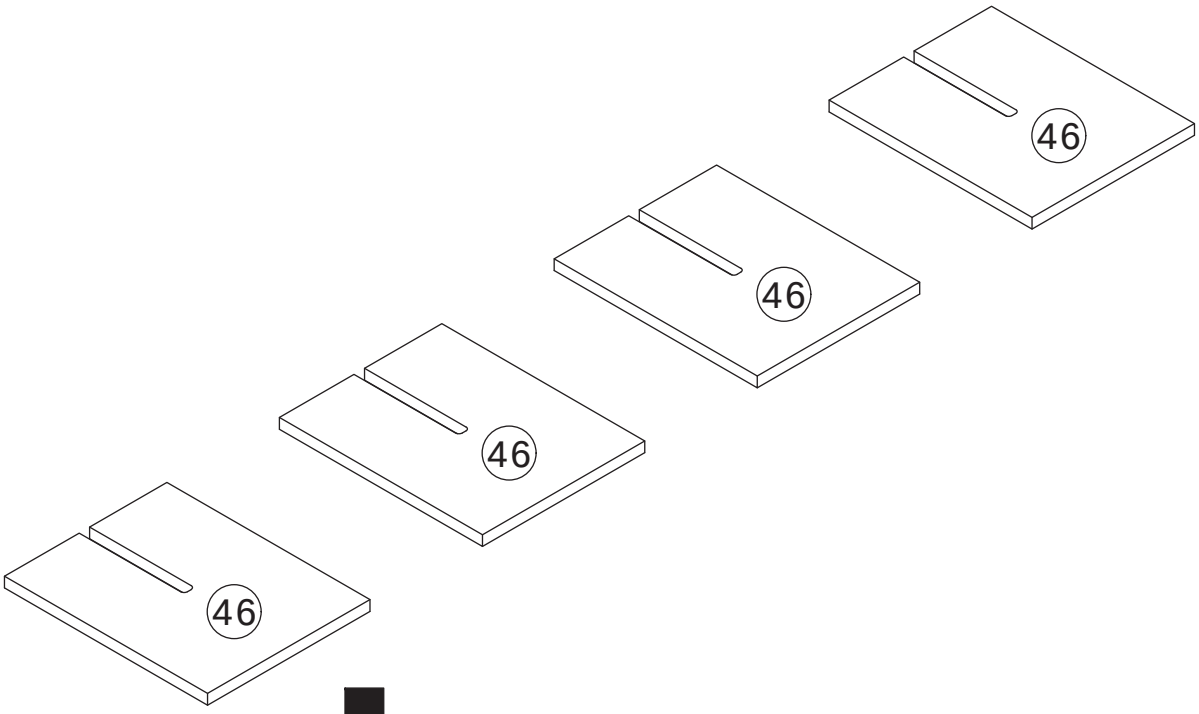


Assemble assist panel 46.

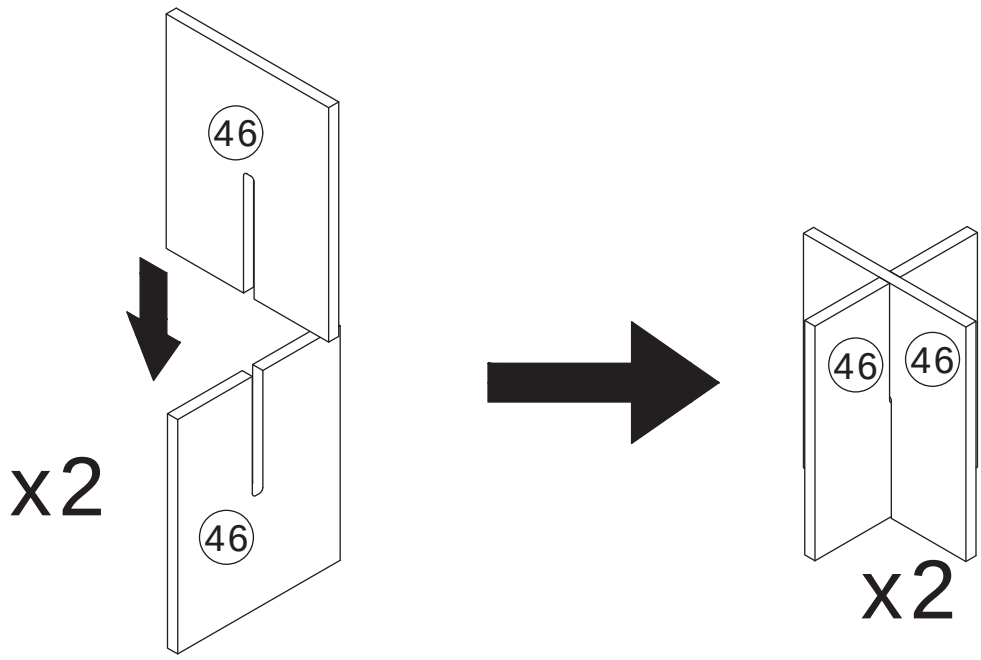



Panel 46 is only used as an auxiliary plate, does not participate in cabinet assembly, and can be disposed of as you wish after use.

62

E x 4	W x 2	
 CRD3514A	 W-1	

E	AA	AB
 CRD3514A	 CRD0314A	 CRD0416A

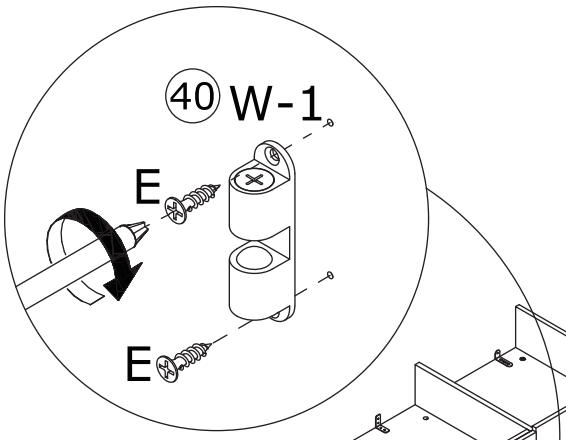


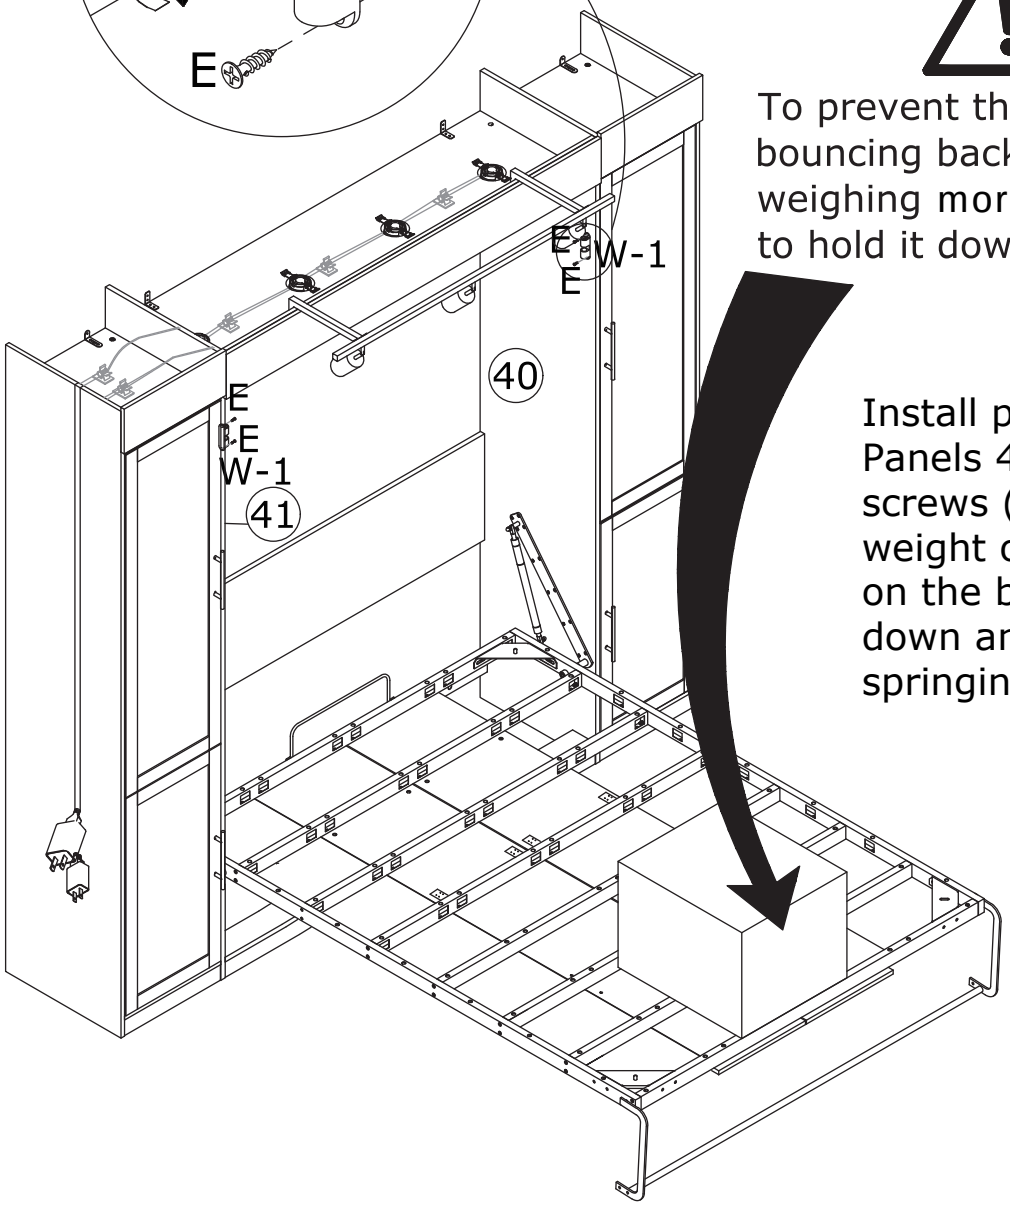

To prevent the bed frame from bouncing back, place an object weighing more than 20 kg on it to hold it down.

Install part (W-1) onto Panels 40 and 41 with screws (E), then place a weight of more than 20 kg on the bed frame to hold it down and prevent it from springing back.


Do not place objects directly on the door panel.

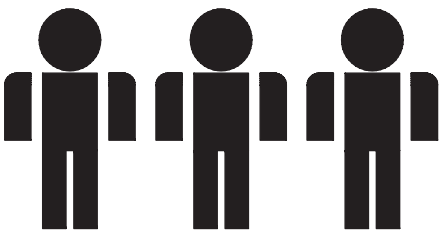

3 OF ADULTS

63


G x 23	AC x 1	
CRG0612A	M4	

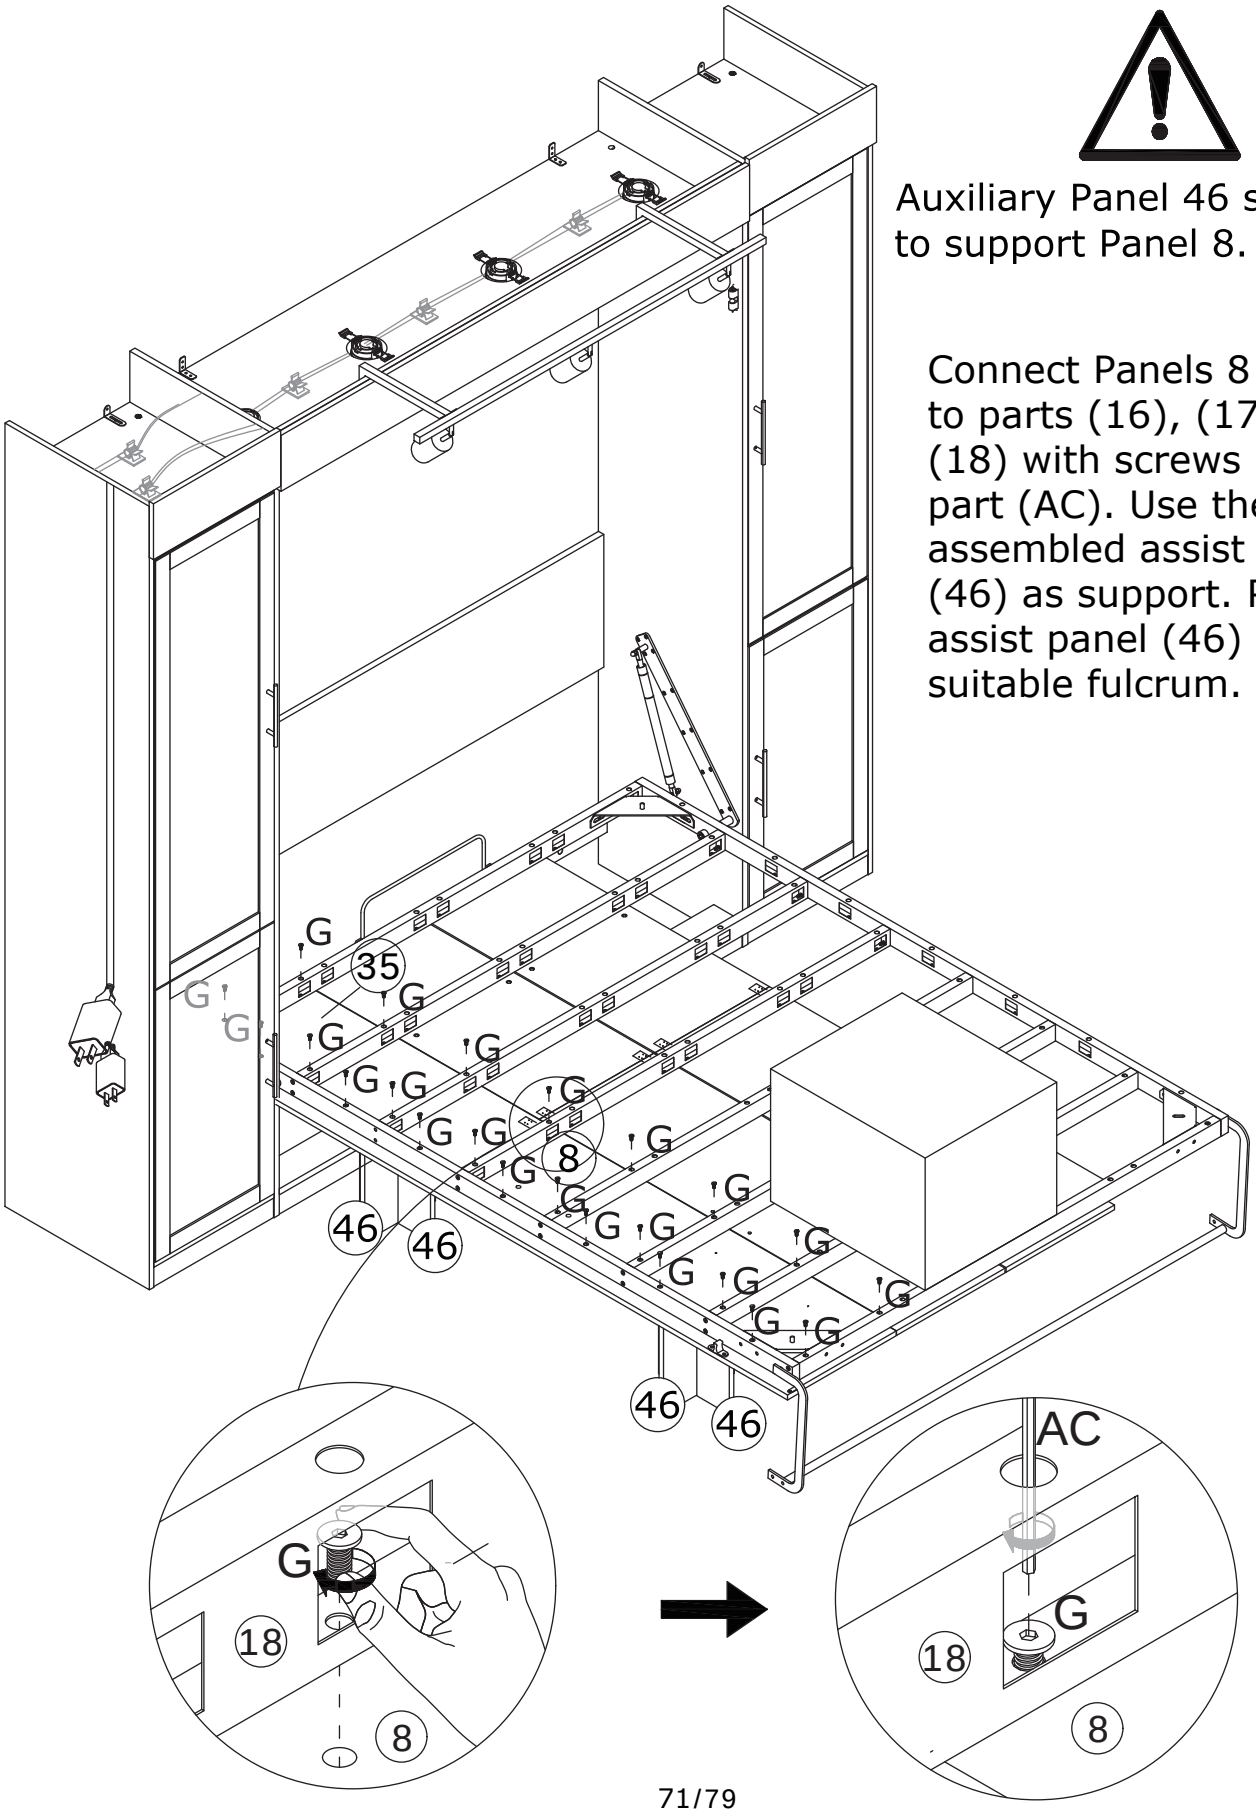

Auxiliary Panel 46 serves to support Panel 8.

Connect Panels 8 and 35 to parts (16), (17) and (18) with screws (G) and part (AC). Use the assembled assist panel (46) as support. Place assist panel (46) at a suitable fulcrum.


64

G x 23	AC x 1	
 CRG0612A	 M4	

Connect Panels 9 and 36 to parts (16), (17) and (18) with screws (G) and part (AC). Use the assembled assist panel (46) as support. Place assist panel (46) at a suitable fulcrum.




Auxiliary Panel 46 serves to support Panel 9.

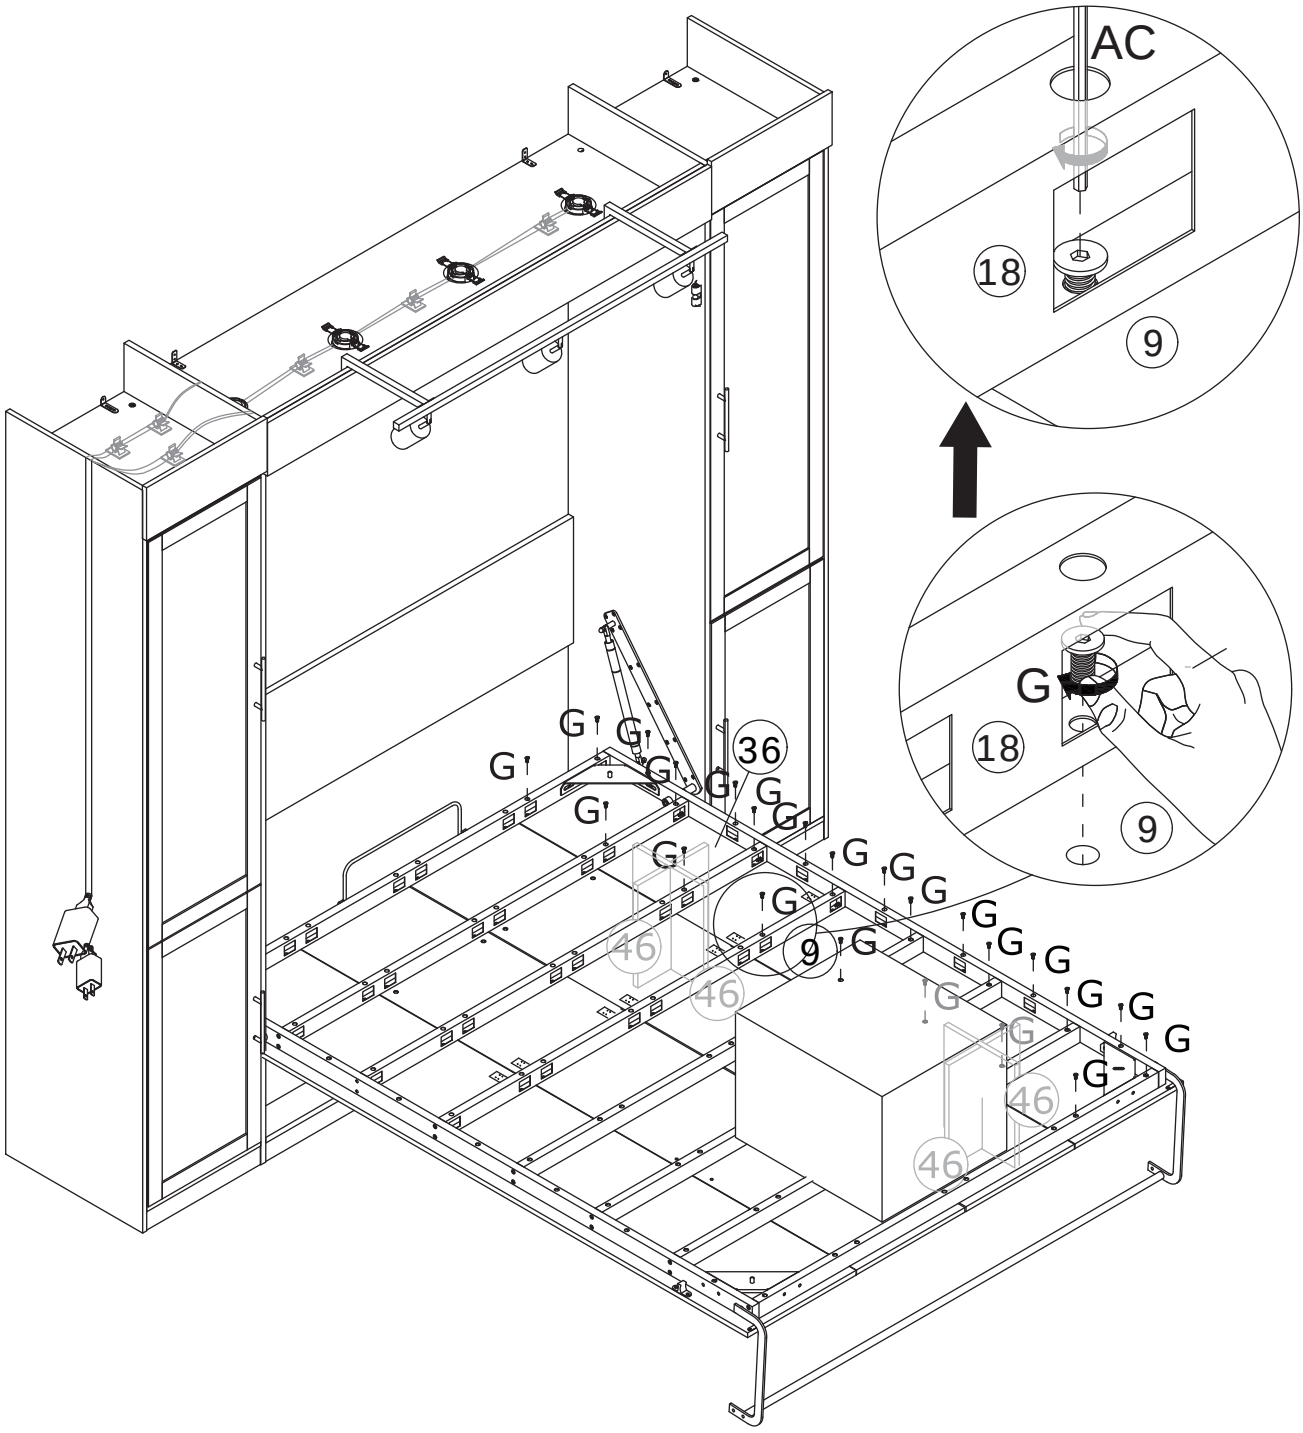

65

Move the weight to underneath the bed frame.

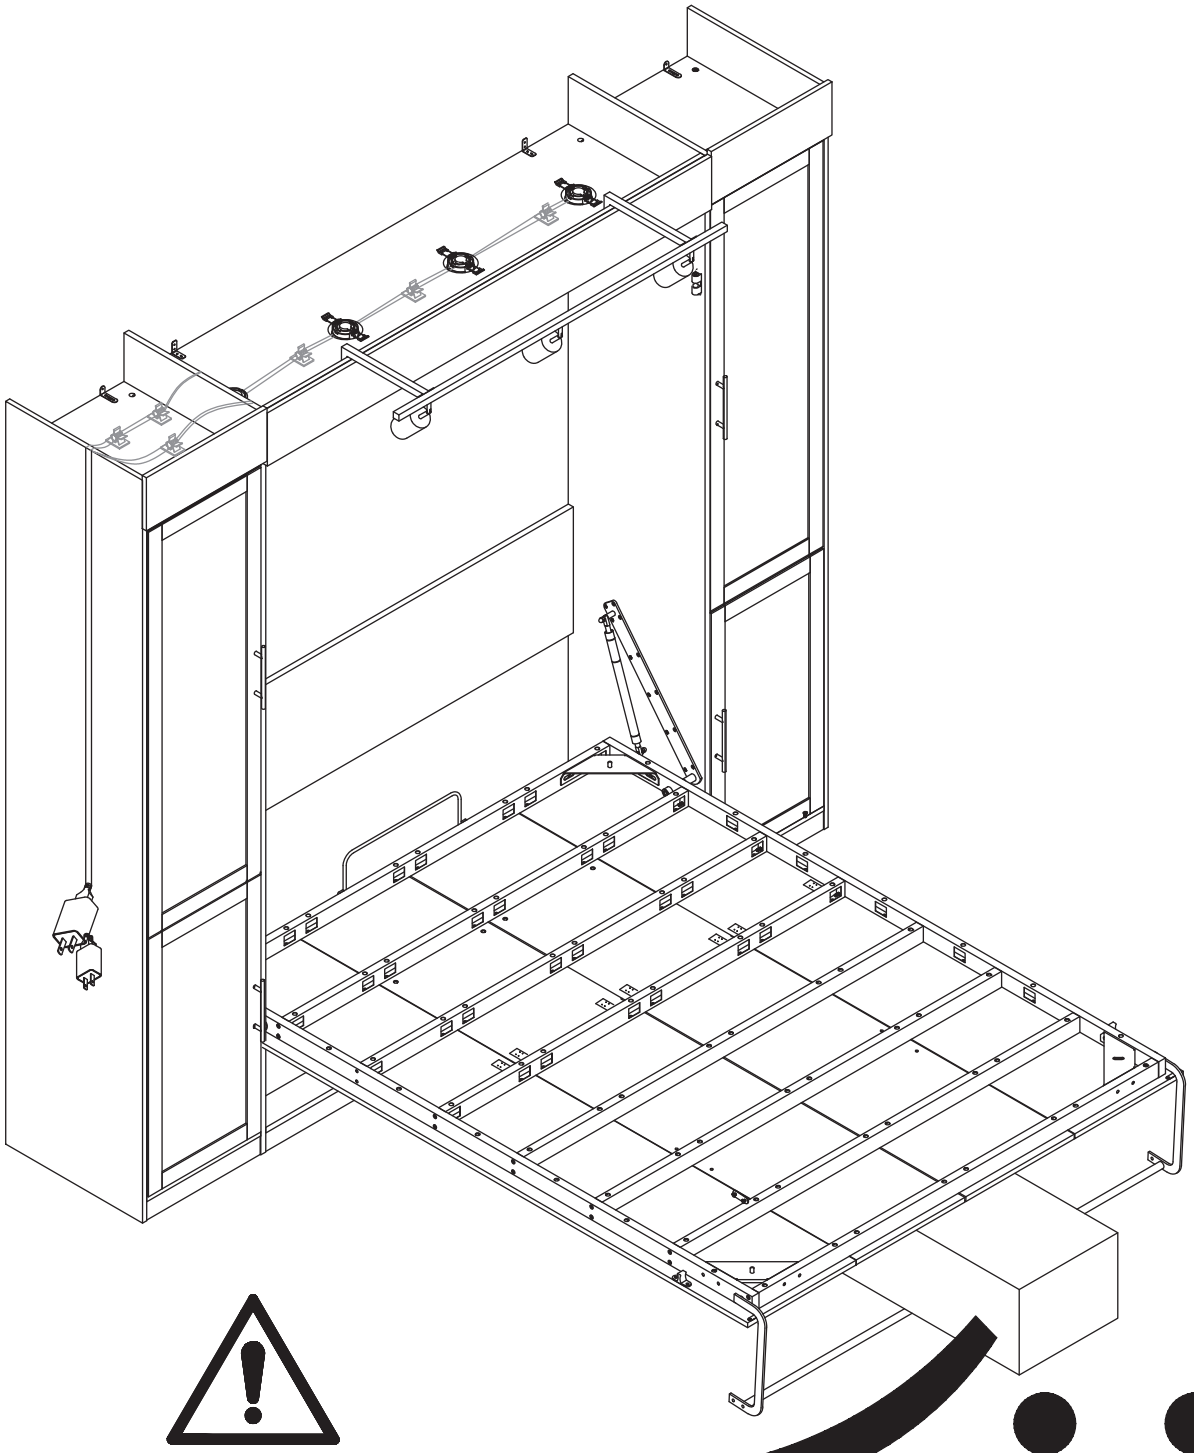


When moving the object, guard against the rebound of the bed frame.

2 OF ADULTS

66

Y x 2

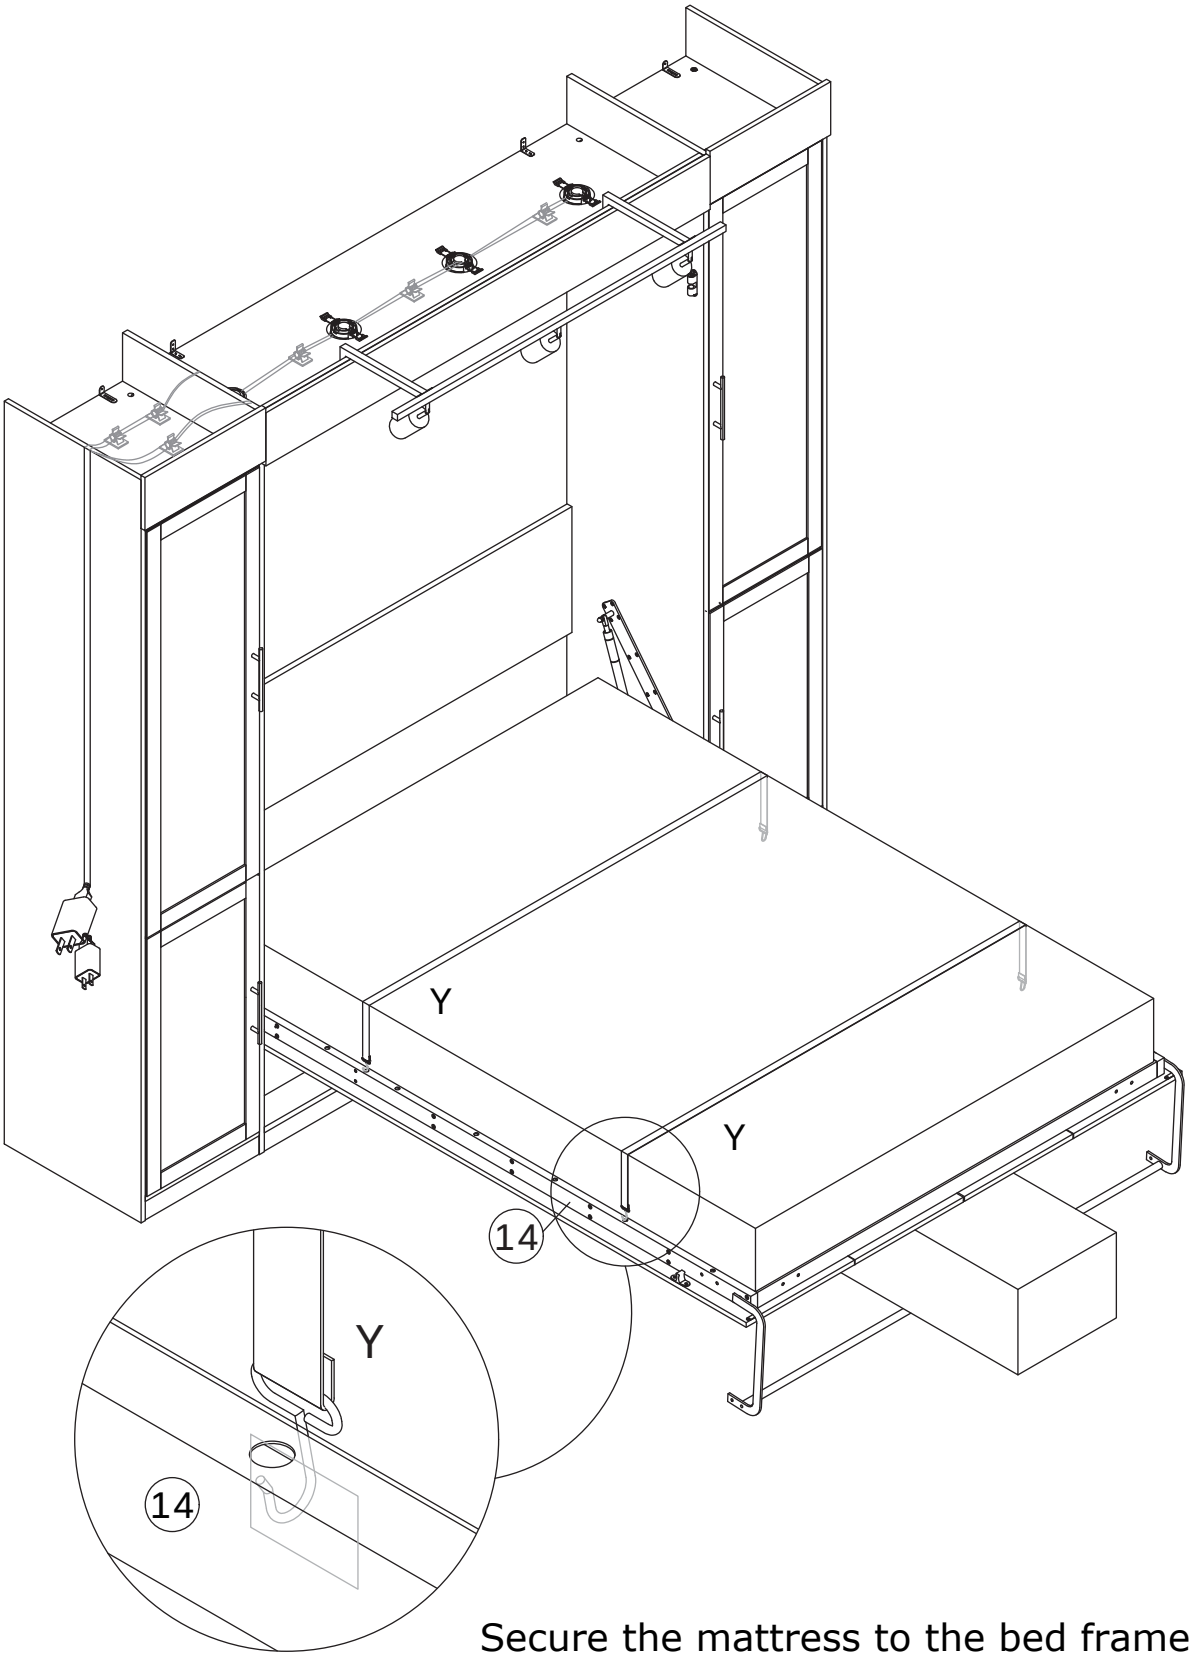


Secure the mattress to the bed frame with straps (Y).

67

G x 23	AC x 1	
CRG0612A	M4	


When lifting the bed frame, do not place your hands on the frame edges, as well as Parts (19) and (20), to avoid pinching .

Close the bed frame.
Note: beware of pinching fingers.

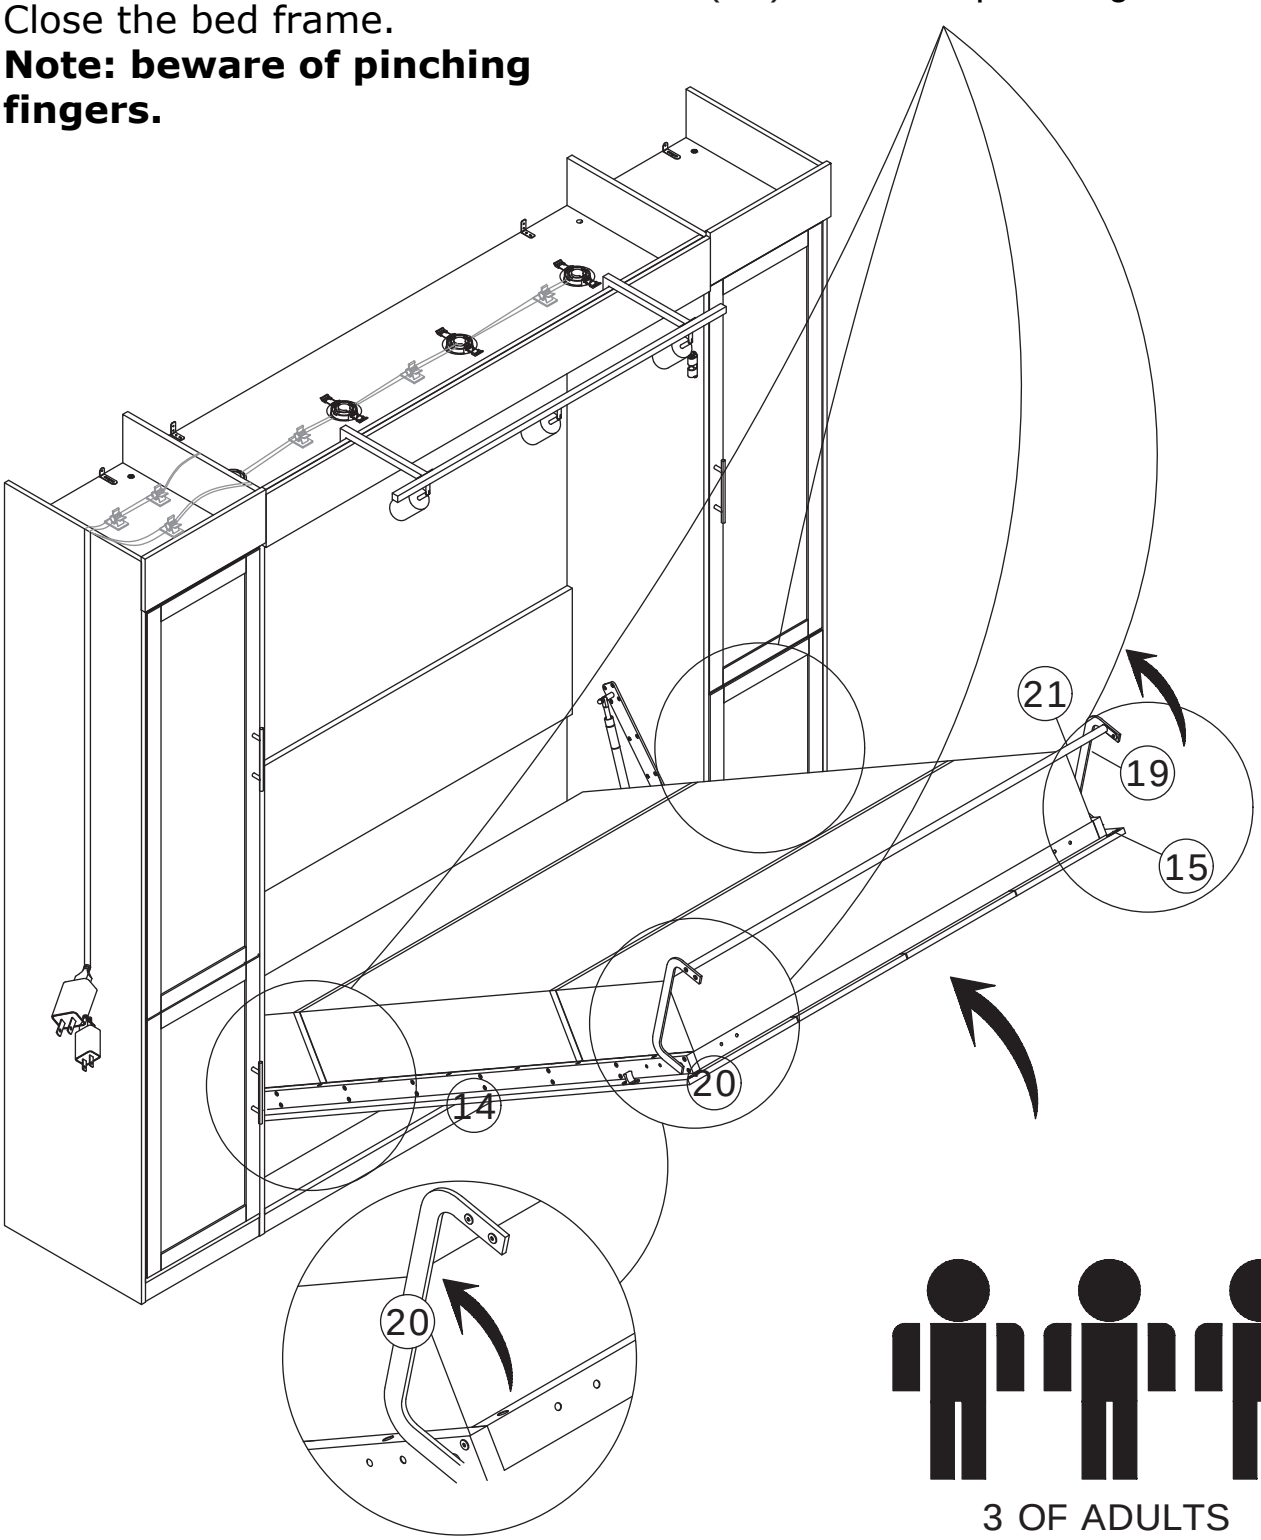


3 OF ADULTS

68




If the door panel fails to close tightly when being shut, you may pull the door panel open to a proper angle and adjust the component (W-1). Beware of pinching hands caused by door panel rebound.

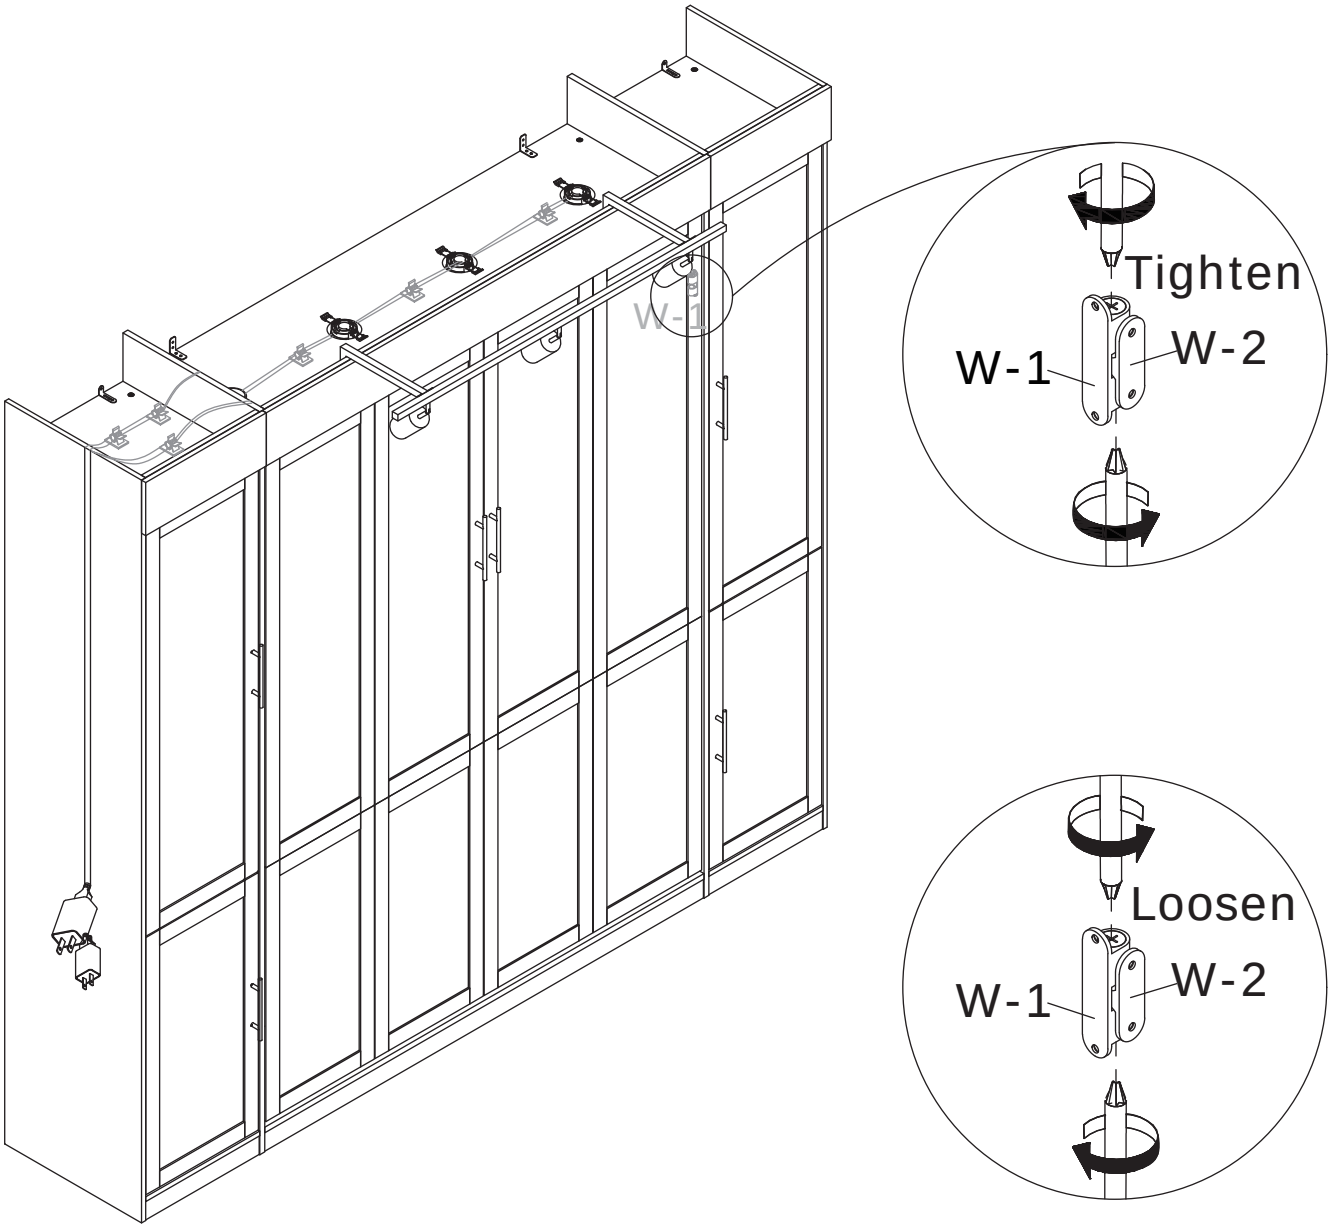


69


Plug in the power supply.

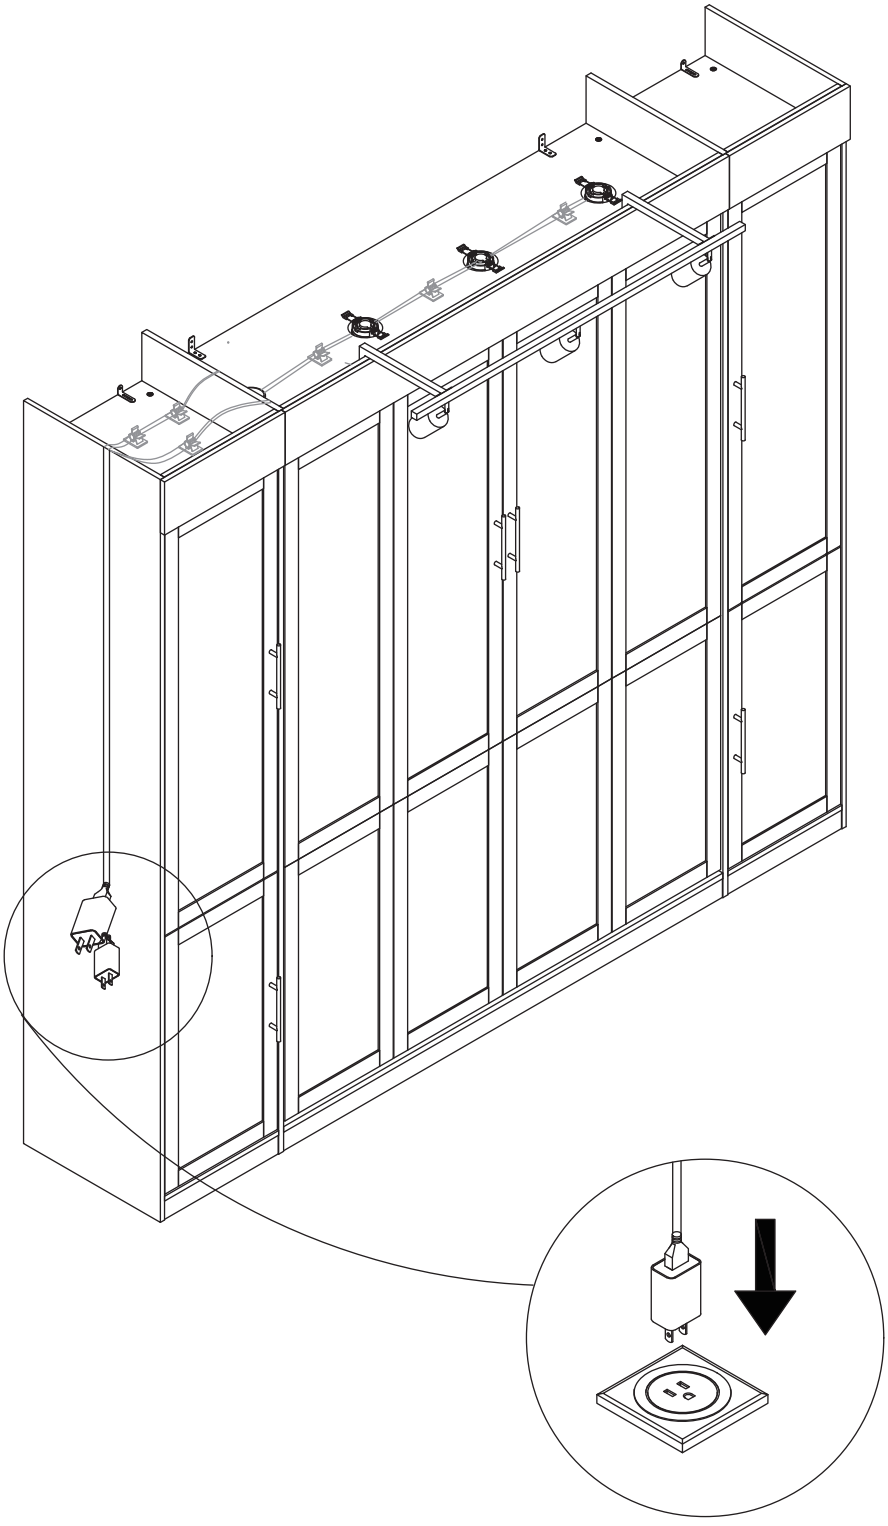





70


If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

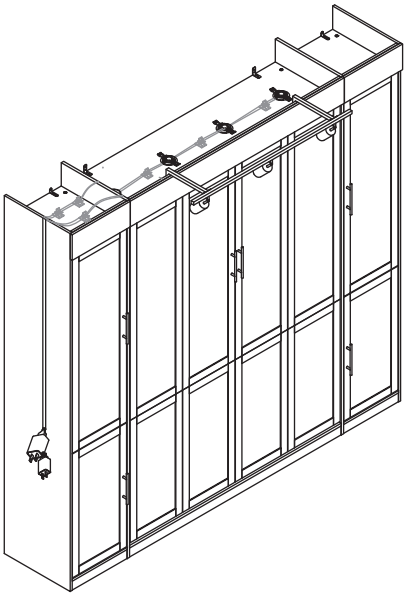

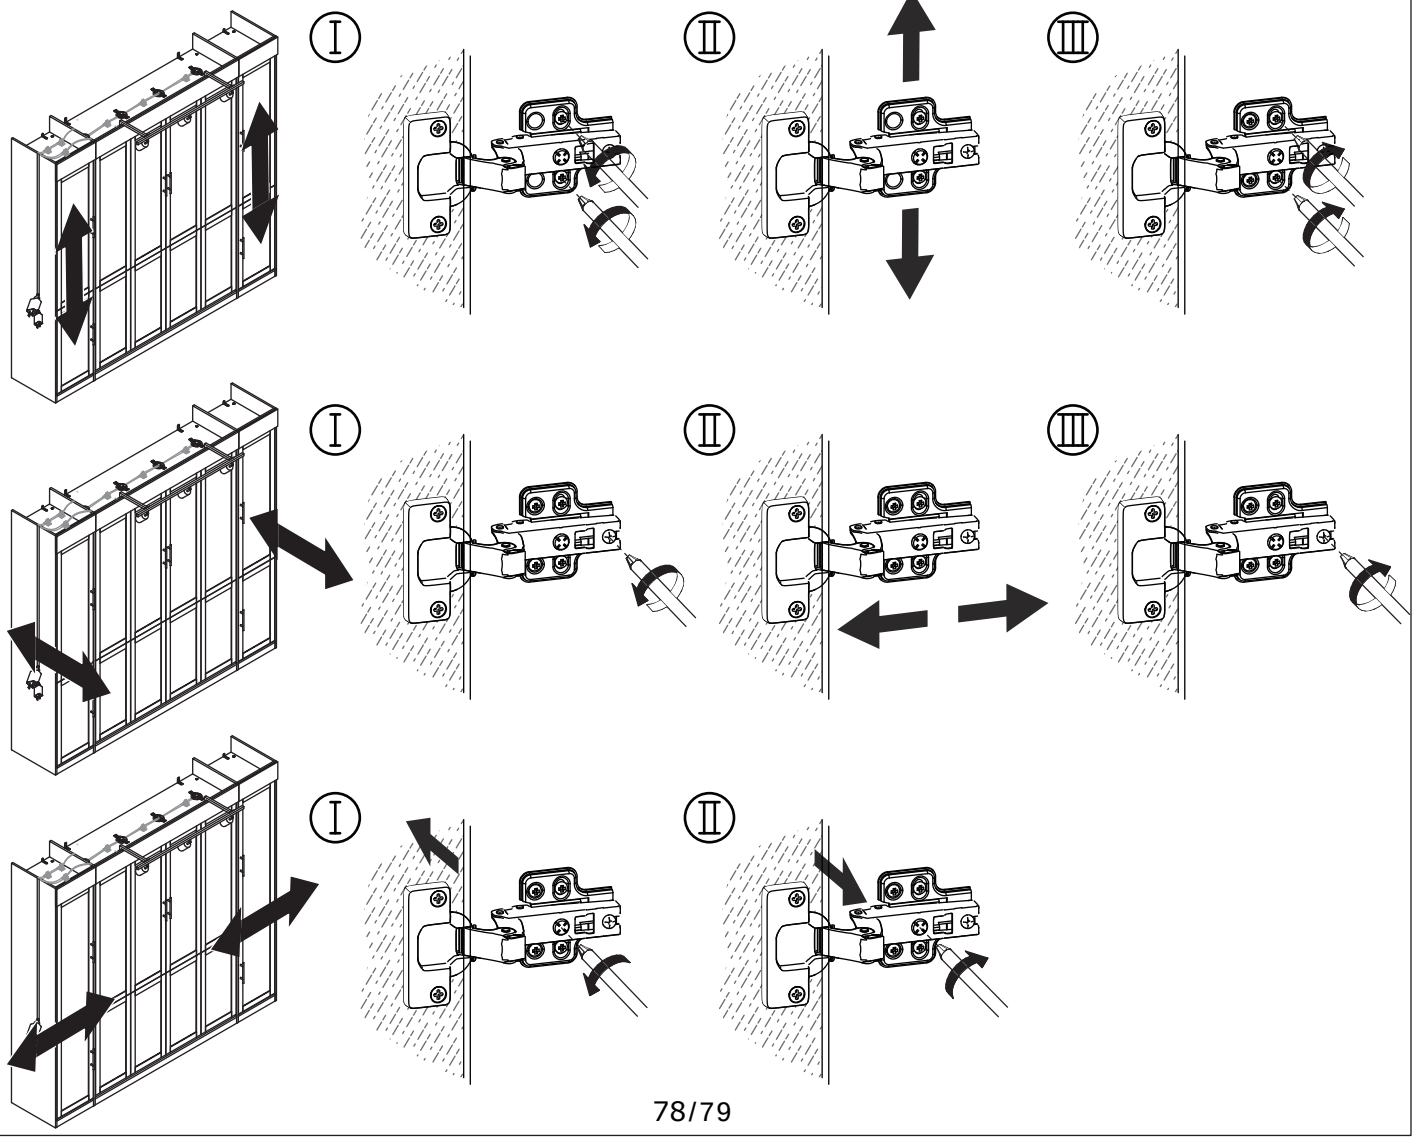

71

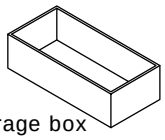AC x 1	AD x 1	AE x 1	AF x 1	
 M4	 M12	 M5	 M8	 Storage box

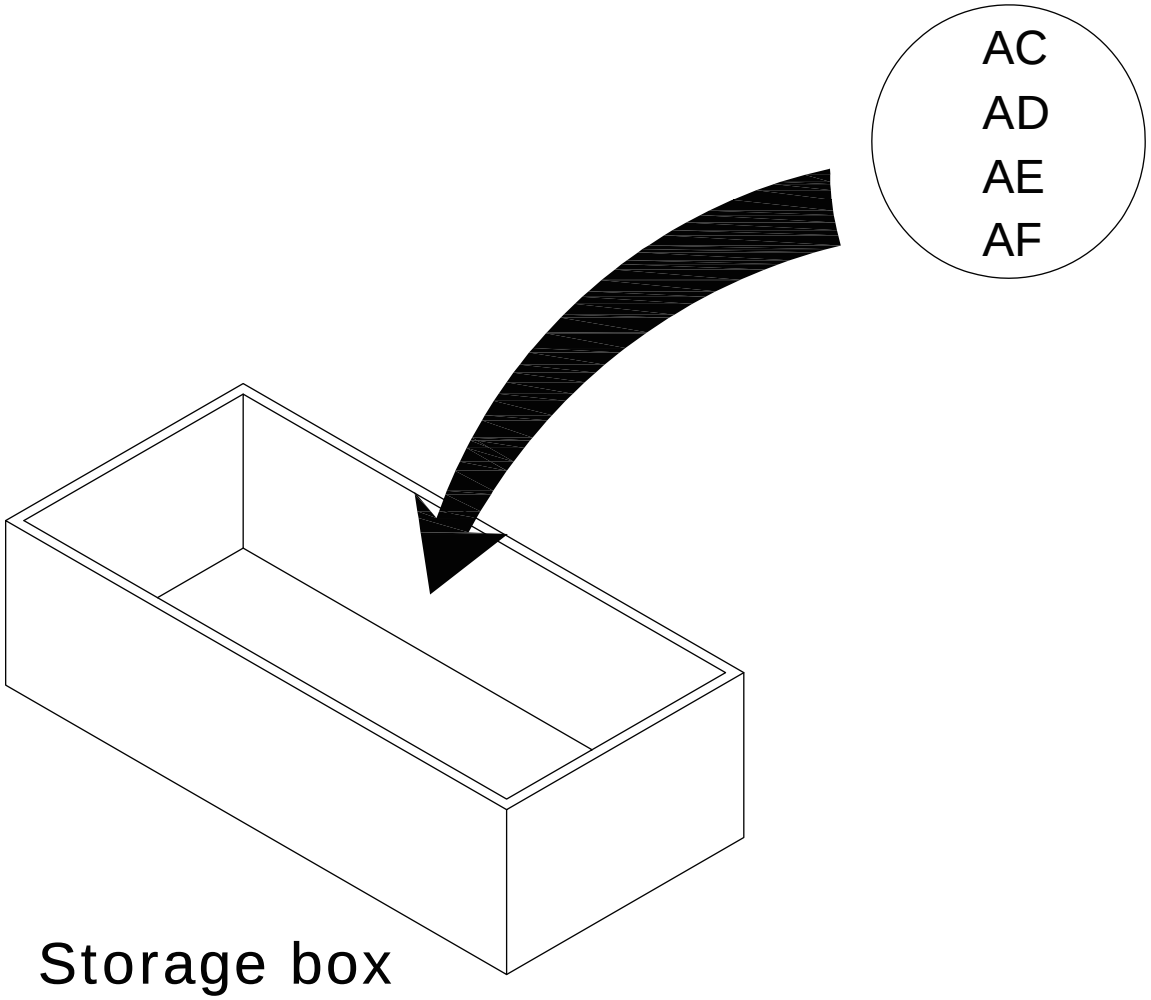

Storage box



After assembly, keep these tools for future disassembly and maintenance

WARRANTY

WARRANTY CLAIMS

•There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.

•Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.

•The product must be used in accordance with the instructions provided. For health reasons.

•For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

•Failure to follow the furniture instructions will invalidate the warranty. Attention please.

•Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

•Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.

•After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

•Sheet parts: 1 month from the date of purchase.

•Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
  In all circumstances please save all packaging material and paperwork for the order.
  Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



