

ASSEMBLY INSTRUCTIONS

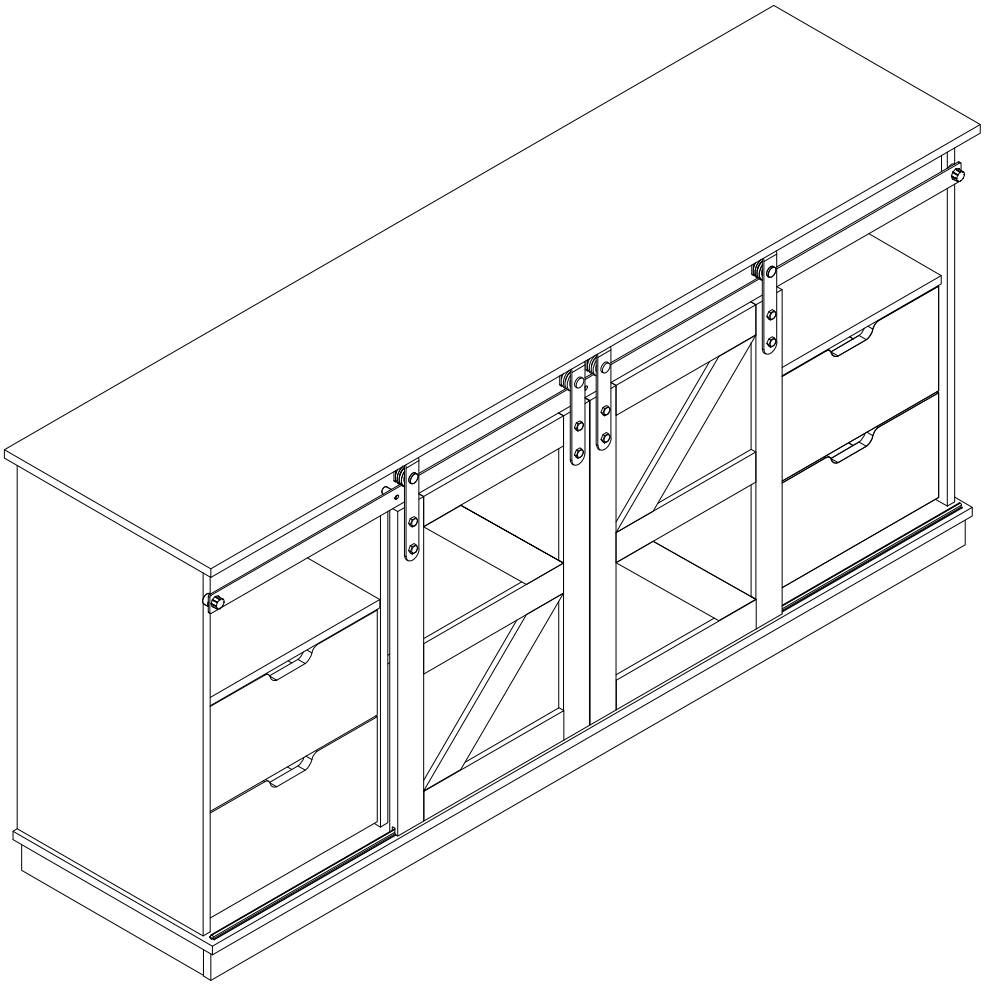


WARNING !

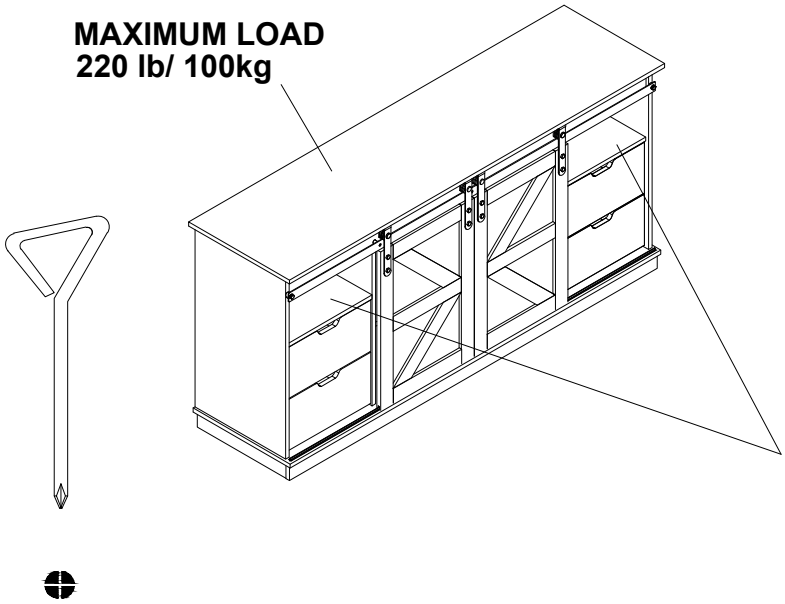




Estimated Time for Assembly

60 mins

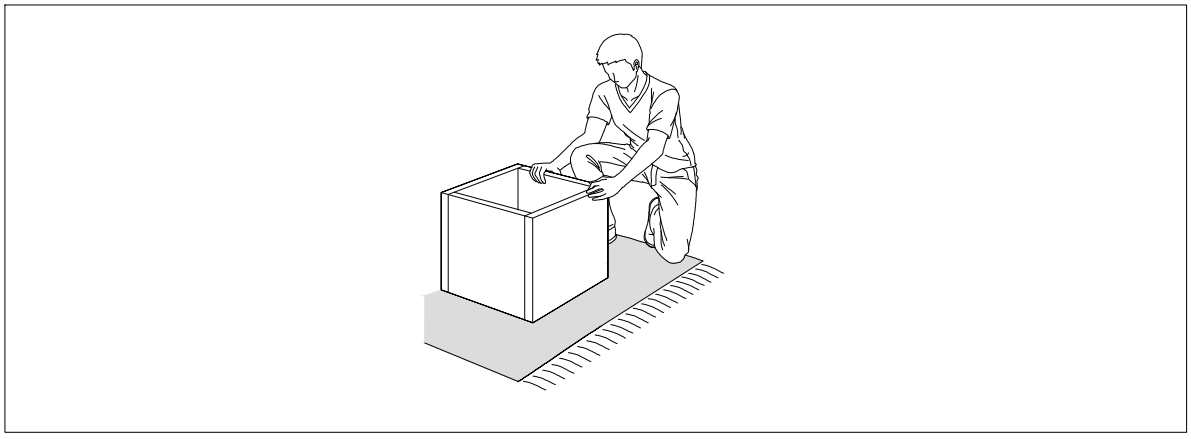

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

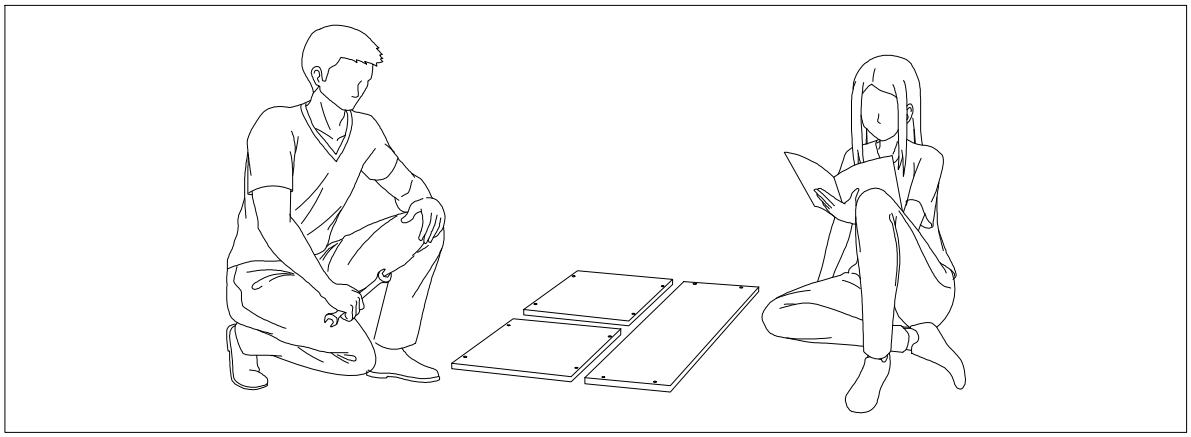


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.


Board Identification

Not actual size

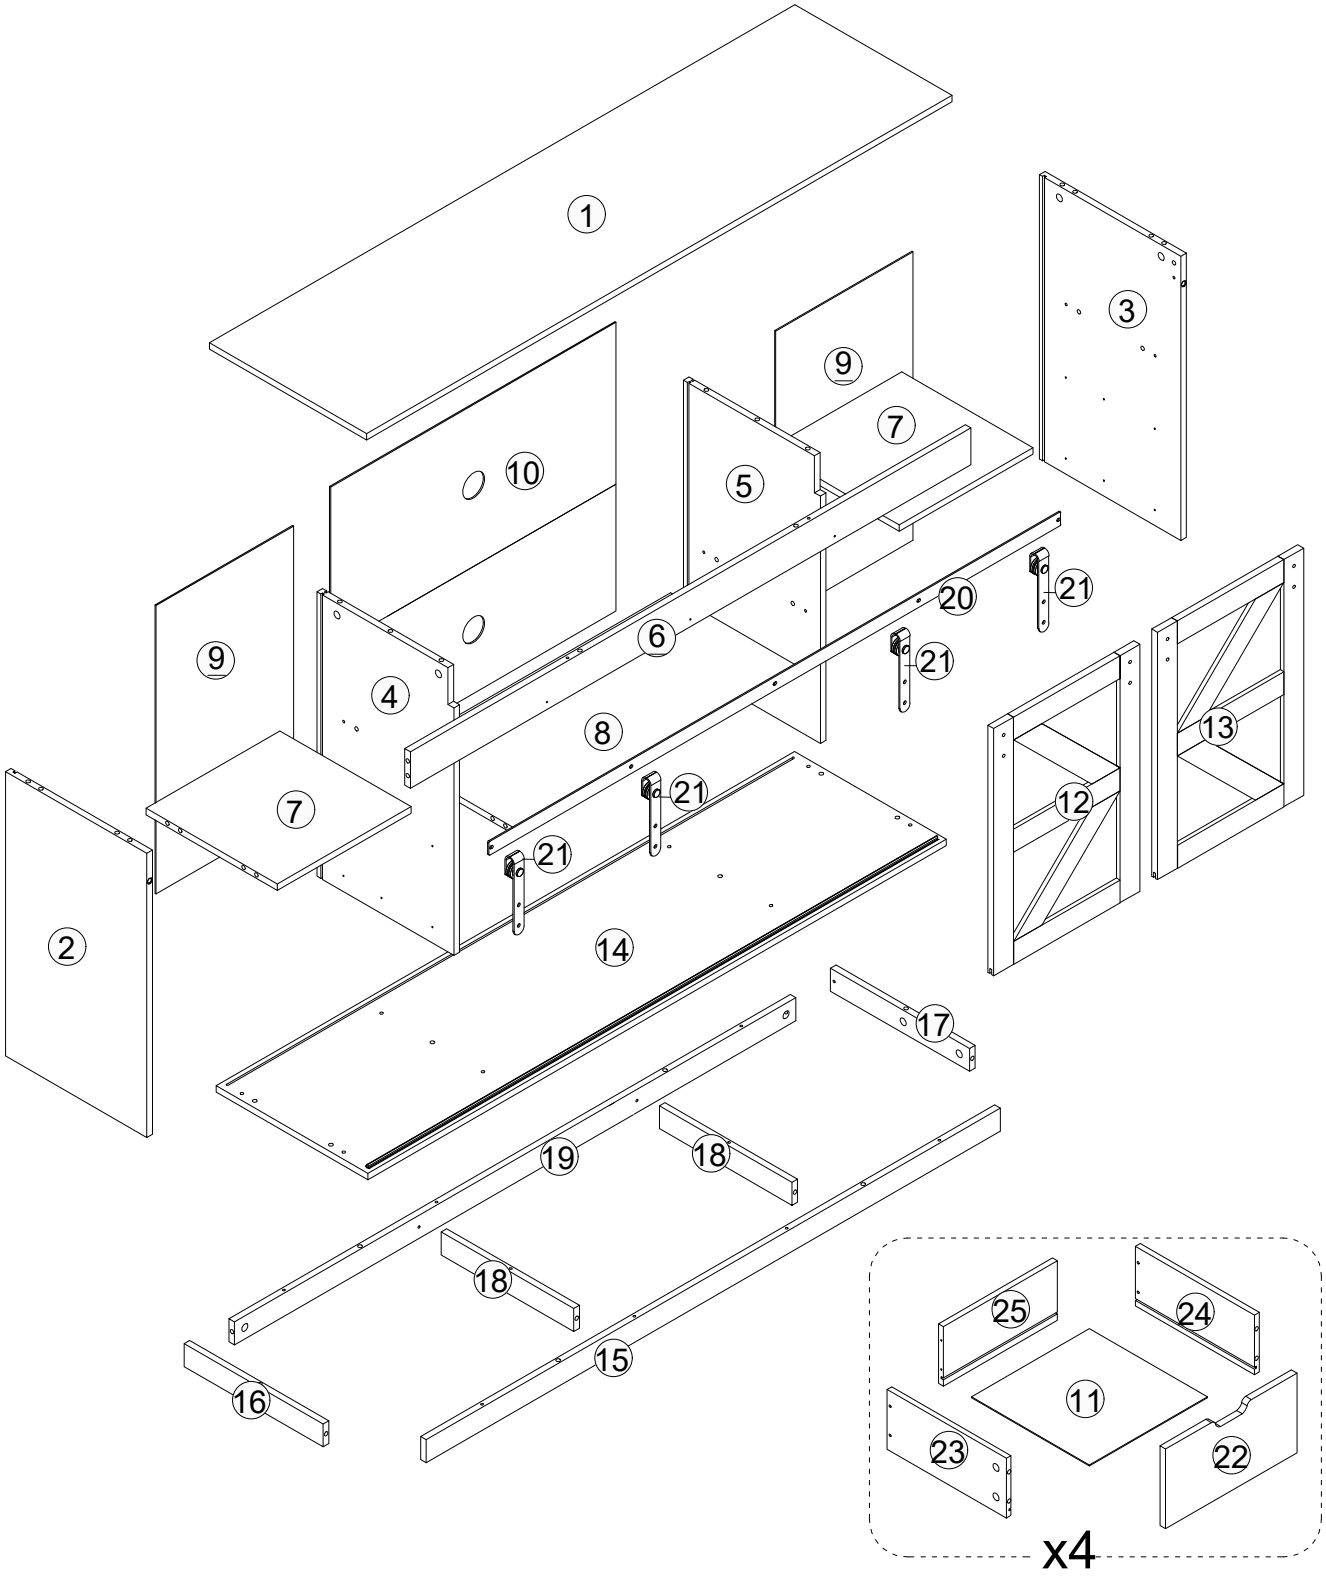


BOARD IDENTIFICATION


Not actual size

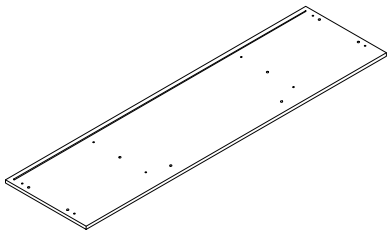


①

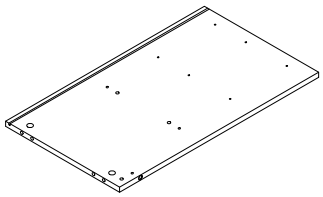


②

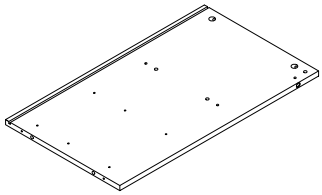


③

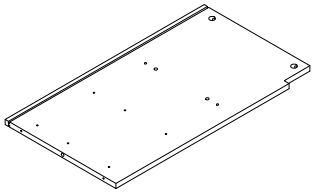


④

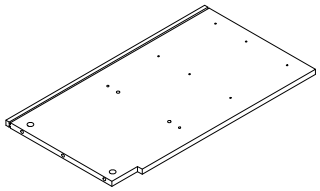


⑤

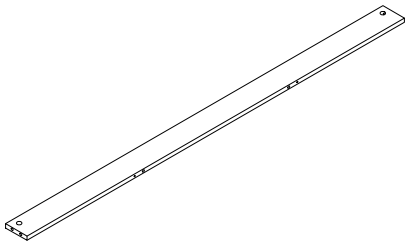


⑥

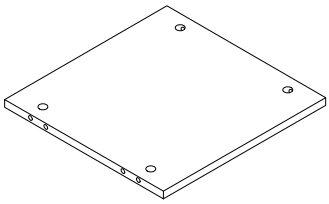


⑦ x2

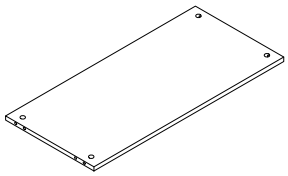


⑧

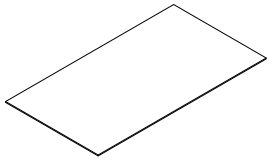


⑨ x2

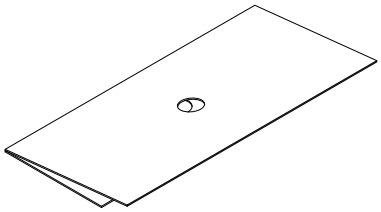

⑩

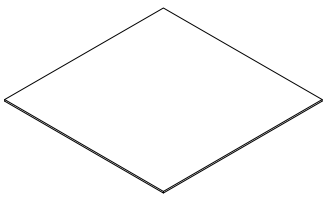


⑪ x4

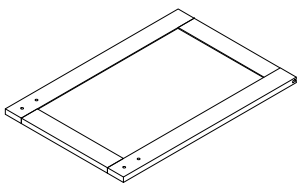


⑫

BOARD IDENTIFICATION


Not actual size

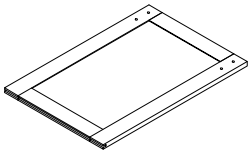


⑬

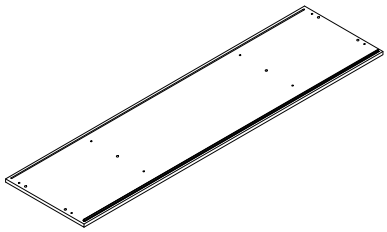


⑭

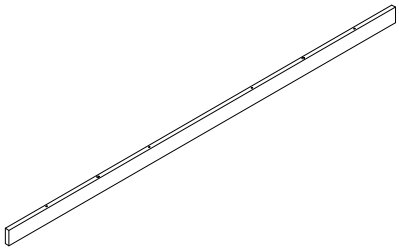


⑮

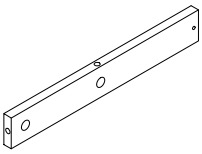


⑯

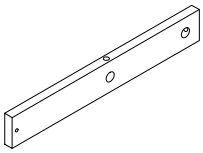


⑰

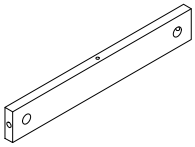


⑱ x2

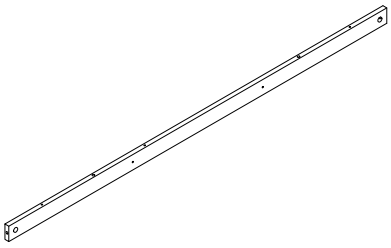


⑲

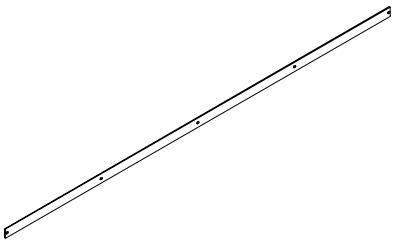


⑳




㉑ x4

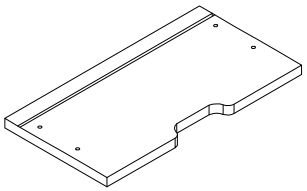


㉒ x4

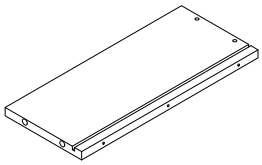

㉓ x4

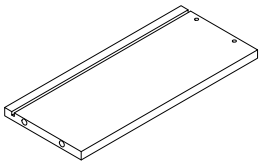


㉔ x4

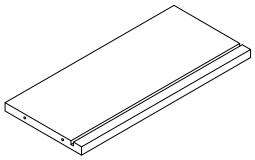

㉕ x4

HARDWARE LIST




A	x48+4



Ø15x9.5

B	x48+4



Ø8x30

C	x32+2




Ø4*50

D	x20+2



Ø3.5x12

E	x48+4



M6x25

F	x8



M6

G	x8




H	x2




Ø4*35


I	x19+1

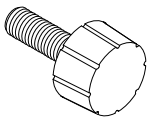

J	x2



K	x3




L	x2




Ø3x15


M	x12+1




N	x1




CL	x4



CR	x 4



DL	x4




DR	x4


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

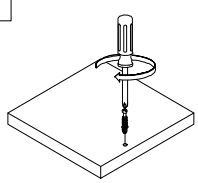

2

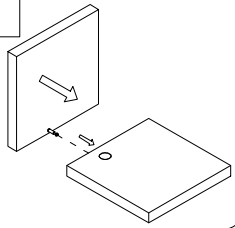


3

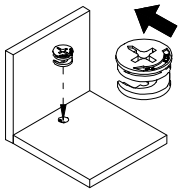



The opening must point toward the edge of the board


4

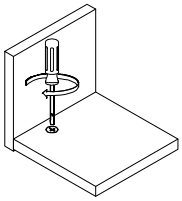


STEP 1

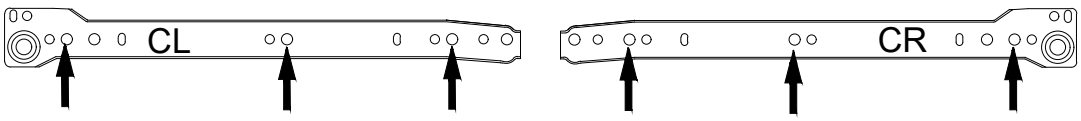

CL
CR

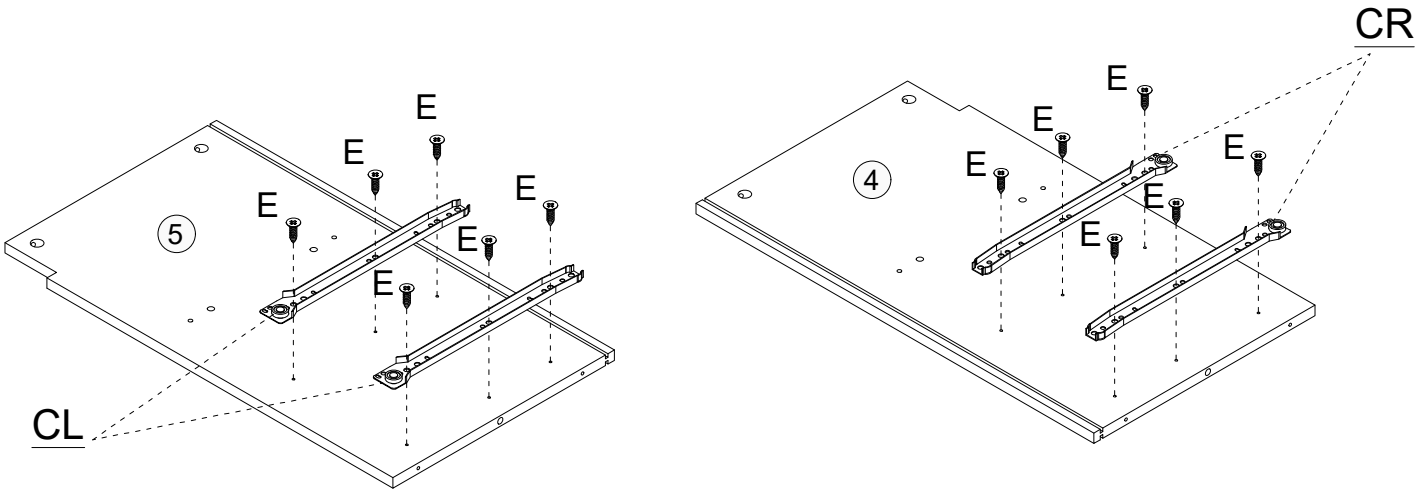

CR
E
E
E
E
E
E
E
E
E
E
5
4
CL

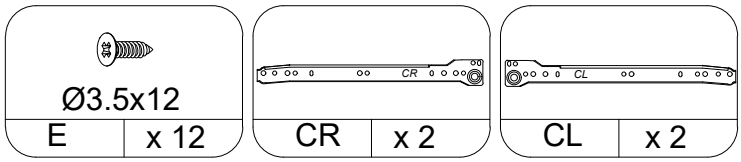

Ø3.5x12
E
x 12
CR
x 2
CL
x 2

STEP 2

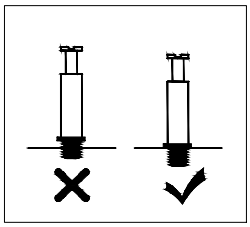


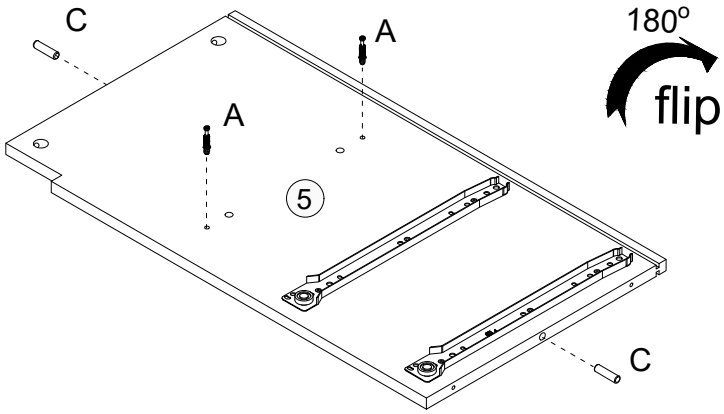

C
A
A
5
180°
flip
C

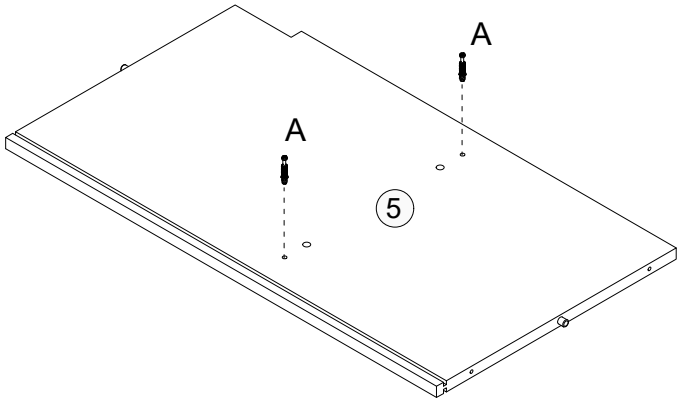

A
A
5

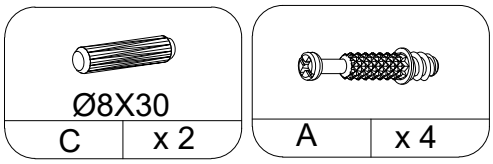

Ø8X30
C
x 2
A
x 4


STEP 3

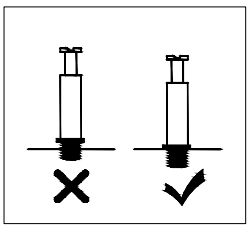

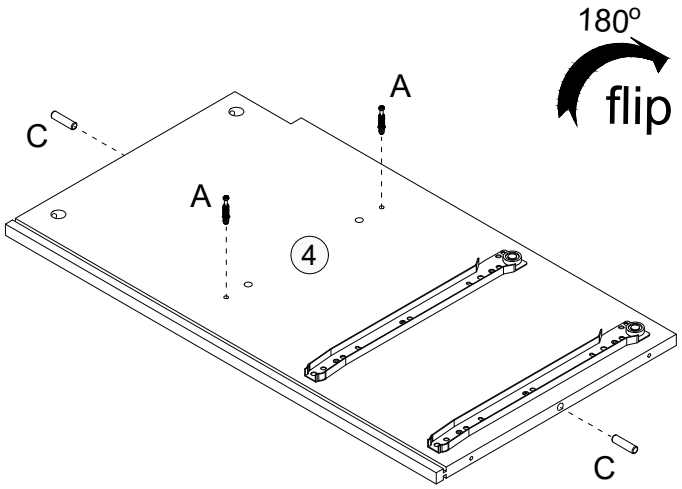

180º
flip
C
A
A
4
C

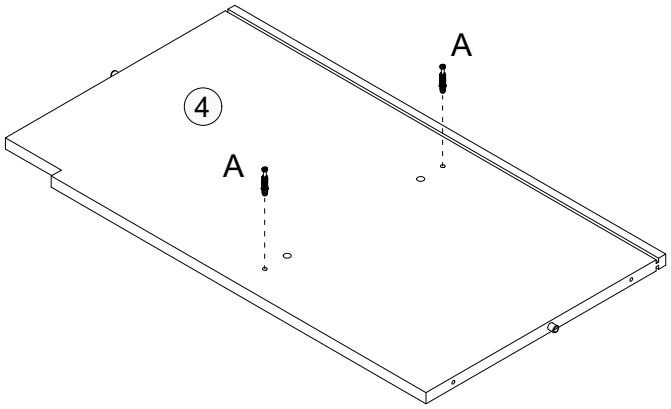

A
4
A

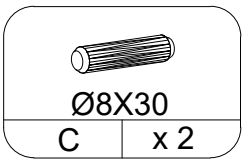

Ø8X30
C
x 2

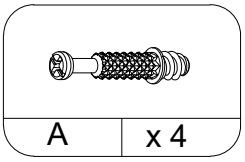

A
x 4


STEP 4

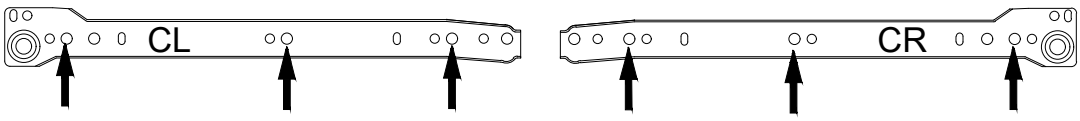

CL
CR

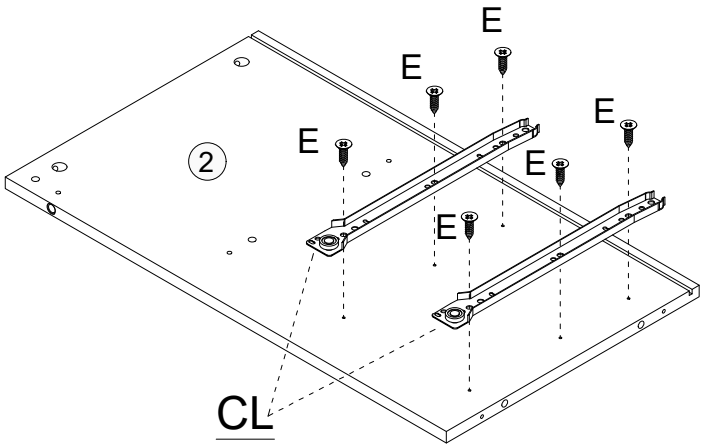
E
E
E
E
E
E
E
2
CL

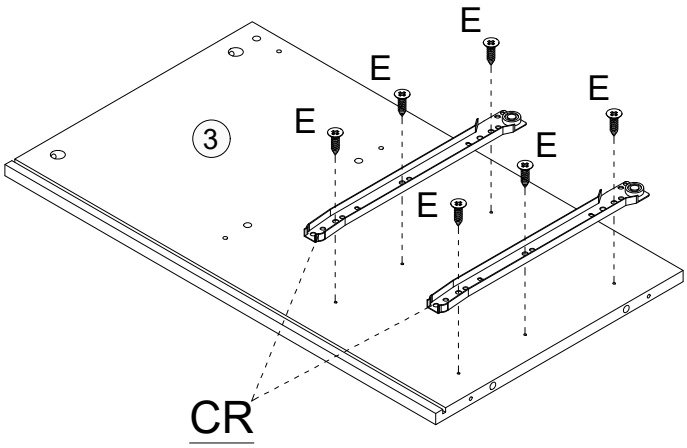

E
E
E
E
E
E
E
3
CR

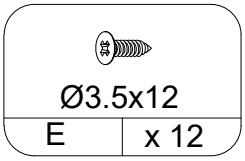

Ø3.5x12
E
x 12

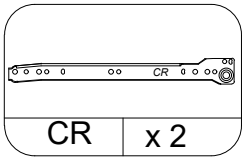

CR
CR
x 2

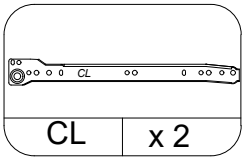

CL
CL
x 2


STEP 5

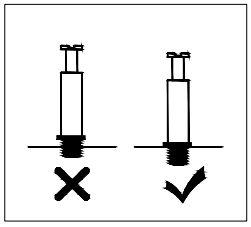

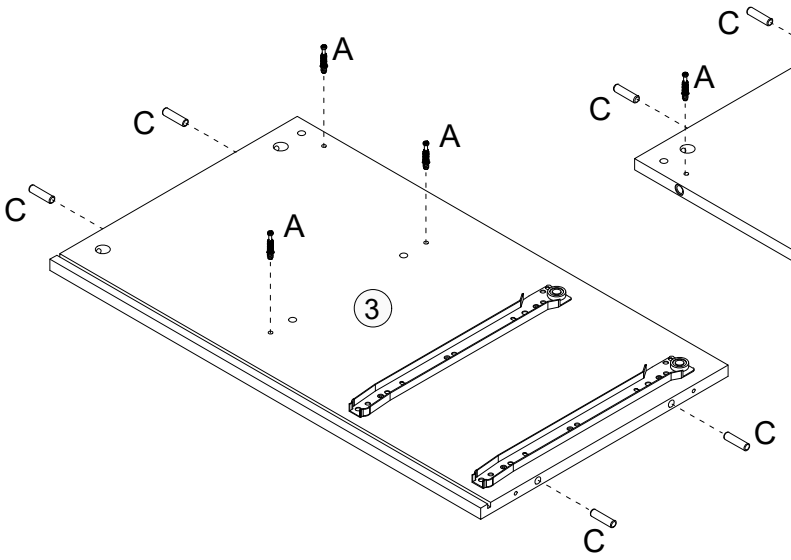

A
C
A
C
A
3
C
C

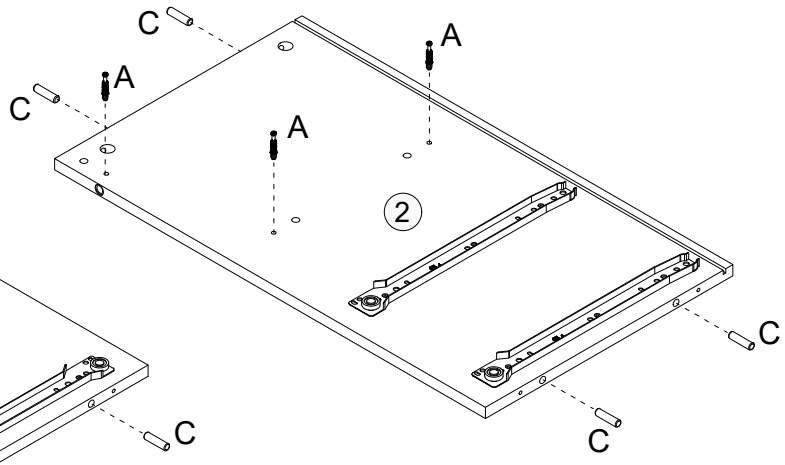

C
A
C
A
A
2
C
C

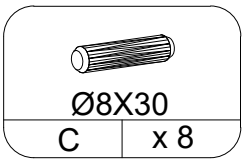
Ø8X30
C
x 8

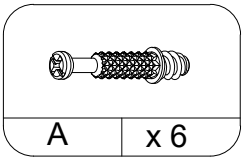

A
x 6

STEP 6

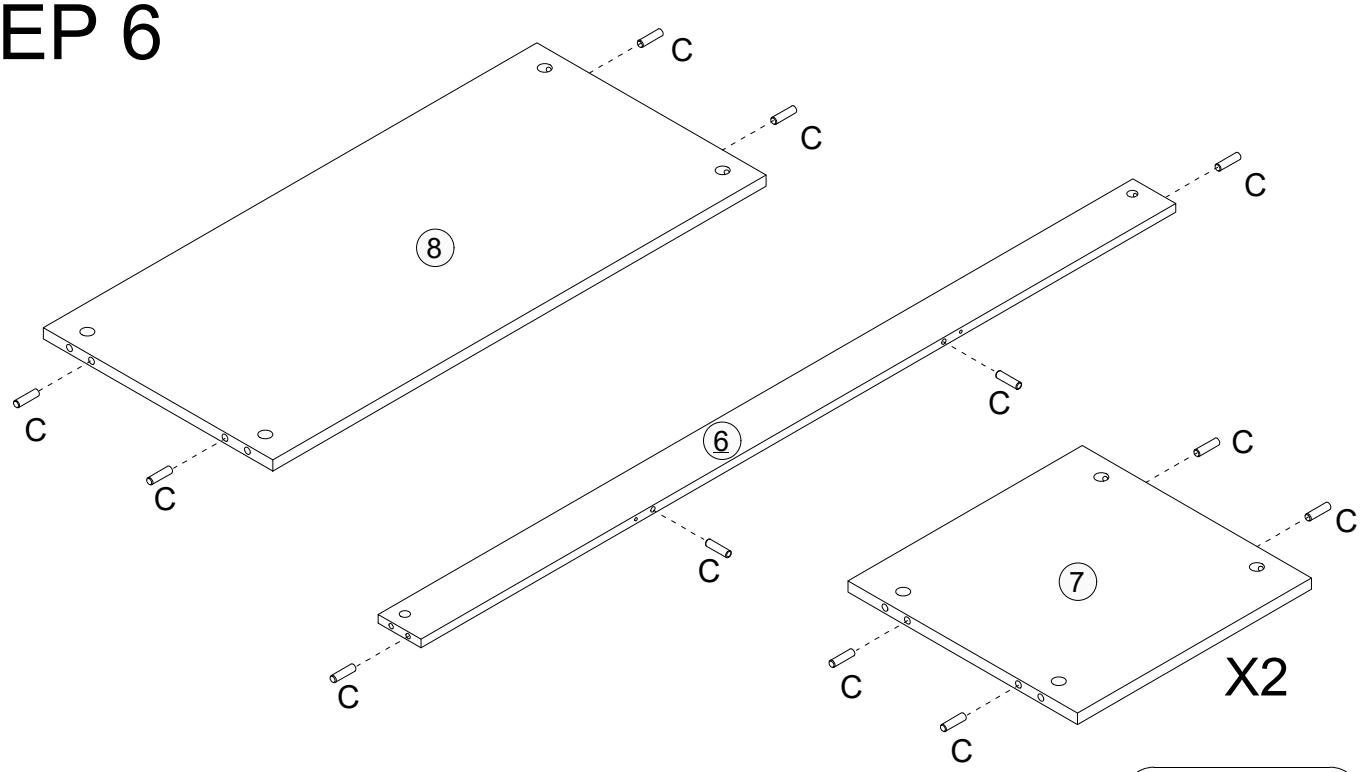

C
C
8
C
C
C
6
C
C
C
C
7
C
C
X2

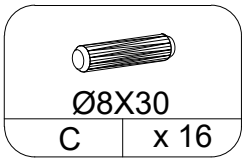

Ø8X30
C
x 16


STEP 7

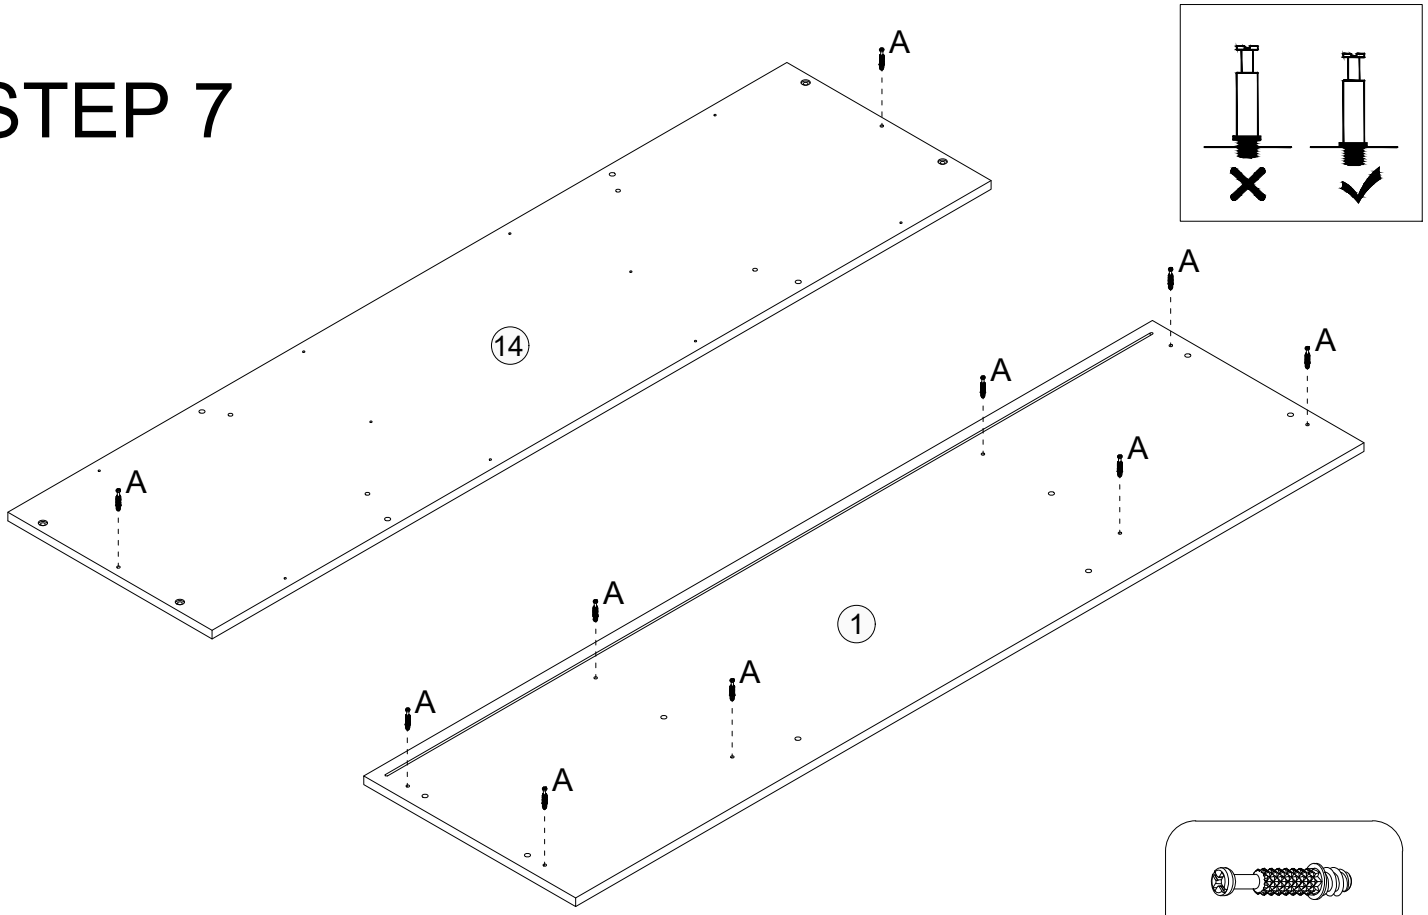


STEP 8

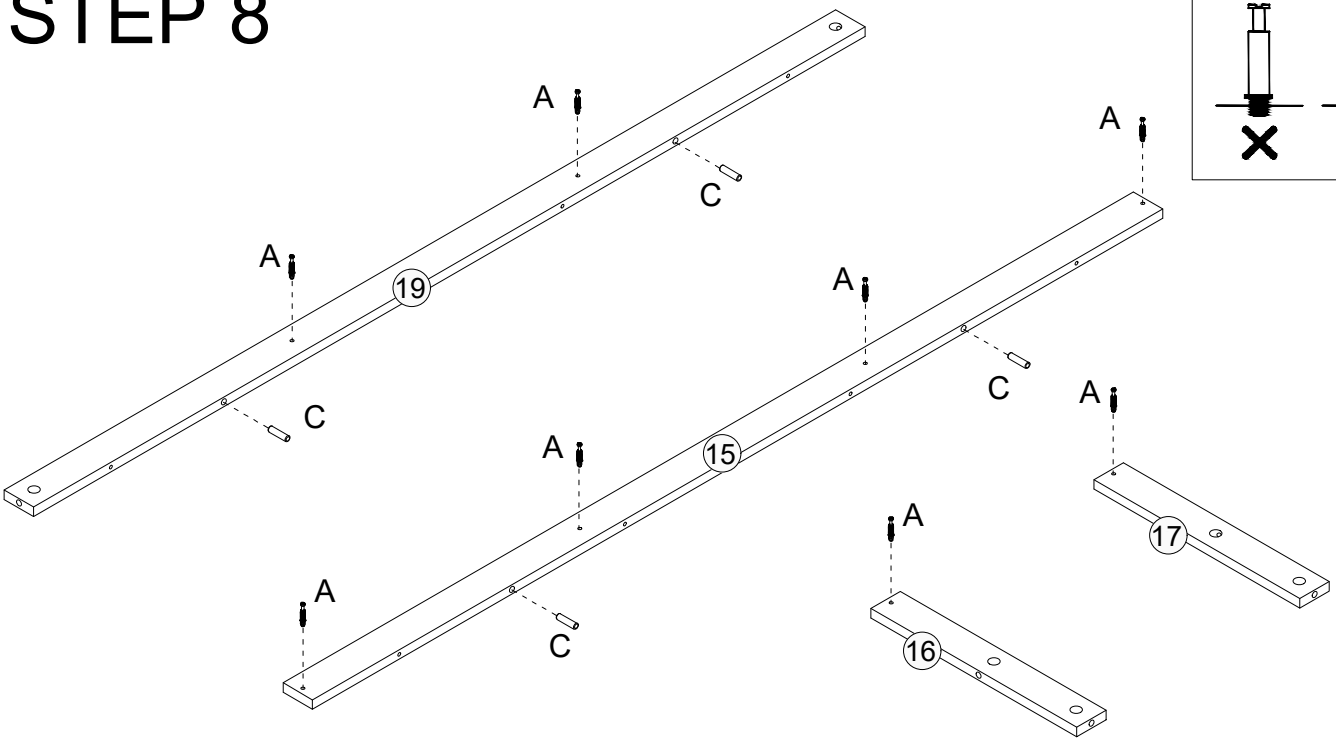


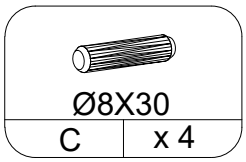


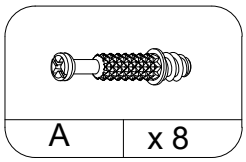


STEP 9

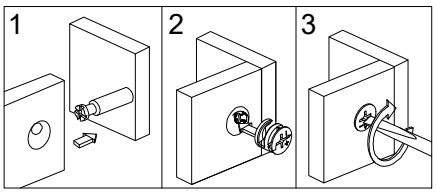


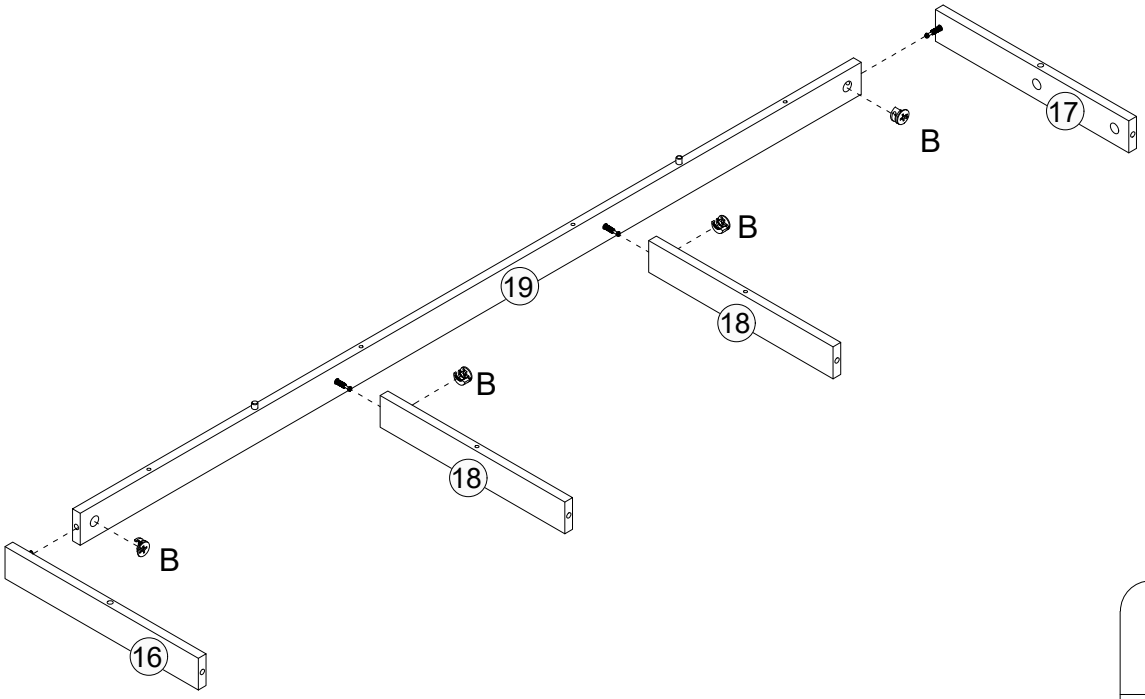


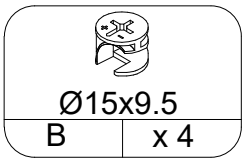


STEP 10

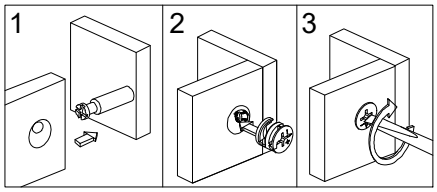


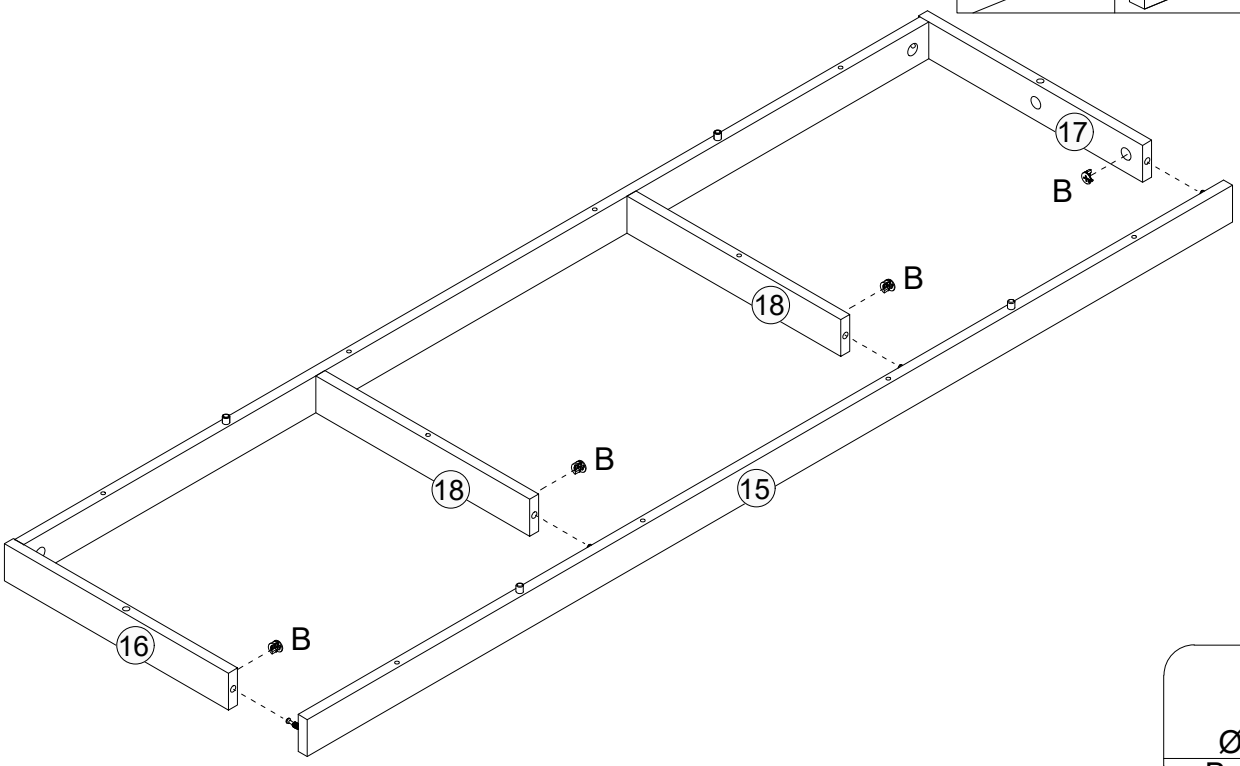


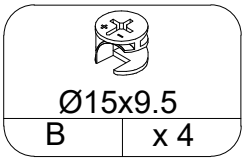


STEP 11

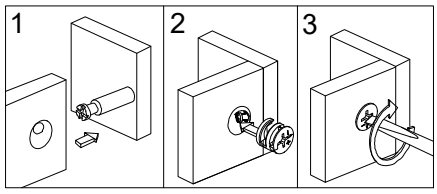


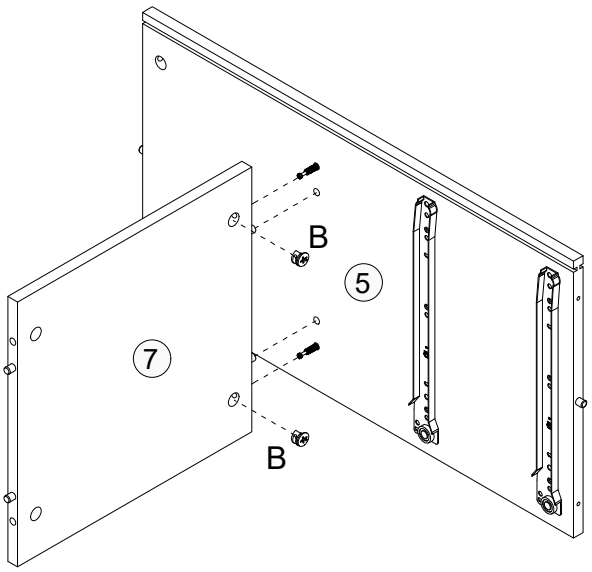


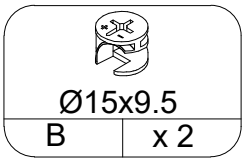


STEP 12

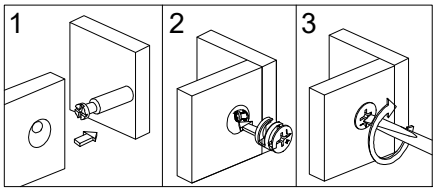


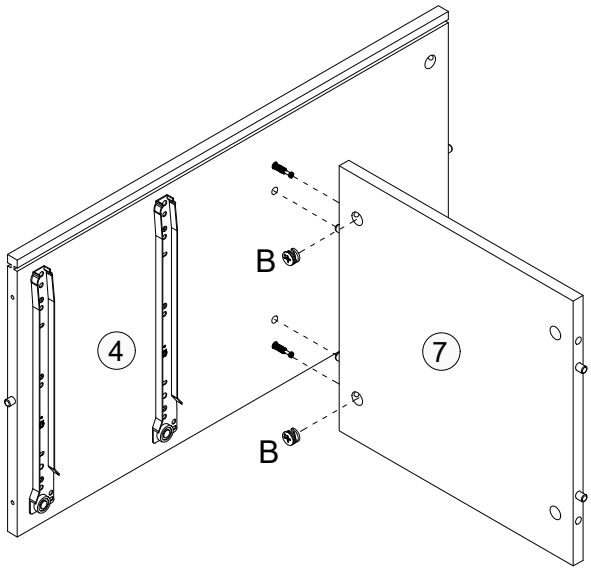


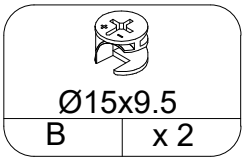


STEP 13

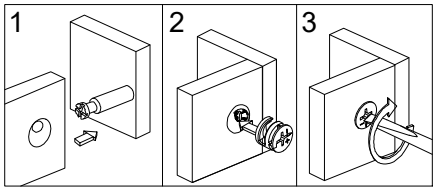


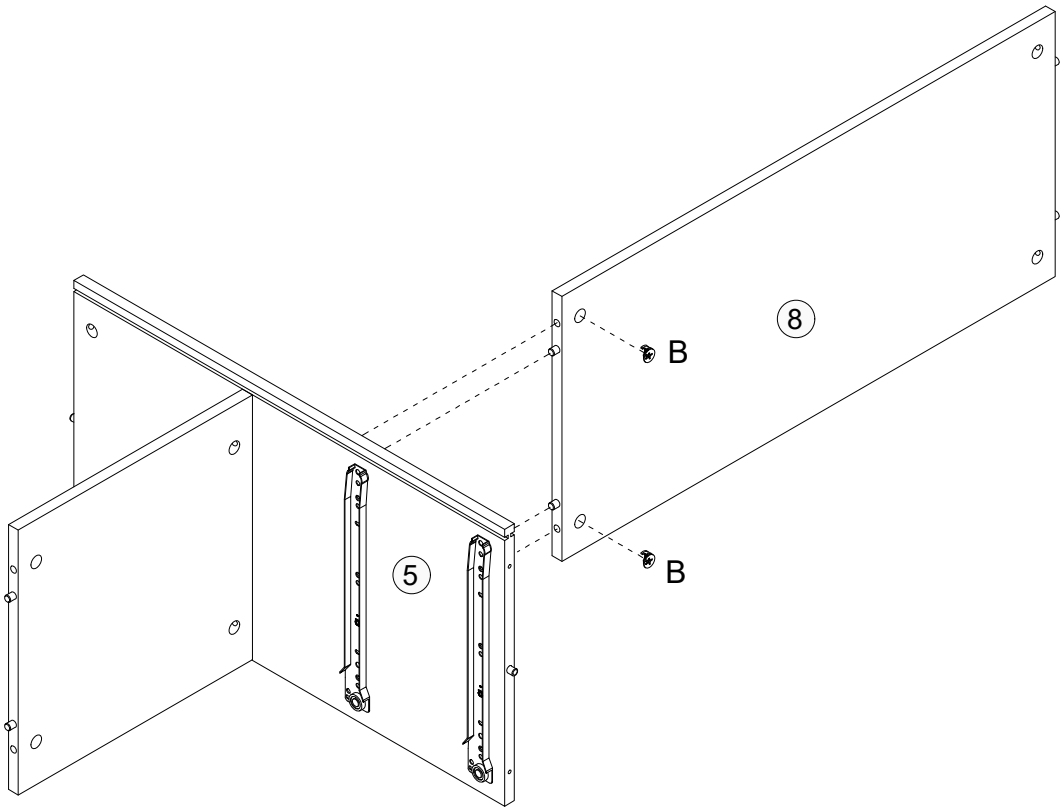


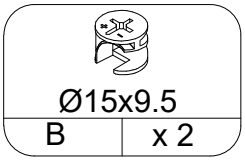


STEP 14

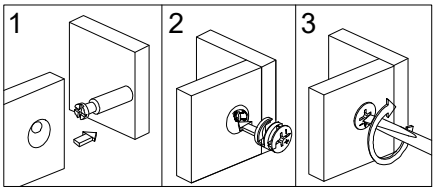


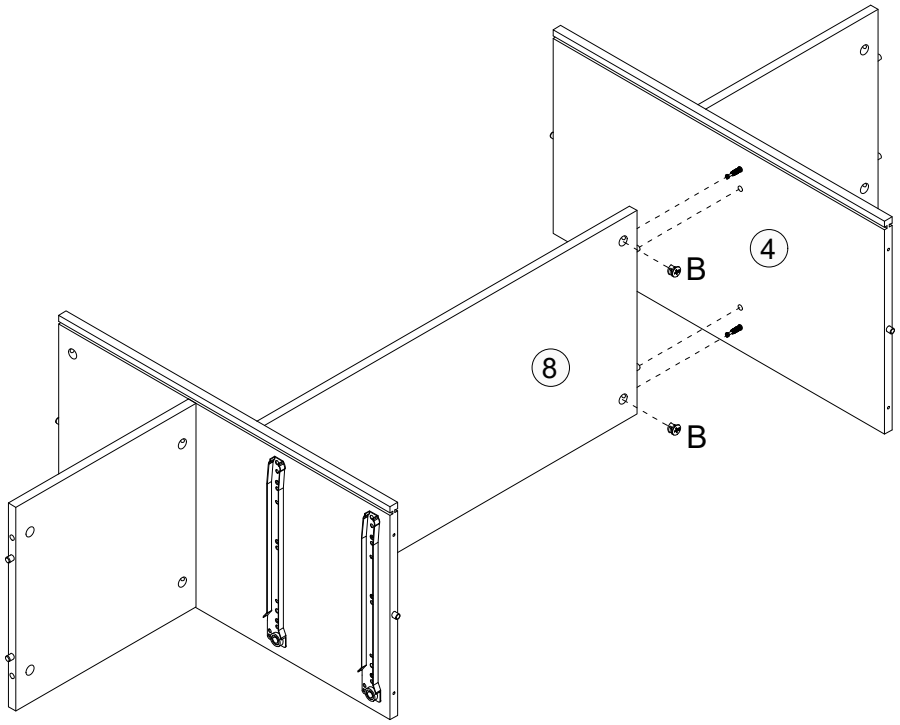


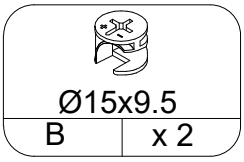


STEP 15

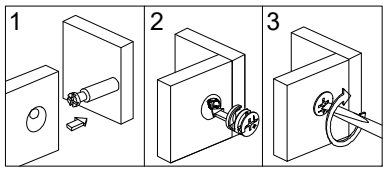


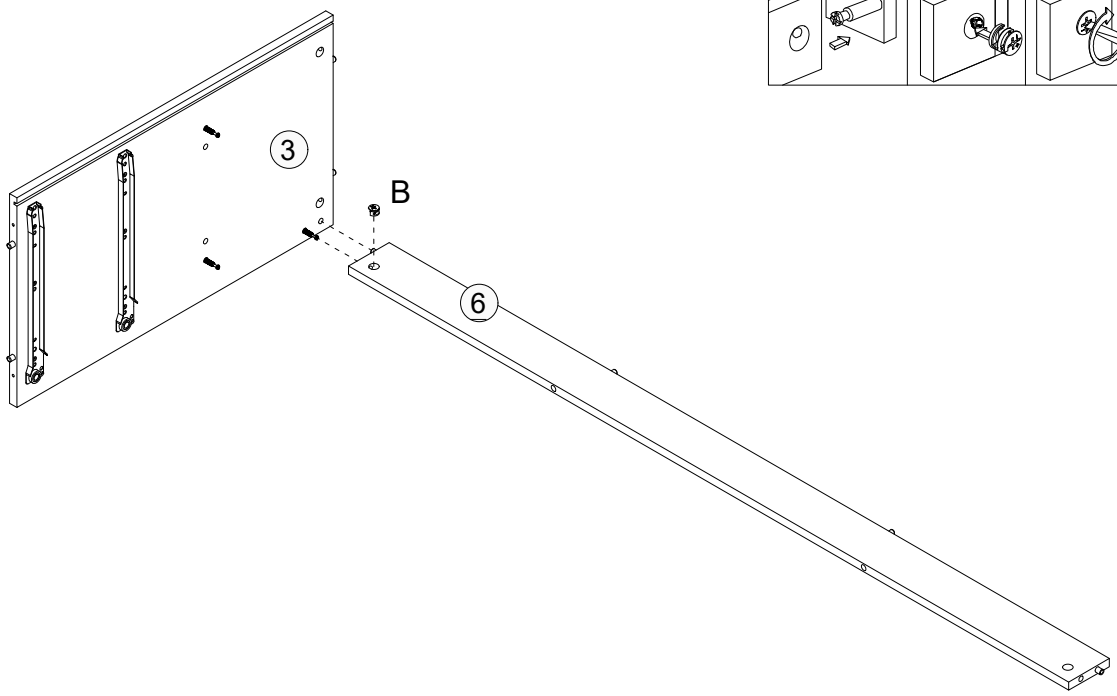


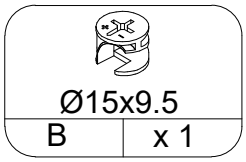


STEP 16

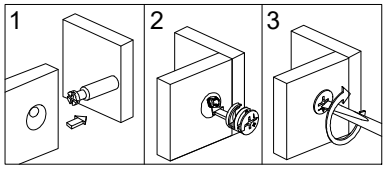


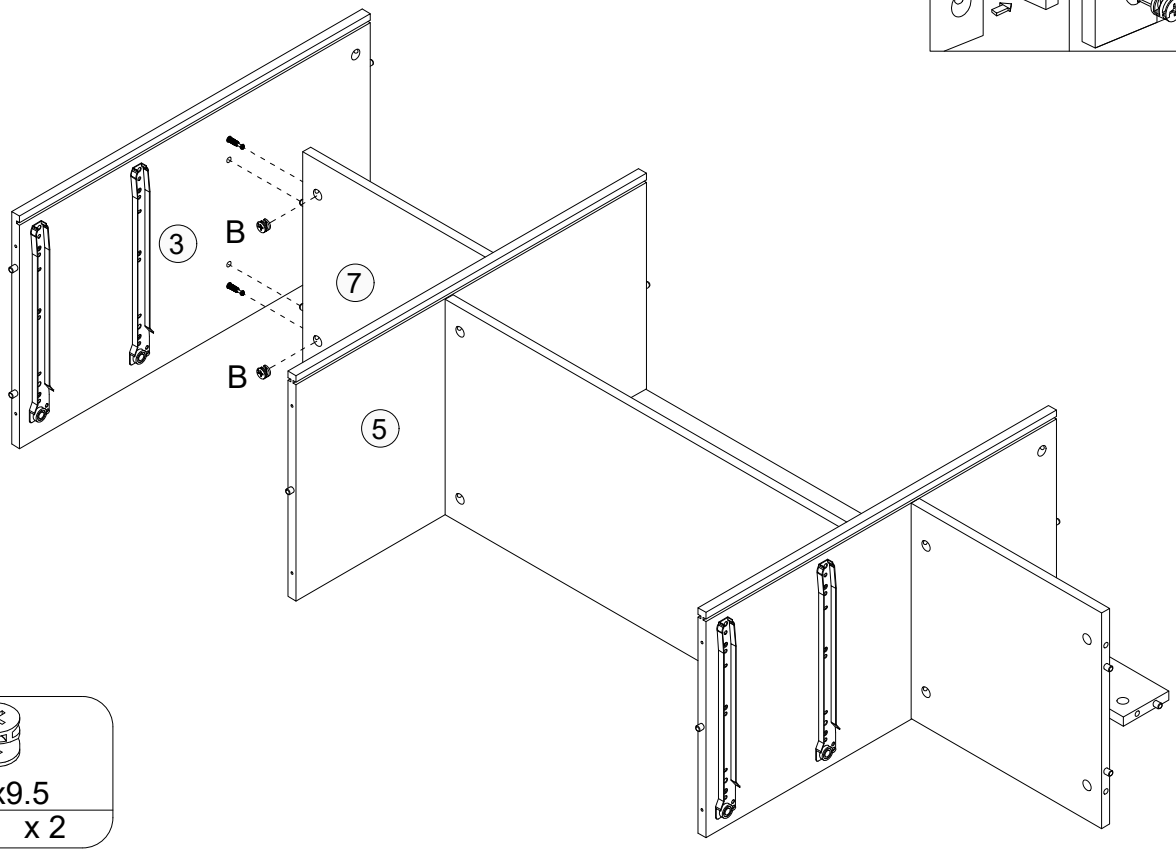

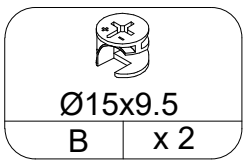

STEP 17

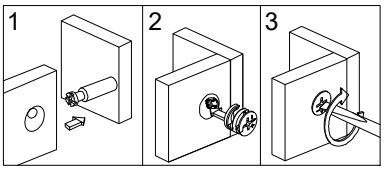


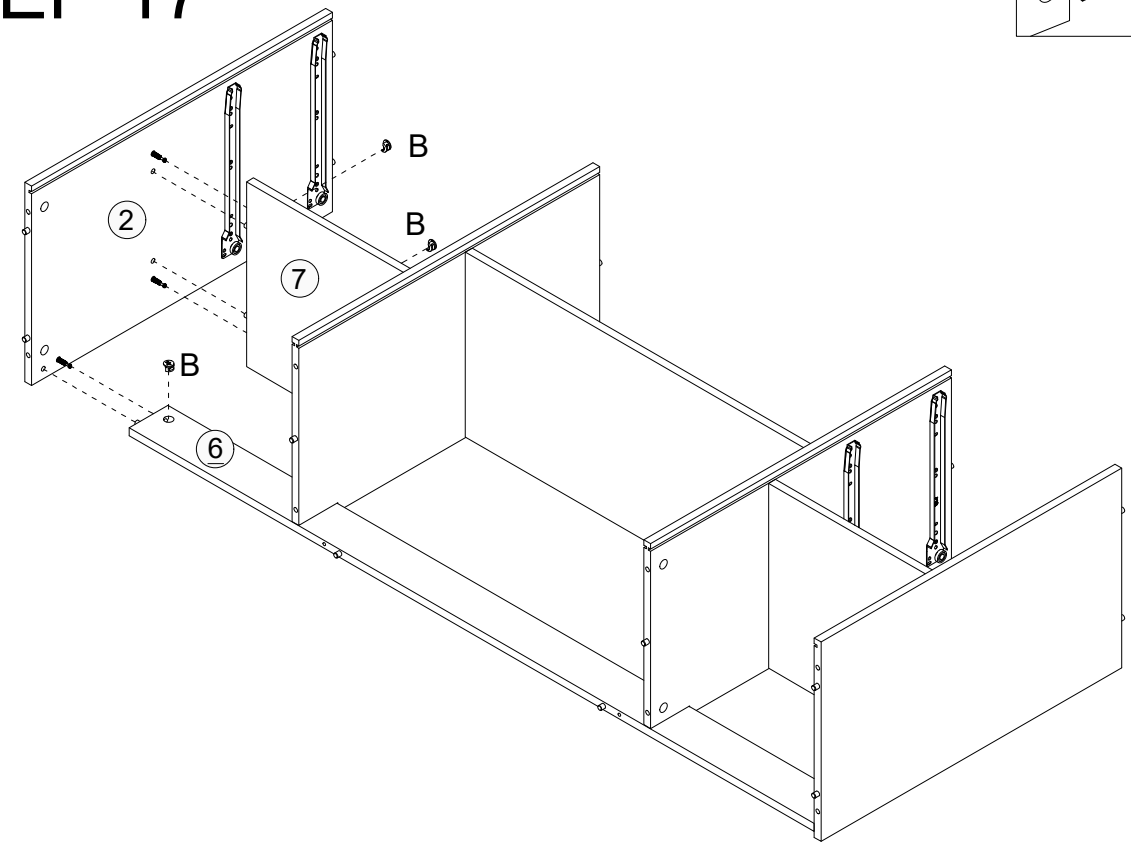



Ø15x9.5	
B	x 3


STEP 18

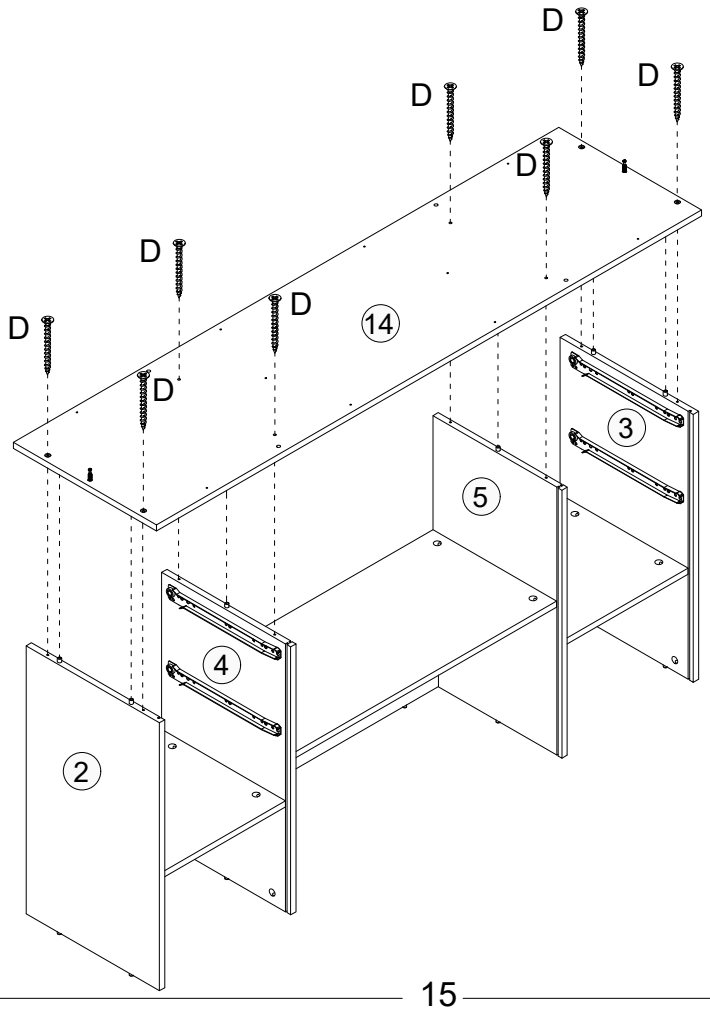




Ø4*50mm	
D	x 8

STEP 19

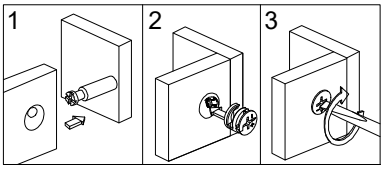


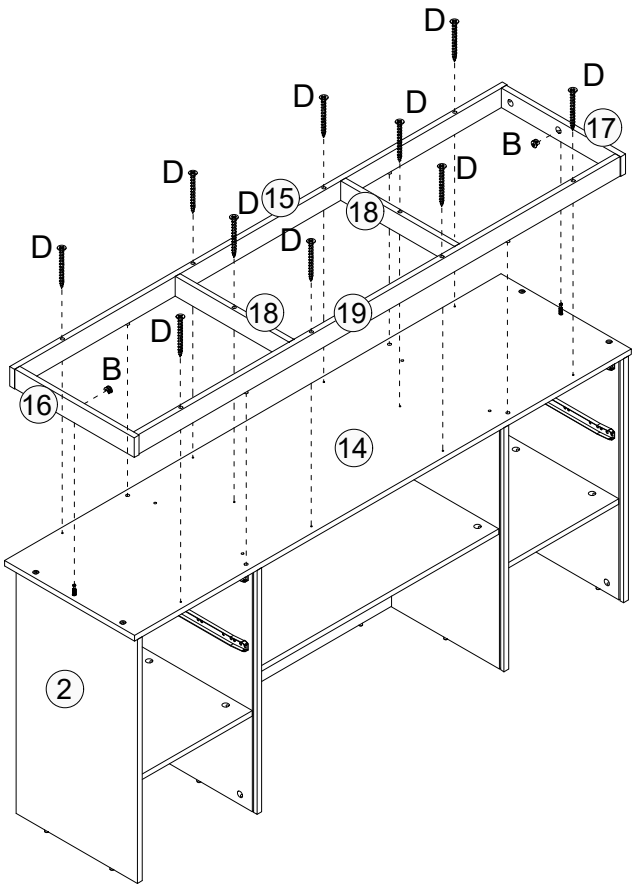


Ø4*50mm	
D	x 10


Ø15x9.5	
B	x 2

STEP 20

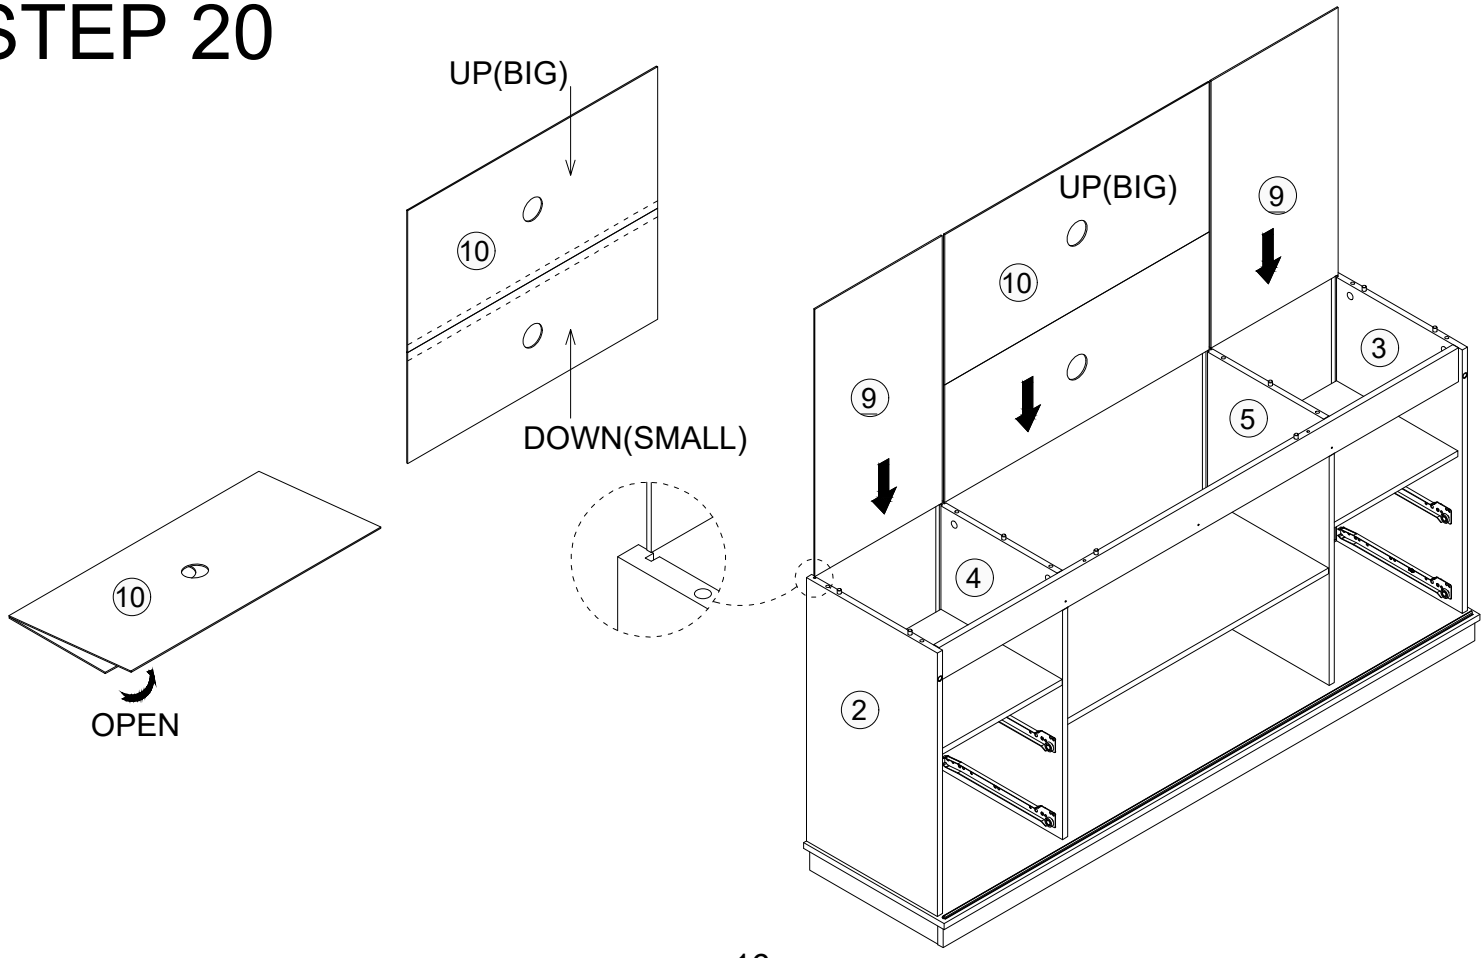

STEP 21

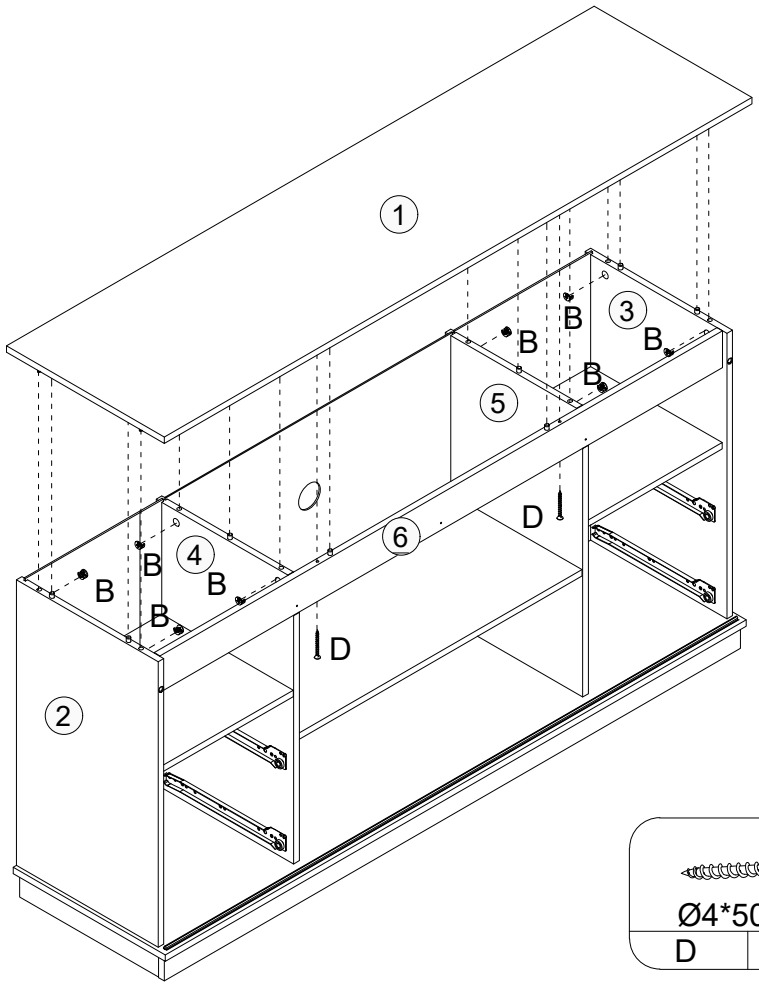

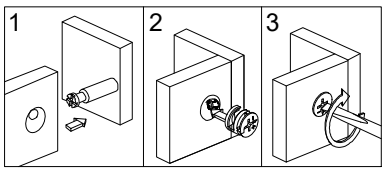


Ø4*50mm	
D	x 2

Ø15x9.5	
B	x 8

STEP 22

Put the I and J screws in the holes，tighten the screws，but not too tight.70% is OK.

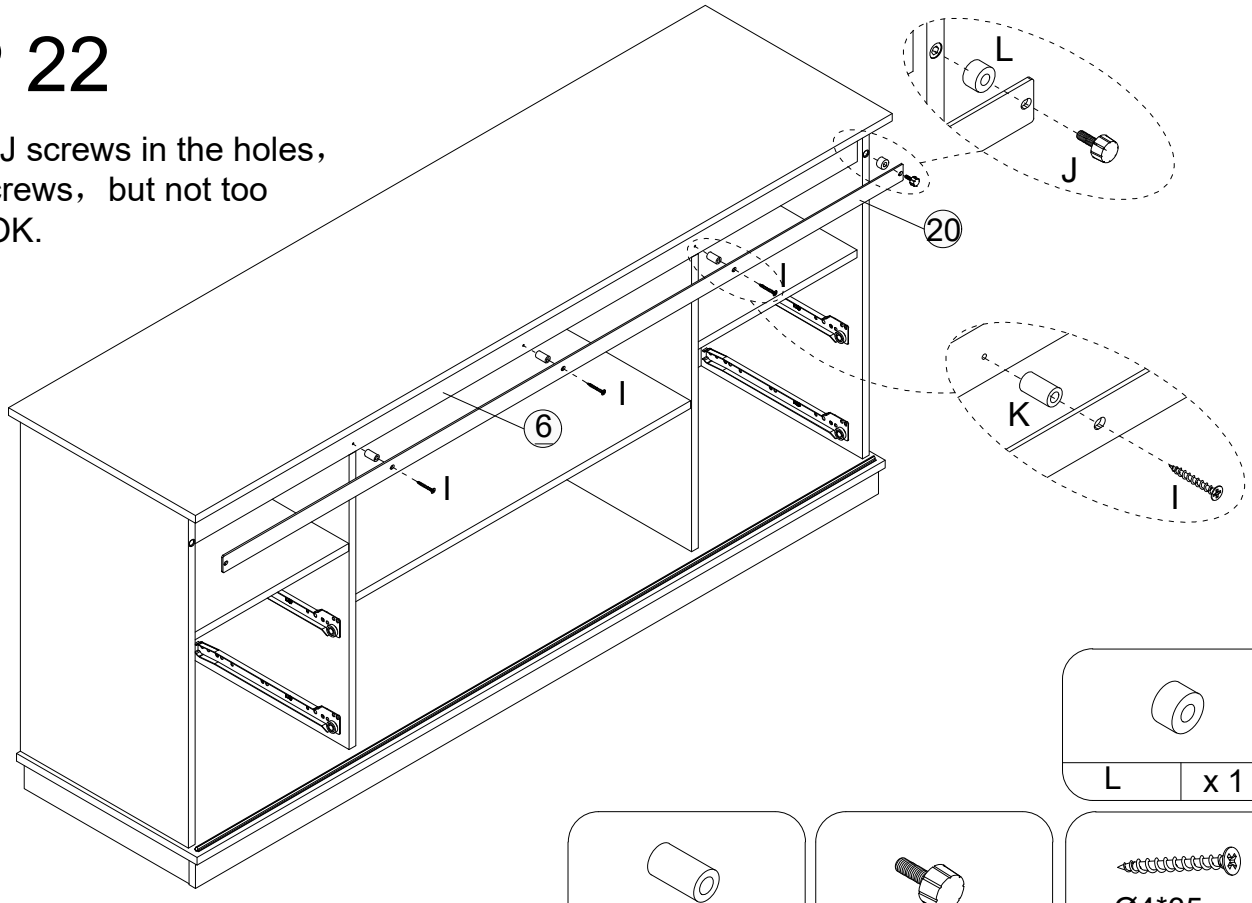


L	x 1


K	x 3

J	x 1


Ø4*35mm	
I	x 3

STEP 23

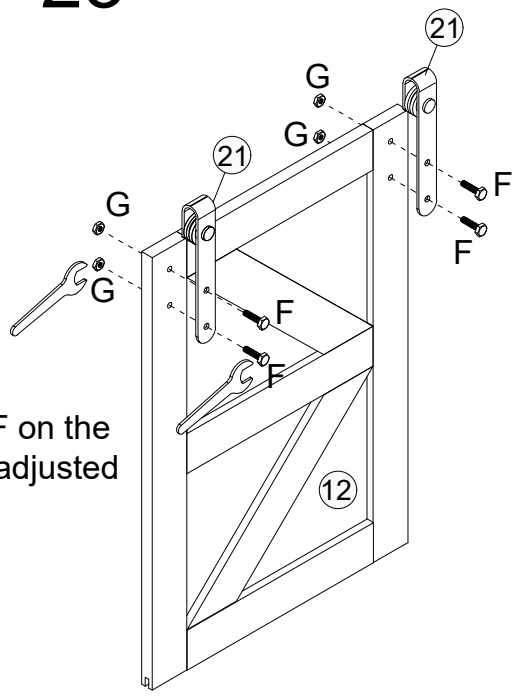


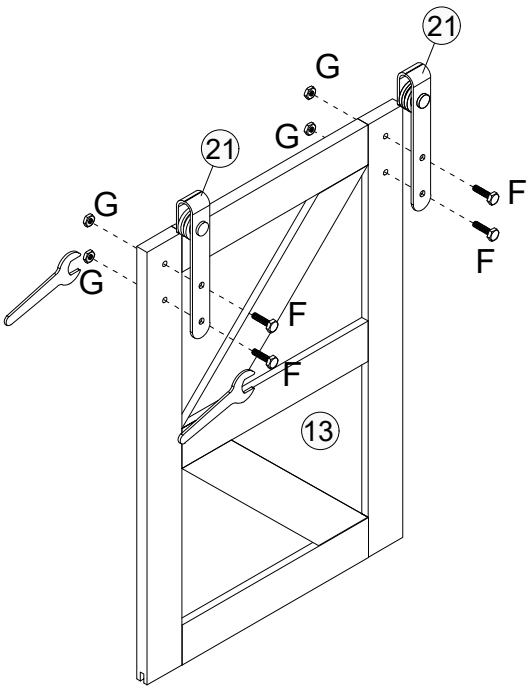


The screws F on the door can be adjusted up and down

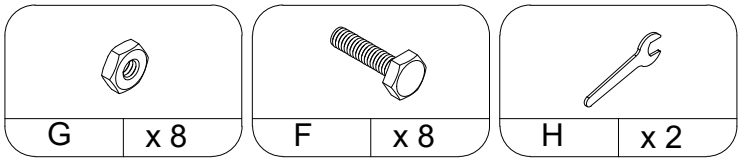


STEP 24

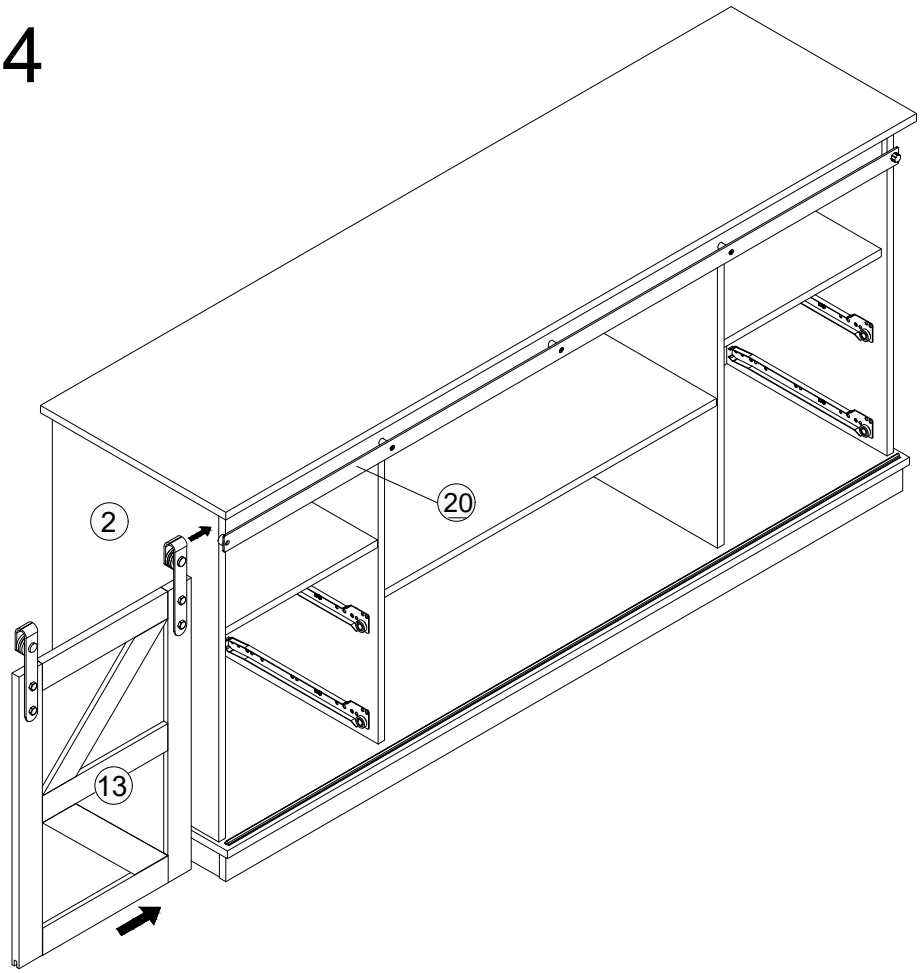


STEP 25

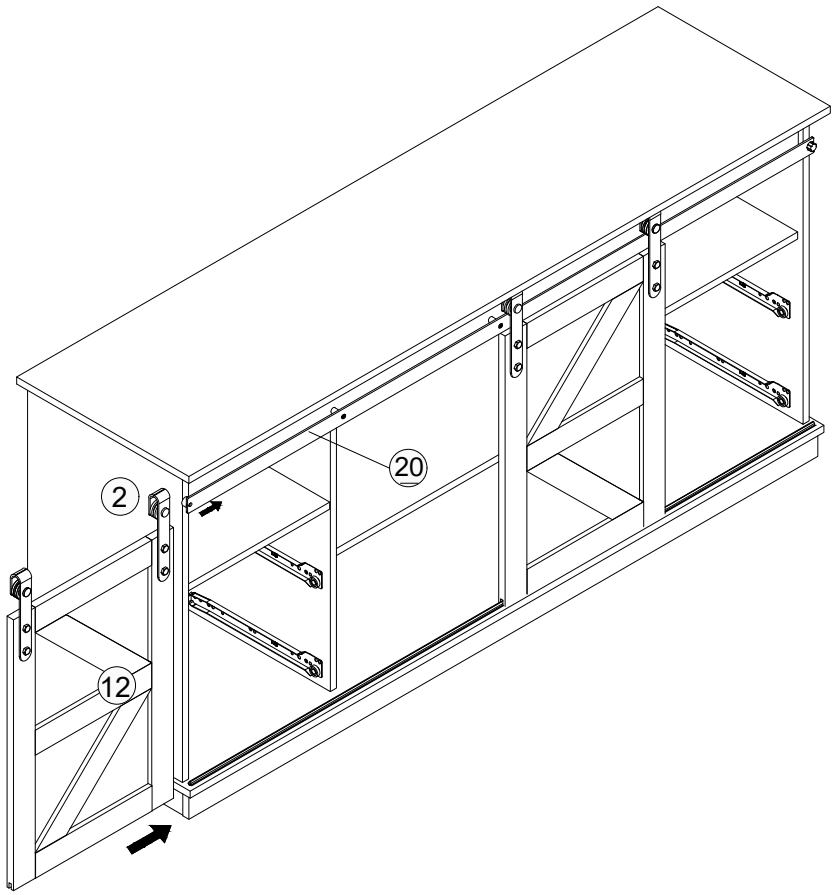



STEP 26

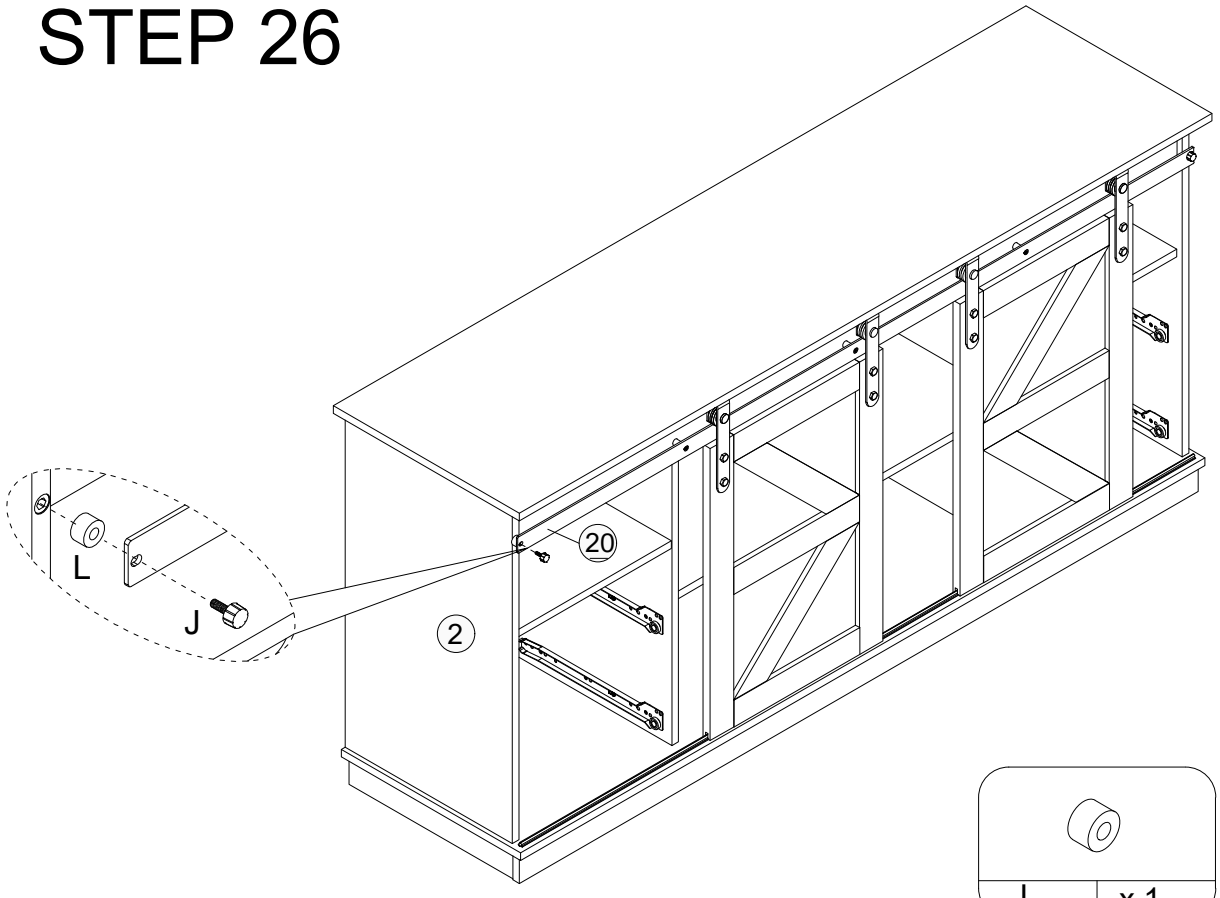


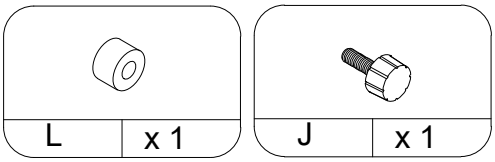


STEP 27

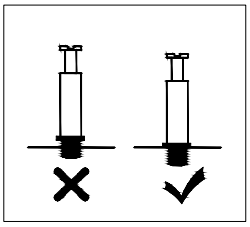


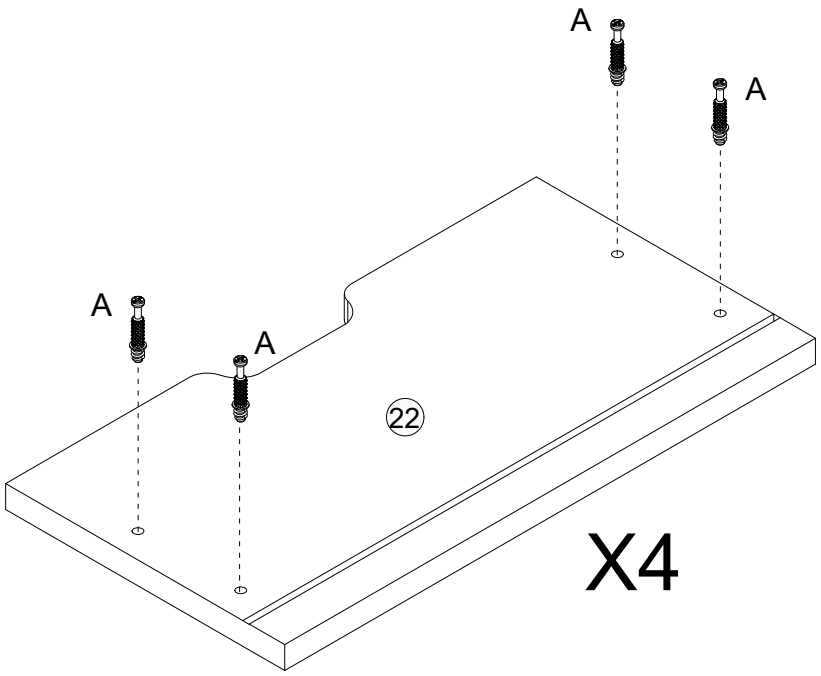

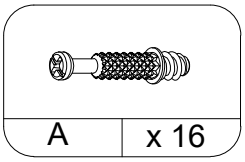


STEP 28

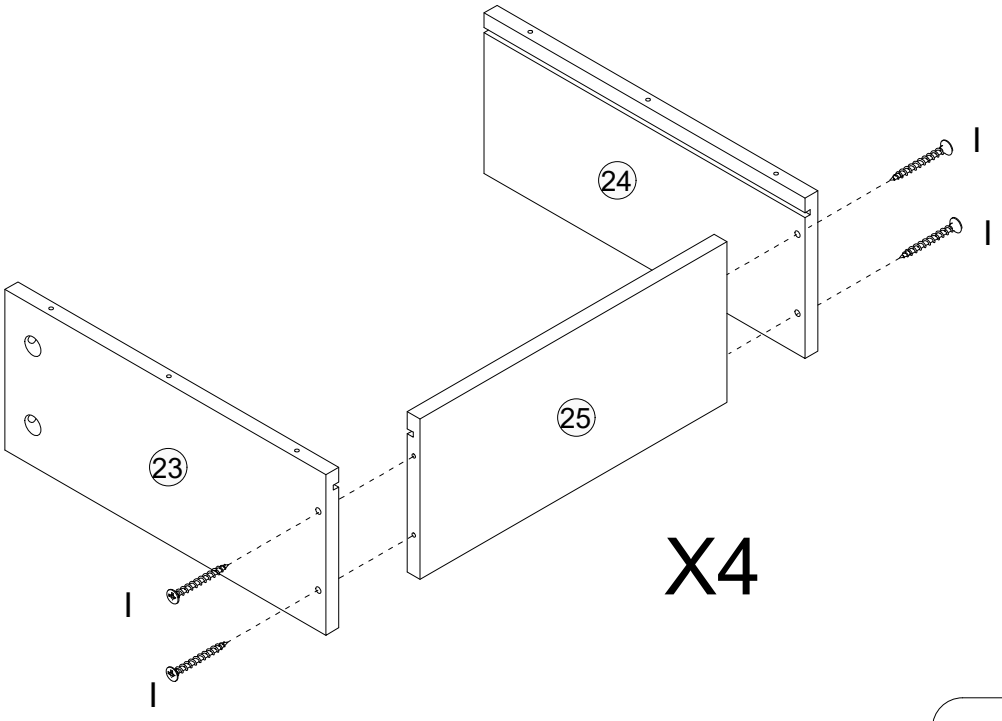

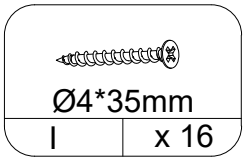



STEP 29

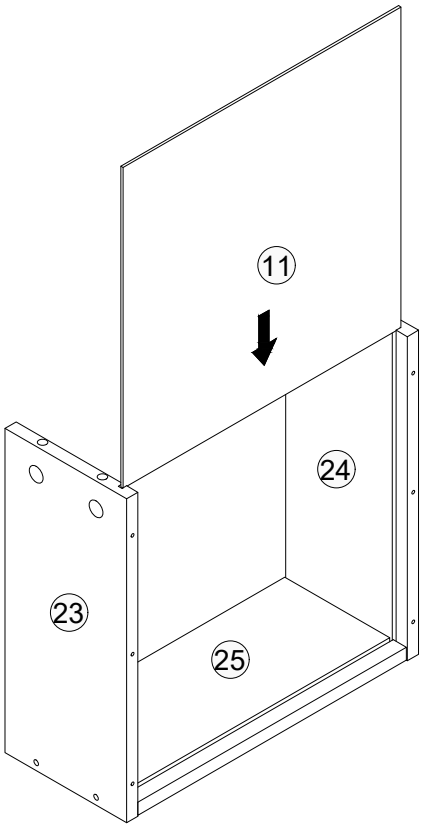


X4

STEP 30

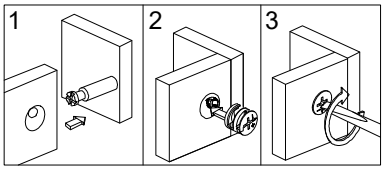


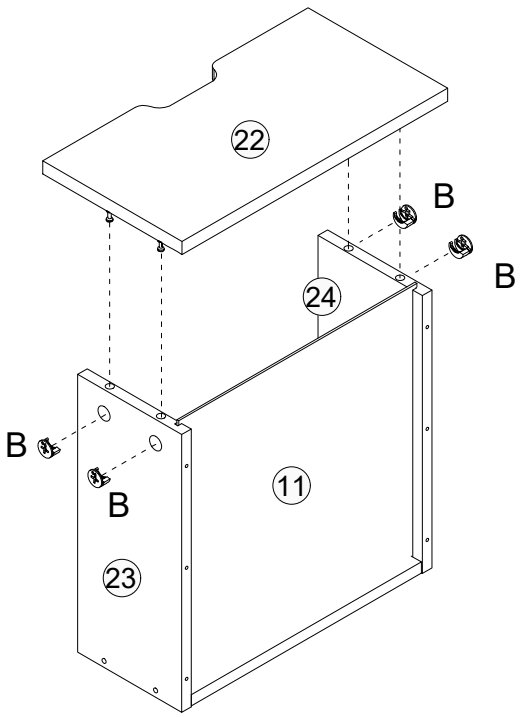

X4

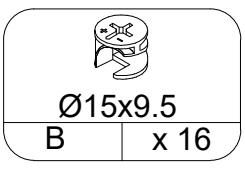


STEP 31

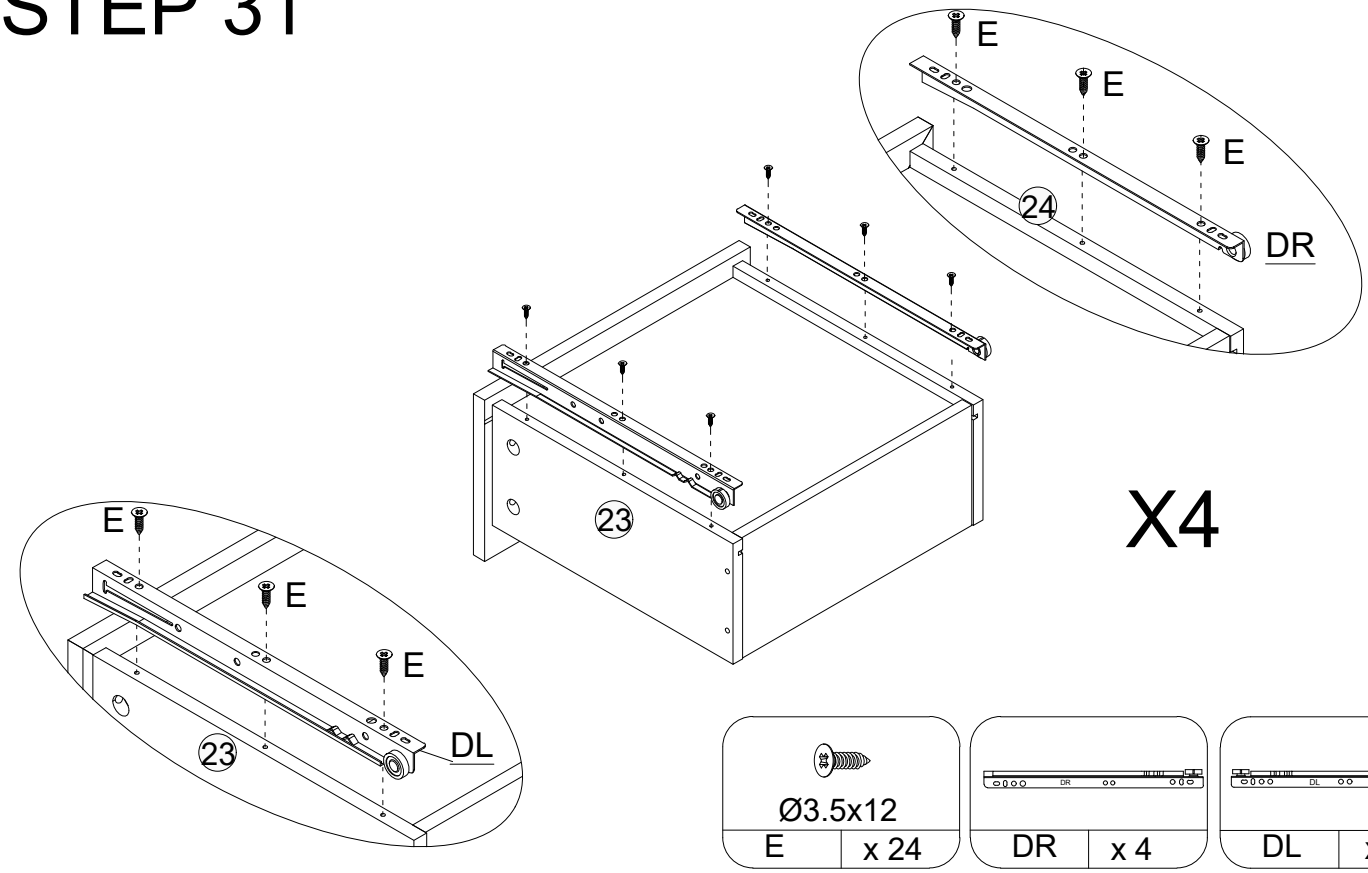


Ø3.5x12			
E	x 24	DR	x 4


DL	x 4

STEP 32

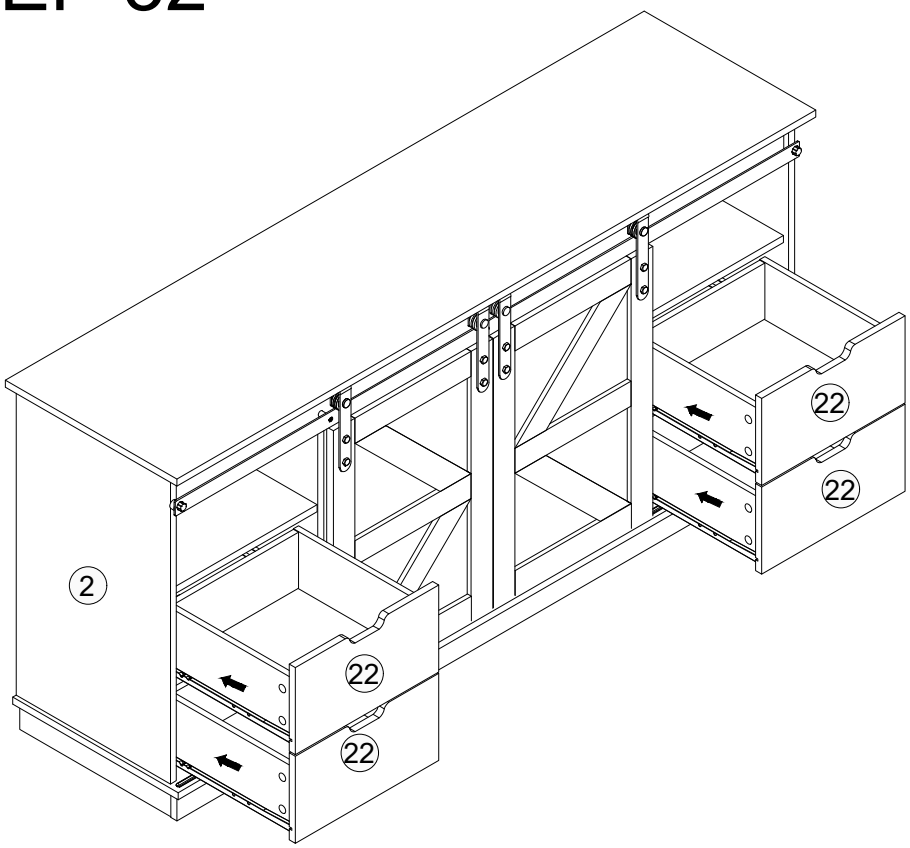


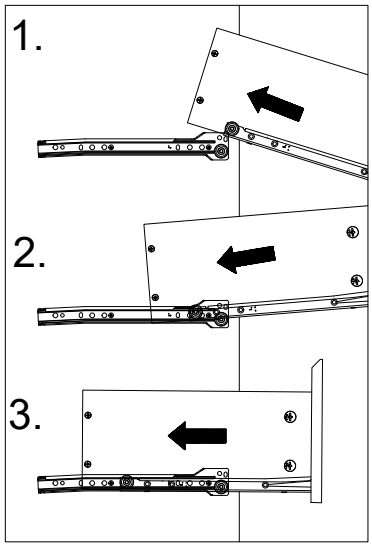

STEP 33

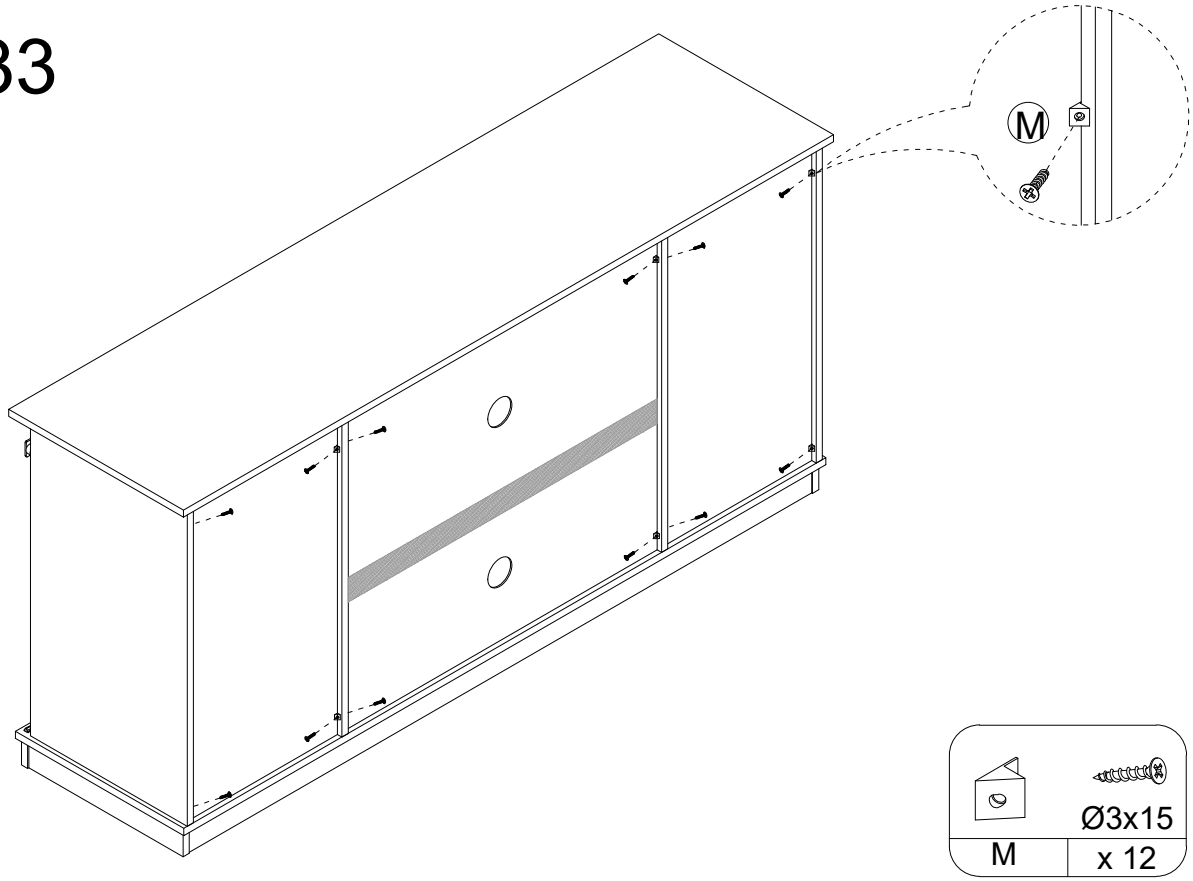

STEP 34

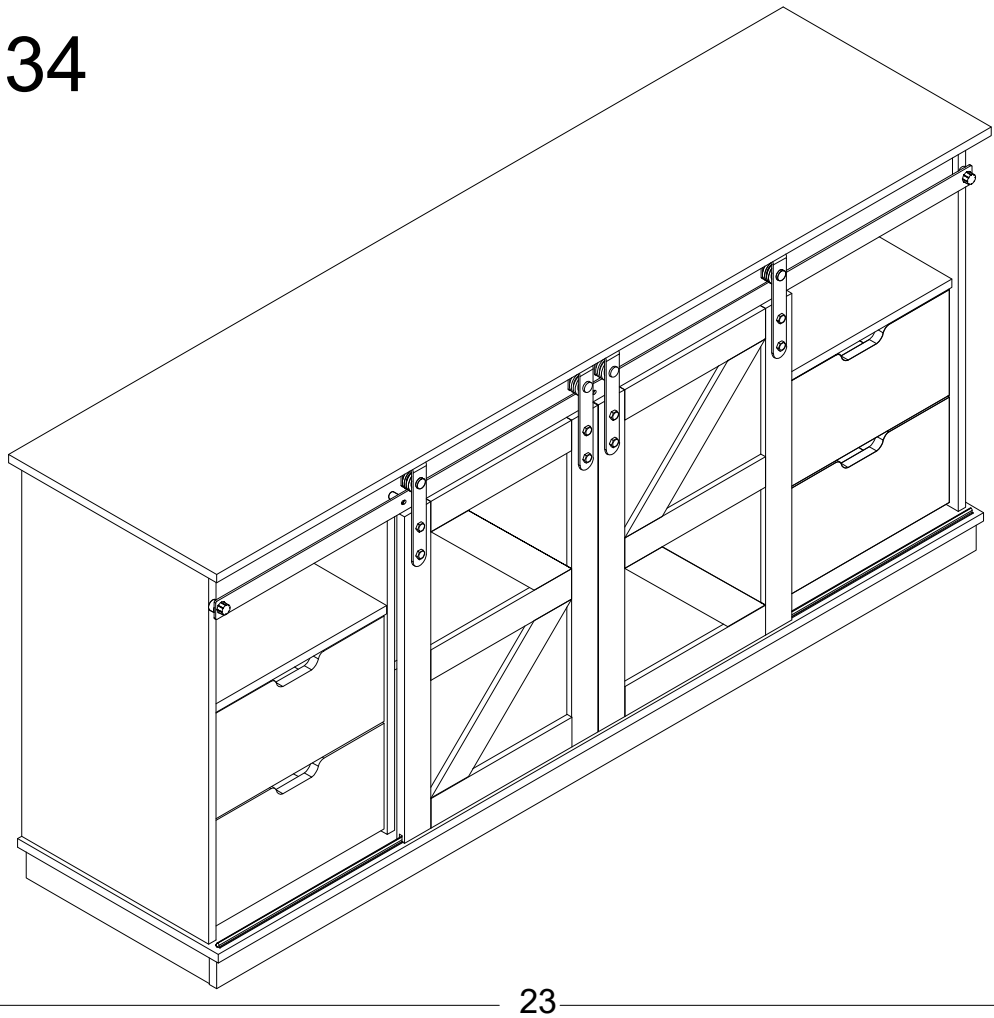

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

· Tighten all bolts and screws again within the first 2 weeks of assembly
· Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

· Clean the surface of the MDF (medium - density fiberboard) with a lightly dampened cloth.
· Small amount of mild soap can be used if necessary
- **Dry the surface immediately after cleaning.**

⚠ DO NOT use bleach or alcohol detergent to clean the surface.
⚠ DO NOT apply wood treatment on parts made with MDF.

Medium - density fiberboard will swell and distort when suffer from water damage. Make sure to dry the furniture immediately after cleaning