Johnstown Swing

Adjust safety spring snaps for your personal comfort.

Back:. Short Chain Fasten to the back piece of the swing.

Seat: Full Support Chain Fasten from the bottom of the seat to the top of the ceiling.

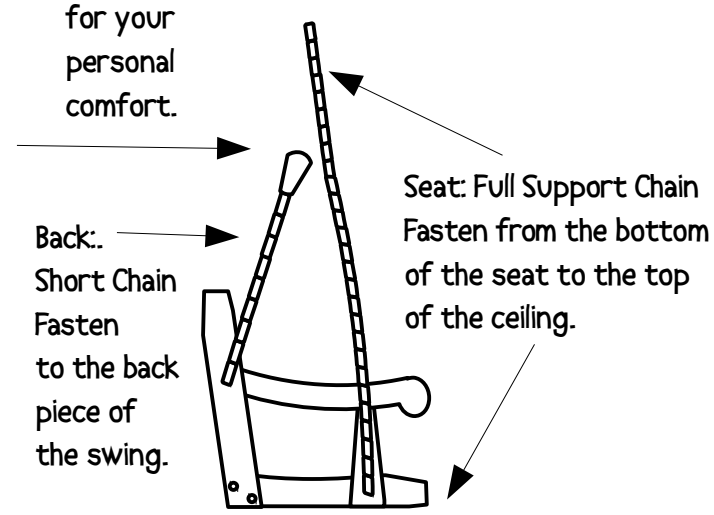

Important: Do not tighten any nuts until assembly is complete. This swing is designed for a covered porch or area with a solid roof.

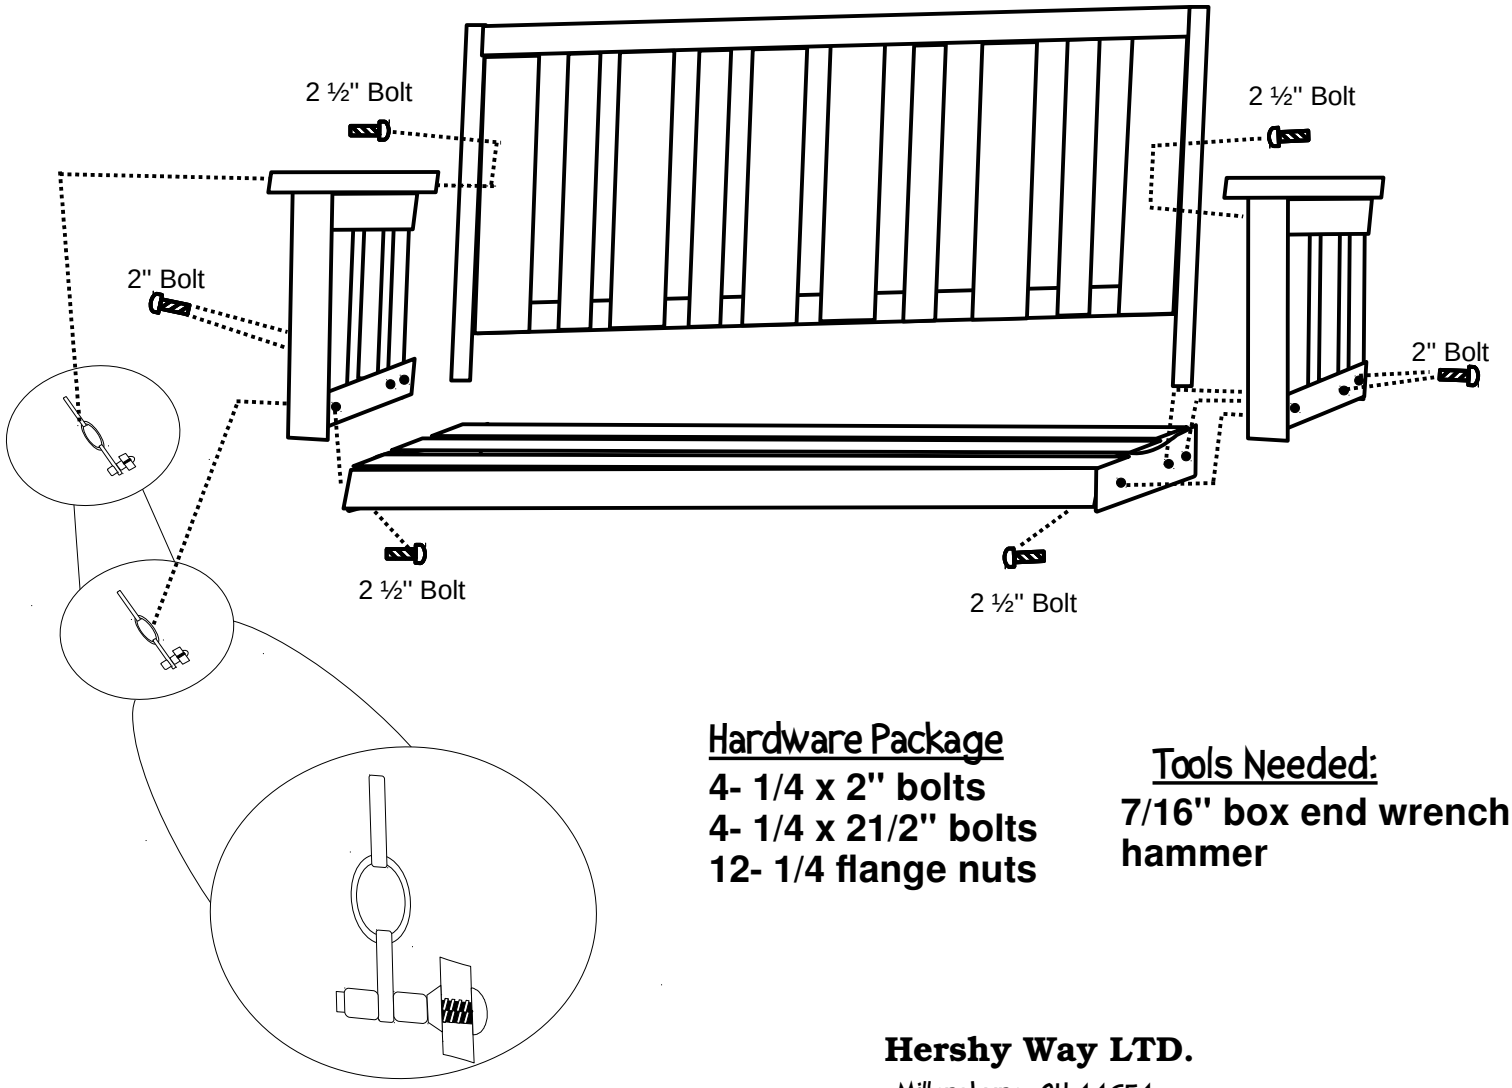

Hardware Package

4- 1/4 x 2" bolts
4- 1/4 x 21/2" bolts
12- 1/4 flange nuts

Tools Needed:

7/16" box end wrench
hammer

Hershy Way LTD.
Millersburg, OH 44654
call 1-888-443-7749
email: sales@hershywayltd.com