

Installation & Assembly



Before You Start

-  Please read all instructions carefully.
-  Retain instructions for future reference.
-  Separate and count all parts and hardware.
-  Read through each step carefully and follow the proper order.
-  We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
-  Always place the product on a flat, steady and stable surface.
-  Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.


Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.

















Please do not return to the store
Broken or missing Hardware?
Need help with Assembly?








Completed Assembly

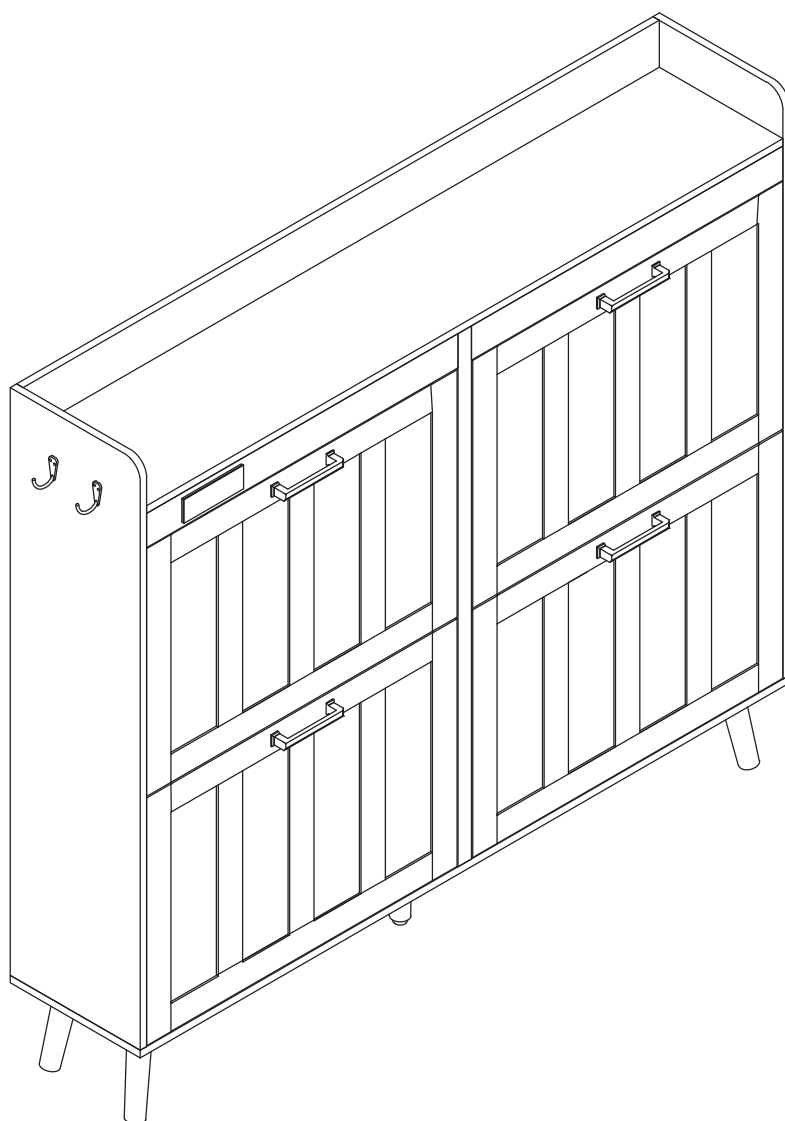

Parts Description

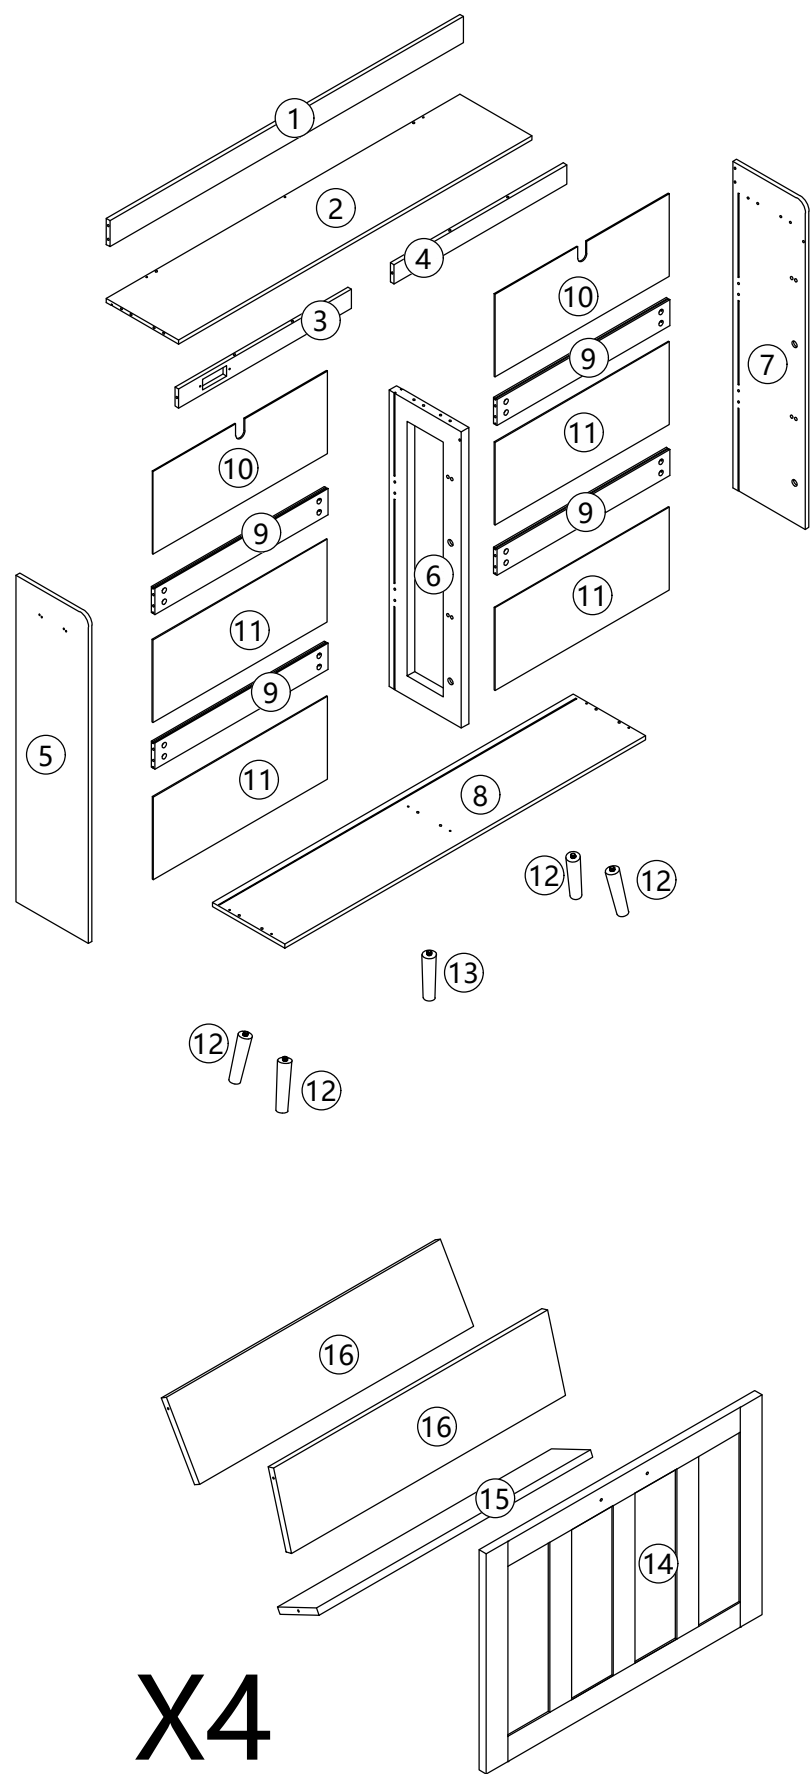

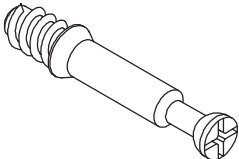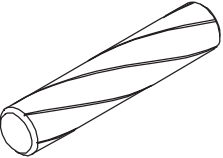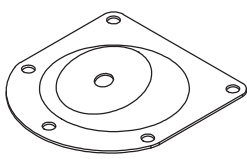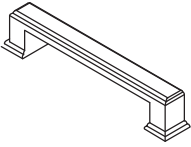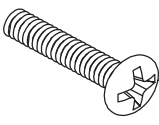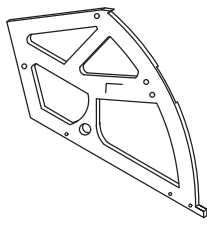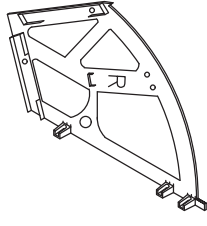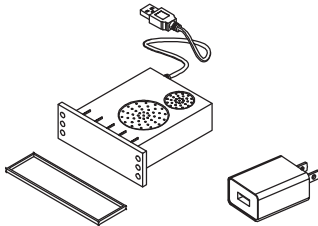A  Cam Bolt x32+2	B  Cam Lock x32+2	C  Wooden Dowel Ø6x30mm x16+1
D  Screw Ø4x35mm x9	E  Screw Ø3x12mm x8	F  Screw Ø4x14mm x48+2
G  Plastic hinge pin x8	H  Plastic hinge pin&Screw x8 Ø4x10mm	I  Semi-circular metal plate x4
J  Screw Ø4x12mm x24	K  Handle x4	L  Screw Ø4x20mm x8
M  Shoe rack panel x4	N  Shoe rack panel x4	O  Deodorizer x1

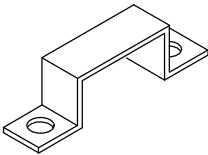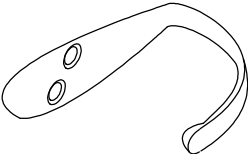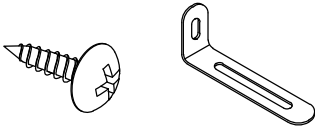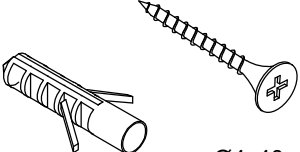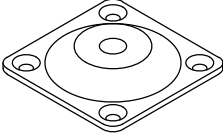P  Wire clip x1	Q  Hook x2	R  Ø4x12mm Anti-tip kit x2
S  Ø4x40mm Anti-tip kit x2	T  Ø3x14mm Back panel fastener&Screw x24	U  Felt pad x4
V  Square metal plate x1	W  Leveling screw x1	



Note: Please do not use any power tools. Use of power tools may cause damage and void manufacture warranty.

Instructions For Fastening Cam Bolt and Cam Lock





CAM BOLT





CAM LOCK

Cam Bolt

Place Cam Bolt on the designated pre-drilled hole on the panel. Use a Phillips Screwdriver to screw in Cam Bolt vertically until shoulder is snug and flushed with panel. Do not over-tighten or under-tighten Cam-bolt. See illustrations below.

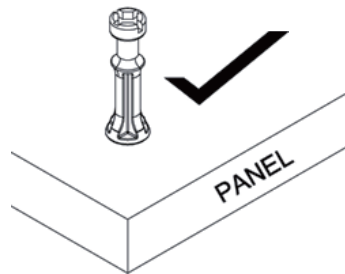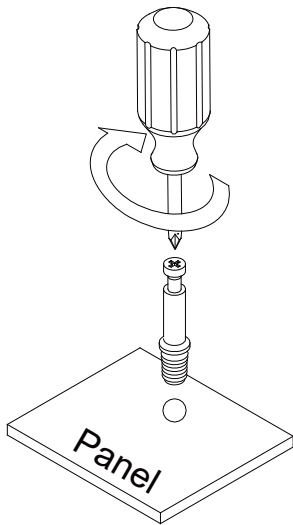



Shoulder is flushed
(on the same level)
with the panel.

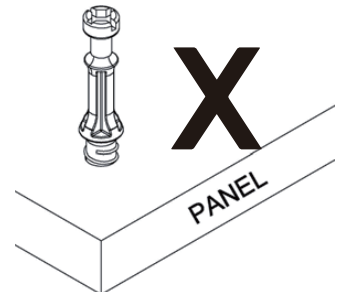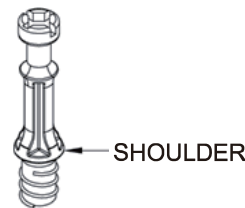

Shoulder is
above the panel.

CAM-LOCK


Align the arrow on the Cam-lock to the
Cam-bolt head and insert the Cam-lock.

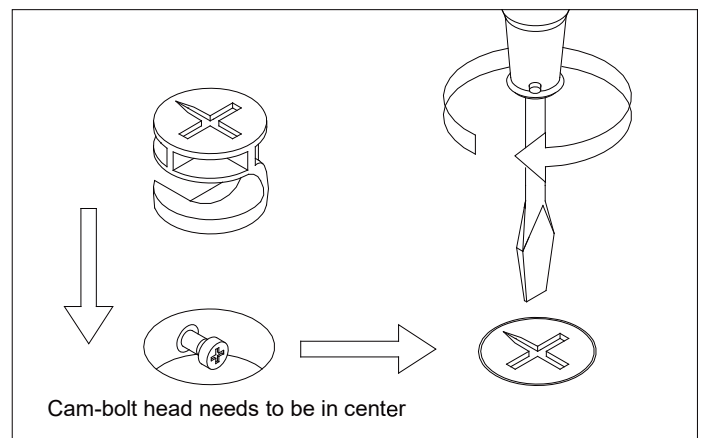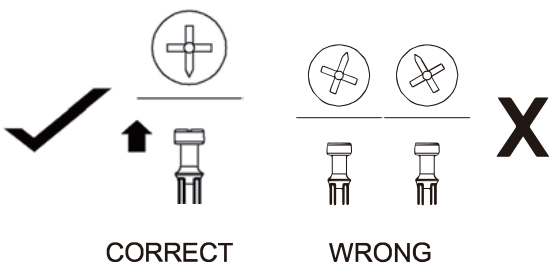

Use a Flat-head Screwdriver to turn Cam Lock clockwise to lock onto the head of the Cam Bolt. Turn until it is snug (about a half turn) – over-tightening could damage Cam Lock and/or Cam Bolt.


Step 1

Hardware Needed		
A		X6

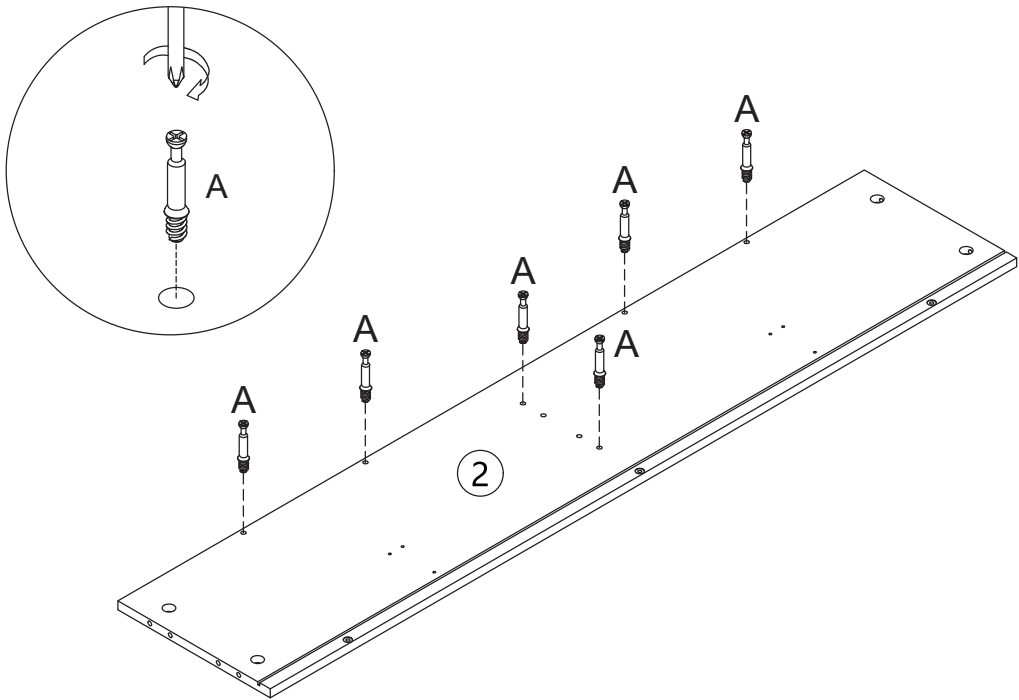


Step 2

Hardware Needed		
C		X2
D		X3

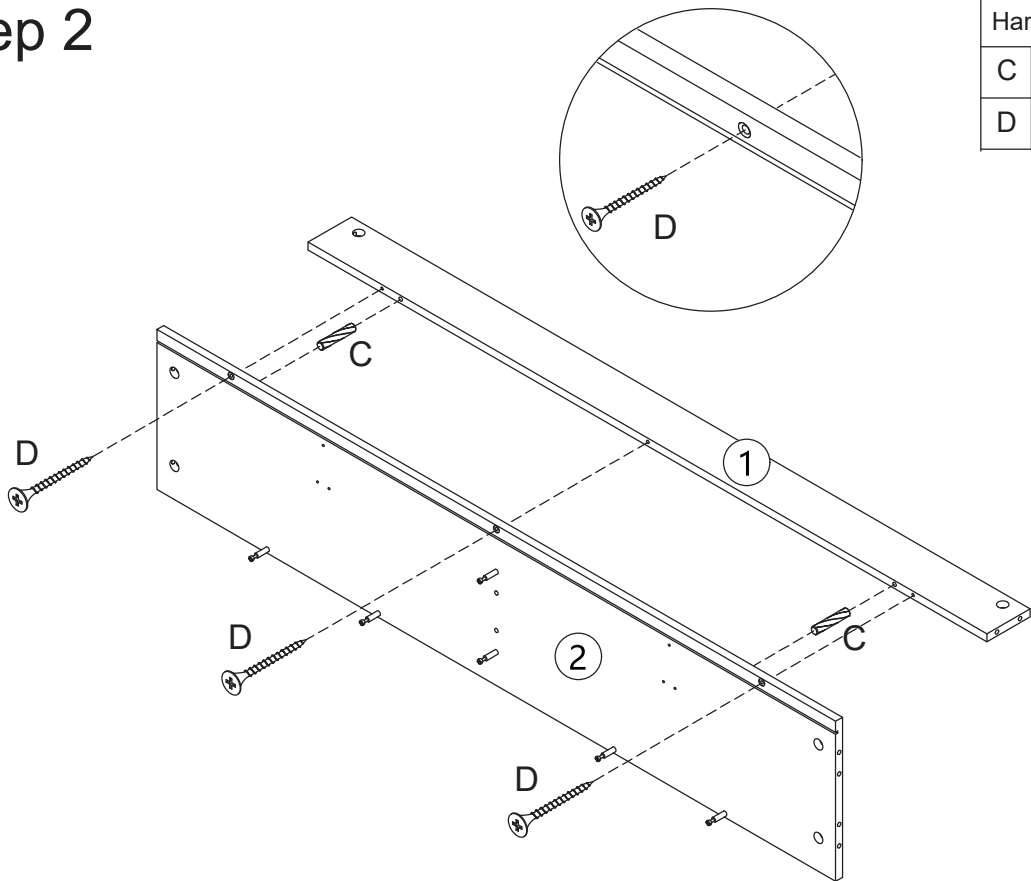

Step 3


Hardware Needed		
G		X4

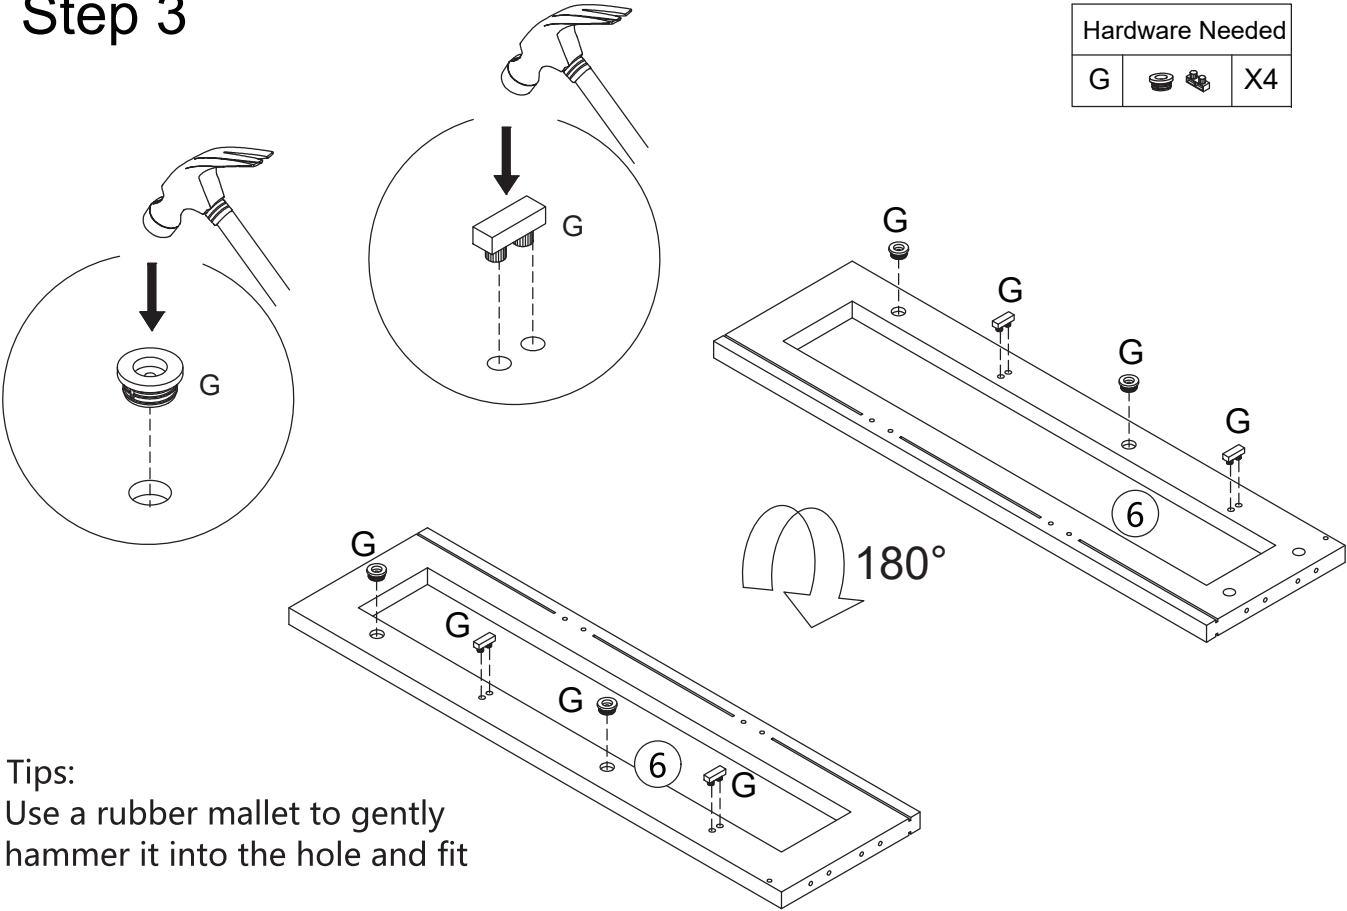

Tips:
Use a rubber mallet to gently hammer it into the hole and fit

Step 4

Hardware Needed		
A		X10

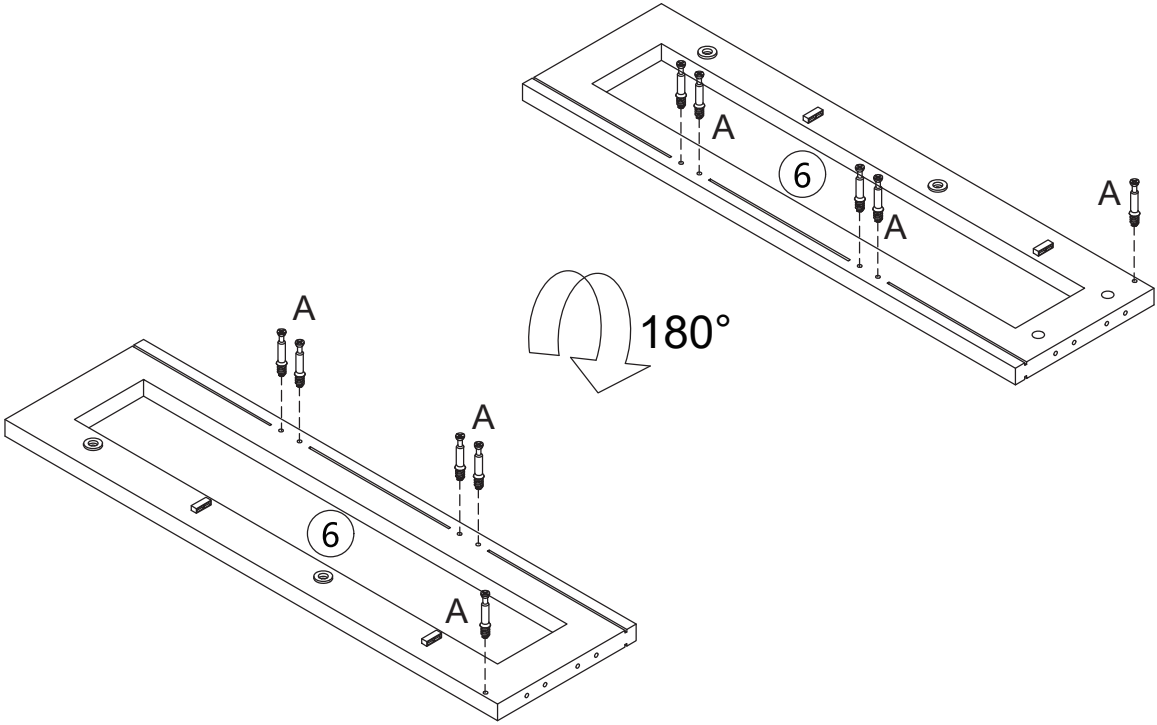



Step 5

Hardware Needed

B





X2

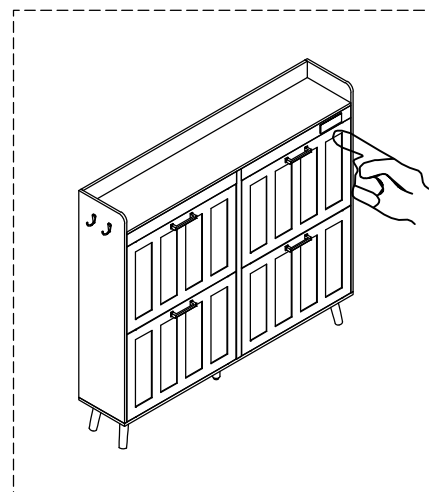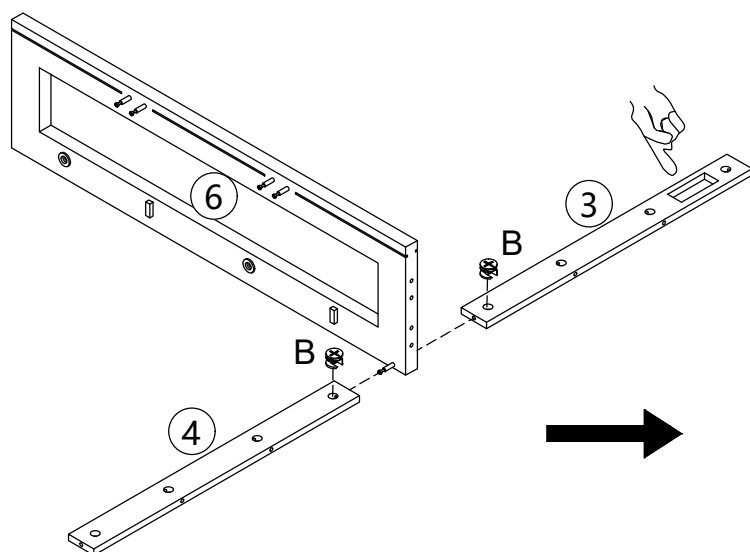


OR

Tips:
According to your
needs, the deodorizer
can be installed in
different locations

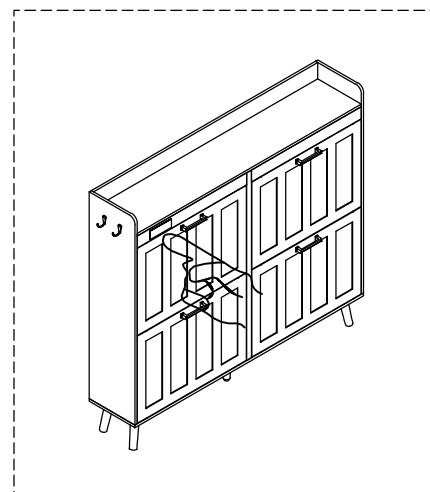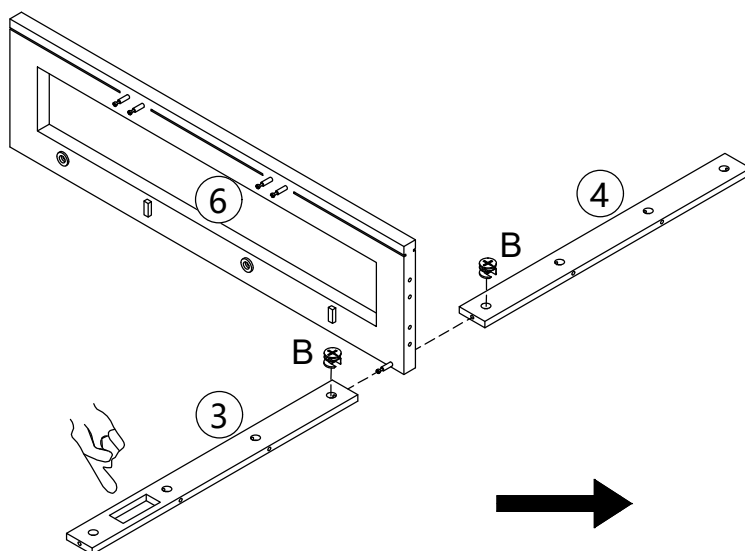

Step 6

Hardware Needed		
B		X6
C		X2

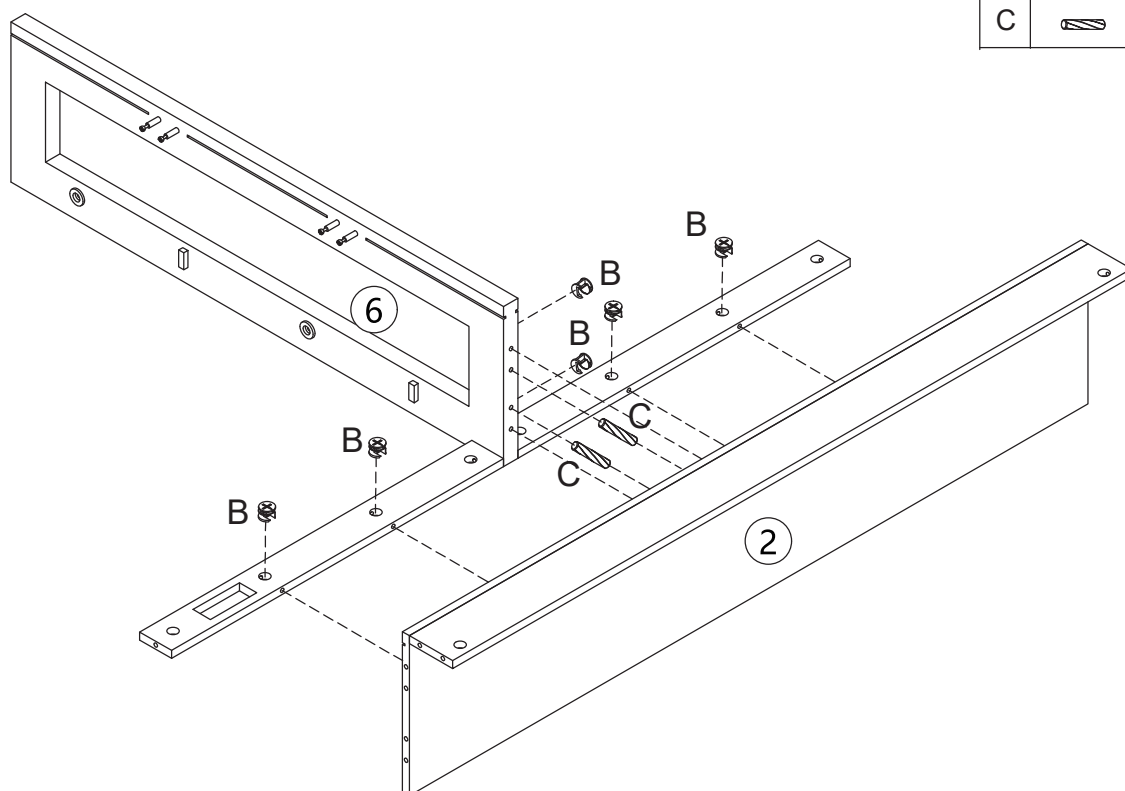



Step 7

Tips:


It is recommended that two people perform this step.

After rotating the frame assembled in Step 7 by 180 degrees, proceed with the installation in Step 8.


Hardware Needed		
B		X8

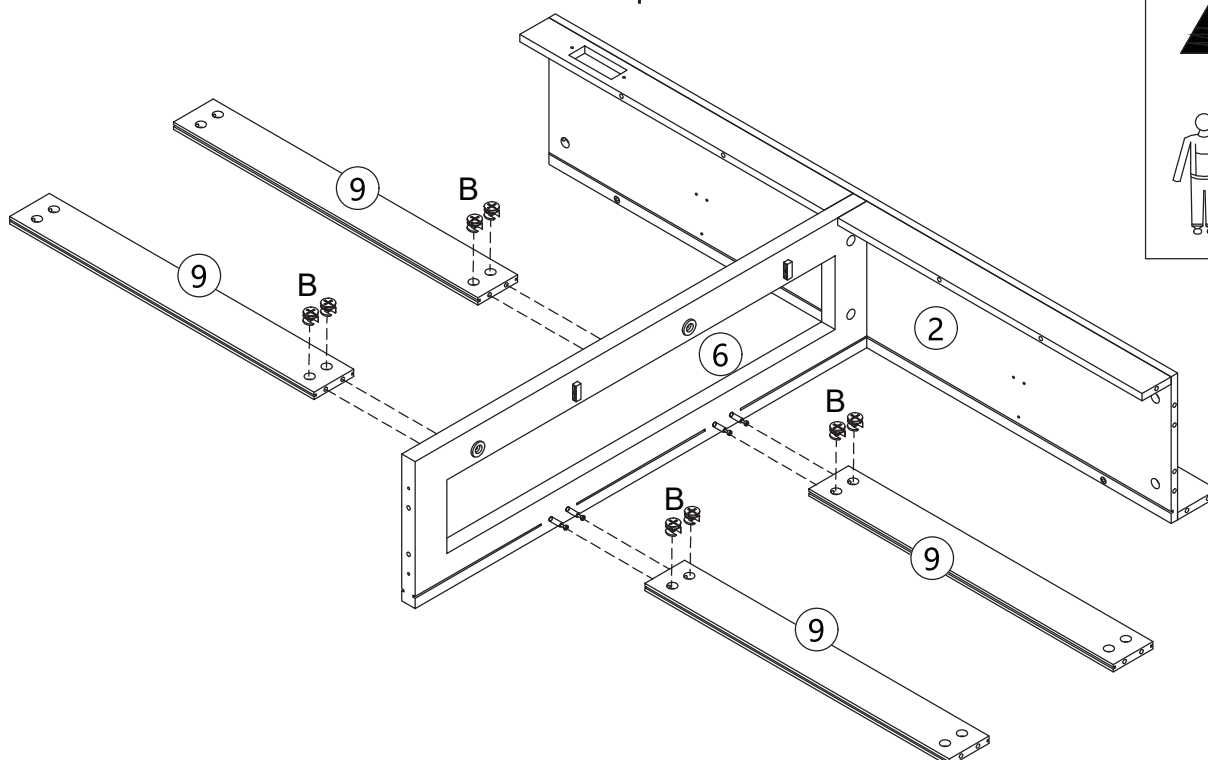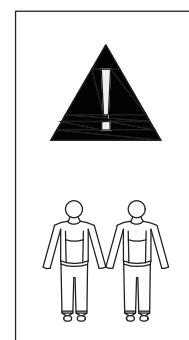


Step 8

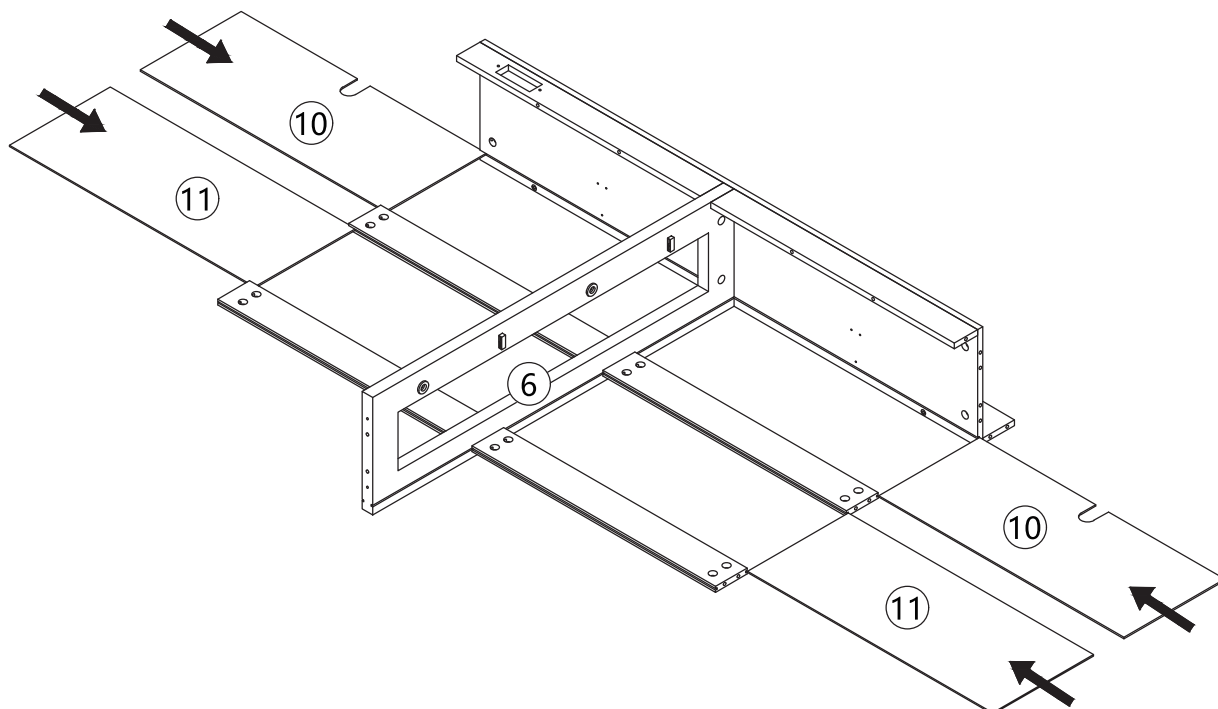

Step 9

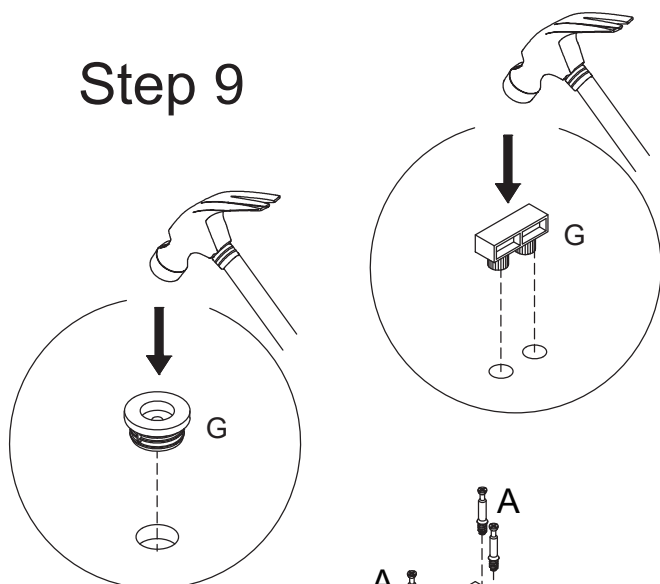


Hardware Needed		
A		X16
G		X4

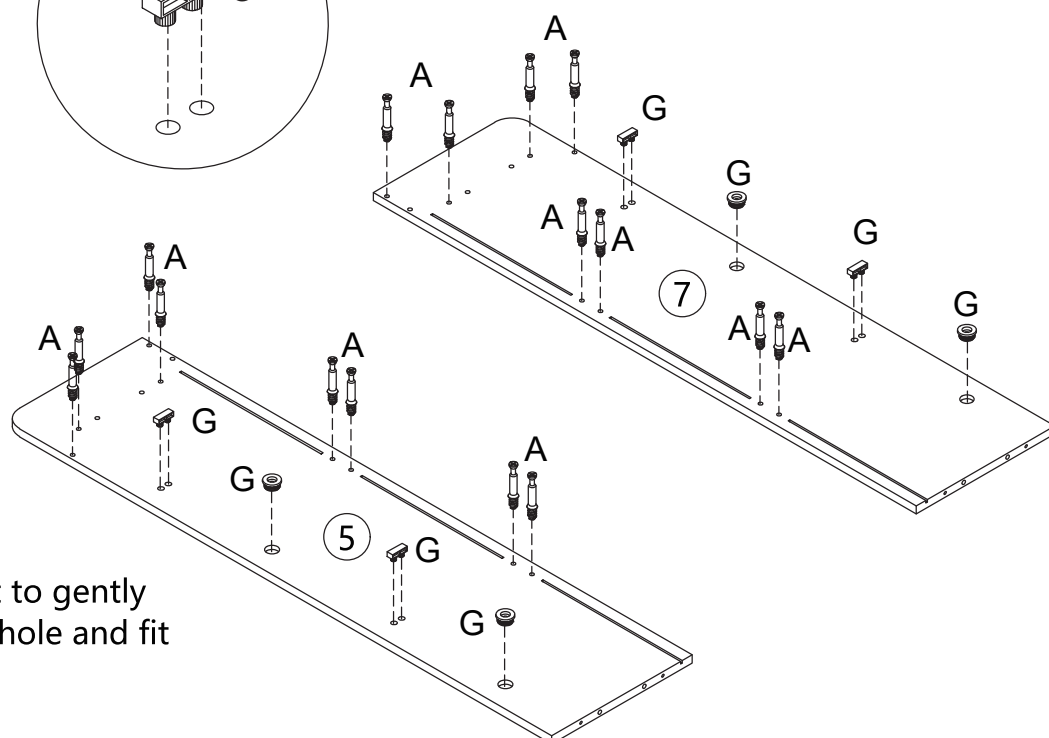

Tips:
Use a rubber mallet to gently hammer it into the hole and fit


Step 10

Hardware Needed		
B		X7
C		X3

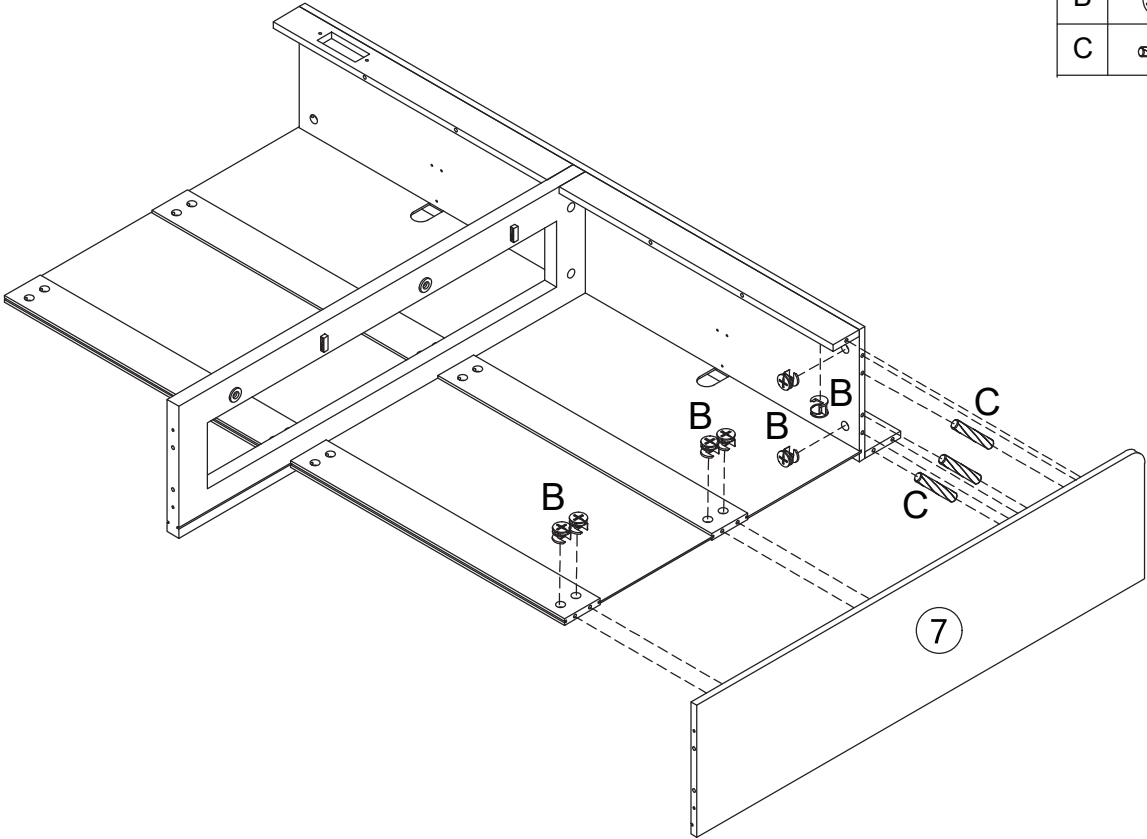


Step 11

Hardware Needed		
B		X7
C		X3

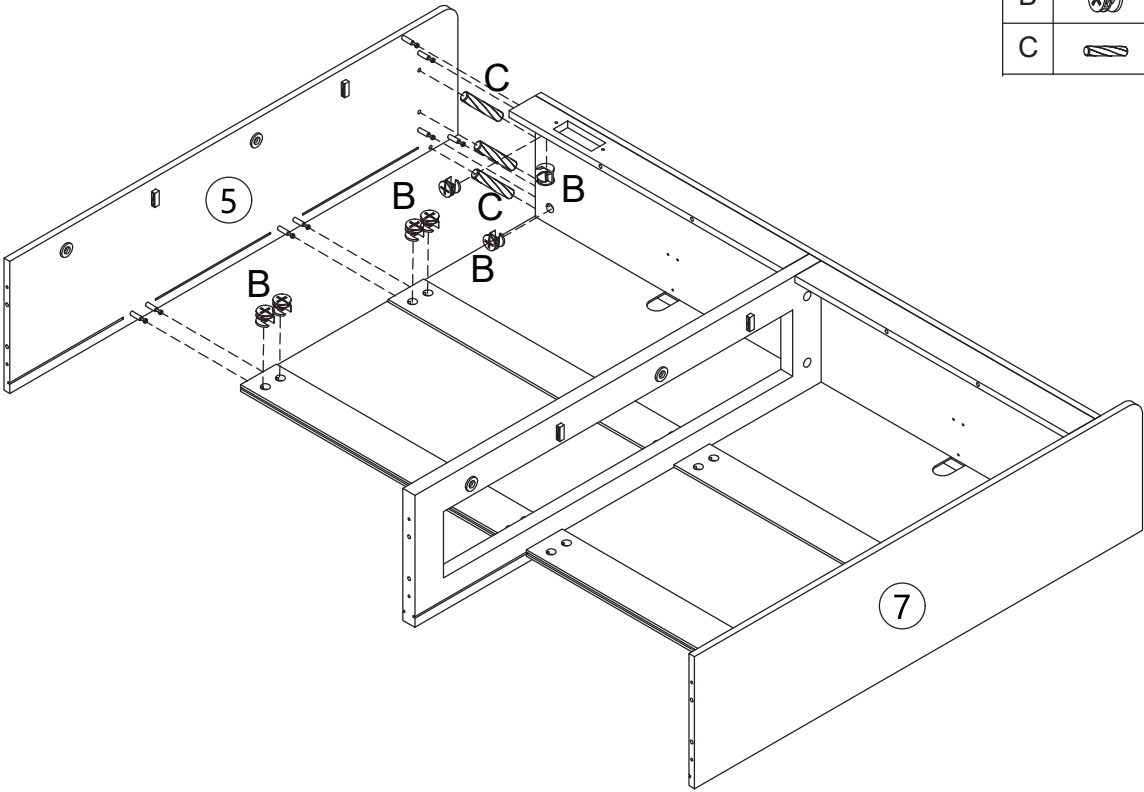


Step 12

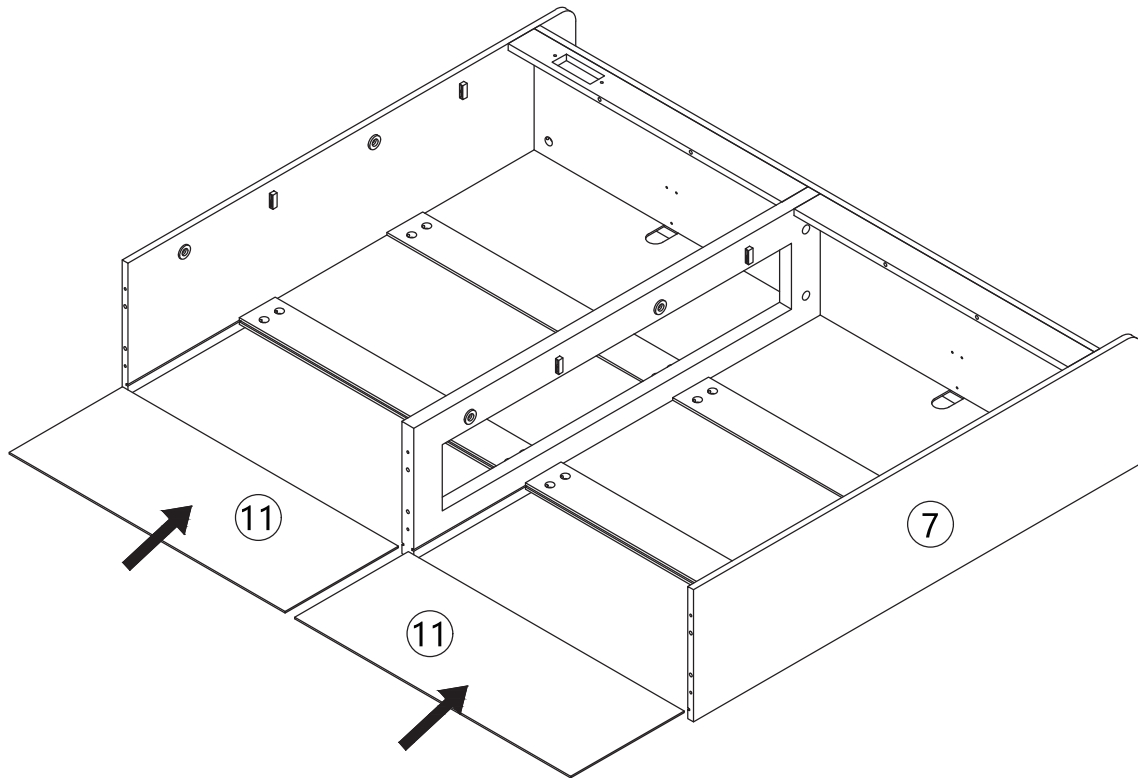


Step 13

Hardware Needed		
C		X6
D		X6

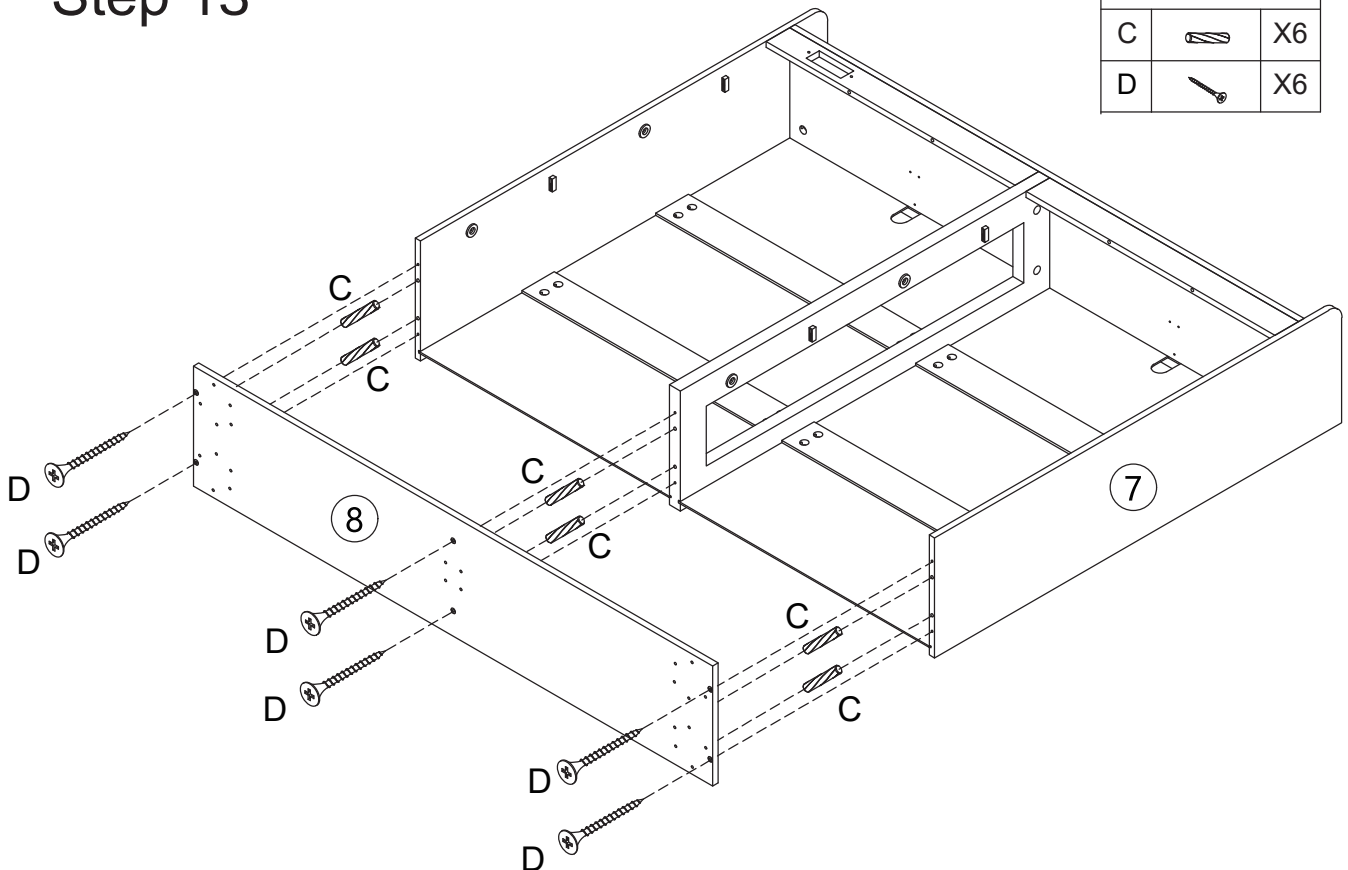


Step 14

Hardware Needed		
B		X2
I		X4
J		X24
V		X1

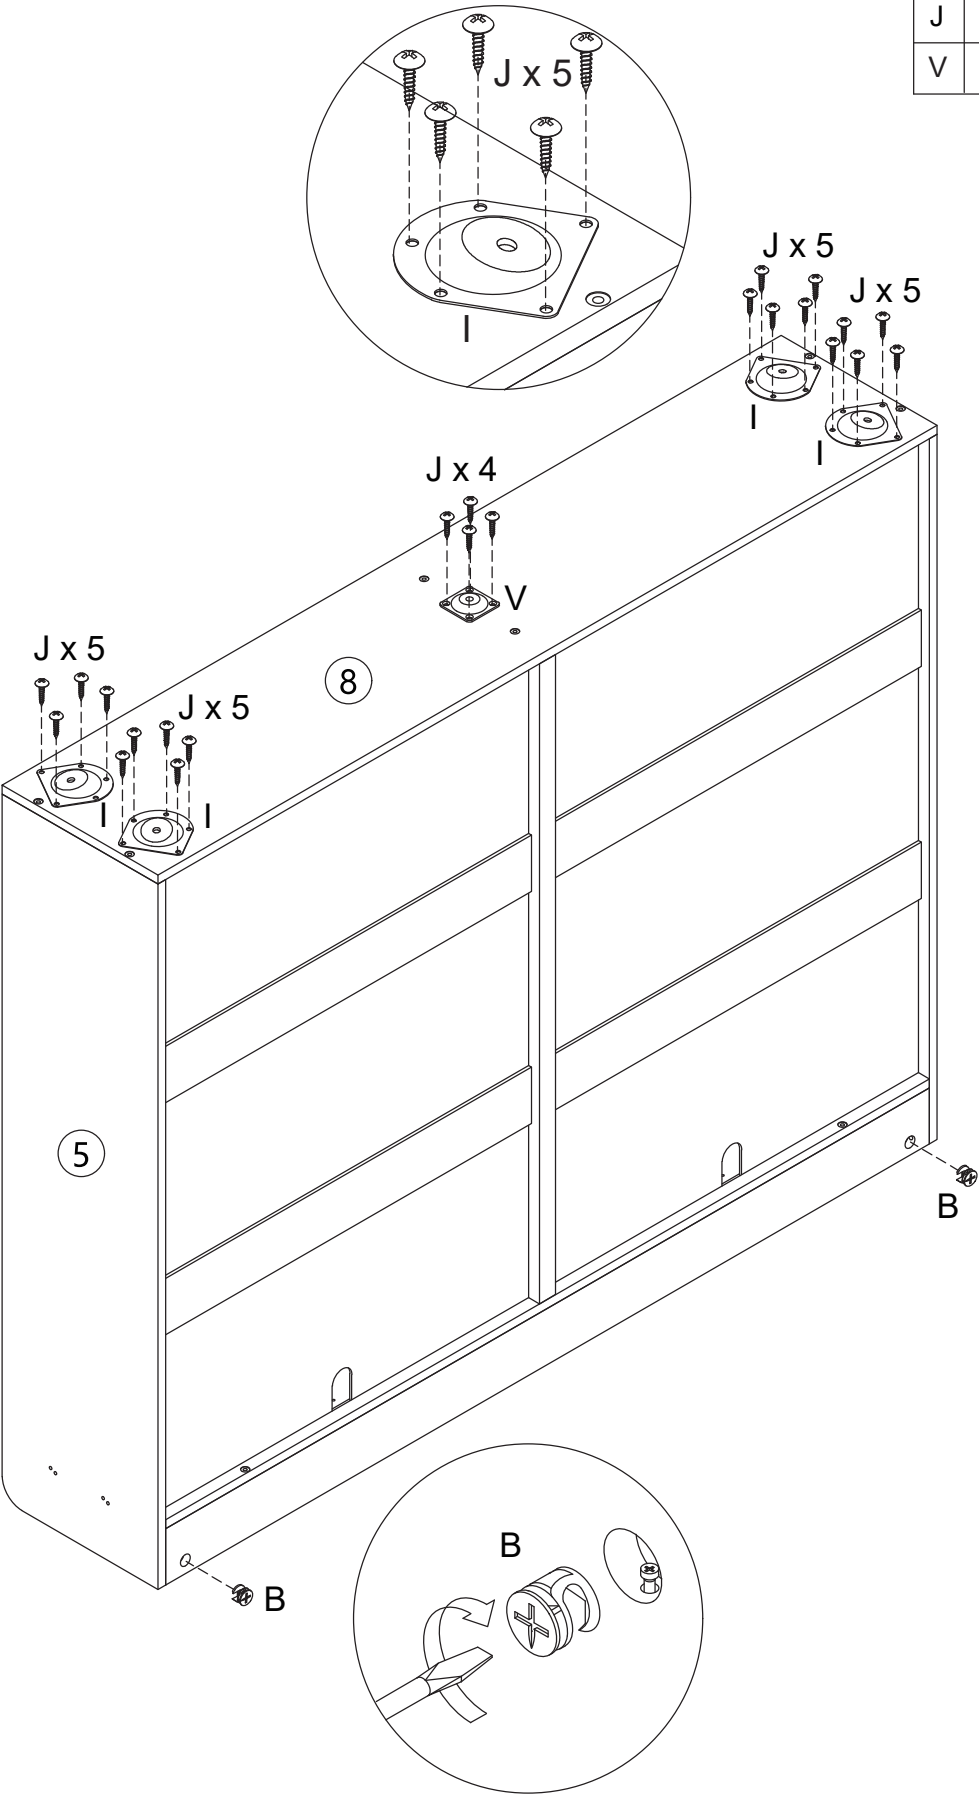

Step 15

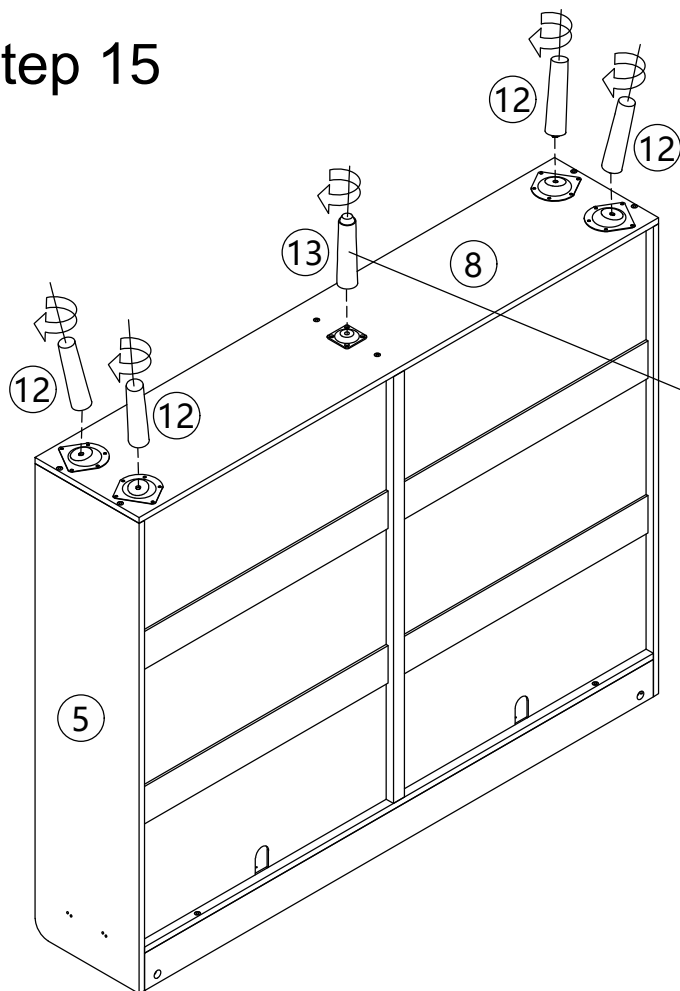


Hardware Needed

W



X1

Step 16

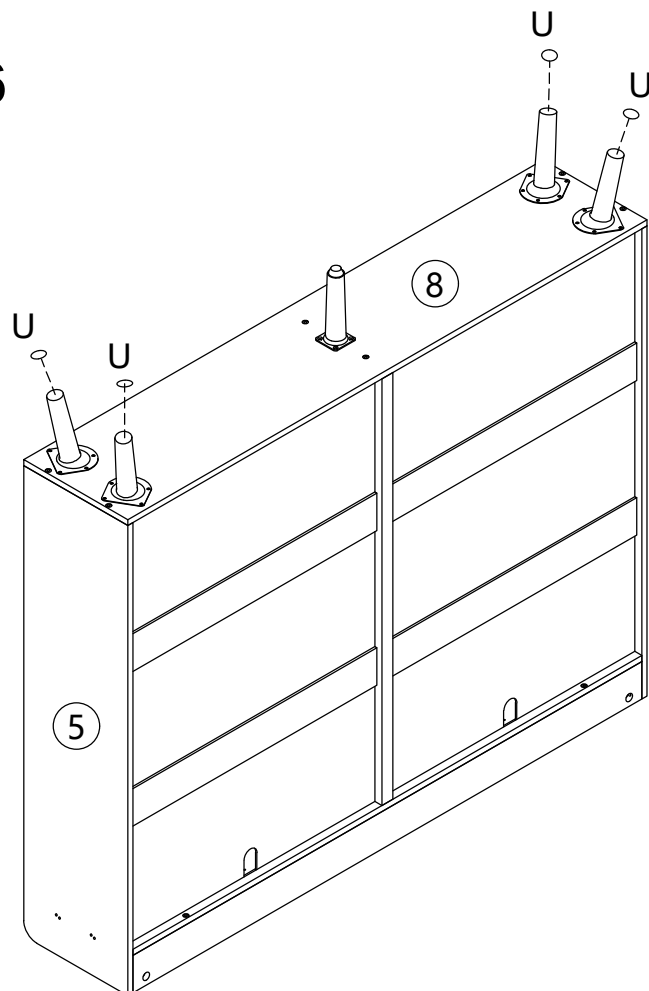

Hardware Needed


U




X4

Step 17


Installation step Details

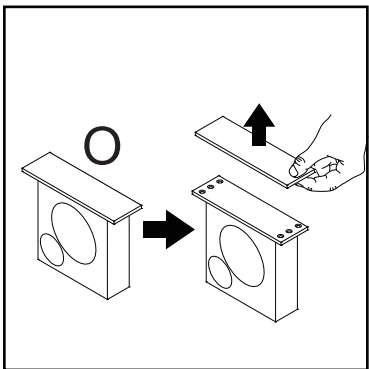


①

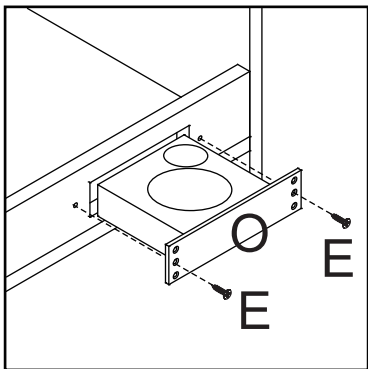


②

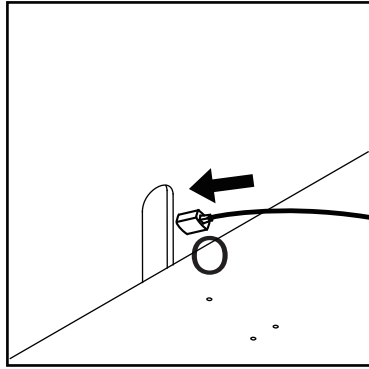


③

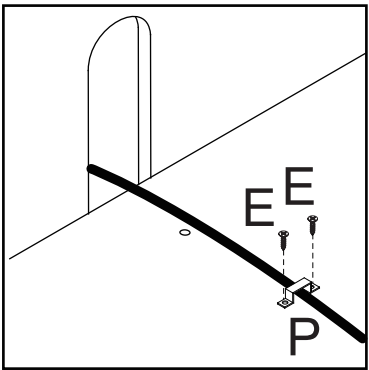


④

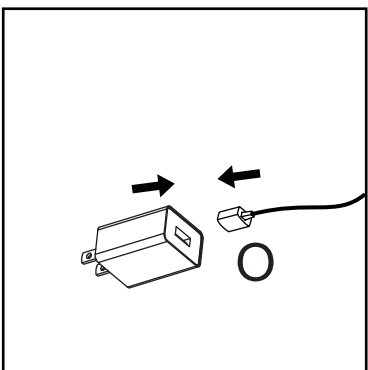

⑤

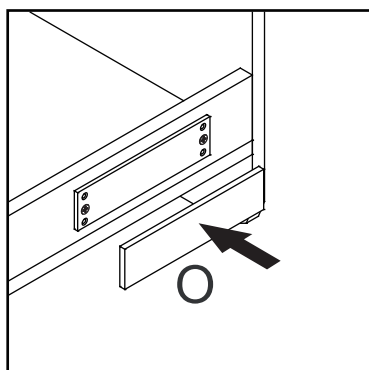

⑥

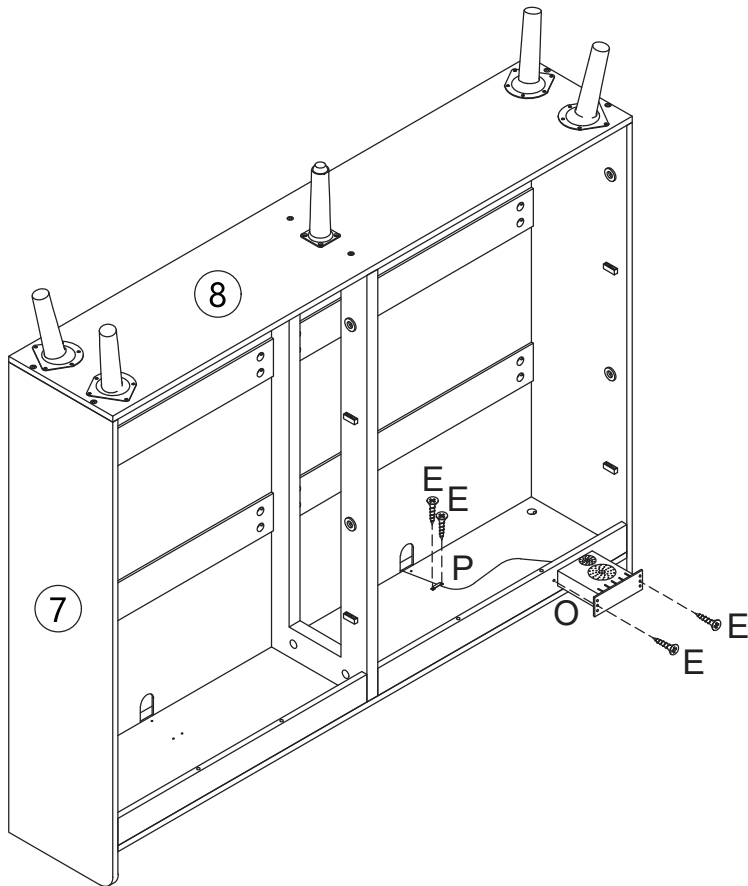

Hardware Needed		
E		X4
O		X1
P		X1


Step 18

Hardware Needed

R




X2

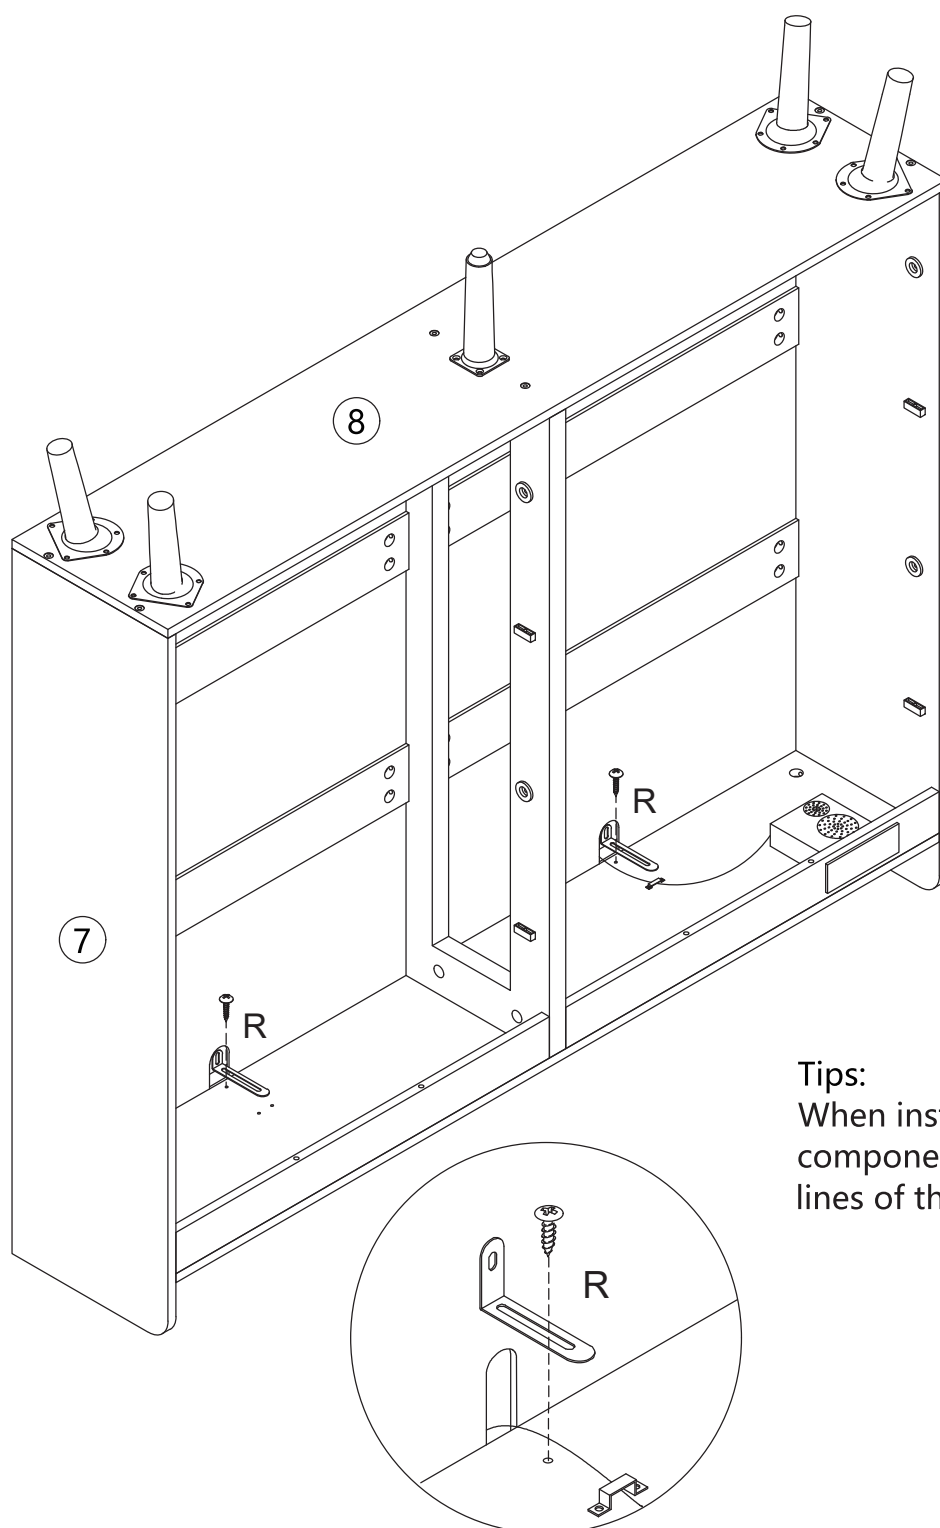


Tips:
When installing the R
component, avoid the
lines of the deodorizer.

Step 19

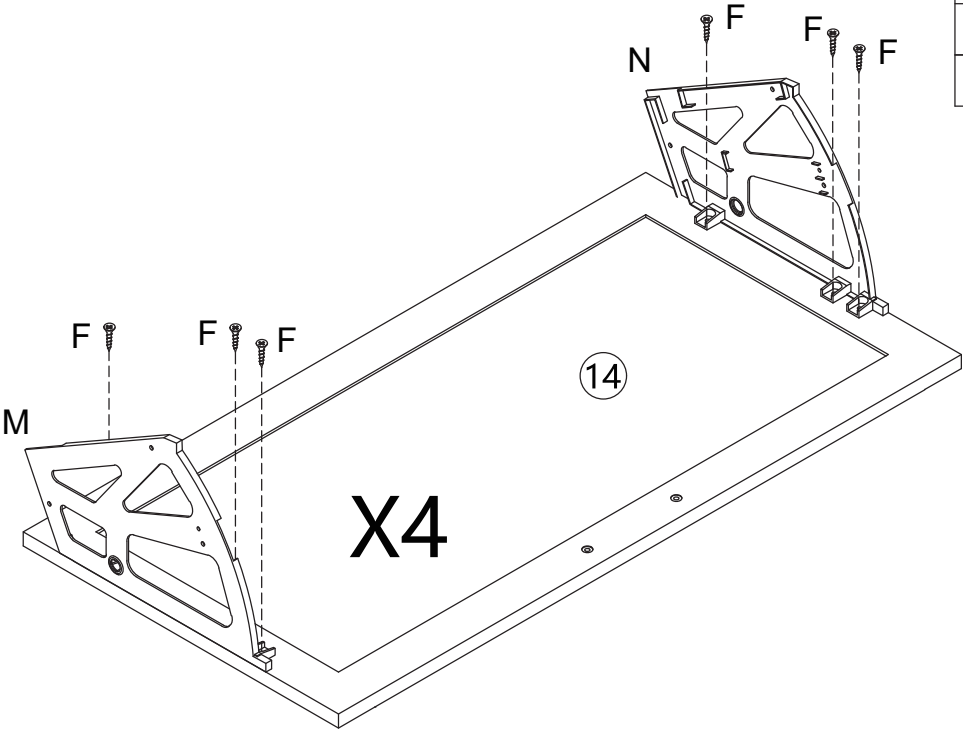

Hardware Needed		
F		X24
M		X4
N		X4


Step 20

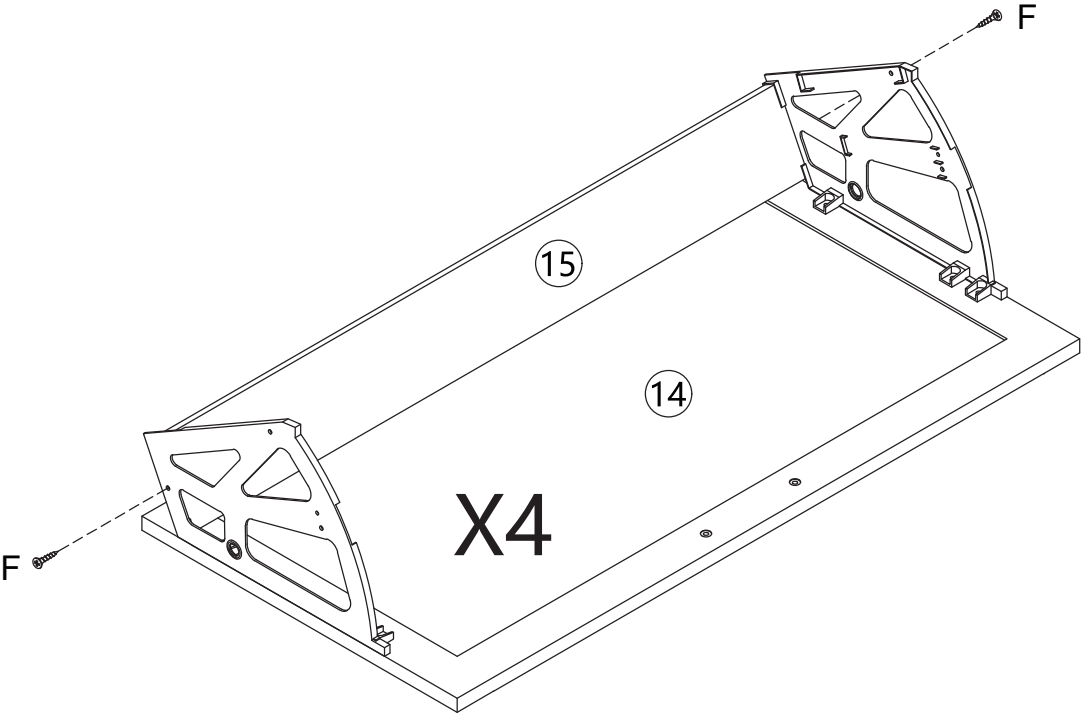

Hardware Needed		
F		X8

Step 21


Hardware Needed		
F		X8
K		X4
L		X8

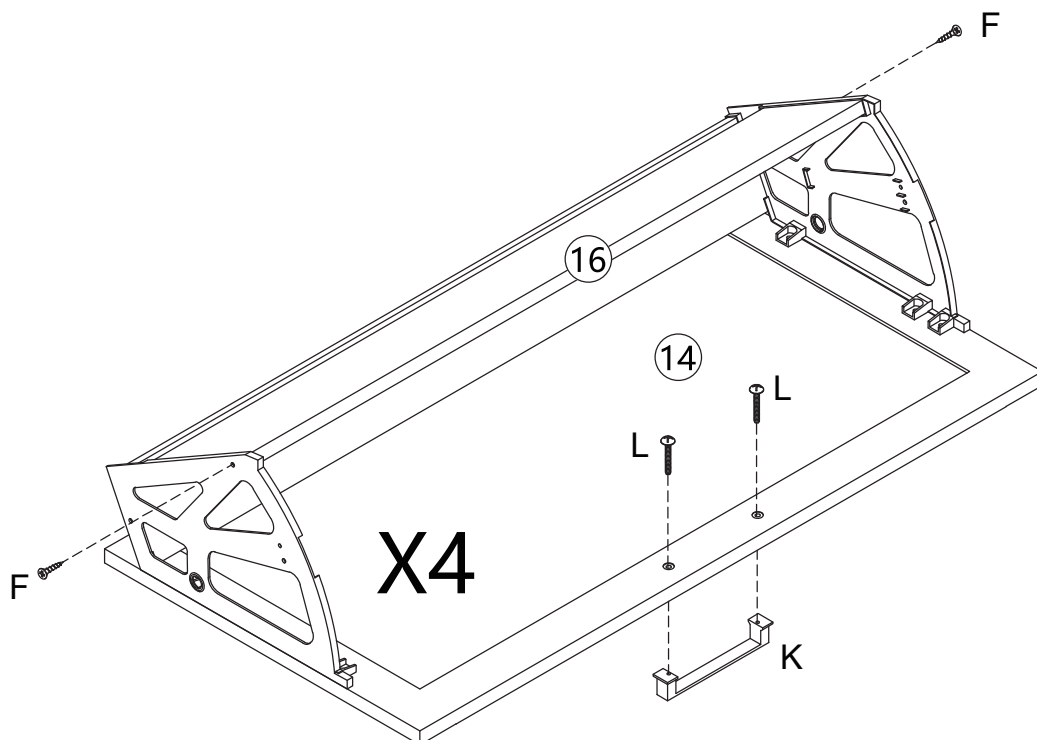



Step 22

Hardware Needed		
H		X8

Tips:
Two persons are
required to perform
this step

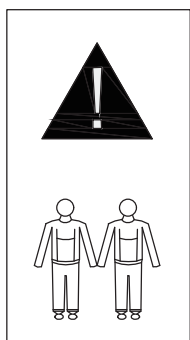


After aligning the holes,
first insert plastic cap H,
then secure it with screw H.

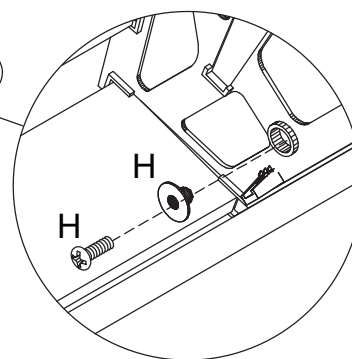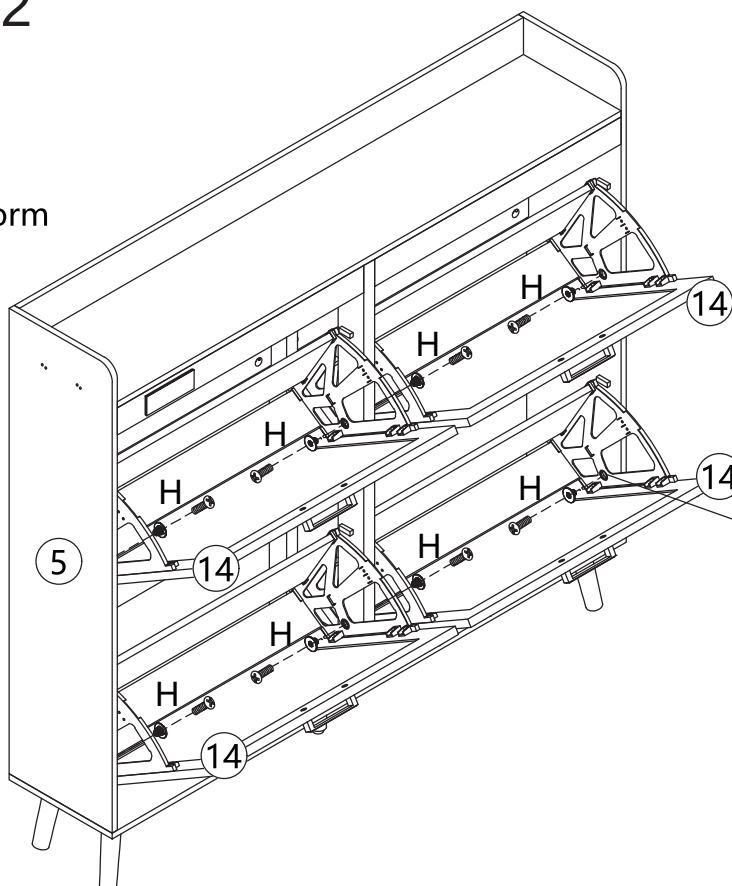

Step 23

Hardware Needed		
T		X24

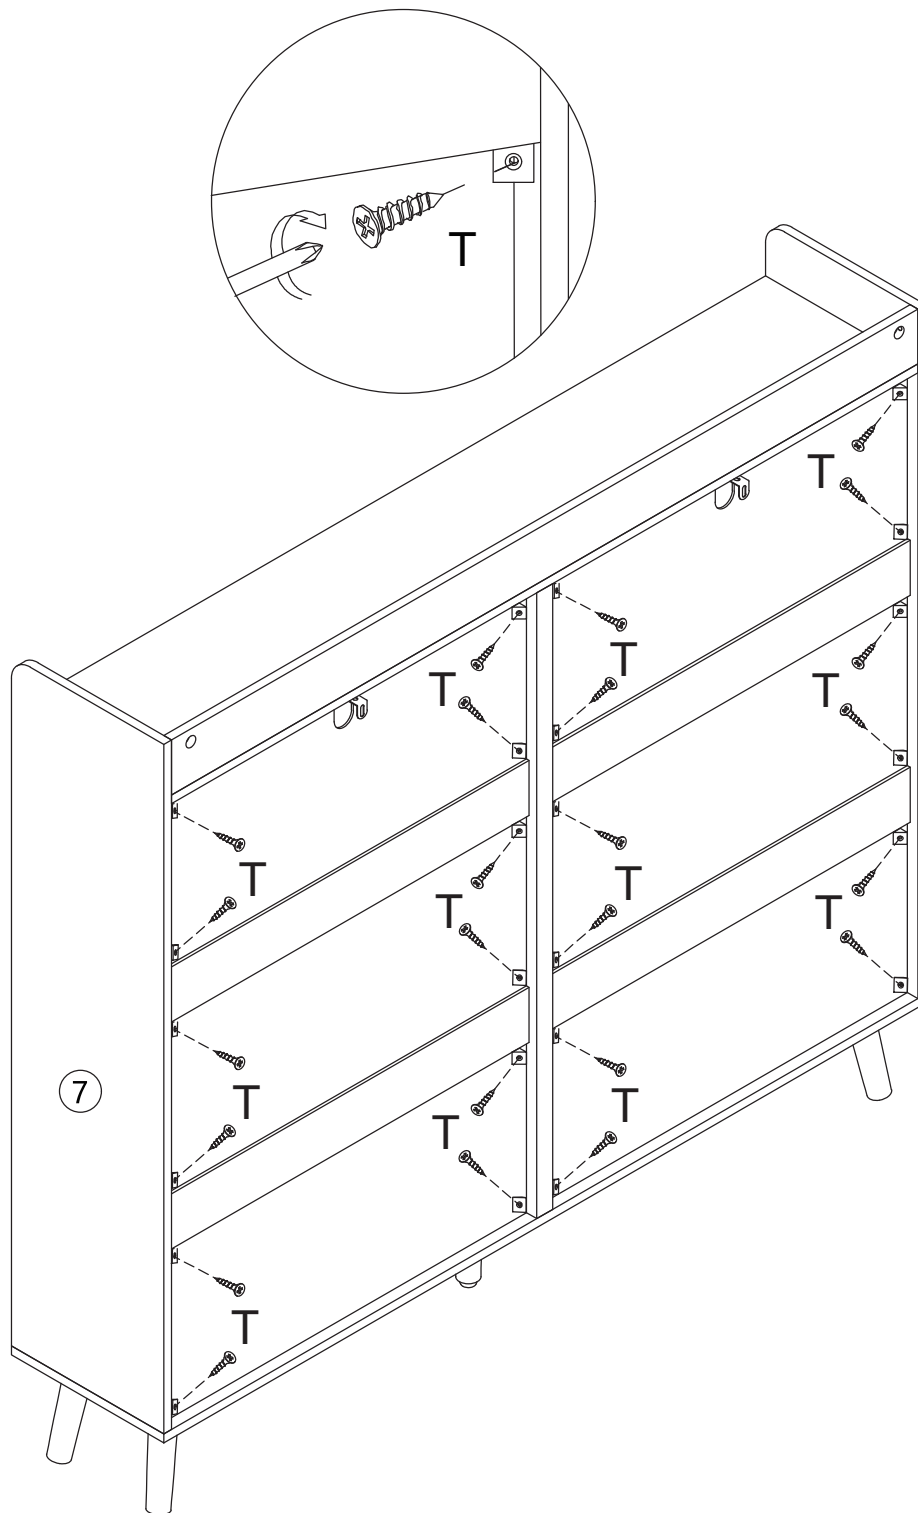

Step 24

Hardware Needed

S



X2

Tips:





Because it is a narrow cabinet, we strongly recommend that it be fixed to the wall with an anti-toppling device to prevent the shoe cabinet from tipping over. It will be very stable and safe when locked on the wall.

1. Mark the drill position on the wall with a pencil.

2. Drill holes on the marked position using a bit.

Gently insert the wall anchor (S) into the drilled hole with the help of a hammer

3. Fixed the cabinet to the wall with provided screws (S)

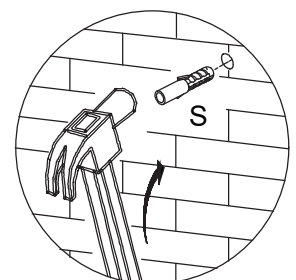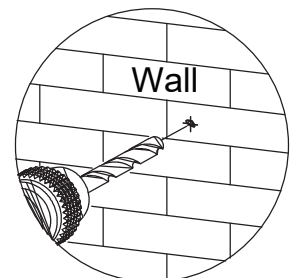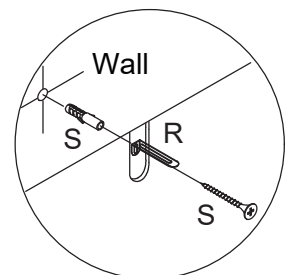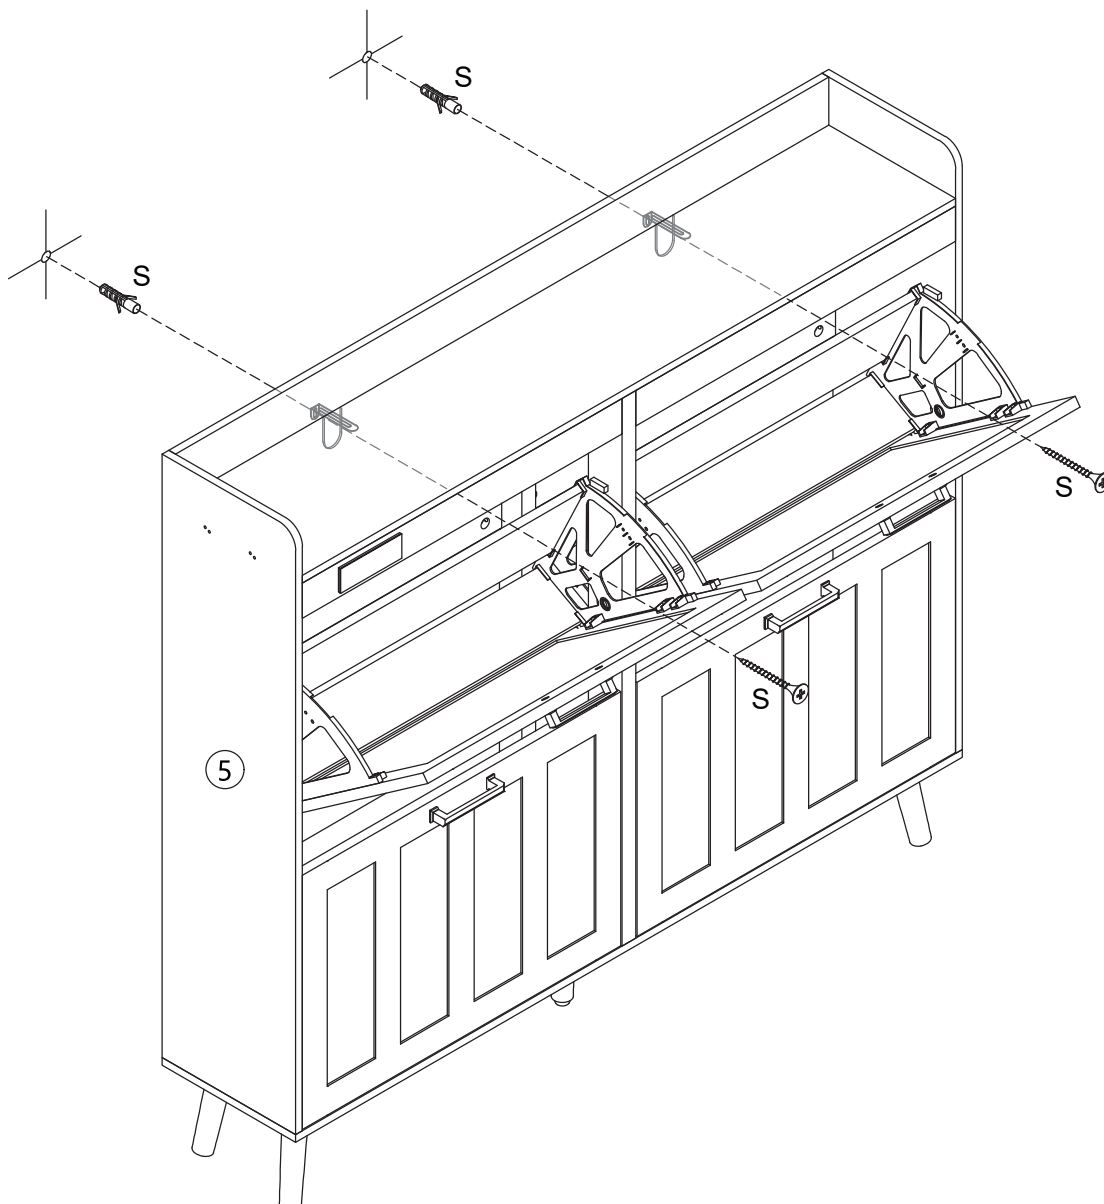

Step 25

Hardware Needed




F



X8

Tips:




Adjust board 16 to the right position according to your needs and then lock the F.

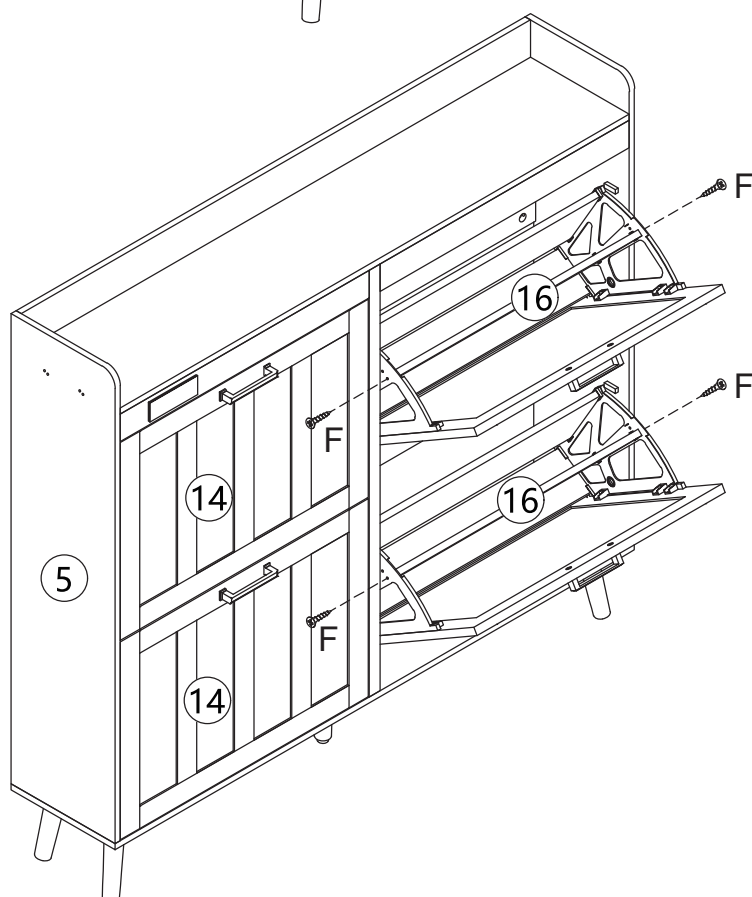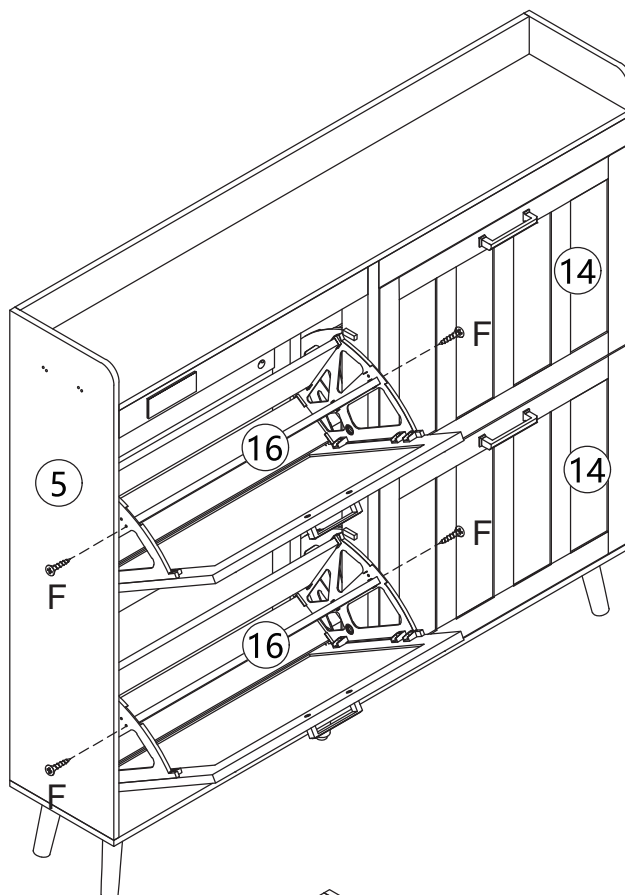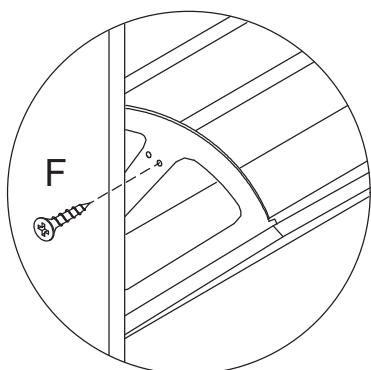

Step 26

Hardware Needed

E		X4
Q		X2

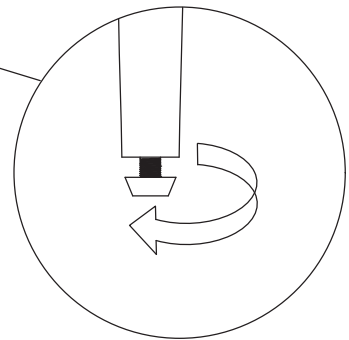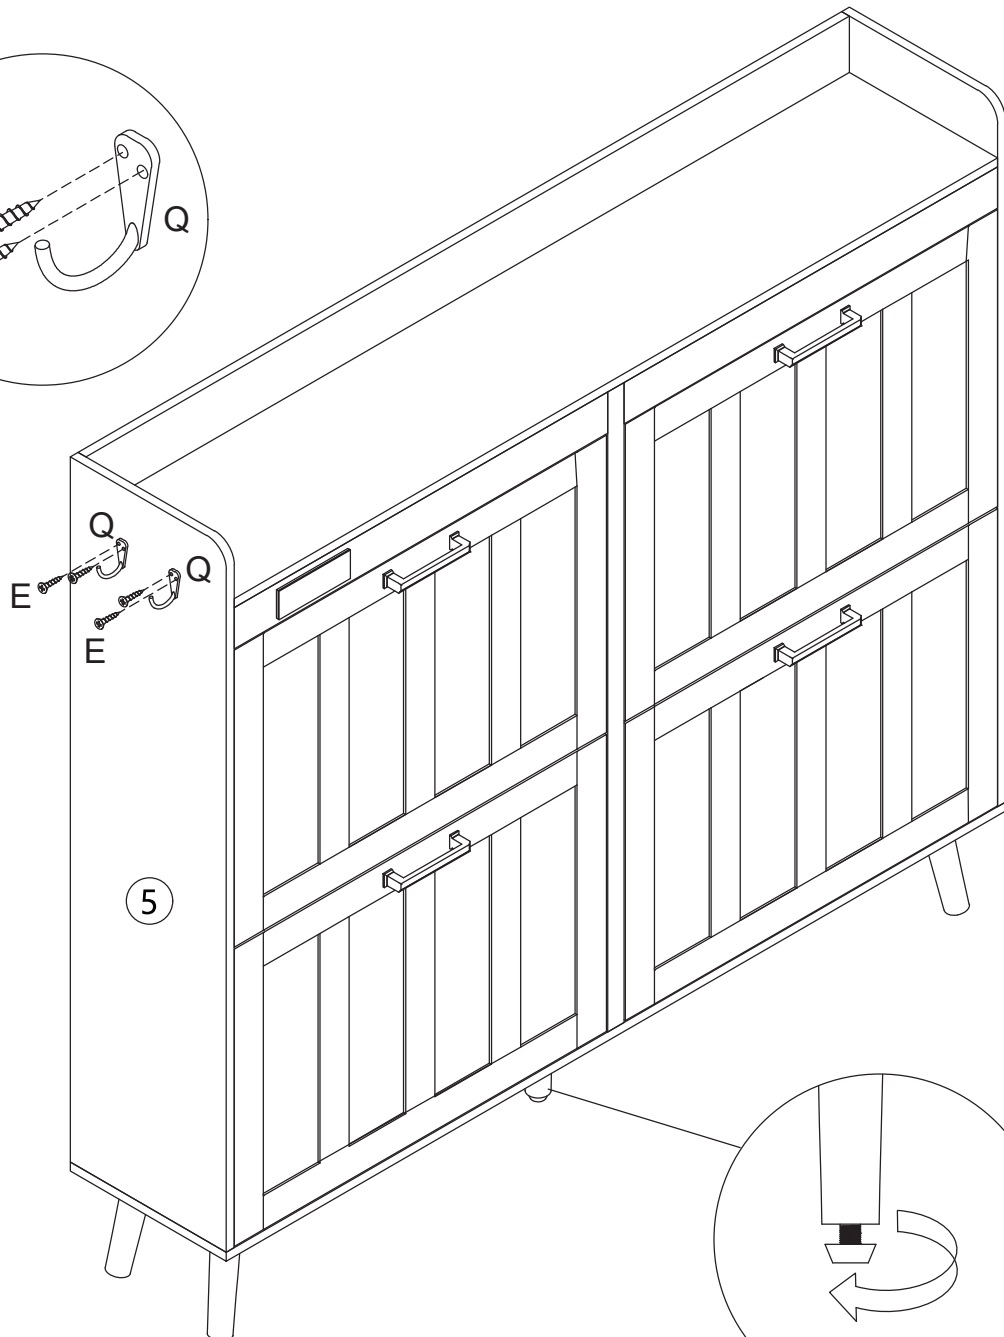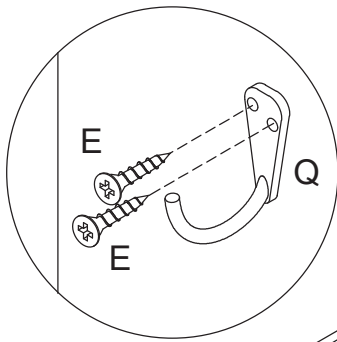

Tips:
You can adjust the height
according to your needs.