

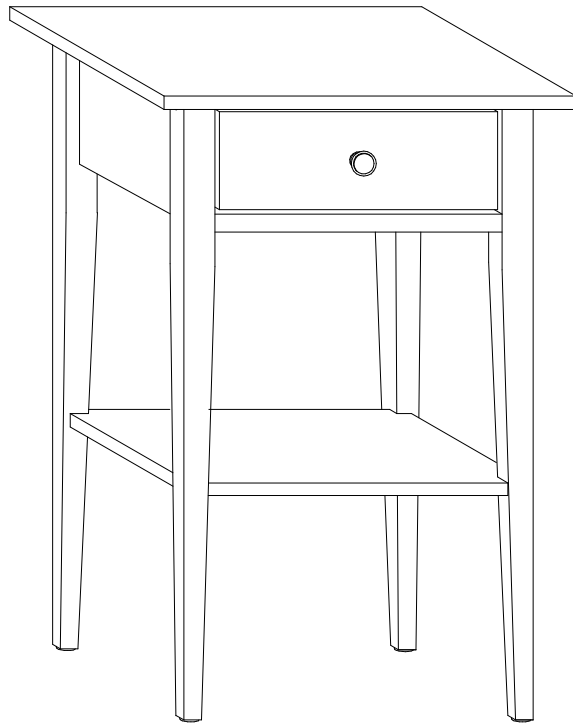
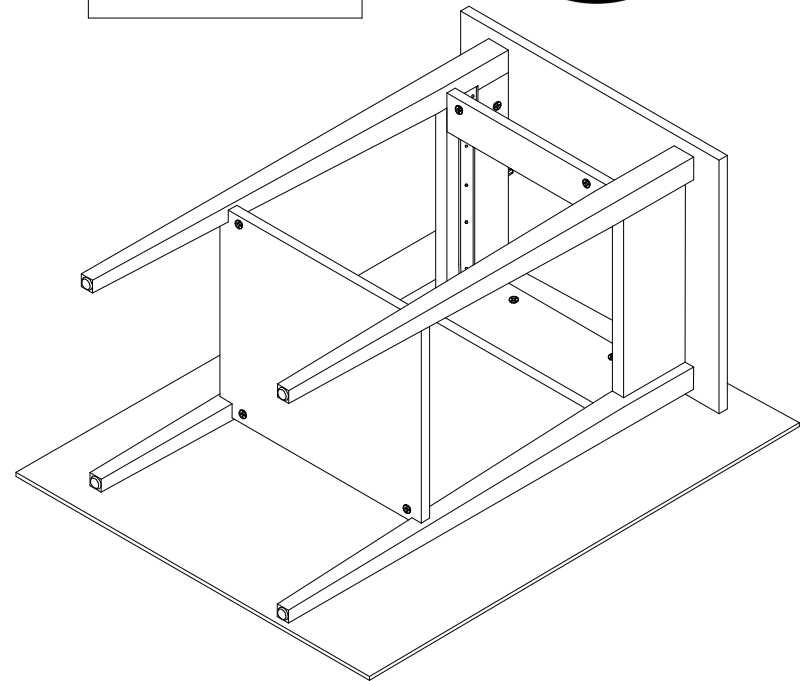



NIGHT STAND

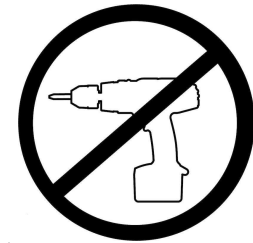

Required Tools : Screwdriver & Hammer

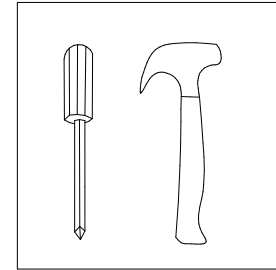


Please place on the carton while installing to prevent damage or scratches.

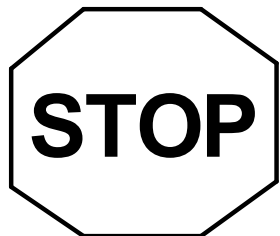

ASSEMBLY INSTRUCTION (PART & HARDWARE LIST)


NIGHT STAND

1.

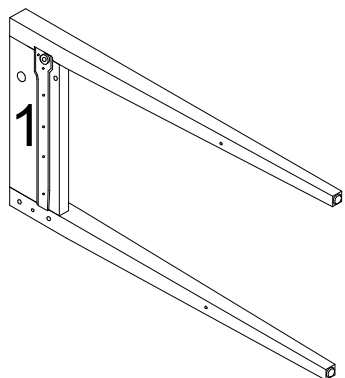

SIDE PANEL (R)

2.

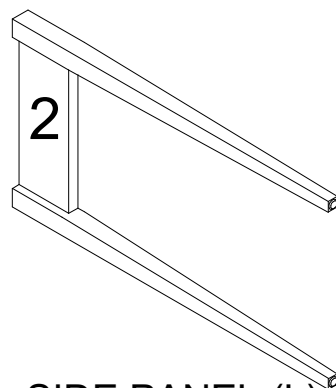

SIDE PANEL (L)

3.


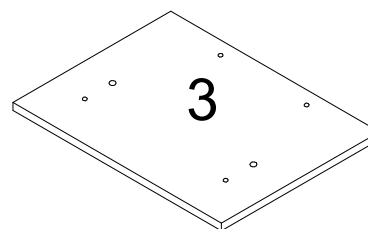



TABLE TOP

4.

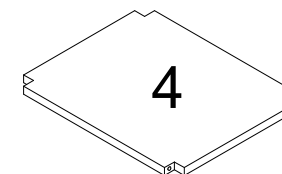


BOTTOM

5.



BACK PANEL

6.




FRONT PANEL

7.



DRAWER PANEL

8.




DRAWER SIDE
PANEL R

9




DRAWER SIDE
PANEL L

10.












DRAWER BACK PANEL



11.



DRAWER TOP


NO	HARDWARE DESCRIPTION	QTY
A.	Steel Handle 	1
B.	Handle Screw 	1
C.	Wood Dowel M6 X 30mm 	4
D.	JCBC Bolt M6 X 50mm 	2
E.	Wood Dowel M8 X 30mm 	8
F.	Allen Key 	1
G.	Cam Screw 	14
H.	Cam Lock 	14
I.	Barrel Nut M6 X 13mm 	2
*Screw Driver and Hammer Not Provided		

NIGHT STAND

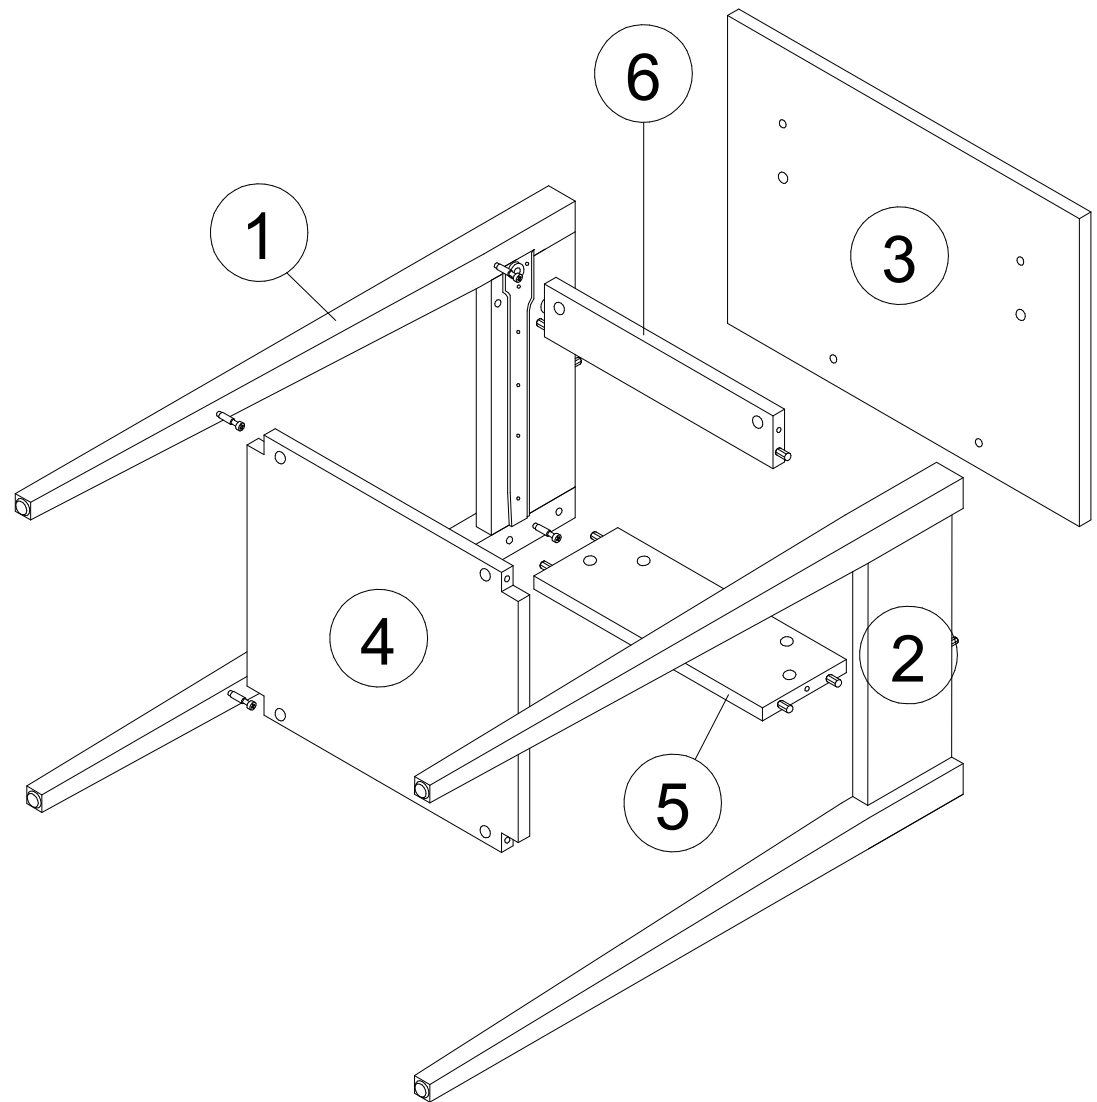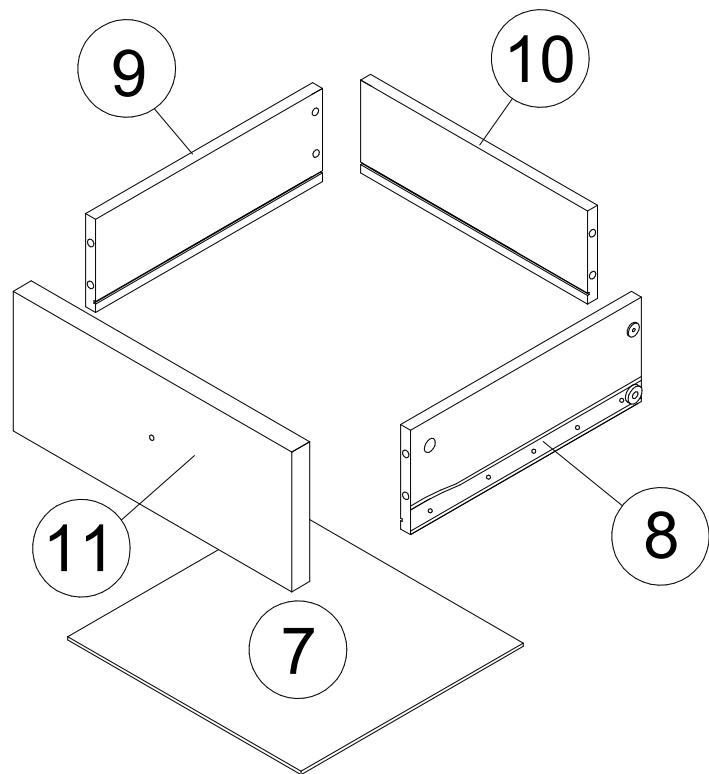


ASSEMBLY INSTRUCTION NIGHT STAND

STEP 1.

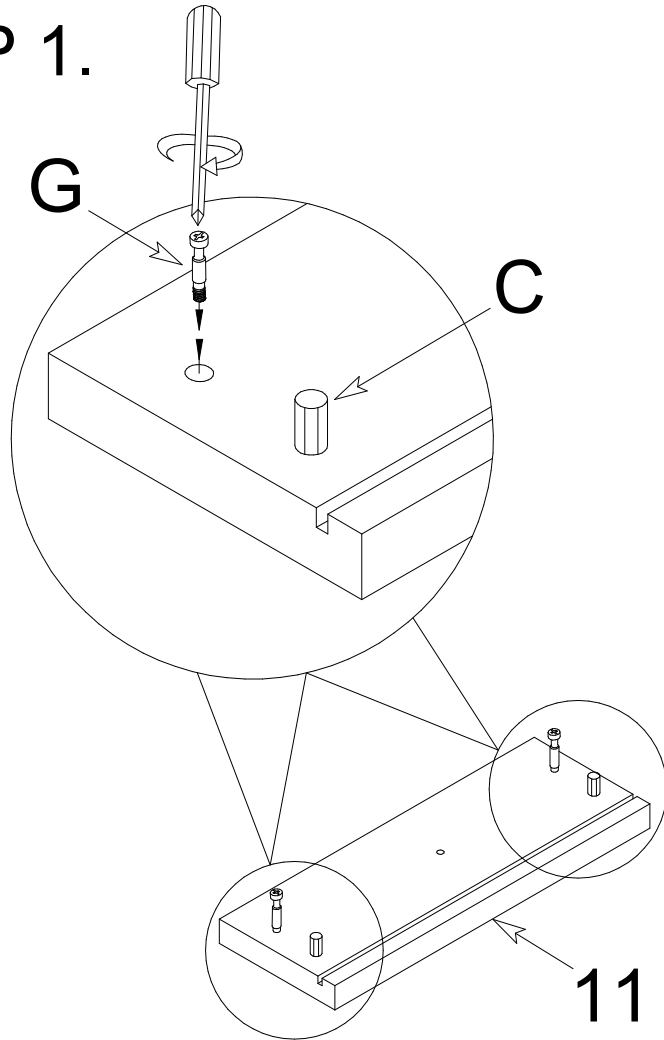

Insert wood dowel in predrilled hole.
Tighten fully minifix screw (Do not over tighten).


STEP 2.

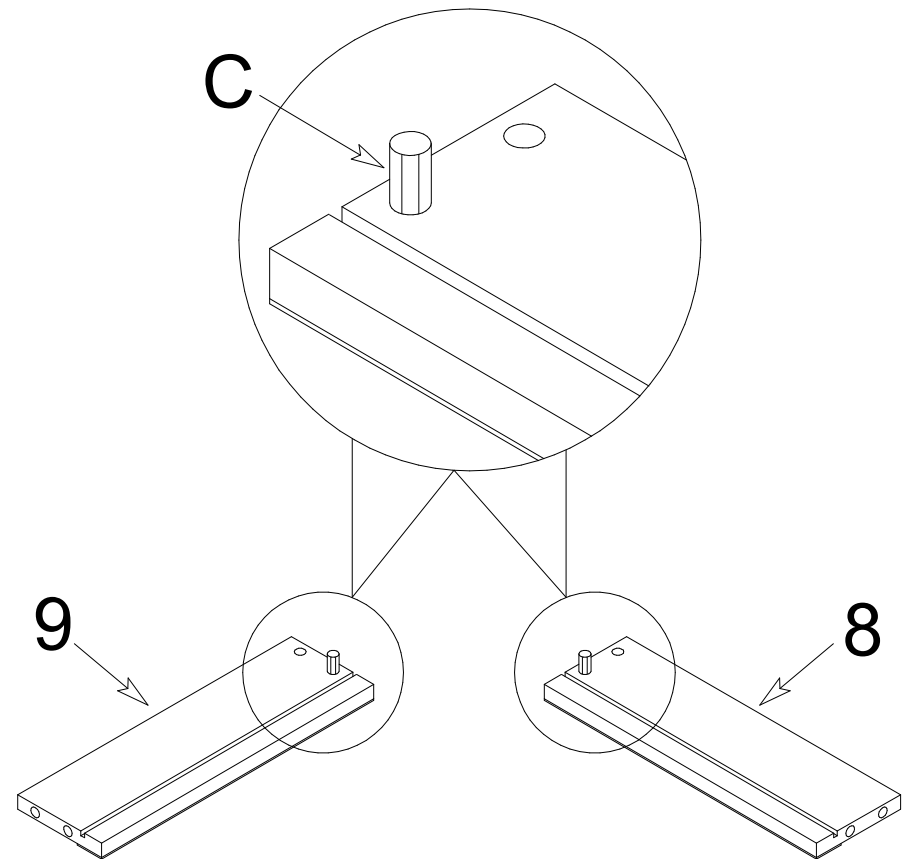

Insert wood dowel in predrilled hole.


ASSEMBLY INSTRUCTION NIGHT STAND

STEP 3.

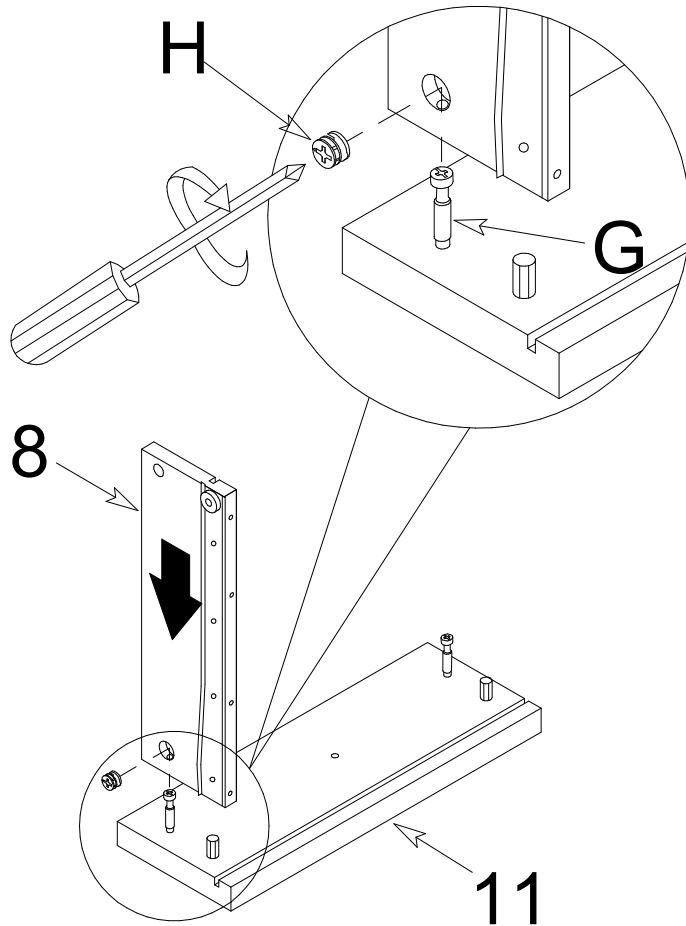


Proper orientation of Cam Lock (H).
1/2 turn to fully lock.

STEP 4.

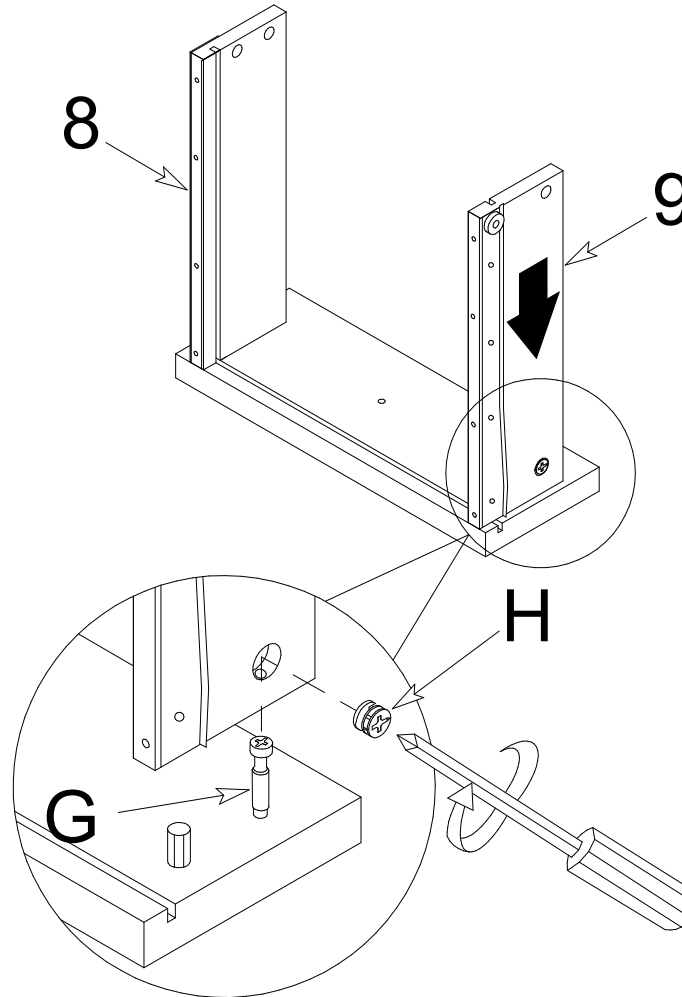


Proper orientation of Cam Lock (H).
1/2 turn to fully lock.

STEP 5.

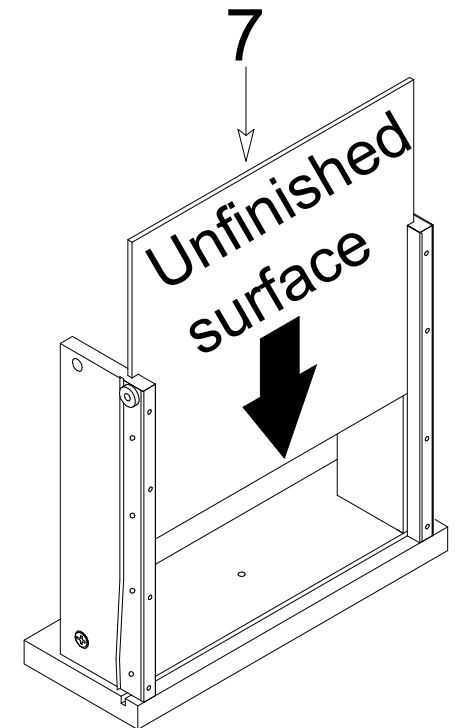


ASSEMBLY INSTRUCTION NIGHT STAND

STEP 6.

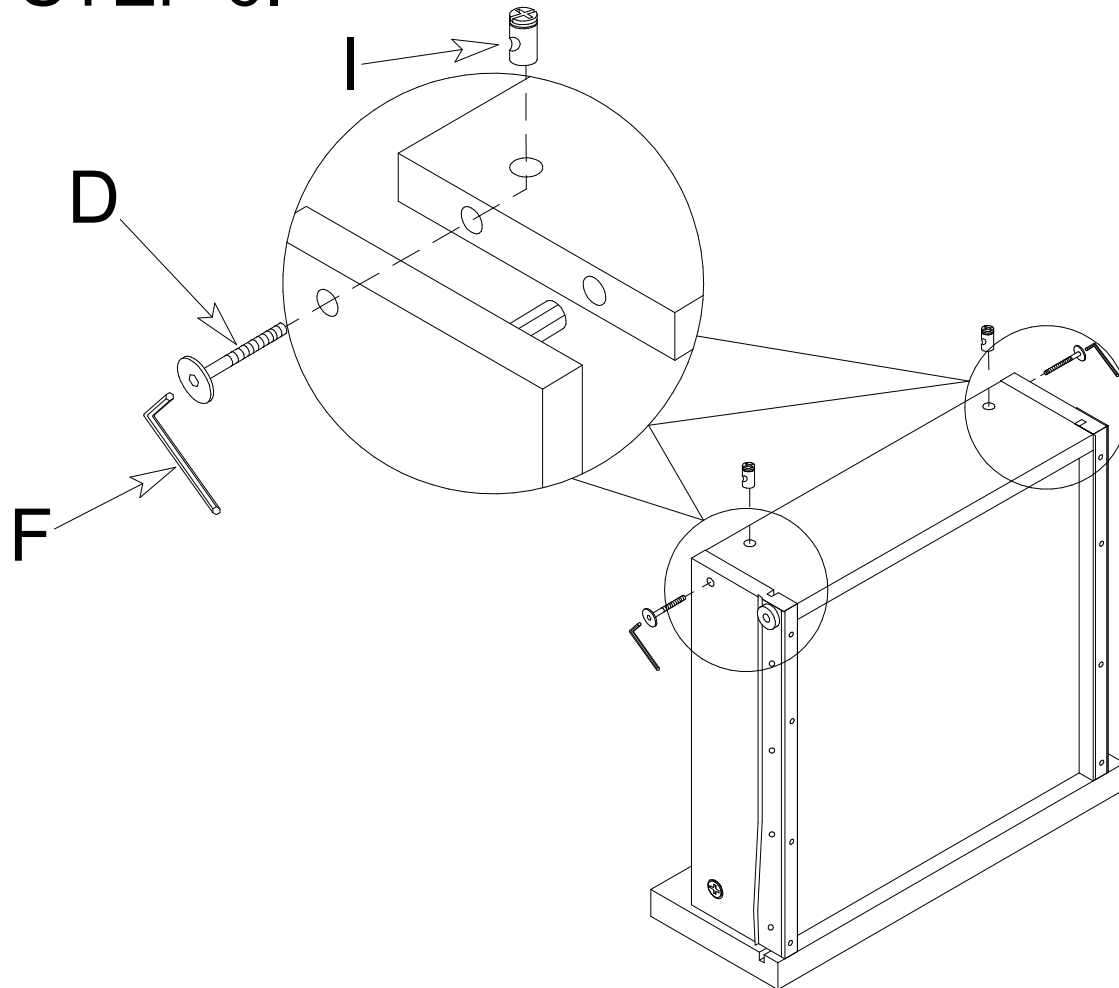

Insert wood dowel in predrilled hole.
Tighten fully. (Do not over tighten).

STEP 7.

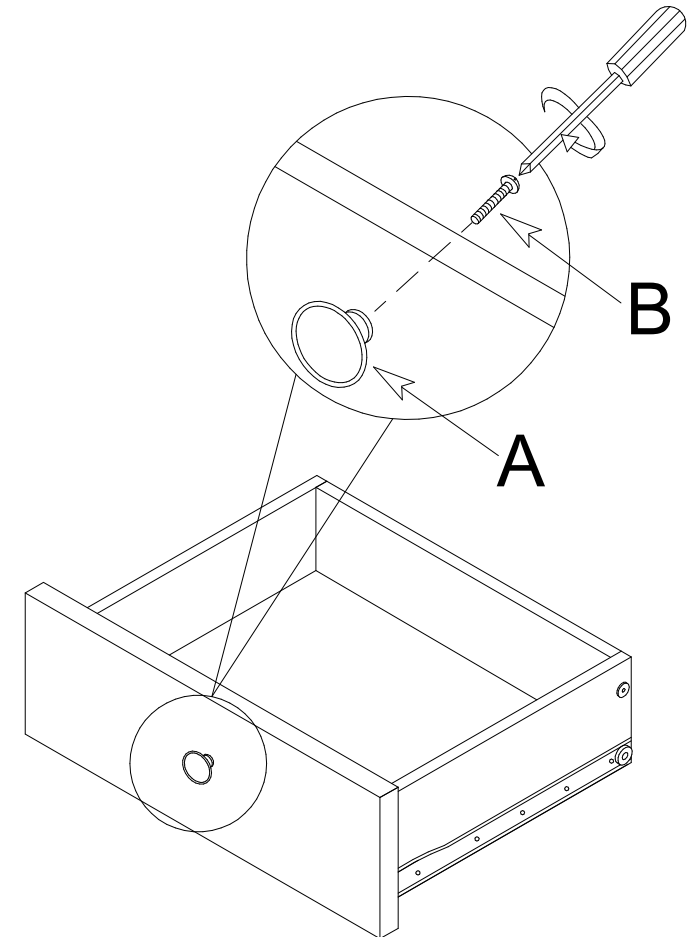


Attach handle using handle screw (B).

ASSEMBLY INSTRUCTION


NIGHT STAND

STEP 8.

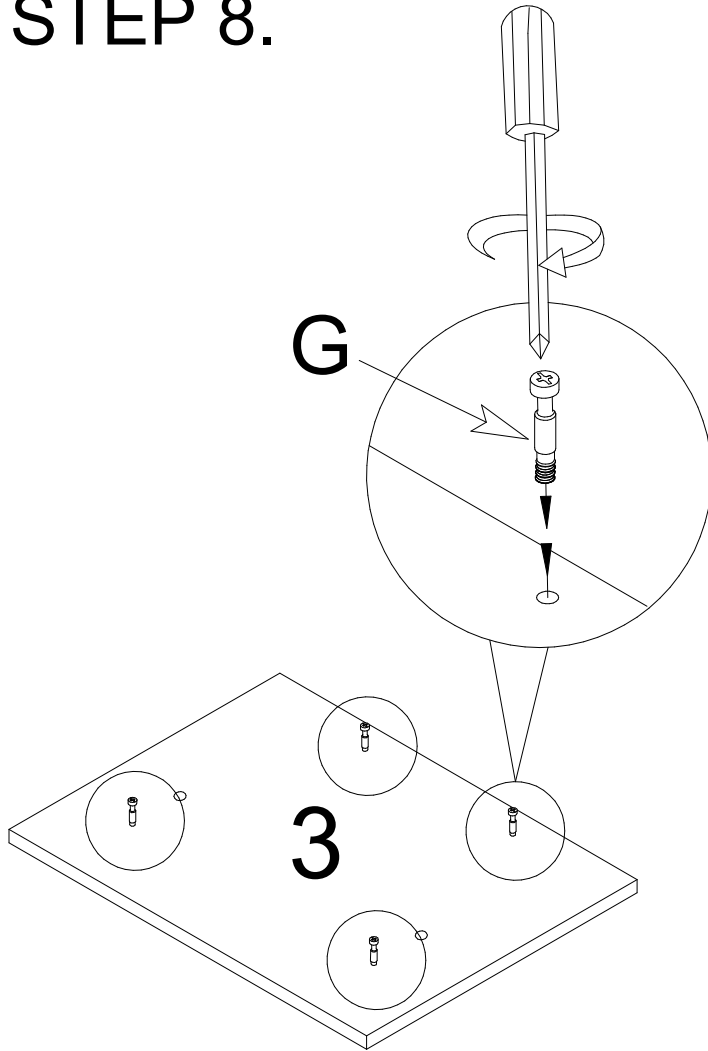


Tighten fully. (Do not over tighten).

STEP 9.

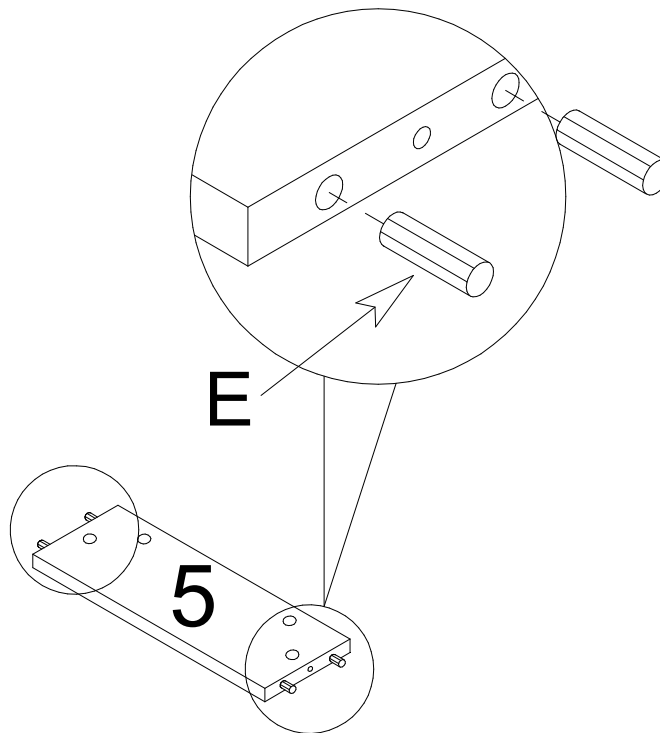

Insert wood dowel in predrilled hole.

STEP 10.

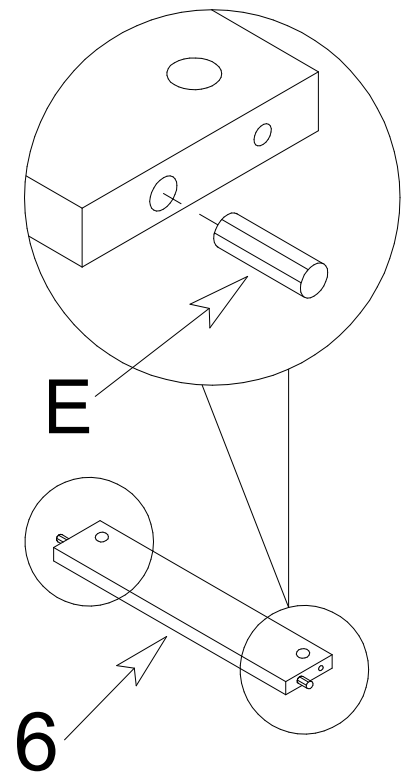


ASSEMBLY INSTRUCTION

NIGHT STAND

STEP 11.

Tighten fully.
(Do not over tighten).


Insert wood dowel
in predrilled hole.

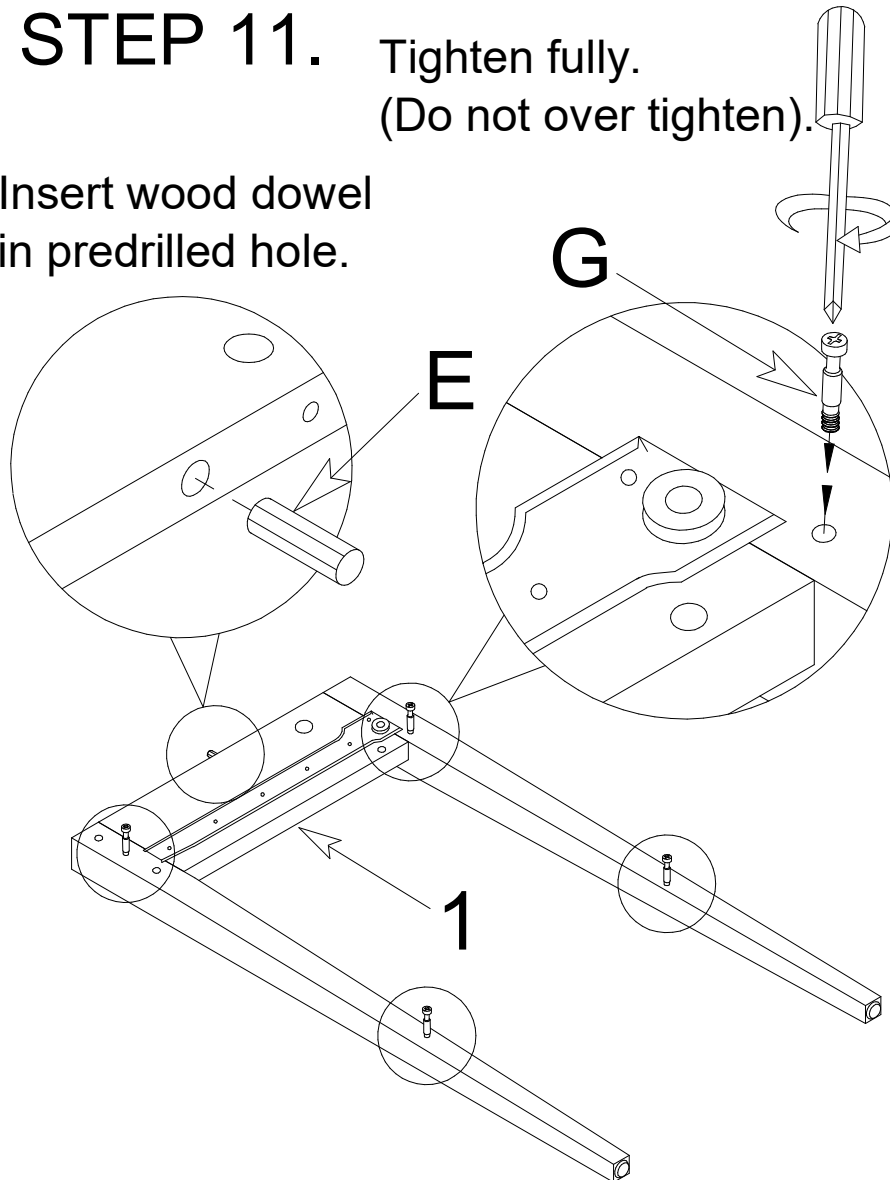

STEP 12.


Tighten fully.
(Do not over tighten).

Insert wood dowel
in predrilled hole.

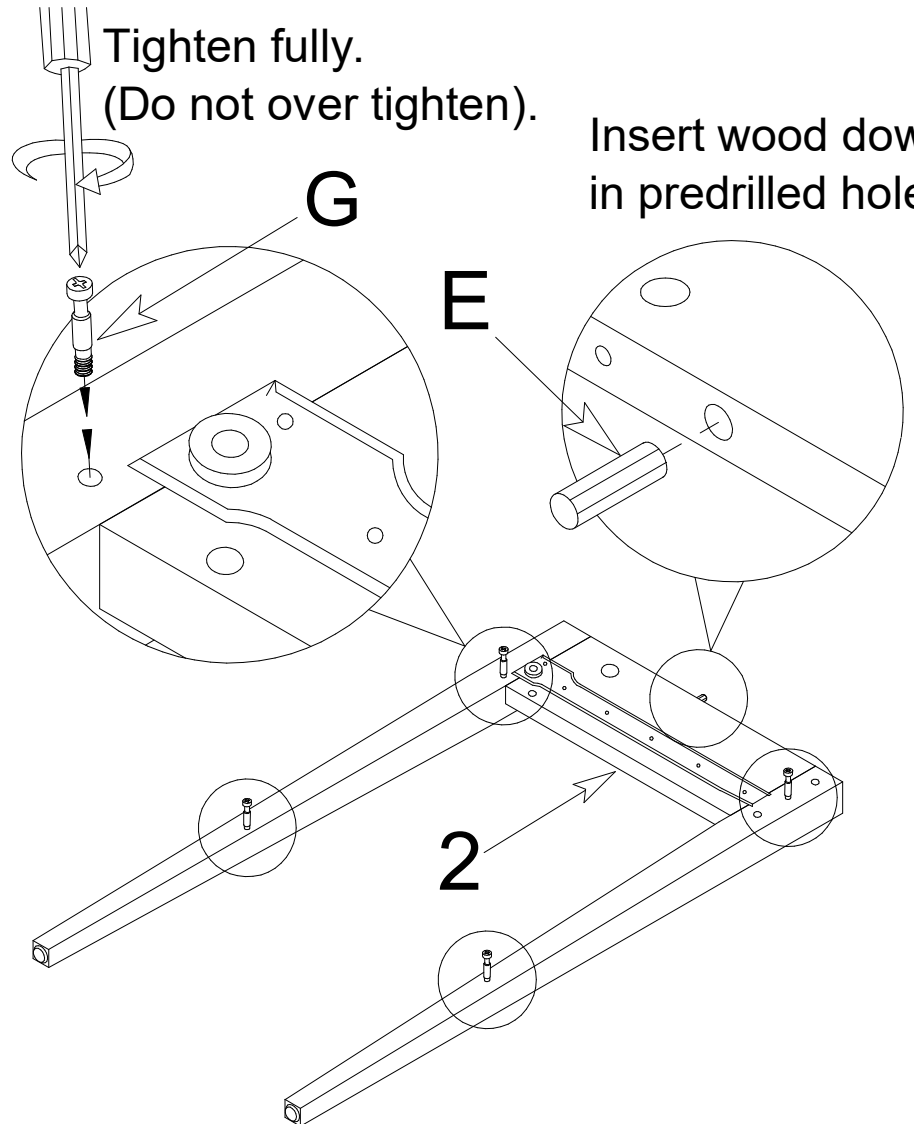


ASSEMBLY INSTRUCTION NIGHT STAND

STEP 13.

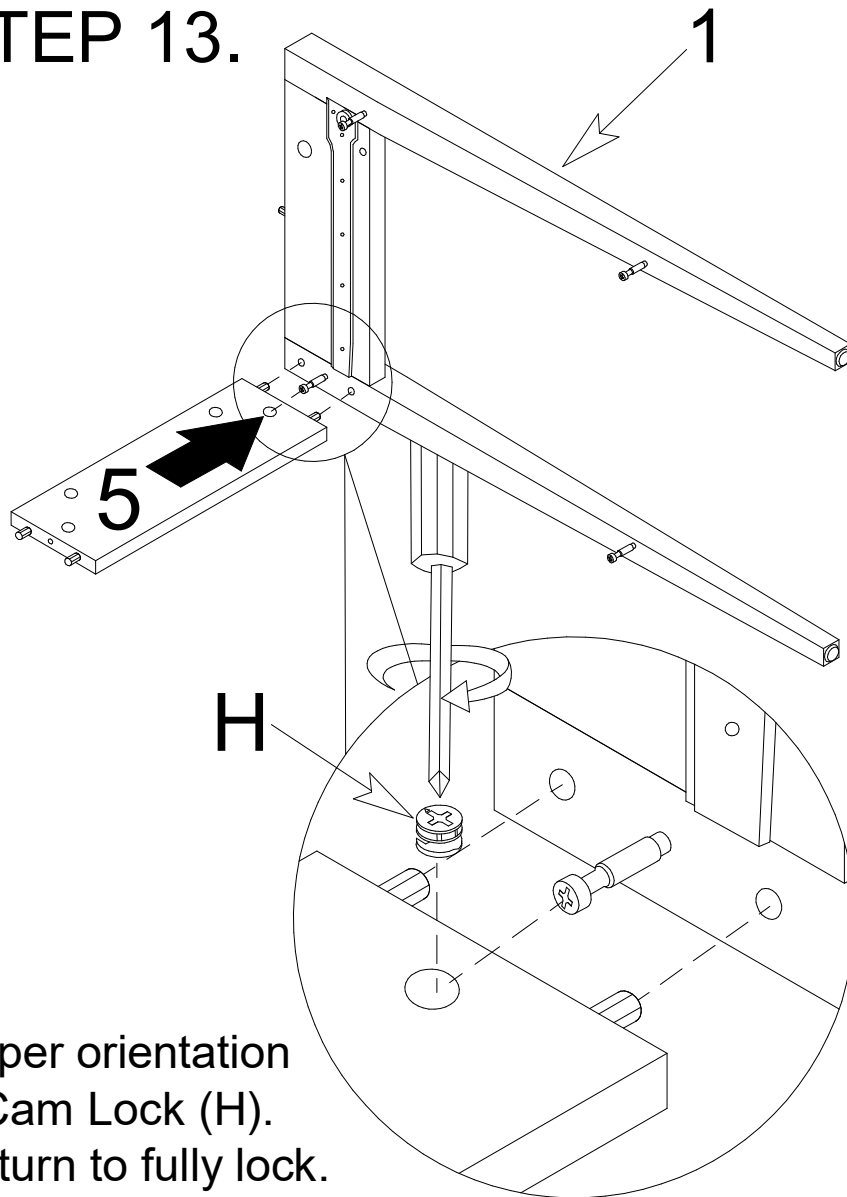


STEP 14.

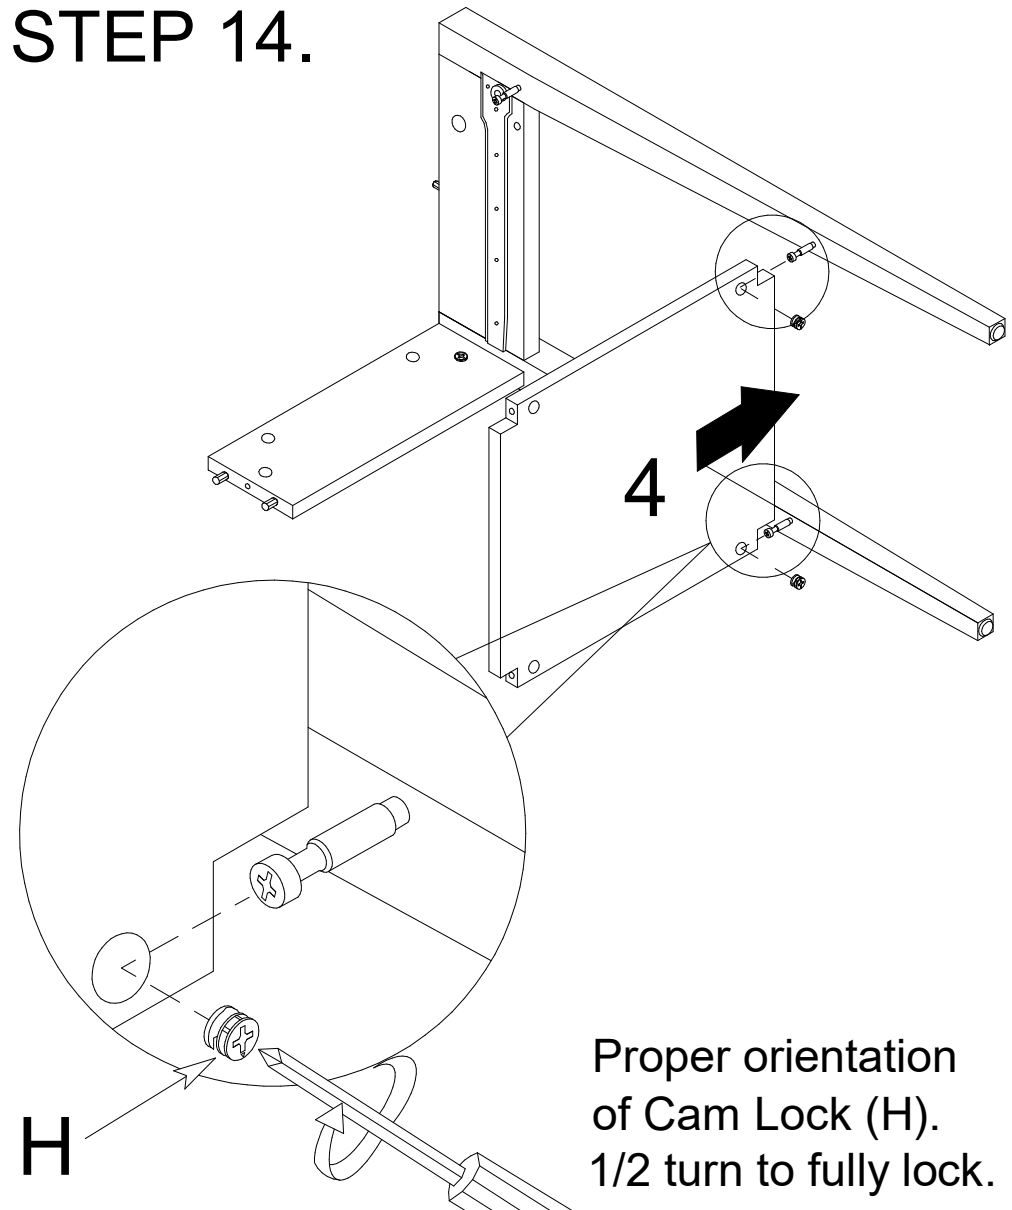

ASSEMBLY INSTRUCTION NIGHT STAND


STEP 15.

Proper orientation
of Cam Lock (H).
1/2 turn to fully
lock.

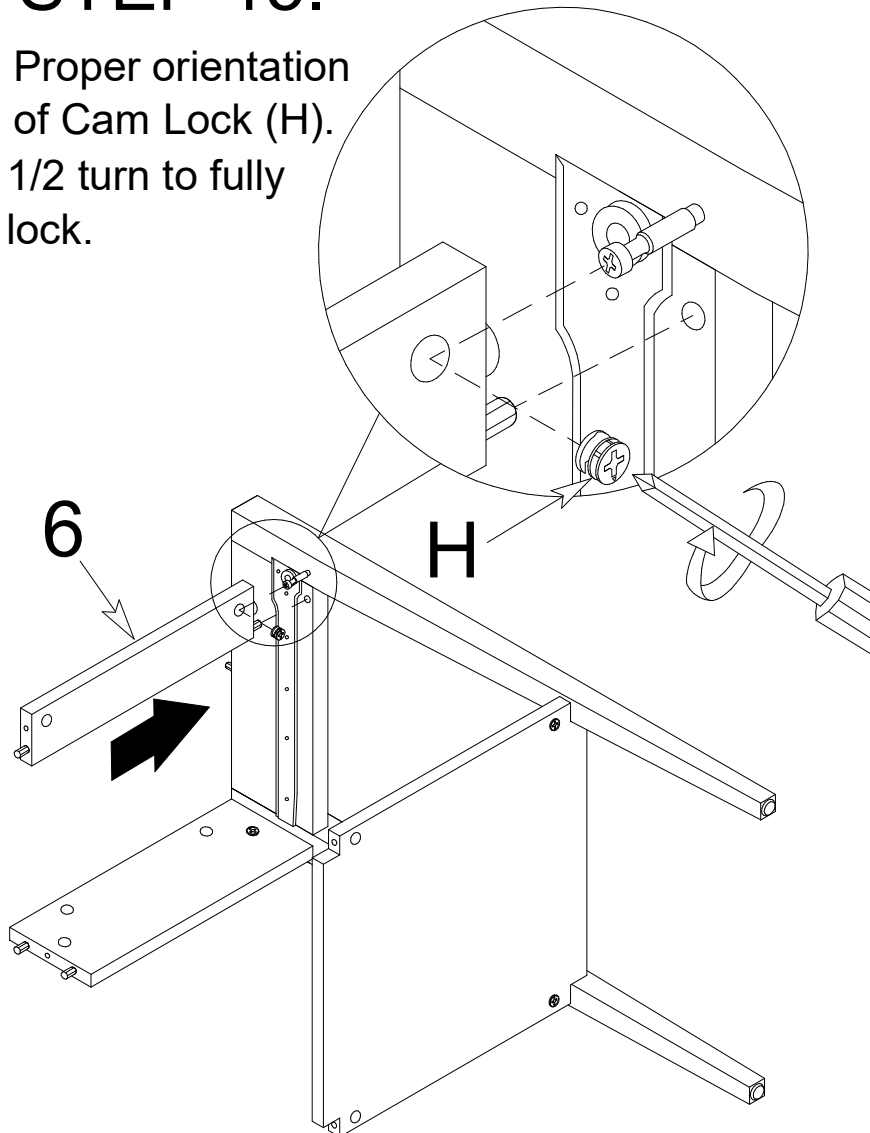

STEP 16.


Proper orientation
of Cam Lock (H).
1/2 turn to fully
lock.

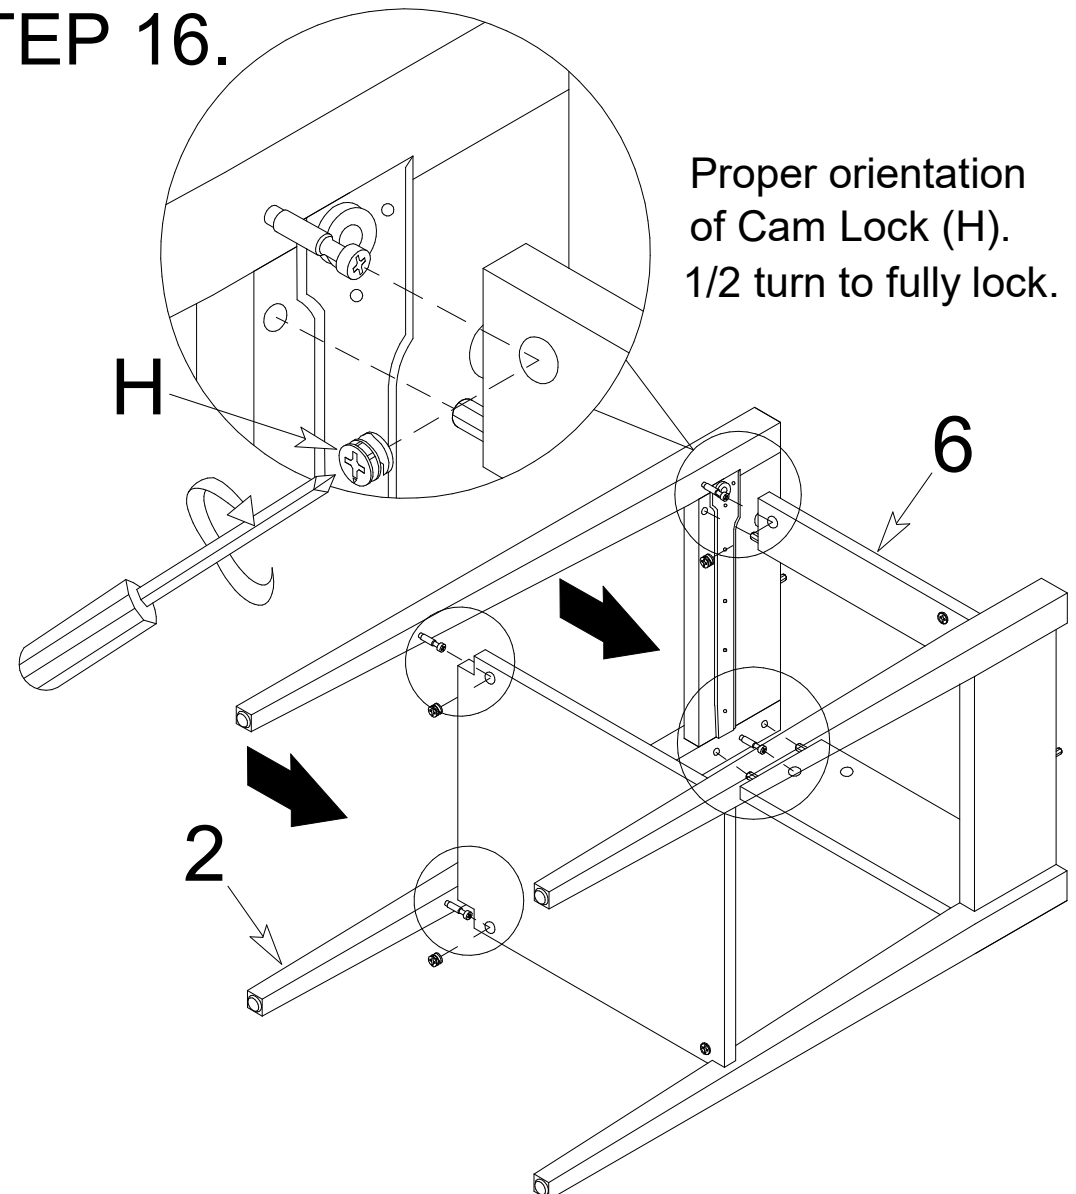


ASSEMBLY INSTRUCTION

NIGHT STAND

STEP 17.

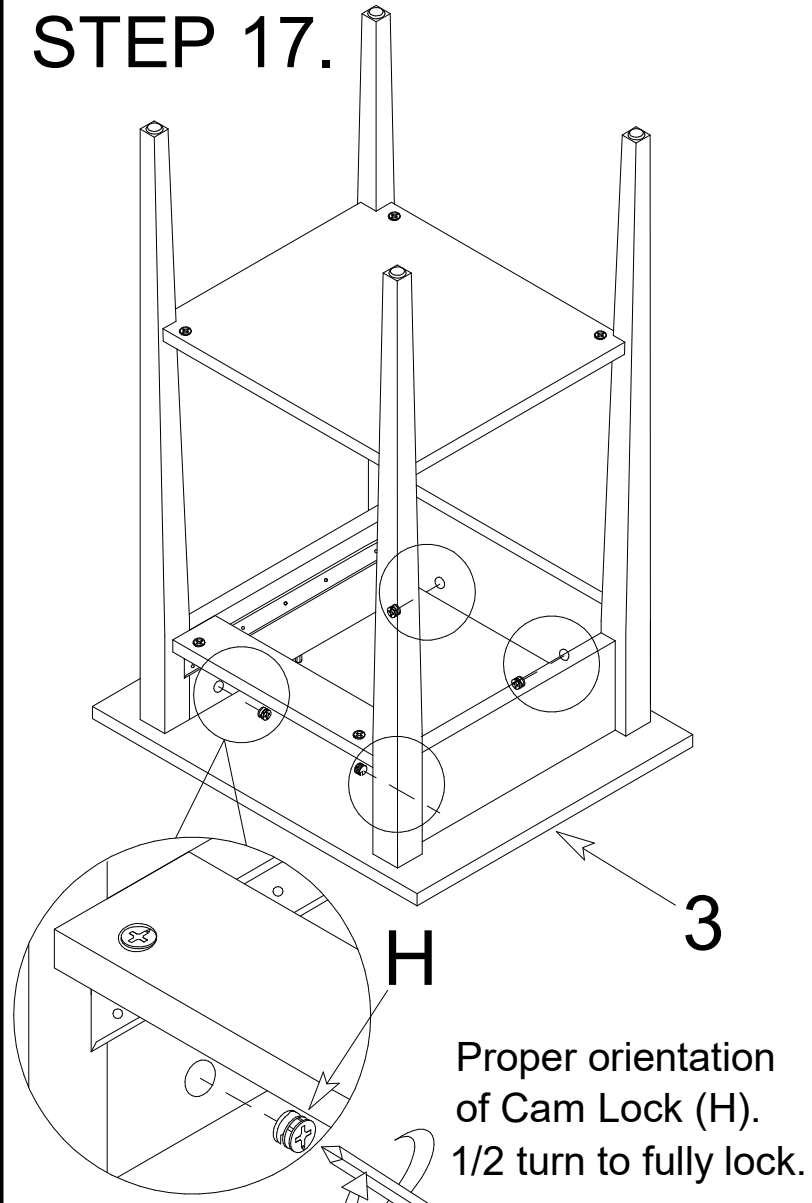

STEP 18.

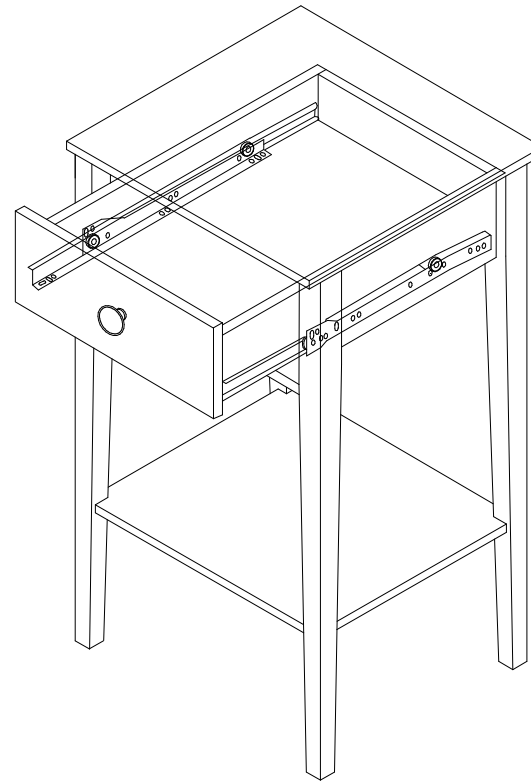

Put in drawer on the track.

