



ASSEMBLING AND INSTALLING THE PULL-OUT TRASHCAN

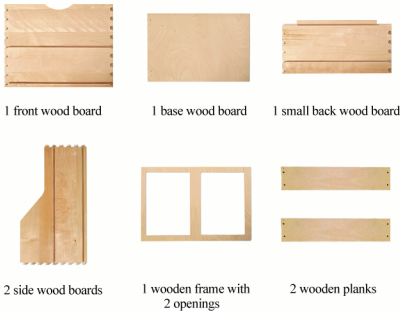

Components Included:

- 1 front wood board
- 2 side wood boards
- Mounting unit (to cabinet floor)
- 2 soft close metal rails
- 1 base wood board
- 1 wooden frame with 2 openings
- Screws (10 short and 8 long screws)
- 1 small back wood board
- 2 wooden planks

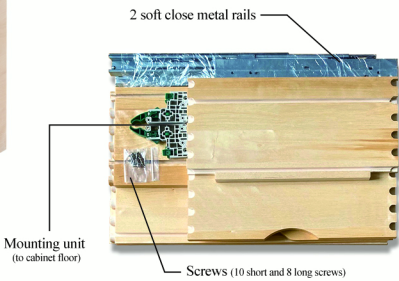


Installation Instructions:



Step 1:
Locate the front wood board and 1 side wood board. Ensure that the grooves match each other on both boards.



Step 2:
Connect that front wood board to the 1 side wood board. Glue is not required. (See photo)

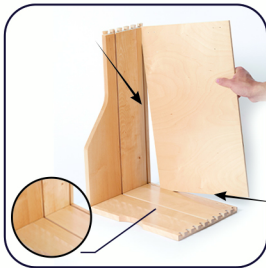

Step 3:
Locate the base wood board. Ensure that base wood grooves match both the front and side wood boards.



Step 4:
Connect that base wood board to both the front and side wood boards. (See photo)



Step 5:
Install the wooden frame with 2 openings into the upper grooves.



Step 6:
Locate the small back wood board. ensure that the grooves of the small back wood board match the grooves of the currently installed items.




Step 7:
Connect that small back wood by aligning the grooves. Glue is not required. (See photo)




Step 8:
Locate the other side wood board.




Step 9:
Connect the other side wood board to the currently installed items. Glue is not required. (See photo)

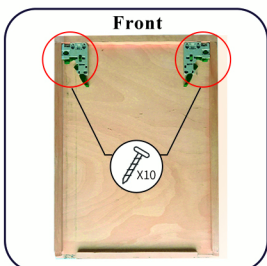

Step 10:
Locate the provided 10 short screws and fasten them to the base wood board near the "front" part of the trash can box. Fasten 5 short screws to each of the mounting unit of the base wood board. (See photo)

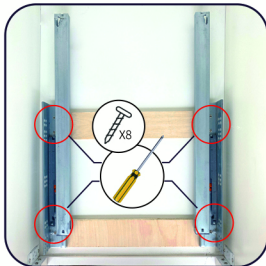

Step 11:
First, place 2 wooden planks onto your cabinet floor. Ensure that the planks are placed near the front of the cabinet. Then, place 2 metal rails on top of the 2 wooden planks (See photo). Locate the provided 8 long screws and fasten the rails and the planks to your cabinet floor.

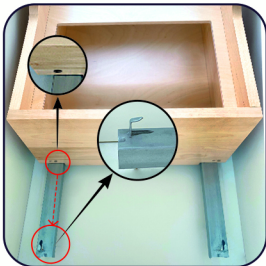

Step 12:
Slide the trash box can all the way to the back of your cabinet. Ensure that the holes located on the back of the trashcan align with the hook. Slide out the trash can box and complete the installation.