




Assembly Instruction

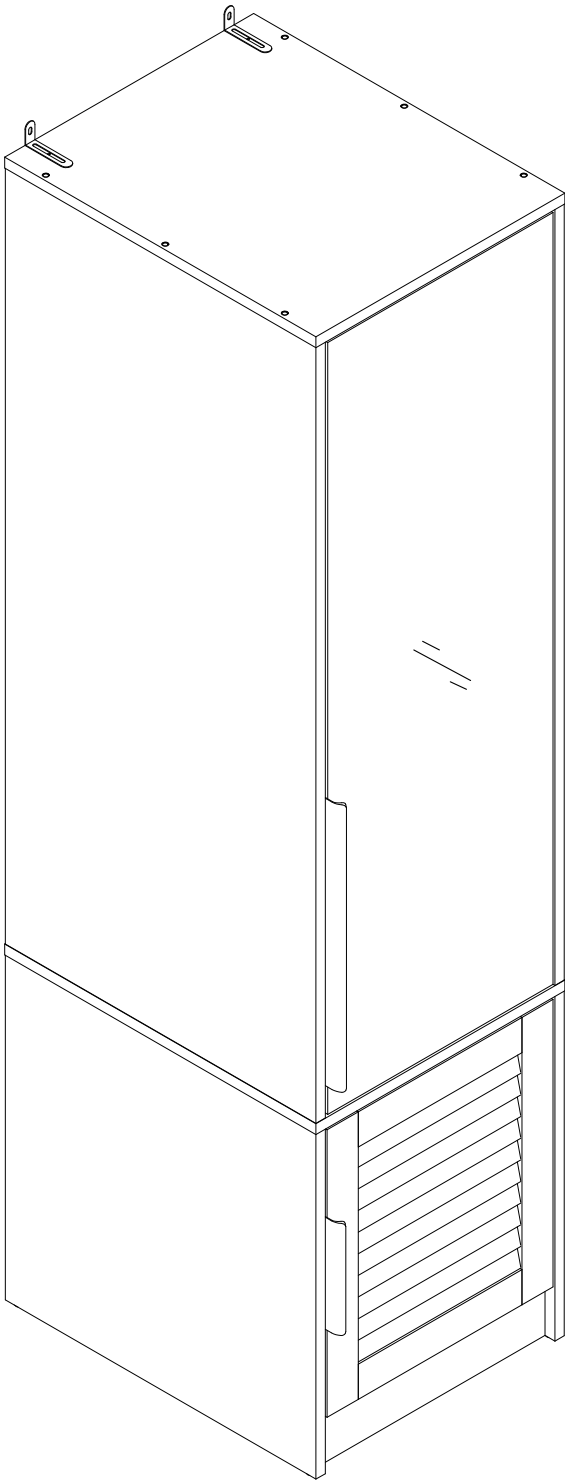


HINGE INSTRUCTIONS

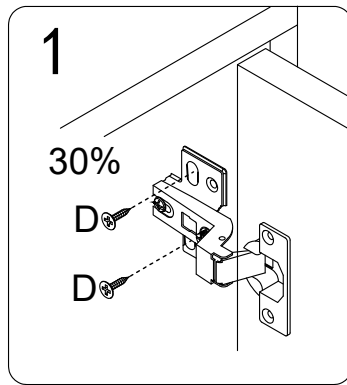


Tighten the screws only 30% as long as the door can be secured.

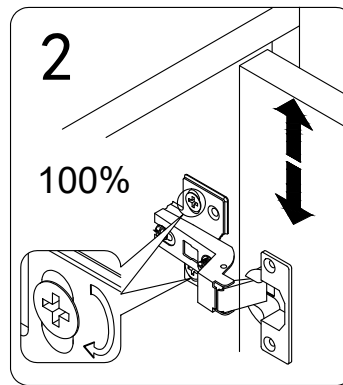


Move the door up and down until it is centred, then tighten the screw 100%.

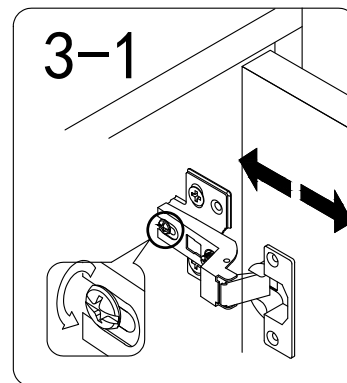


Loosen the screw **anti-clockwise**, and move the door **in or out** until it's aligned to side board.

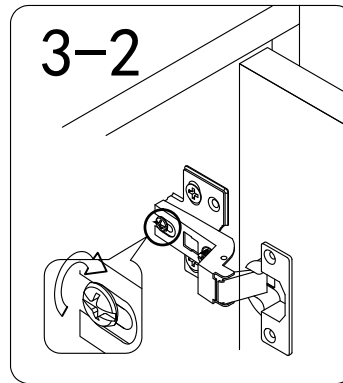


Tighten the screw **clockwise** once the door is **aligned**.

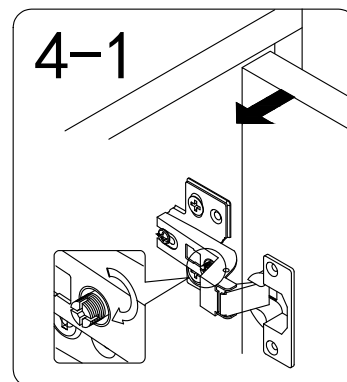

To adjust the gap between the door and the side board to be **larger**, turn the screw **clockwise**.

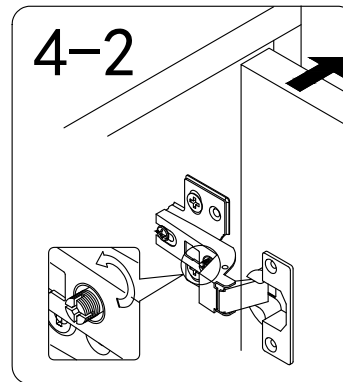

To adjust the gap between the door and the side board to be **smaller**, turn the screw **anti-clockwise**.


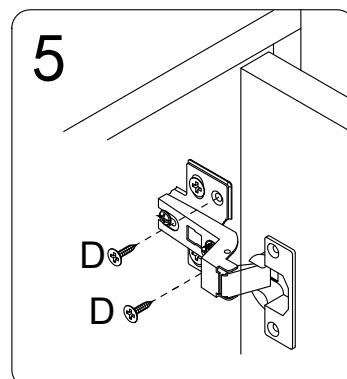














After adjusting the doors properly above, finally tighten these two screws and secured the door.

A	X19	B	X19	C	X2	D	X34	E	X1	F	X12	G	X14	H	X2
															
M6x35mm		Ø15x9mm				M3.5x14mm		4mm		M5x40mm		Ø8x30mm			
I	X1	J	X4	K	X2	M	X2	N	X2	O	X5	P	X2	Q	X2
															
				M4x35mm				Ø6x30mm				M4x12mm			
S	X2	T	X16	U	X12	V	X4	W	X1	X	X4				
															
M3x12mm		M3x16mm				M3.5x12mm				Ø5x17mm					


Cam Lock Fastening System

Insert the cam bolt into the hole first,then insert the cam lock and lock it.

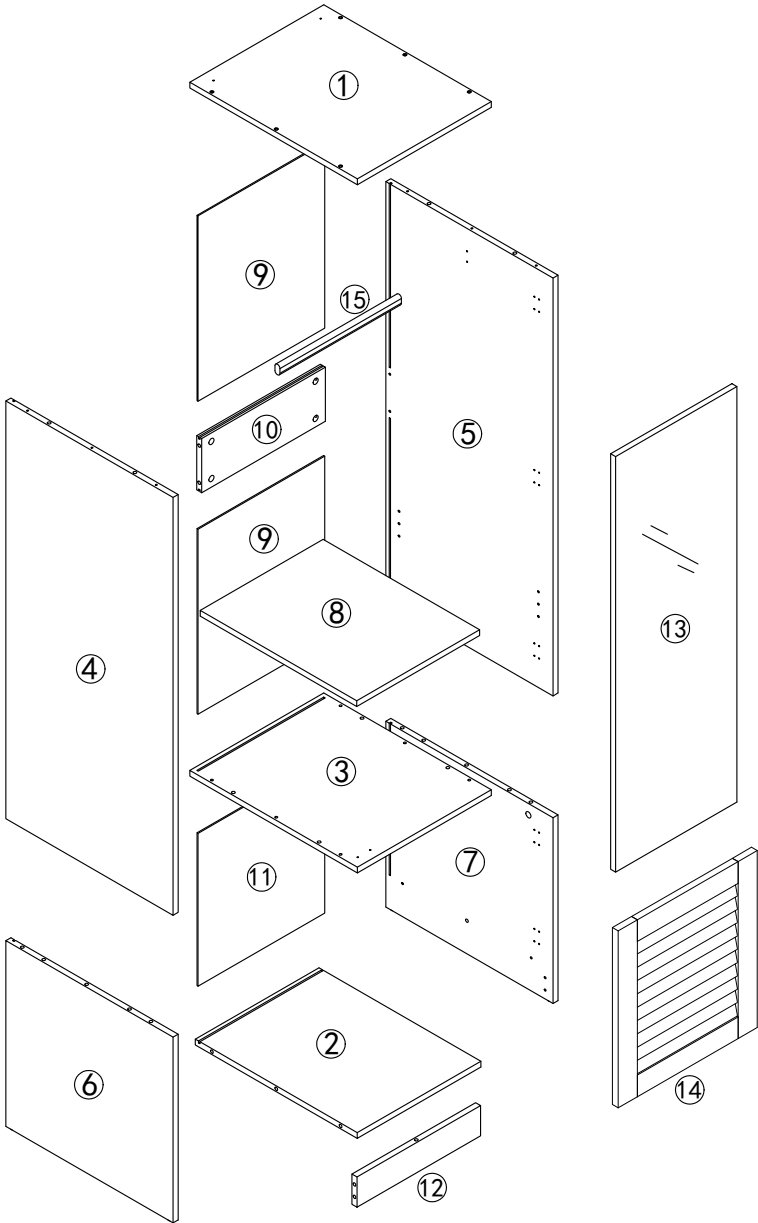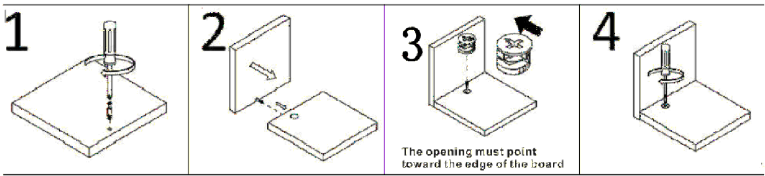

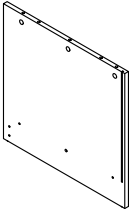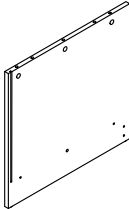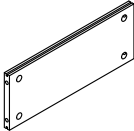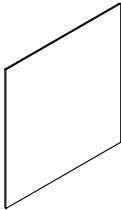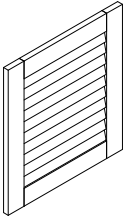① 	② 	③ 	④ 
1PC	1PC	1PC	1PC
⑤ 	⑥ 	⑦ 	⑧ 
1PC	1PC	1PC	1PC
⑨ 	⑩ 	⑪ 	⑫ 
2PCS	1PC	1PC	1PC
⑬ 	⑭ 		
1PC	1PC		

1

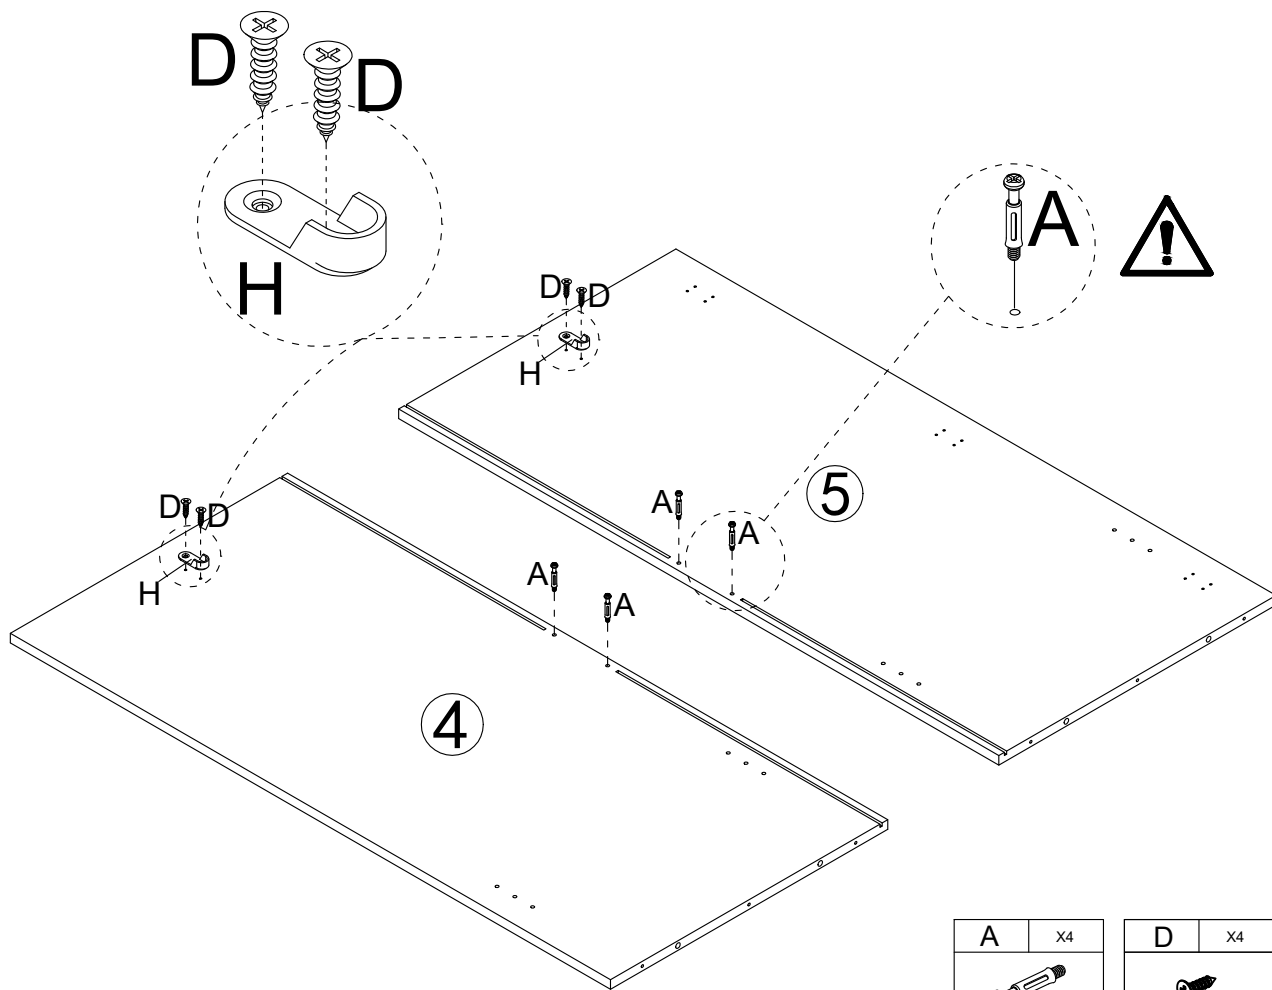


A	X4
	
M6x35mm	

D	X4
	
M3.5x14mm	


H	X2
	

2

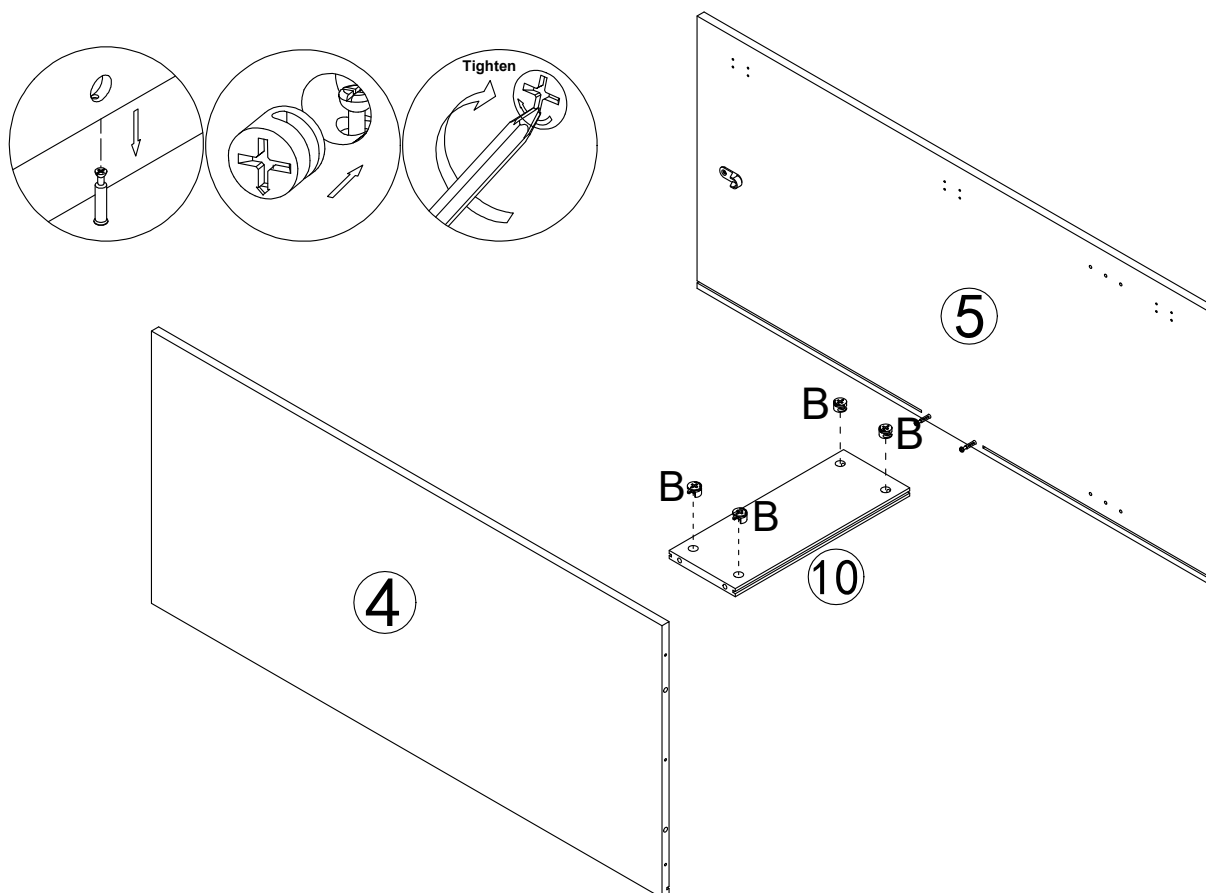


B	X4
	
Ø15x9mm	

3

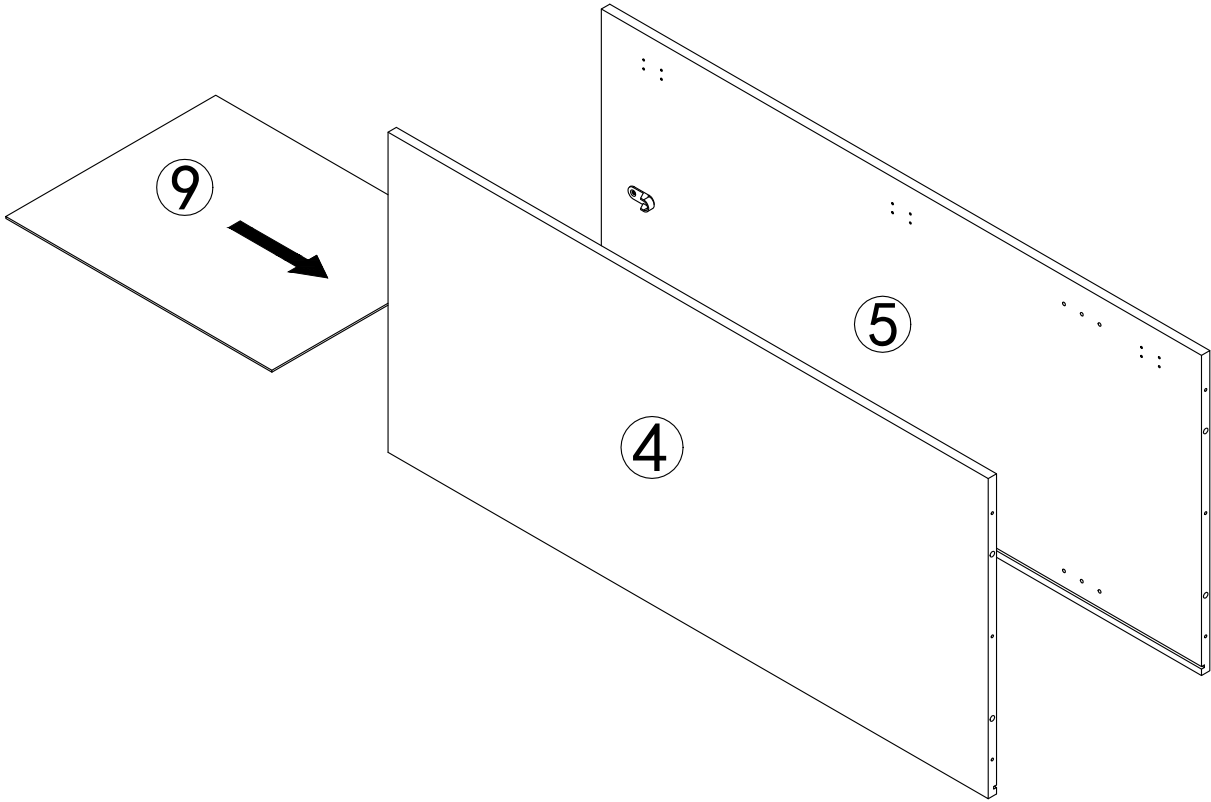


4

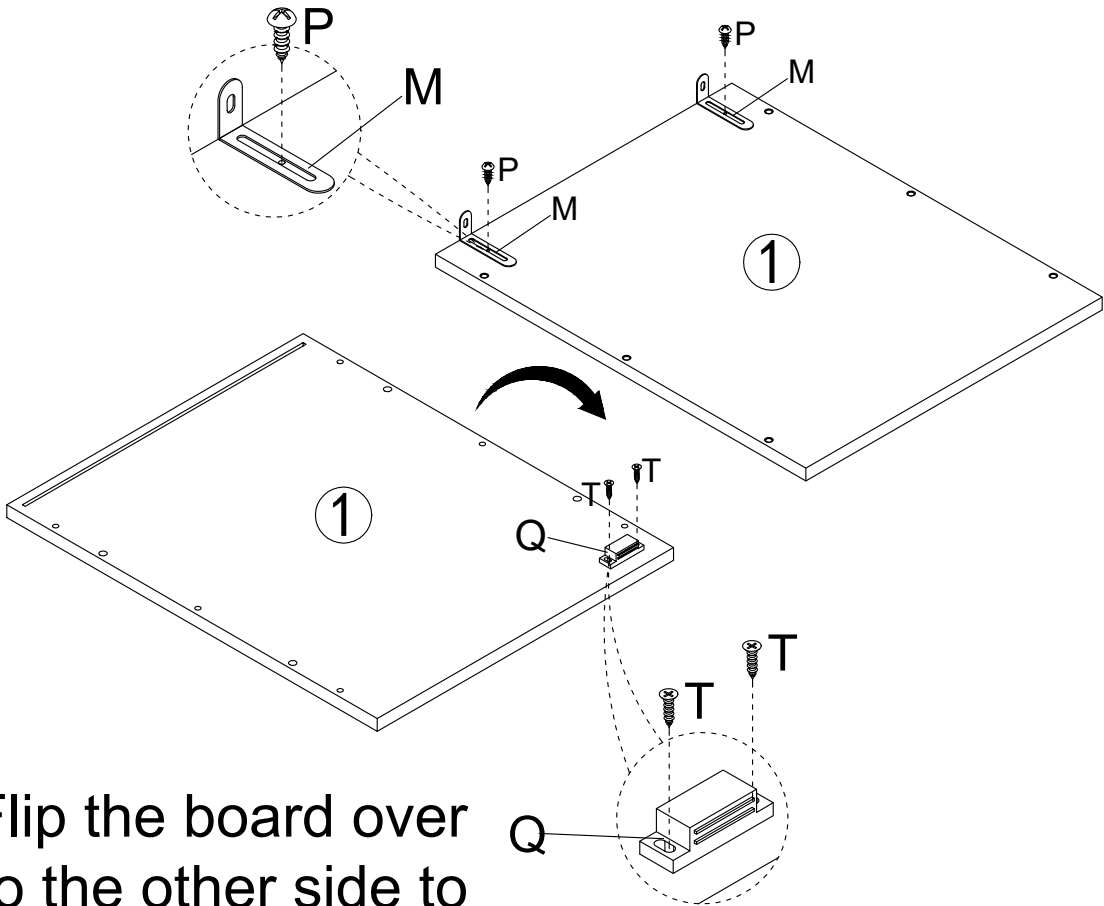

Flip the board over to the other side to screw P

M	X2	P	X2	T	X2	Q	X1
							
		M4x12mm		M3x16mm			


5

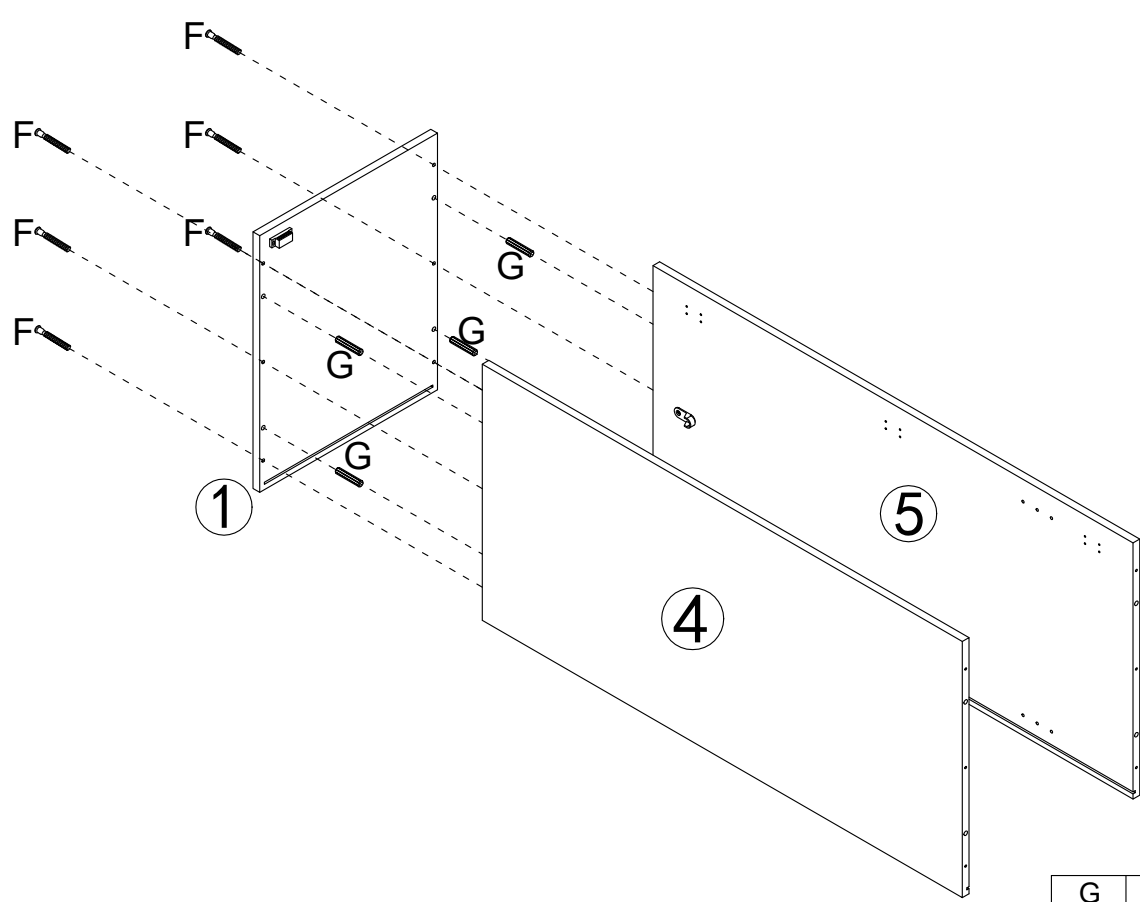


G	X4
	
Ø8x30mm	

F	X6
	
M5x40mm	


6

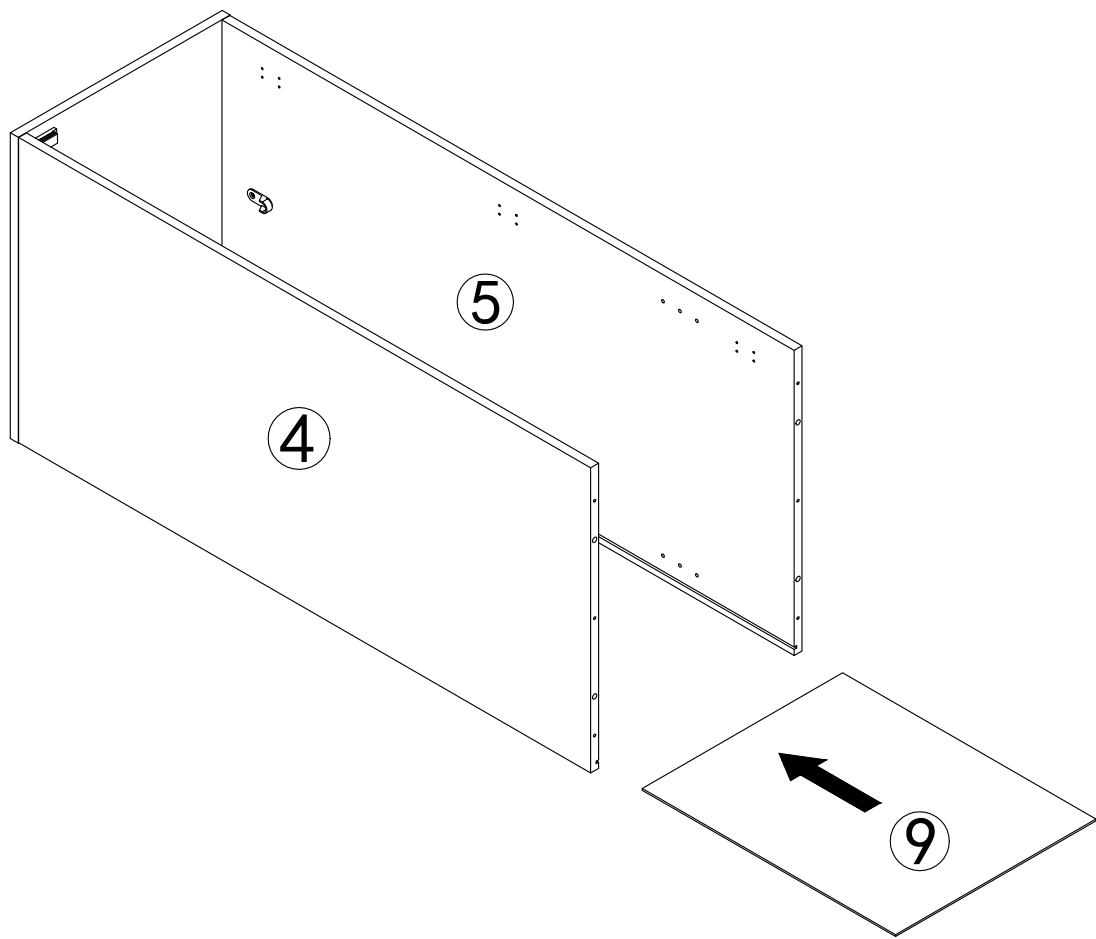


7

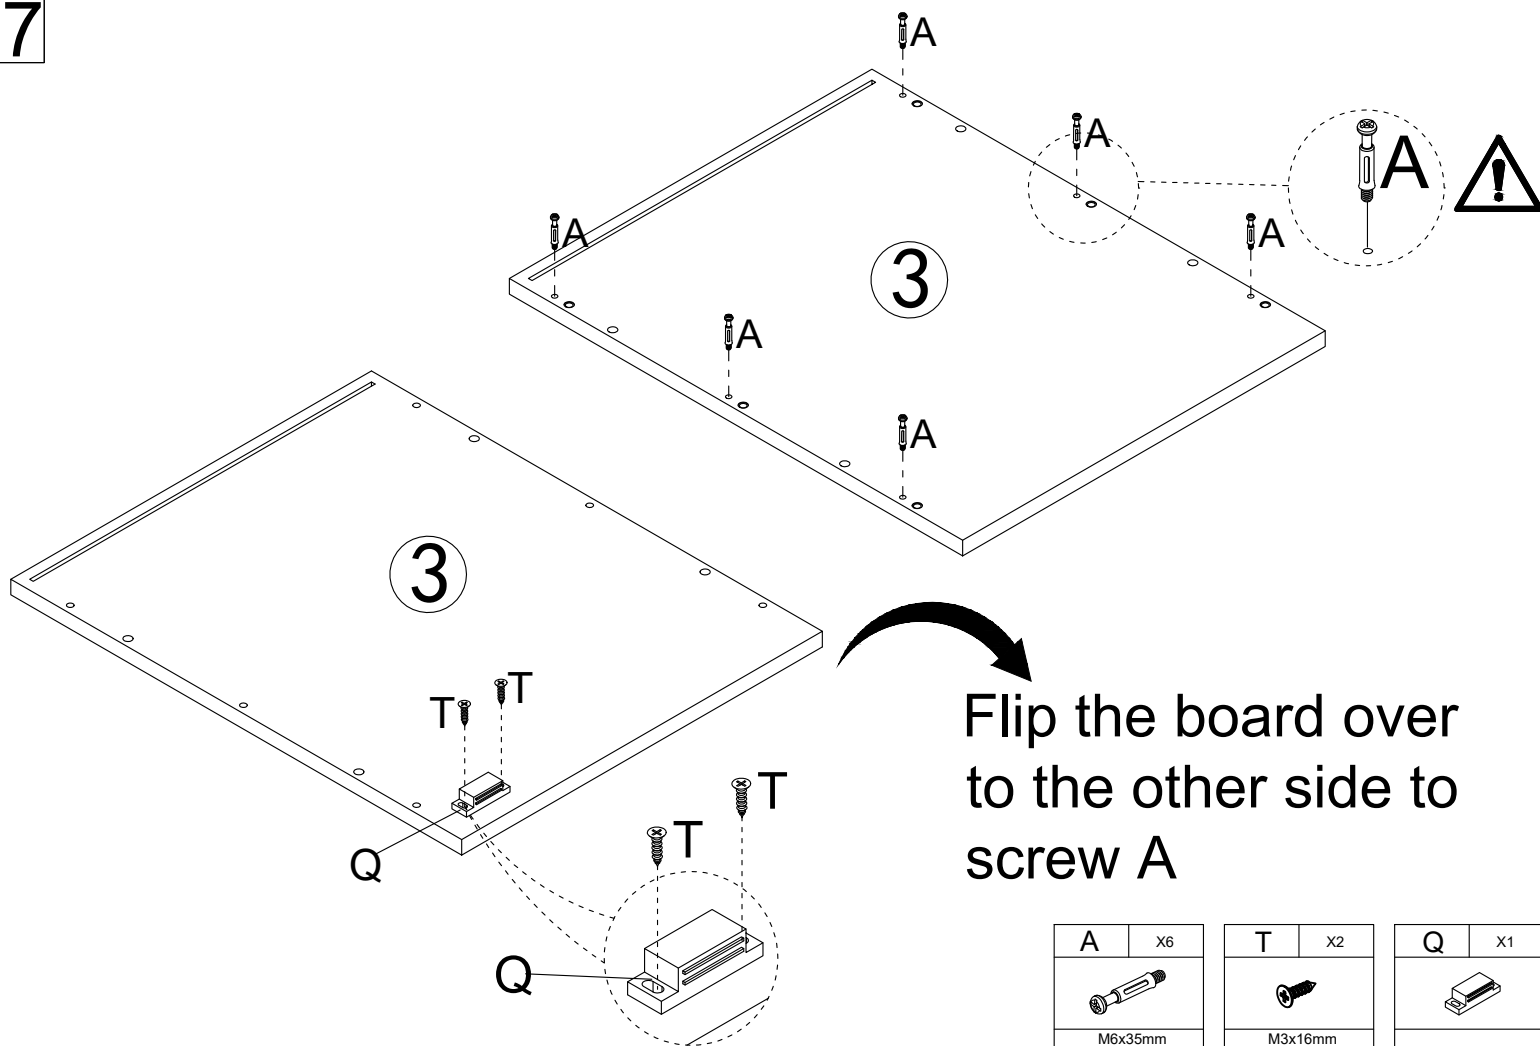

8

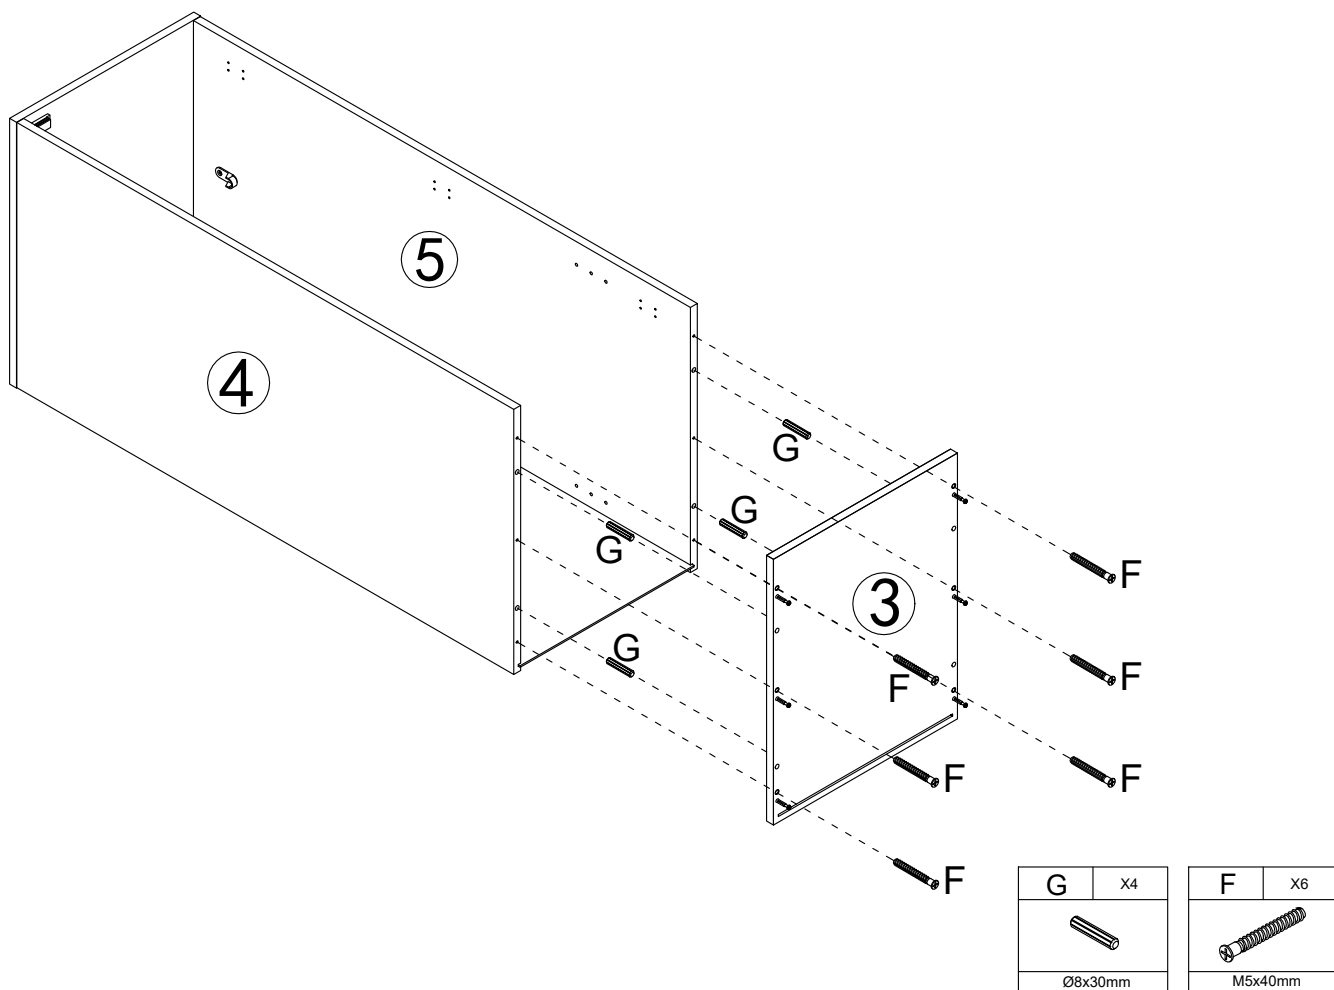


9

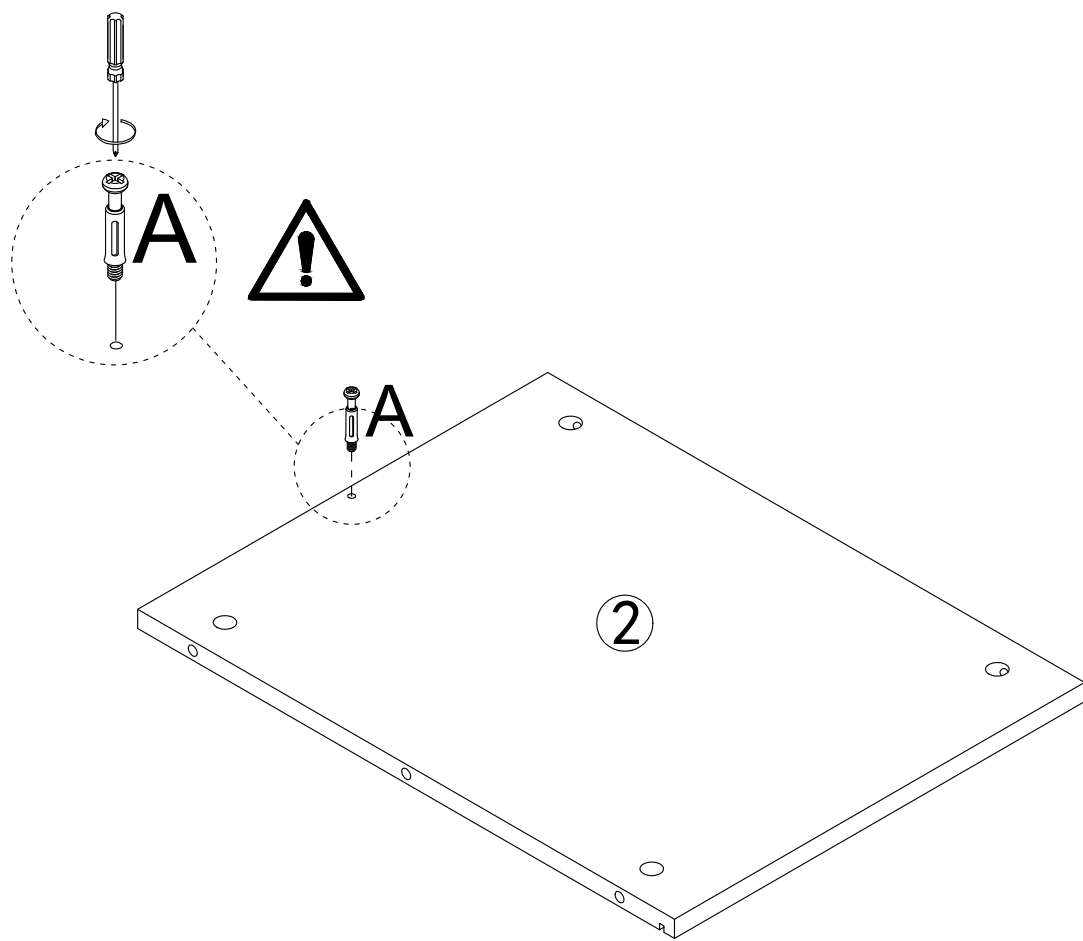

A	x1
	
M6x35mm	

10

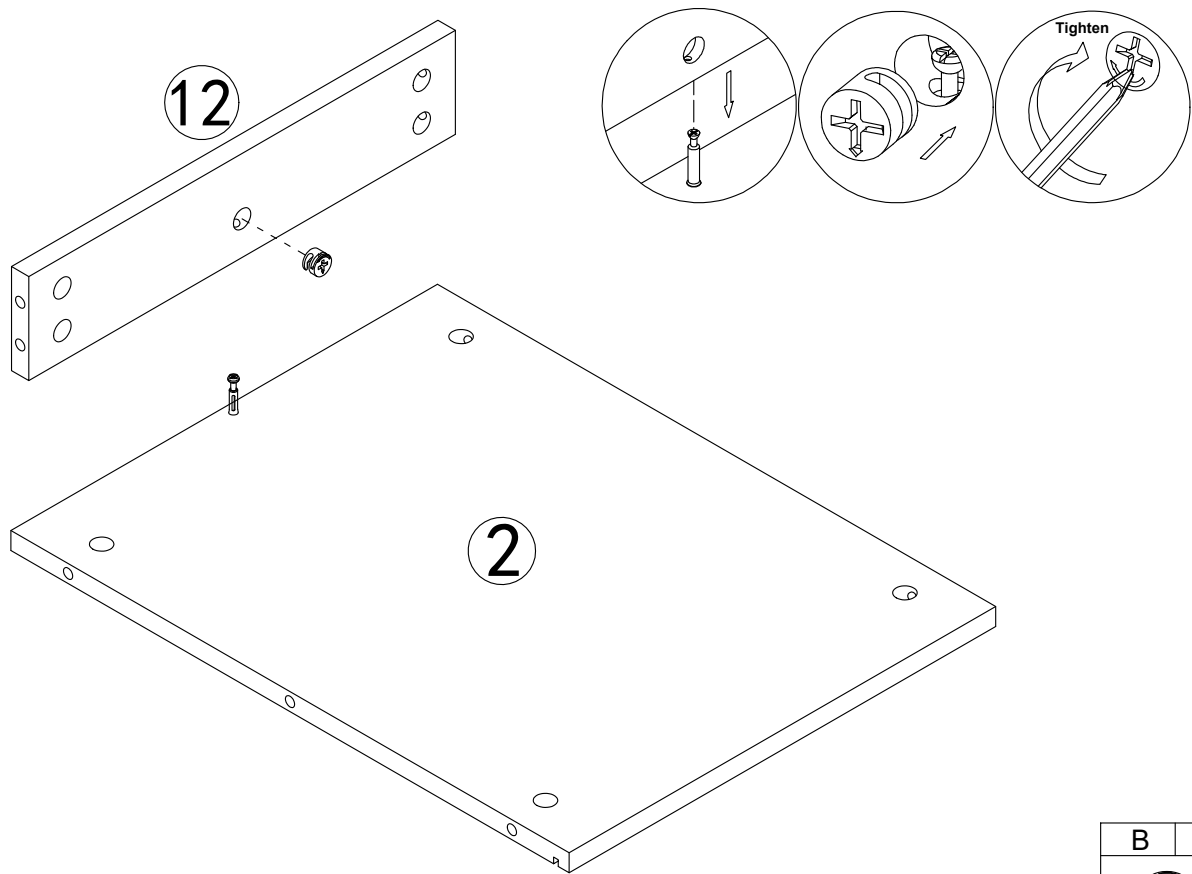


B	x1
	
Ø15x9mm	

A	x8
	
M6x35mm	


B	X8
	
Ø15x9mm	

G	X2
	
Ø8x30mm	


13

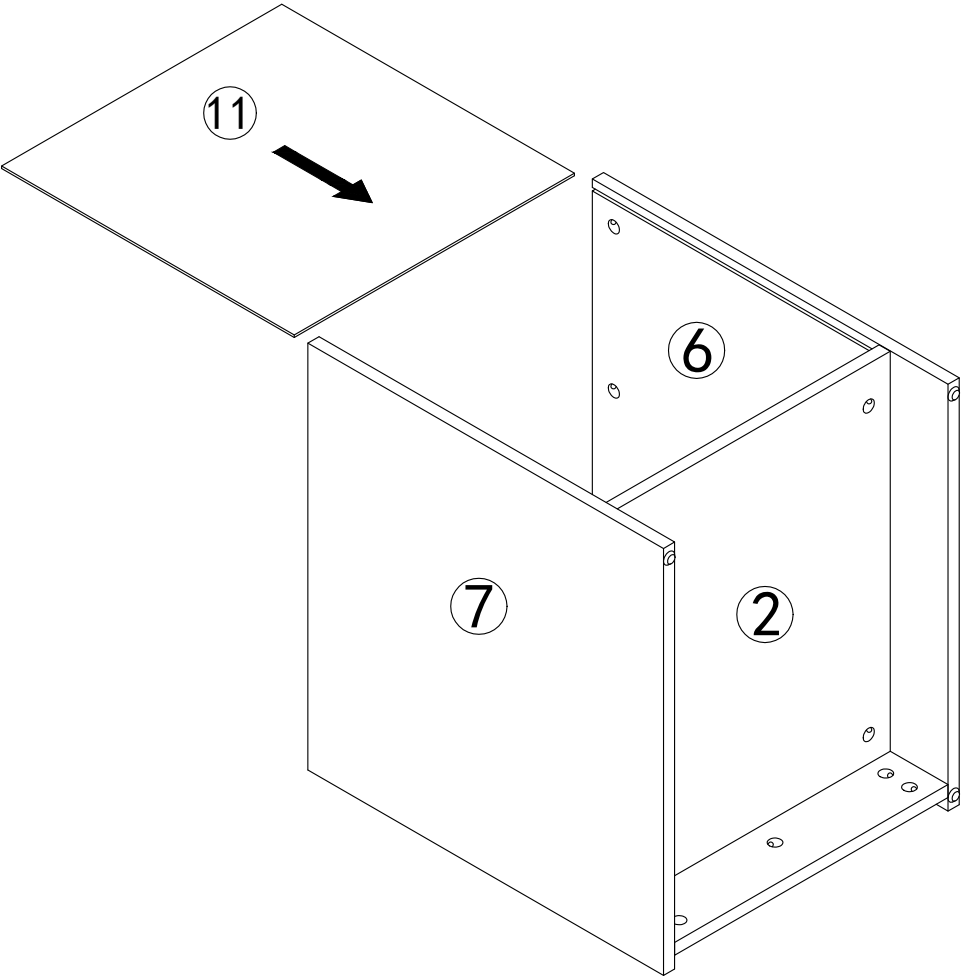

14

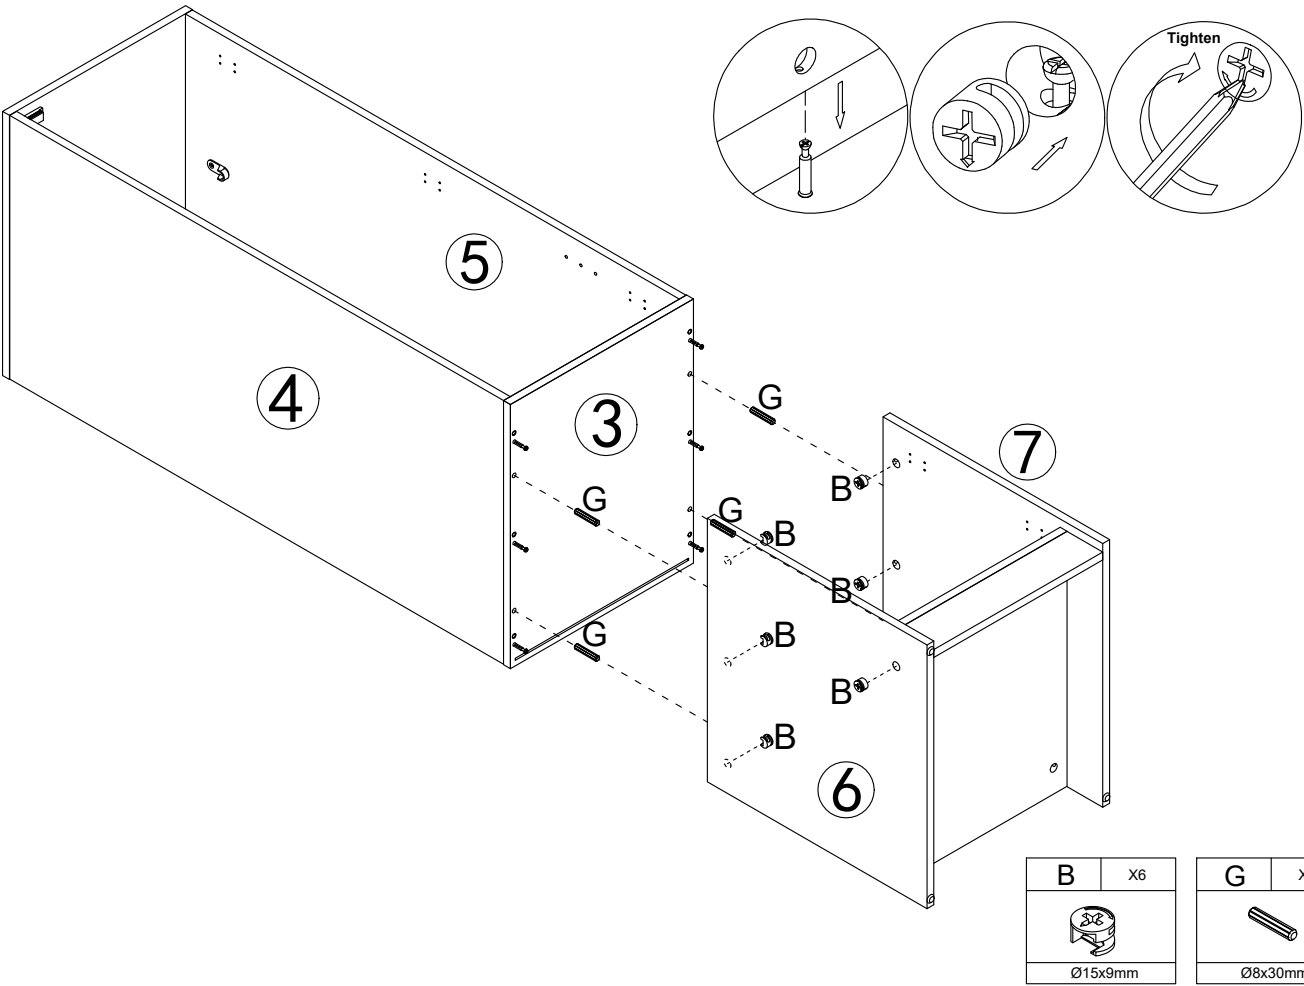


15

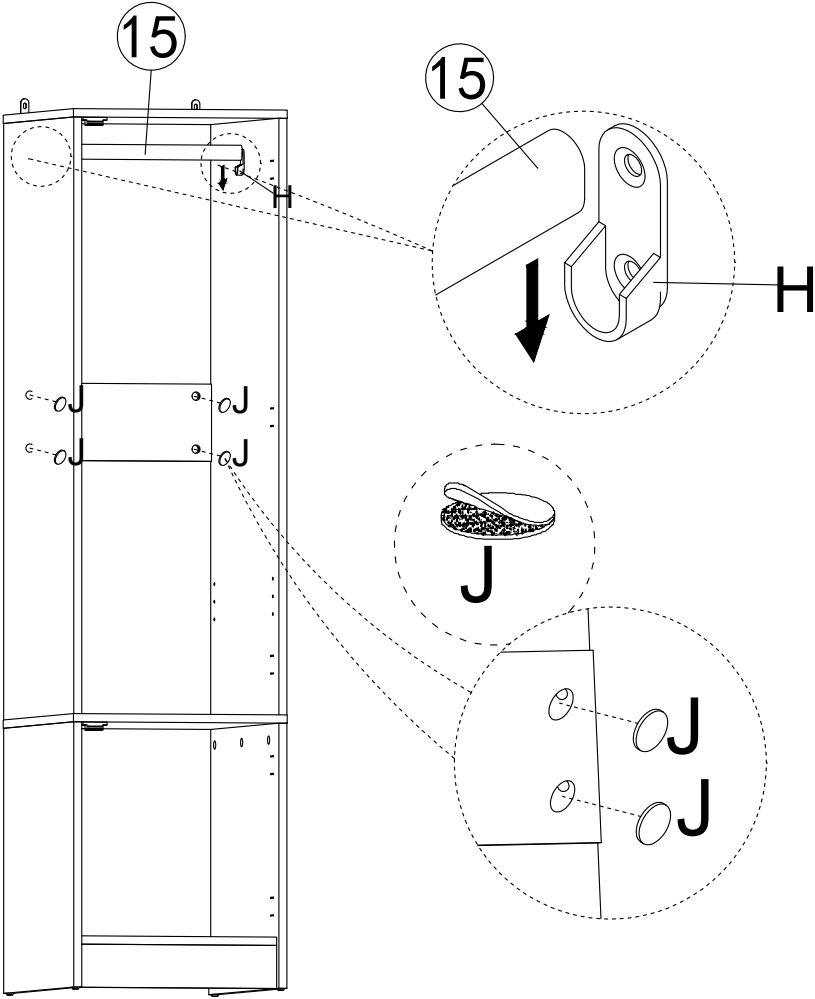


J	X4


16

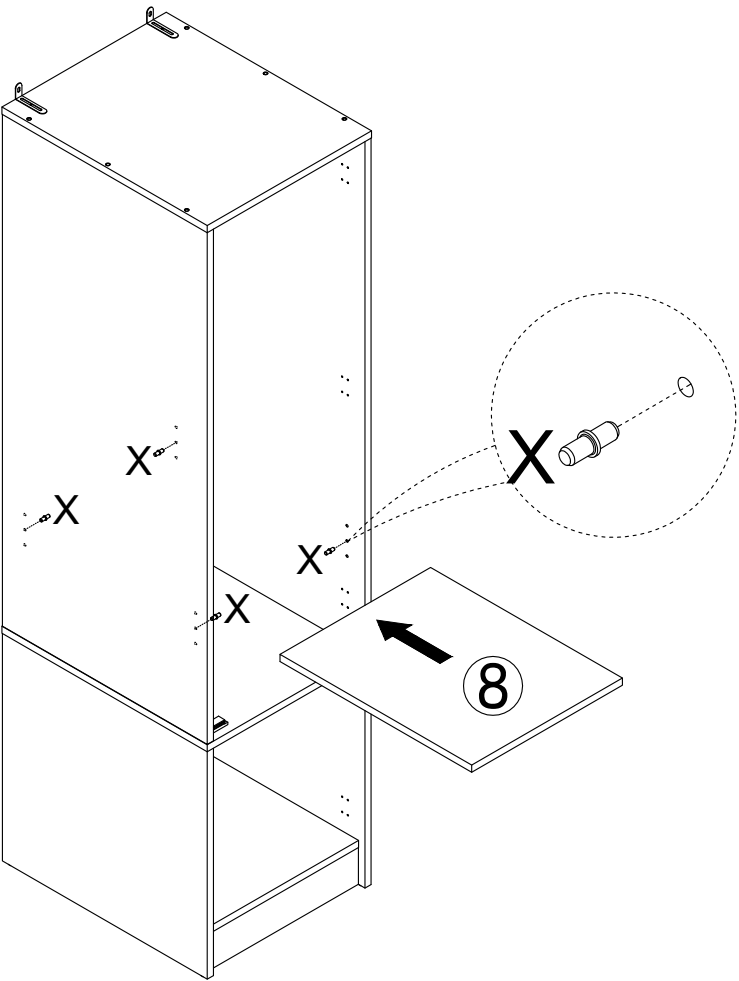

X	X4

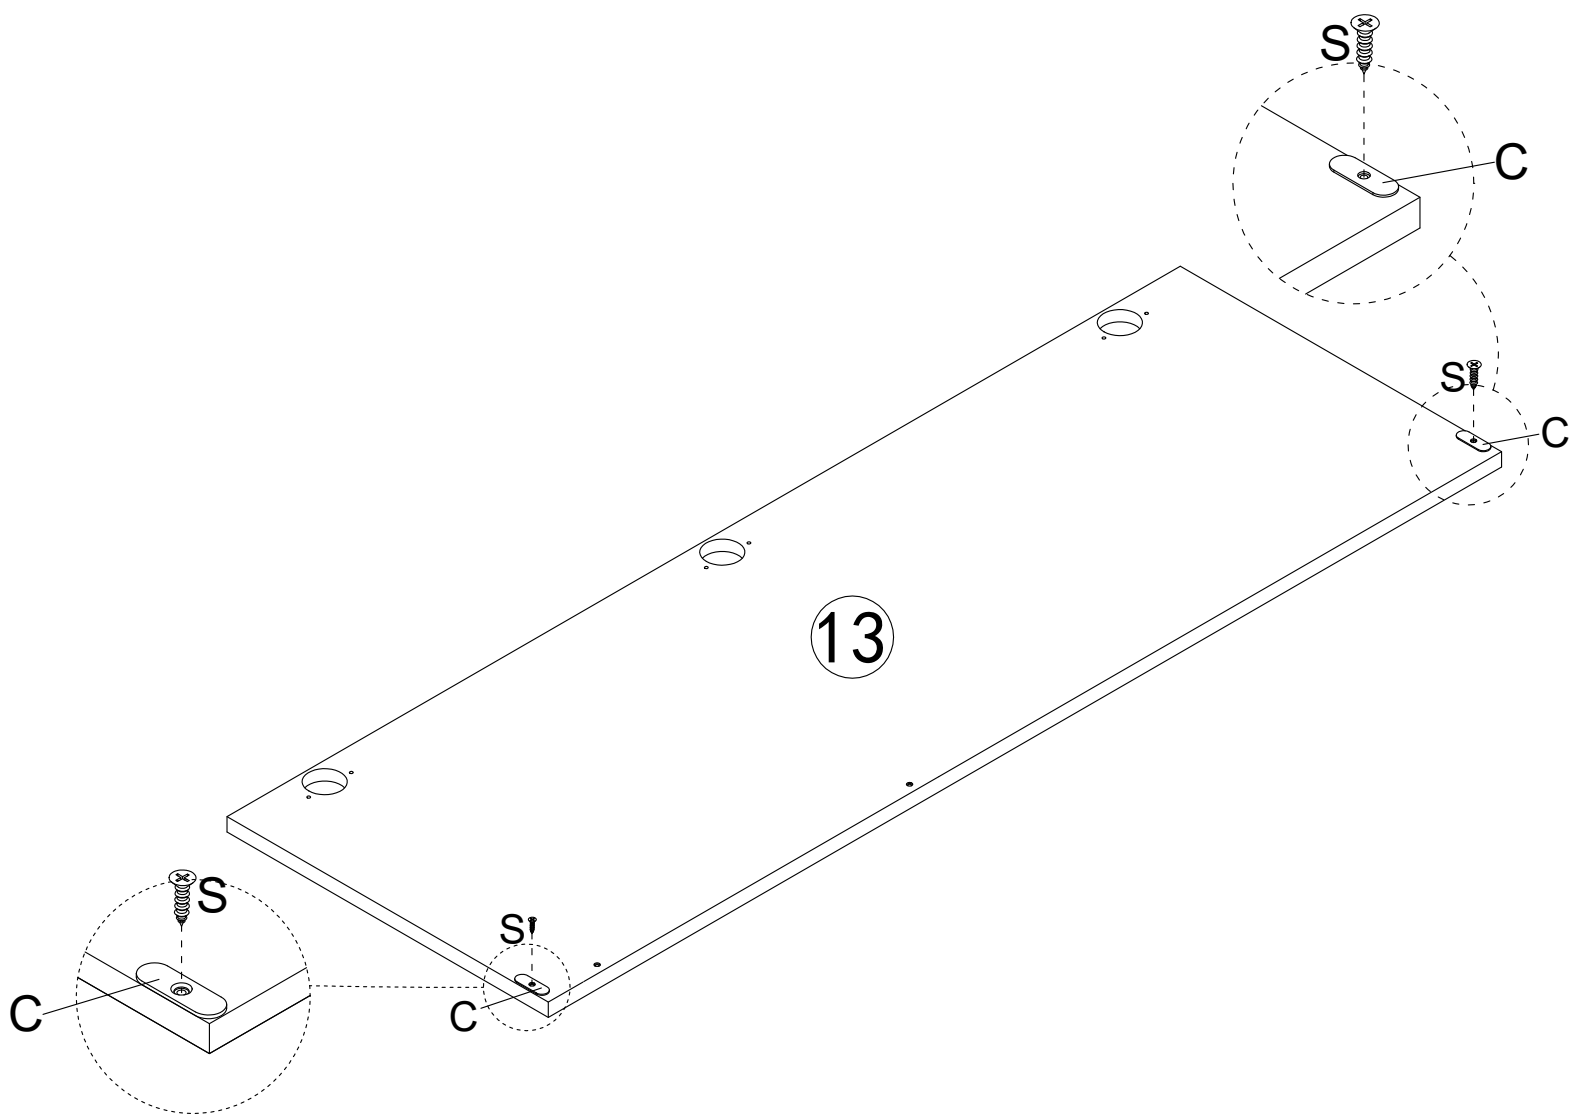

C	x2	S	x2
		M3x12mm	

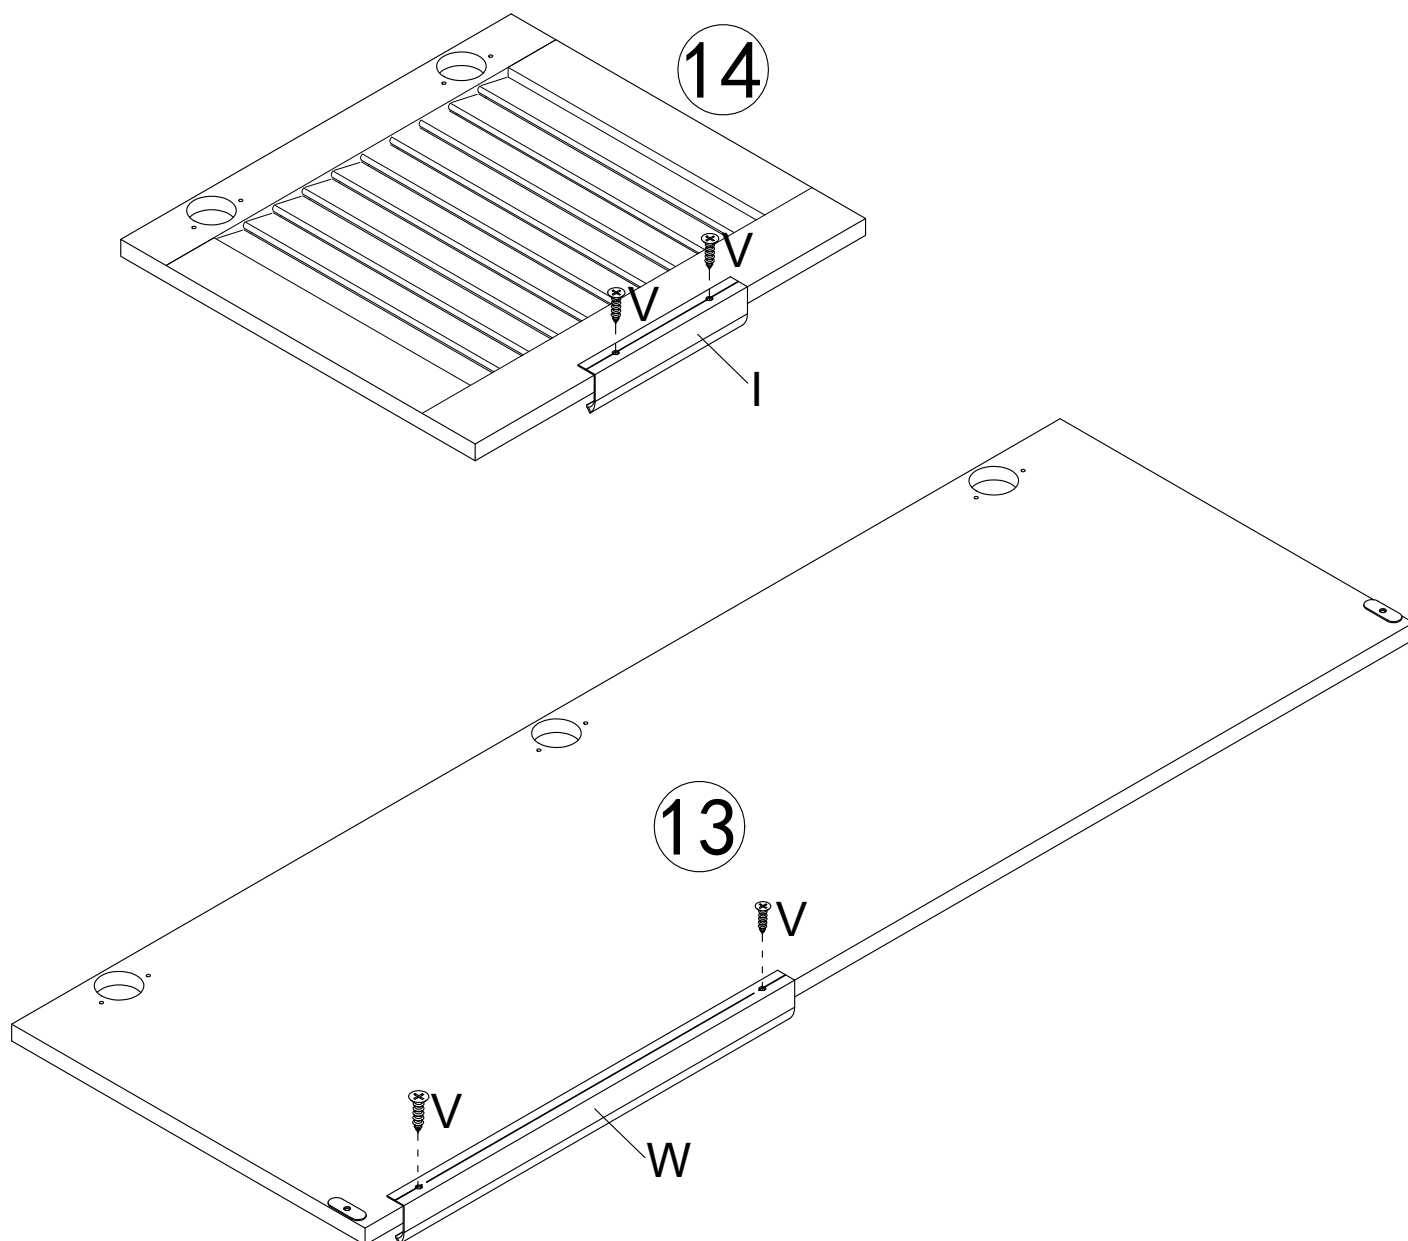



Important: The required fastener is a 12mm long Golden V screw. Never secure the mirror with Silver D screws, which may lead to breakage.

V	X4
	
M3.5x12mm	



I	X1
	

W	X1
	

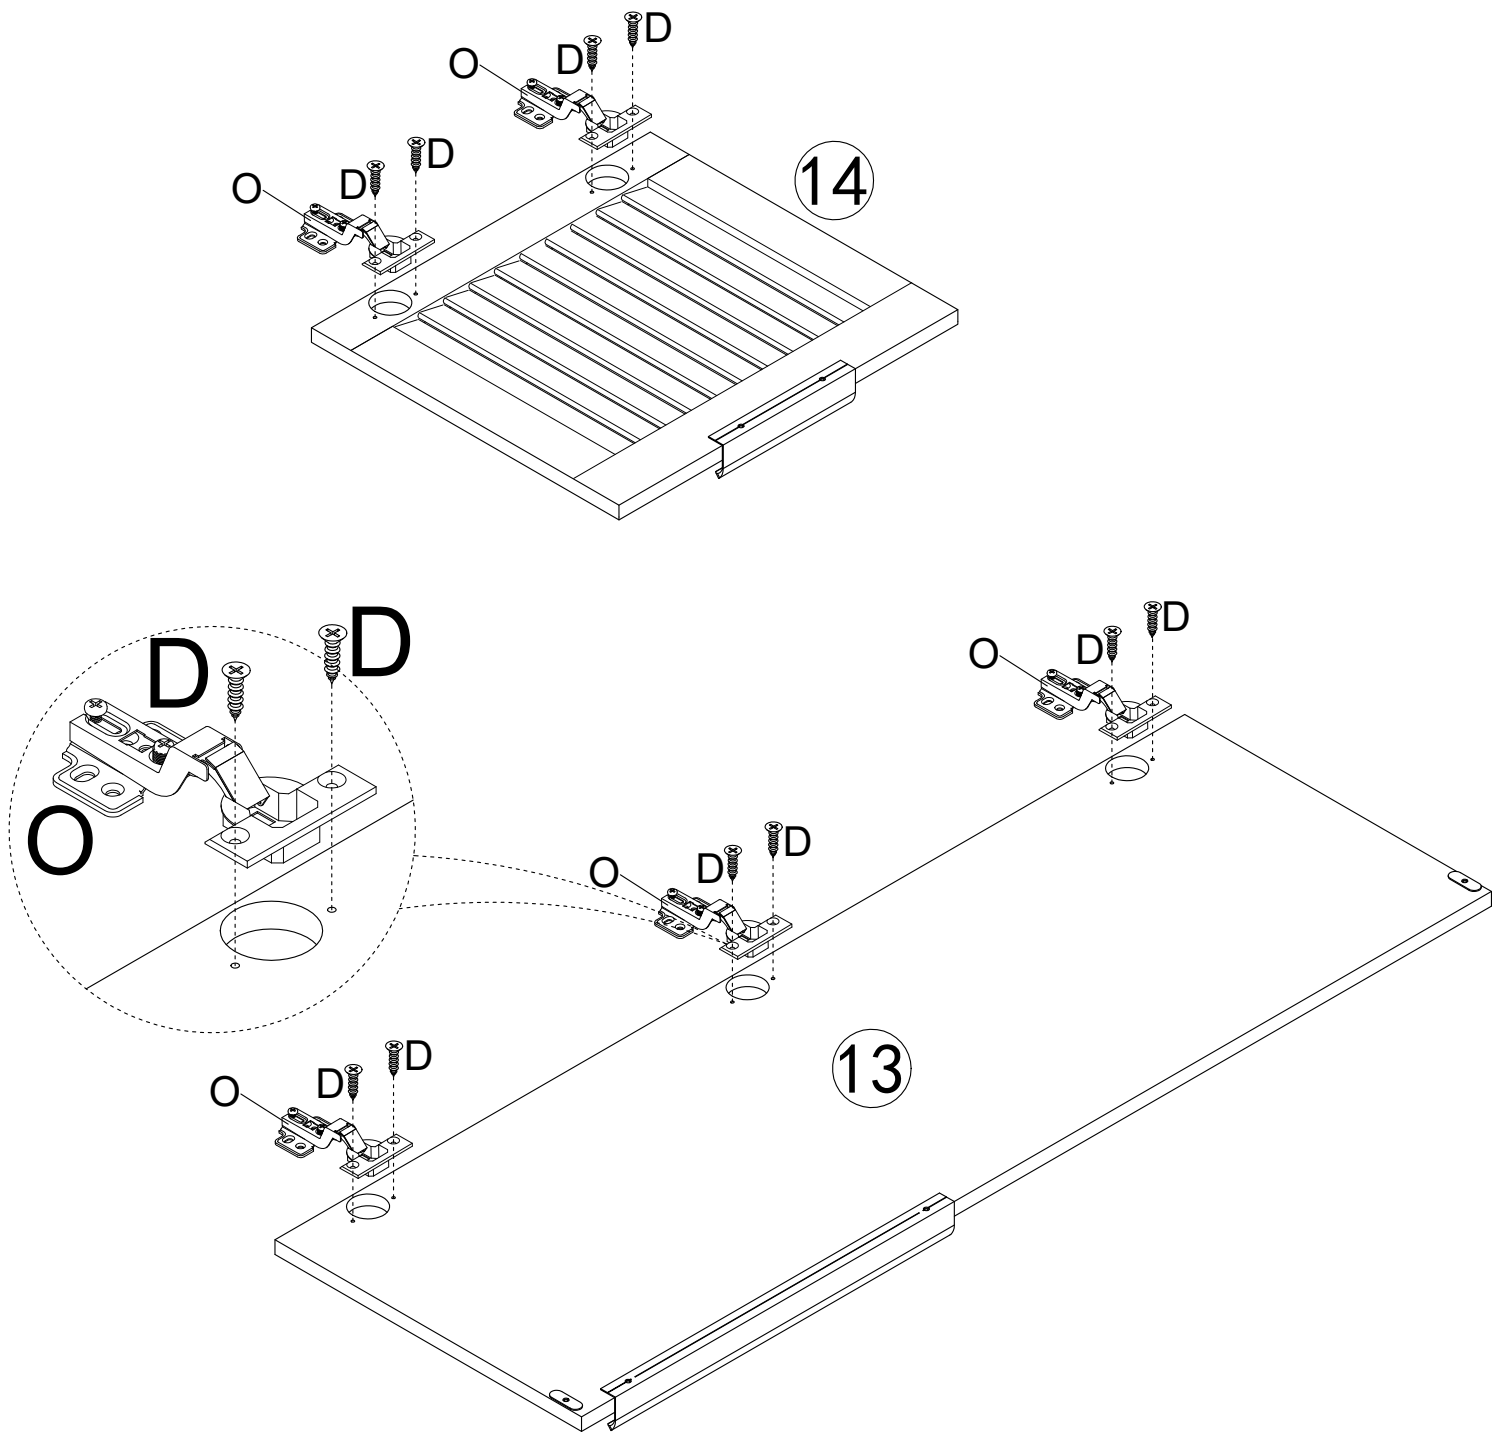


D	X10	O	X5
			
M3.5x14mm			


Please install and adjust the hinges strictly in accordance with the detailed steps 1, 2, 3, 4 and 5 to assemble the doors

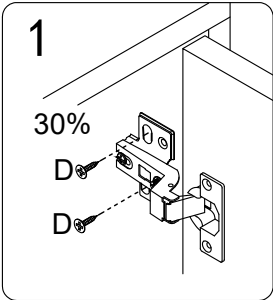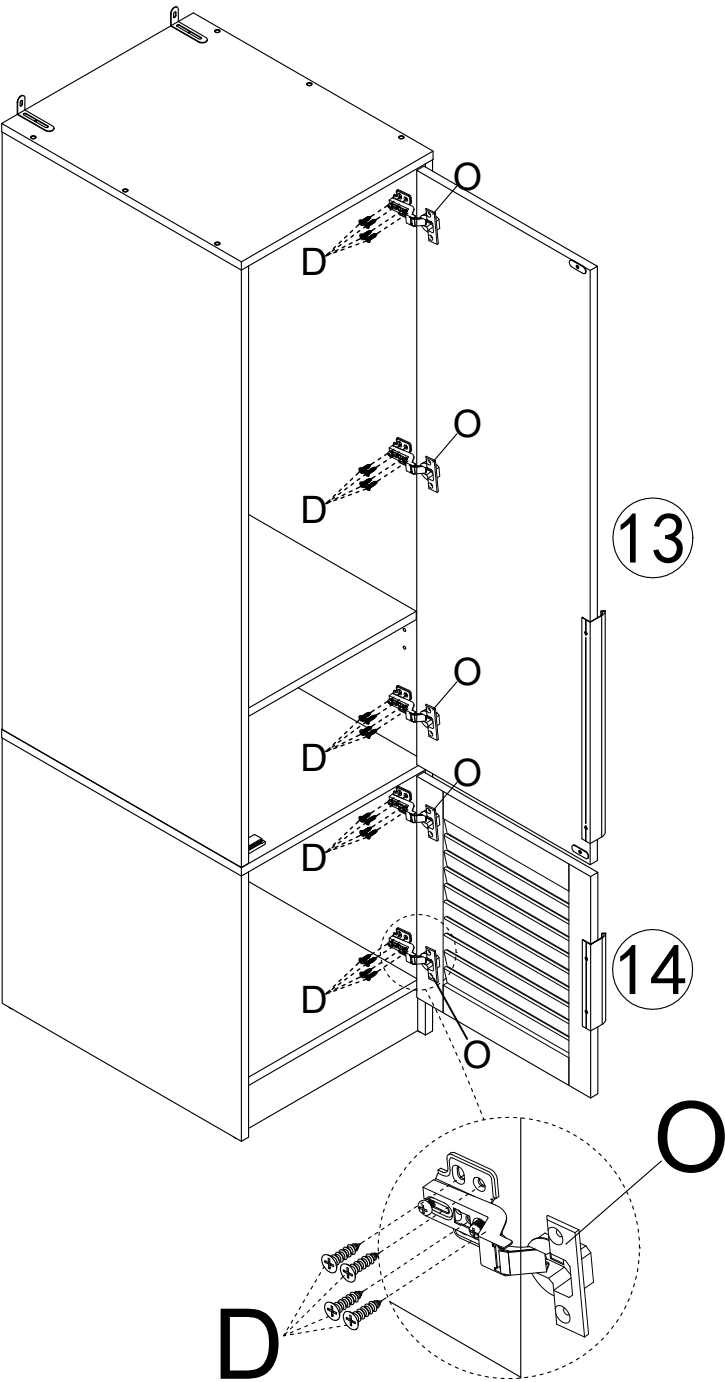


Tighten the screws only 30% as long as the door can be secured.

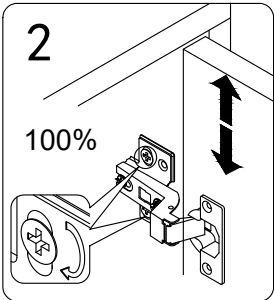


Move the door up and down until it is centred, then tighten the screw 100%.

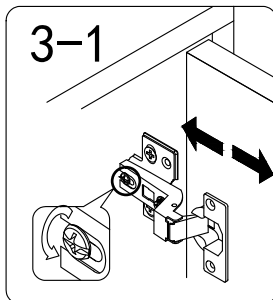


Loosen the screw **anti-clockwise**, and move the door **in or out** until it's **aligned** to side board.

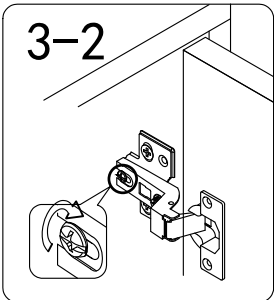


Tighten the screw **clockwise** once the door is aligned.

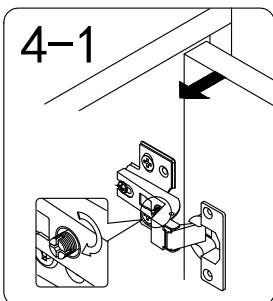

To adjust the gap between the door and the side board to be **larger**, turn the screw **clockwise**.

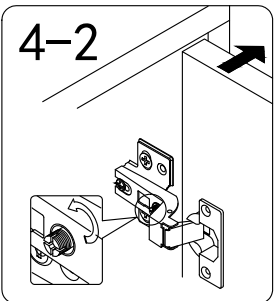


To adjust the gap between the door and the side board to be **smaller**, turn the screw **anti-clockwise**.

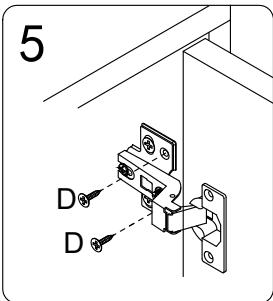

After adjusting the doors properly above, finally tighten these two screws and secured the door.

D	X20
M3.5x14mm	

21

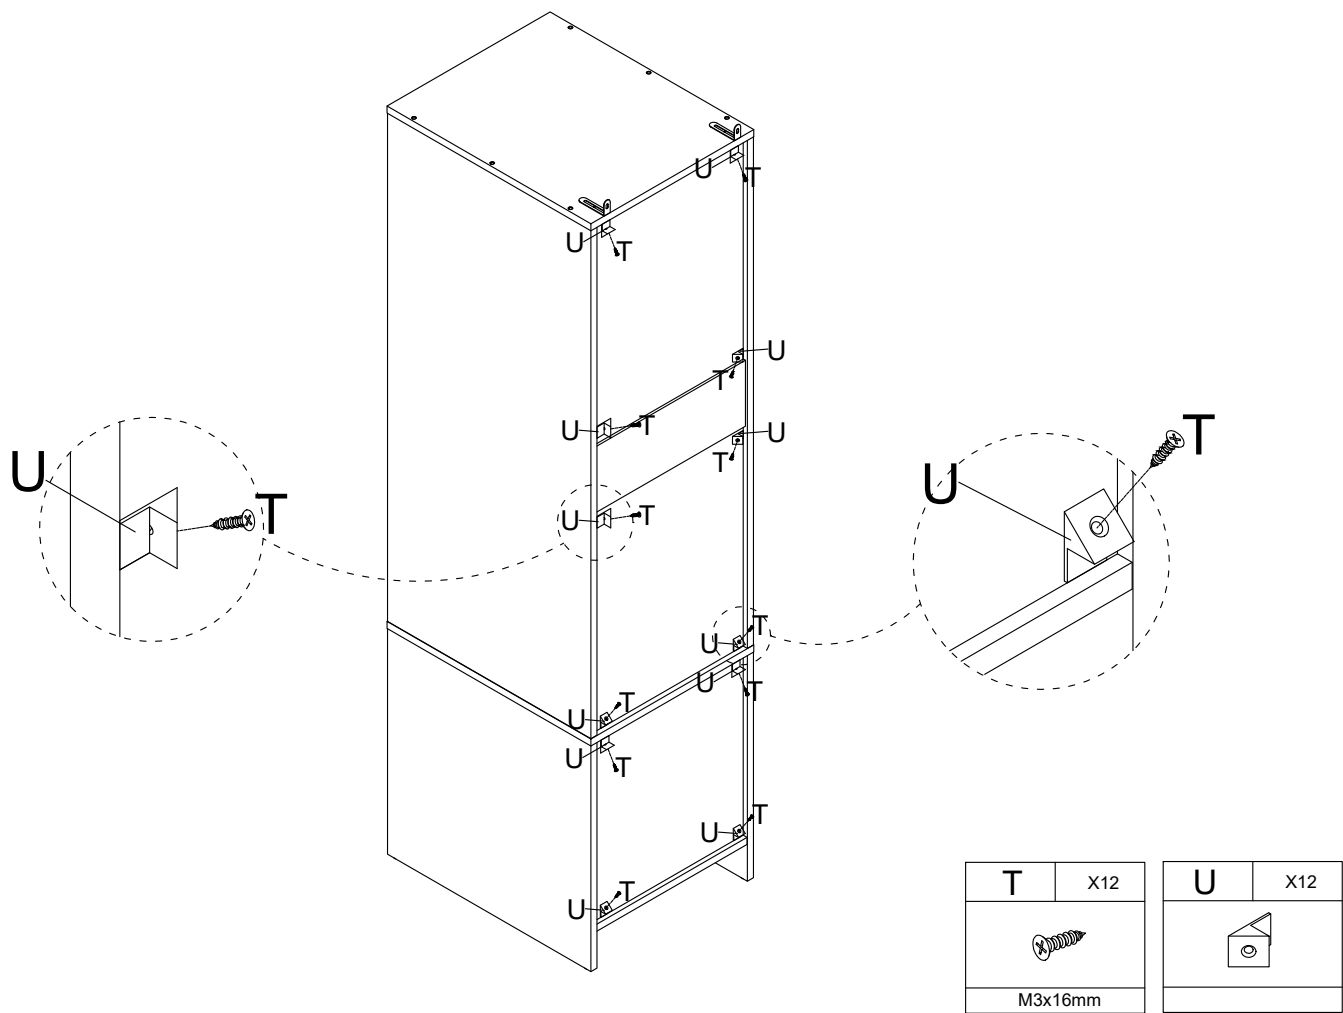

22

