


PLASTIC STORAGE SHED

8(W)x8(D)FT WITH WINDOWS

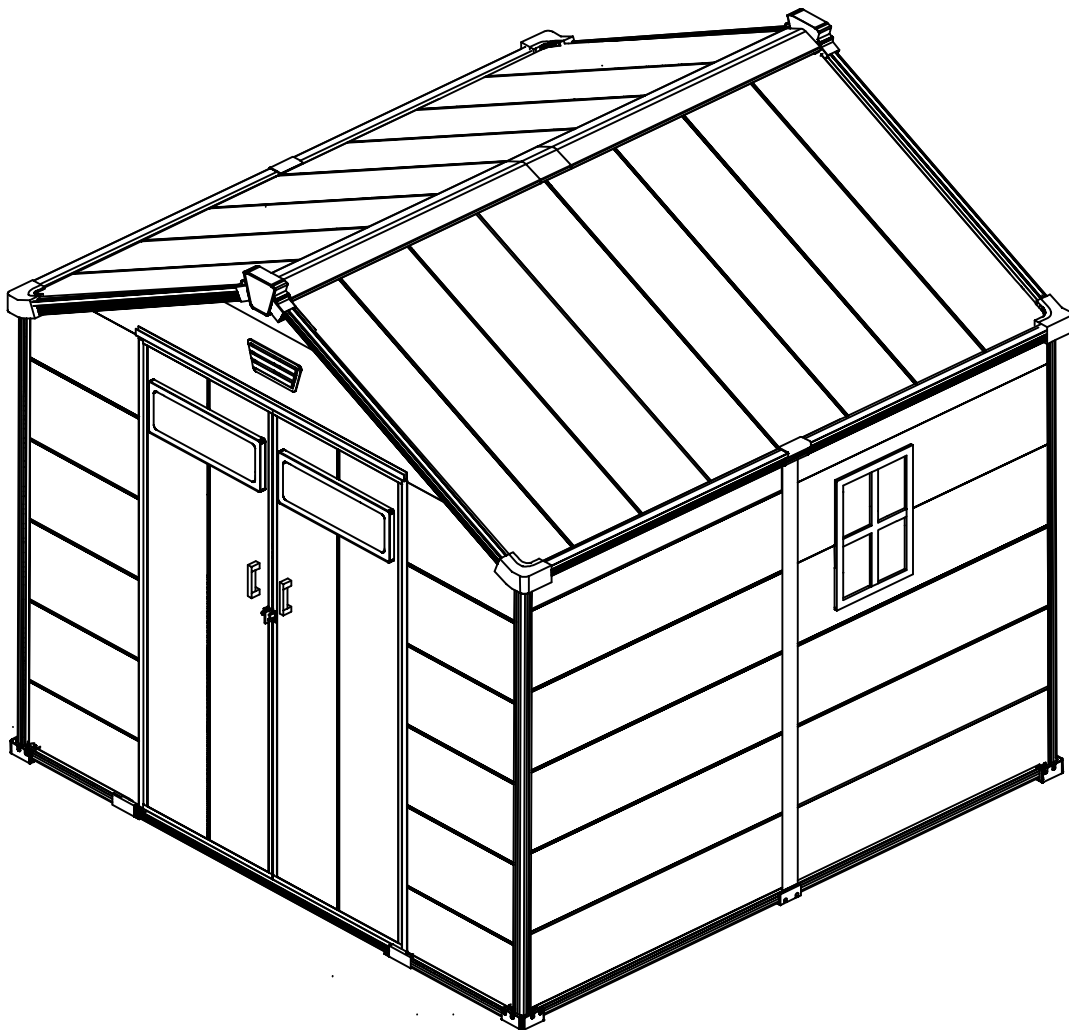

EASYHAWKservice@outlook.com

Our team is available 24/7 to help with any product questions. Contact us anytime!

Recommended to wear gloves to avoid scratches.
Please read the instructions COMPLETELY before assembly.



1. Please check the quantity of all parts before installation (refer to the Parts Lists) and the appearance of the products. Make sure the product is correct before installation.
2. Protect spare parts carefully in case any losing, scratch or damage occurred during installation. Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or **neglect** of this product.

CARE AND SAFETY GUIDELINES

- The shed is intended for storage purposes only. It is not designed for habitation.
- It is strongly recommended to secure the shed to an immovable object or anchor to the ground by drilling holes in the shed floor (at the pre-marked locations) and inserting proper screws into the ground (screws are not included).
- Do not attempt assembly on windy or cold days.
- Periodically check the shed to ensure that it is stable and that the site is level.
- Be careful when handling parts with steel edges.
- When assembling or handling the shed, use only those tools listed in the user manual.
- Always wear work gloves, safety goggles and long sleeves when assembling or performing any maintenance on your shed.
- Avoid using a lawnmower or mechanical scythe near the shed.
- Wear safety goggles and always follow the manufacturer's instructions when using power tools.
- Wash the shed with a garden hose or a mild detergent solution. Do not use a metal brush or abrasive cleaners, including degreasers and oil- or acetone-based cleaning materials, as these may stain or damage the shed.
- Do not store hot items, such as recently used grills and blowtorches, and volatile chemicals in the shed.
- Avoid placing heavy items against the walls, as this may cause distortion.
- Avoid placing sharp items directly on floor which may cause broken.
- Keep the roof clear of accumulated snow and leaves. Large amounts of snow on the roof can damage the shed, making it unsafe to enter.
- Wind direction is an important factor to consider when determining the location of the shed. Reduce exposure to the wind, in general, and of the door side in particular. Keep doors closed and locked when the shed is not in use to prevent wind damage.
- Do not stand on the roof.
- Consult your local authorities to check if permits are required to erect the shed.



Safety Precautions

We recommend **two adults** to complete the installation.

Two adults installed together will make the installation process easier and safer. The gloves must be carried to prevent hand cuts during installation.

Take care when using power tools near water the use of a residual current device (RCD) is advised.

Please use the electric driver carefully during screwing to prevent the screw from slipping and hurting your hand.

Be careful not to fall when installing the roof. Please steady the ladder and make sure the product placed on a flat ground.

PLEASE KEEP THIS INSTRUCTION FOR FUTURE REFERENCE.

Installation precautions

1. Site preparation

Leveling the ground.




Please place the product on a flat ground to prevent leaning and collapse.

If the ground is uneven, the door may can't be closed.



2. Set up the base

It is recommended to build a wooden base or concrete base.

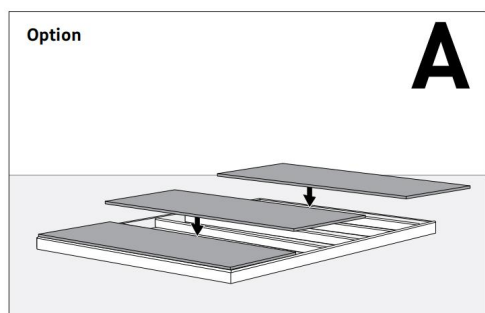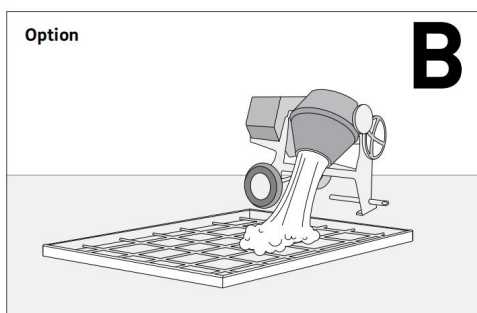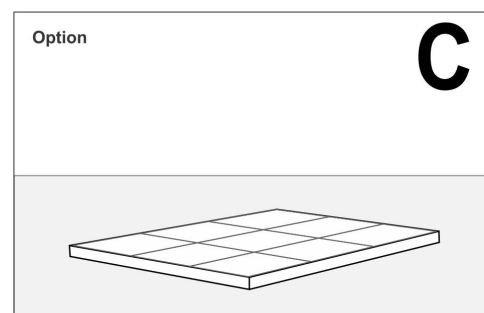

3. Leave enough space

Operating space shall be reserved for external installation work.





4. Tools required for installation

(**Note:** Installation requires two people to work together.)



5. Parts are placed after unpacking


Don't lean the panels to avoid distortion.

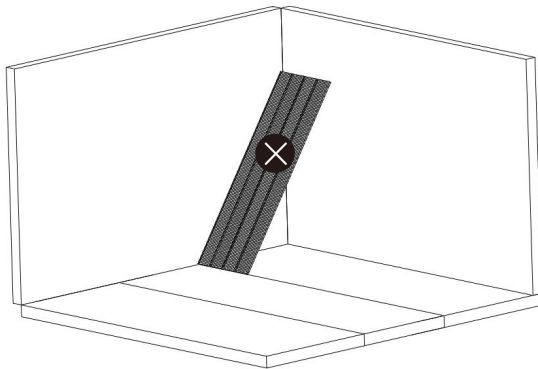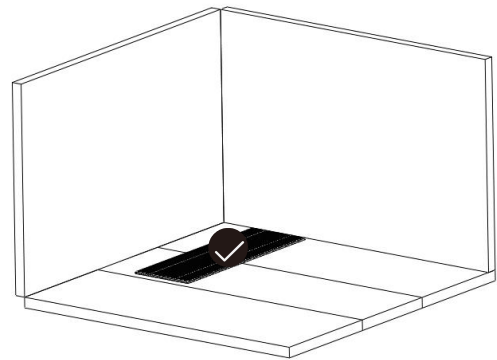


6. Protect The Floor

Disassemble the packaging cardboard box, unfold it and lay it on the floor to protect.

Directly use the ladder may cause floor damage.

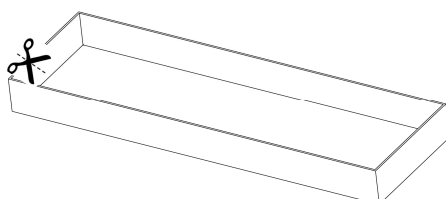

I . 【Product Introduction】

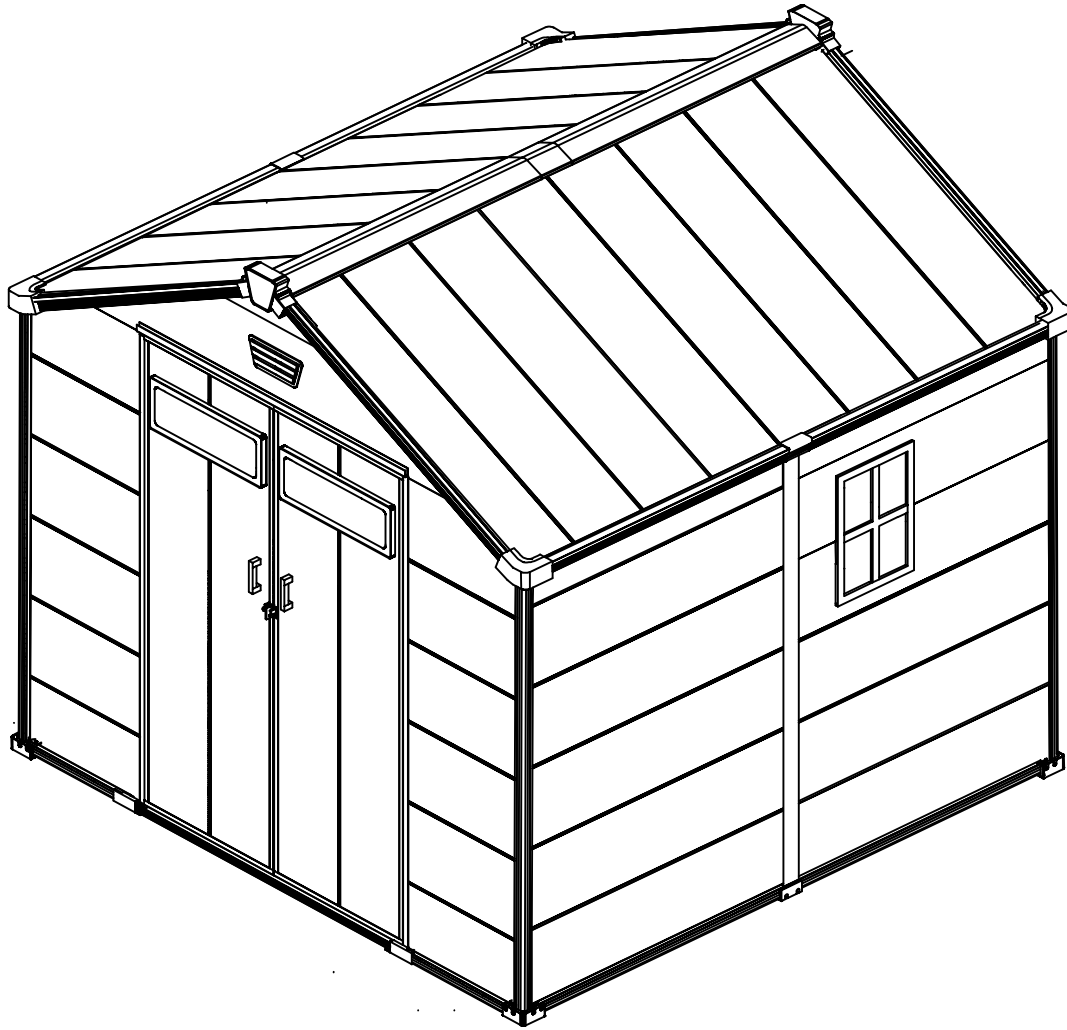



Installation Precautions for Plastic Tool Huts:


1. Before installation, ensure the installation platform is level and free of unevenness. Unevenness may cause slight misalignment of the panels during installation, but in most cases, the product can still be successfully assembled.


2. All plastic panels must be fully inserted, especially when installing components into the floor grooves. Make sure they are completely inserted. Assembly may require using a rubber mallet to tap the panels (tap gently, do not use excessive force).

3. Plastic toolhuts contain some metal parts. Ensure all screws on the metal parts are tightened.






【 Resin Storage Shed_8x8ft】

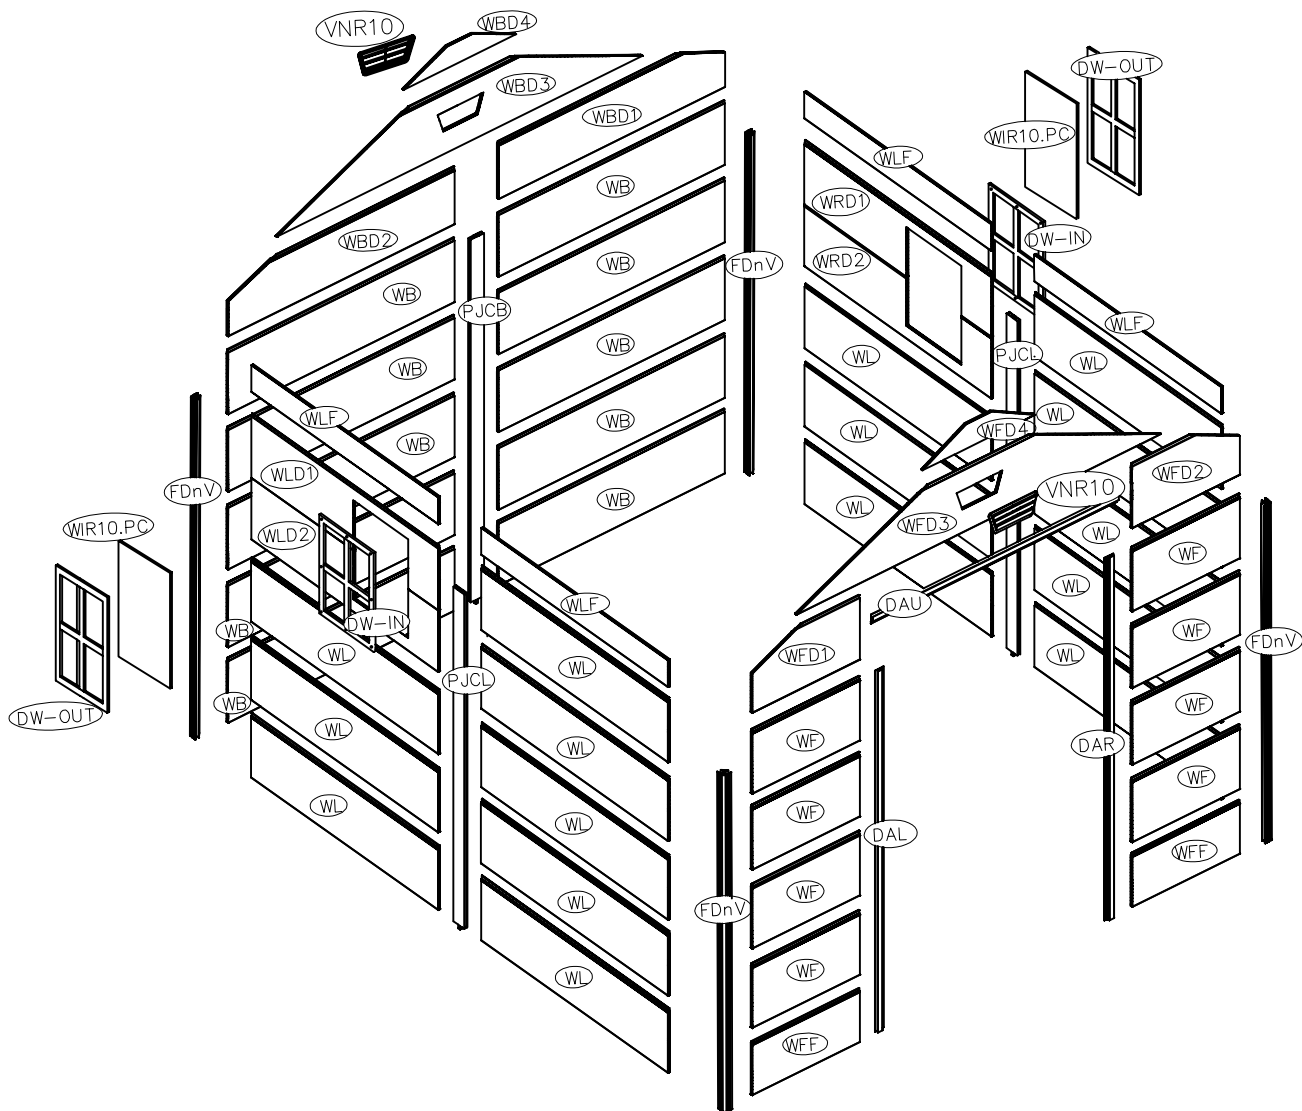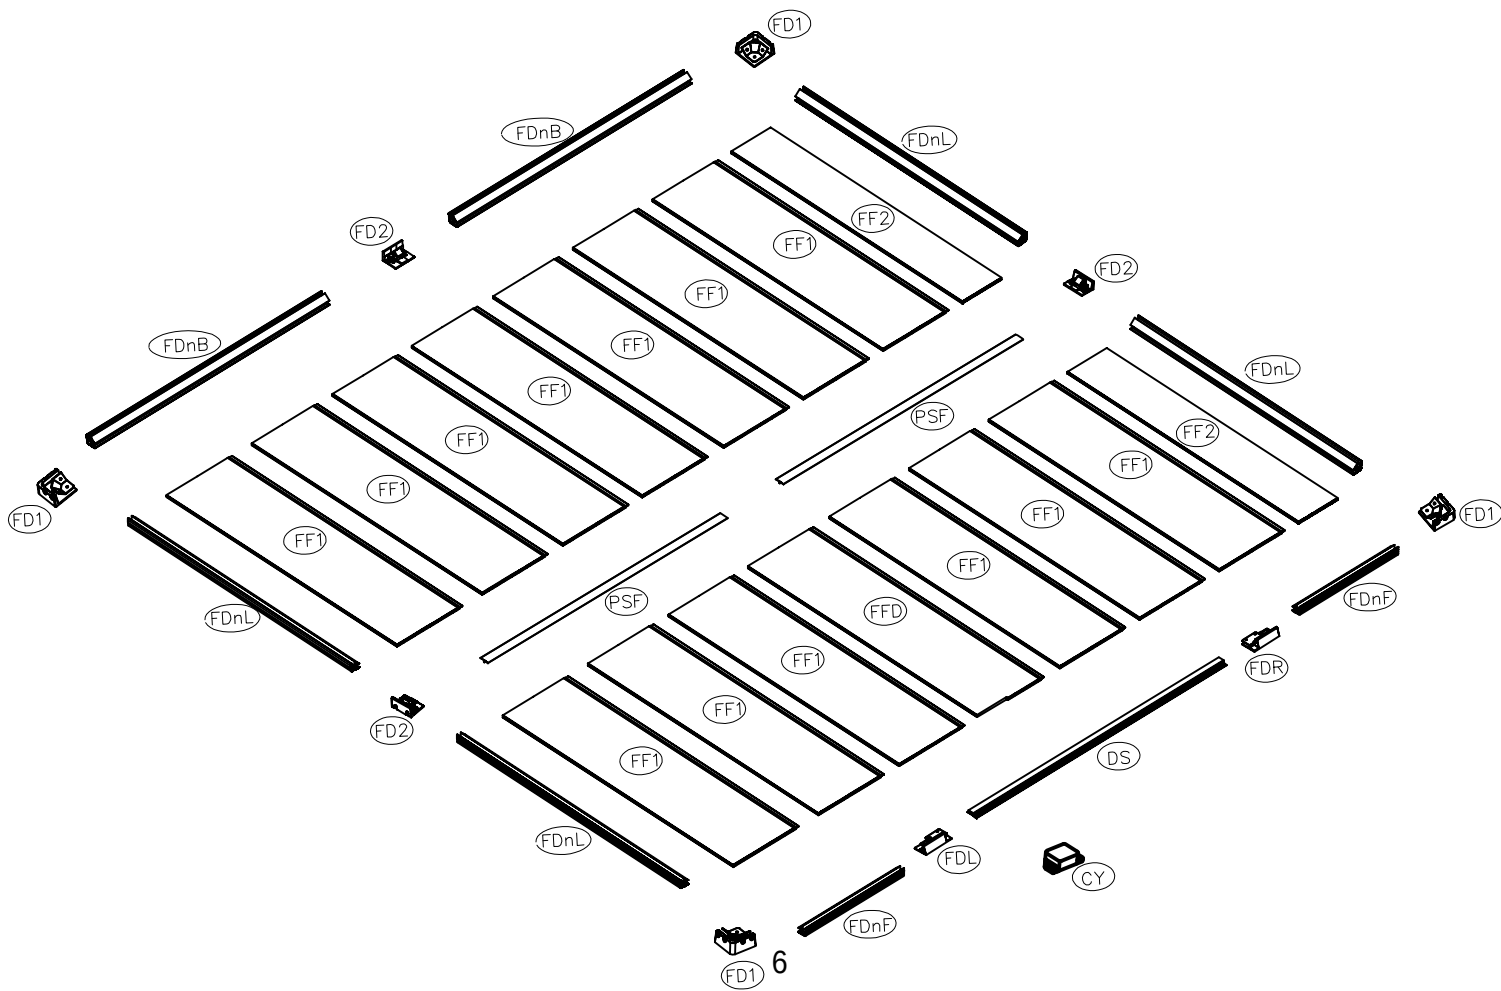

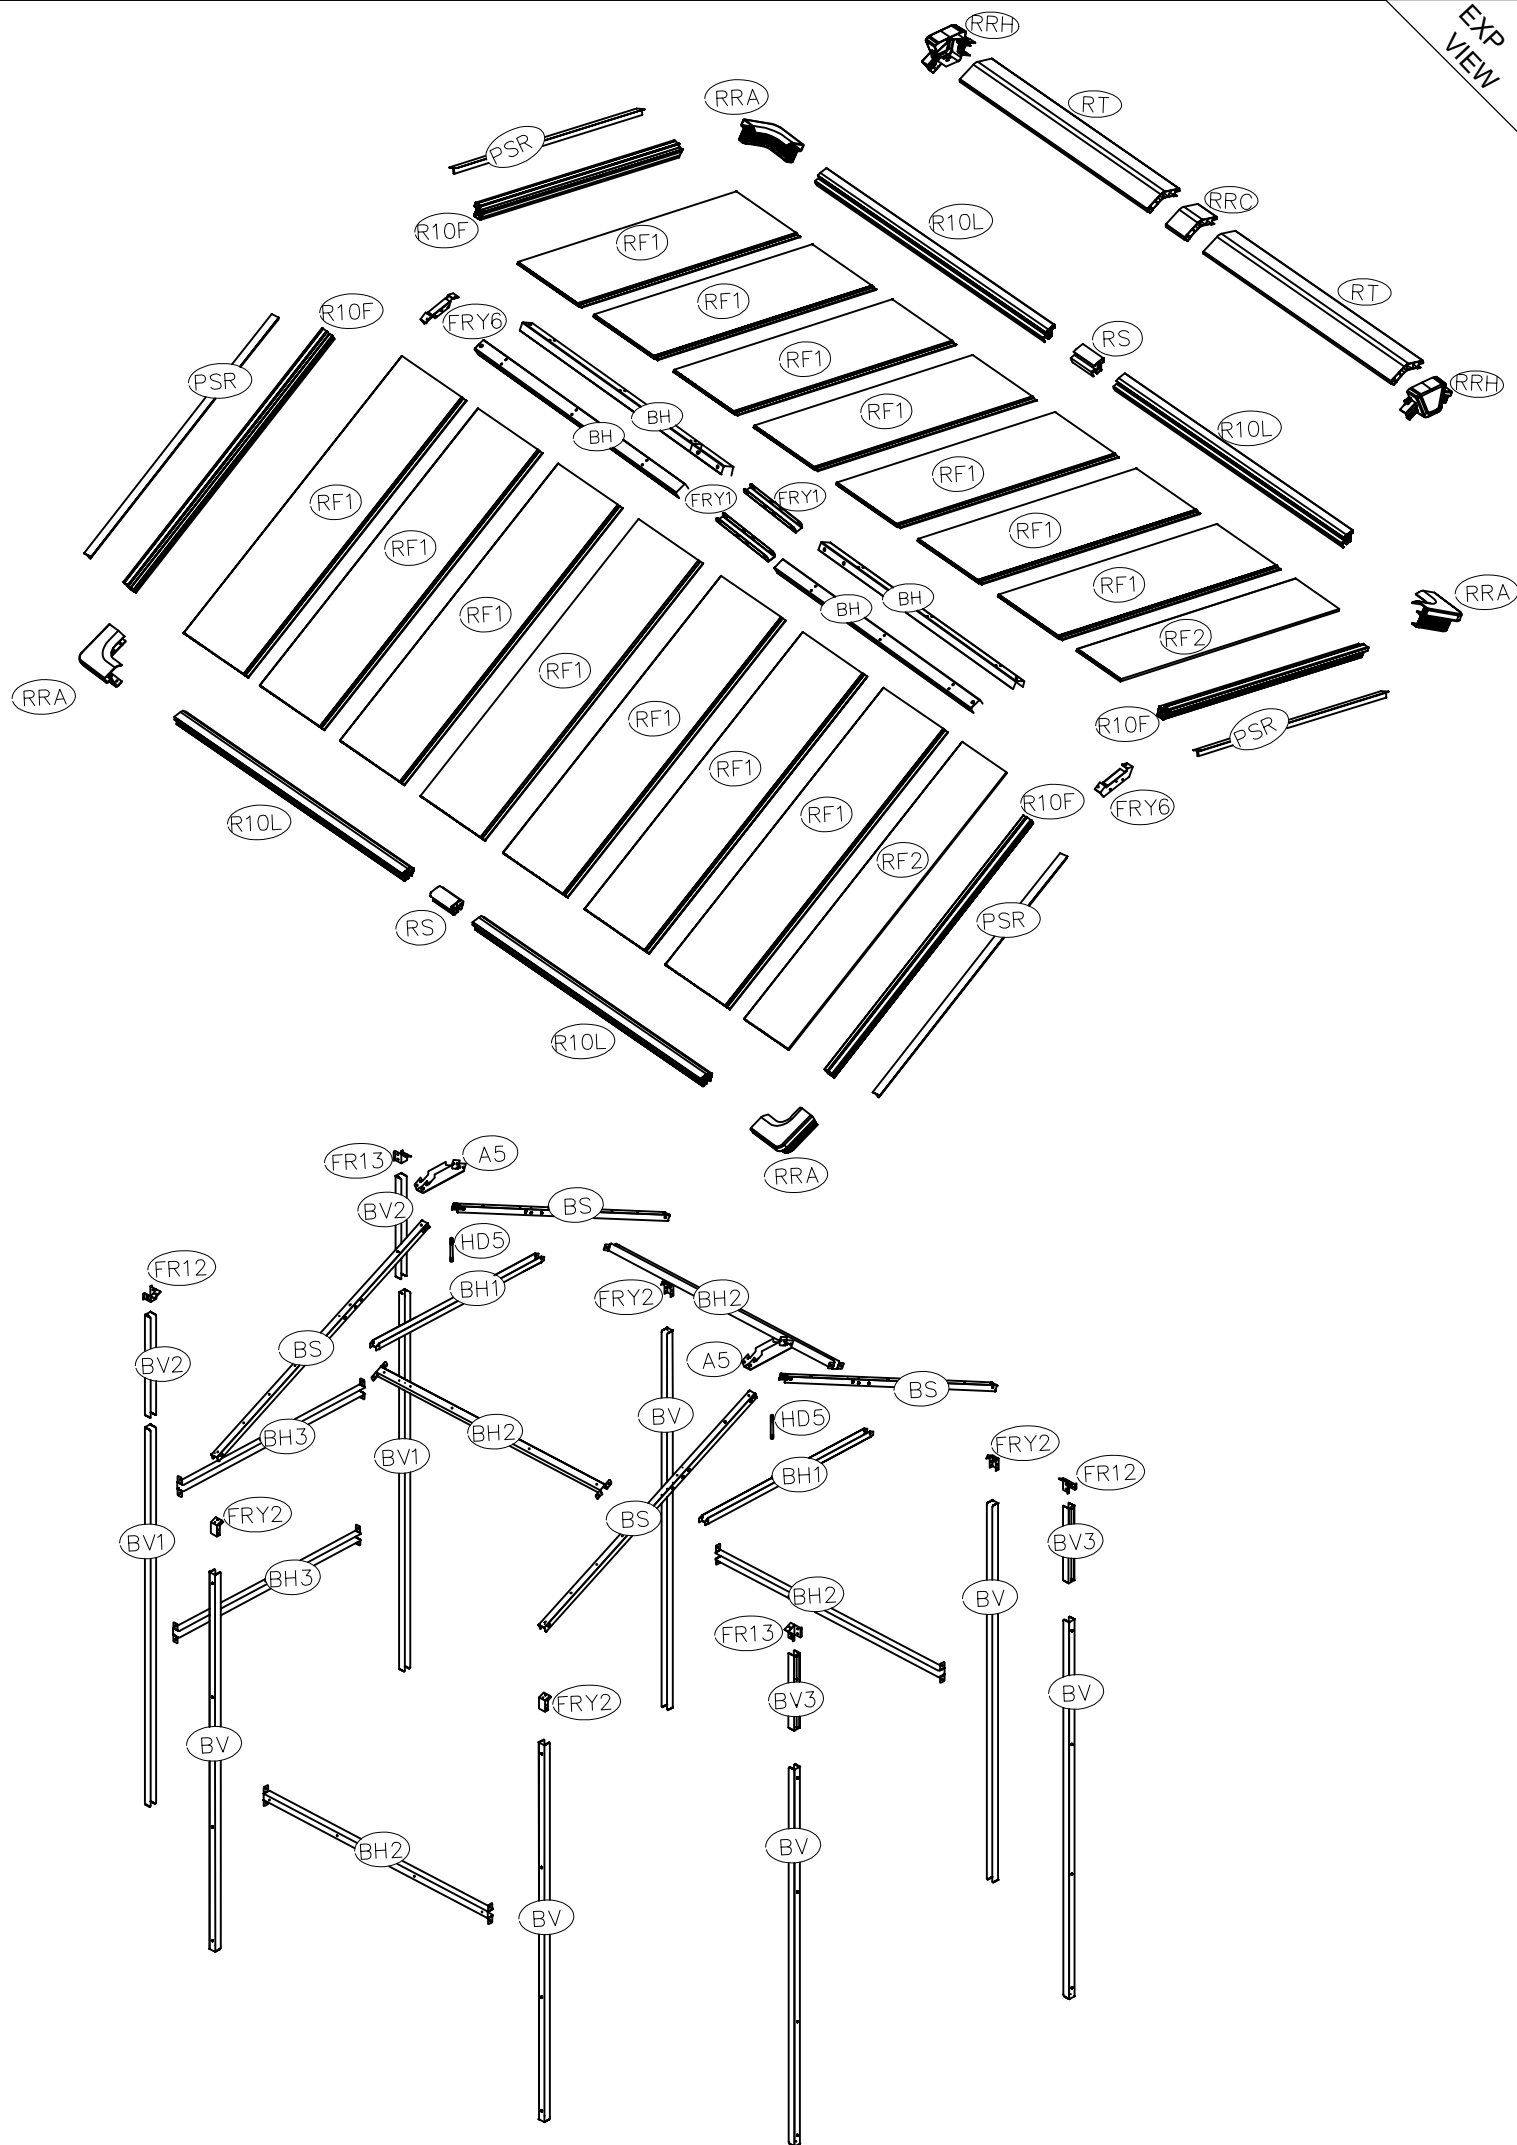


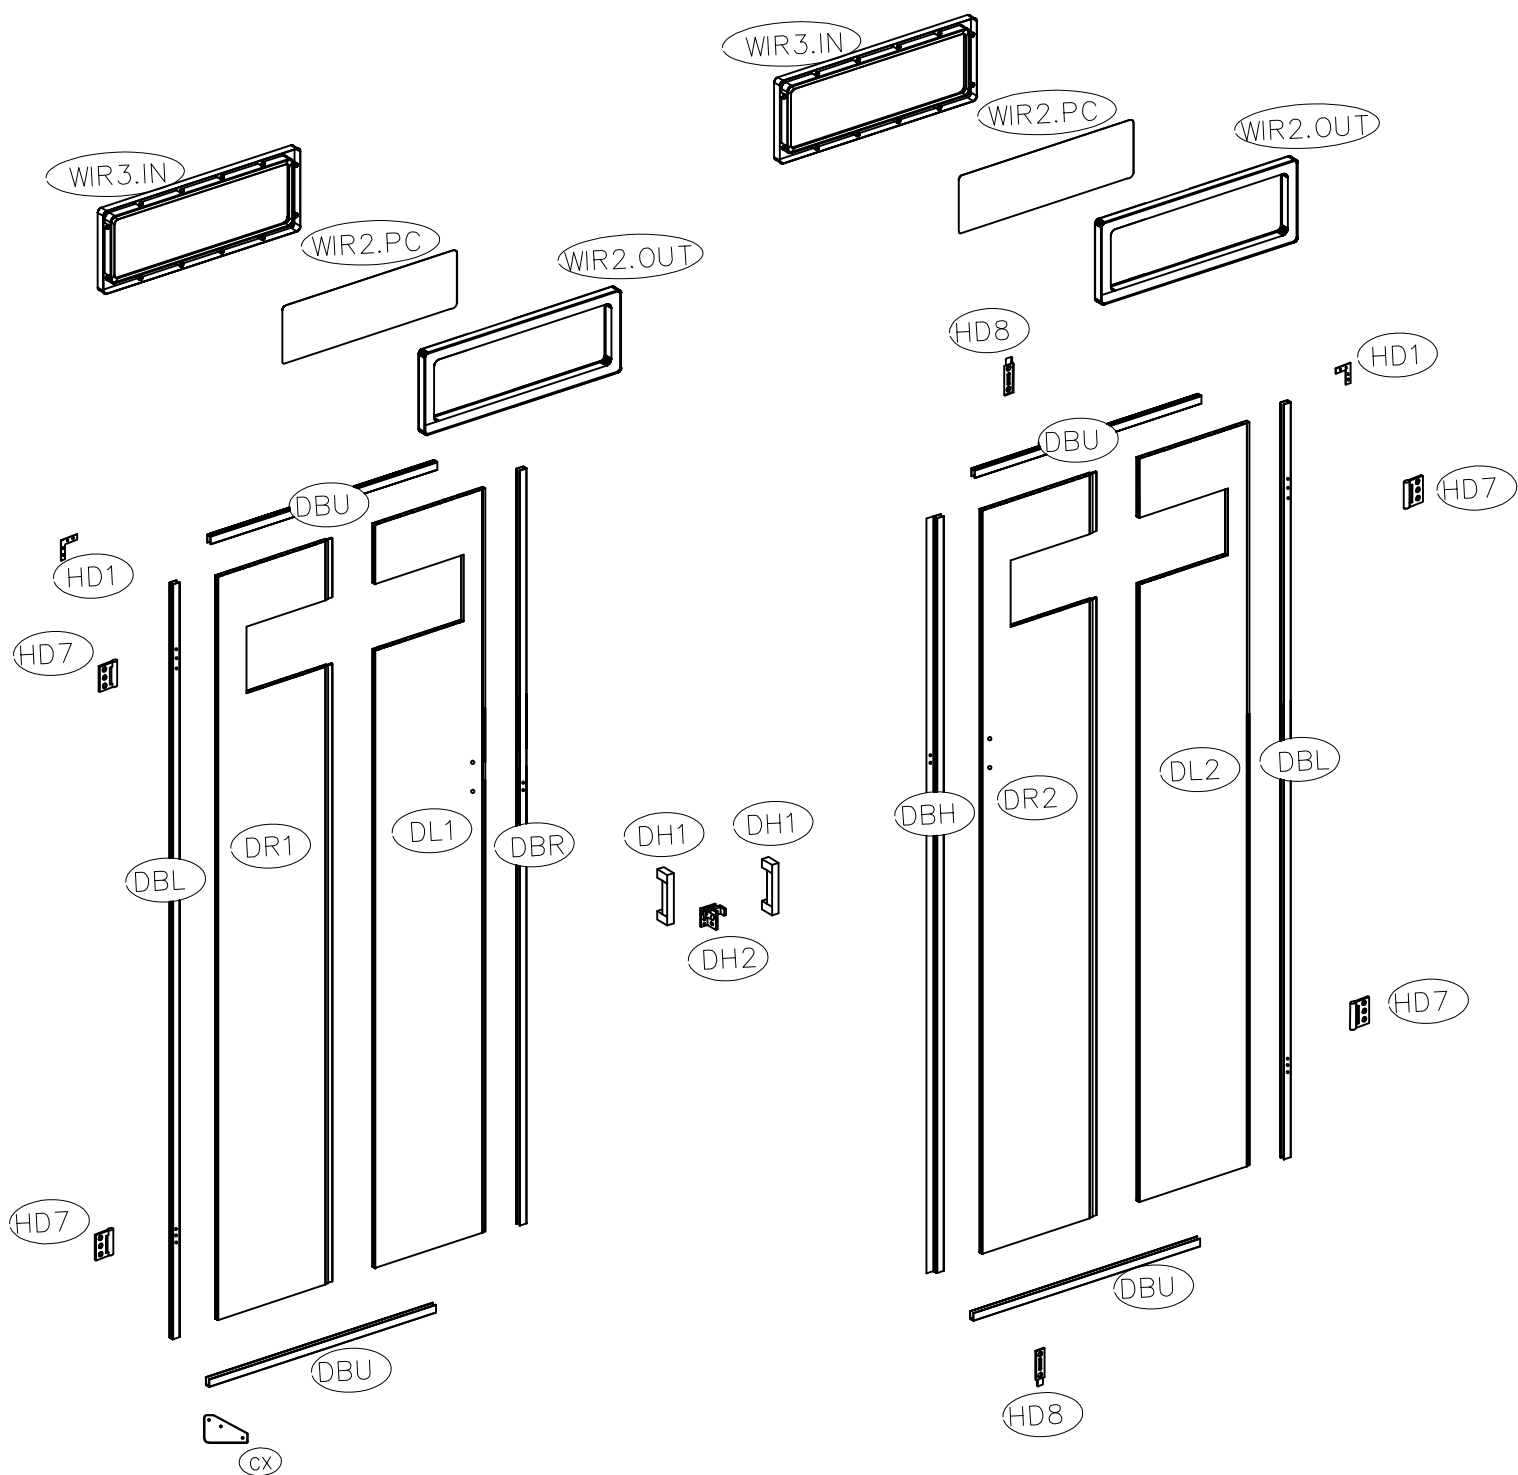







FLOOR

Item no.	Reference Image	Qty.
DS	1165mm 	X1
FDnB	1120mm 	X2
FDnL	1107mm 	X4
FDnF	482mm 	X2
FD1		X4
FD2		X3
FDR		X1
FDL		X1
FF1	1148mm*300mm 	X13
FF2	1148mm*230mm 	X2
FFD	1148mm*300mm 	X1
PSF	1140mm 	X2










[illegible]

WALL














Item no.	Reference Image	Qty.
WL	1143mm*300mm 	X16
WLF	1143mm*130mm 	X4
WLD1	1143mm*300mm 	X1
WLD2	1143mm*300mm 	X1
WRD1	1143mm*300mm 	X1
WRD2	1143mm*300mm 	X1
WB	1158mm*300mm 	X10
WBD1	1158mm*300mm 	X1
WBD2	1158mm*300mm 	X1
WFD1	565mm*300mm 	X1
WFD2	565mm*300mm 	X1
WBD3	1704mm*300mm 	X1
WBD4	588mm*135mm 	X1
WFD3	1906mm*300mm 	X1

Item no.	Reference Image	Qty.
WFD4	791mm*190mm 	X1
WF	565mm*300mm 	X8
WFF	565mm*261mm 	X2
PJCL	1595mm 	X2
PJCB	1795mm 	X1
VNR10		X2
DW-OUT	548mm*386mm 	X2
DW-IN	548mm*386mm 	X2
WIR10.PC	483mm*321mm 	X2
FDnV	1630mm 	X4




DOOR

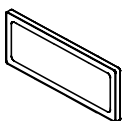Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
DAL	1758mm 	X1	HD7		X4
DAR	1758mm 	X1	DH1		X2
DAU	1245mm 	X1	DH2		X1
DBL	1745mm 	X2	HD1		X2
DBR	1745mm 	X1	HD8		X2
DBU	589mm 	X4	CX		X1
DBH	1745mm 	X1	CY		X1
DR1	1740mm*300mm 	X1			
DL1	1740mm*285mm 	X1			
DL2	1740mm*300mm 	X1			
DR2	1740mm*285mm 	X1			
WIR2.OUT		X2			
WIR2.PC	459mm*159mm 	X2			
WIR3.IN		X2			


ROOF

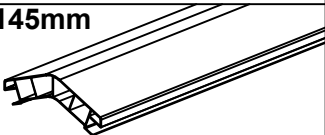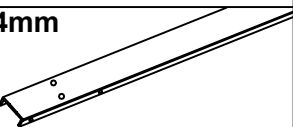Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
RF2	1270mm*245mm 	X2	BH3	1000mm 	X2
RF1	1270mm*300mm 	X14	A5		X2
R10L	1110mm 	X4	RS		X2
R10F	1210mm 	X4	BS	1225mm 	X4
RT	1145mm 	X2	FR12		X2
PSR	1210mm 	X4	FR13		X2
RRH		X2	BV	1615mm 	X6
RRA		X4	BV1	1635mm 	X2
RRC		X1	FRY2		X4
BH	1154mm 	X4	BV2	607mm 	X2
FRY6		X2	BV3	357mm 	X2
FRY1	240mm 	X2			
BH1	885mm 	X2			
BH2	1200mm 	X4			


ACCESSORY

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
FT1 (M5x14)		X160	GLOVE		X2
FT2 (M4x8)		X255	OPEN END WRENCH		X1
FT3 (M5x20)		X88	HEXSOCKET		X1
FT14B		X4	FT12 (M8*80)		X4
FT14 (M8*20)		X4	FT11 (M4x12)		X66
FT7 (M6*40)		X72	FT9 (M6)		X2
FT7A (M6)		X78	FT10 (M6)		X2
FT8 (M6x16)		X4	HD5 (M6*230)		X2
FT14A (M8)		X4			
Rubber sealing strip		X1			
HAMMER		X1			

1




FD1
4pcs




FDnB
2pcs



FD2
3pcs



FDL
1pc



FDR
1pc




DS
1pc



FDnL
4pcs



FDnF
2pcs

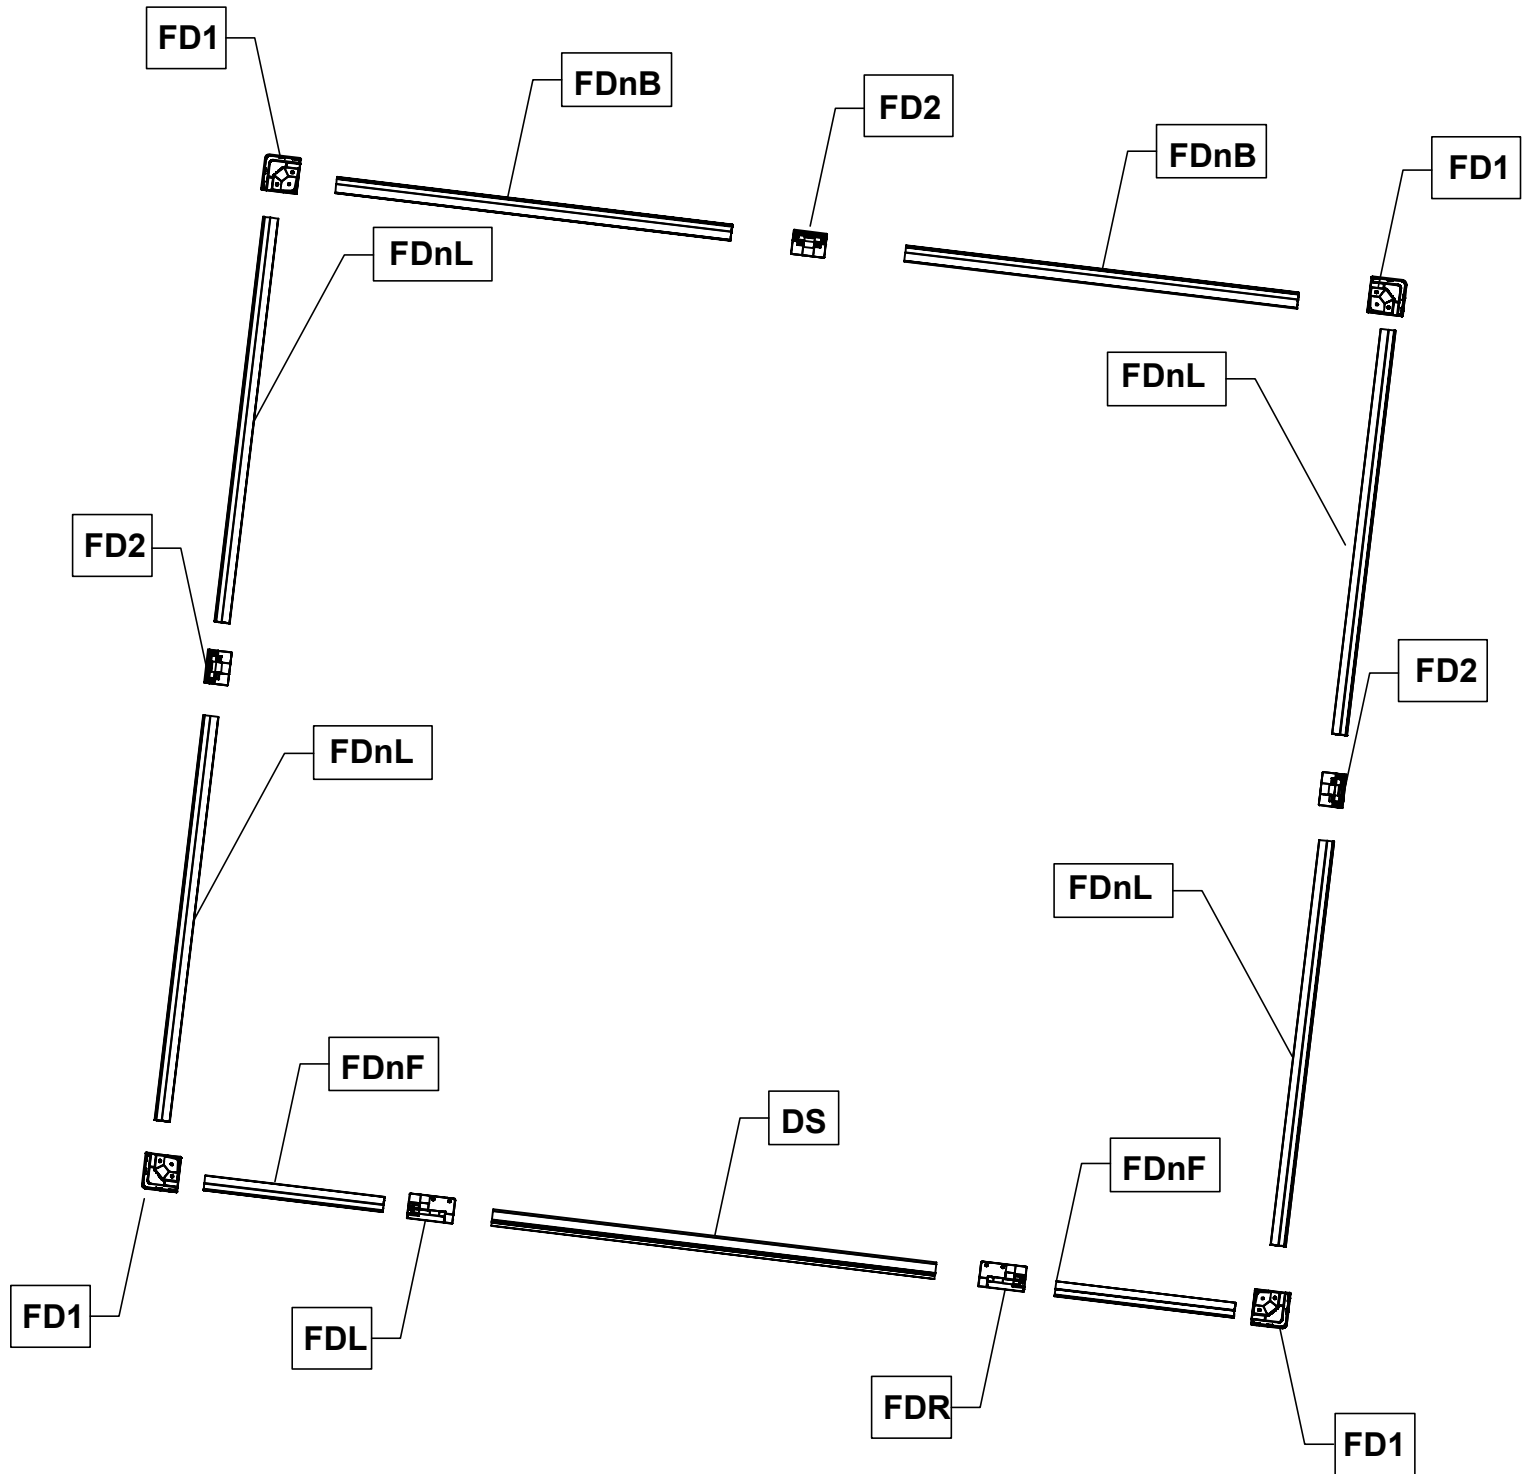

ASSEMBLY INSTRUCTIONS

2




FT1
4pcs



FT3
4pcs

Don't install the right side first



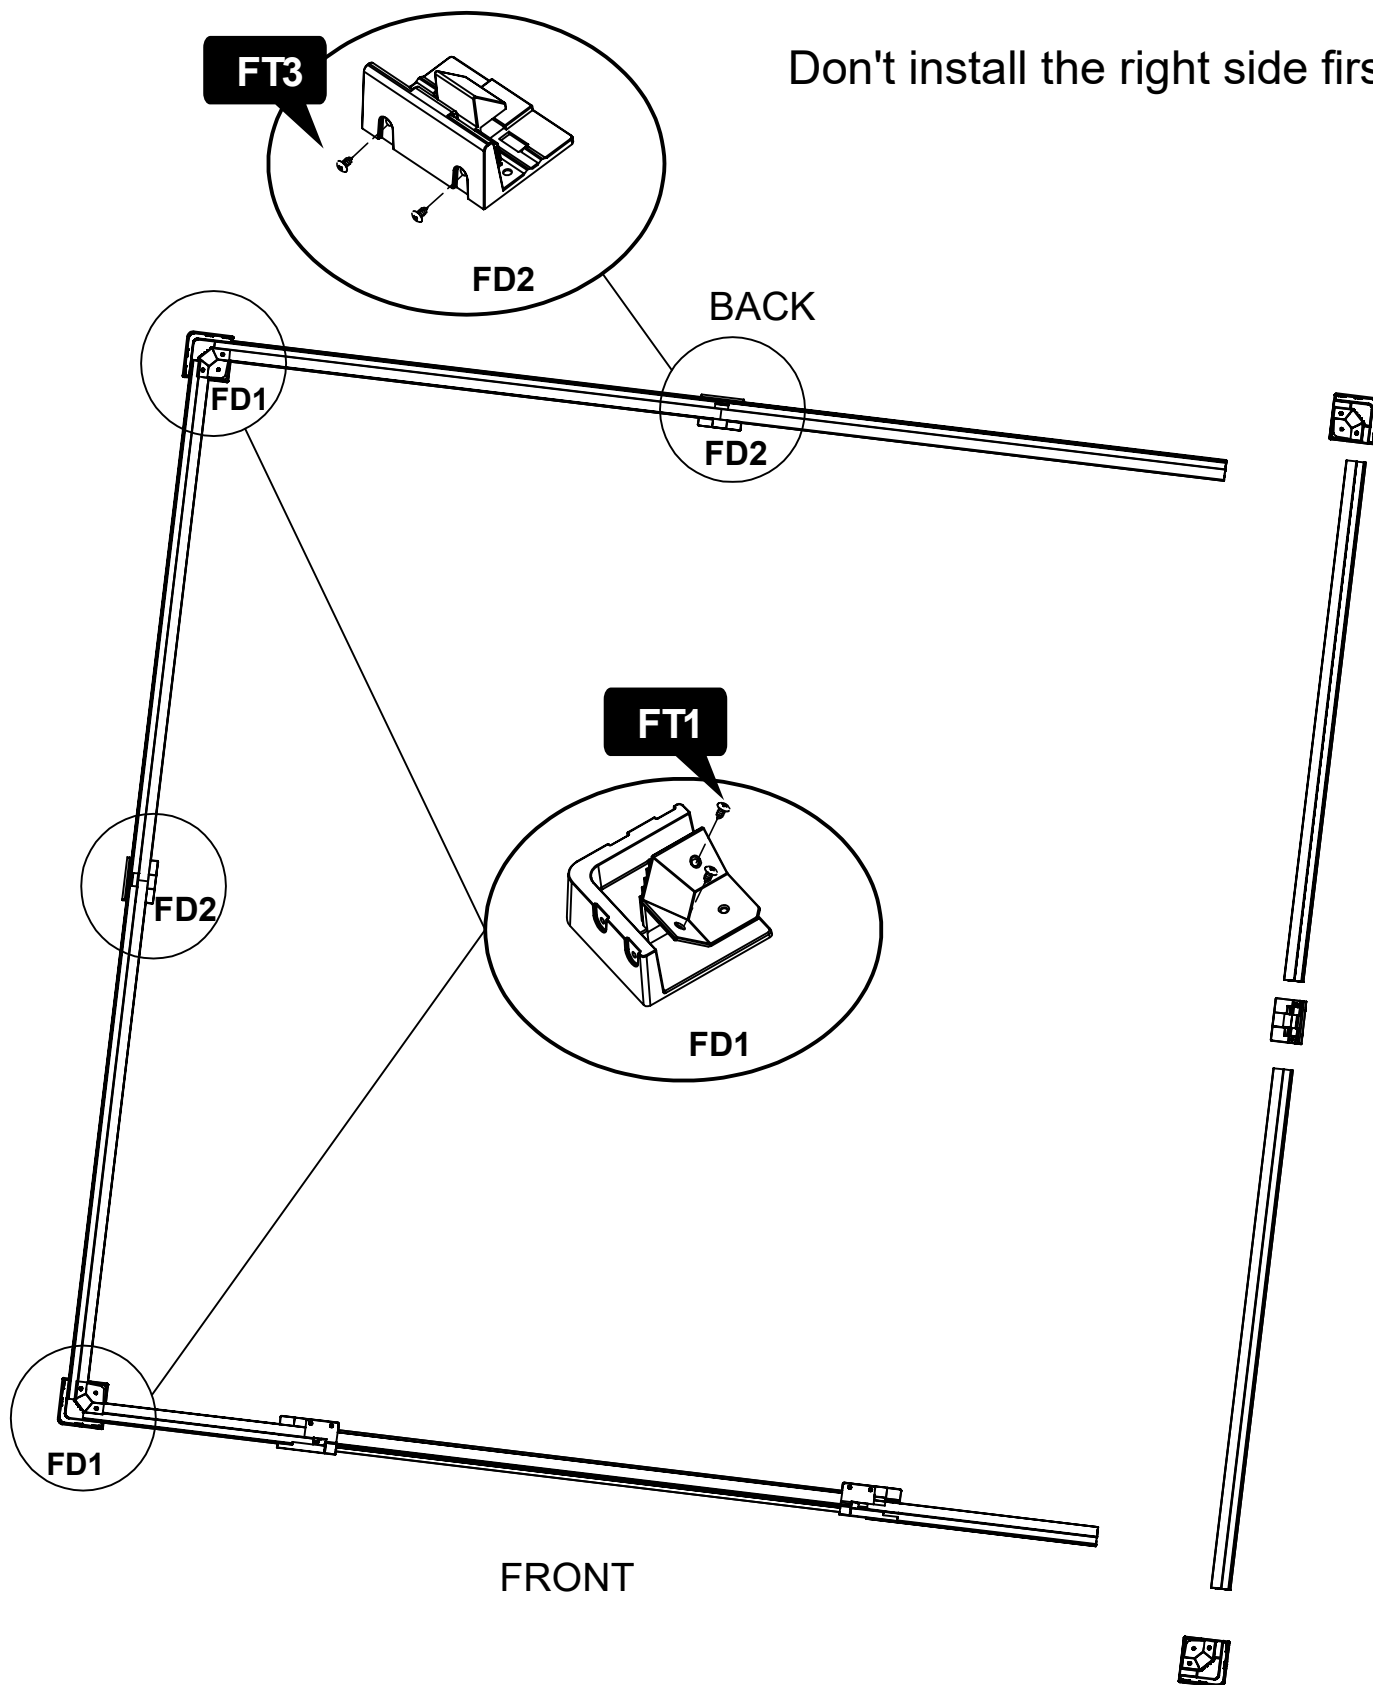


ASSEMBLY INSTRUCTIONS






3

FF1
7pcs

FFD
1pc

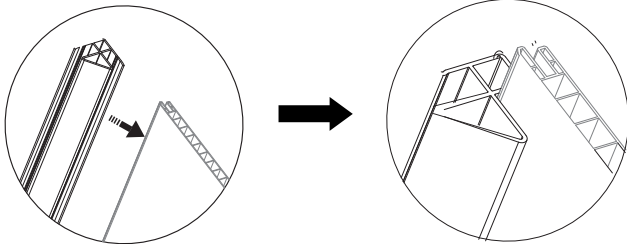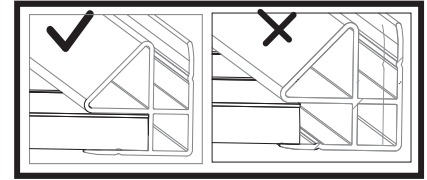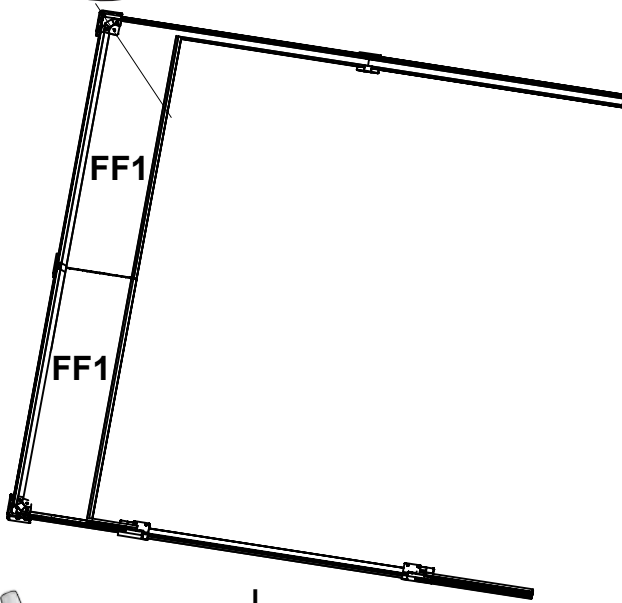


NOTE: Keep boards closely connected. Tap tight with a hammer if there are gaps.

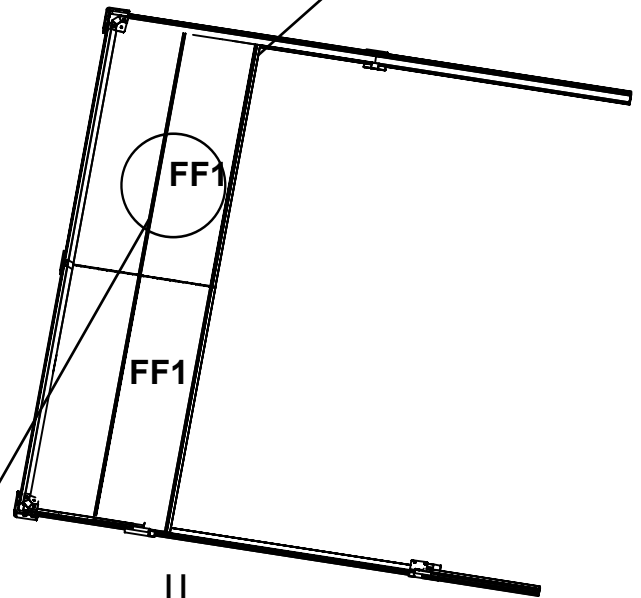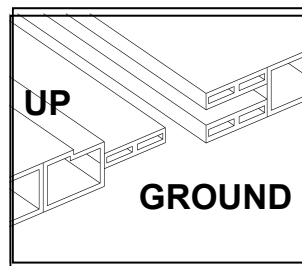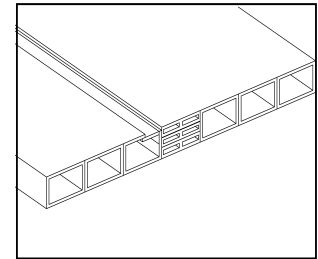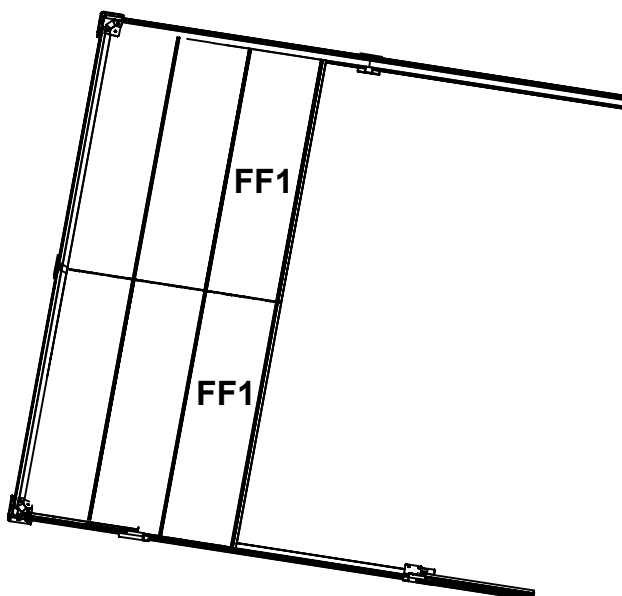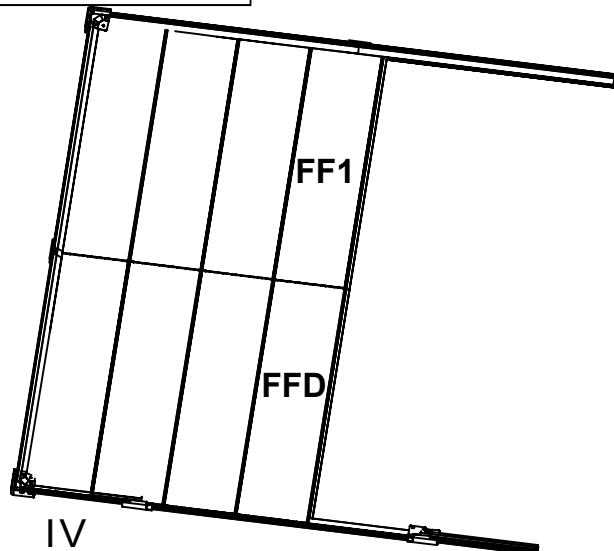


When installing FFD, insert the floor panel fully into place.

ASSEMBLY INSTRUCTIONS

4



FF1
6pcs










FF2
2pcs



FT1
4 pcs



FT3
2pcs

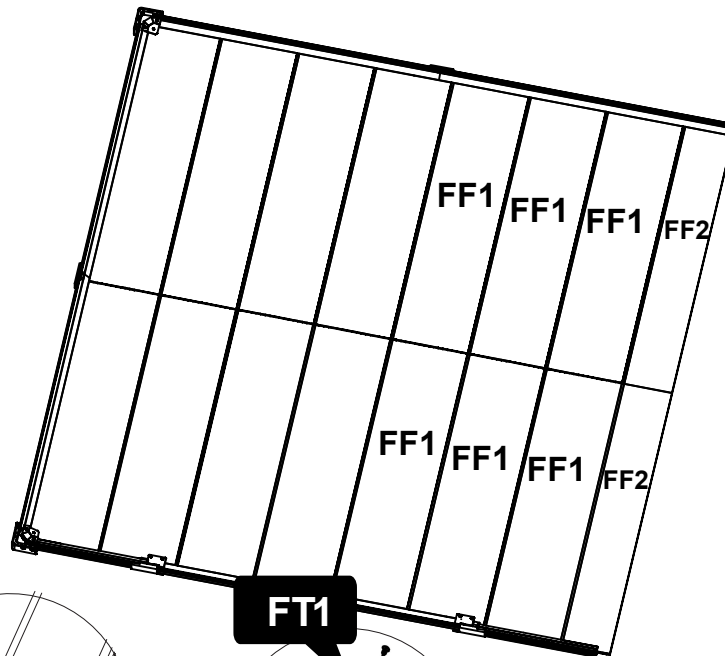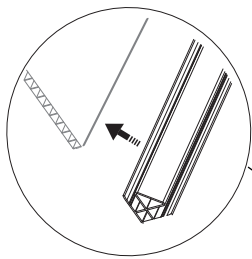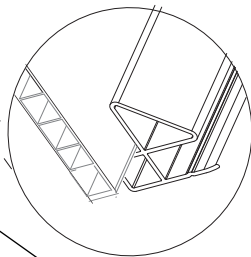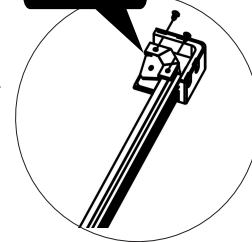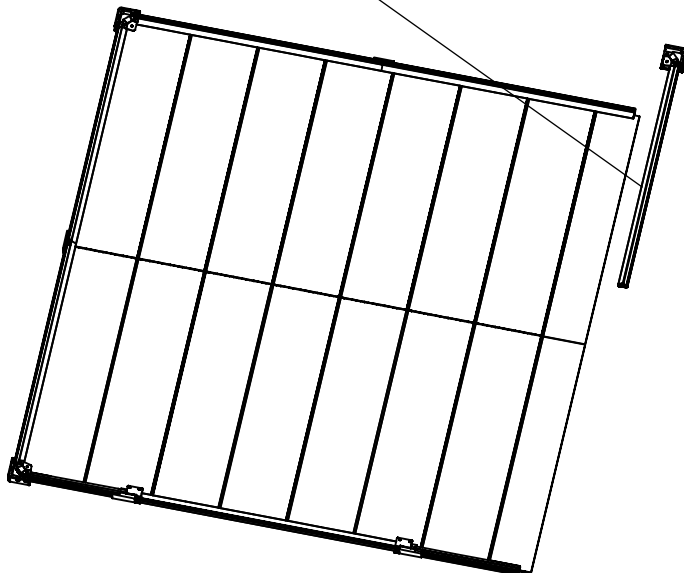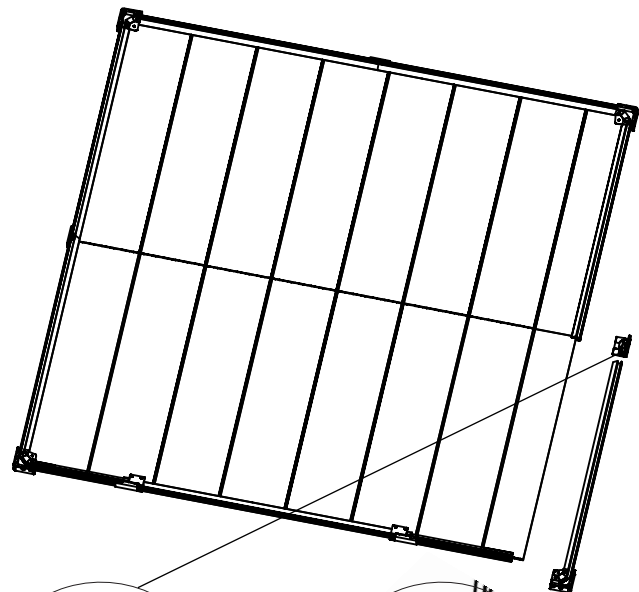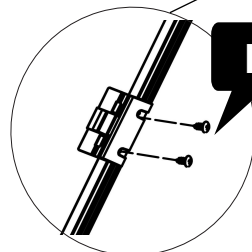


FT3

FT1

ASSEMBLY INSTRUCTIONS

5




PSF
2pcs



FT1
14pcs



FT2
12pcs

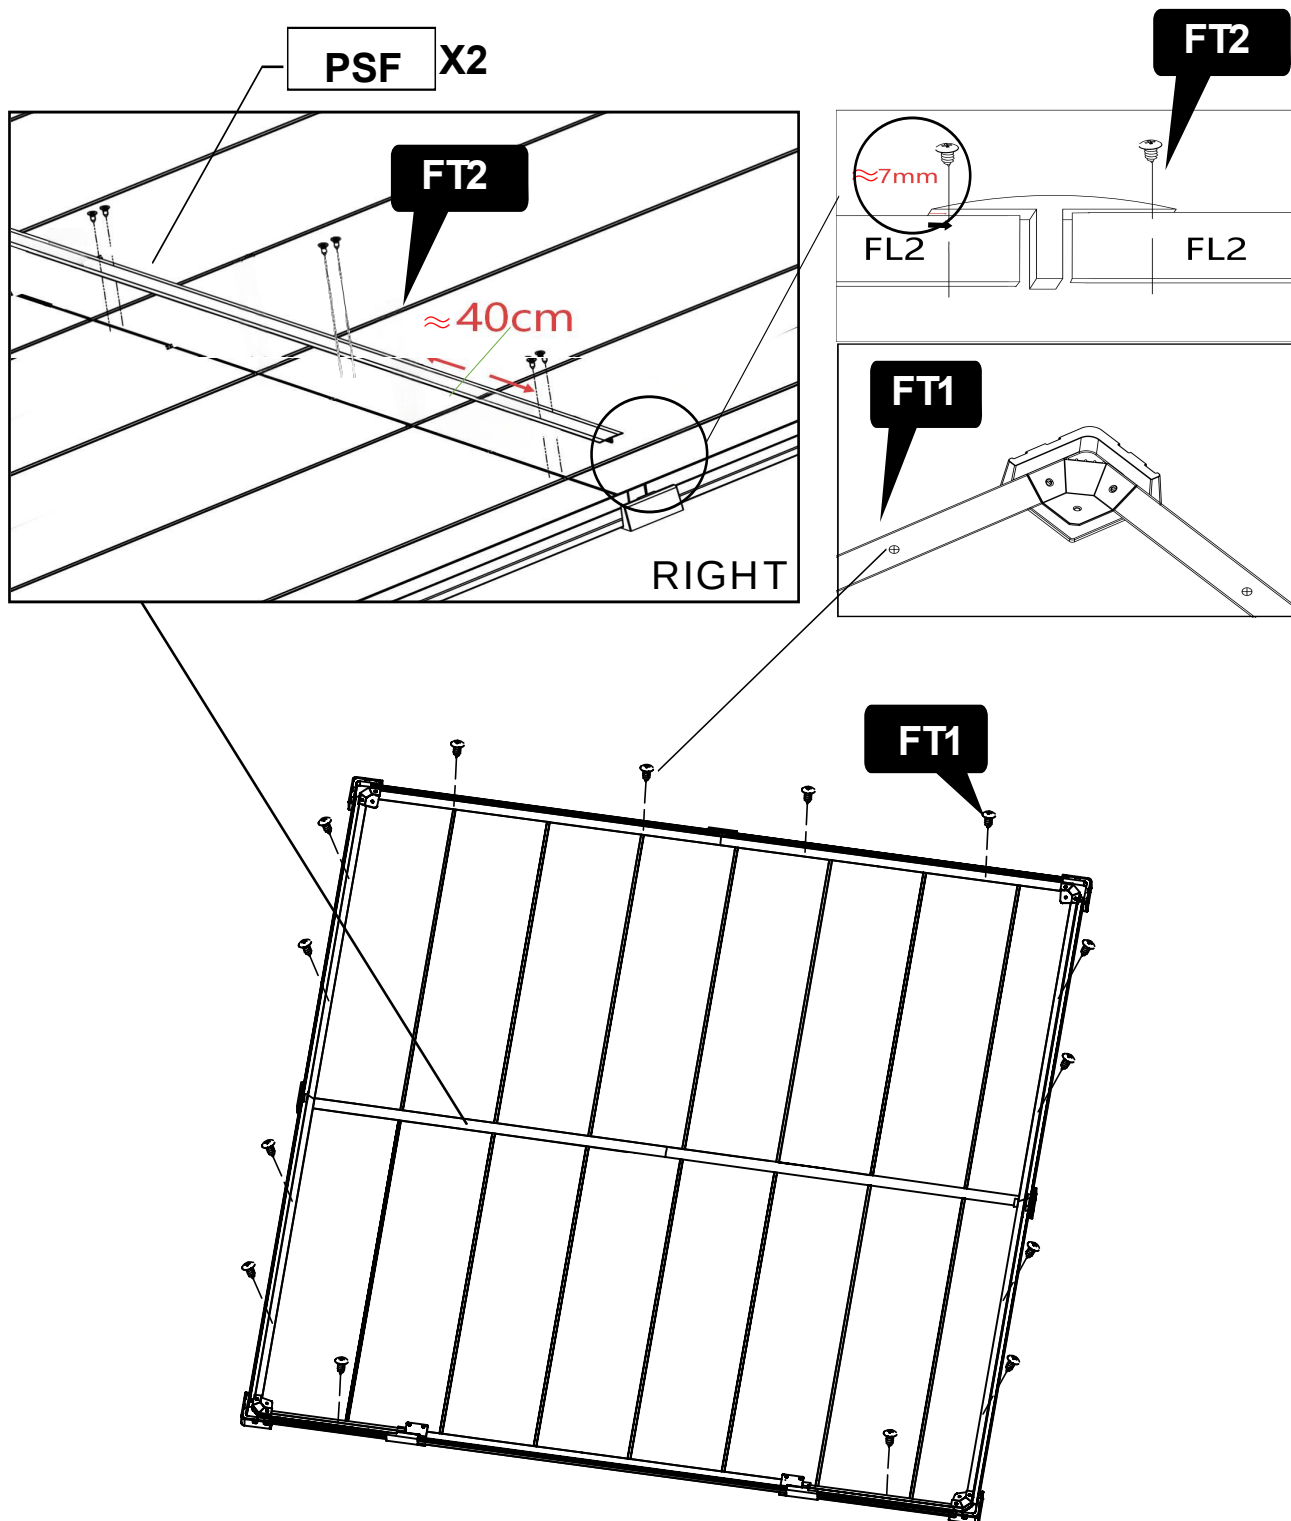

EVEN SPACING OF SCREWS

ASSEMBLY INSTRUCTIONS

6






CX
1pc



FT2
18pcs




FT11
2pcs

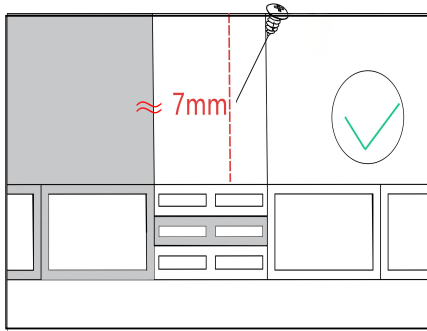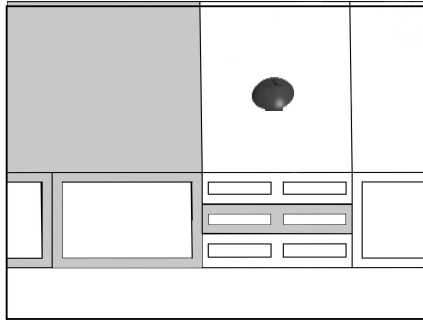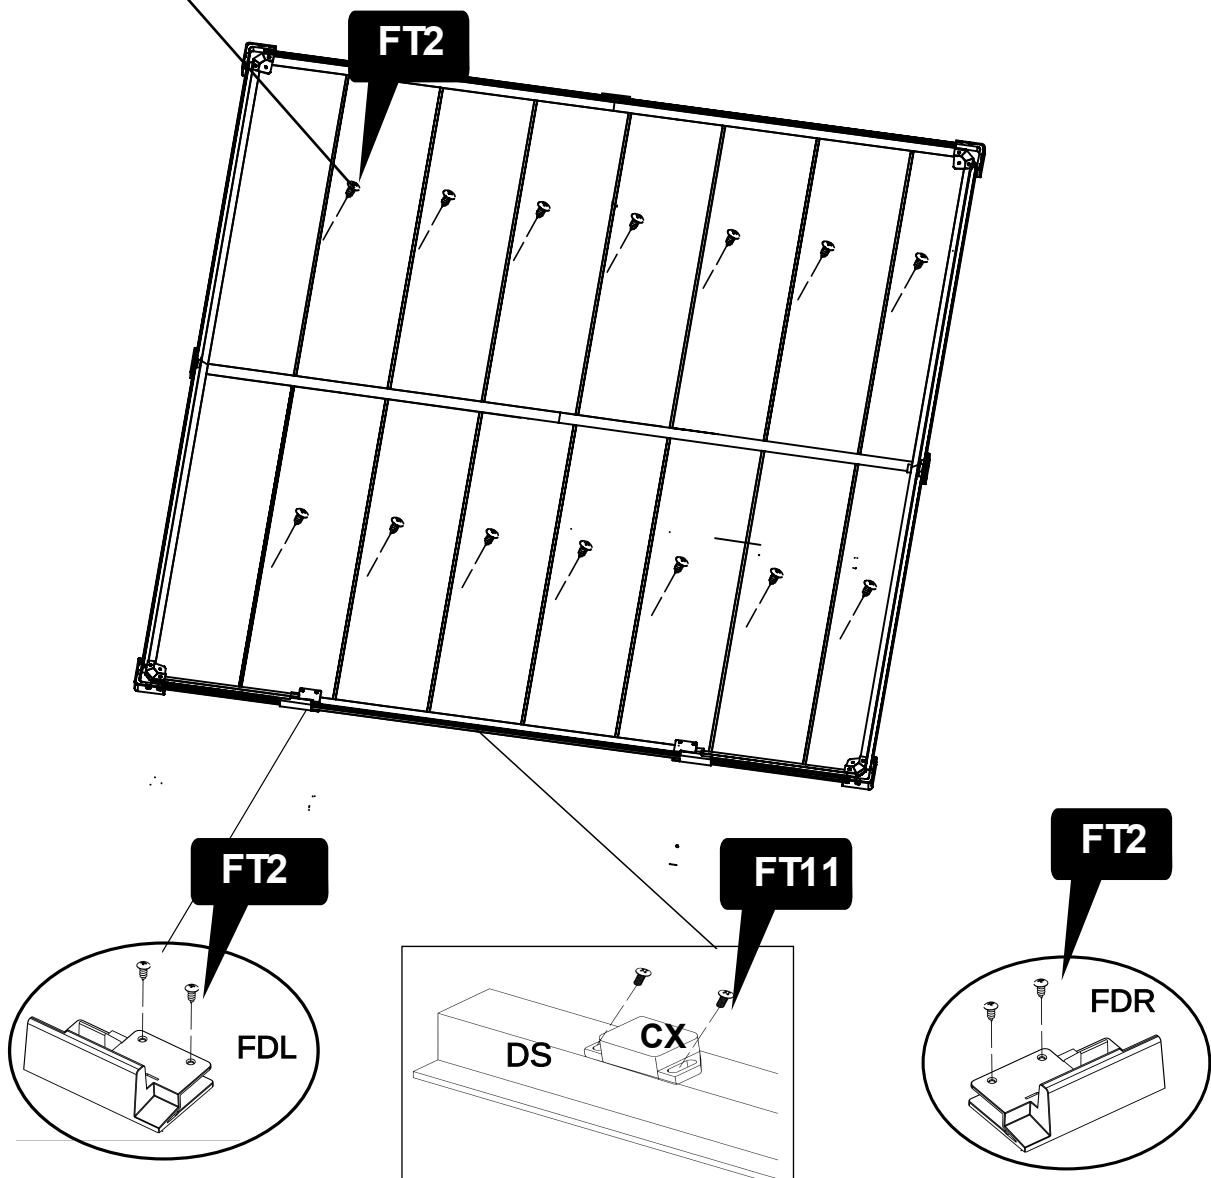

ASSEMBLY INSTRUCTIONS

7



FDnV
2pcs




WL
1pc





WB
1pc




FT3
4pcs

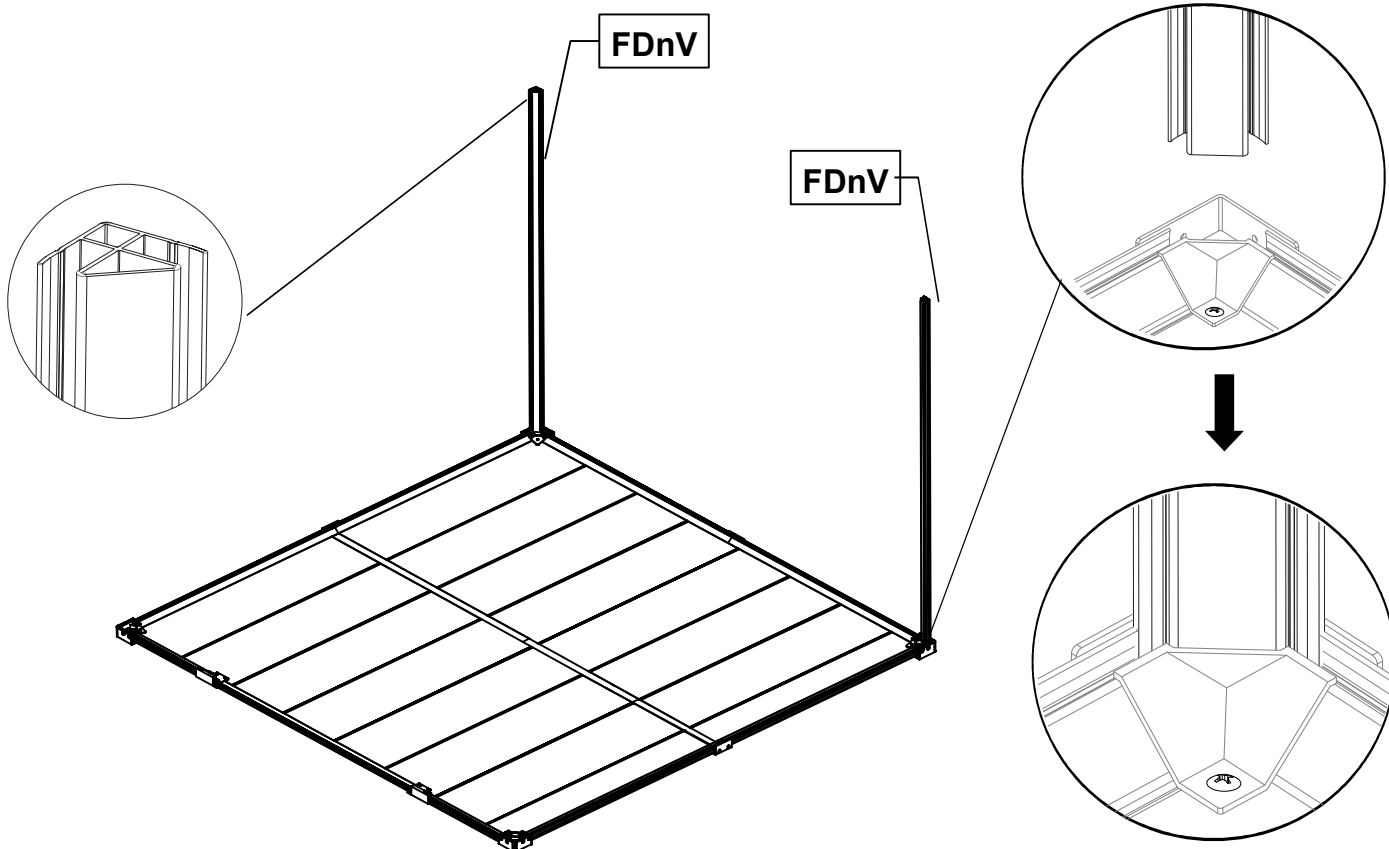

NOTE: Keep boards closely connected. Tap tight with a hammer if there are gaps.

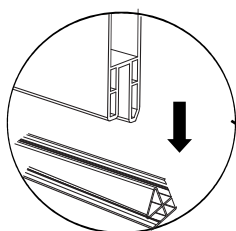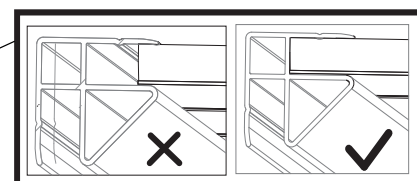

● Fully fit the panel inside the profile

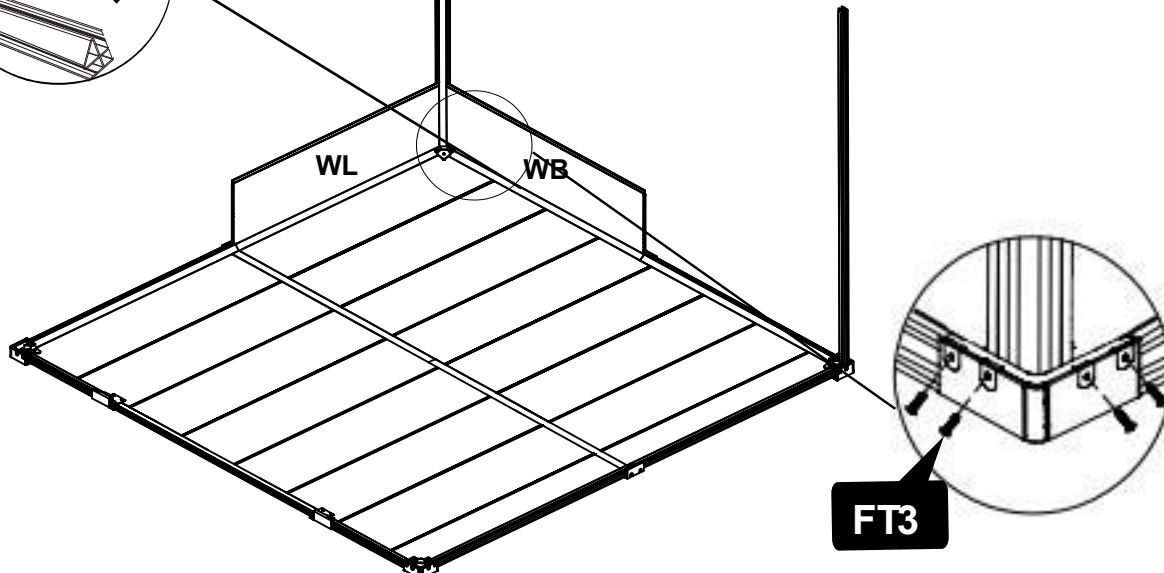

ASSEMBLY INSTRUCTIONS


8



WL
2pcs



WB
4pcs




WBD1
1pc



WLD2
1pc



WLD1
1pc



WLF
1pc











PJCL
1pc



PJCB
1pc




FT1
12pcs

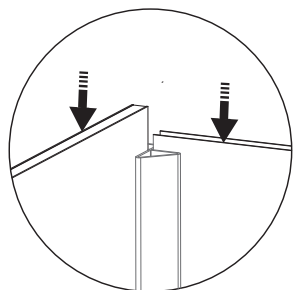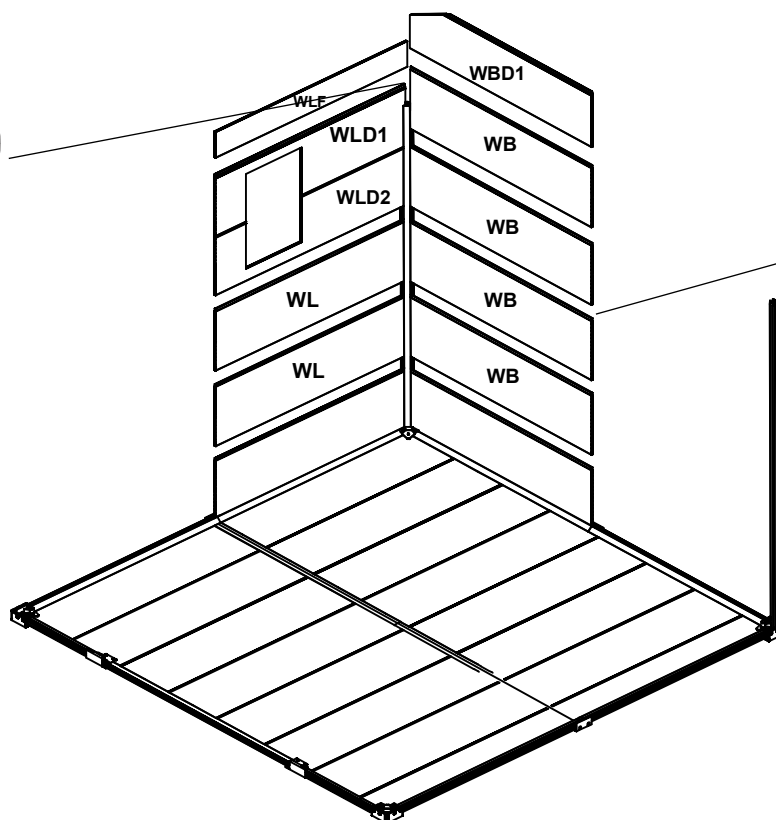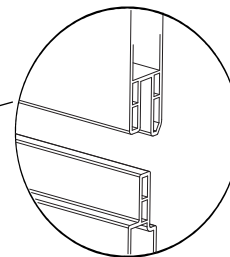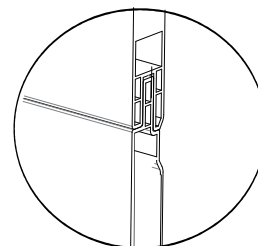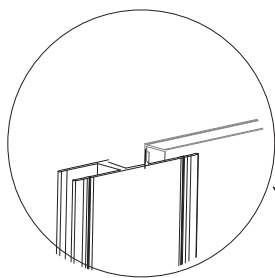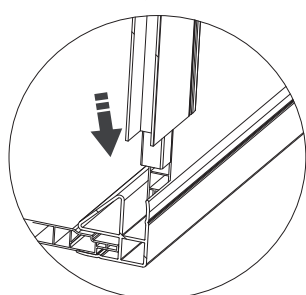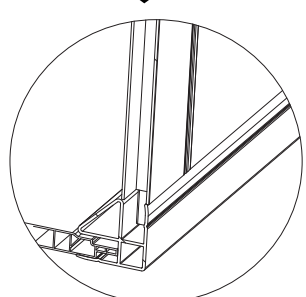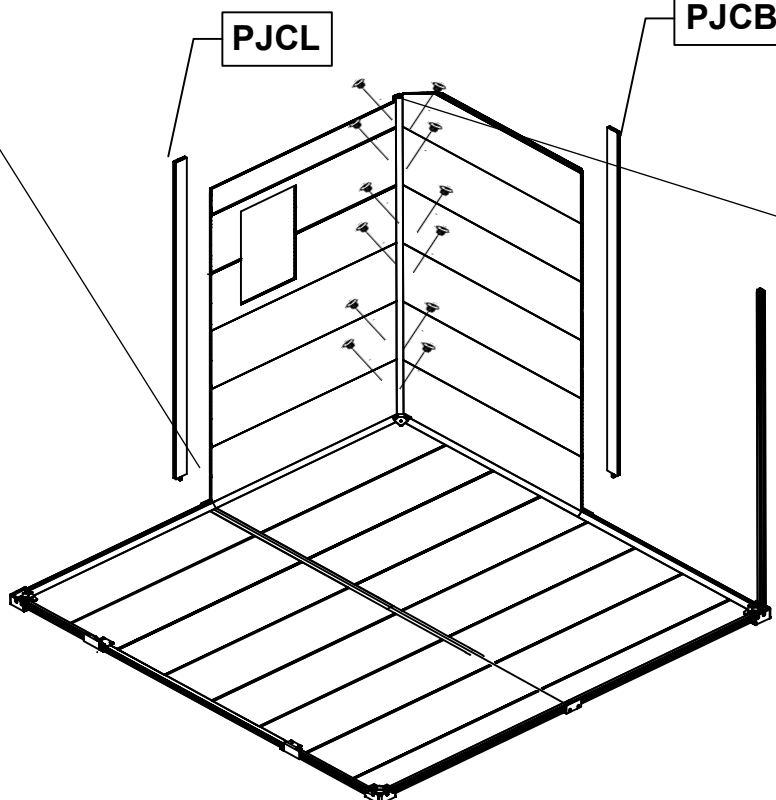

PJCL


PJCB

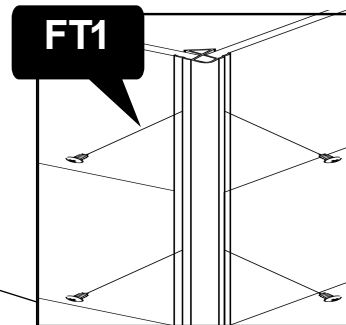

FT1

ASSEMBLY INSTRUCTIONS

9



FDnV
2pcs



WRD1
1pc



WRD2
1pc




WBD2
1pc



WL
13pcs



WB
5pcs



WLF
1pc





FT2
18pcs





PJCL
1pc



FT3
4pcs

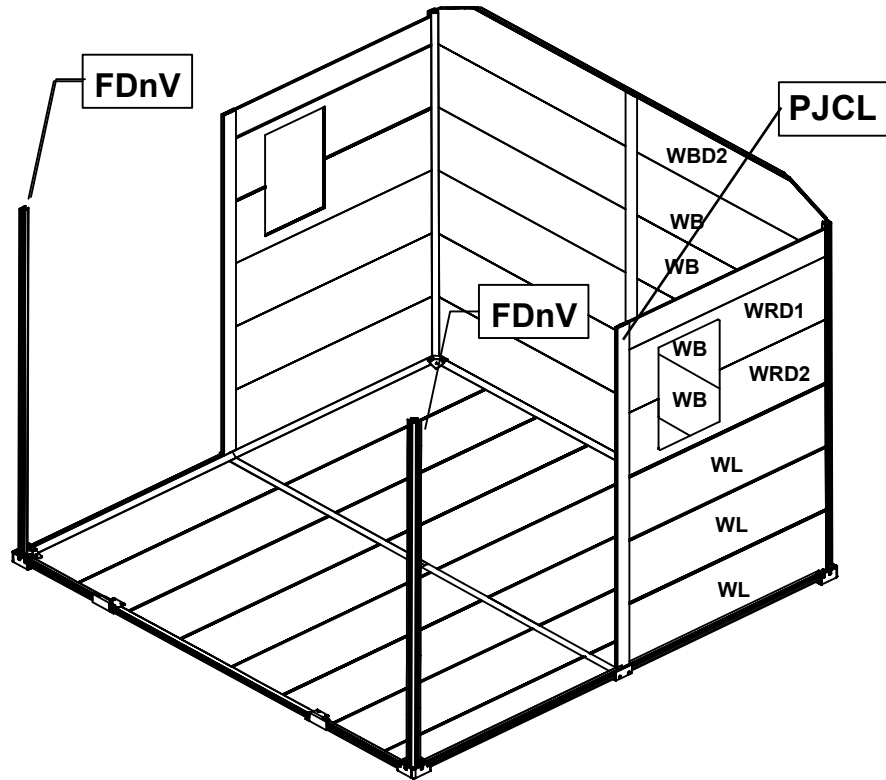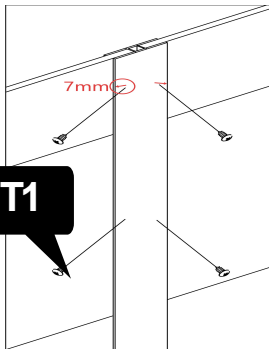

FT1

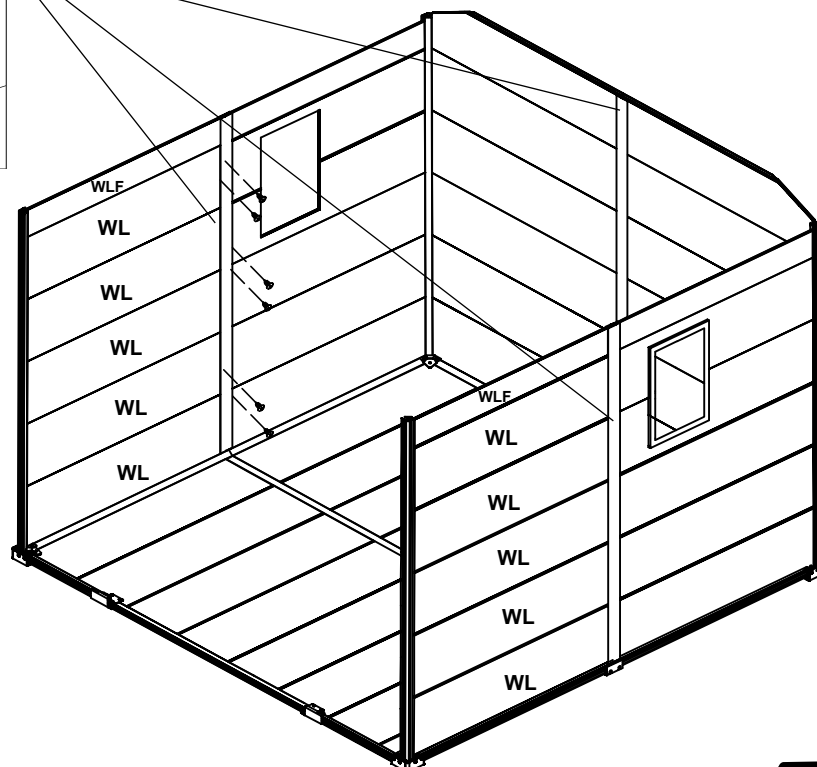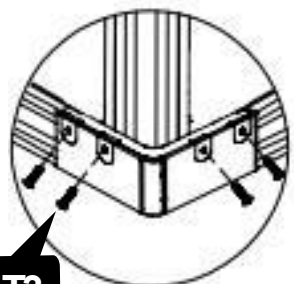

FT3

ASSEMBLY INSTRUCTIONS

10



WFD1
1pc



WFD2
1pc



WF
8pcs







FT1
36pcs




FT3
8pcs



WFF
2pcs

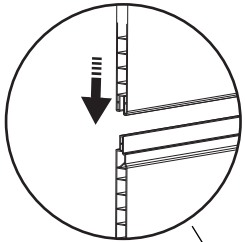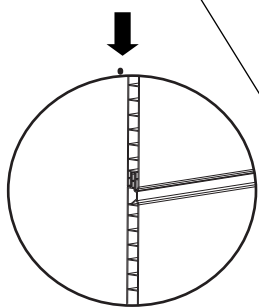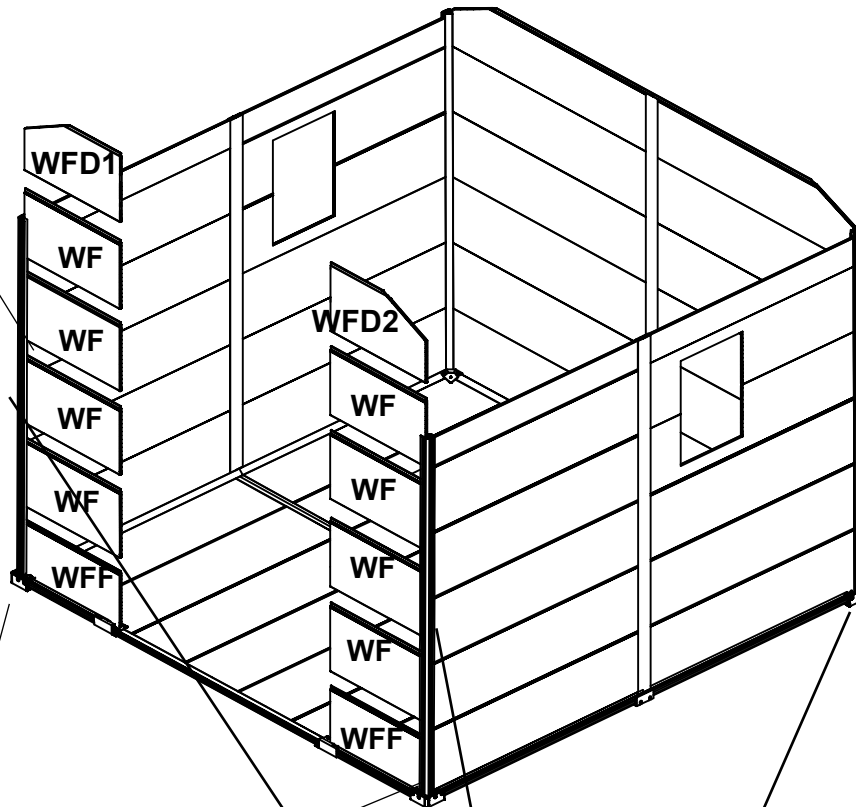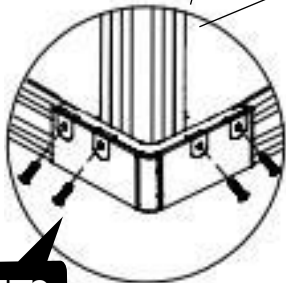

FT3

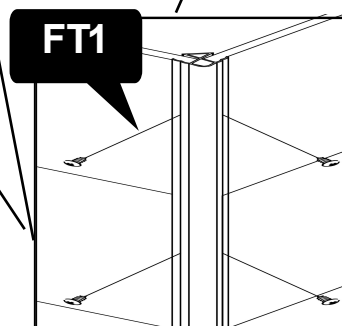

FT1

ASSEMBLY INSTRUCTIONS

11



DAL
1pc





DAR
1pc



FT2
10pcs



Insert DAL and DAR fully to the bottom, aligned evenly.

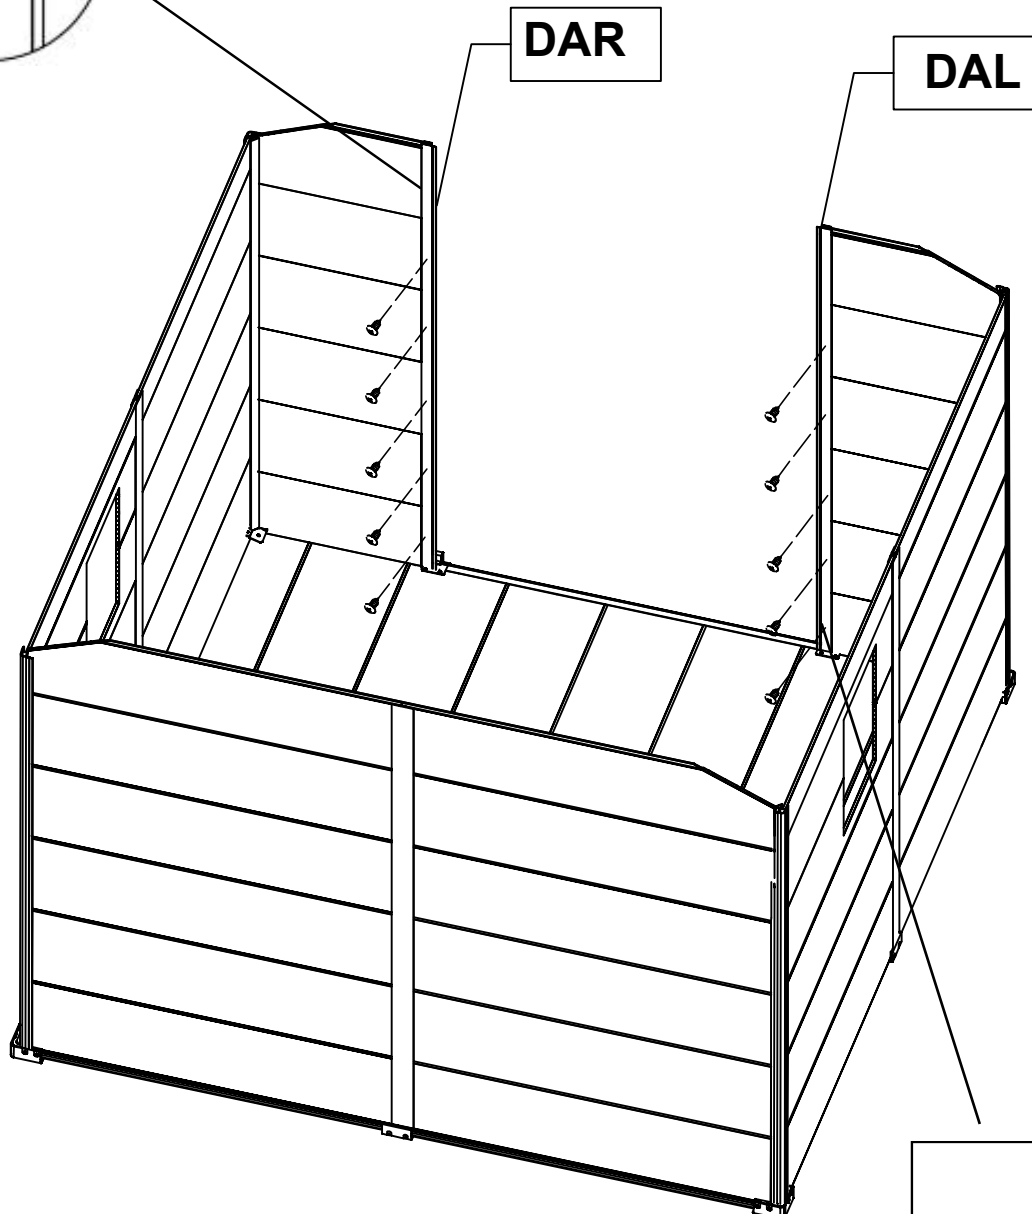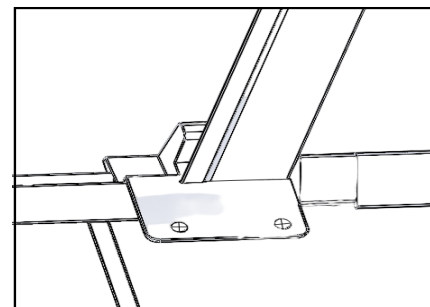

ASSEMBLY INSTRUCTIONS

12



DW-OUT
2pcs




DW-IN
2pcs



WIR 10.PC
2pcs




FT2
16pcs

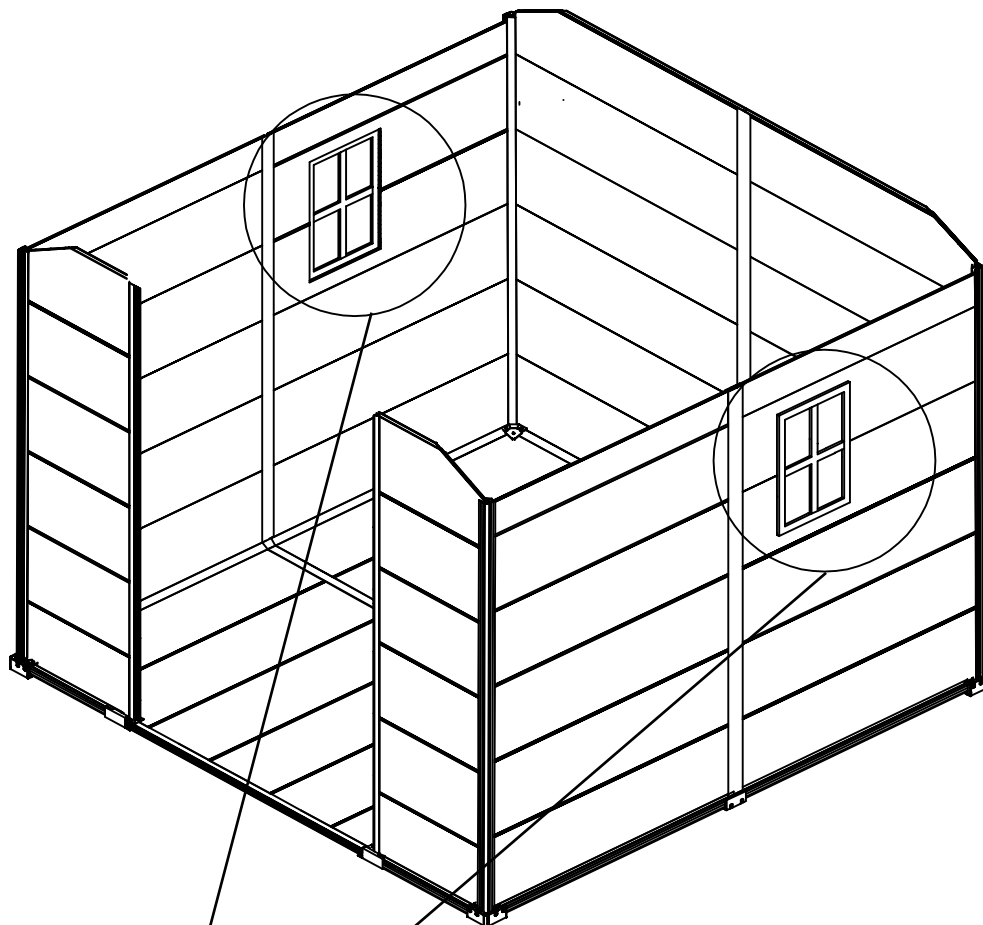


Tear off the protective film of the PC board before use.

DW-OUT

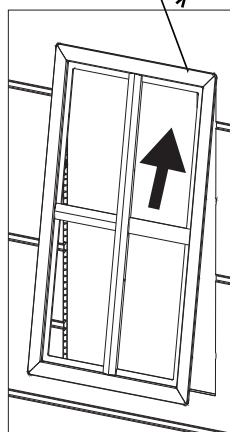


OUTSIDE

WIR10.PC

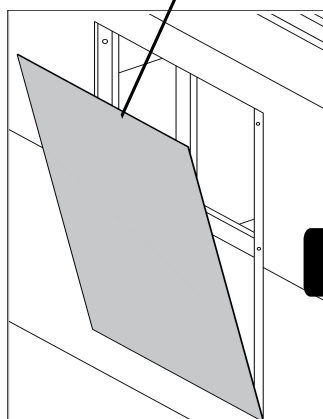

INSIDE

DW-IN

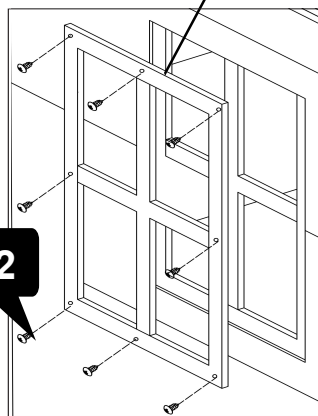

INSIDE



FT2

Two-person inside-outside coordination required.

13



FT3
14pcs

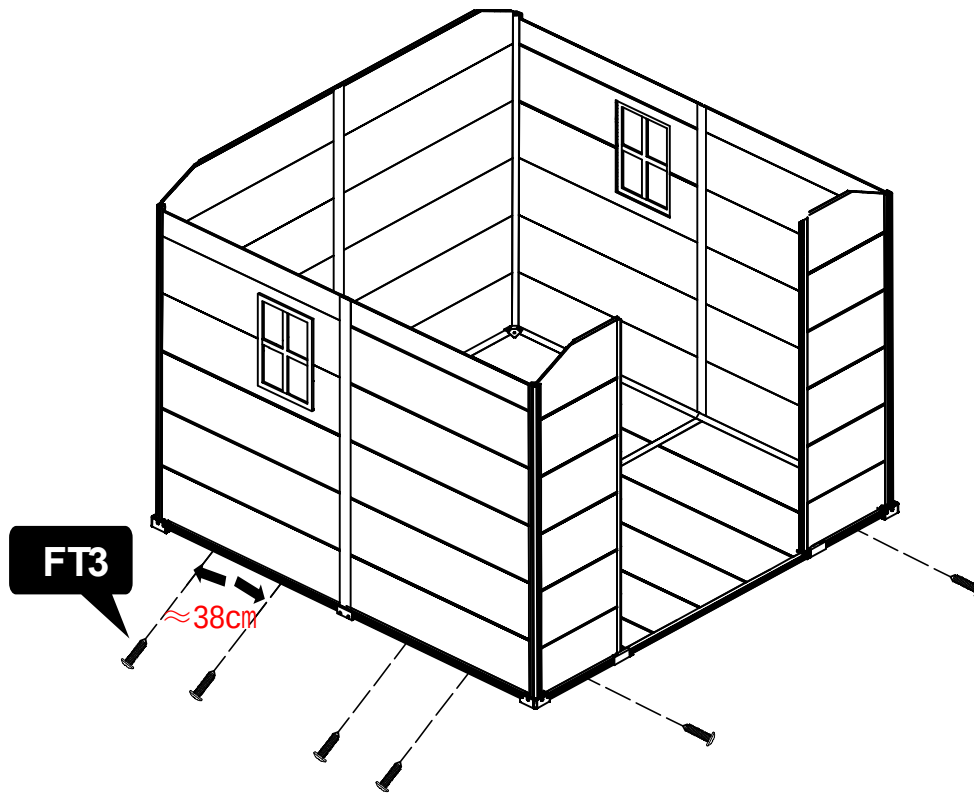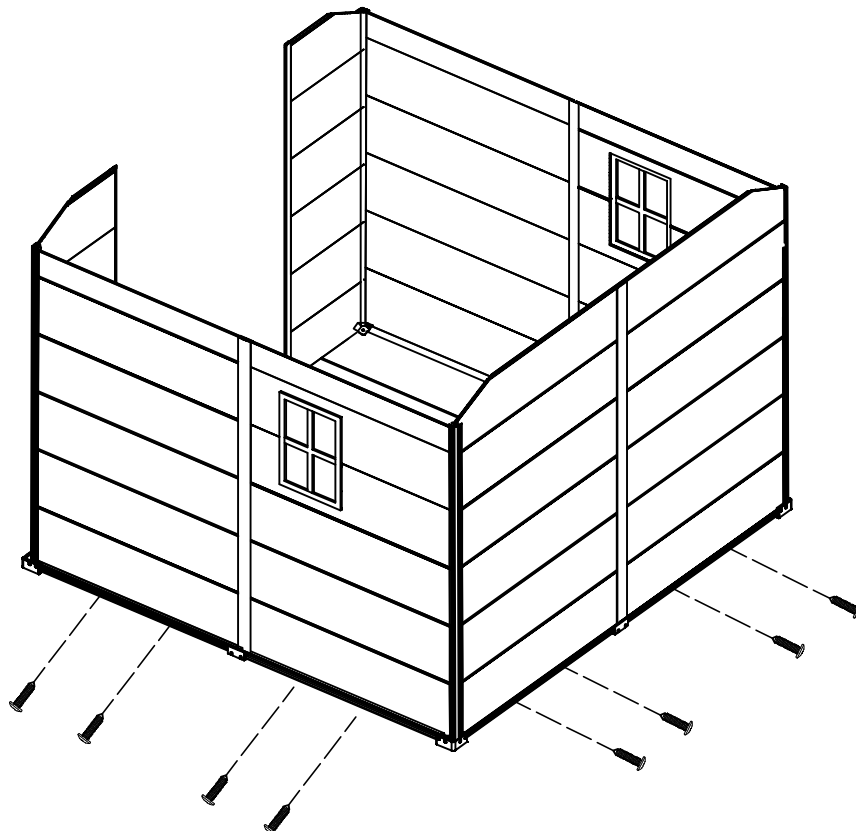

ASSEMBLY INSTRUCTIONS

14



WFD3
1pc



WFD4
1pc



WBD3
1pc



WBD4
1pc




VNR10
2pcs




FT2
7pcs



DAU
1pc

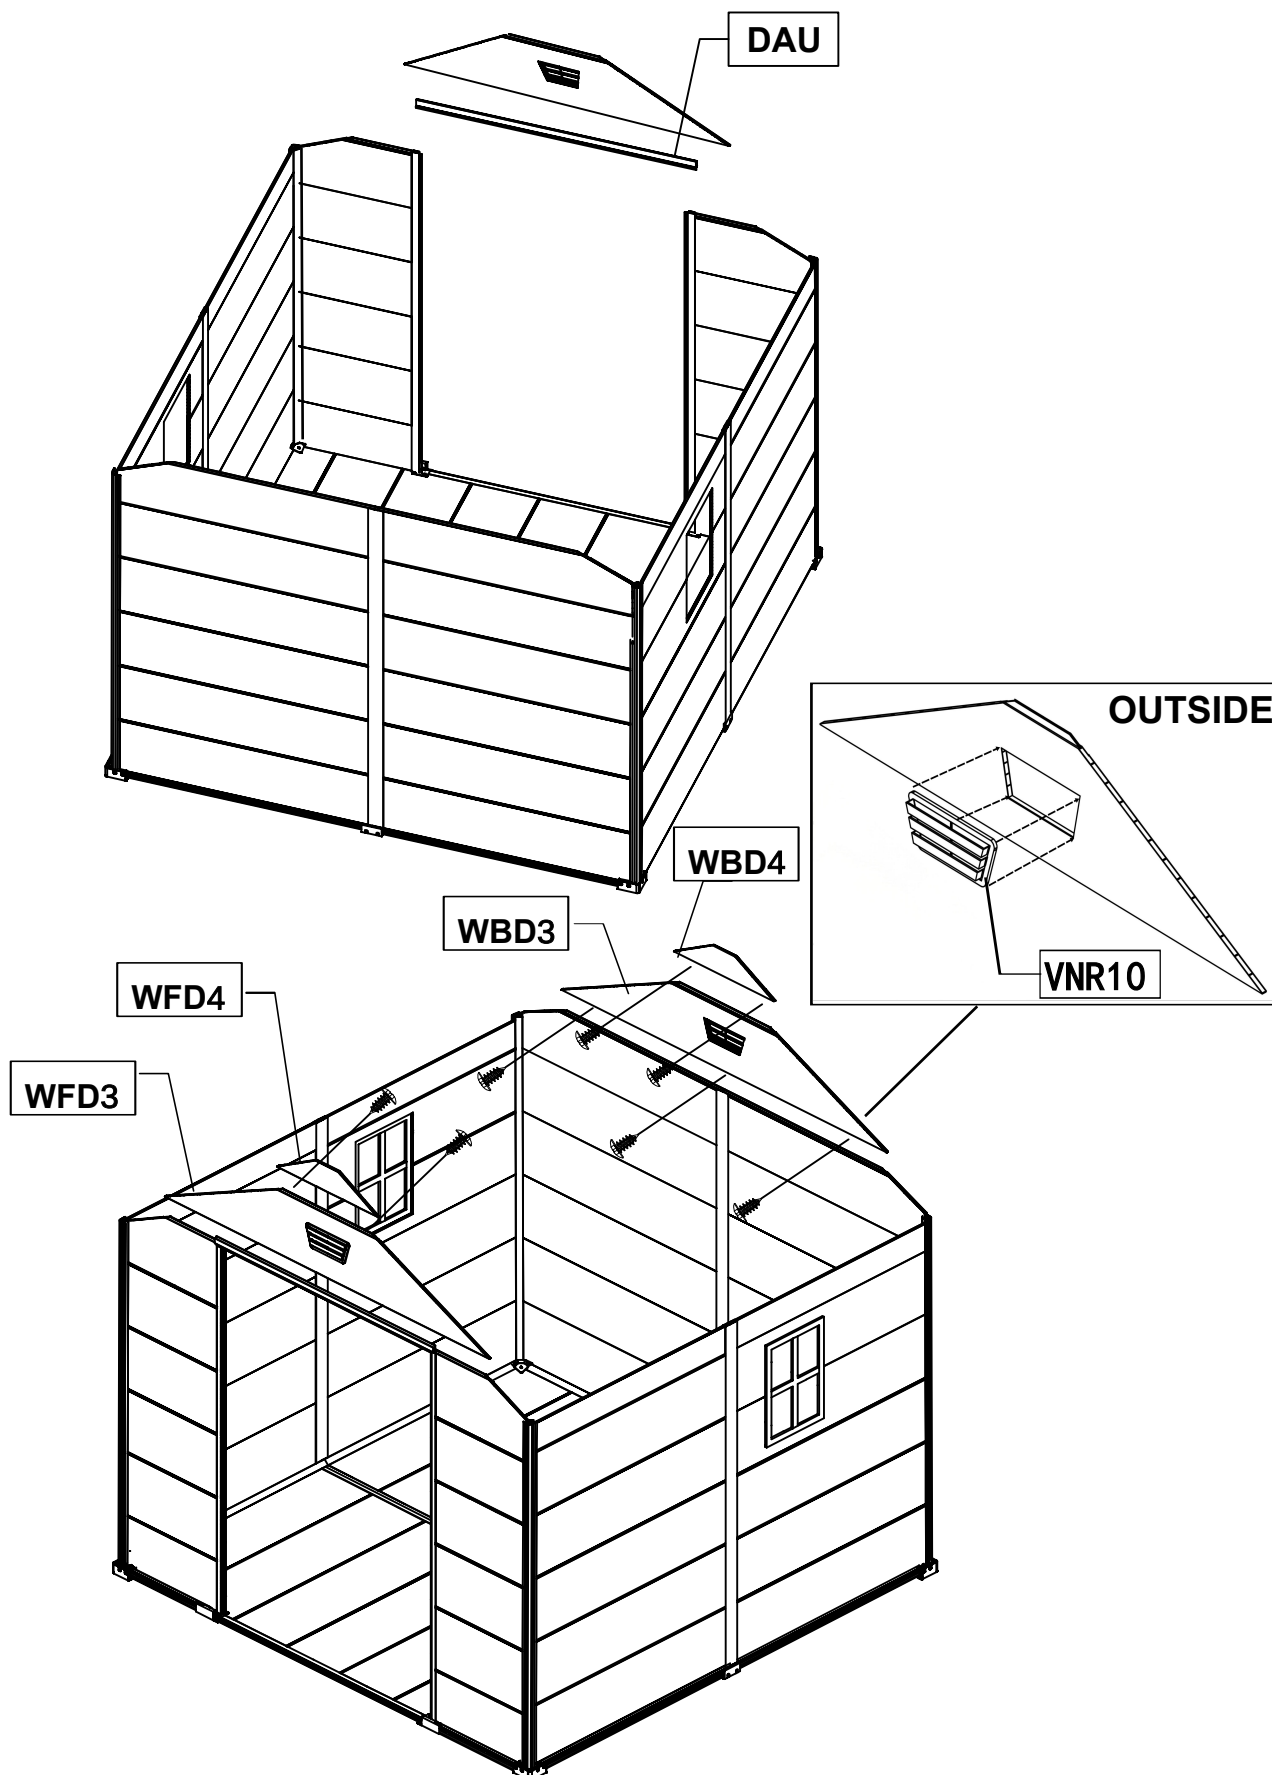

15






HD1
2pcs



FT1
8pcs




FT2
1pc

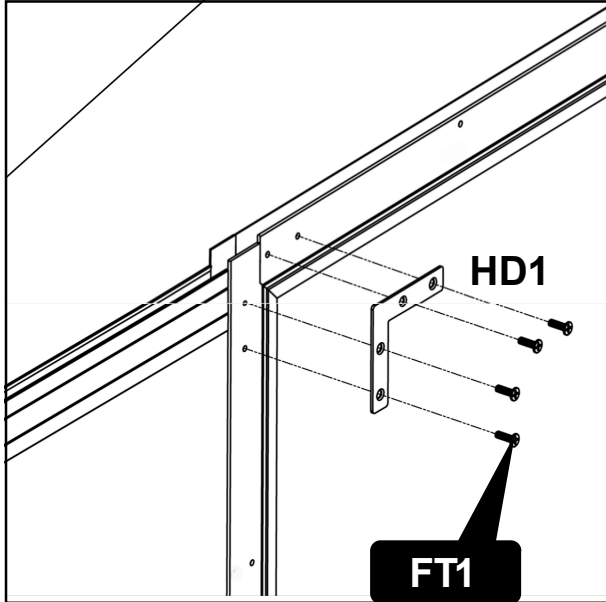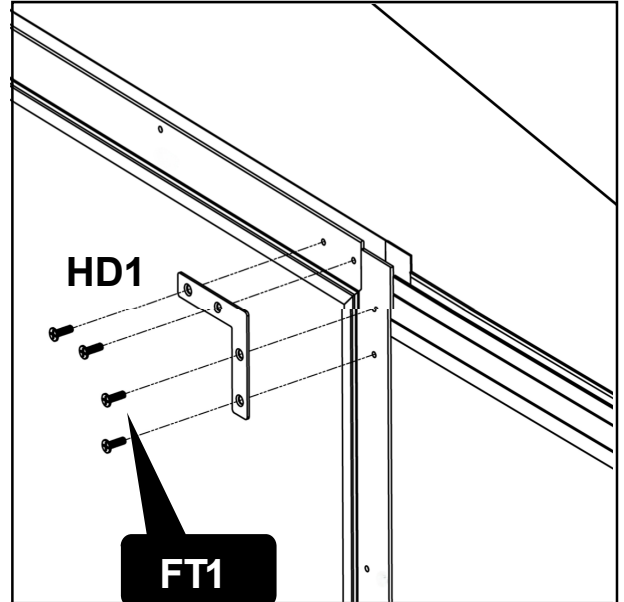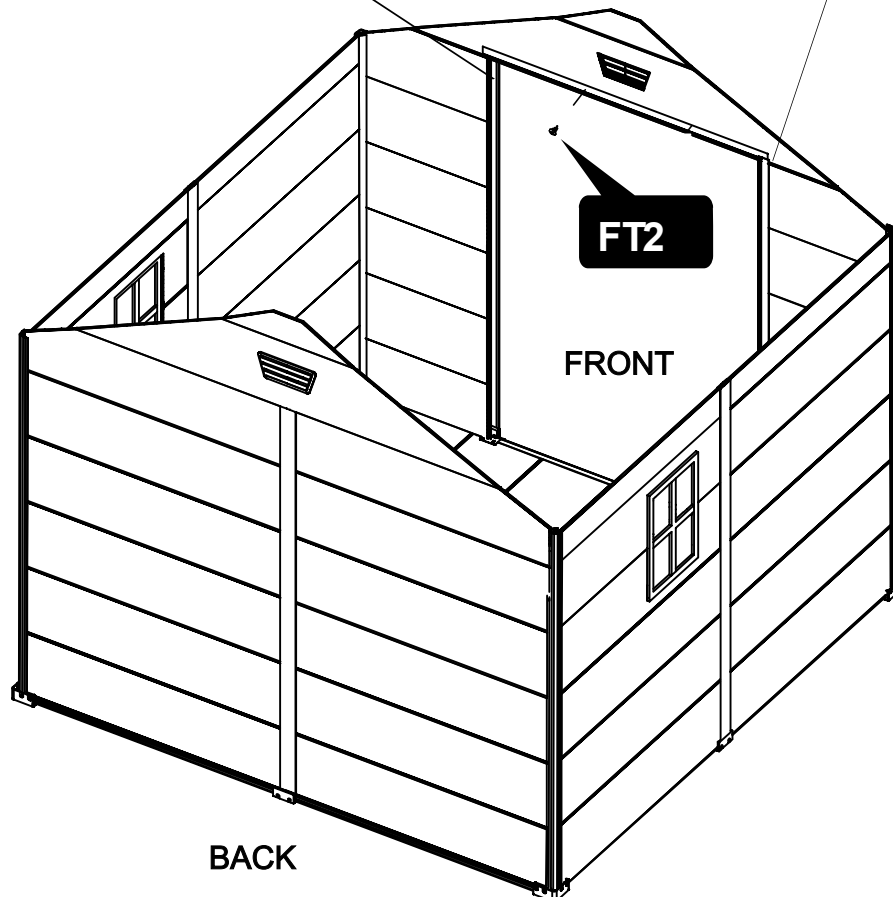

ASSEMBLY INSTRUCTIONS

16





R10L
4pcs




RS
2pcs





FT1
12pcs

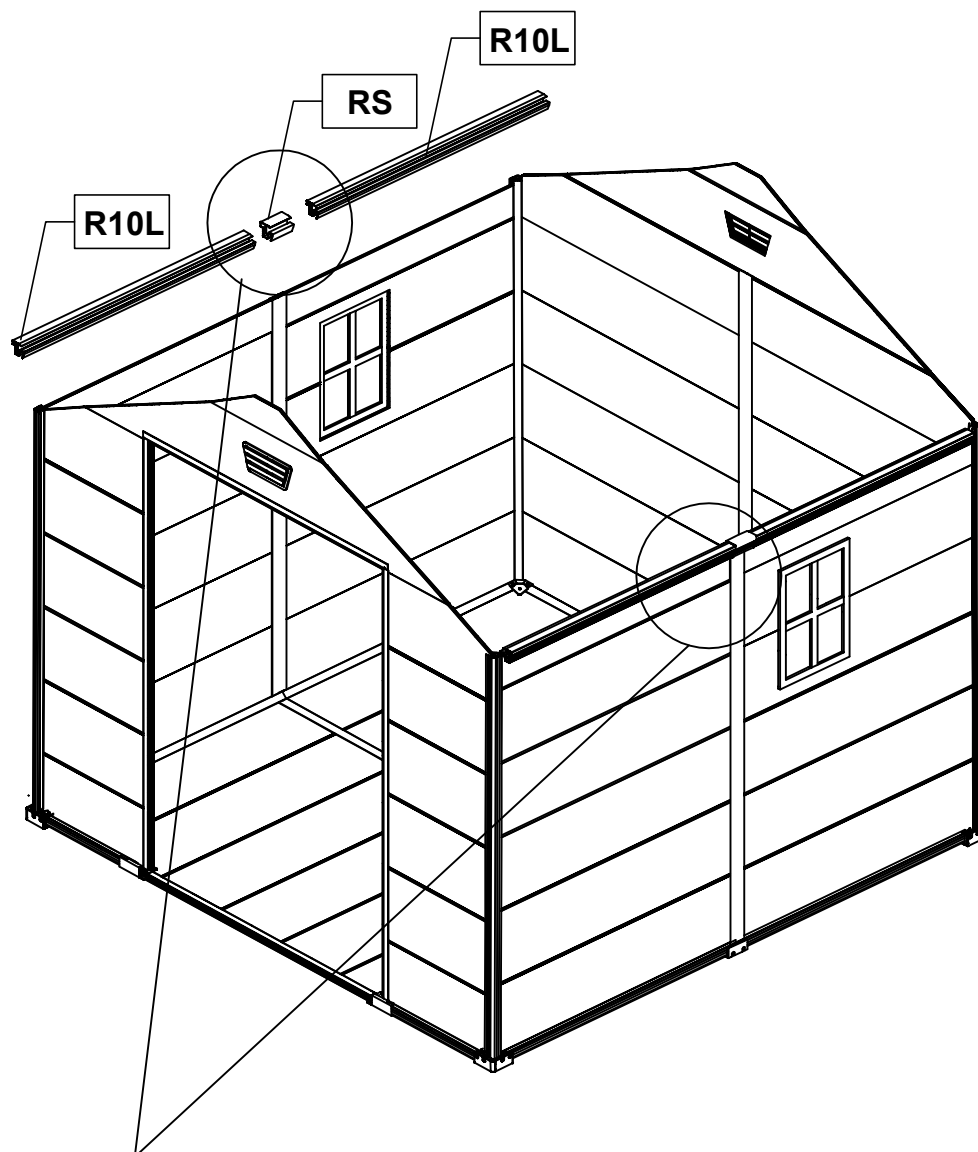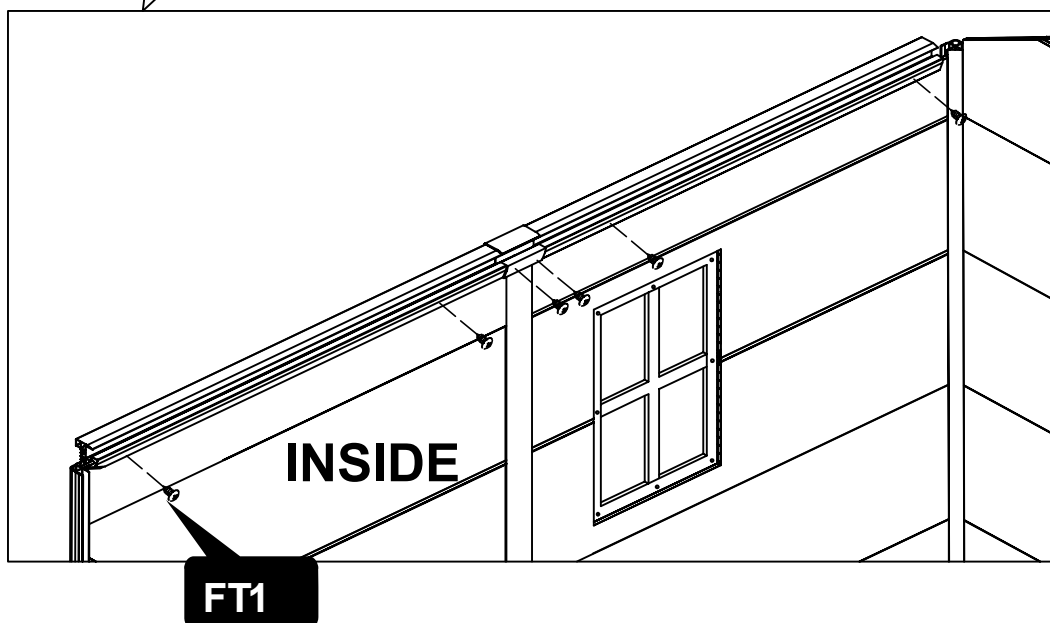

17



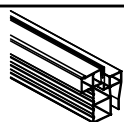


R10F
4pcs

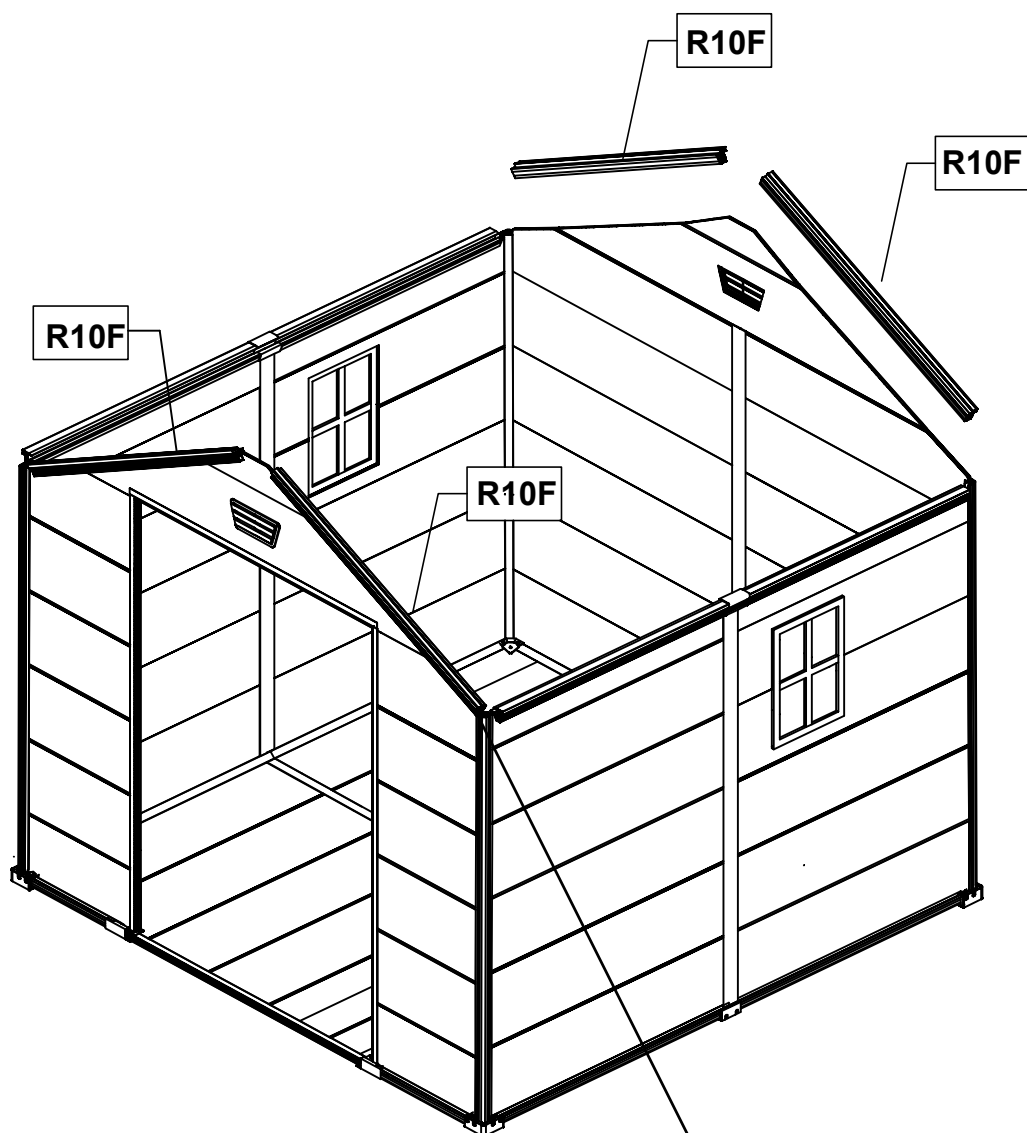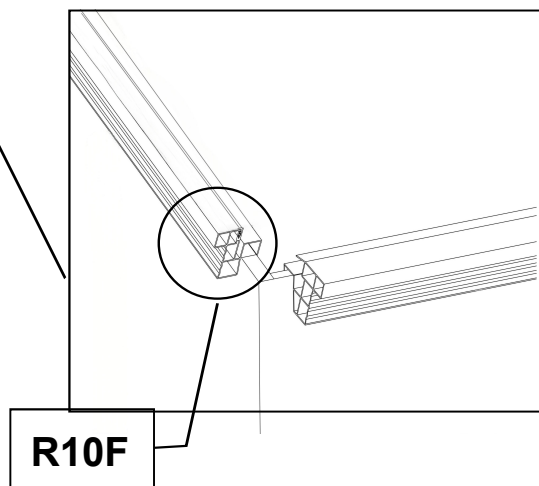

ASSEMBLY INSTRUCTIONS

18

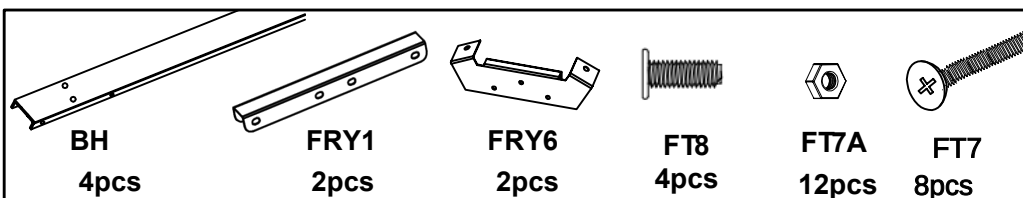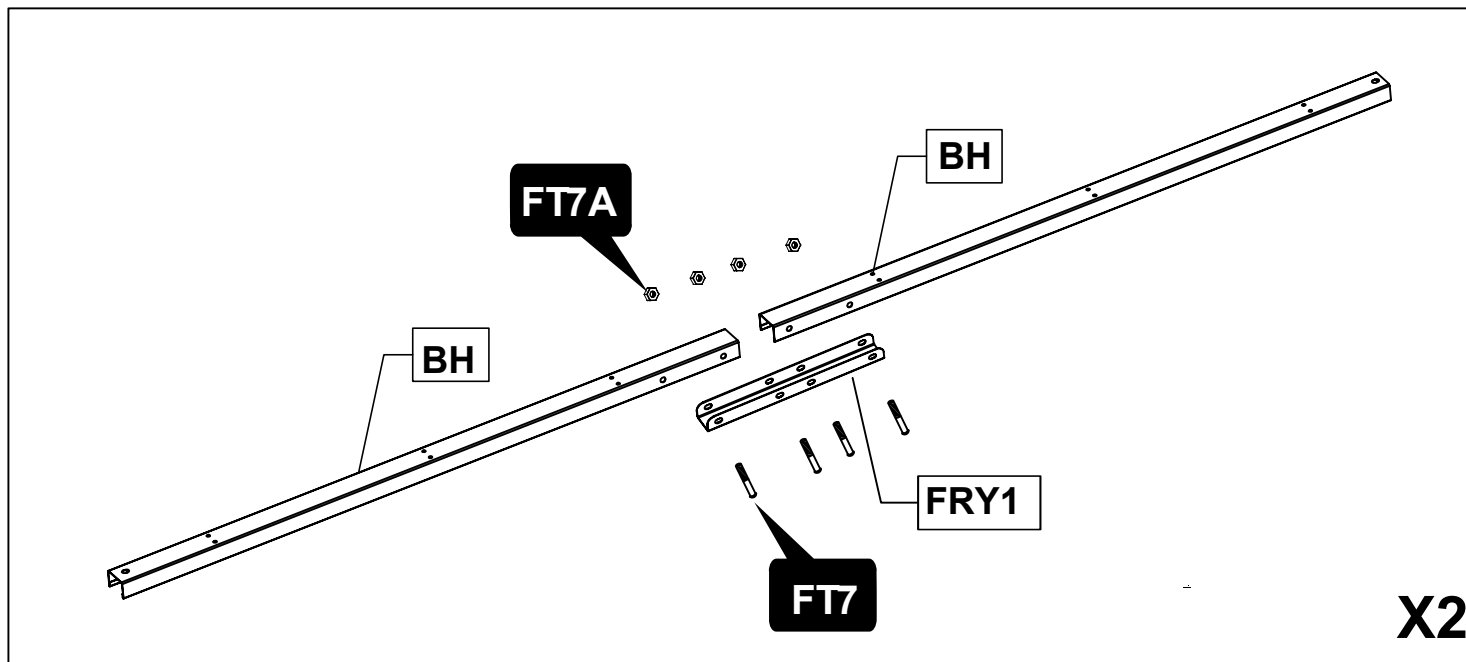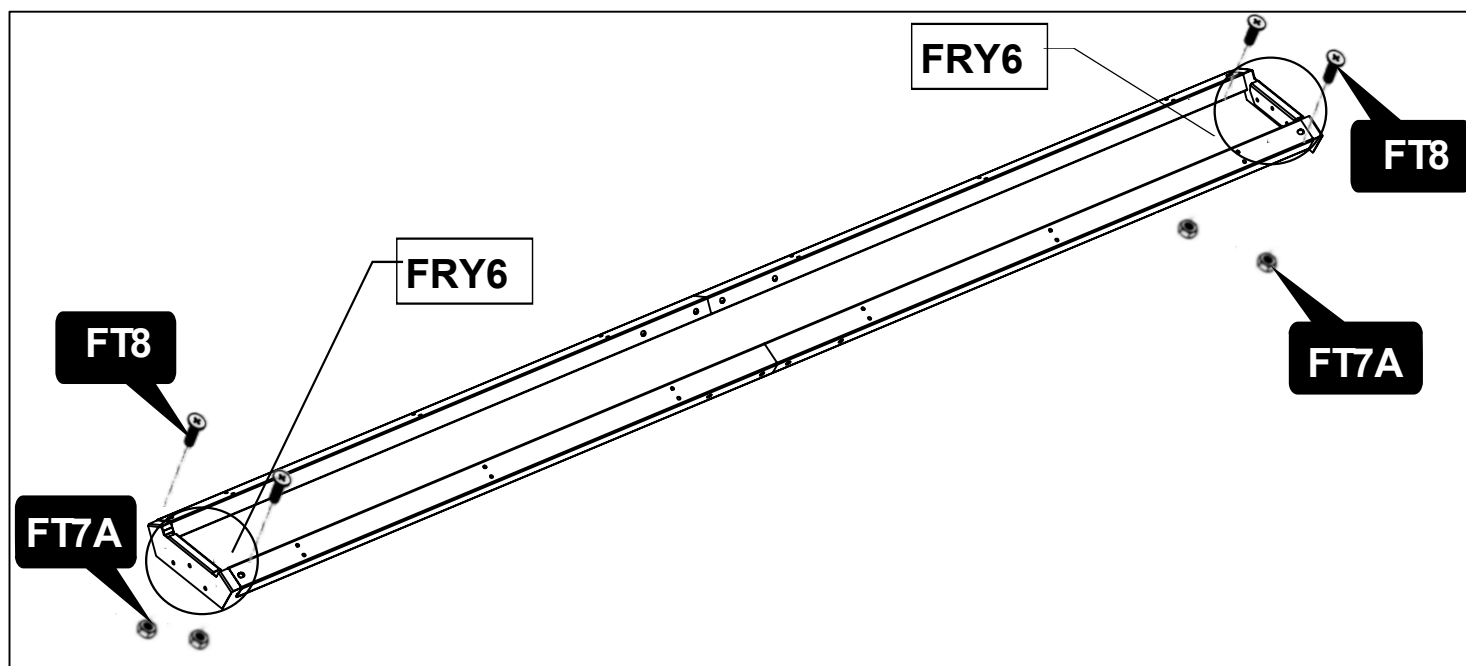




19



FT3
12pcs



FT2
12pcs

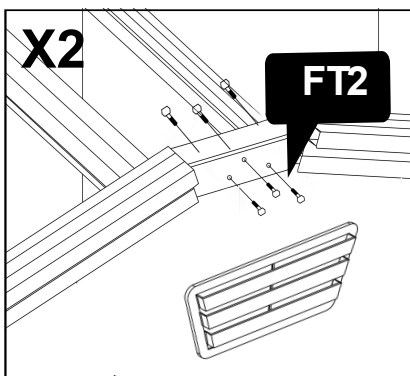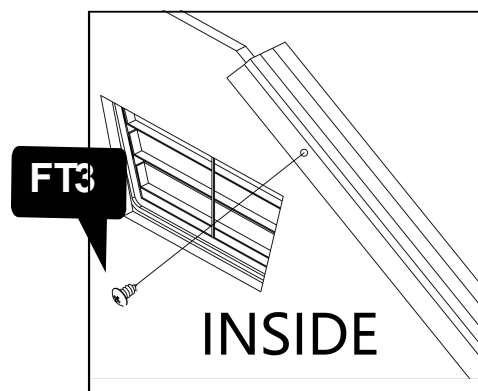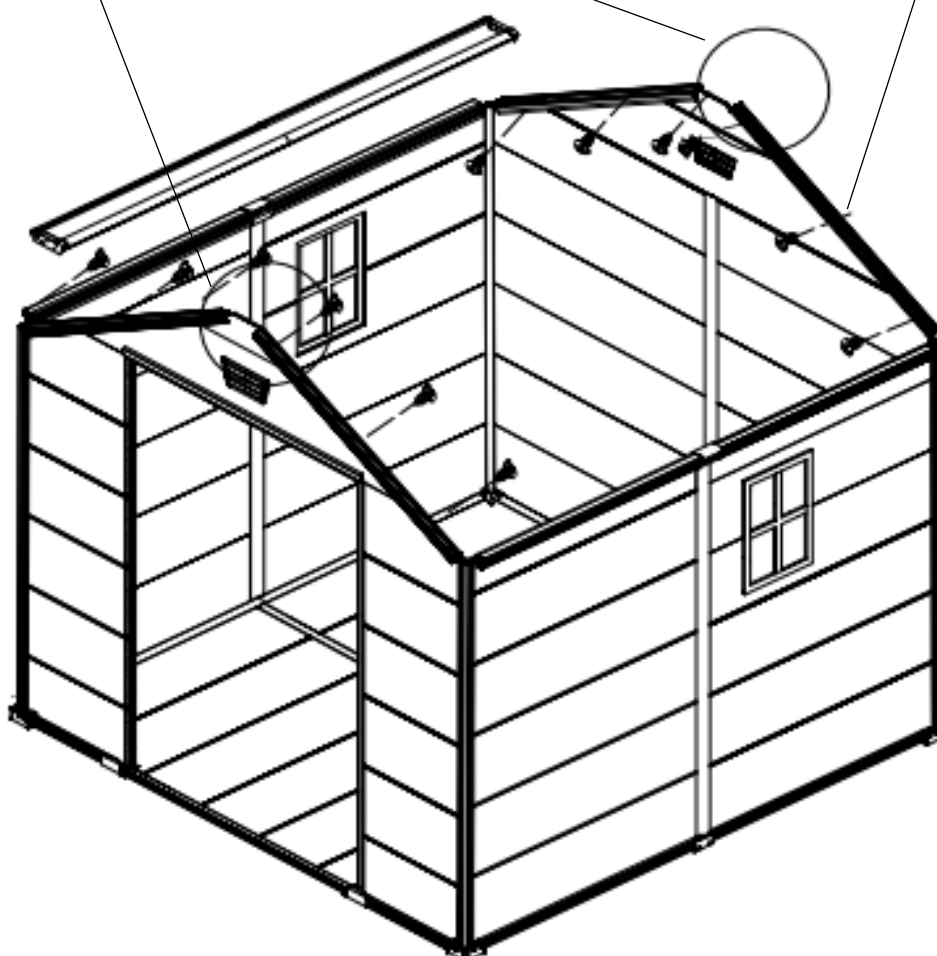


ASSEMBLY INSTRUCTIONS

20



FT7A
16pcs



FT7
16pcs




BH2
2pcs





FRY2
4pcs



BV
4pcs

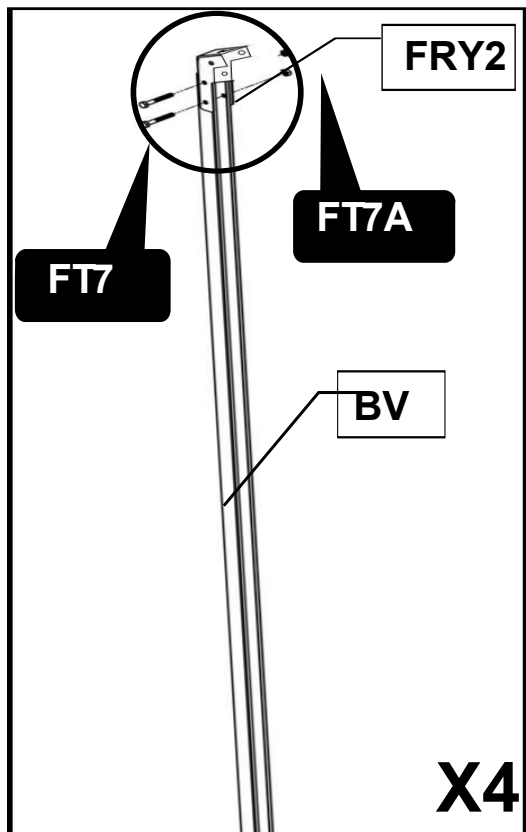

Fold both sides down with your hands

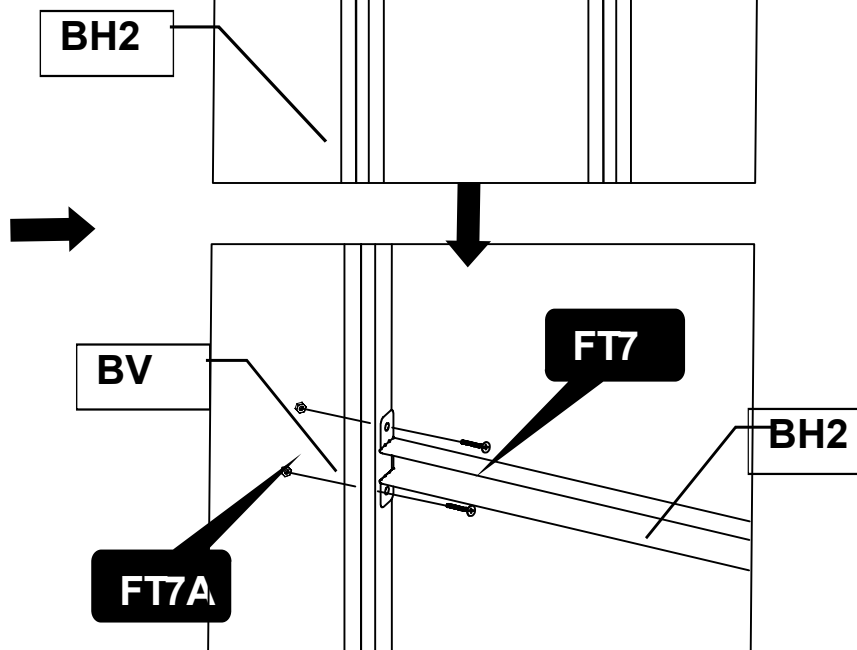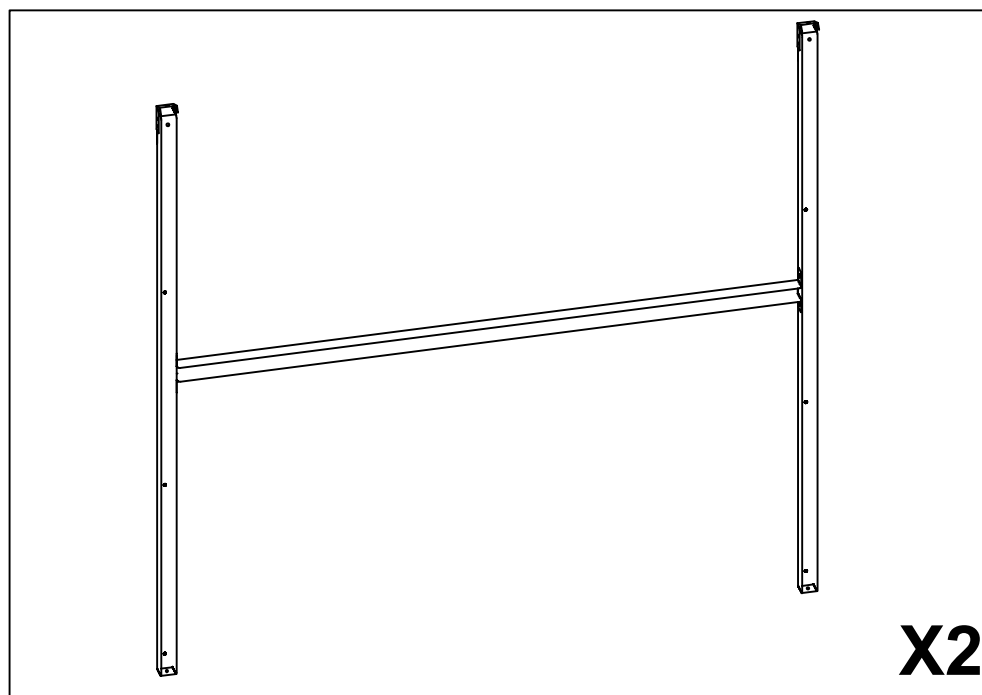

ASSEMBLY INSTRUCTIONS

21



FT3
4pcs




FT2
24pcs



FT1
4pcs

Hide partial parts

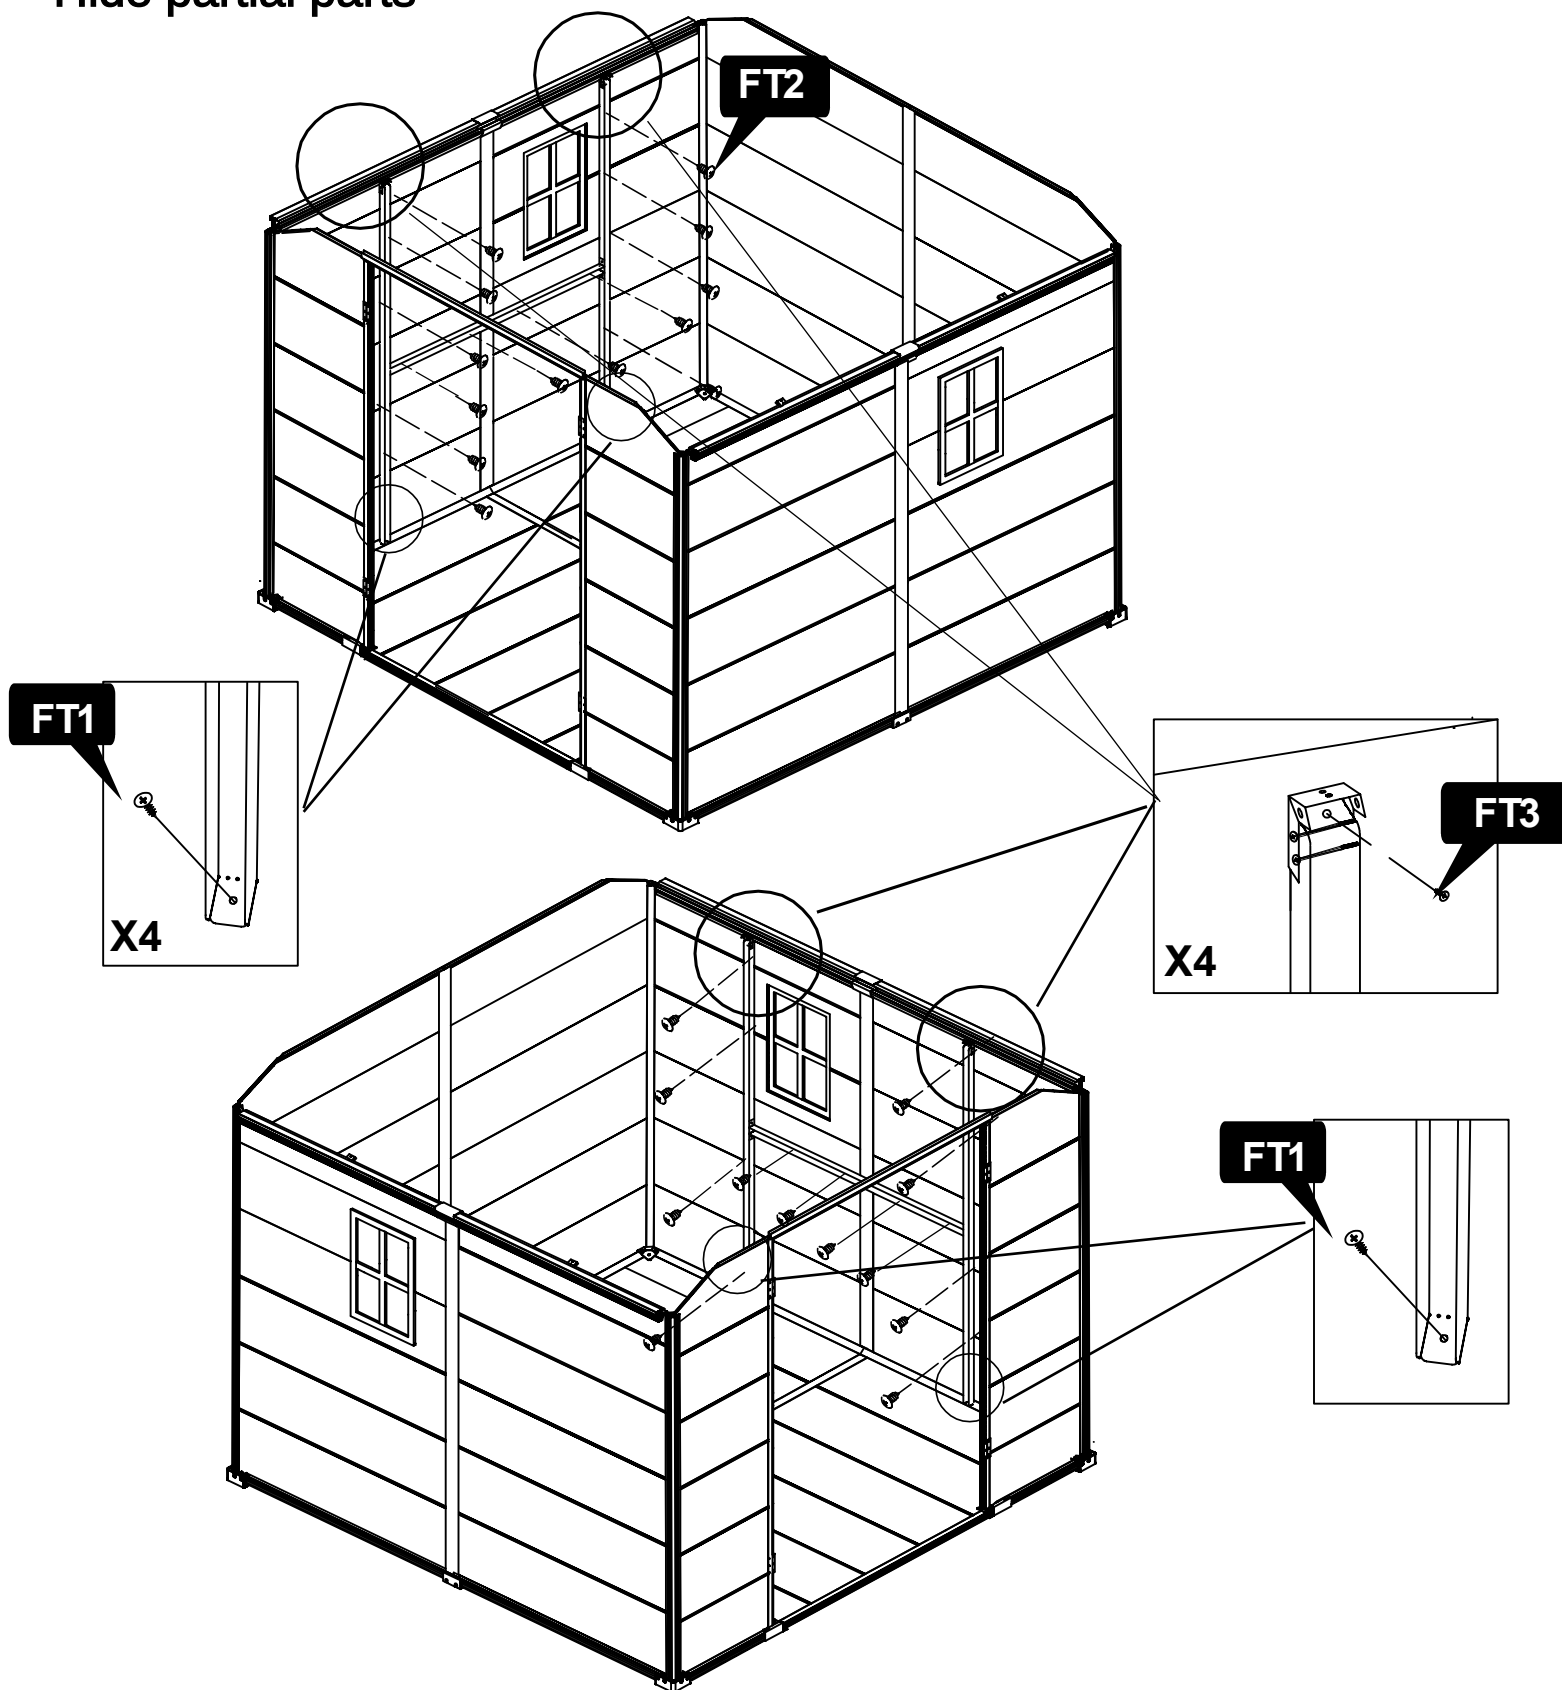

ASSEMBLY INSTRUCTIONS

22



A5
2pcs



BH1
2pcs



BS
4pcs



HD5
2pcs



FT7A
14pcs





FT7
12pcs




FT9
2pcs



FT10
2pcs

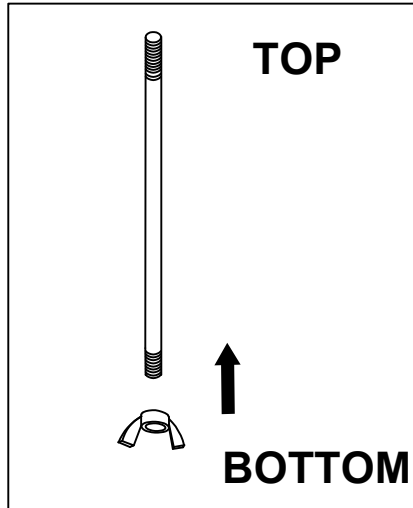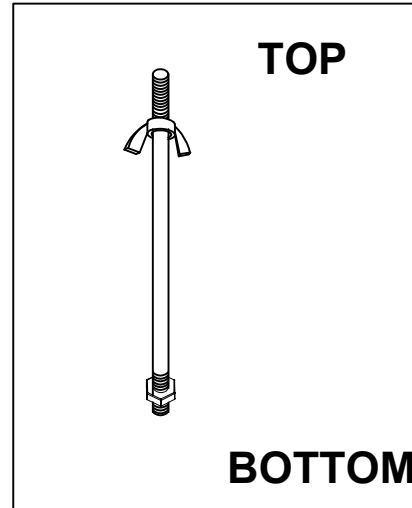

NOTE: Install by holding the nut stationary and turning the screw.

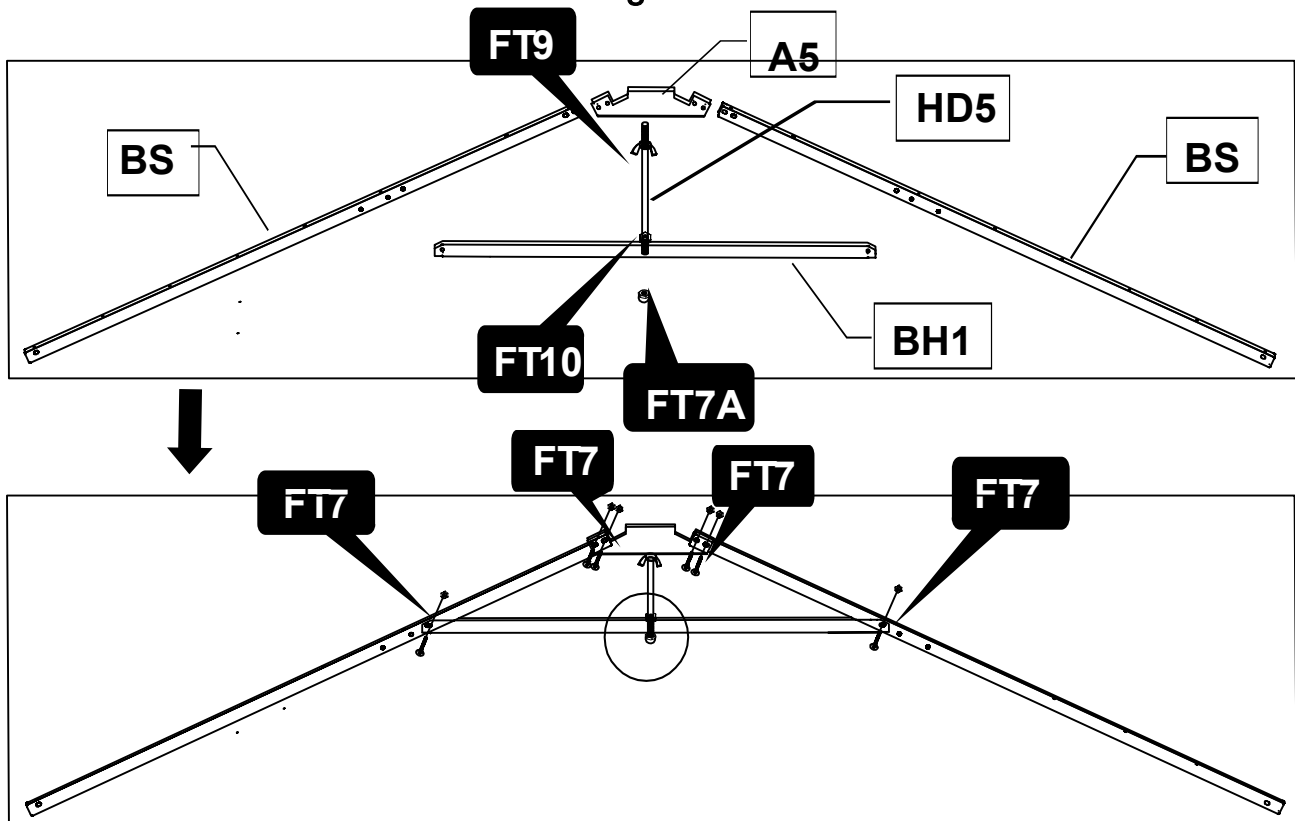


FT7A and FT10 to be tightened, After the top plate is installed, fully tighten FT9 and jack it upward for support.

23




FT7A
4pcs





FT7
4pcs



FT2
8pcs

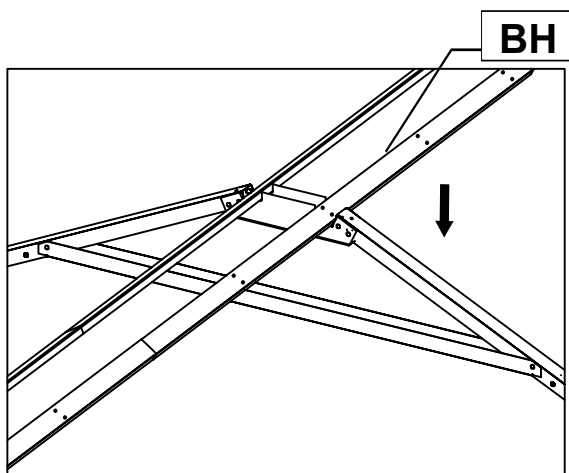

NOTE : BH needs to be set for a hard rejection at the upper bound of the A5 gap.

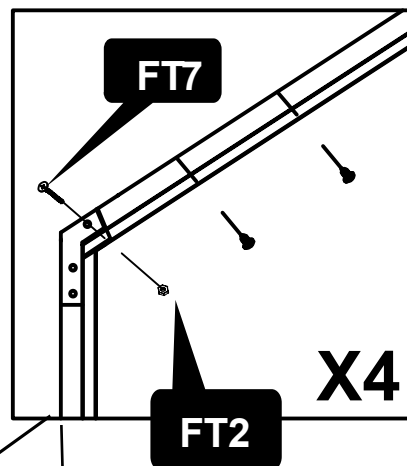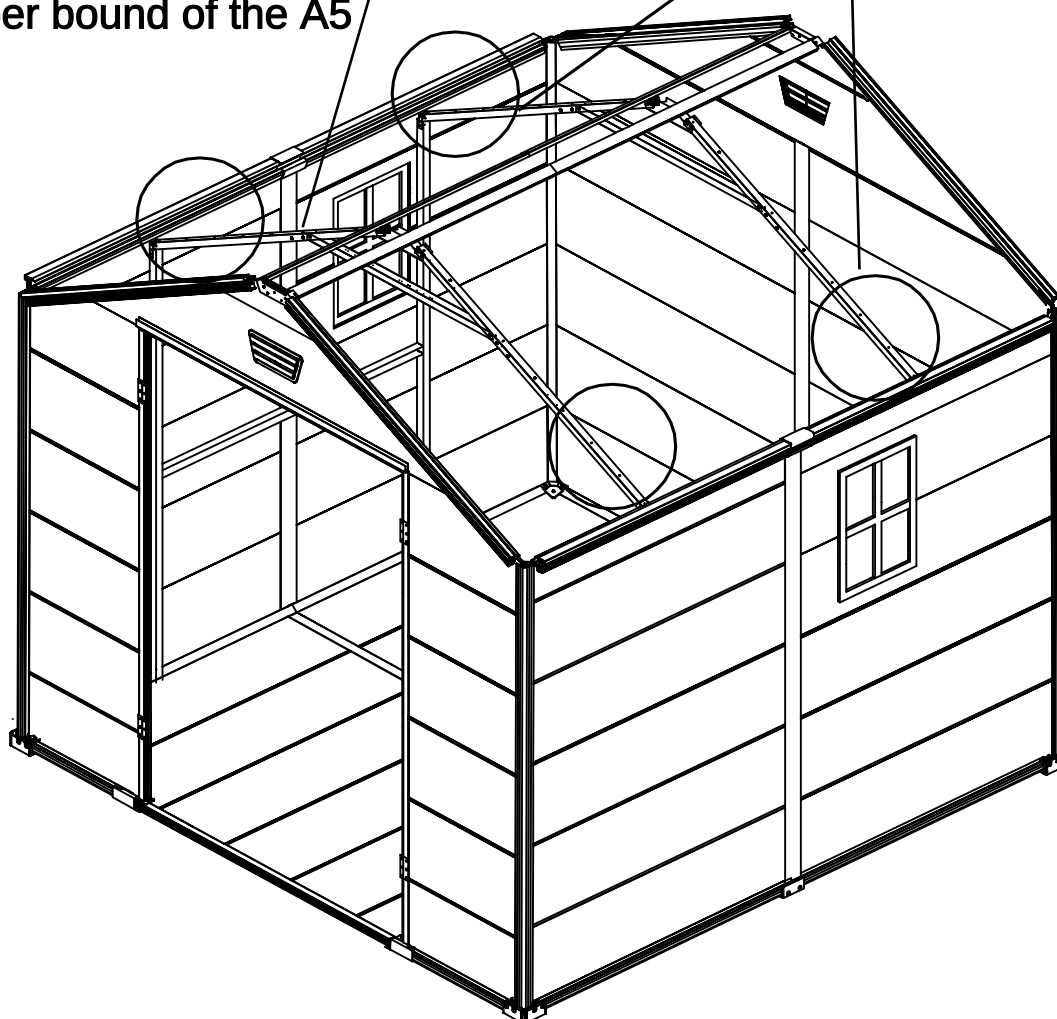


ASSEMBLY INSTRUCTIONS

24



FT7A
8pcs



FT7
8pcs



BH2
2pcs



FT2
8pcs

Fold both sides down with
your hands


BH2

BS

FT7


FT7A

FT2 screws to be installed after top plate
mounting

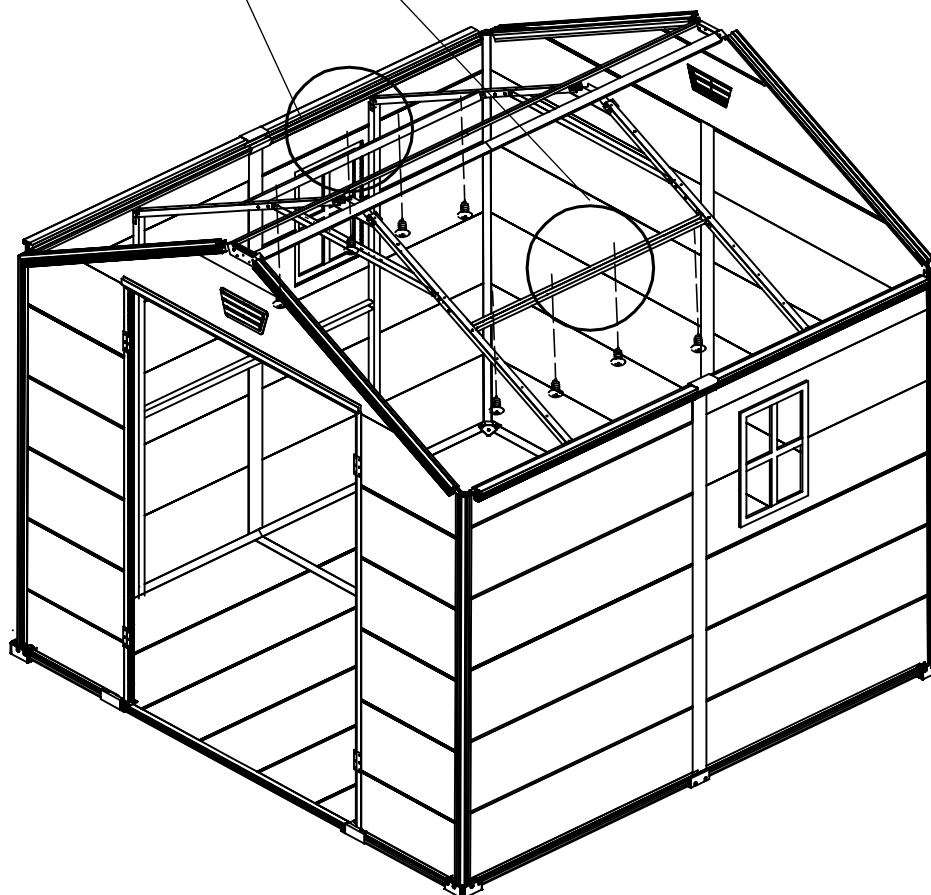

ASSEMBLY INSTRUCTIONS

25



RF1
2pcs




FT1
2pcs




FT2
2pcs




FT3
4pcs

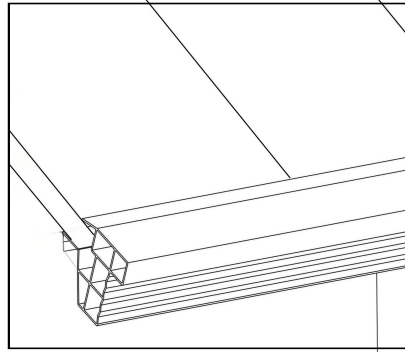


FT3

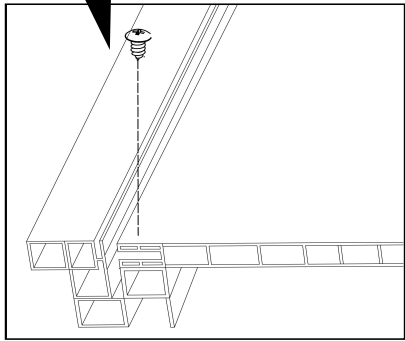

NOTE : When installing top panels, lock each panel one by one, and fasten both ends with screws.

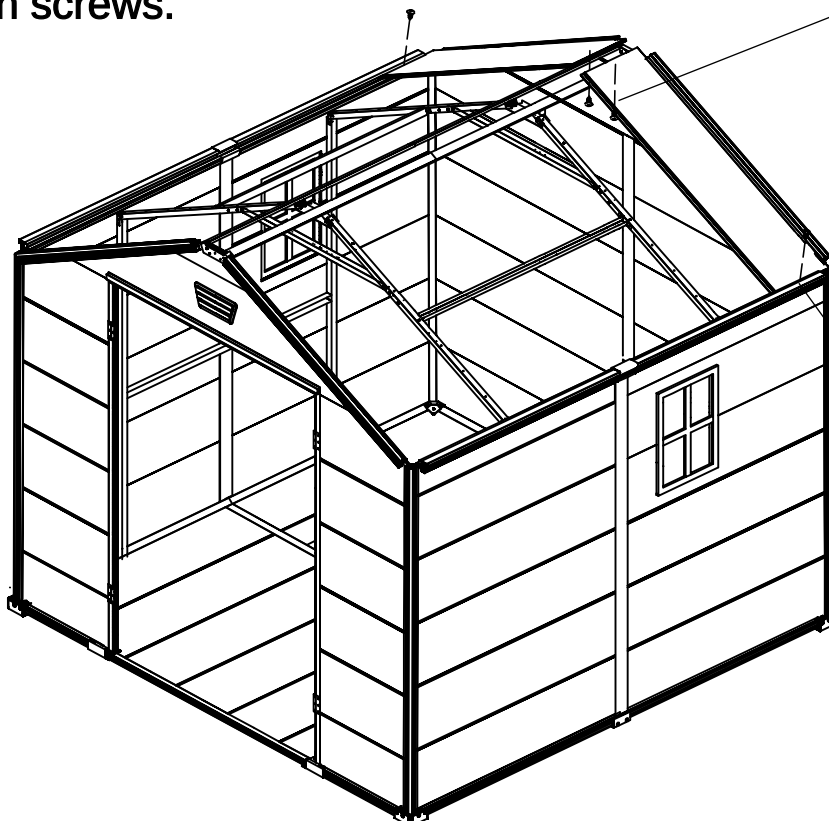


≈ 7mm

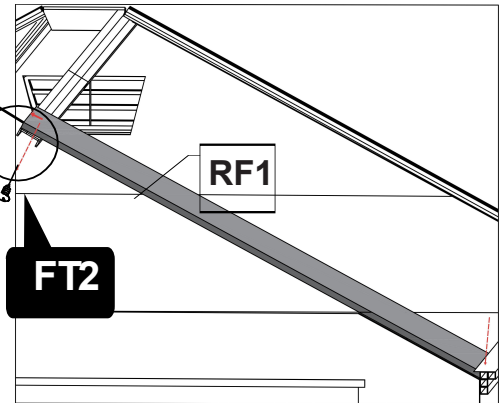

RF1


FT2

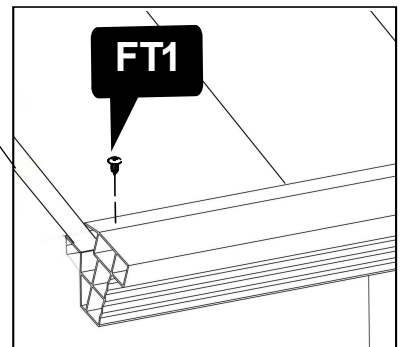

FT1

ASSEMBLY INSTRUCTIONS

26






RF1
12pcs



FT1
12pcs



FT2
12pcs

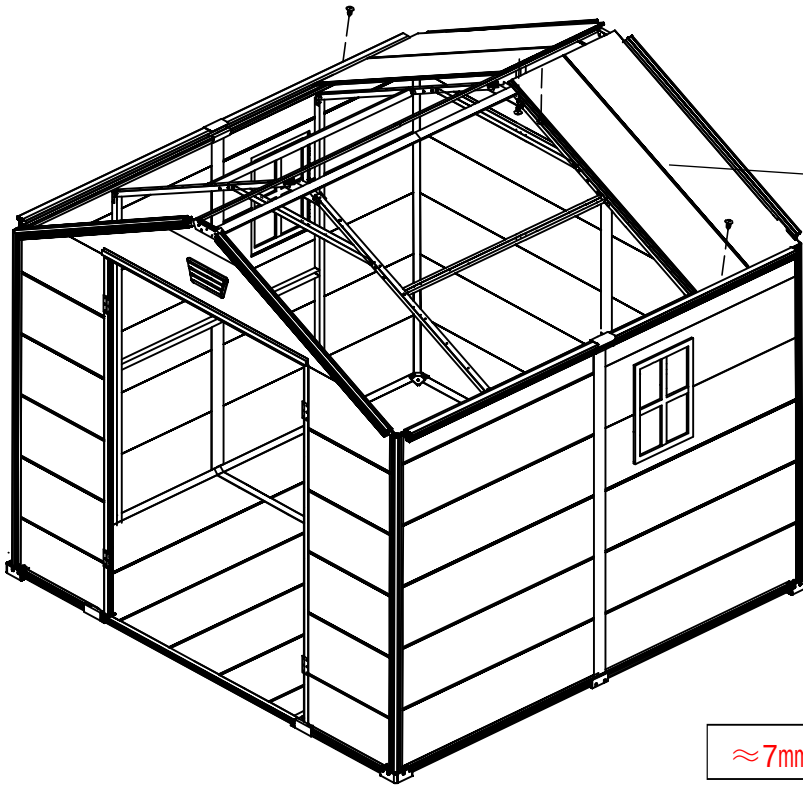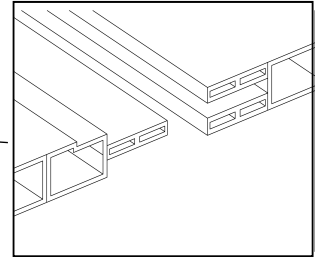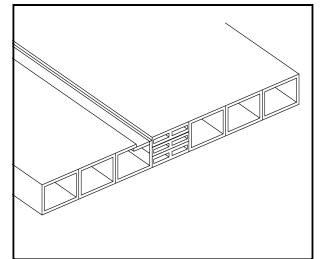


NOTE: Keep boards closely connected. Tap tight with a hammer if there are gaps.



≈ 7mm

FT2

RF1

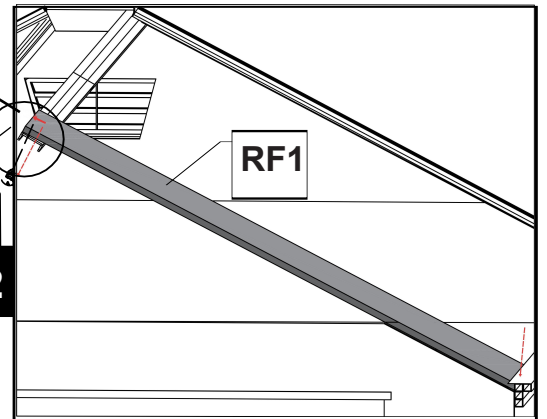

FT1

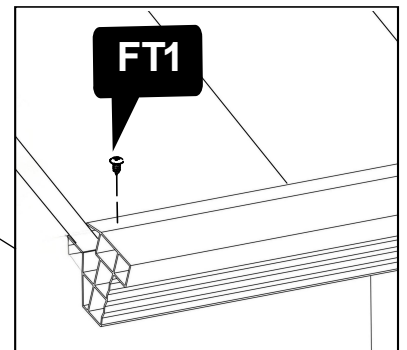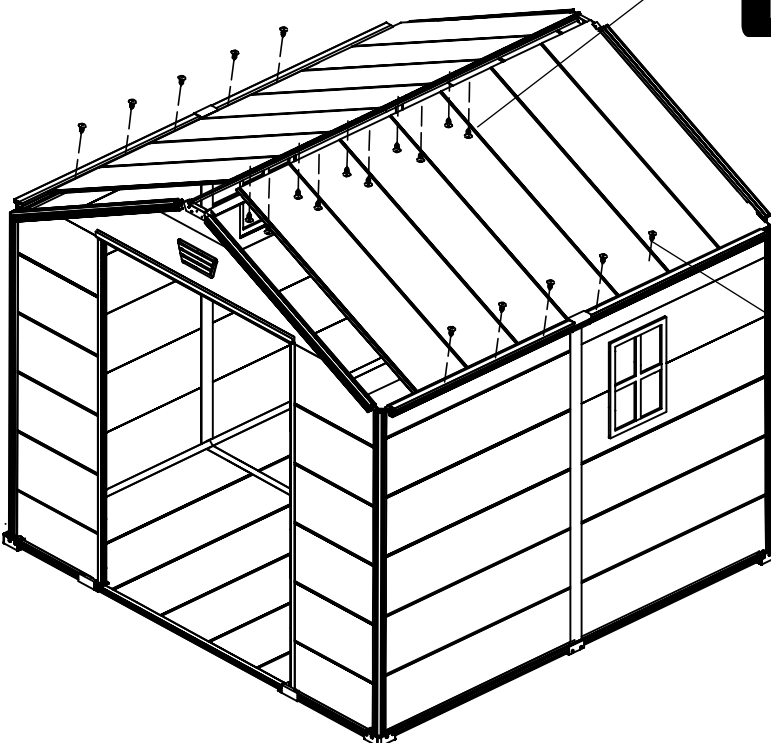

27



RF2
2pcs





FT1
2pcs



FT2
2pcs





FT3
4pcs

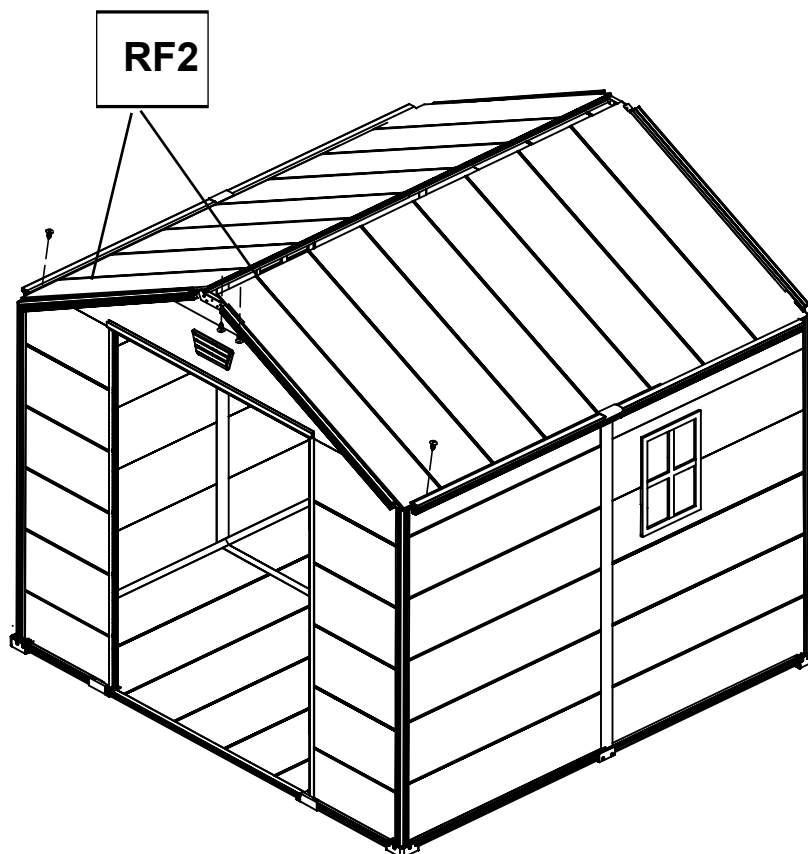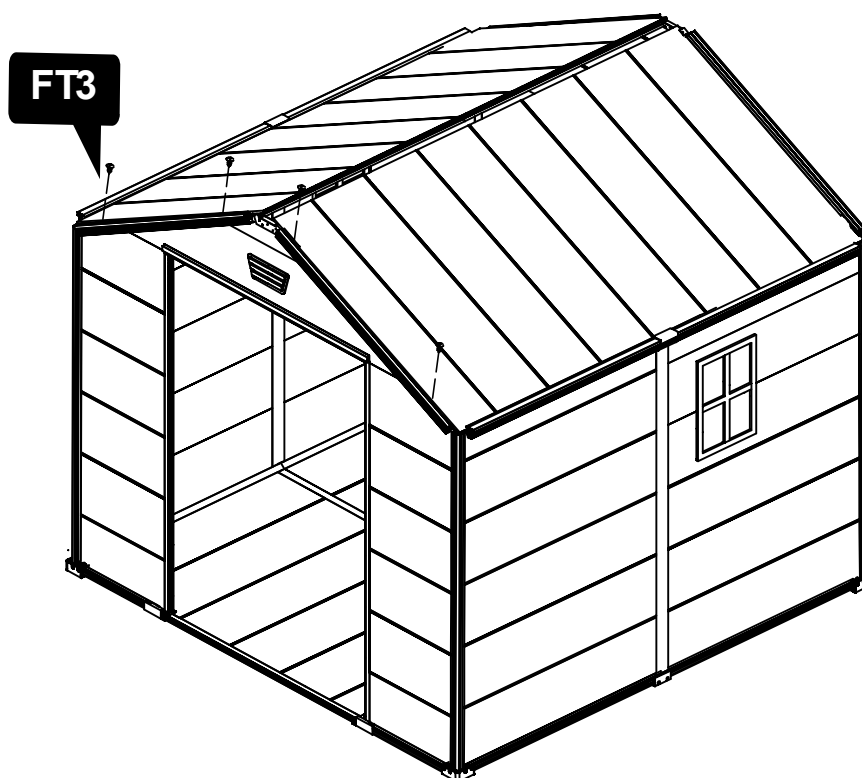

ASSEMBLY INSTRUCTIONS

28

								
FR12	FR13	BV1	BV2	BH3	FT7A	FT7	FT1	FT2
1pc	1pc	2pcs	2pcs	2pcs	16pcs	16pcs	4pcs	32pcs

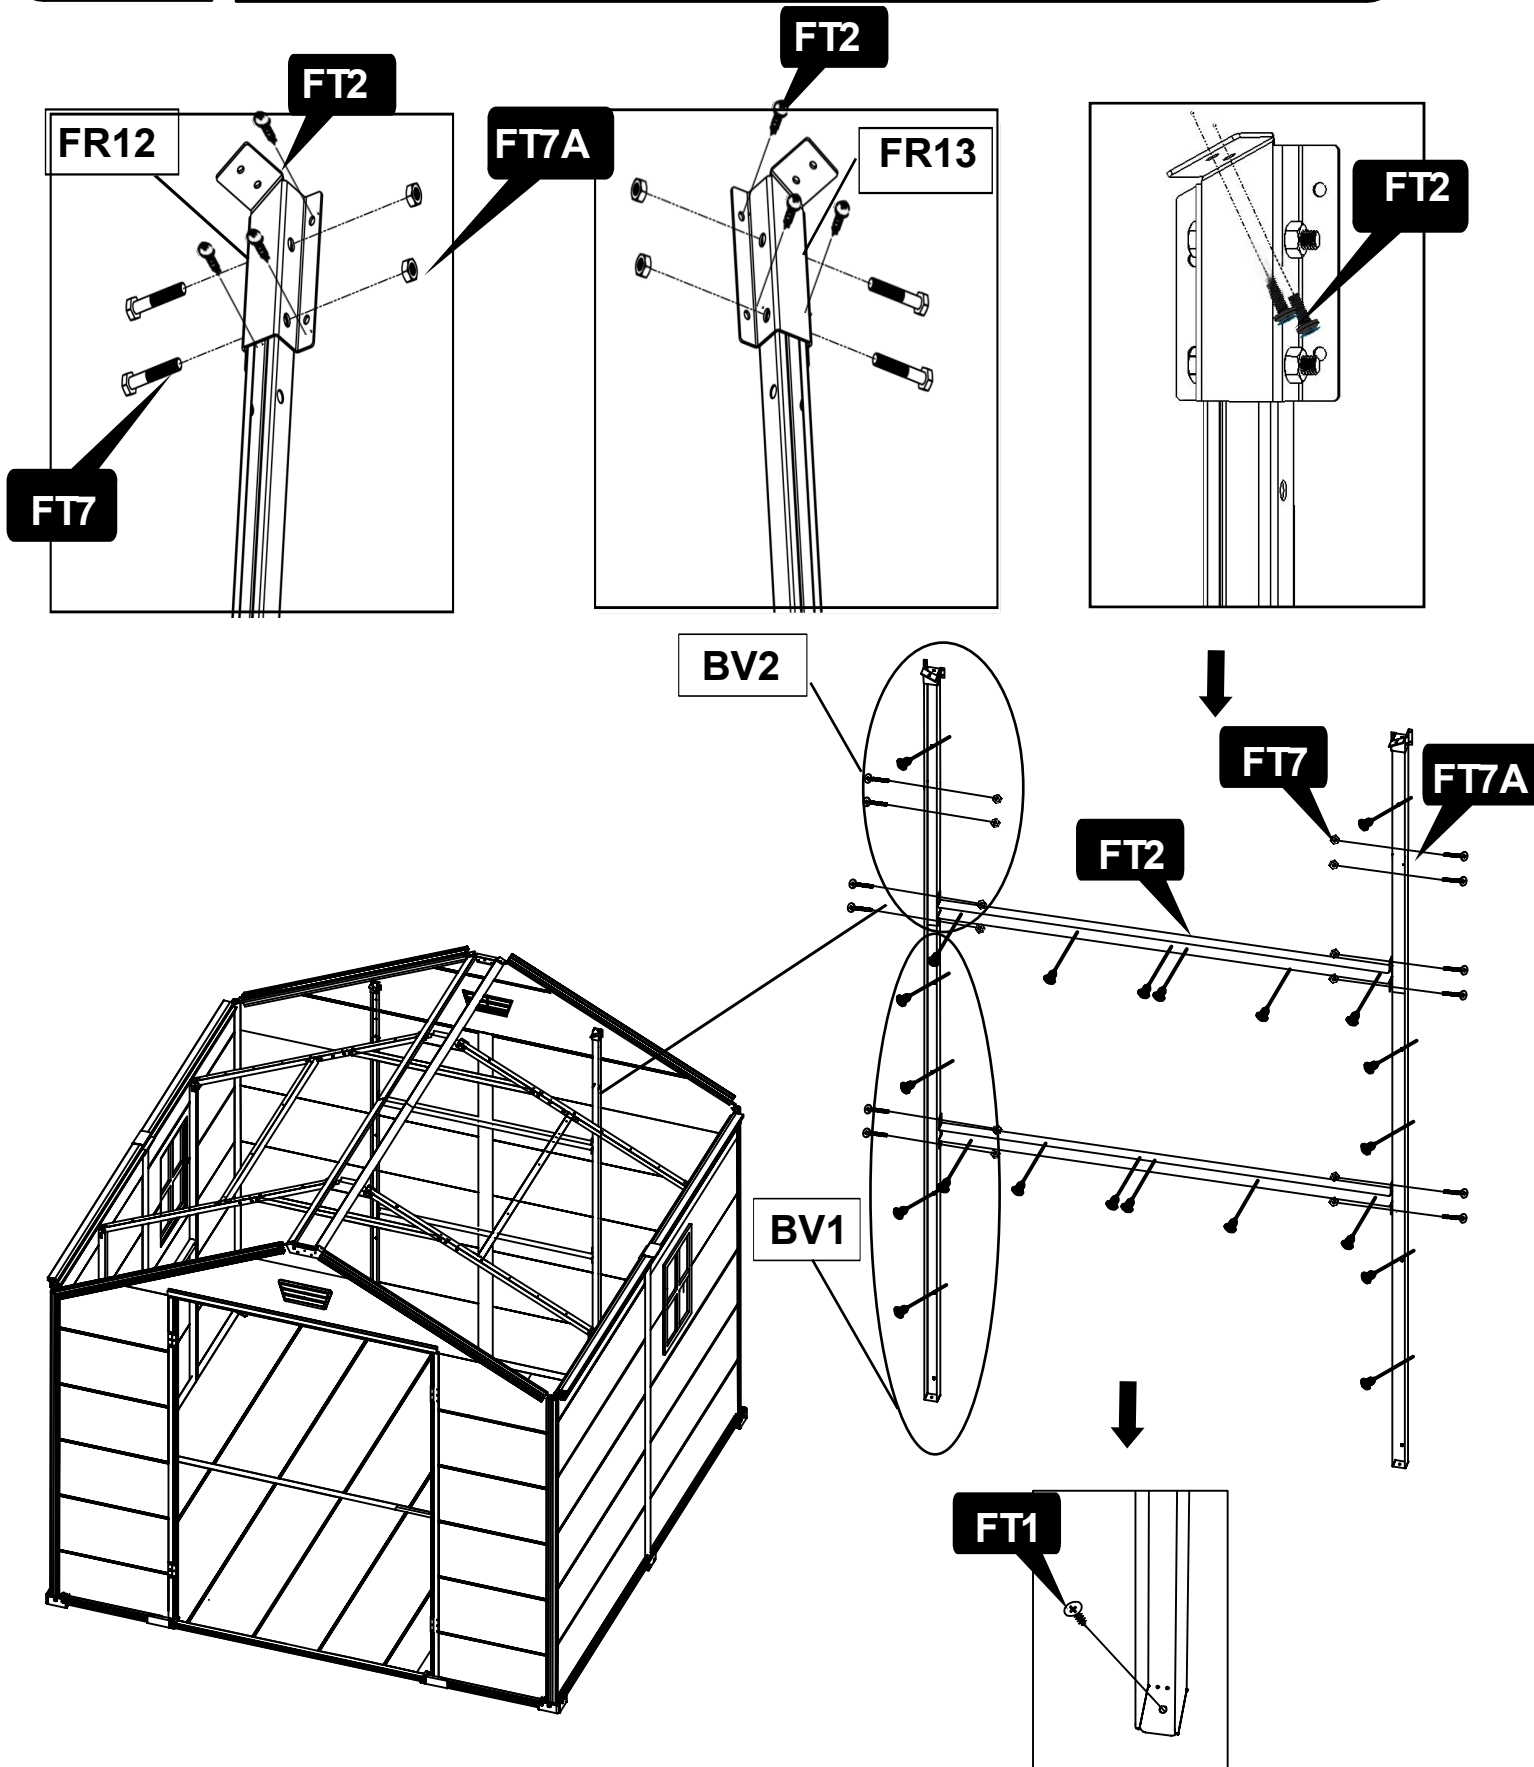

ASSEMBLY INSTRUCTIONS

29



FR12
1pc



FR13
1pc




BV
2pcs



BV3
2pcs



FT7A
8pcs




FT7
8pcs




FT1
4pcs






FT2
22pcs

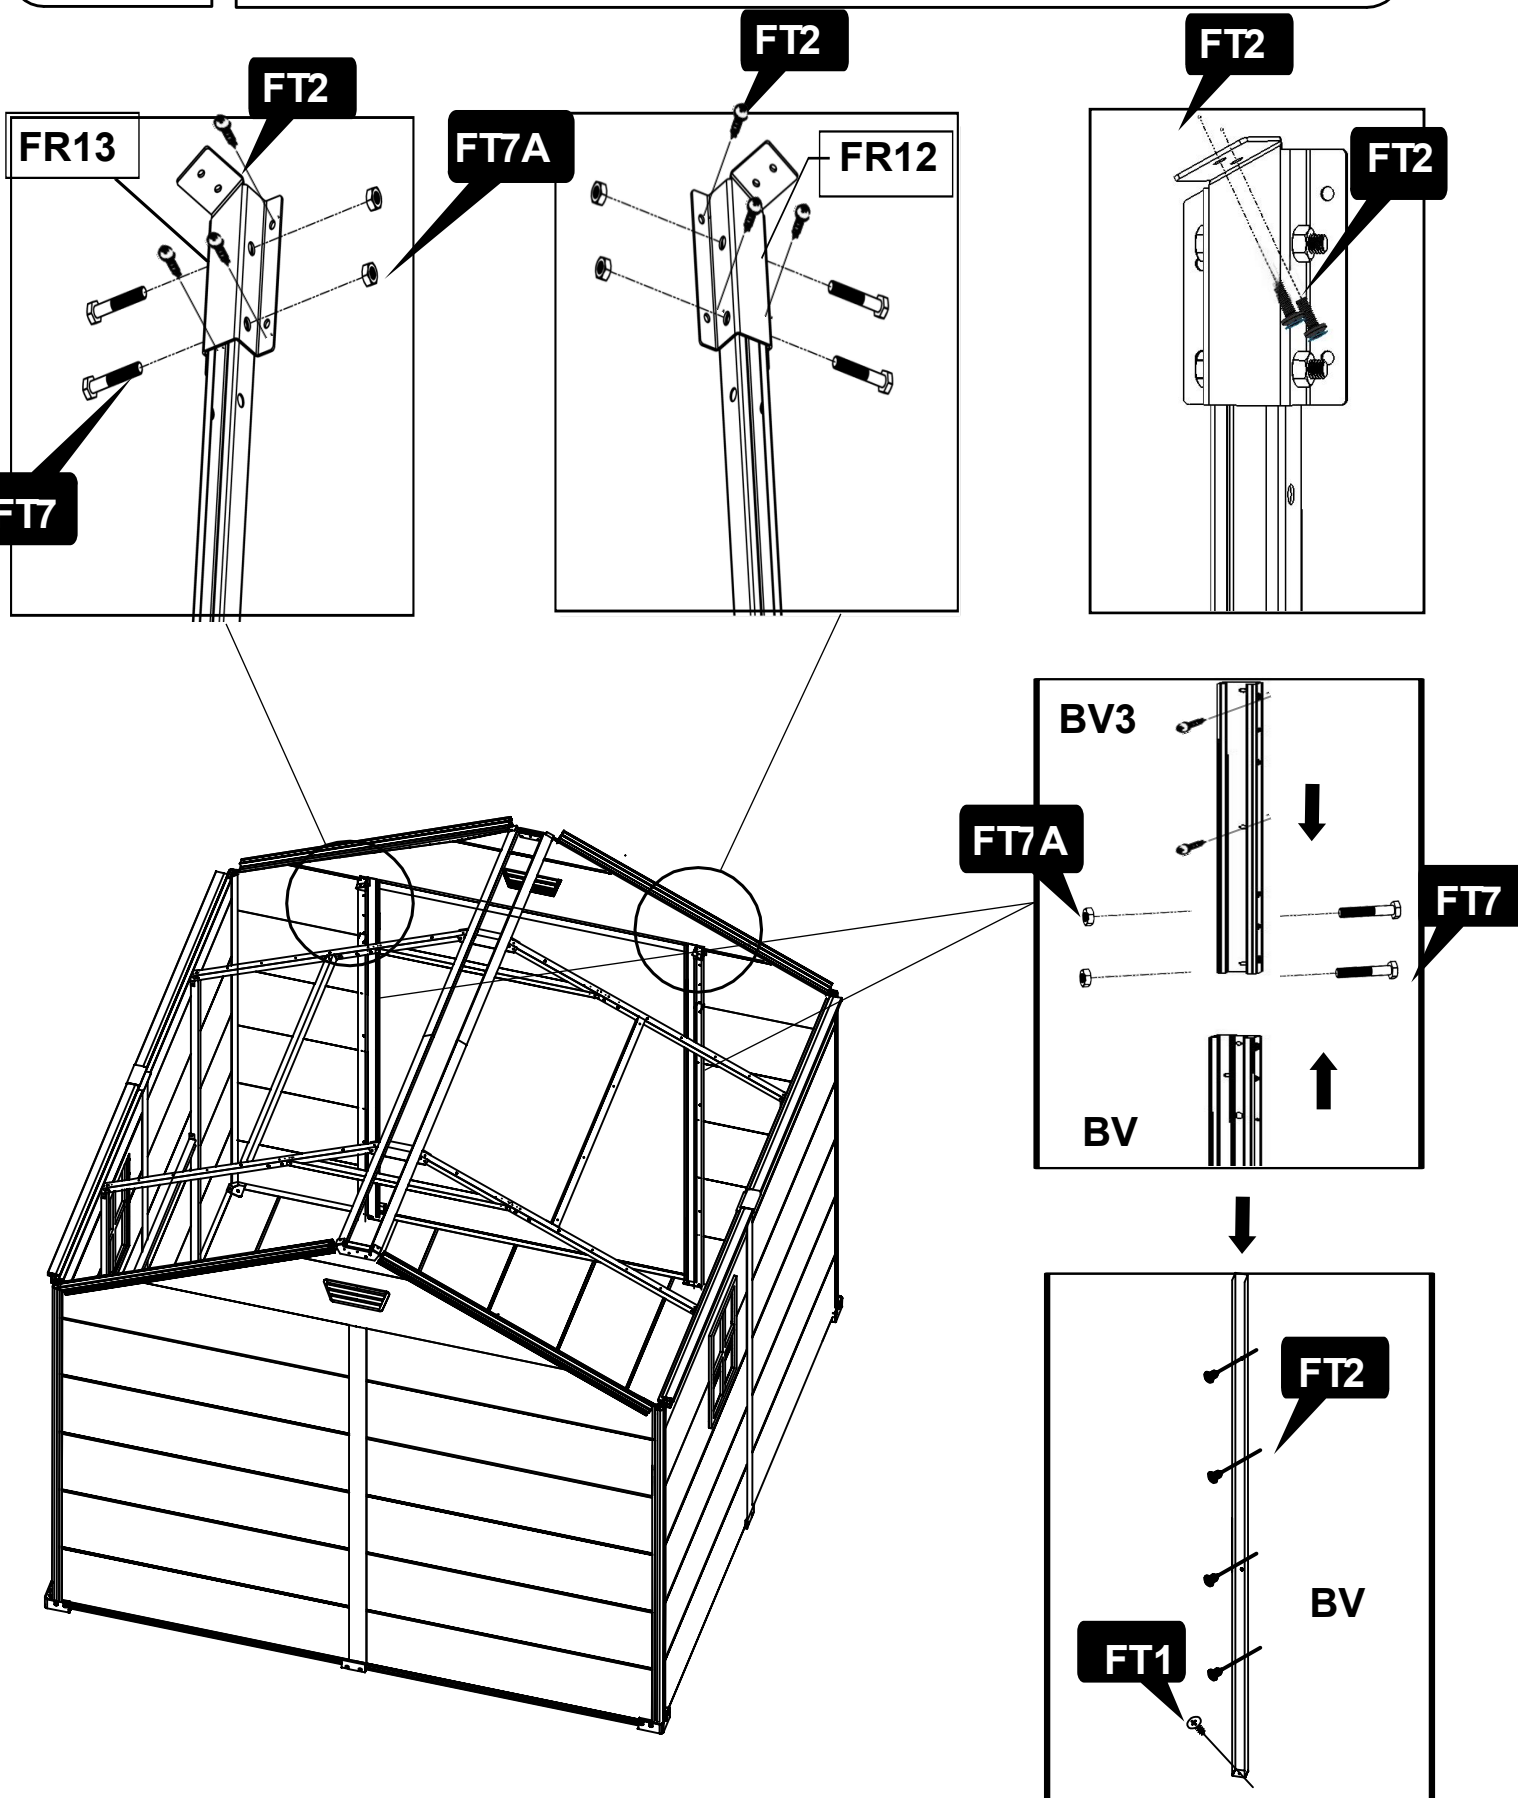

30



PSR
4pcs

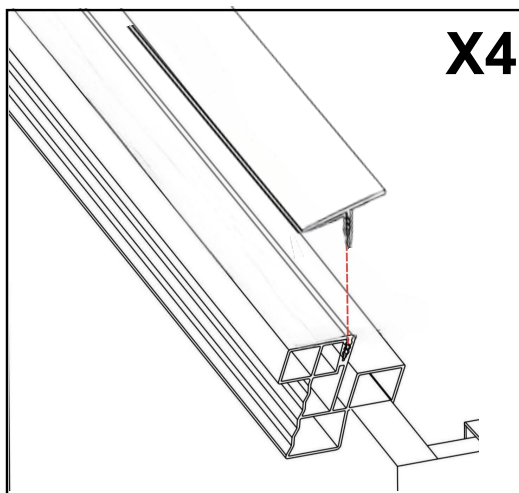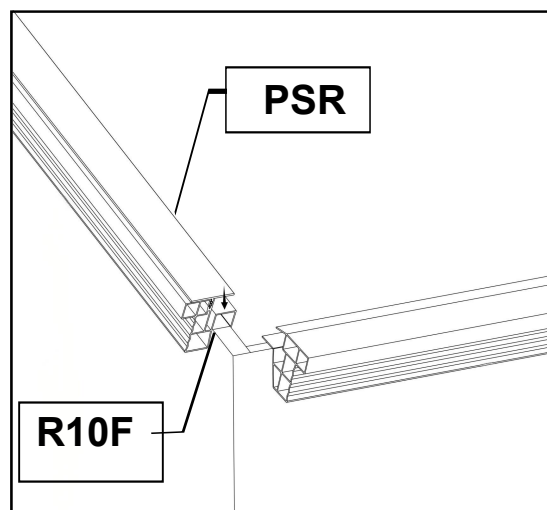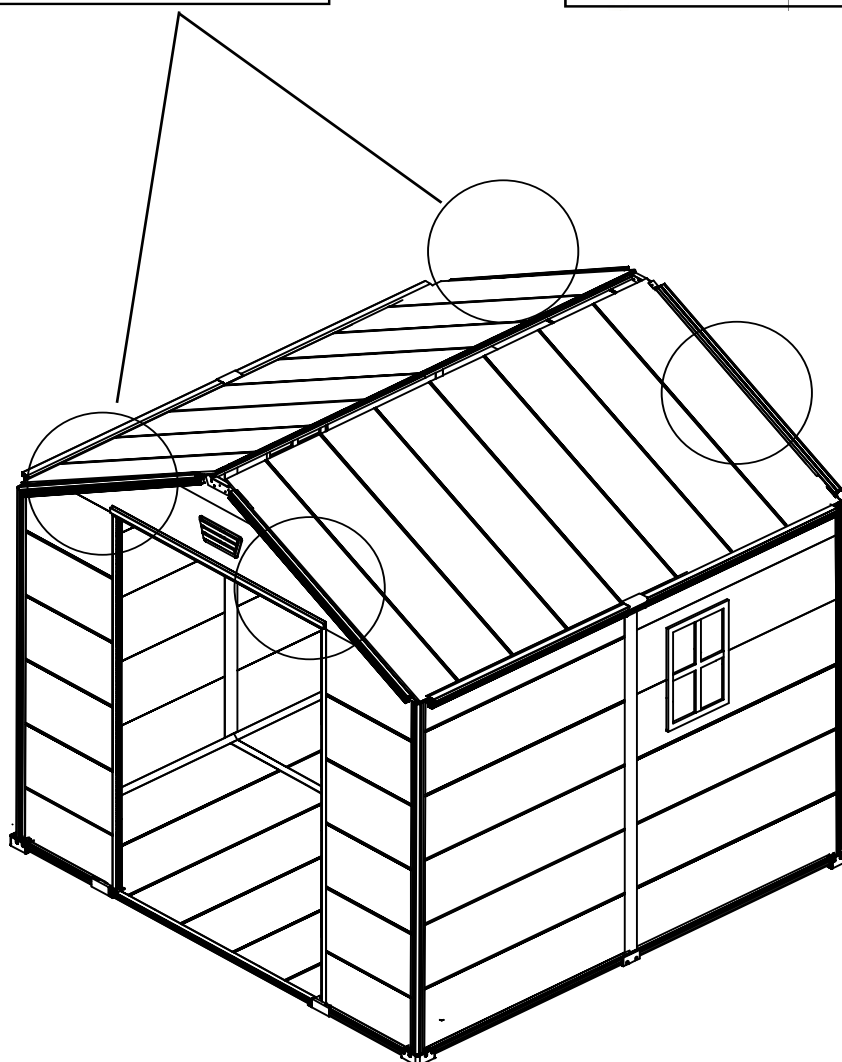

ASSEMBLY INSTRUCTIONS

31



RRC
1pc



RT
2pcs








FT1
8pcs



Rubber sealing strip
1pc

Rubber sealing strip
(X1)

Rubber sealing strips shall be affixed
to RRC as shown in the drawing.

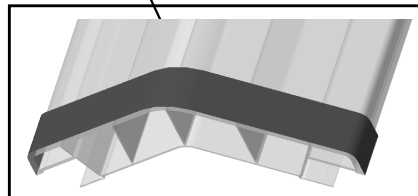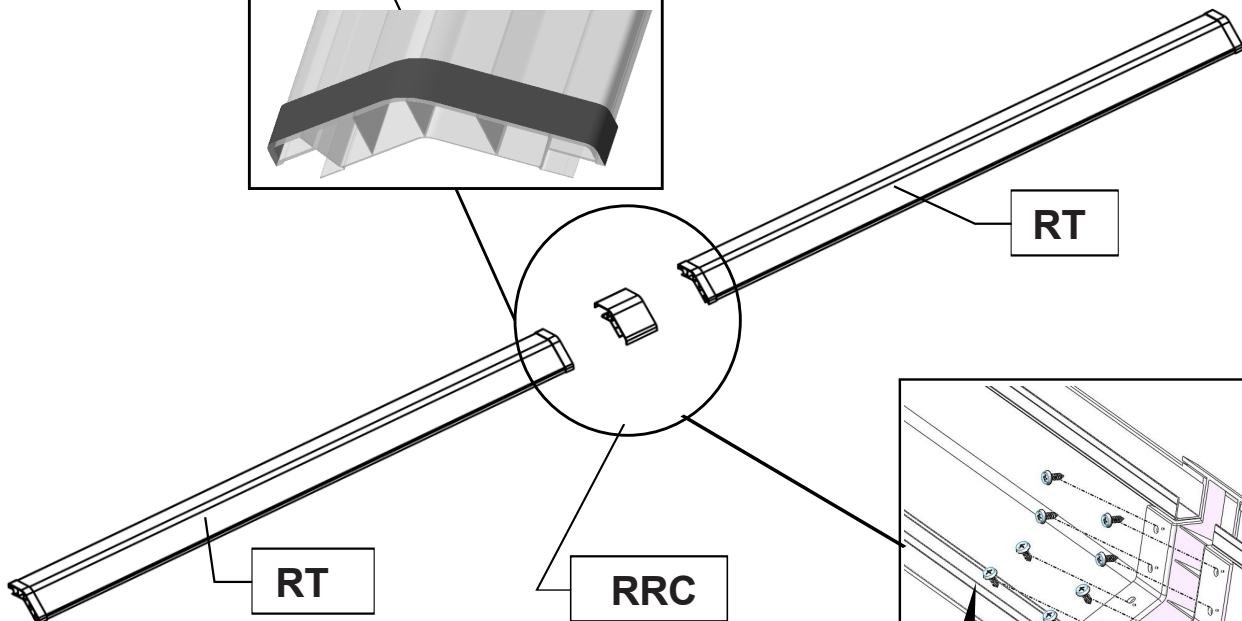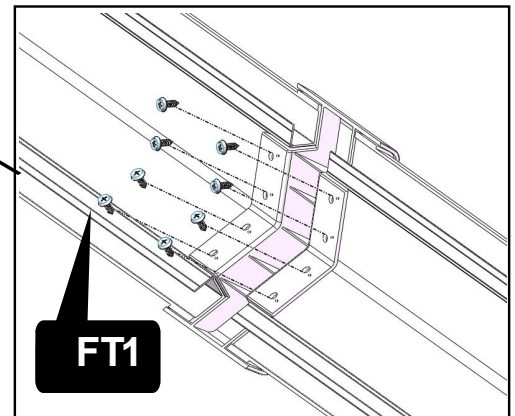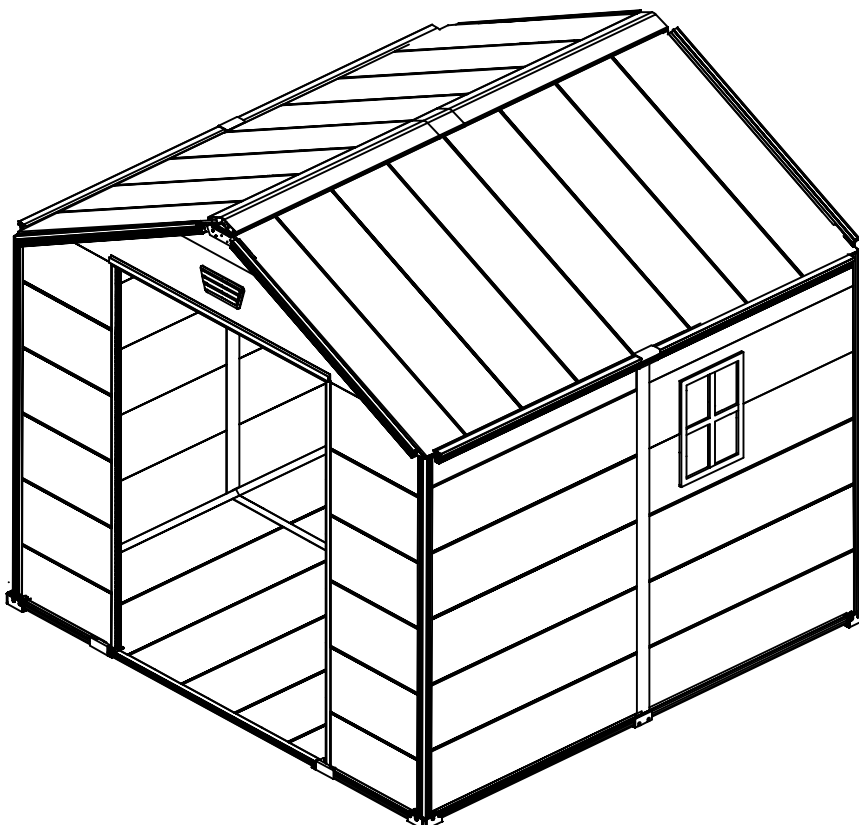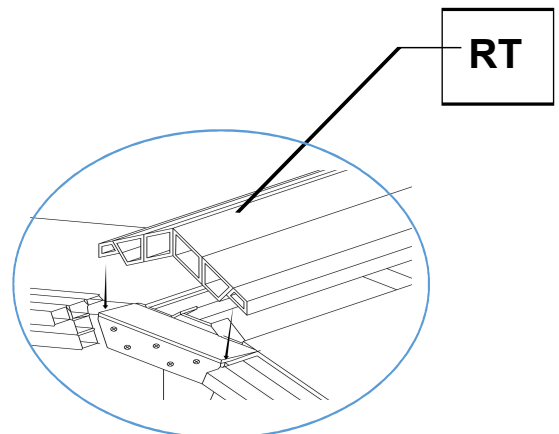


ASSEMBLY INSTRUCTIONS


32



FT3
16pcs

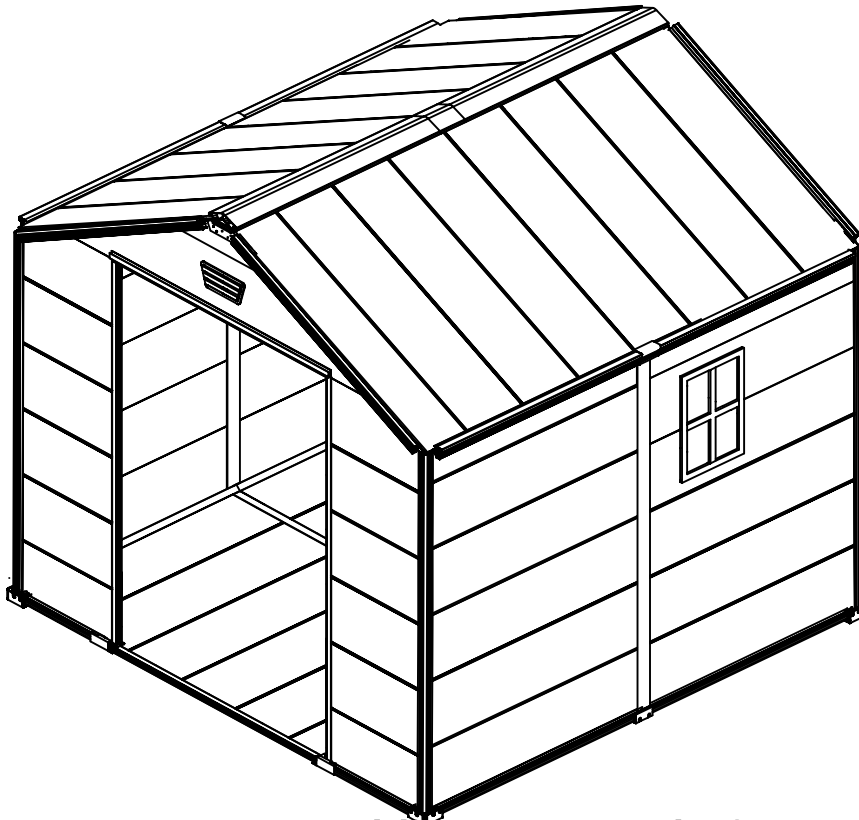


FT3 marking location as shown in drawing.

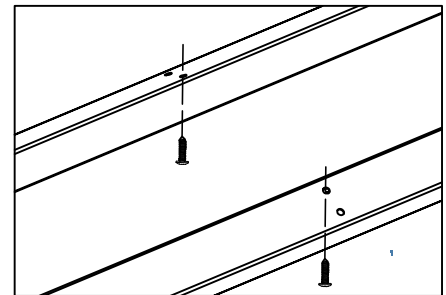

NOTE : Use drill to prop up before screwing for easier operation.

Fasten screws from front to back

Screw from inside of the shed Roof

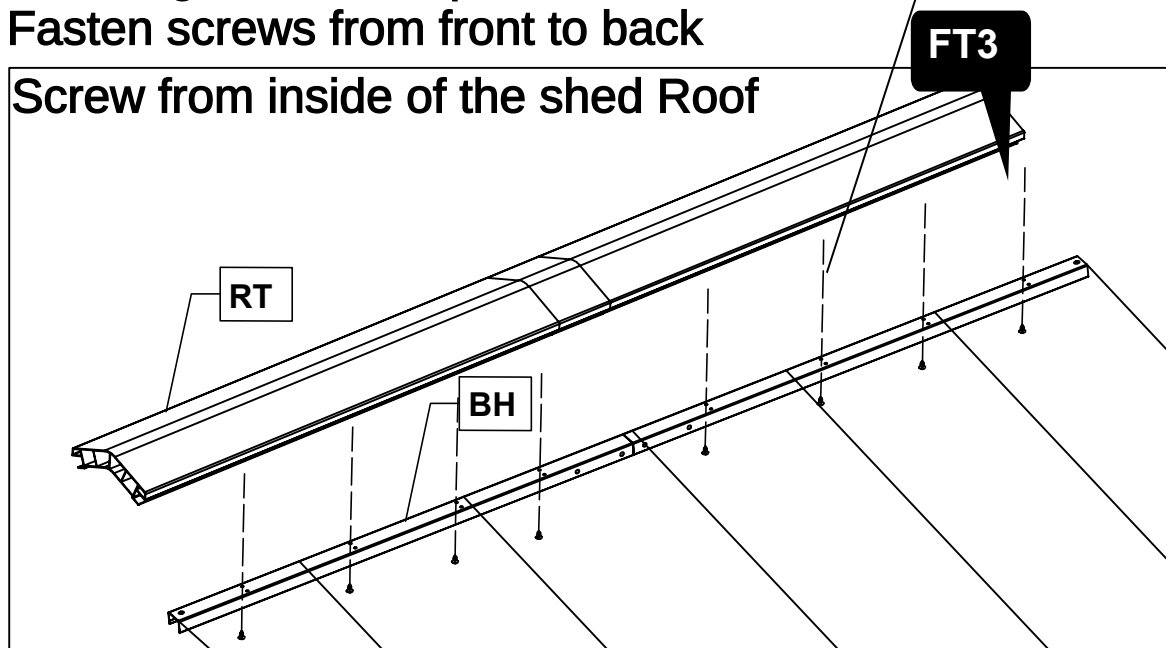

Align rt with the top plate




33



RRH
2pcs



FT1
8pcs

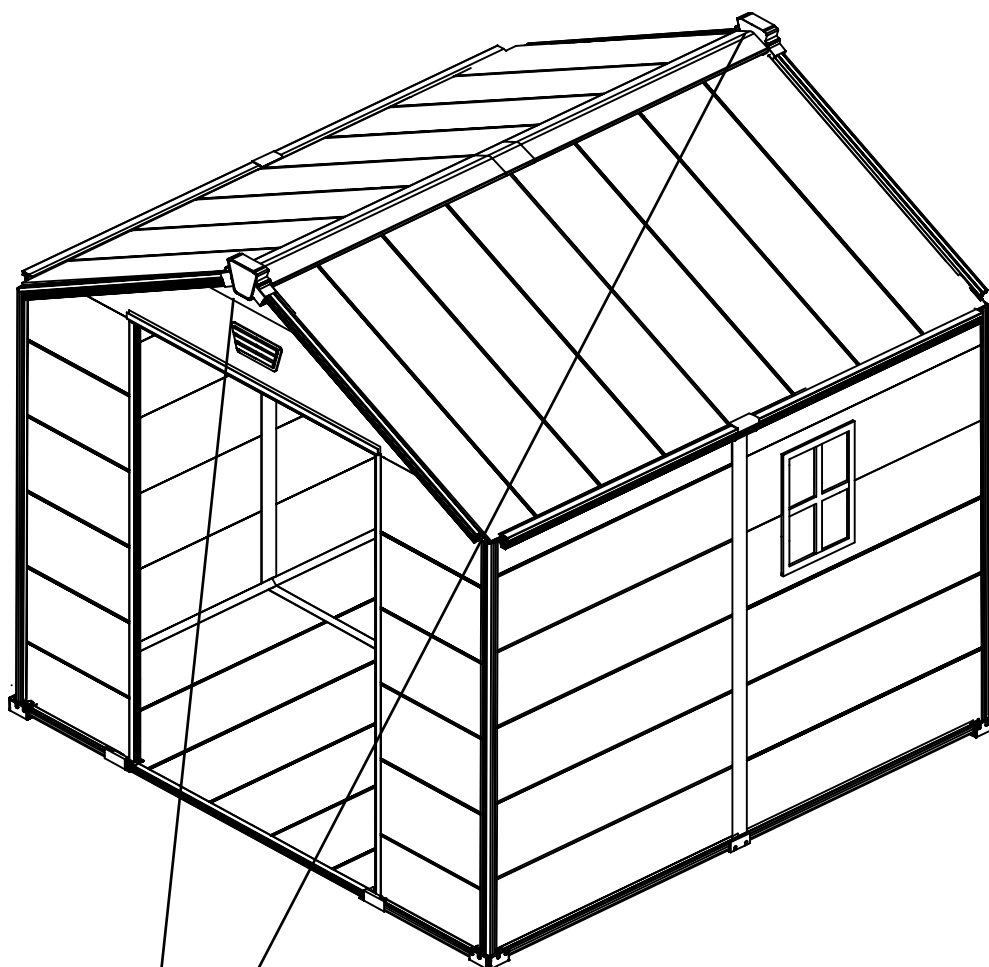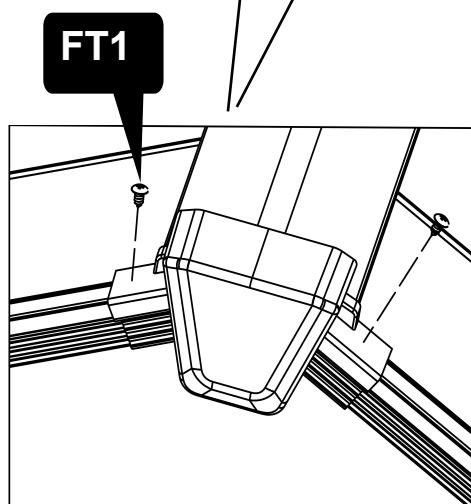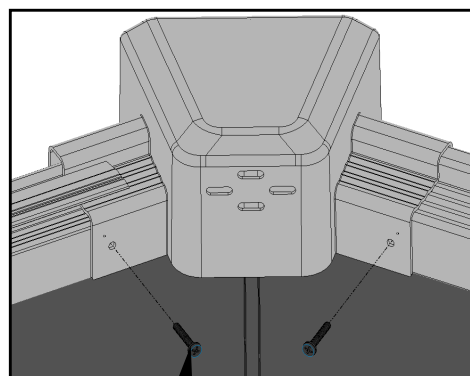

34



RRA
4pcs




FT11
8pcs



FT1
8pcs


FT1

FT11






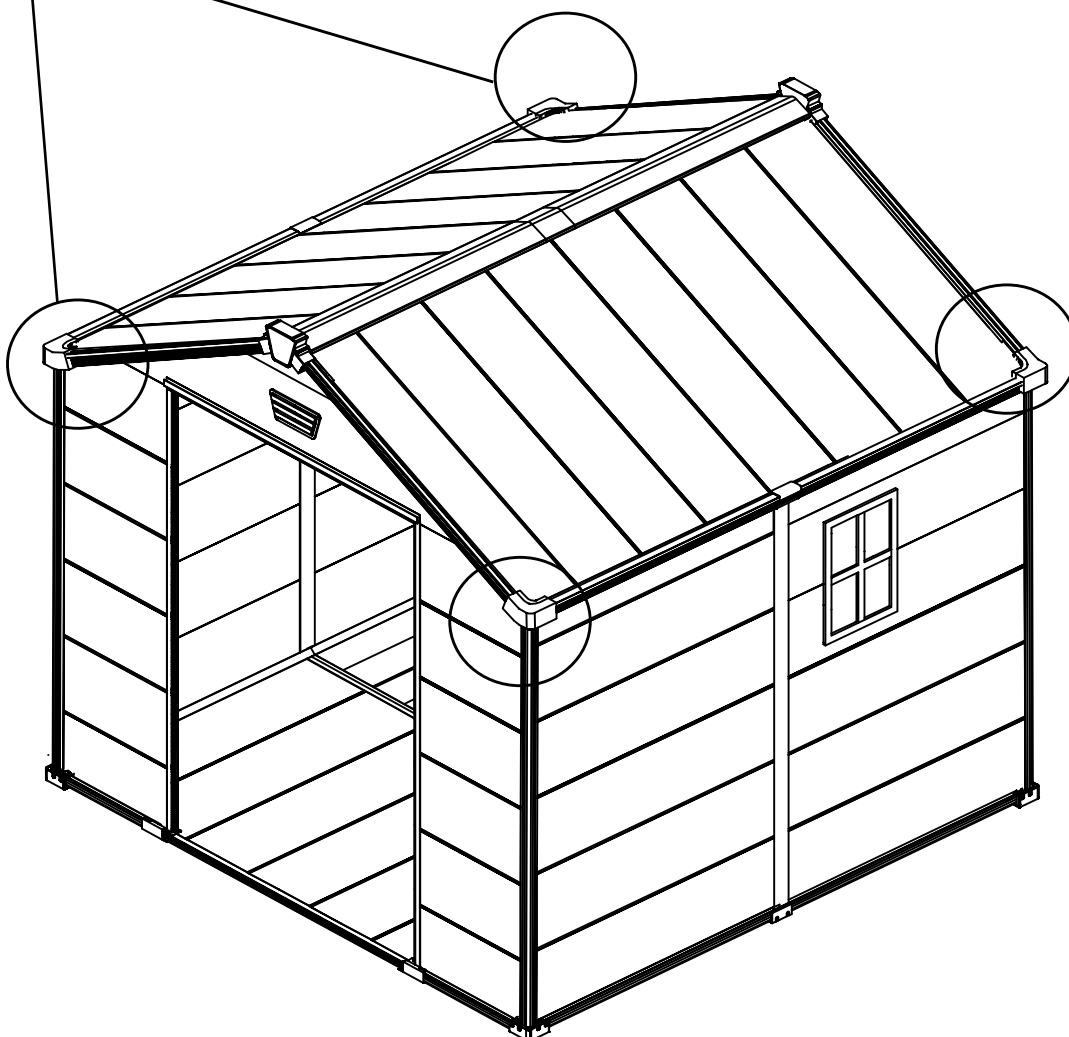


ASSEMBLY INSTRUCTIONS

35

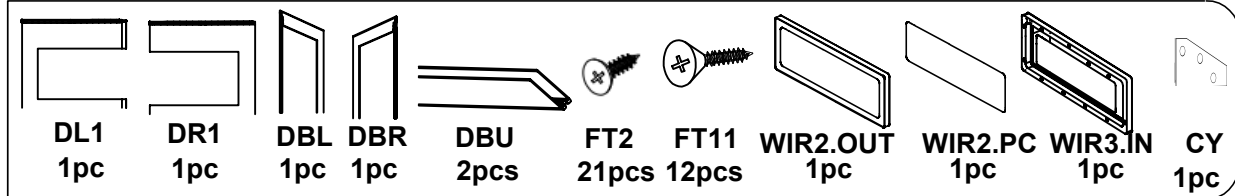


LEFT DOOR

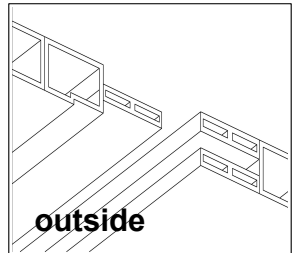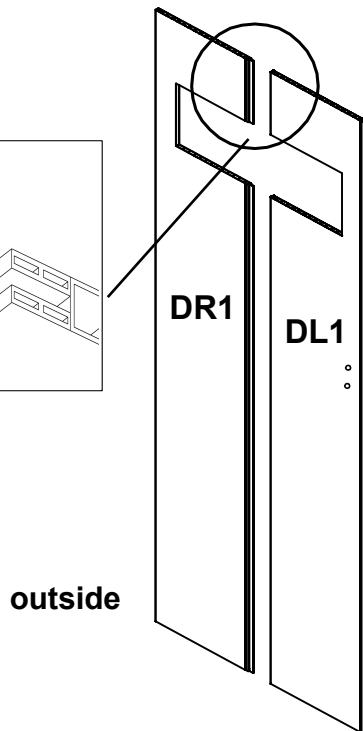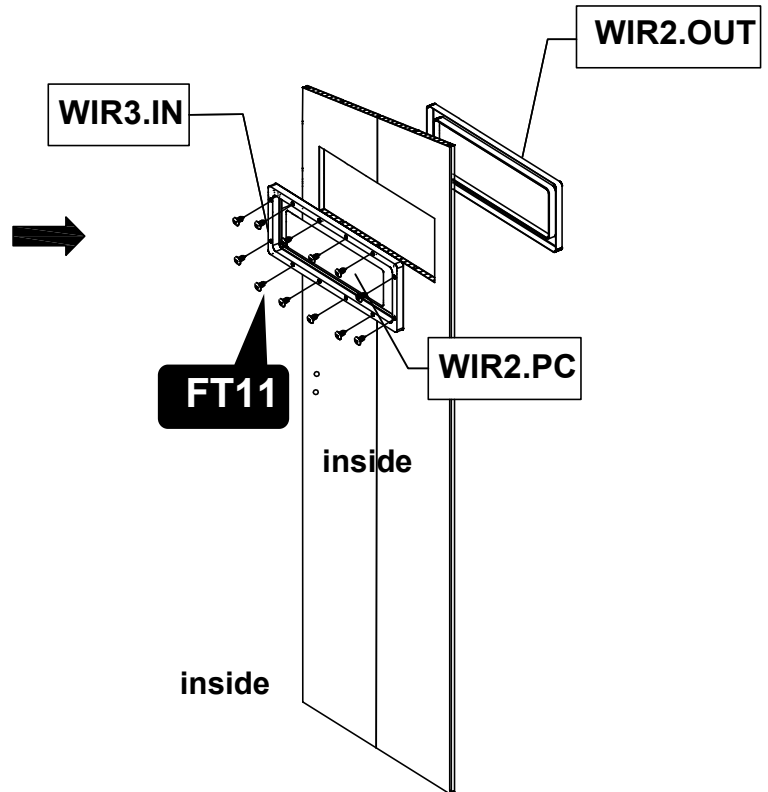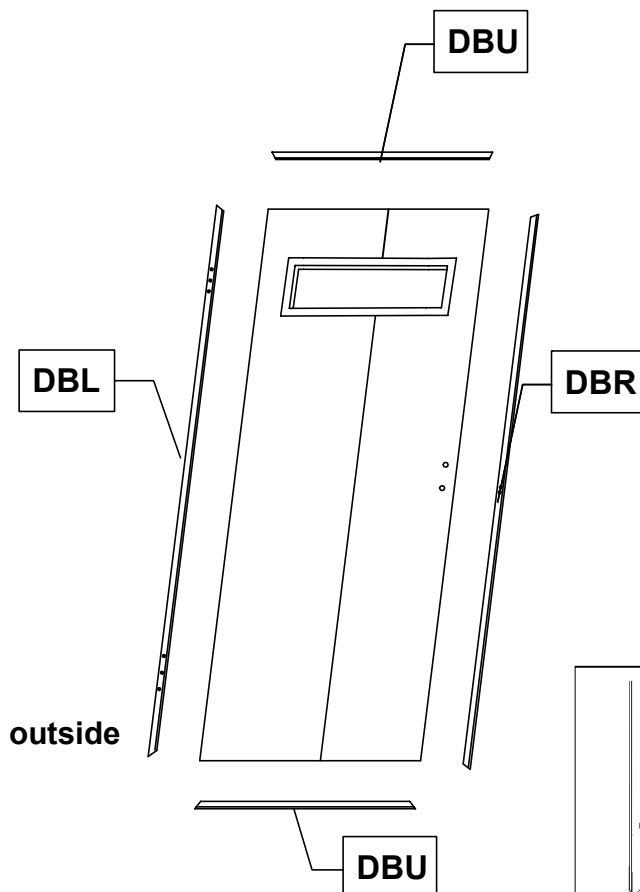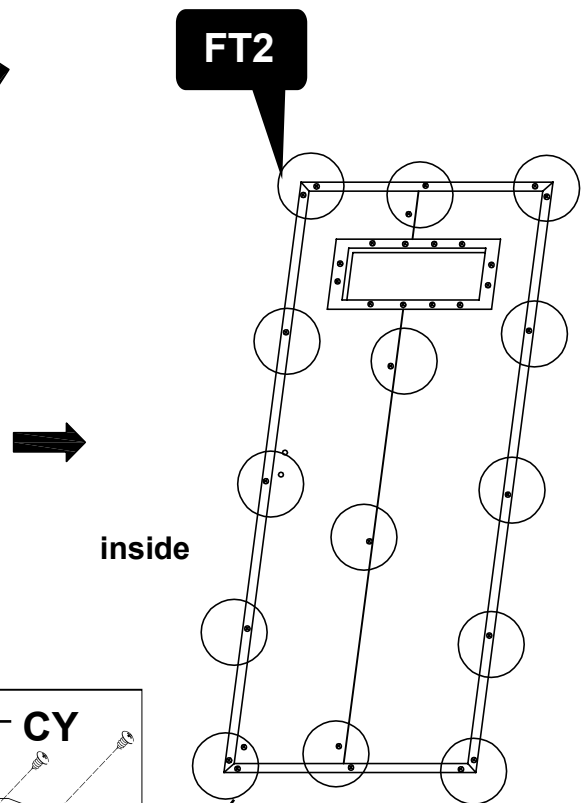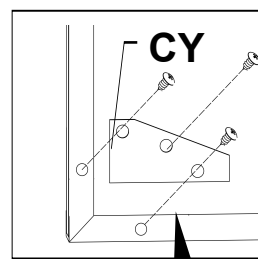



FT2

ASSEMBLY INSTRUCTIONS

36

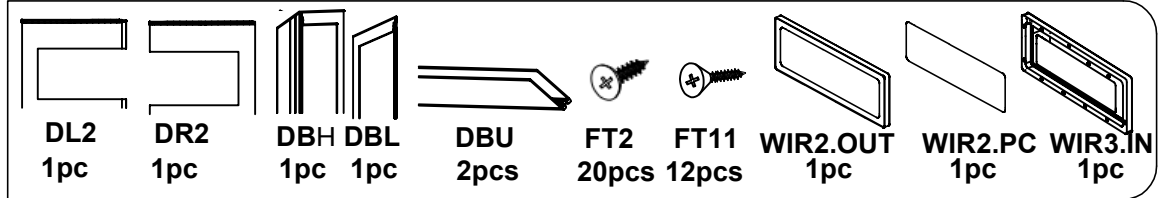

RIGHT DOOR

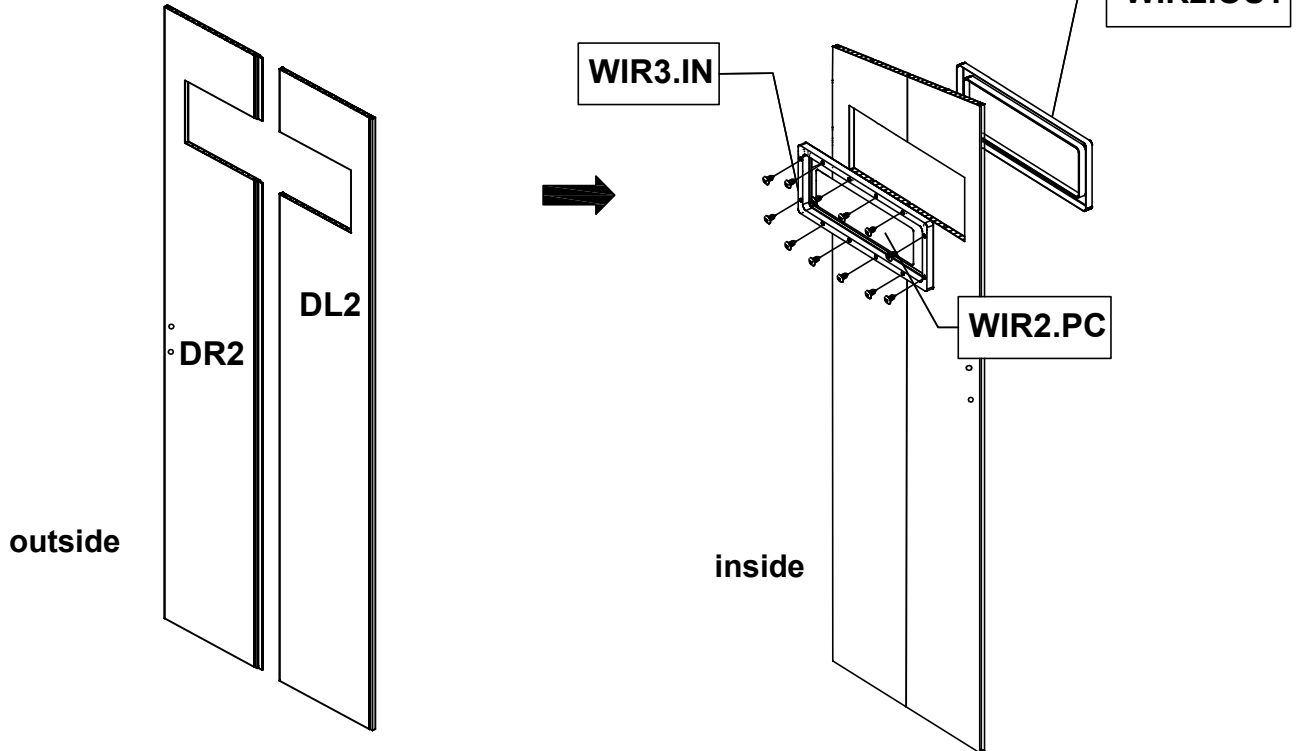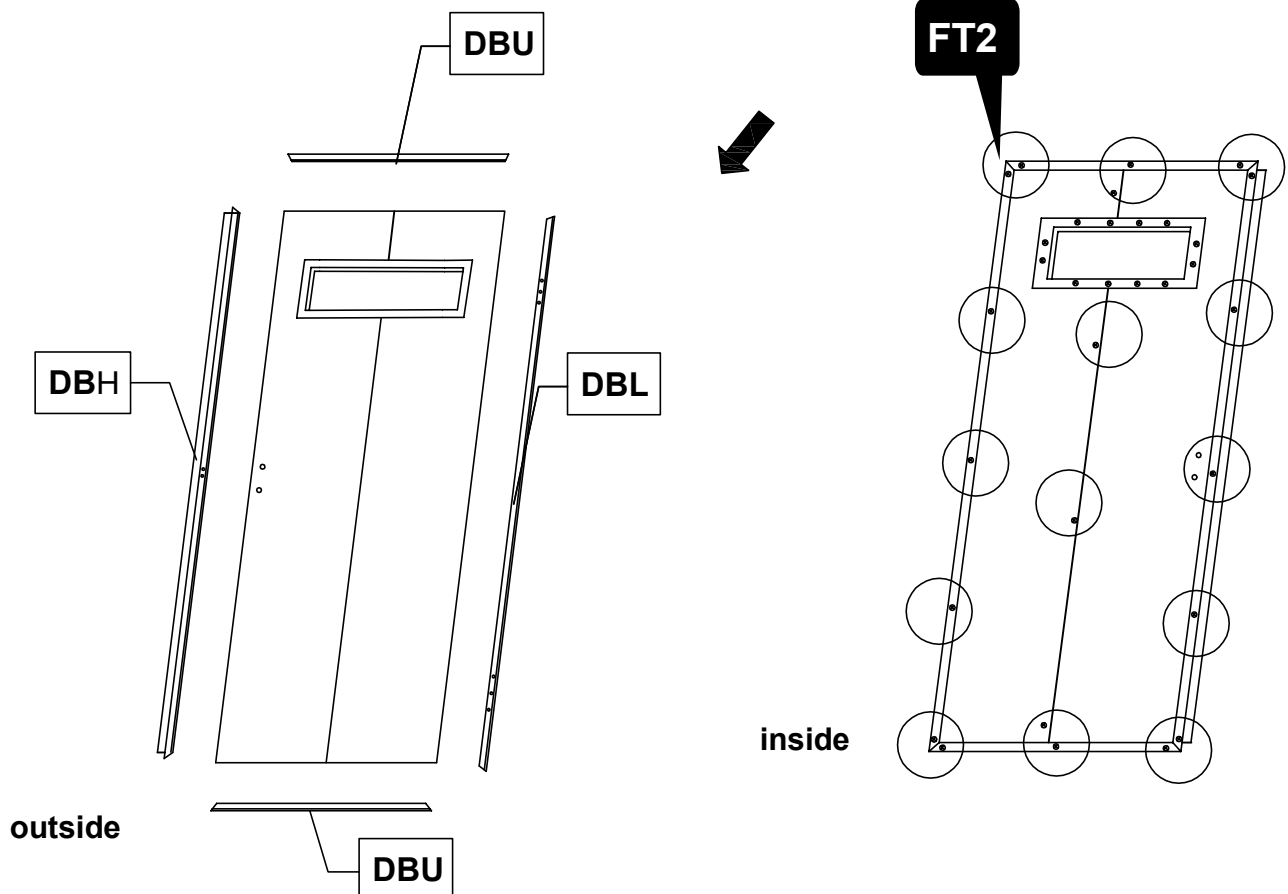

ASSEMBLY INSTRUCTIONS

37



DH2
1pc



DH1
1pc



HD7
2pcs




FT11
8pcs







FT14B
2pcs



FT14A
2pcs



FT14
2pcs

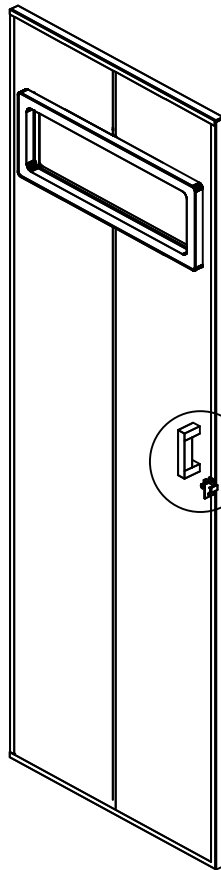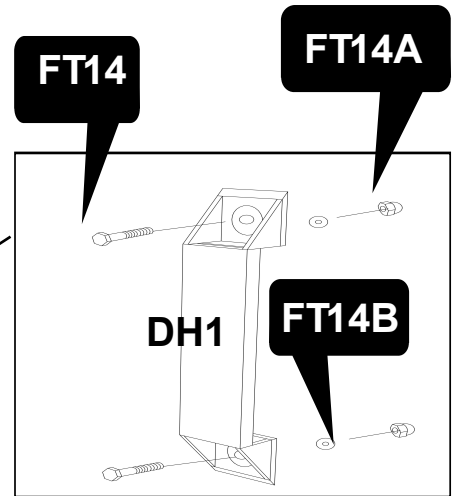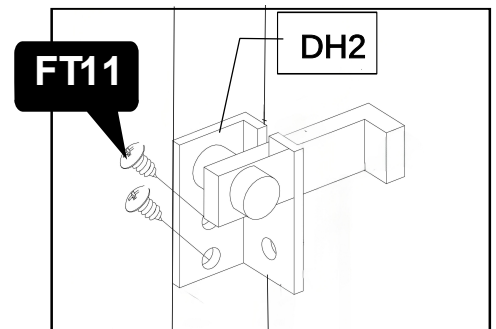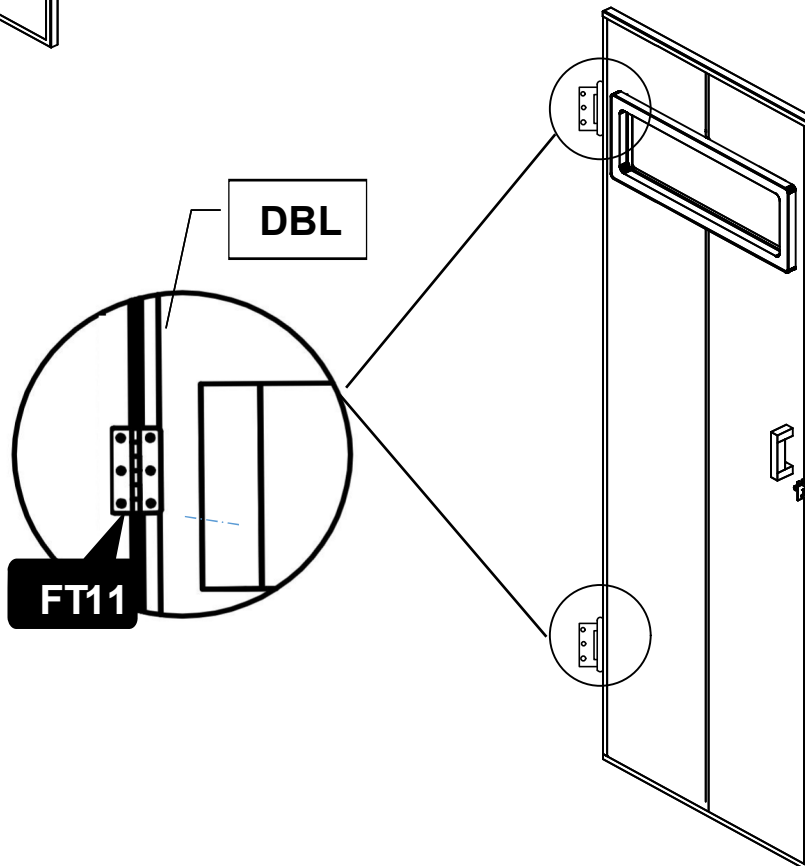

ASSEMBLY INSTRUCTIONS

38



DH1
1pc



HD7
2pcs




FT11
8pcs




FT14B
2pcs



FT14A
2pcs




FT14
2pcs

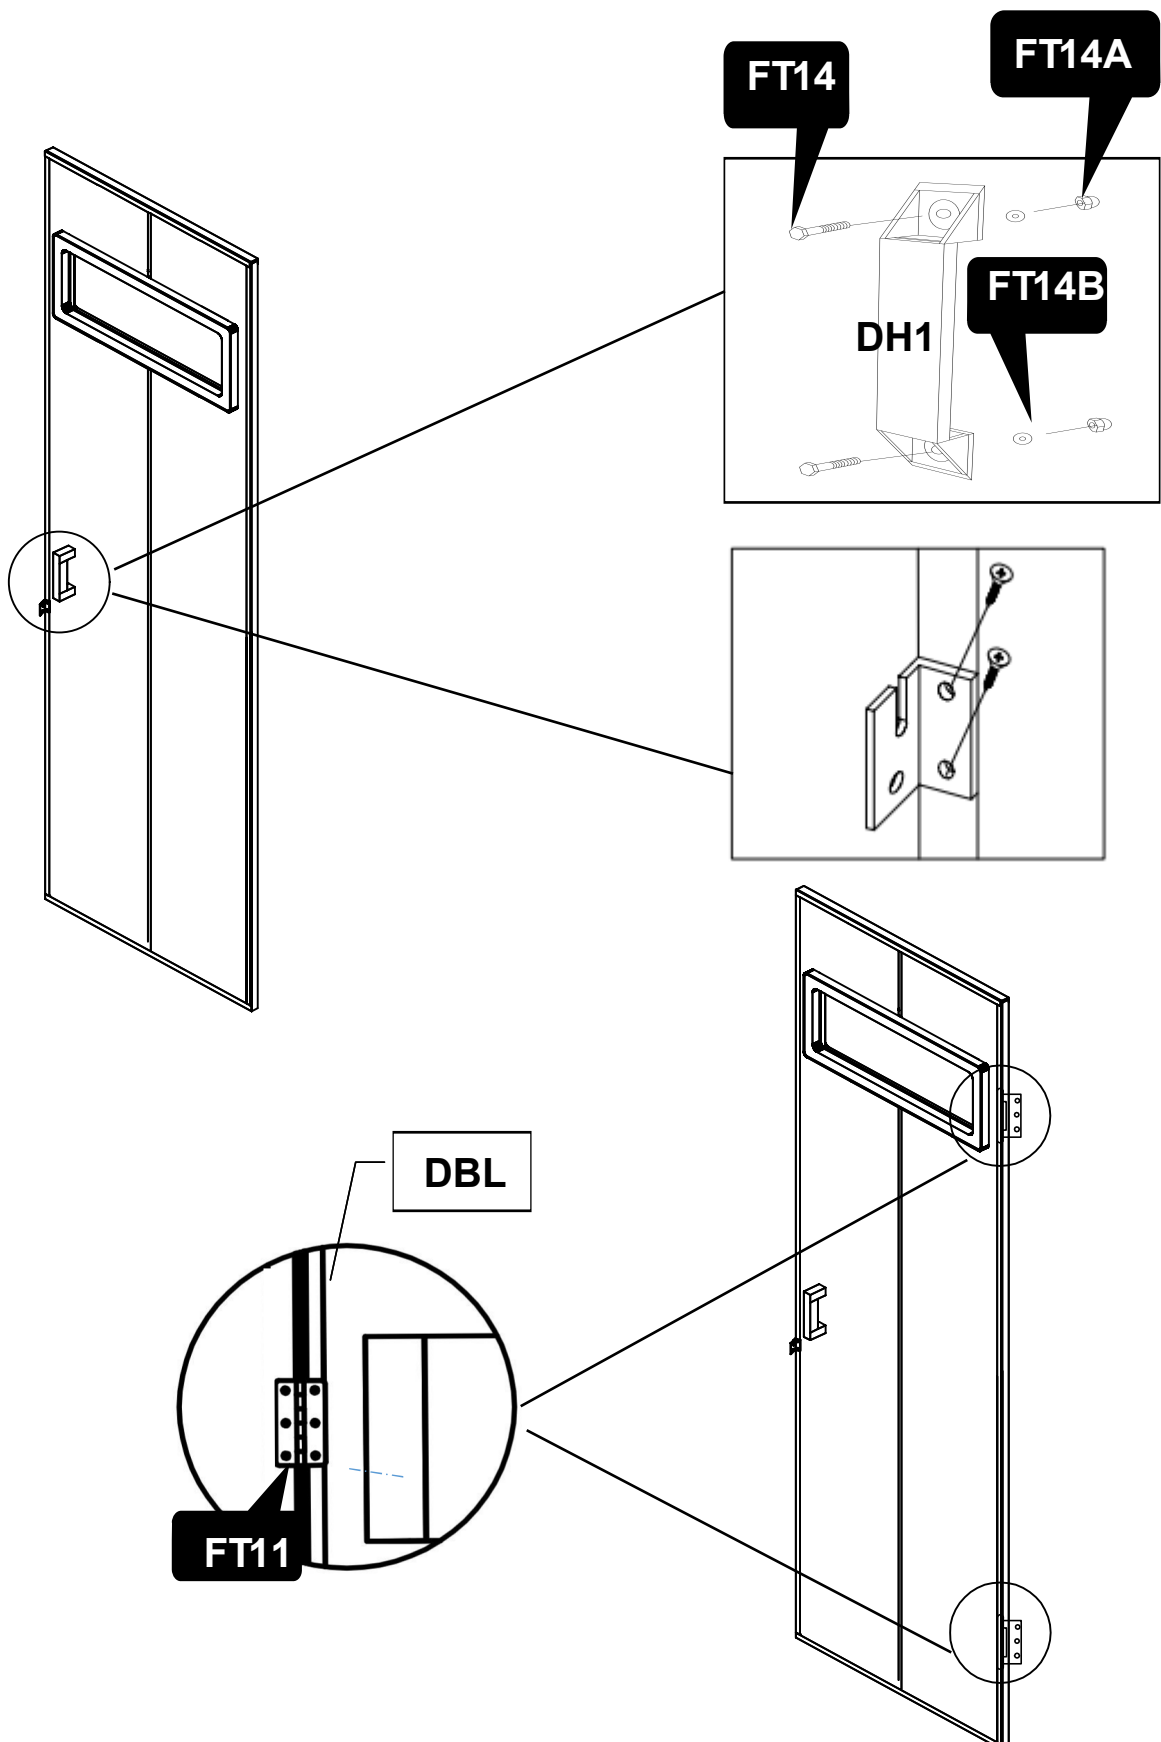



39

HD8
2pcs

FT1
4pcs

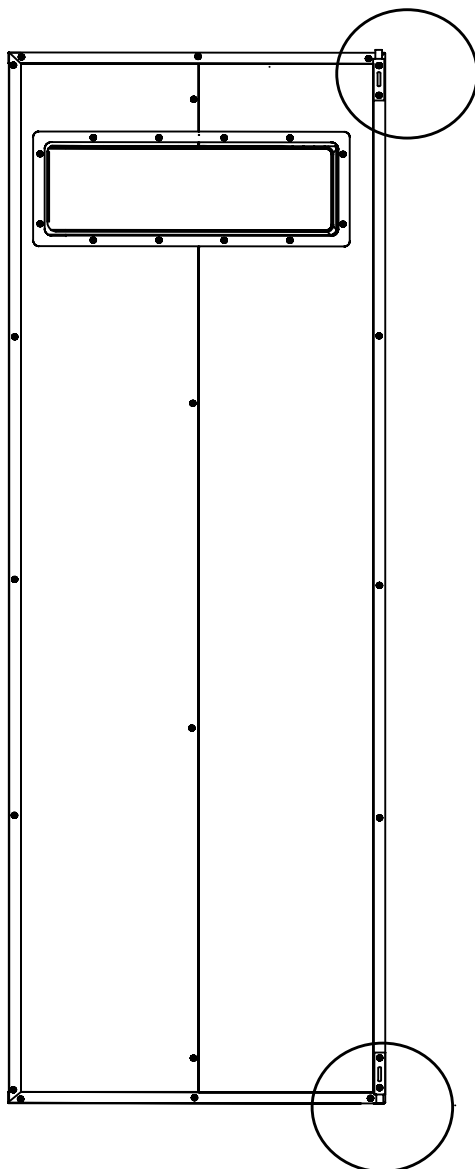

RIGHT DOOR

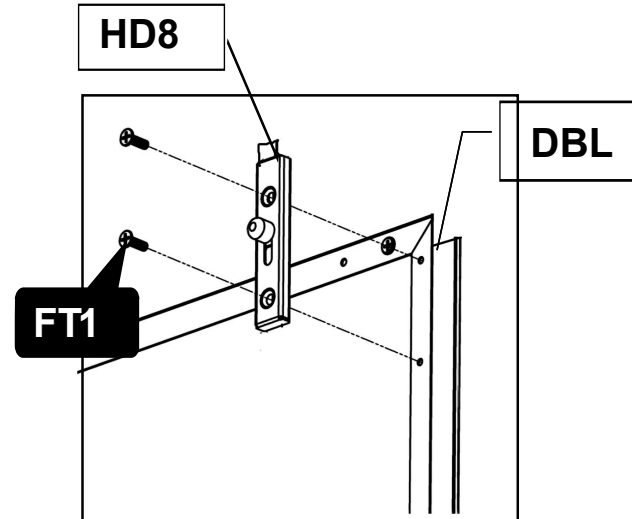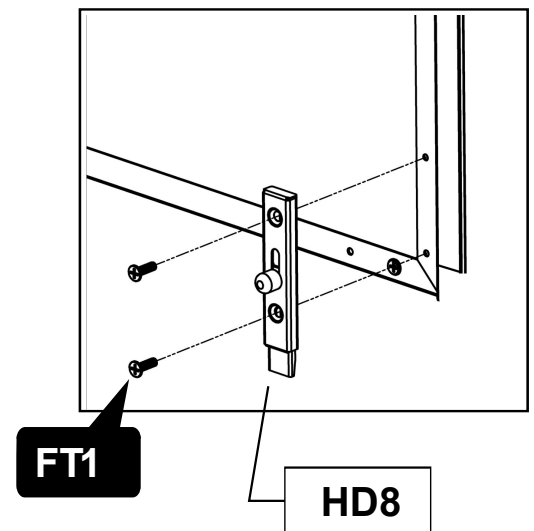

Install this part and tighten the screws gently and slowly.

ASSEMBLY INSTRUCTIONS

40



FT11
12pcs




FT12
4pcs

OR



FT3
4pcs

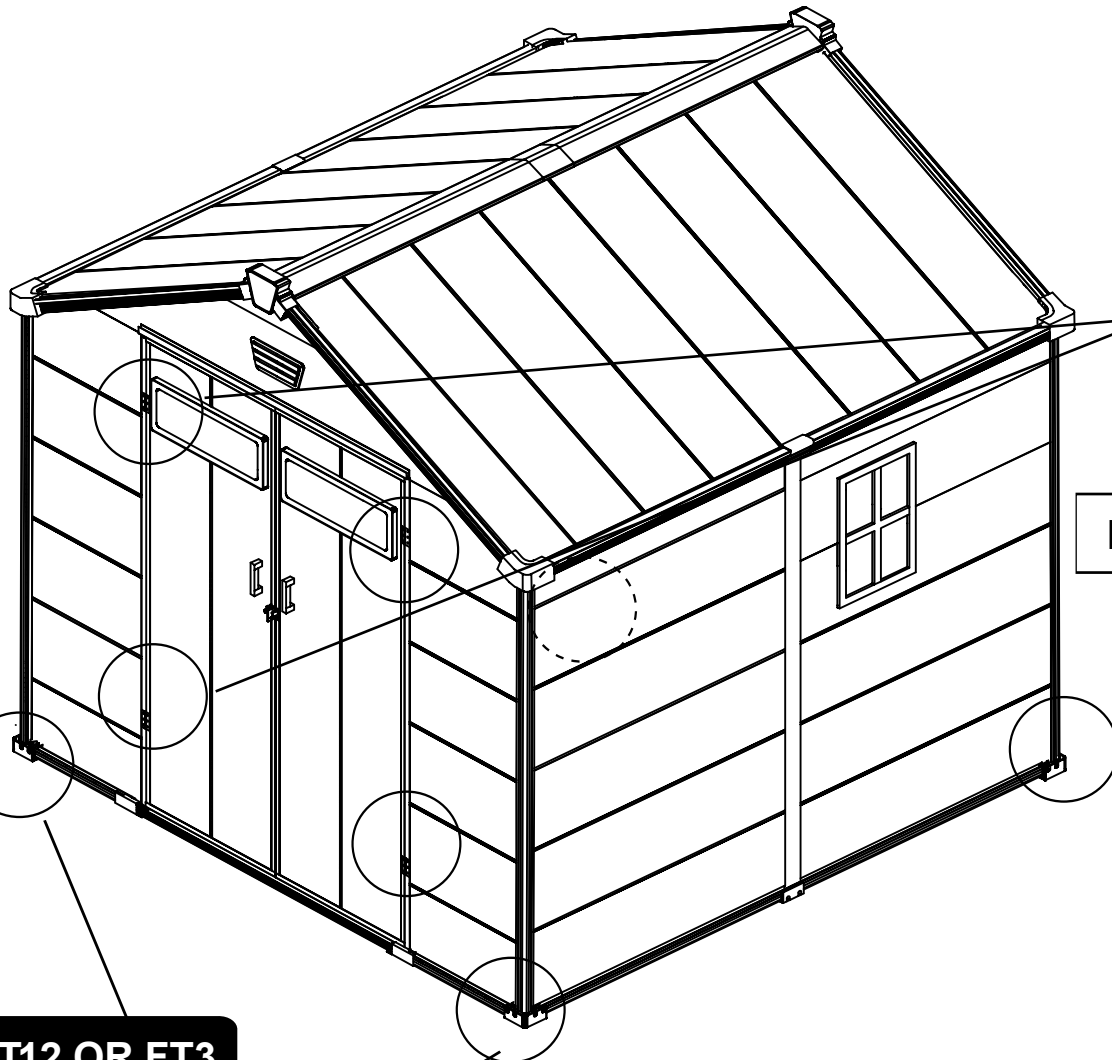

DBL

DAL

FT11

FT12 OR FT3

FD1

X4

If you need to anchor the shed to a level solid surface (such as concrete or a wooden deck), please first remove the four FT2 screws installed during assembly (located at the four corners). Next, using your own impact drill, drill through the flooring at those same locations; then, secure the shed using FT12 screws for concrete surfaces or FT3 screws for wooden decking.

Thank you for purchasing and using our product; please feel free to contact us if you have any questions or feedback.