


INSTALLATION INSTRUCTIONS – In Cabinet

STEP 1


Cabinet must be at least 20"W x 20"D.

Place CABINET MOUNTING TEMPLATE (G) inside your cabinet. Using a pencil, mark the location where you plan to install the CABINET SCREWS (F).

- To ease installation you can pre-drill small holes at the marked locations.

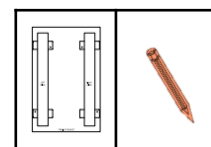

G (1)

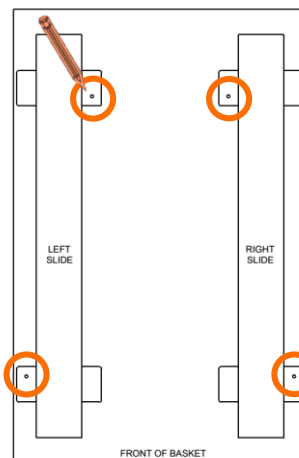


STEP 2

Identify LEFT (B) and RIGHT (C) SLIDES.

- Note that the BACK end of each SLIDE (B & C) has a black tip and the FRONT end does NOT.

Place LEFT (B) RIGHT (C) SLIDES in their proper orientation and desired position inside the cabinet.


Extend the SLIDES (B) & (C) slightly and align the center of the oval slots to your marking in the cabinet. Use the self-tapping CABINET SCREWS (F) to fasten the LEFT (B) and RIGHT (C) SLIDES in your cabinet.

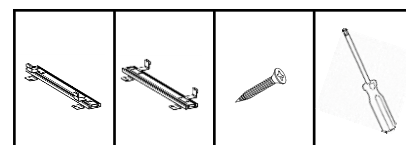

B (1)

C (1)


F (4)

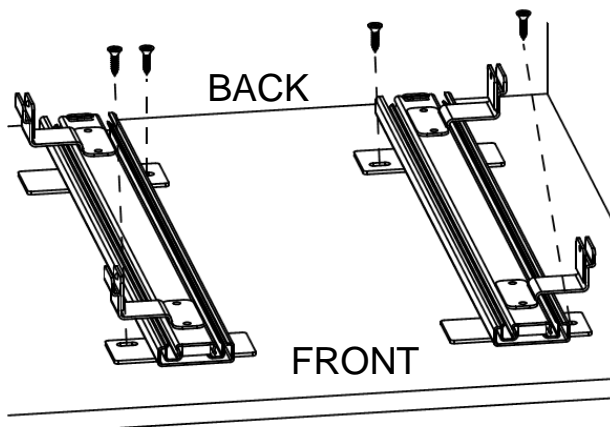

INSTALLATION INSTRUCTIONS – In Cabinet


STEP 3

Align POT ORGANIZER (A) at the marked location and push it into the Clips of the LEFT (B) RIGHT (C) SLIDES



A (1)

Installation Suggestion: With the POT ORGANIZER (A) resting on top of the Clips, brace the top of the POT ORGANIZER (A) with one hand and, with a rubber mallet, lightly tap each bottom corner of the POT ORGANIZER (A) to secure the POT ORGANIZER (A) into the Clips.

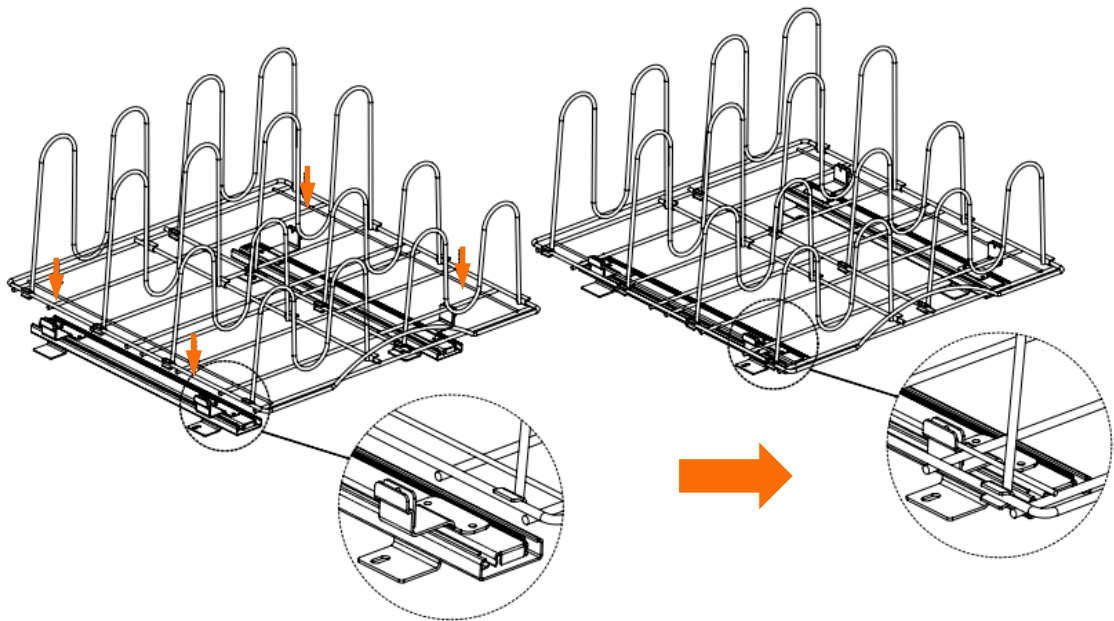


INSTALLATION INSTRUCTIONS – On Wire Rack

STEP 1

The wire shelf needs to be a minimum of 20" in depth.

Identify the LEFT (B) & RIGHT (C) SLIDES.


- Note that the BACK end of each SLIDE (B & C) has a black tip and the FRONT end does NOT.

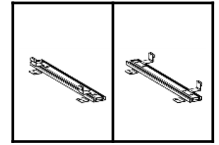

Place SLIDES (B & C) on desired wire shelf. Make sure the FRONT of the SLIDES (B & C) are lined up with the FRONT of the shelf.

Line up the slides along the wires in the wire shelf to ensure they are straight. Make sure the back edge of the POT ORGANIZER (A) lines up to the edge of the shelf so they are flush.

CLIPS should be on the OUTSIDE.


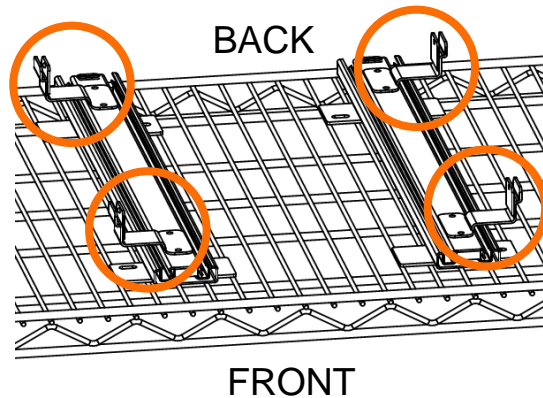


STEP 2

Rest POT ORGANIZER (A) on top of the Clips to ensure proper SLIDE (B & C) spacing.

- Note: For ease of installation, do NOT clip the POT ORGANIZER (A) into the LEFT (B) and RIGHT (C) SLIDES until Step 4.

Position as such:

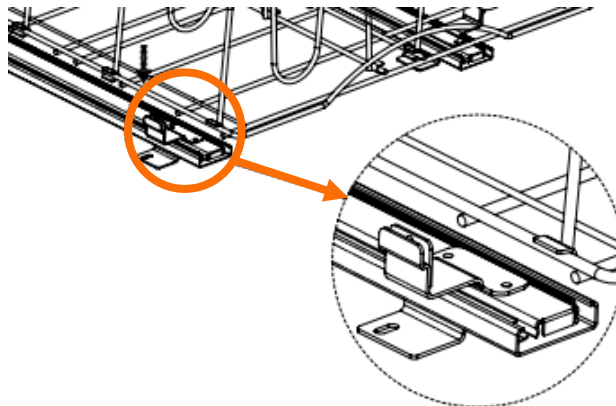


A (1)

INSTALLATION INSTRUCTIONS – On Wire Rack

STEP 3


With a Phillips screwdriver, secure the SLIDES (B & C) to the wire shelf by putting PLATE SCREWS (E) through the slots and fasten to the RACK PLATES (D).

Note: RACK PLATES (D) need to be installed from the underside of the shelf.

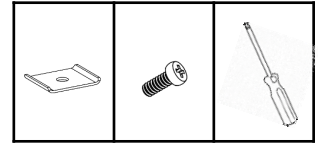

D (4)

E (4)

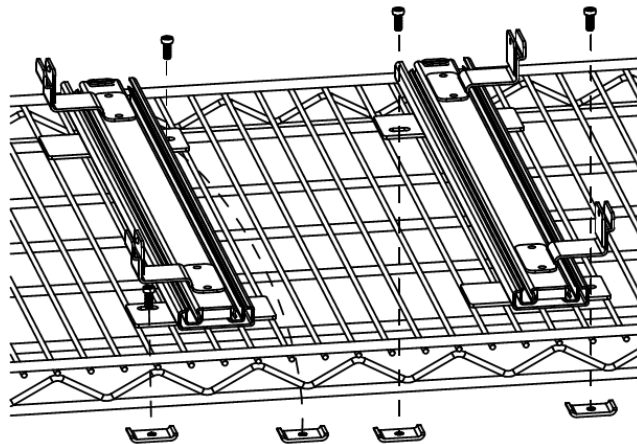

STEP 4

Attach the POT ORGANIZER (A) to the Clips in the LEFT (B) and RIGHT (C) SLIDES until it clicks into the Clip.

Installation Suggestion: With the POT ORGANIZER (A) resting on top of the Clip, brace the top of the POT ORGANIZER (A) with one hand and, with a rubber mallet, lightly tap each bottom corner of the Clips to secure the POT ORGANIZER (A) into the Clips.

