

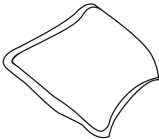
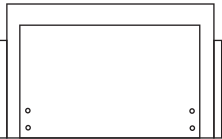




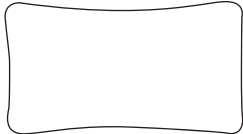






2. Part List

- Notice
- Use MCombo parts only for all replacements.

Box 1			
A Seat Frame x1 	B Seat Cushion x1 	C Arm Frame x1 	D Armrest Cushion x1 
E Back Frame x1 	F Back Cushion x1 	G Throw Pillow X 1 	J Sofa Leg x4 
Box 1 — Hardware Pack			
1 Flat Washer x16 	2 Rubber Washer x4 	3 Hex Bolt M8x65mm x8 	
4 Hex Bolt M8x80mm x4 	5 Wing Nut x4 	6 Allen Wrench x1 	


Box MS		
A Seat Frame x1 	B Seat Cushion x1 	E Back Frame x1 
F Back Cushion x1 	G Throw Pillow X 1 	J Sofa Leg x4 
Box MS — Hardware Pack		
1 Flat Washer x12 	2 Rubber Washer x4 	3 Hex Bolt M8x65mm x4 
4 Hex Bolt M8x80mm x4 	5 Wing Nut x4 	6 Allen Wrench x1 

Box OT			
H Ottoman x1	I Ottoman Cushion x1	J Sofa Leg x4	② Rubber Washer x4
			

NOTE:
All Legs and Washers are stored under the backrests, armrests or ottomans.

3. Assembly Steps


● **Note** —
All models share the same simple assembly steps. Larger configurations just repeat the same module connections — it’s easier than it looks.

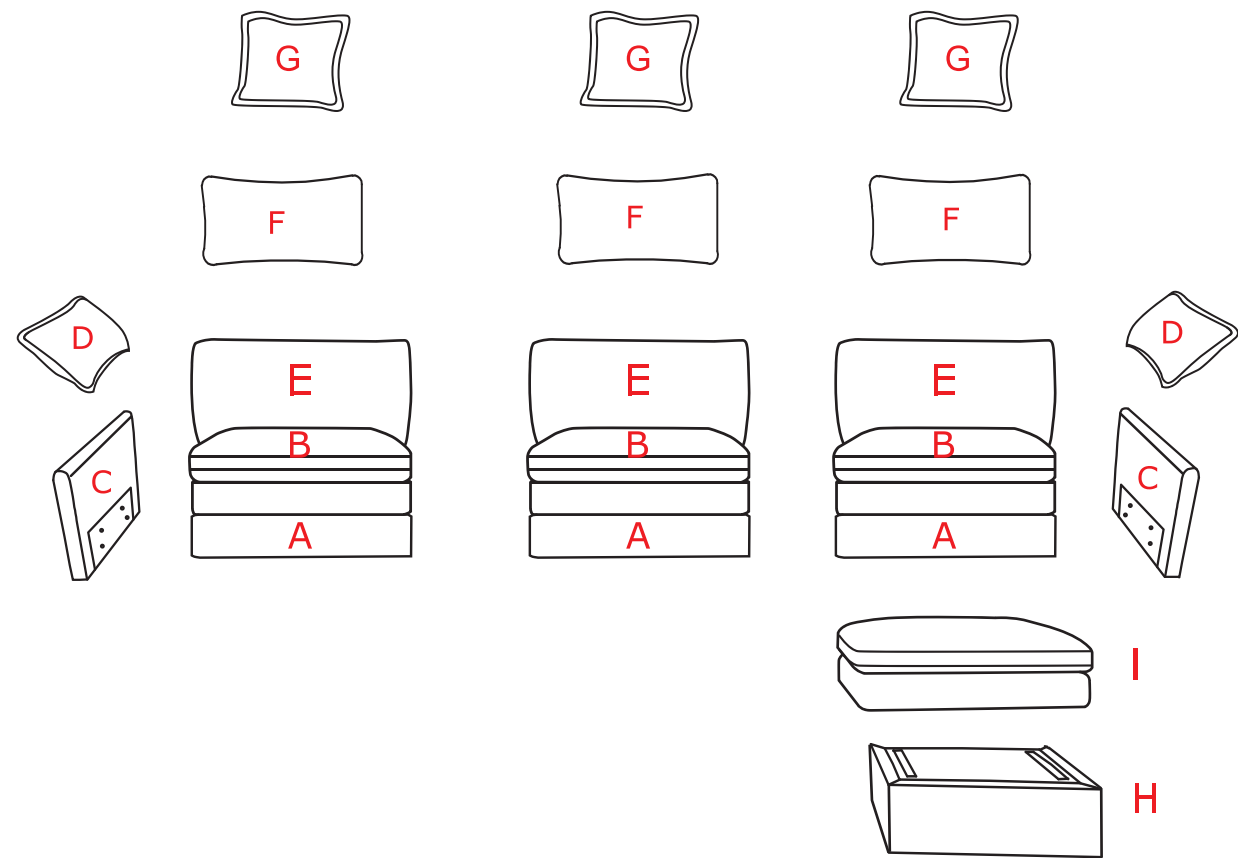


Step 1 - Unpacking and Parts Inspection

- Carefully open each box.
- Count all parts and set them aside neatly — a little preparation makes the rest of the assembly smoother.


BOX 1

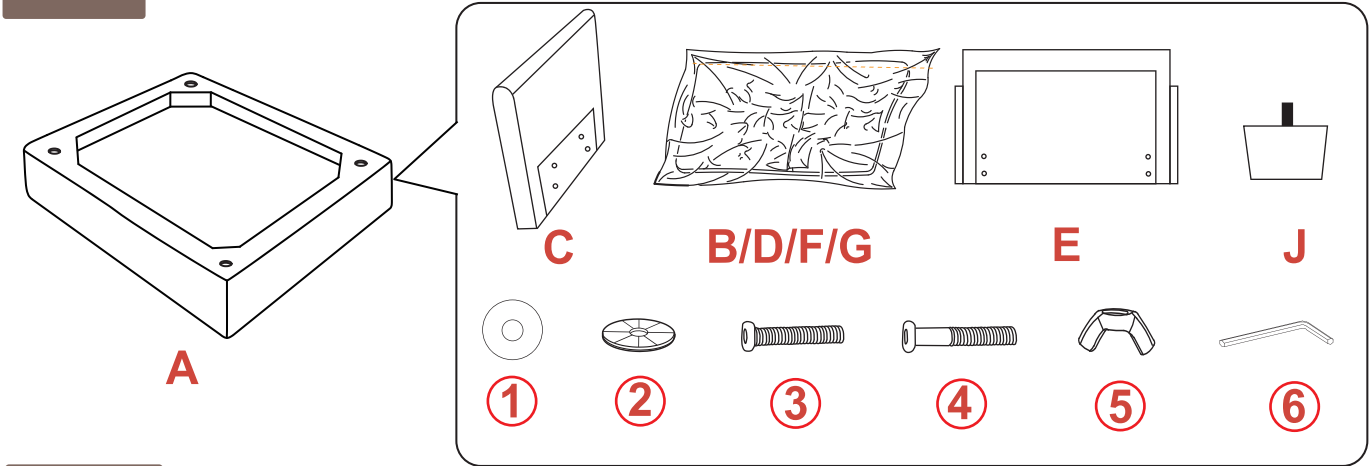

BOX MS

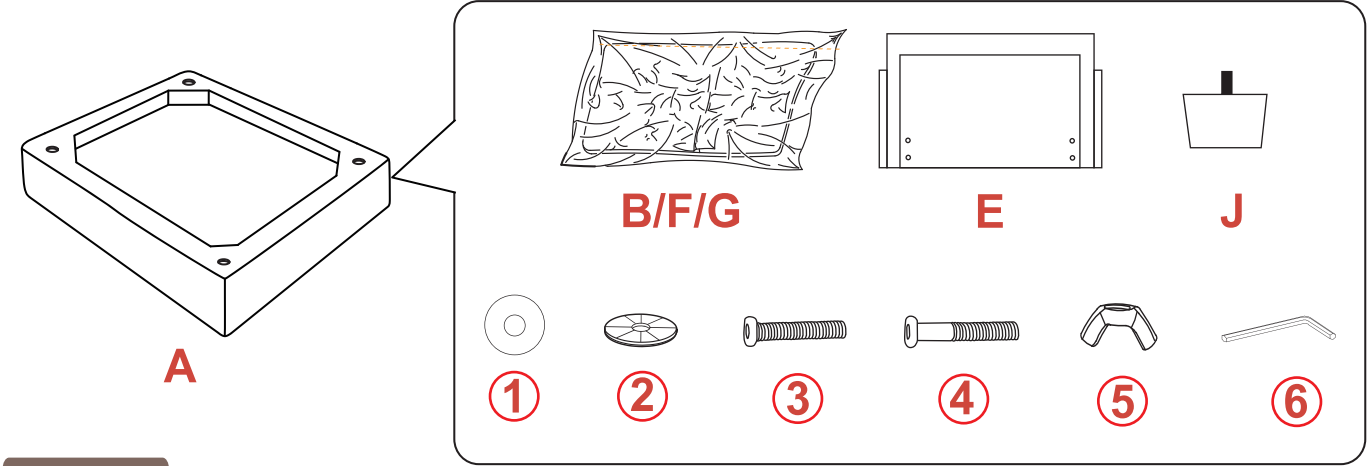

BOX OT

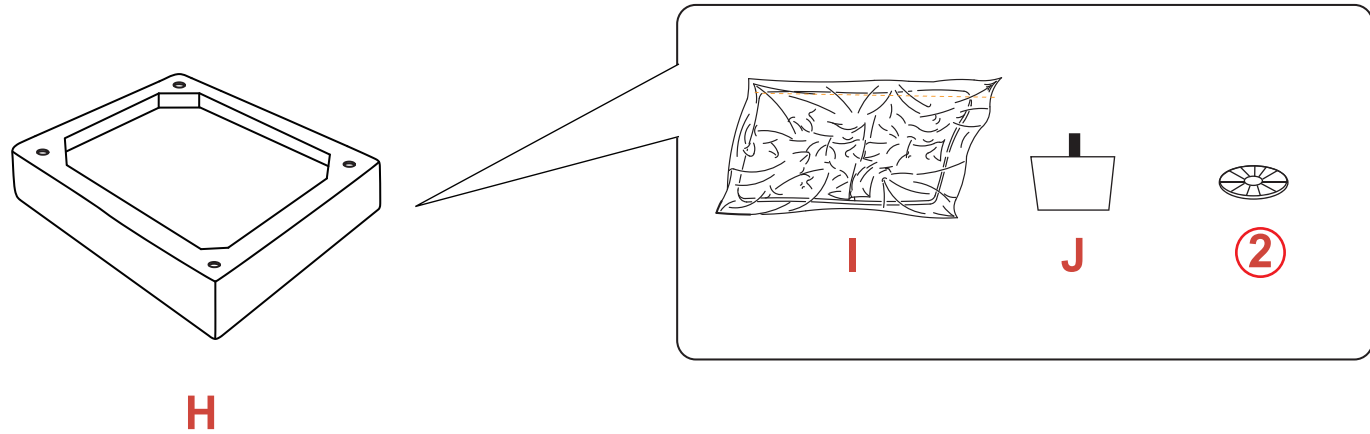


Step 2 - Cushions Setup & Recovery

1. Press and tap the Cushions gently from both sides, then from the front, to help them expand.
2. Smooth the surface to even out their shape, then let them expand while you assemble other pieces.

1



2

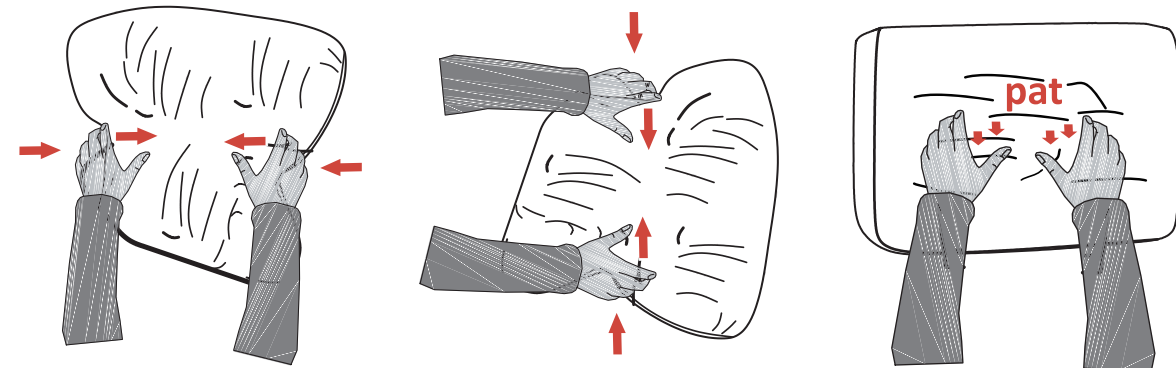


NOTE:

Press and tap both sides with both hands , the front to fully expand.

Step 3 - Install the Legs


Flip the Seat Frames, and Ottomans upside down and screw the Sofa Legs.

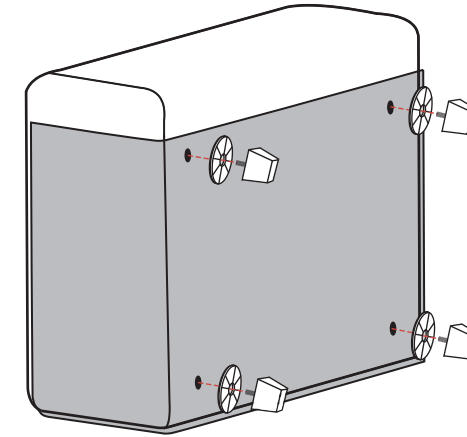

Seat Frame/Ottoman

Step 4 - Arms Assembly

Place the Arm Frame on the Seat Frame and attach it to the side with Hex Bolts M8x65 mm. Repeat this step for the second armrest.


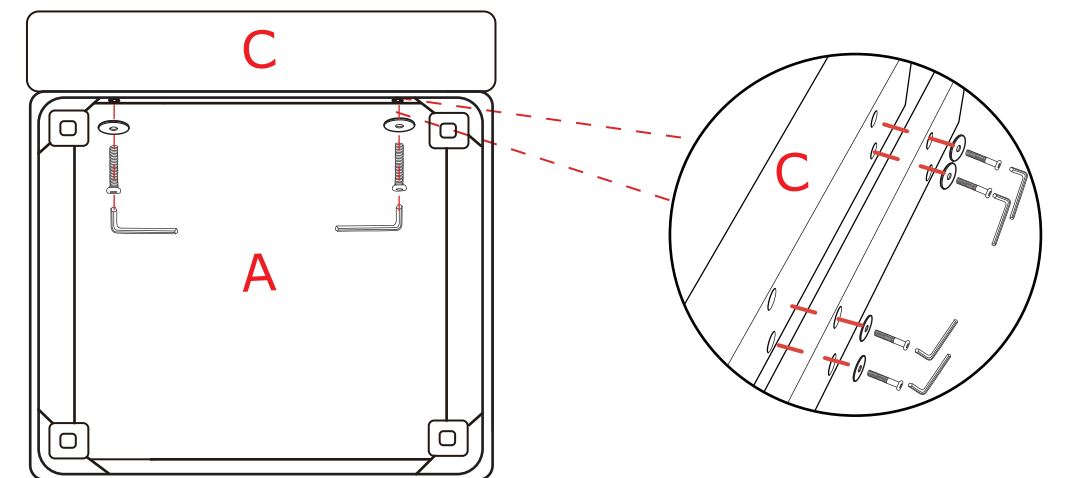


Tip:

Place the base with the side facing down. And rest the armrest on it for easier assembly.



Step 5 - Seat Frames Connection

- 1. Please use Hex Bolts M8*80 mm to connect the Seat Frames.
 - 2. Do not tighten the bolts until all the frames are connected and properly aligned.
- Repeat for additional seat modules.

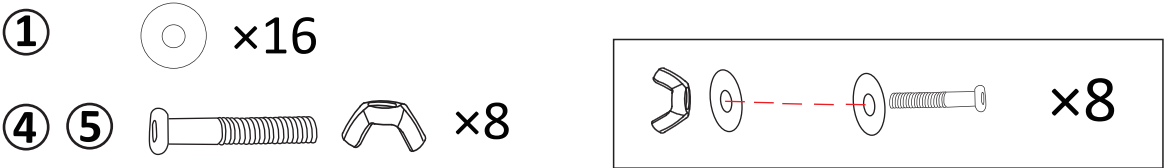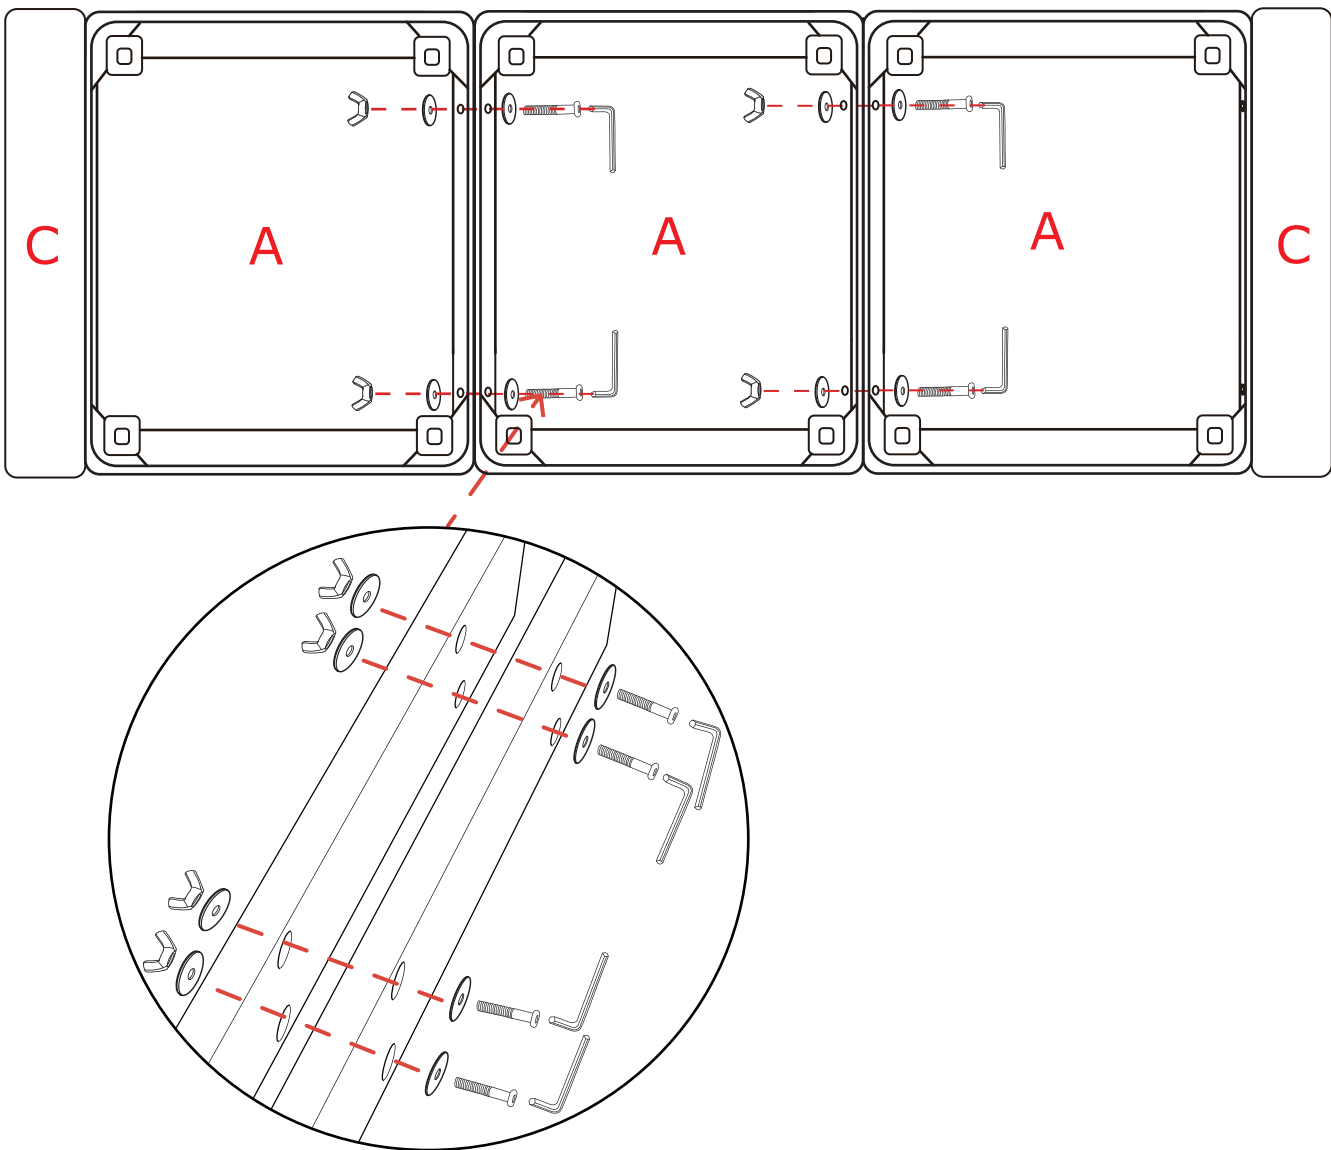


Step 6 - Backs Assembly

- Place the Back Frame on the Seat Frame and attach it to the back with Hex Bolts M8x65 mm.
- Repeat for additional seat modules.

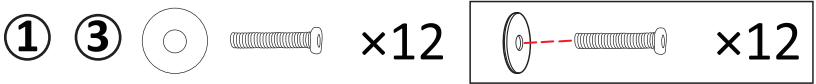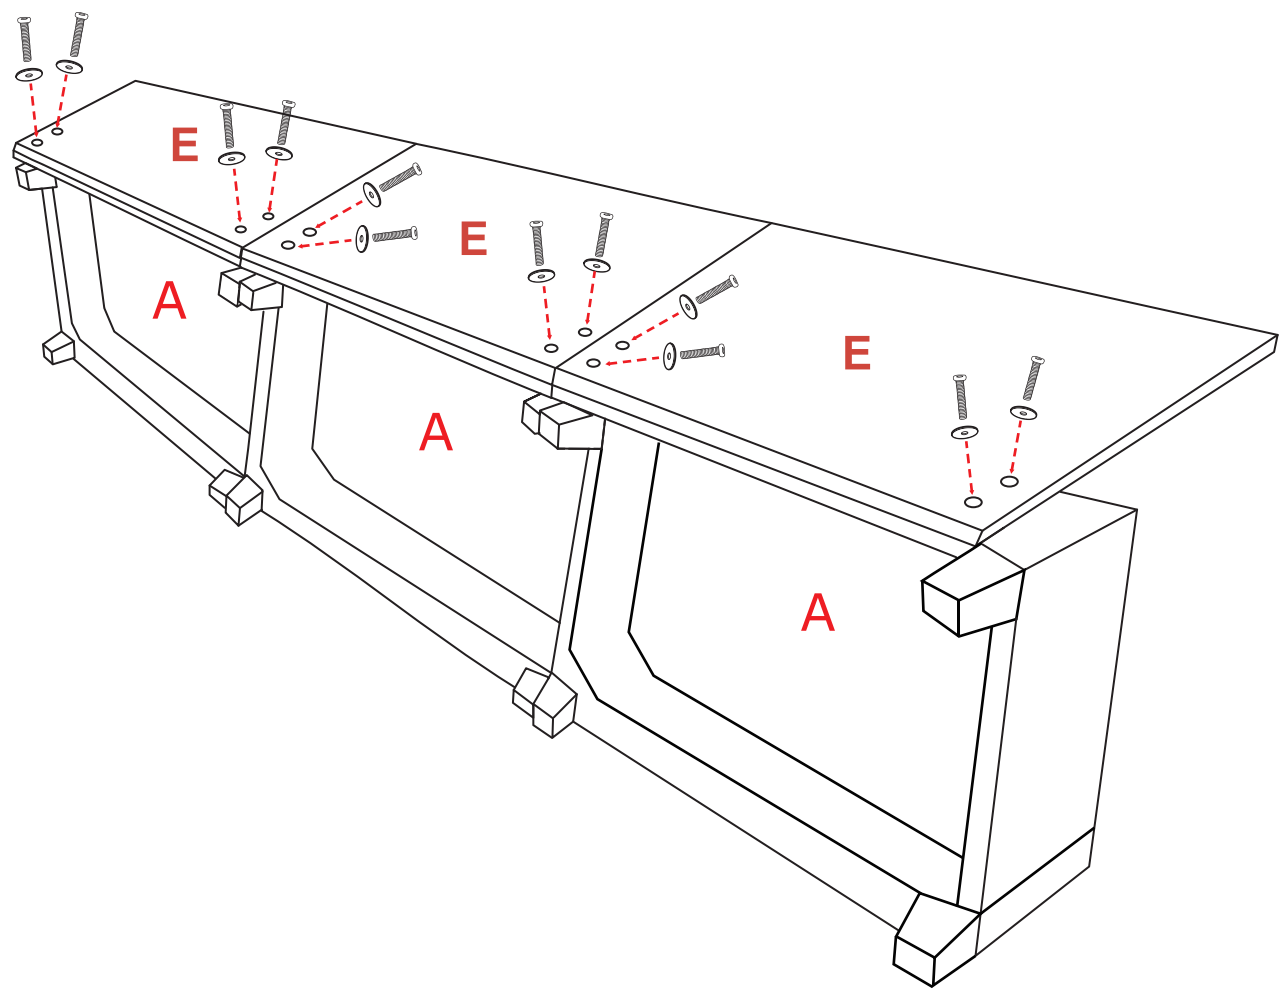


Step 7 - Place Cushions

Place all cushions in order.
Ensure cushions have fully expanded before use.

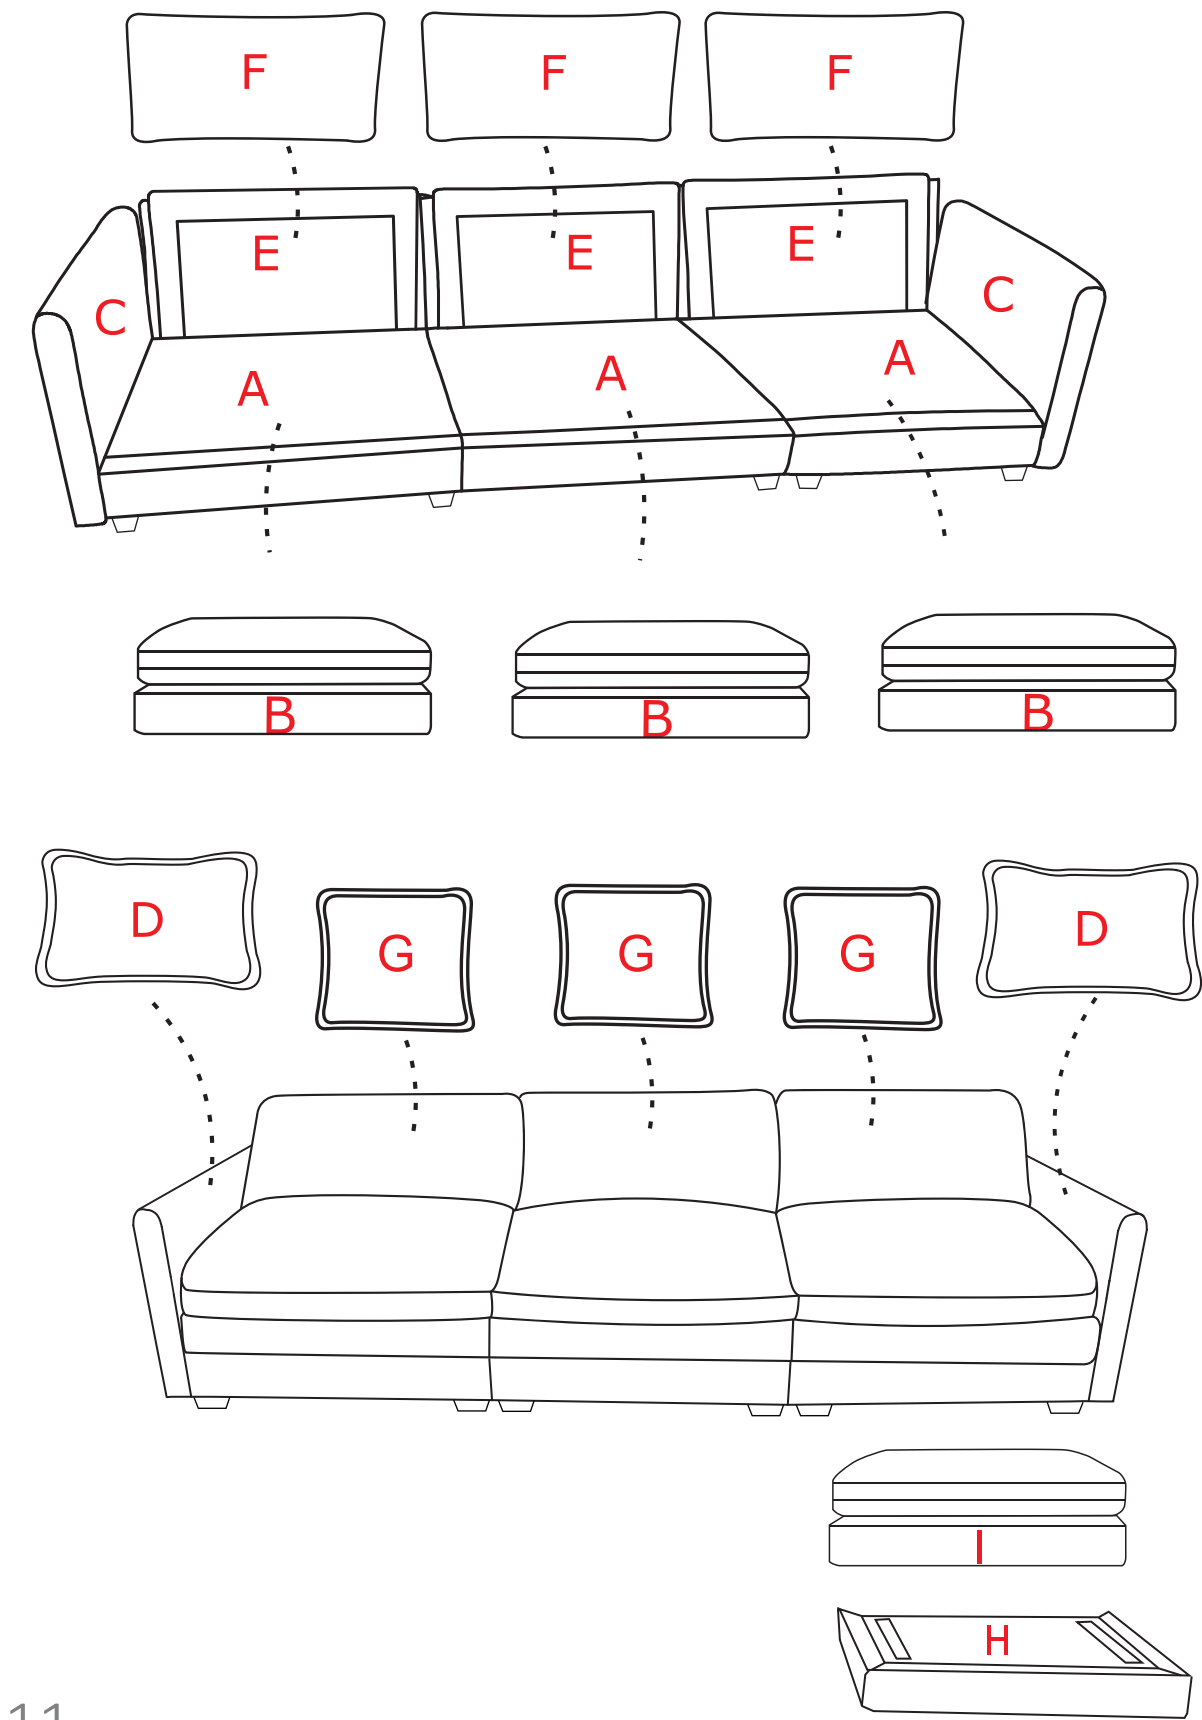

Step 8 - Final Check

Now you have successfully completed the assembly of each module.

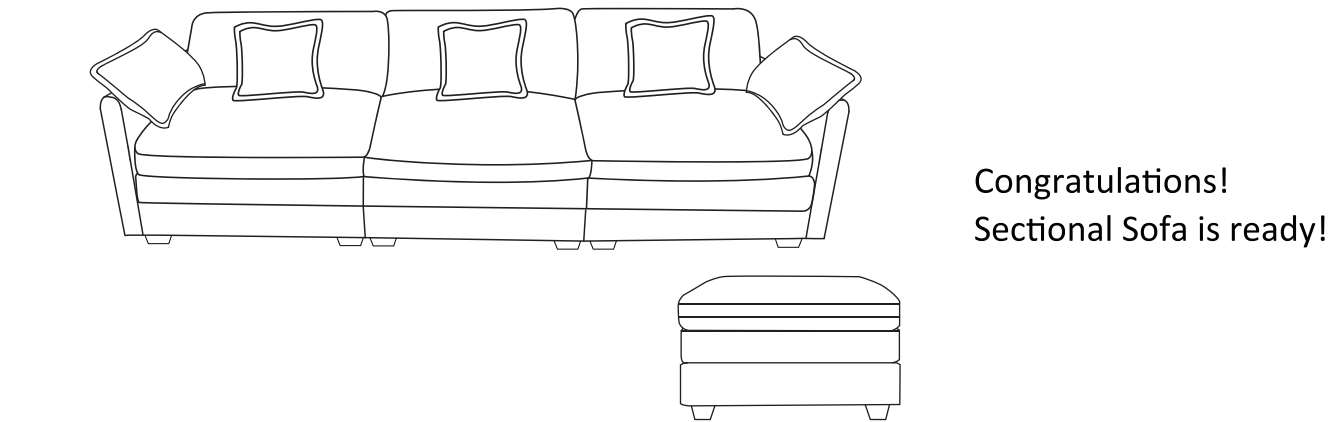

Note

Slight wrinkles or indentations are normal after packaging compression. Pat gently and allow 1–2 weeks for cushions to regain shape.