




Assembly Instruction Kitchen Island (Small) with Solid Maple Top

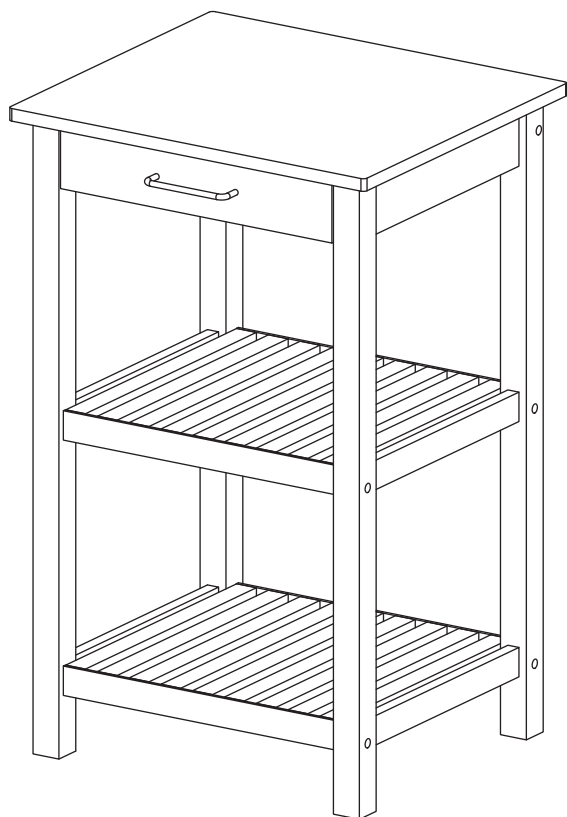


Parts List

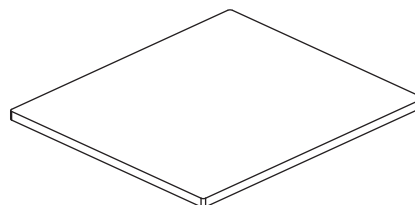


A
Table Top
1 Pc.

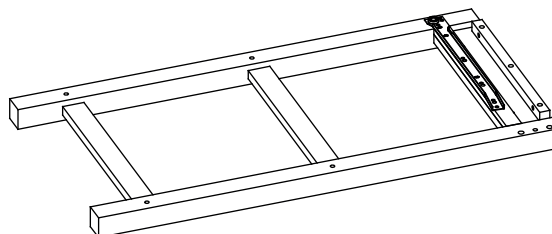


B
Left Panel
1 Pc.

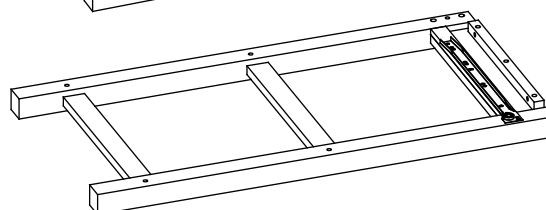


C
Right Panel
1 Pc.

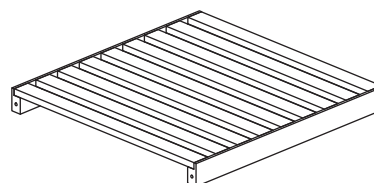


D
Shelves
2 Pcs.

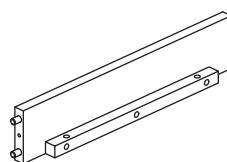


E
Back Panel
1 Pc.

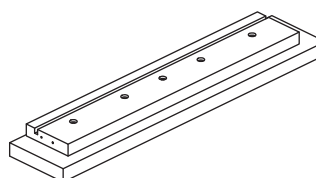


F
Drawer Front
1 Pc.




G
Drawer Left
1 Pc.



H
Drawer Right
1 Pc.




I
Drawer Back
1 Pc.

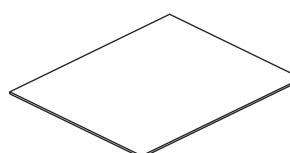

J
Drawer Plate
1 Pc.

Hardware




RF10051
JCA 1/4" x 50
10 Pcs.



RF10003
JCA 1/4" x 32
6 Pcs.




RF10030
Drywall F6 x 1"
8 Pcs.

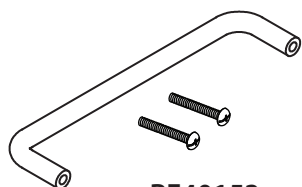


RF40153
Short Handle
1 Set



RF40001
Wood Plug
10 Pcs.

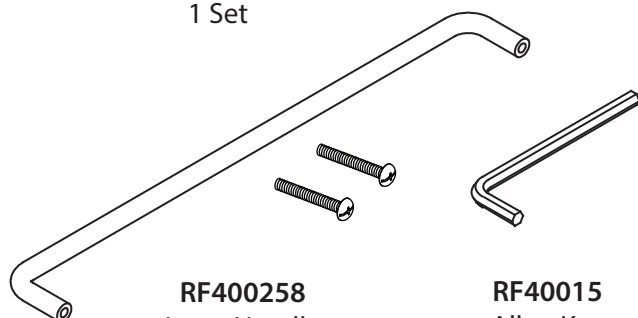

RF400258
Long Handle
1 Set

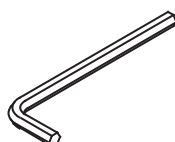

RF40015
Allen Key
1 Pc.

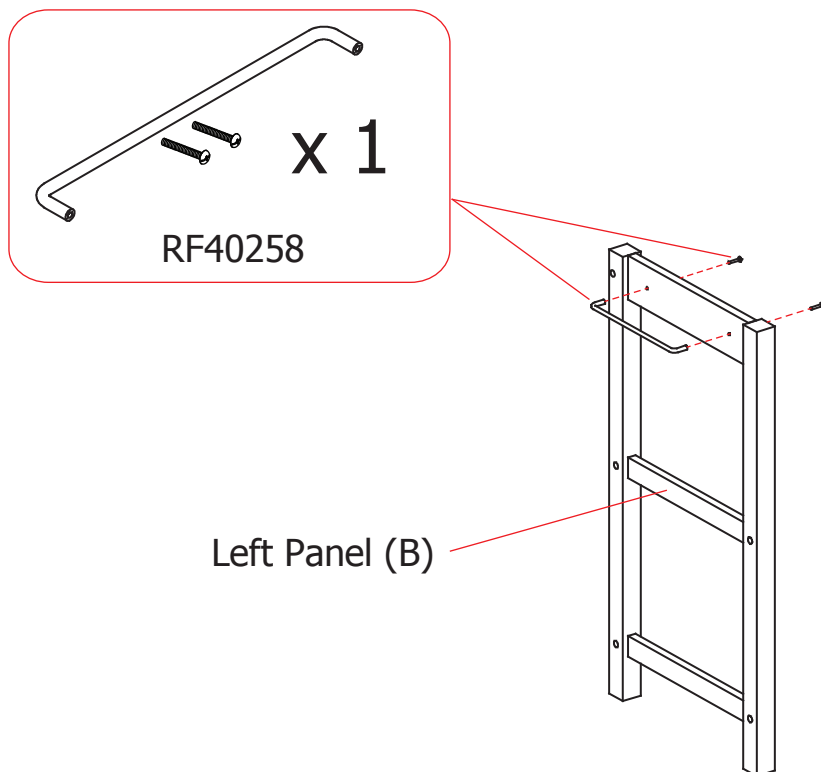


Diagram 1.

Step 1.

Attach Long Handle (RF40258) into the Left Panel (B) as per Diag.1.

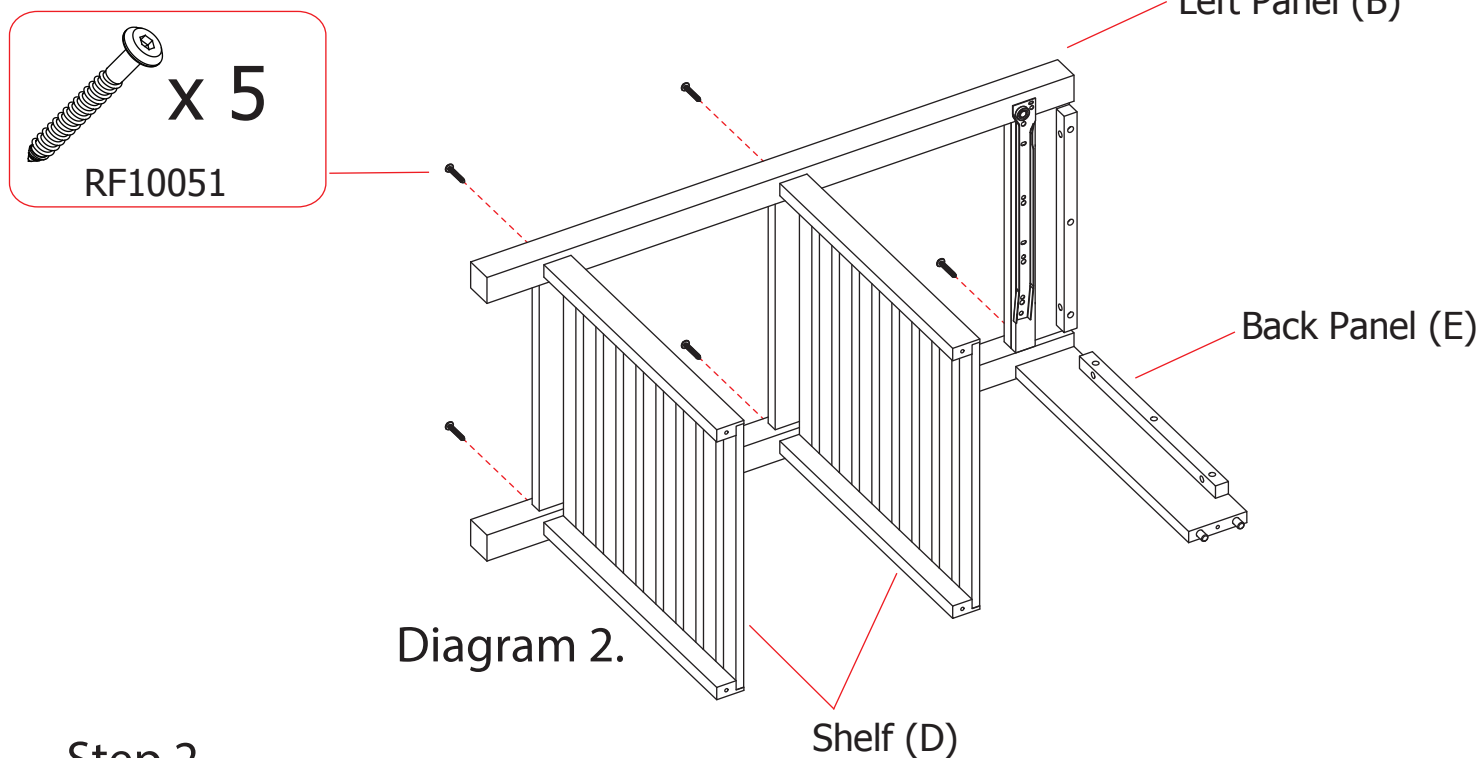


Diagram 2.

Step 2.

Attach Left Panel (B), 2 Shelves (D) and Back Panel (E) together by using screws (RF10051) as per Diag.2.

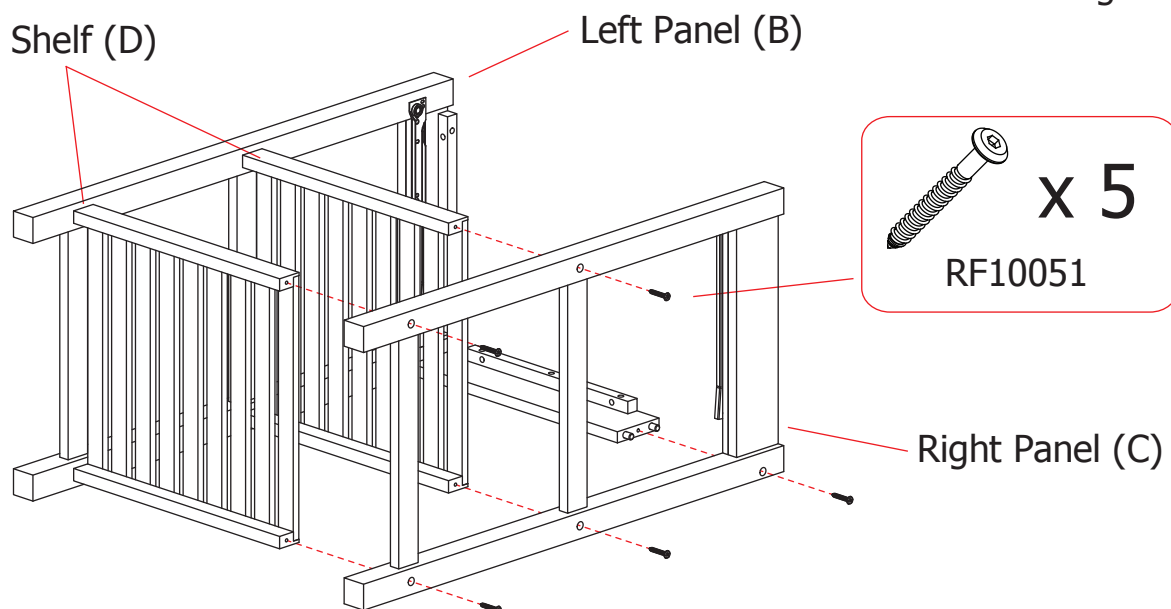


Diagram 3.

Step 3.

Attach Right Panel (C) into the unit by using screws (RF10051) as per Diag.3.


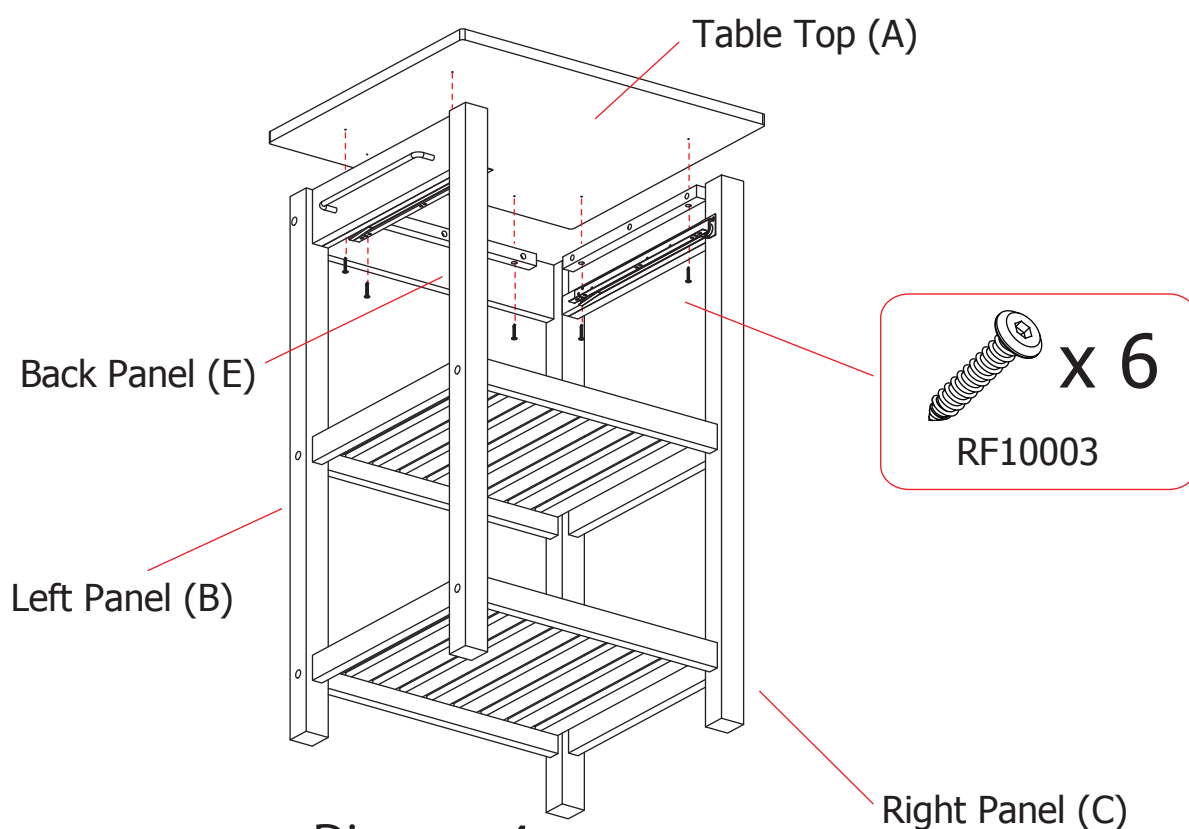


Diagram 4.

Step 4.


Attach Table Top (A) onto the unit by using screws (RF10003) as per Diag.4.

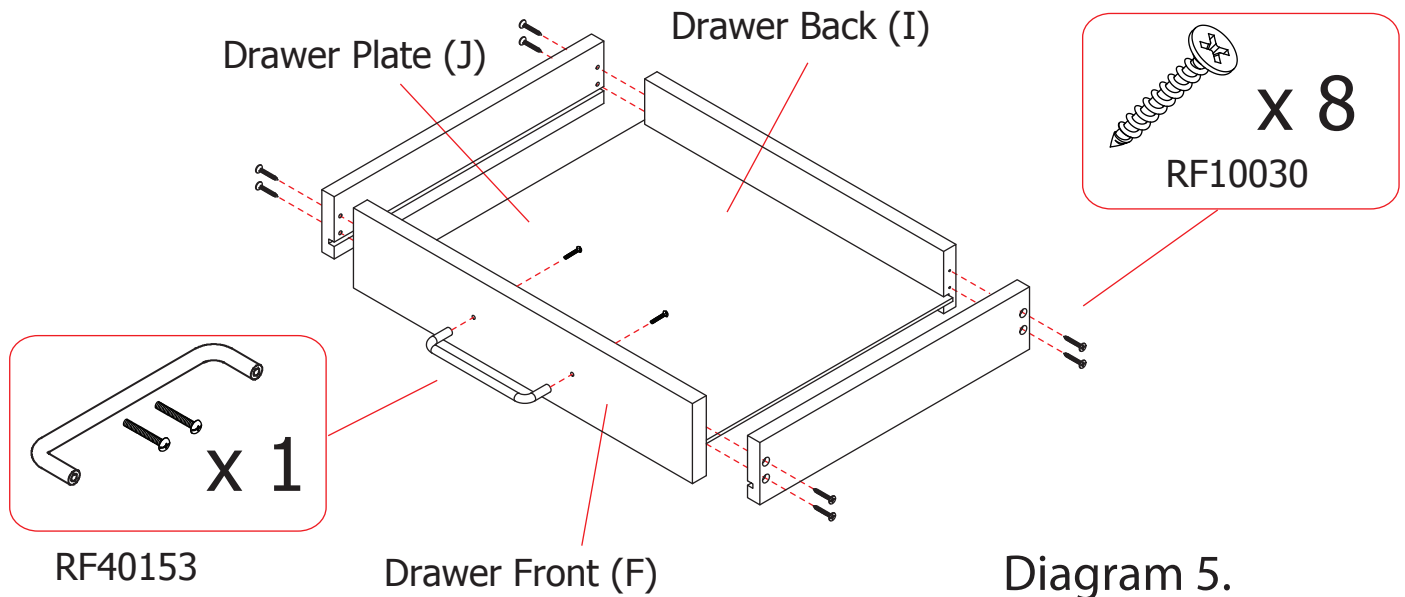

Step 5.

To Assemble the drawer,

- Attach Short Handle (RF40153) into the Drawer Front (F).
- Attach the Drawer Front (F), Drawer Left (G), Drawer Right (H), Drawer Back (I) and Drawer Plate (J) together by using screws (RF10030) as per Diag.5.

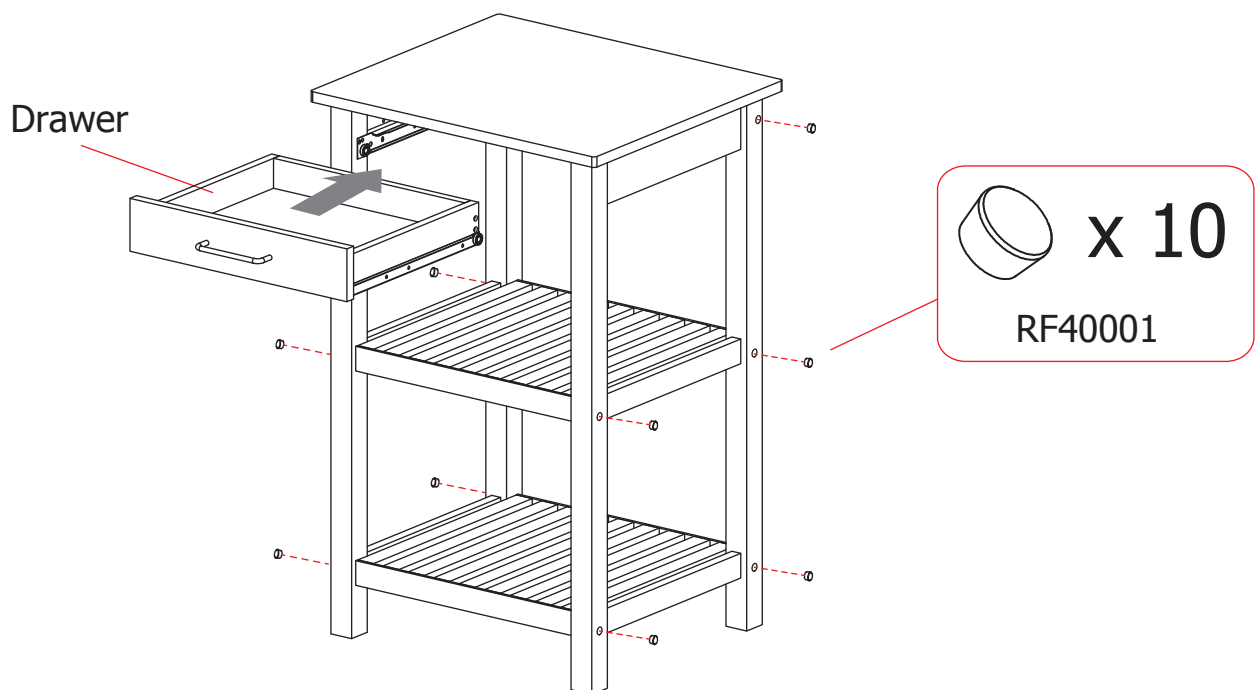

Step 6.

Slide the drawer in and cover the screw's holes by Wood Plugs (RF40001) as per Diag.6.